

CARE AND MAINTENANCE






For cleaning of the frame, use a mild,soapy water, then dry the surface immediately with a clean,soft cloth.For glass,dust with a soft,dry cloth.Do not use abrasive cleaner.

To use of washing powder or any other substances containing abrasives may scratch the glass.

NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly

Part List and Hardware List

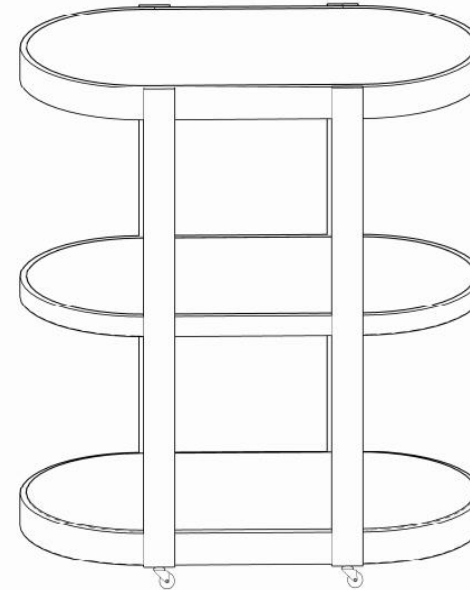
| PIECE | DESCRIPTION | PICTURE | QUANTITY |
|-------|------------------------------|---|----------|
| A | Stainless Steel Frame |  | 1X |
| B | Mirror Glass Top |  | 3X |
| C | Wheel with Screws 6*0.5*15mm |  | 4X |
| HW1 | Suction Cup |  | 8X |
| HW2 | Wrench |  | 1X |

SAFAVIEH

CO U T U R E

FOX9080A

DIMENSIONS: 29.92"L x 15.74"W x 31.49"H



WEIGHT CAPACITY: 150 LBS

WARNING: DO NOT STAND ON BAR CART
WARNING: DO NOT OVER TORQUE BOLTS/SCREWS

The wheels and hardware is hang on the Frame

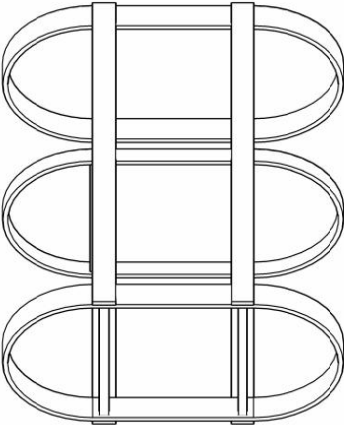
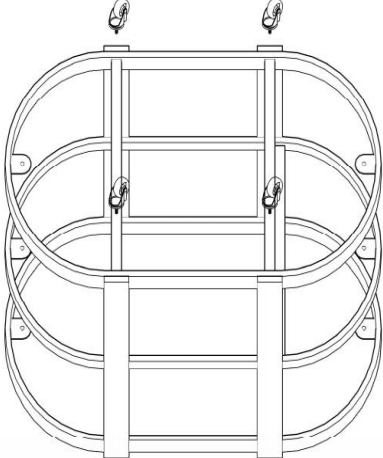
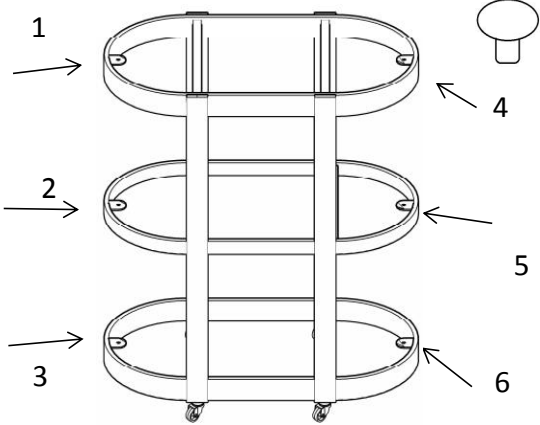
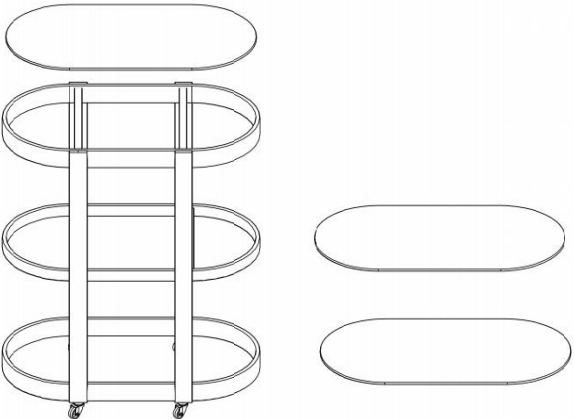
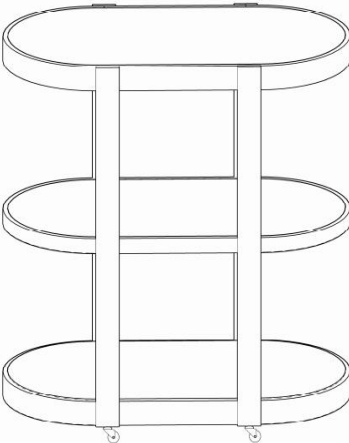
PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.

If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Wrench

| | | |
|---|---|---|
|  |  |  |
| <p>STEP1 PUT STAINLESS STEEL FRAME(A) FACE DOWN AS PICTURE ON A CLEAN, NON-MARRING SURFACE</p> | <p>STEP2 INSTALL THE WHEELS(C) INTO THE STAINLESS STEEL FRAME(A), TURNING ANTICLOCKWISE, TIGHTEN BY USING WRENCH</p> | <p>STEP3 TURN THE BAR CART RIGHT SIDE UP, INSERT THE BACK OF SUCTION CUP INTO THE SIX MOUNTING POSITIONS ON THE STAINLESS STEEL FRAME(A)</p> |
|  |  | |
| <p>STEP4 CAREFULLY PLACE THE MIRROR GLASS TOP(B) ONTO THE STAINLESS STEEL FRAME(A)</p> | <p>STEP5 CHECK FOR STABILITY. ENSURE ALL WHEELS ARE FULLY LOCKED AND SECURED INTO POSITION. YOUR BAR CART IS NOW READY FOR USE</p> | |

The wheels and hardware is hang on the Frame