


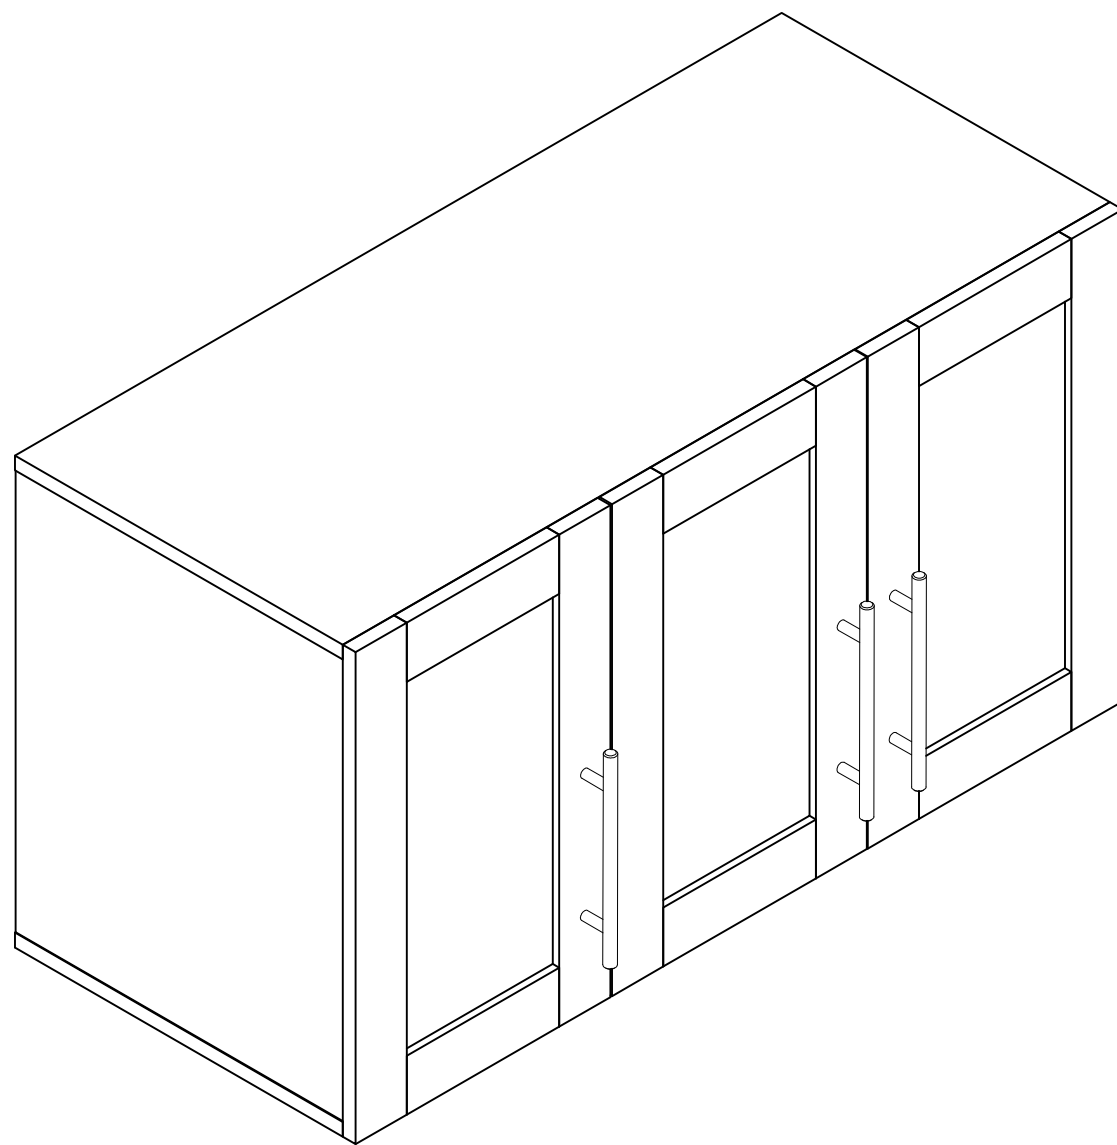
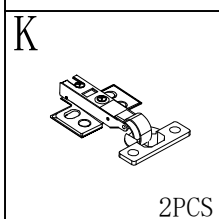
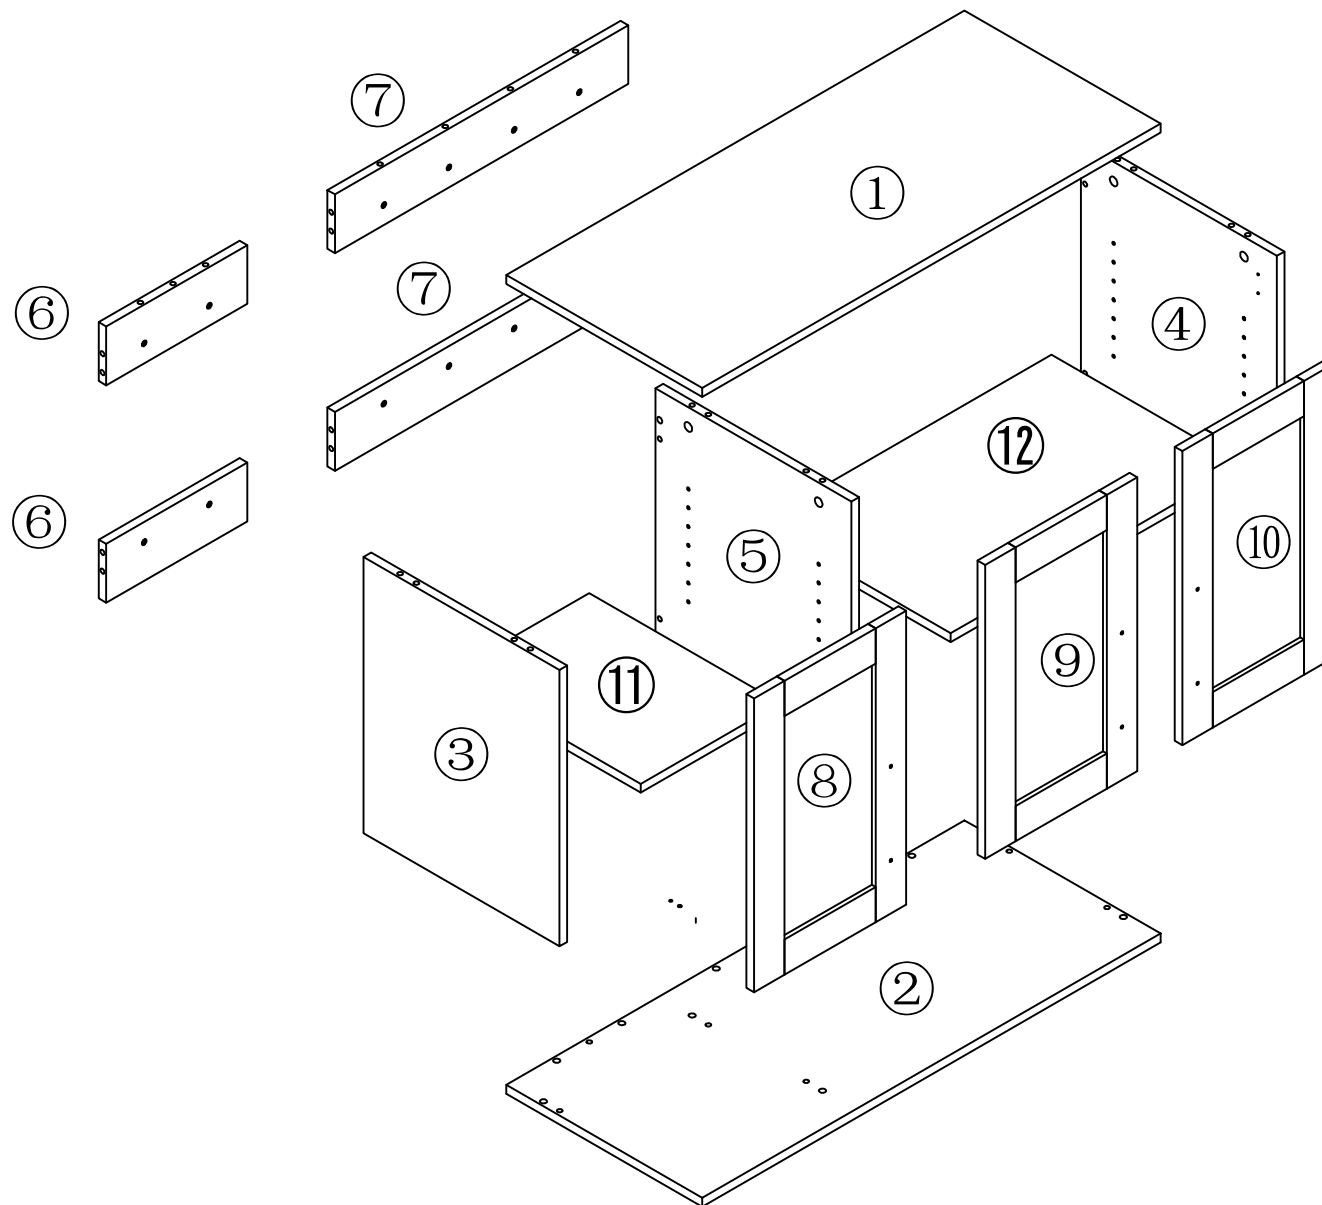
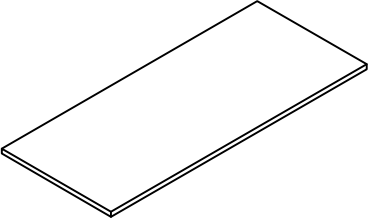
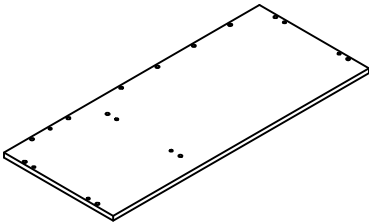
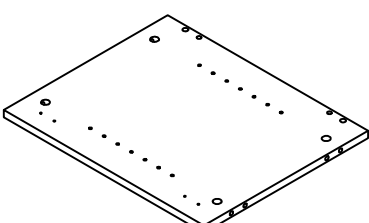
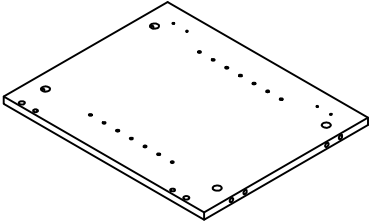
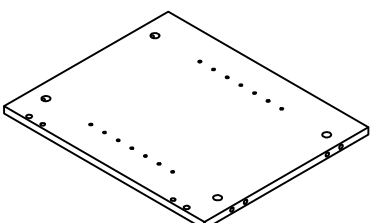
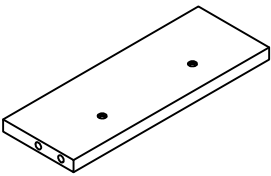
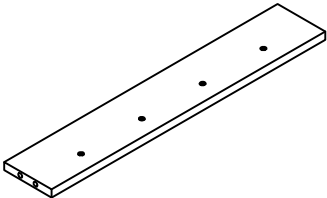
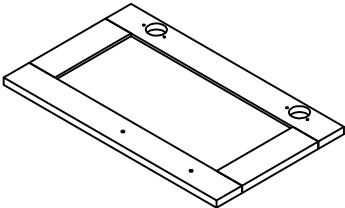
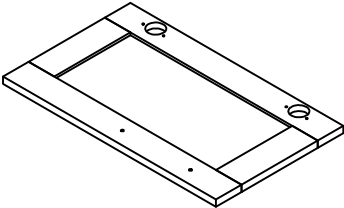


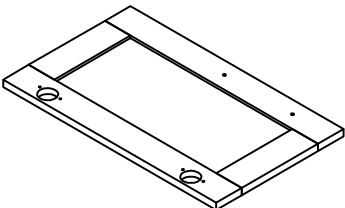

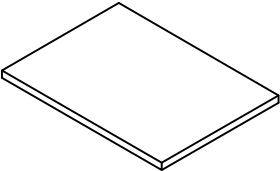

A	B	C	D	E	F	G	H	I	J
32PCS	32PCS	22PCS	36PCS	6PCS	3PCS	6PCS	8PCS	12PCS	12PCS


1  900*385 1PS	2  900*385 1PS	3  470*385 1PS	4  470*385 1PS	5  470*385 1PS
6  277*100 2PS	7  576*100 2PS	8  500*299 1PS	9  500*299 1PS	10  500*299 1PS
11  274*375 1PS	12  573*375 1PS			

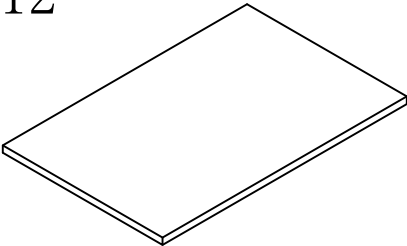


Hardware installation demonstration

NOTE: Please make sure "A" hardware tightened and can't be pulled out!


I

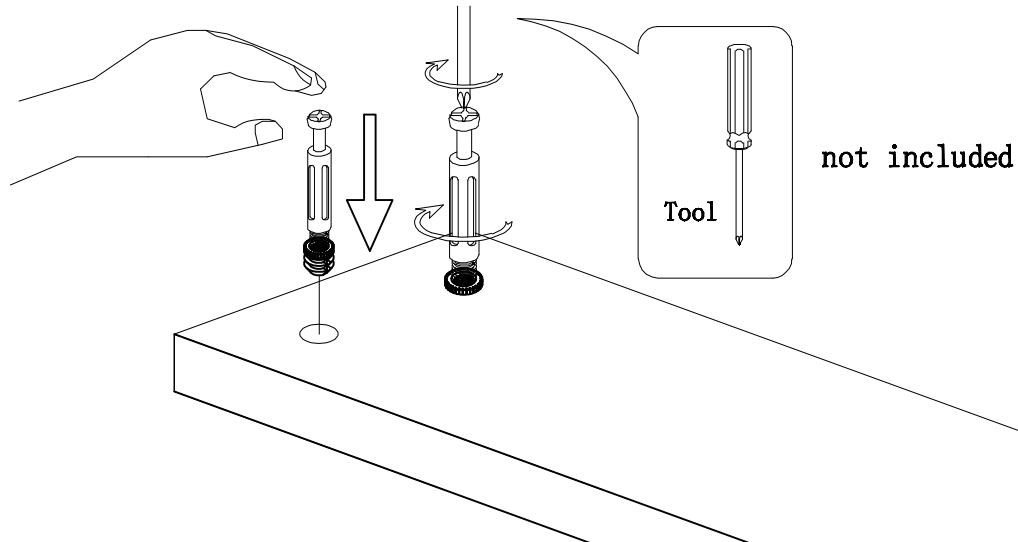

II

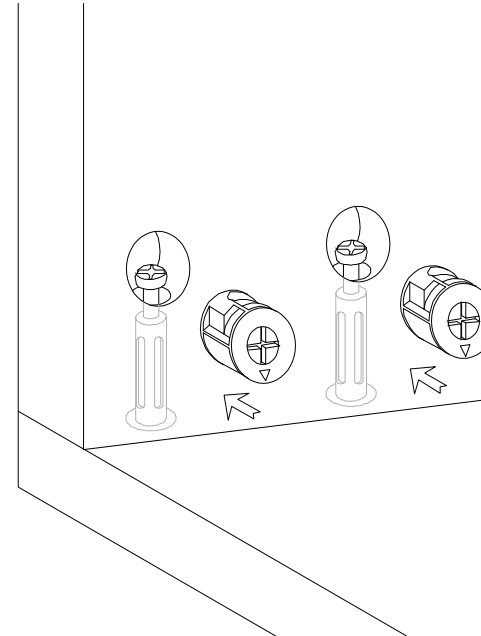

III

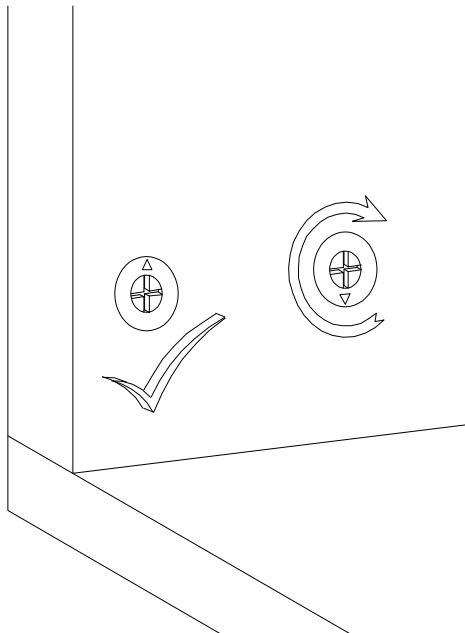


IV



Scan QR code for assembly video

1

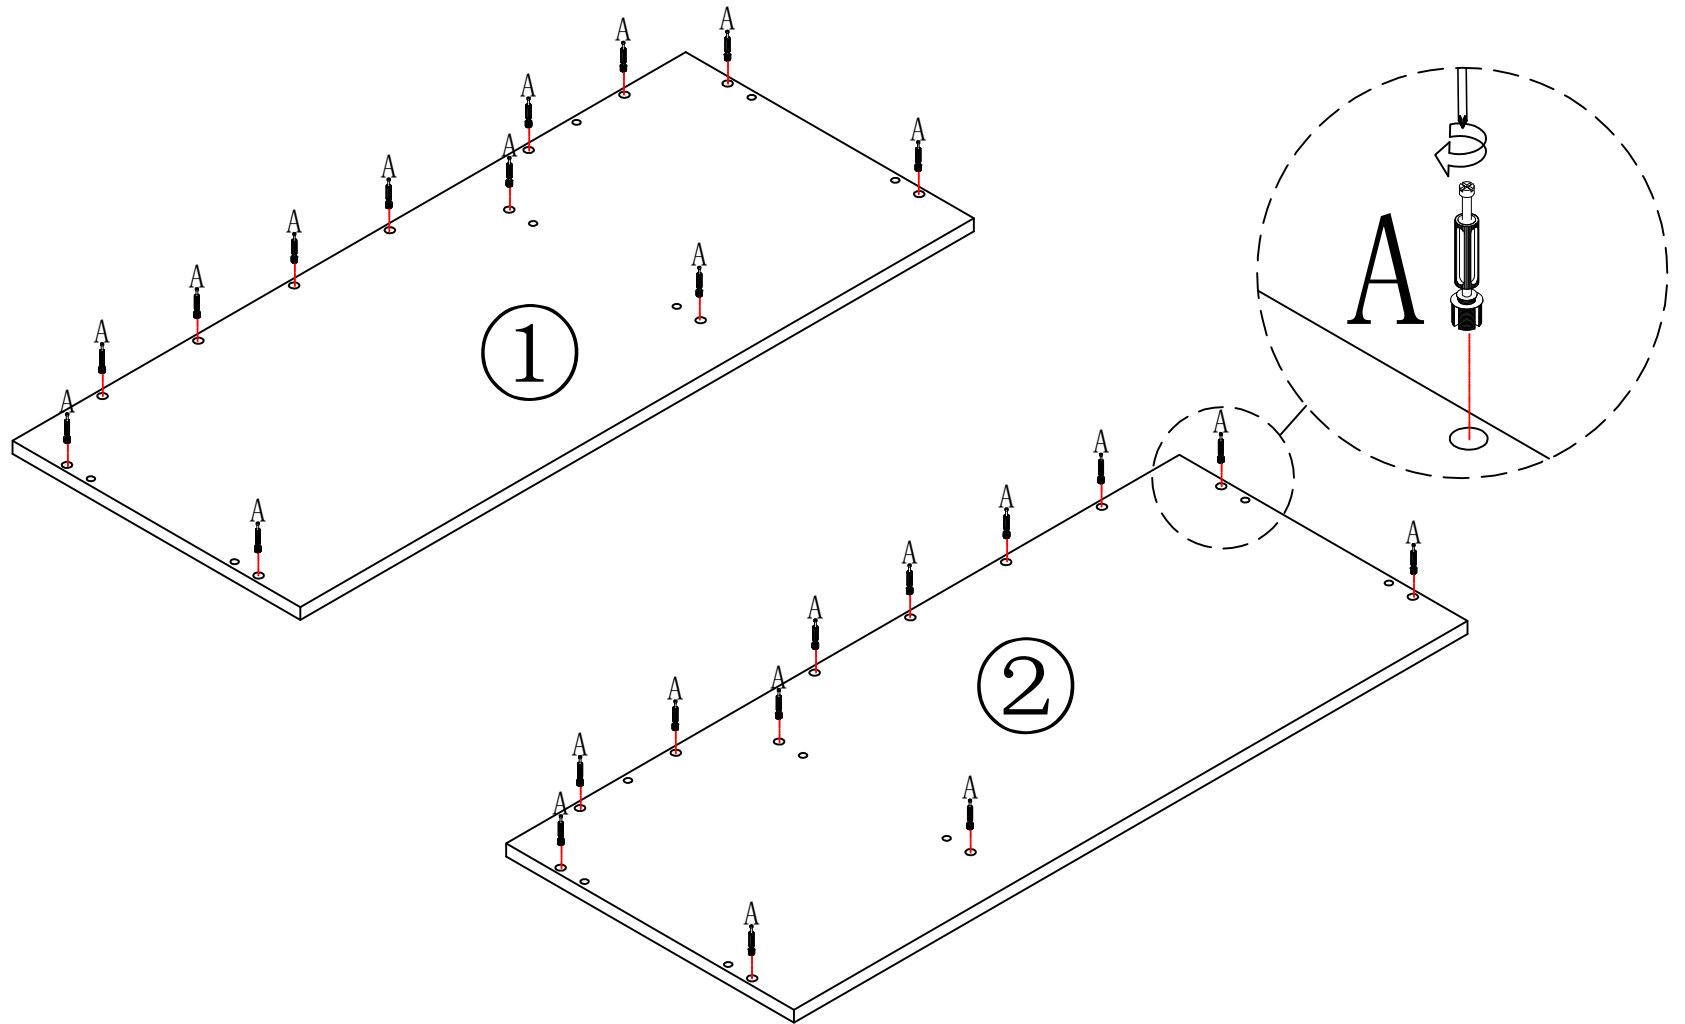


put A on board 1 2



A*24

②

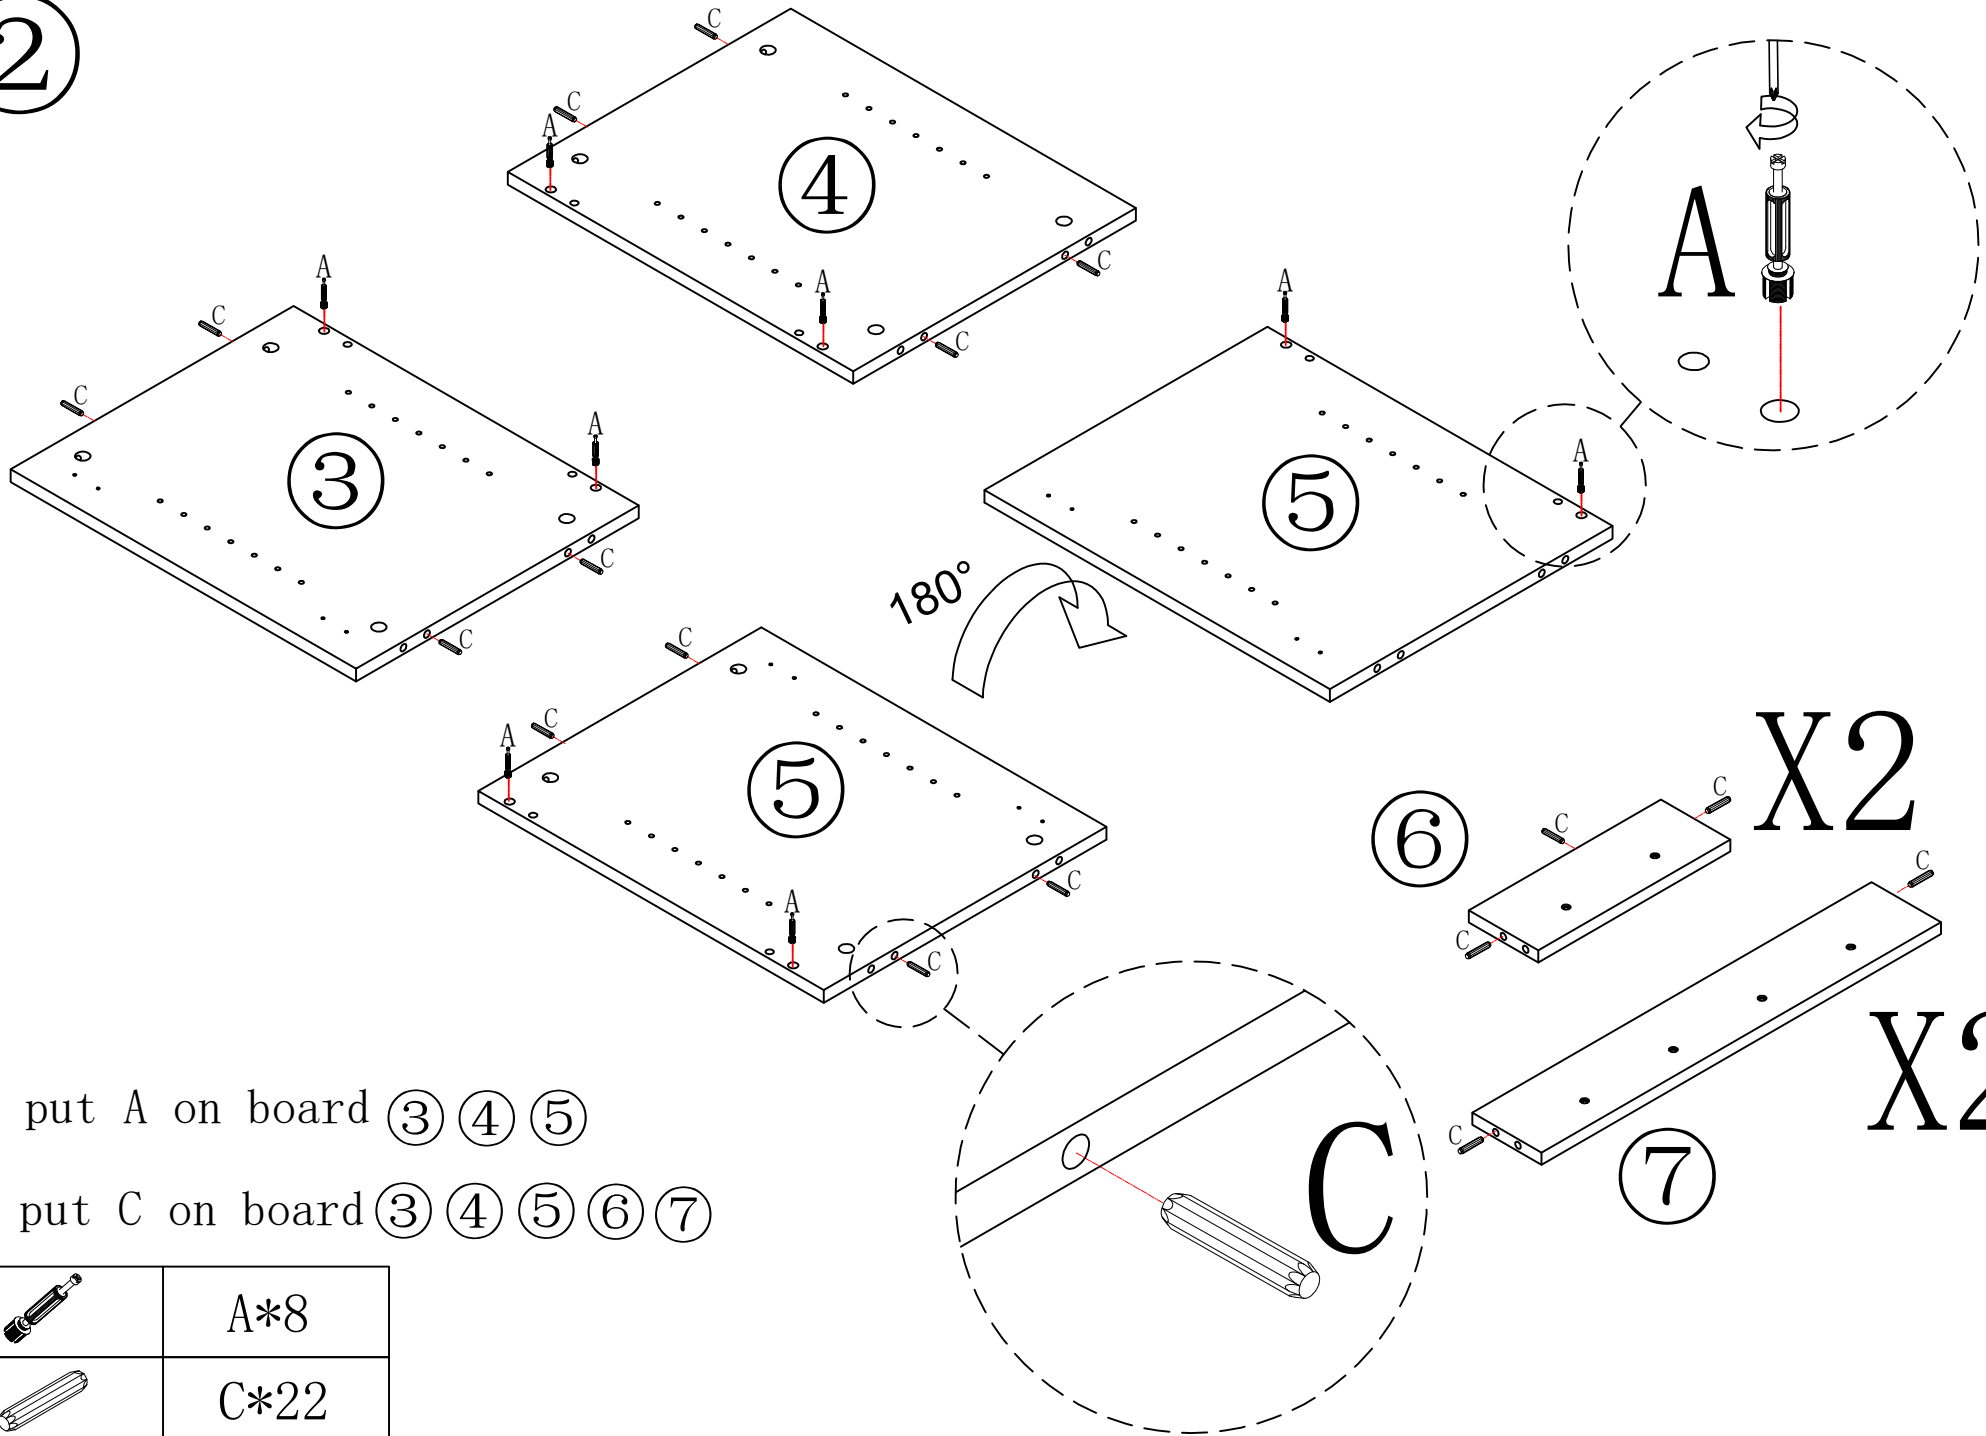

put A on board ③ ④ ⑤

put C on board ③ ④ ⑤ ⑥ ⑦




A*8



C*22

3

Make sure the arrow on the screw align to the hole on the side

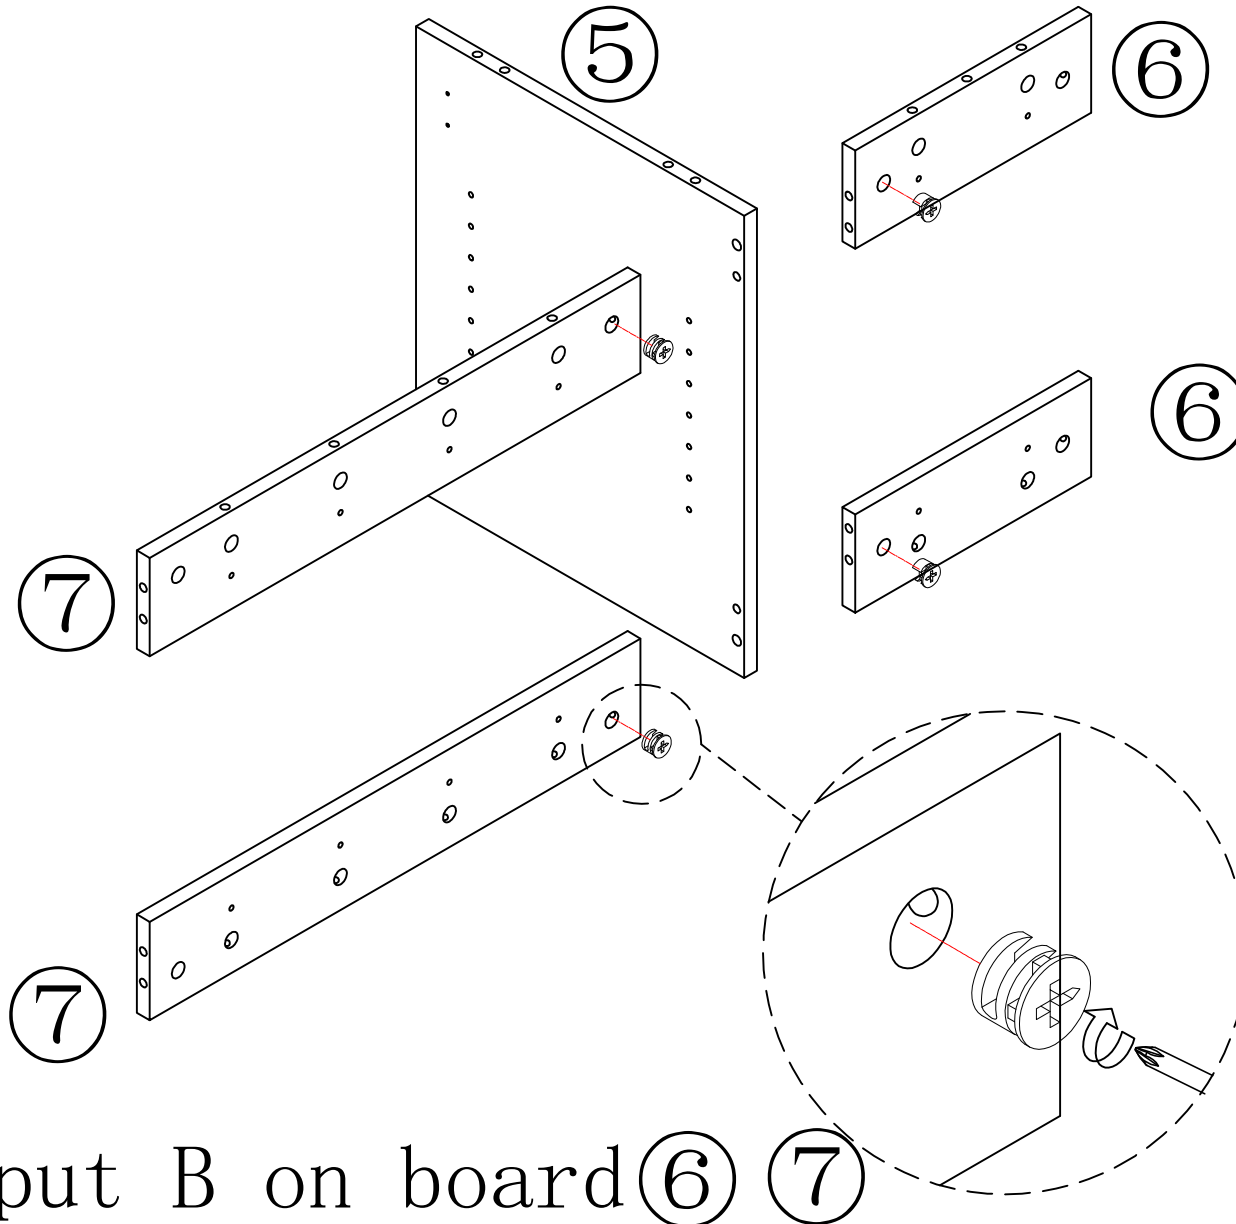


put B on board 6 7



B*4


4

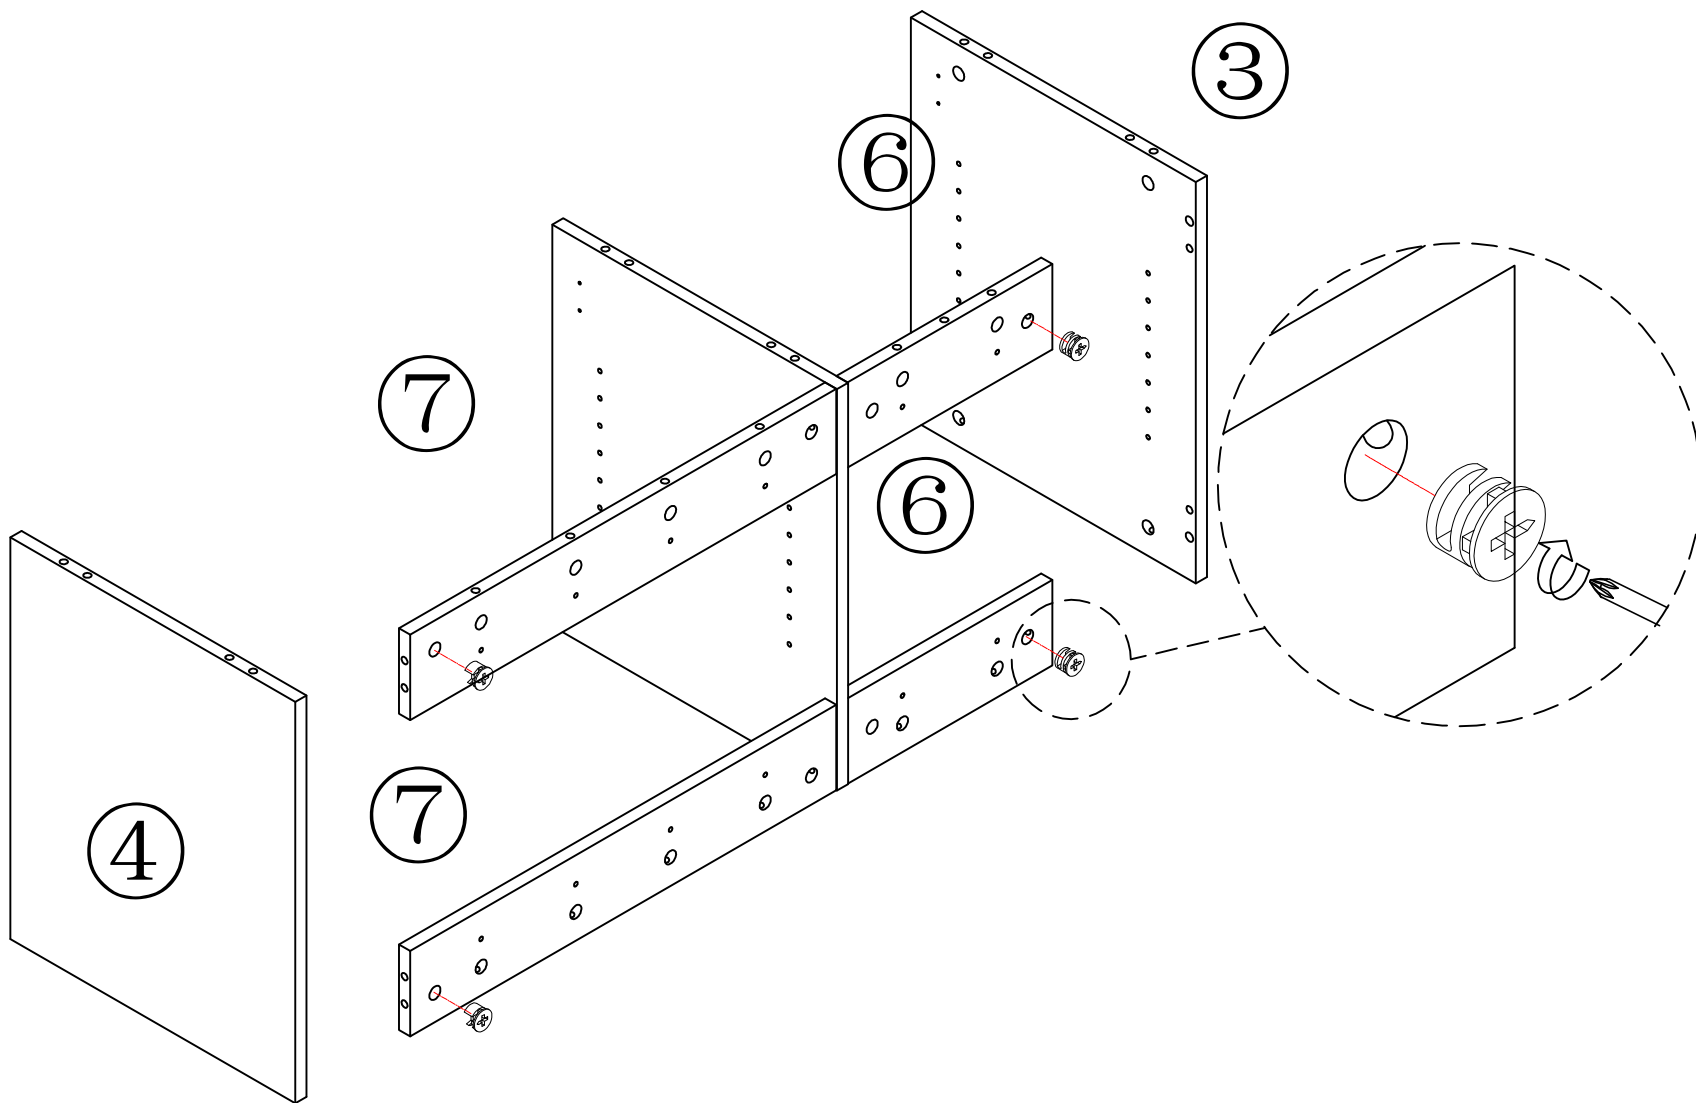

B*4

put B on board ⑥ ⑦

5

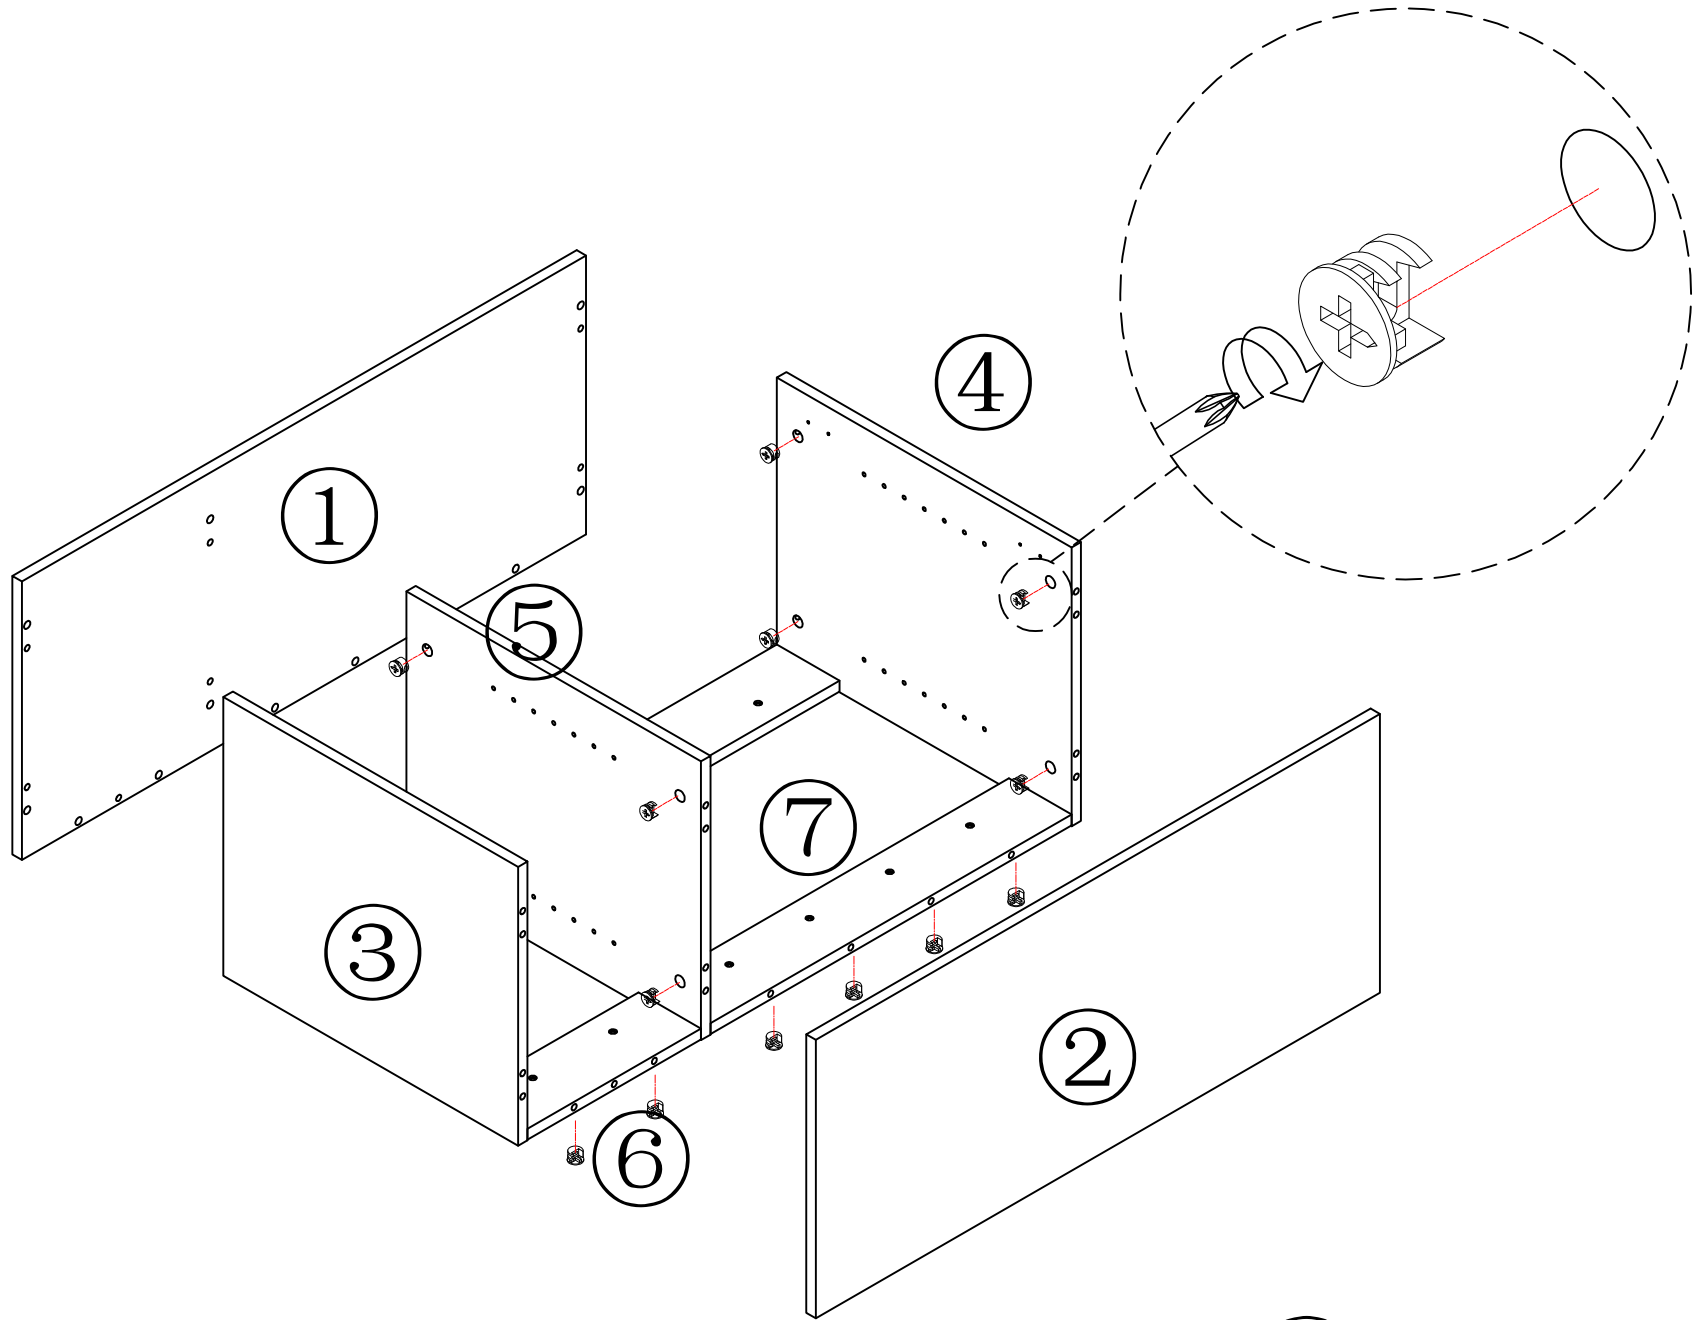


put B on board ③ ④ ⑤ ⑥ ⑦



B*24

⑥

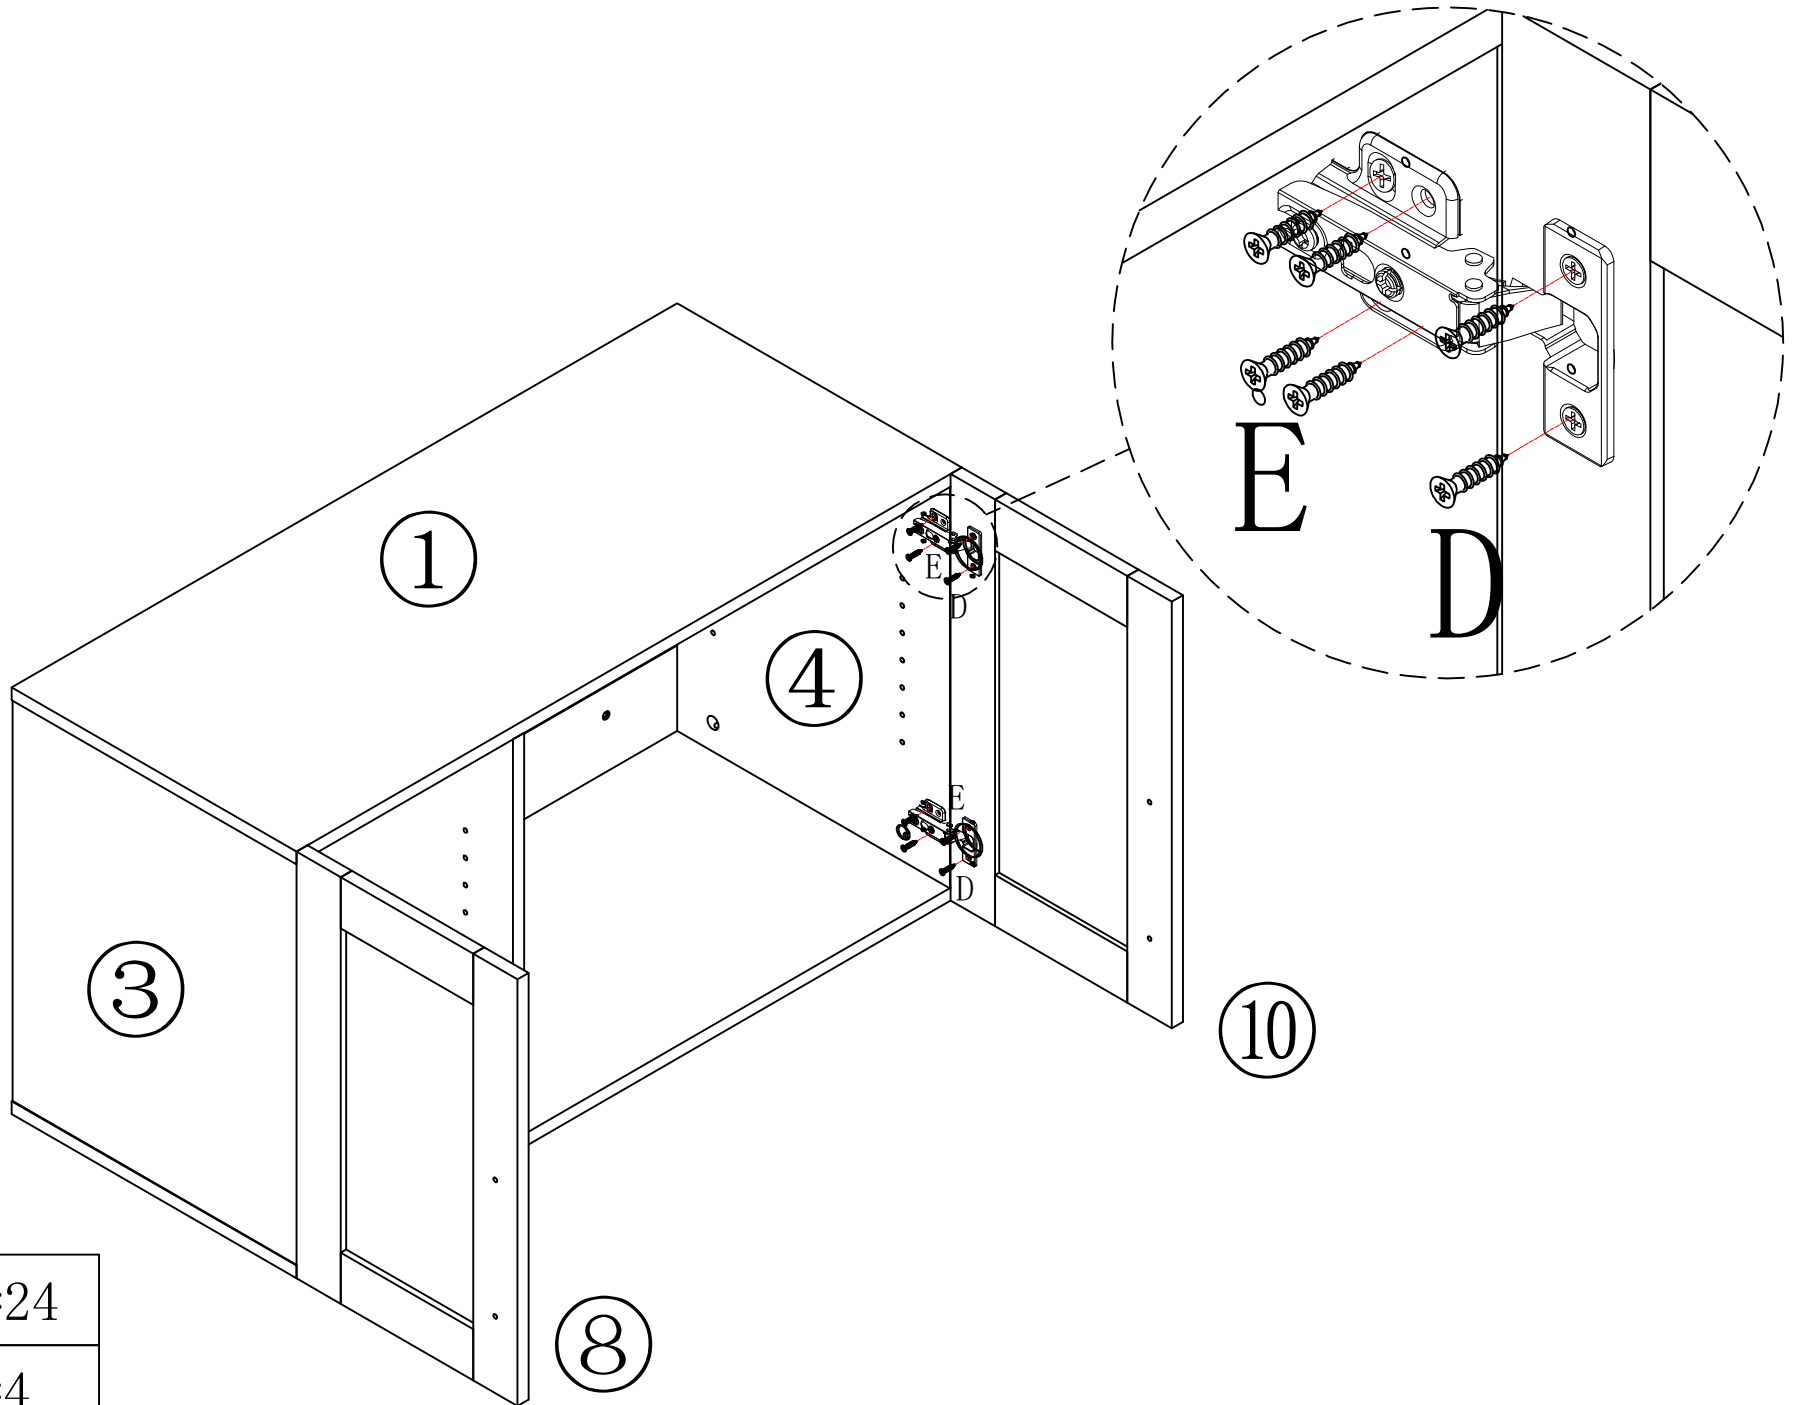


D*24



E*4

7

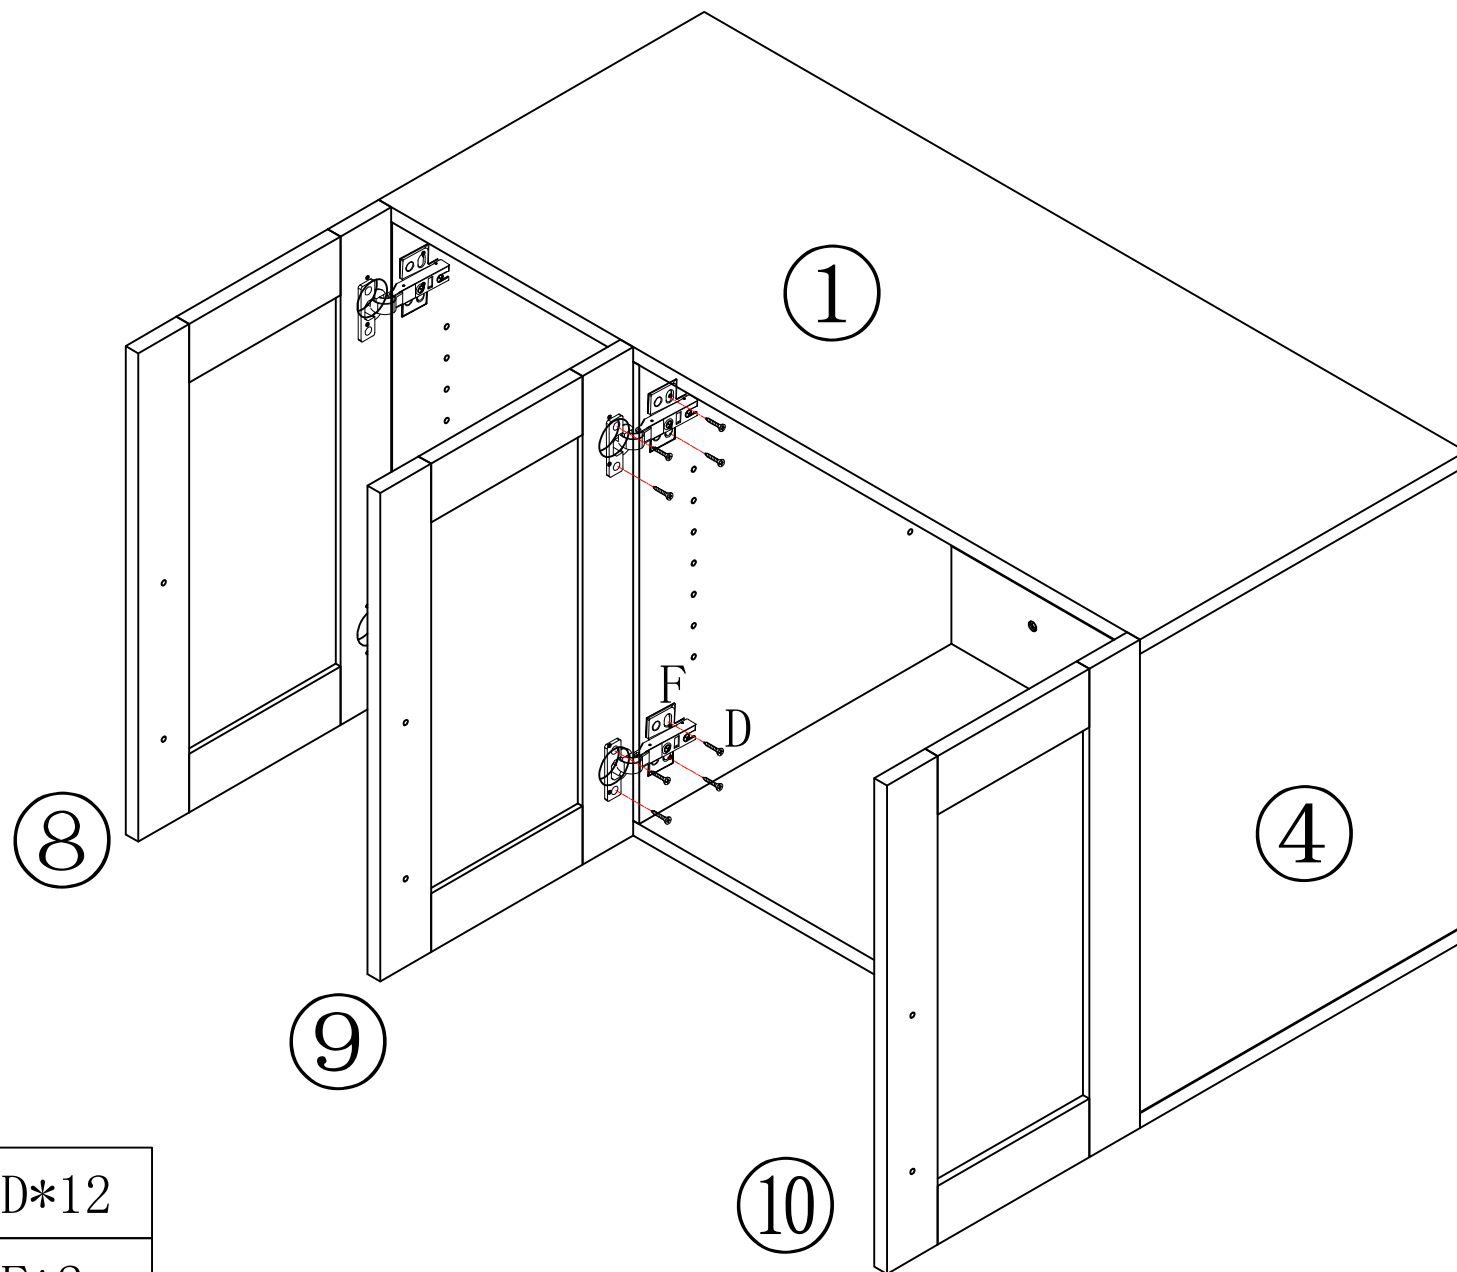


D*12











F*2

8

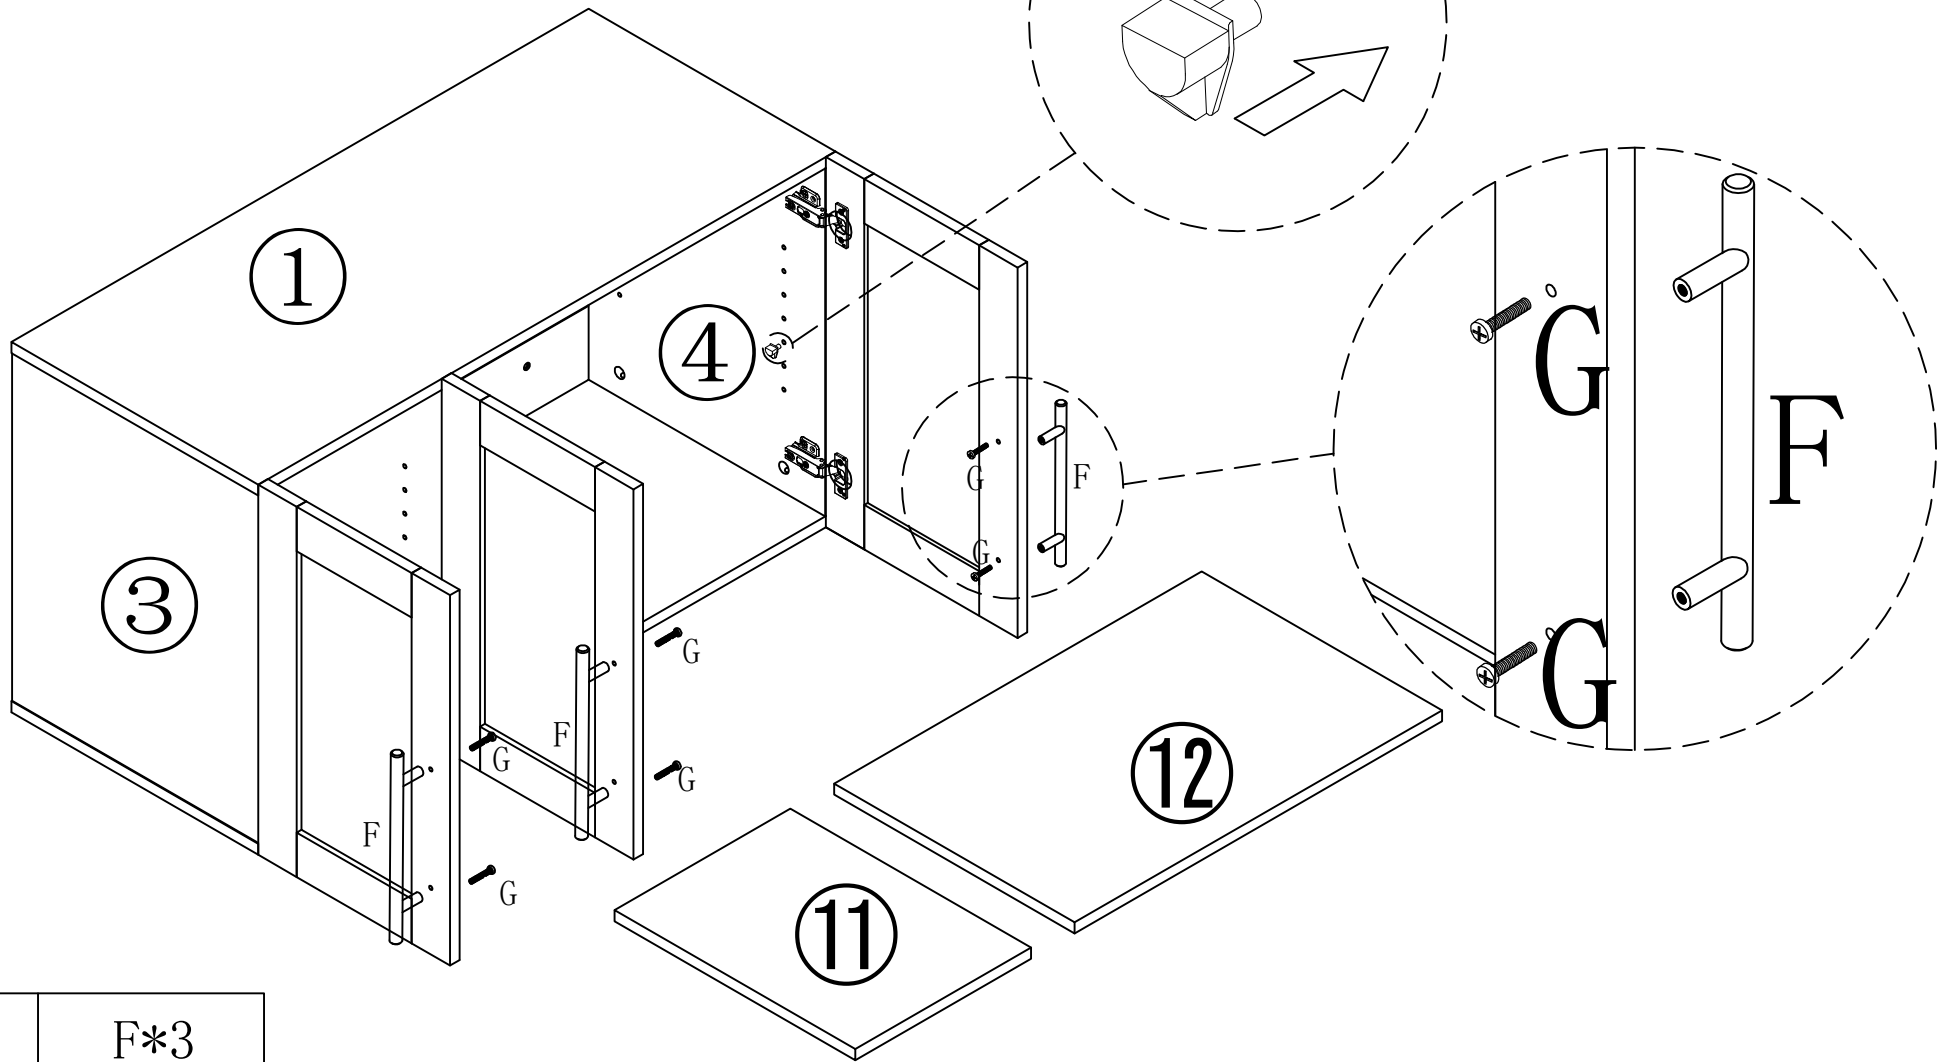


	F*3
	G*6
	H*8


9

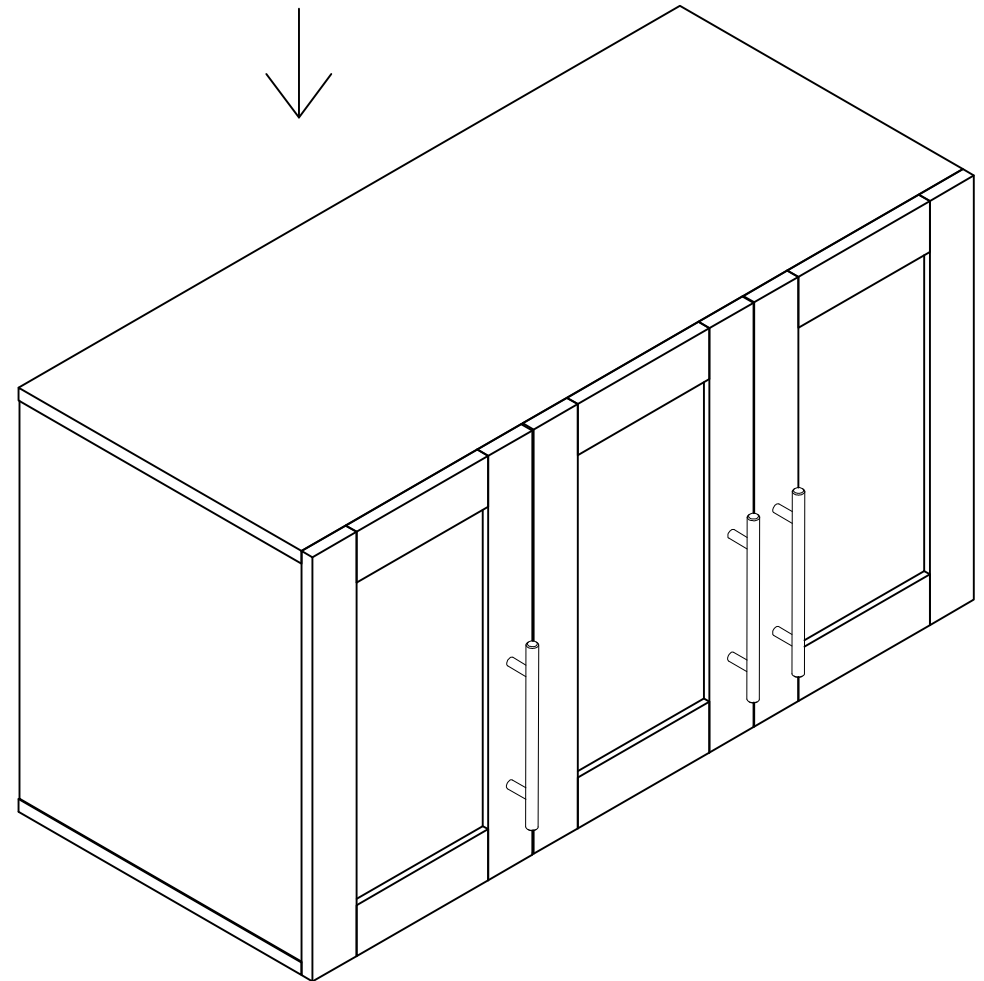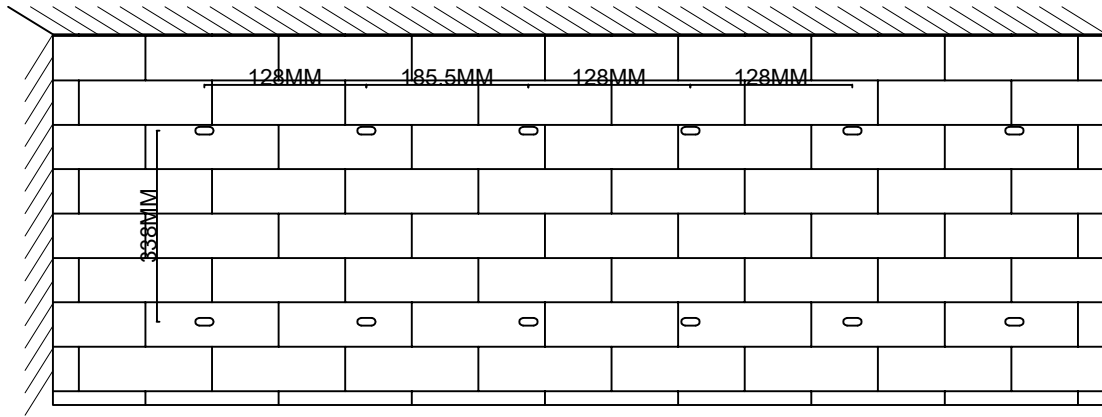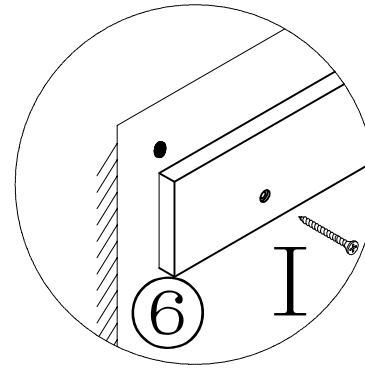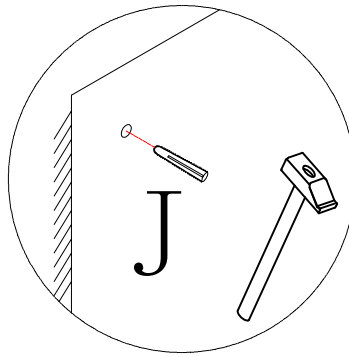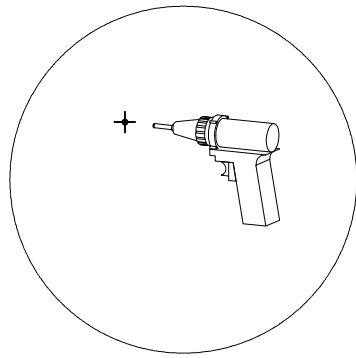

I*12



J*12

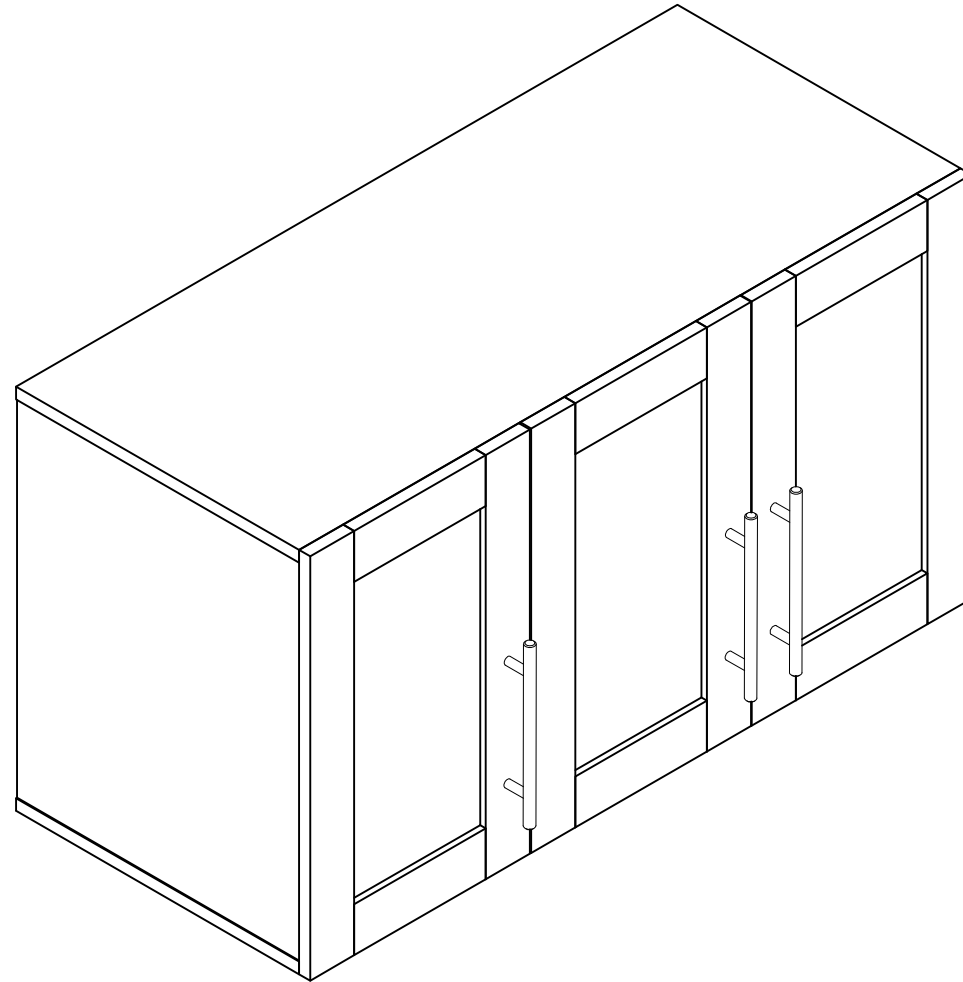

END