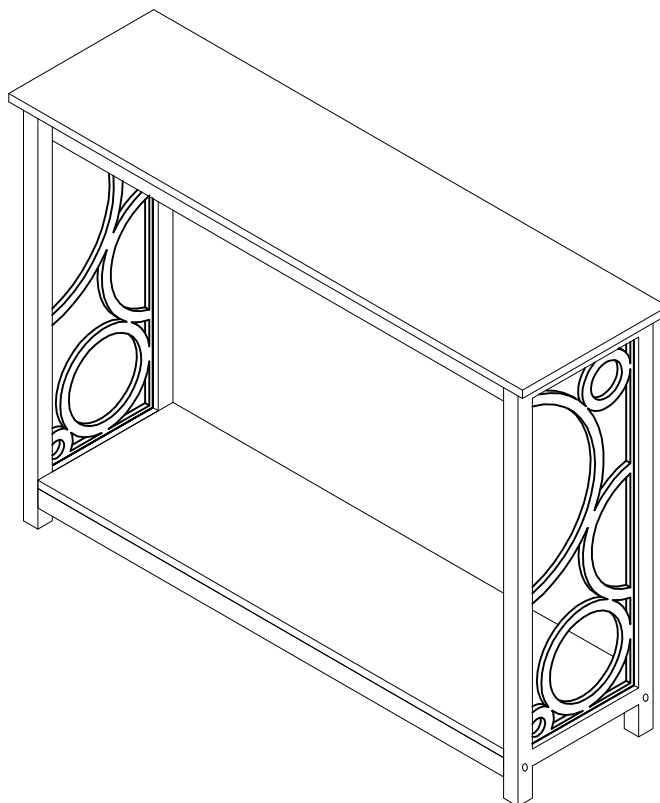


ASSEMBLY INSTRUCTIONS

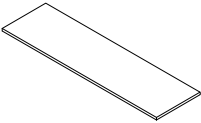


Console Table





NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Please never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.


Part List

A1. Quantity of 1	A2. Quantity of 4	A3. Quantity of 2	A4. Quantity of 1
			
Top Panel	Apron	Side Panel (L&R)	Bottom Panel

Hardware List


B1. Quantity of 8	B2. Quantity of 8	B3. Quantity of 8	B4. Quantity of 12
			
Bolt	Nut	Wood Dowel	Screw
B5. Quantity of 8			
			
Wood Cap			

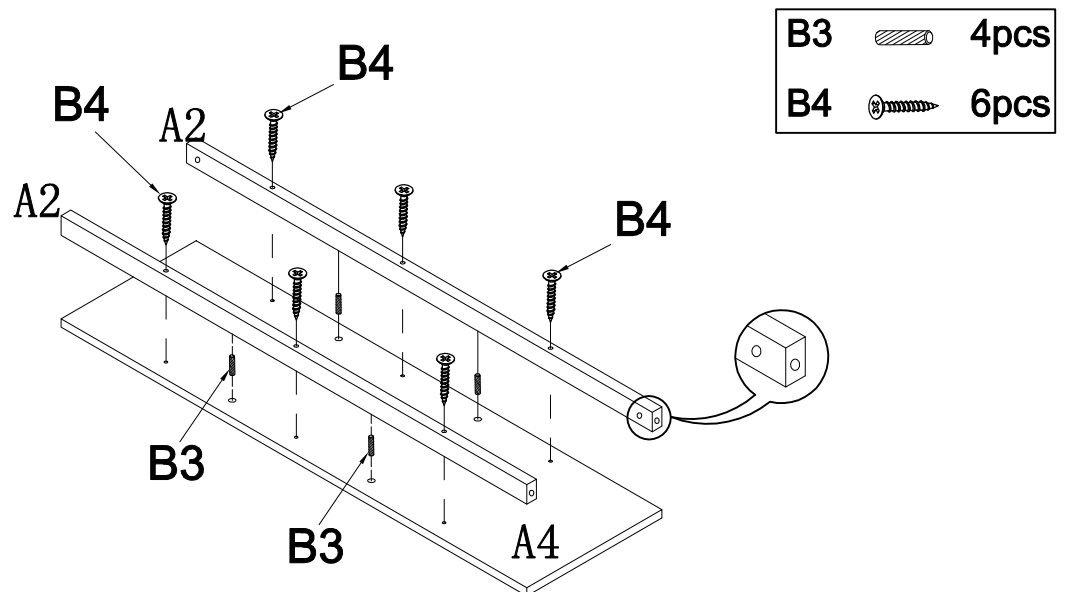STEP 1




Assemble Aprons (A2) to Bottom Panel (A4) using Wood Dowels (B3) and Screws (B4).

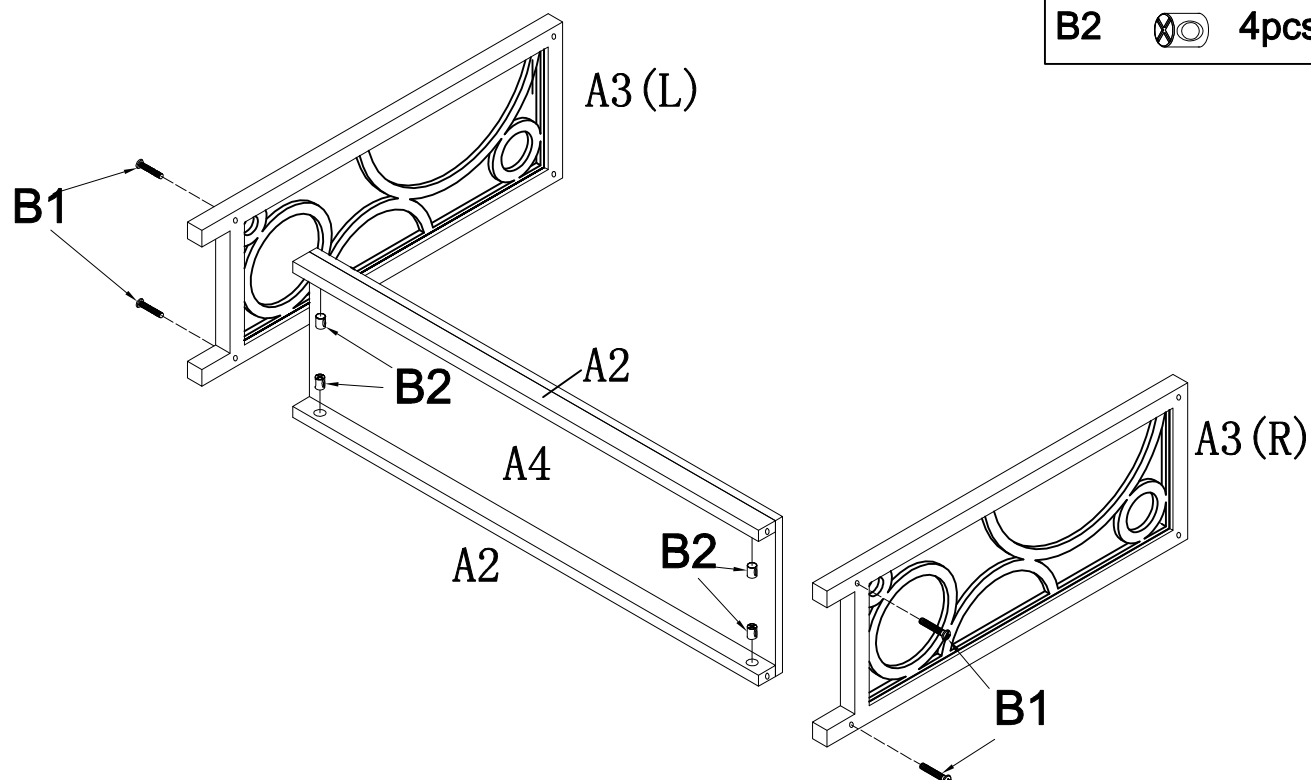STEP 2




Assemble Side Panels A3(L&R) to Aprons (A2) using Bolts (B1) and Nuts (B2).

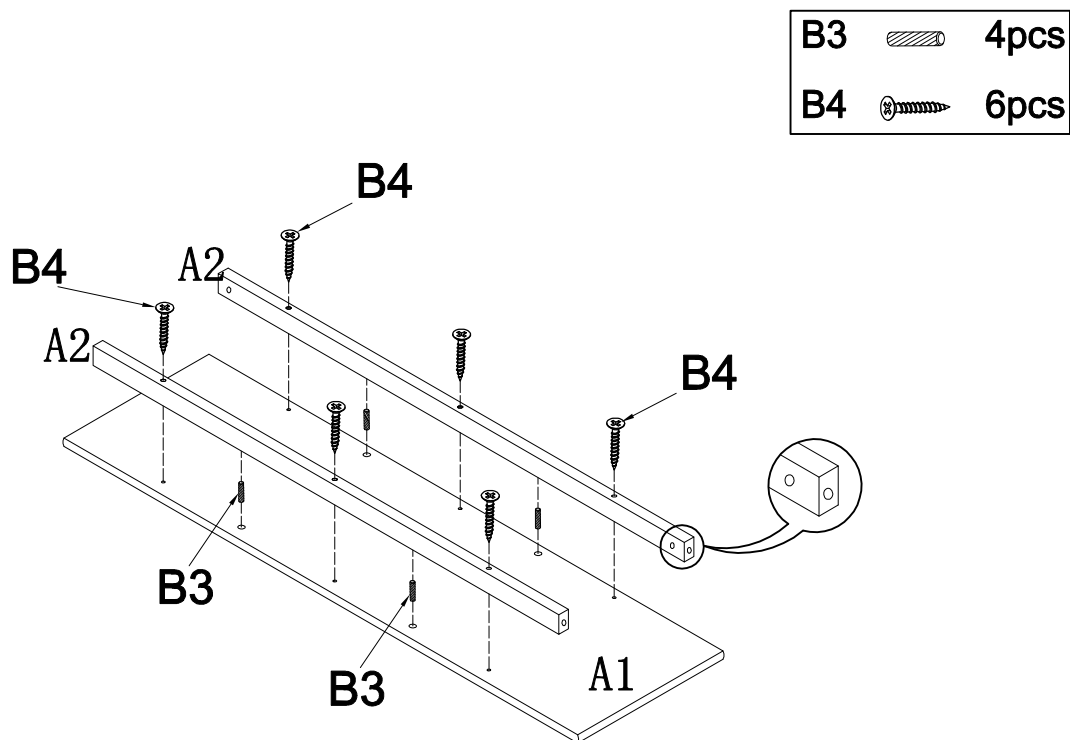STEP 3







Assemble Aprons (A2) to Top Panel (A1) using Wood Dowels (B3) and Screws (B4).

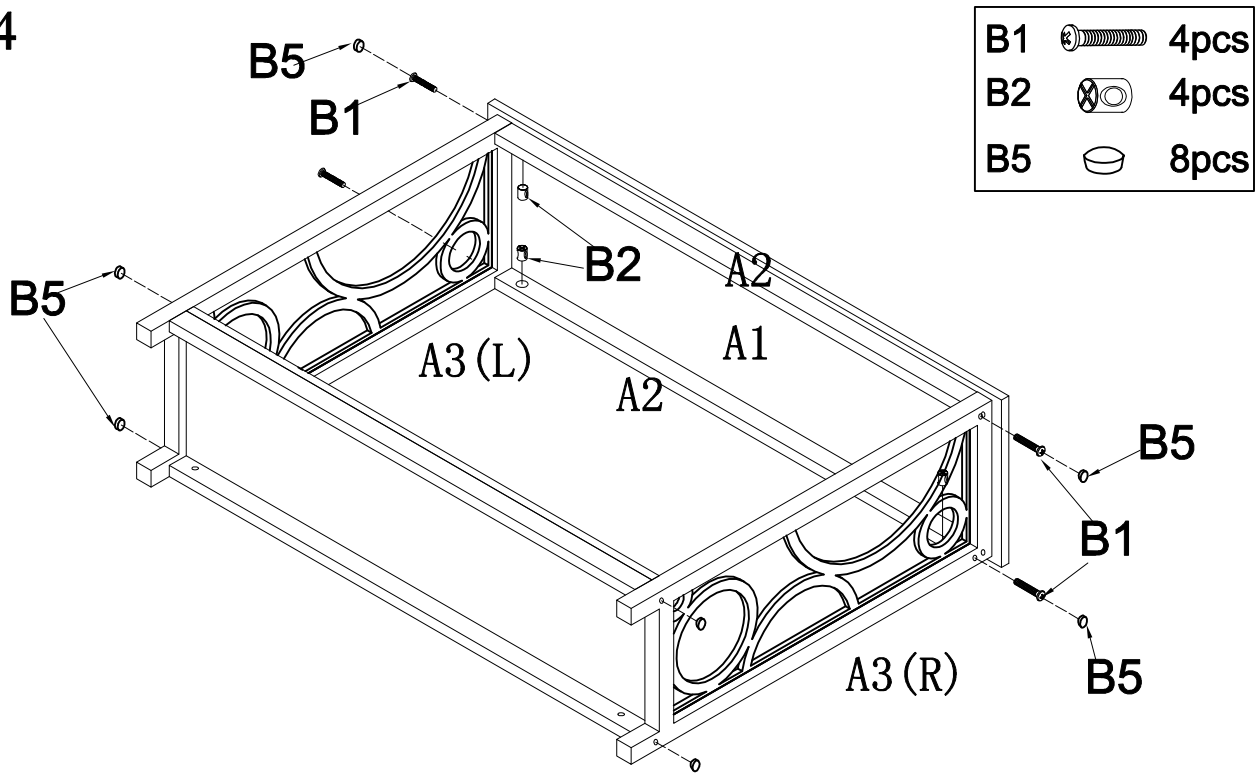STEP 4



Assemble Side Panels A3(L&R) to Aprons (A2) using Bolts (B1) and Nuts (B2). Then insert Wood Caps (B5) as shown above.

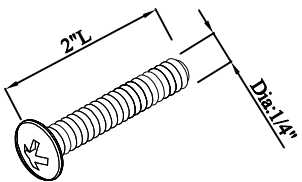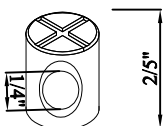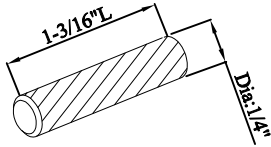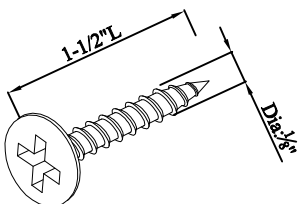APPENDIX: Dimension of Hardwares in this AI.

B1.  Bolt for Handle	B2.  Nut	B3.  Wood Dowel
B4.  Screw		