

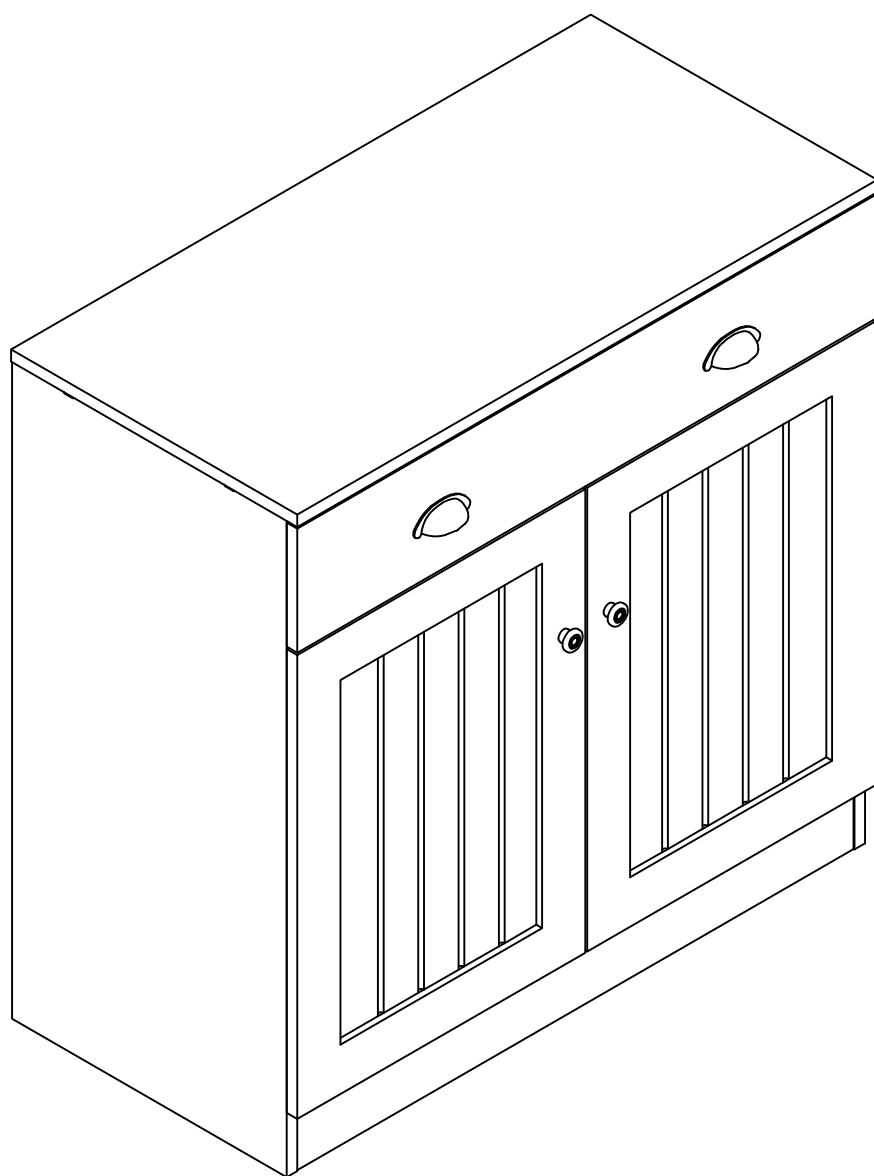
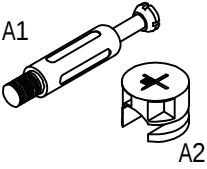

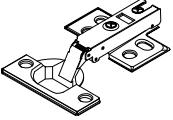



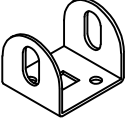
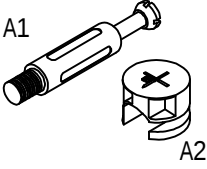







Hardware

 A1 A2	 $\Phi 8*30$	 $\Phi 3*14$	 $\Phi 3.5*14$	
A×24	B×10	C×8	D×36	E×8
			 4*20	 J1 J2  J3 J4 J5
F×4	G×4	H×2	I×2	J×2
 $\Phi 20$		 $\Phi 3.5*35$		 4*10
L×24	M×6	N×6	O×2	P×4
 CL×1 CR×1 DL×1 DR×1				
S×1	T×2		U×2	V×4

Spare hardware			
 A1 A2	 $\Phi 8*30$	 $\Phi 3*14$	 $\Phi 3.5*14$
A×2	B×2	C×2	D×2
	 $\Phi 20$	 $\Phi 3.5*35$	
E×2	L×2	N×1	

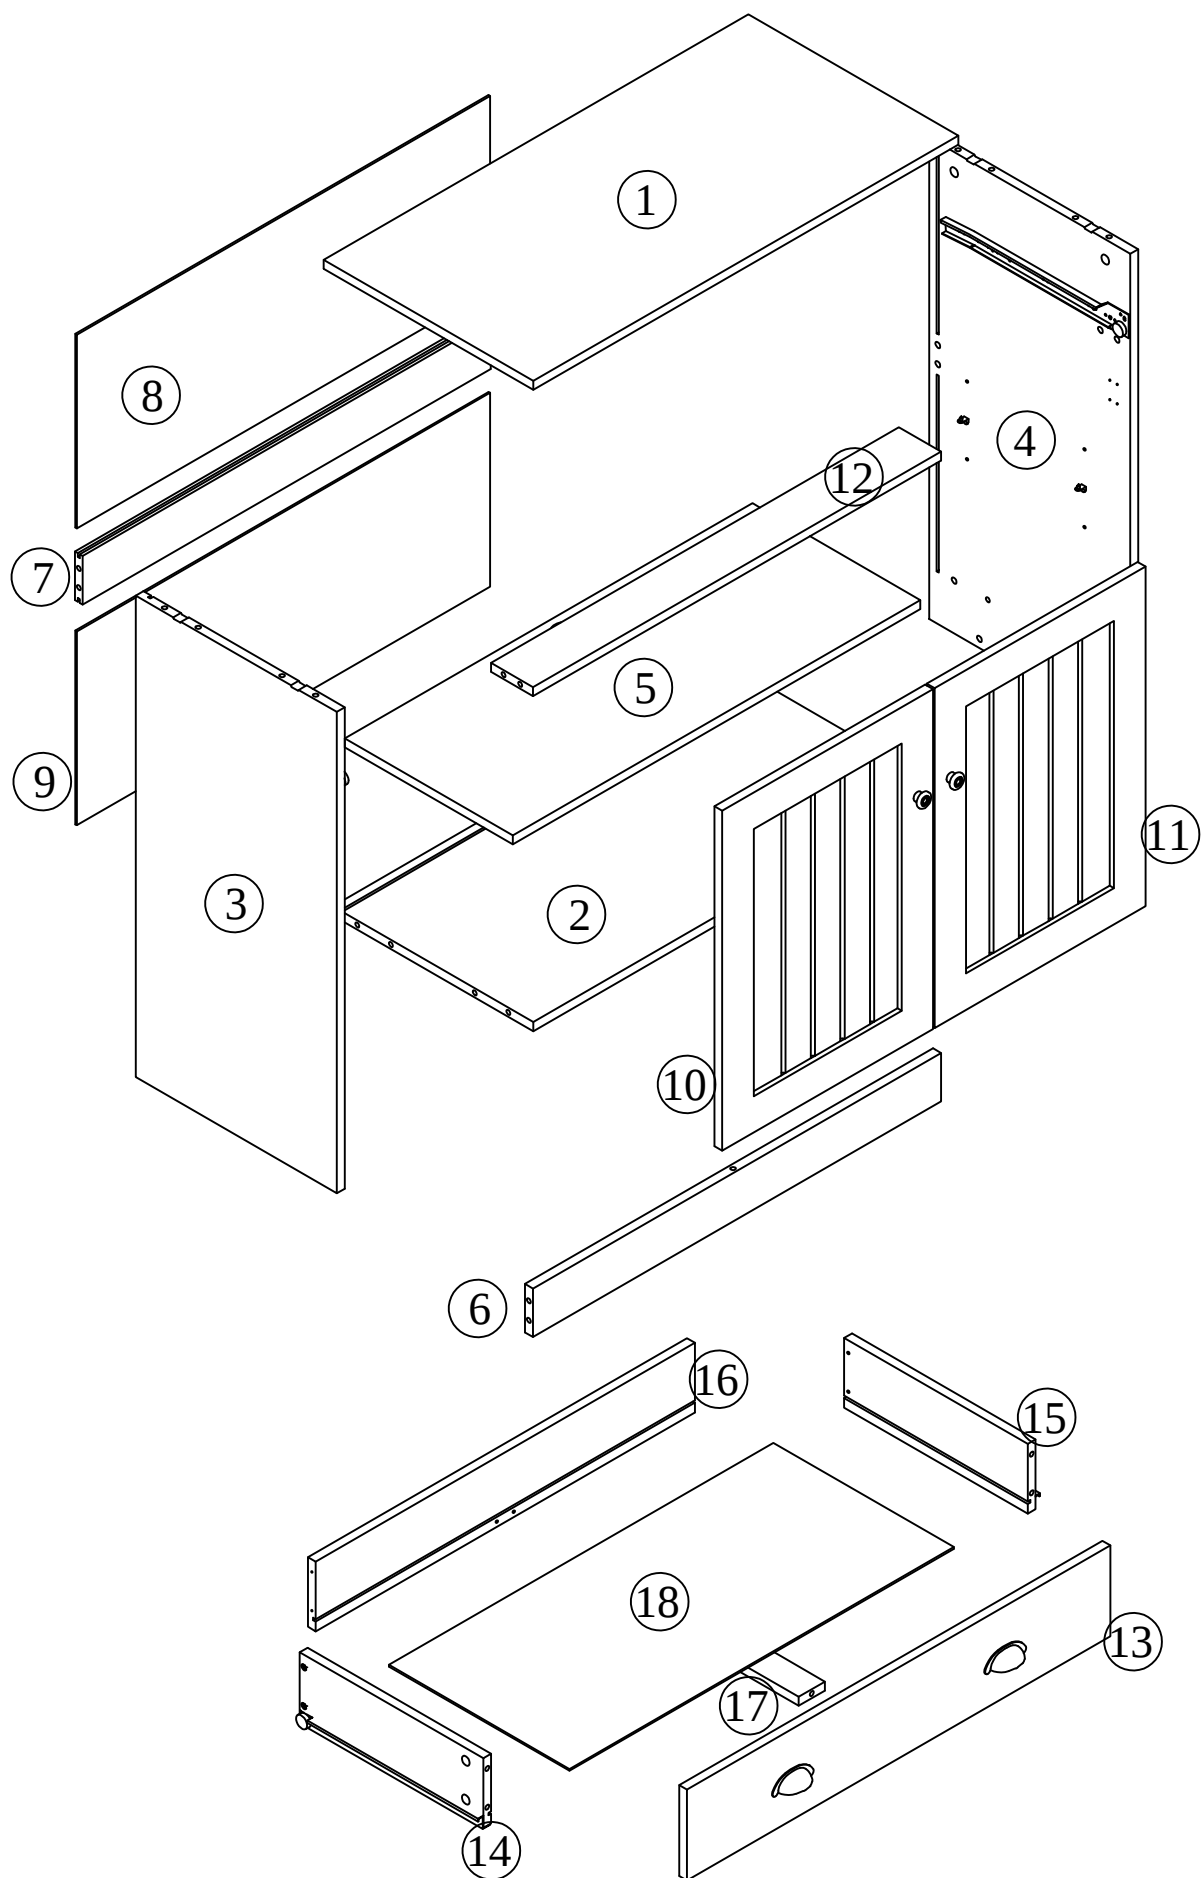


1

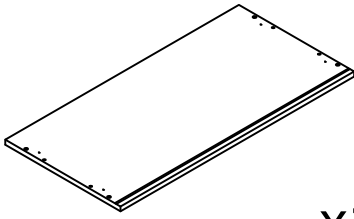


x1

2

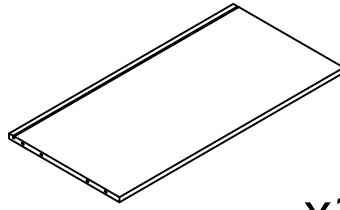


x1

3

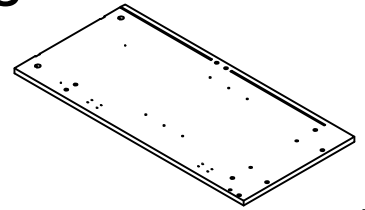


x1

4

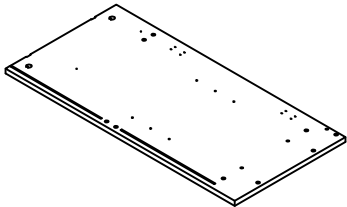


x1

5

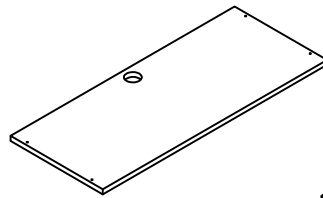


x1

6

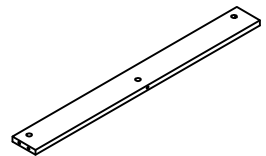


x1

7

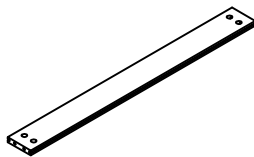


x1

8

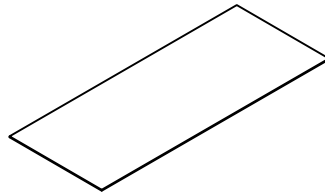


x1

9

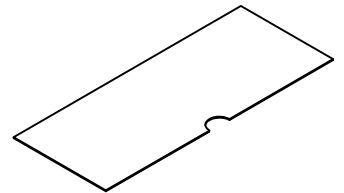


x1

10

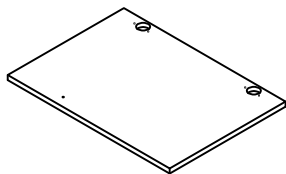


x1

11

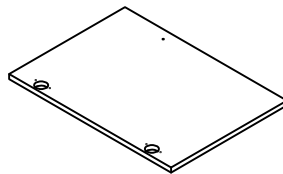


x1

12

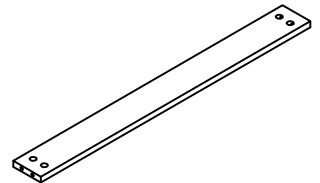


x1

13

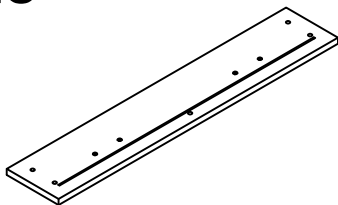


x1

14

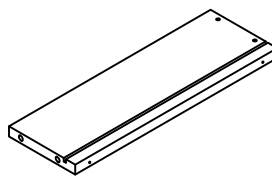


x1

15

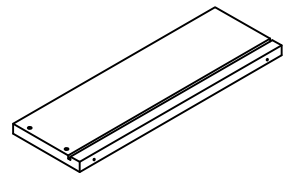


x1

16

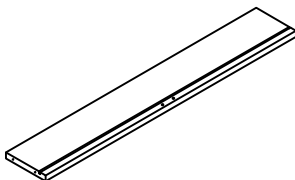


x1

17

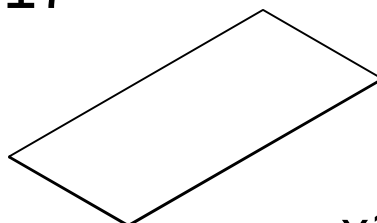


x1

18

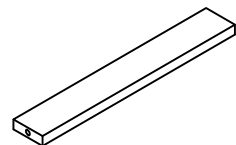

x1

1

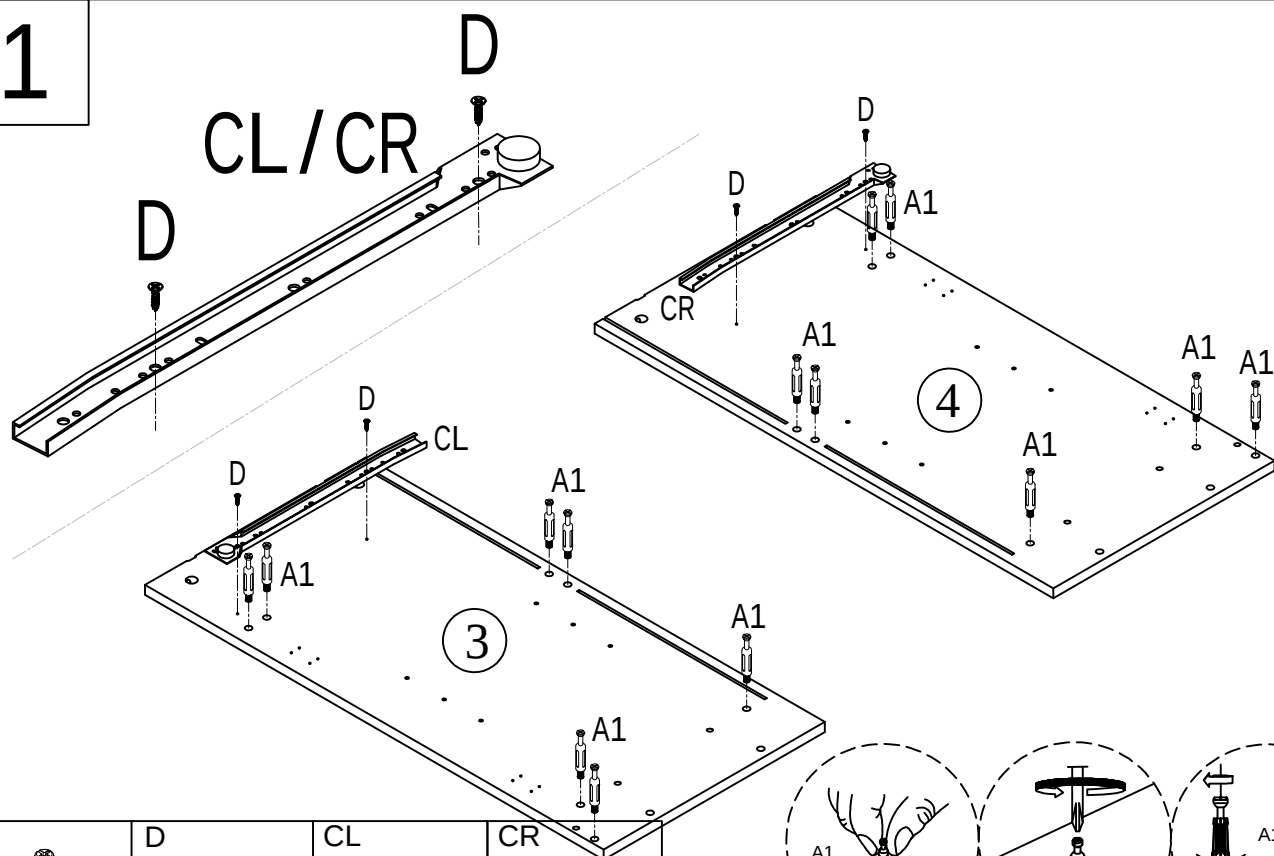

A1



14pcs


D



Φ3.5*14

4pcs

CL




1pcs


CR




1pcs

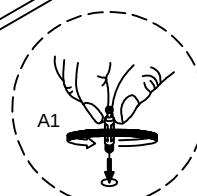

Step 1

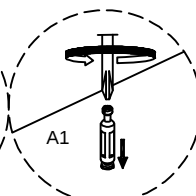


Step 2

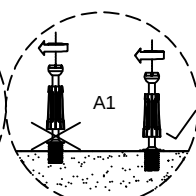

After

2

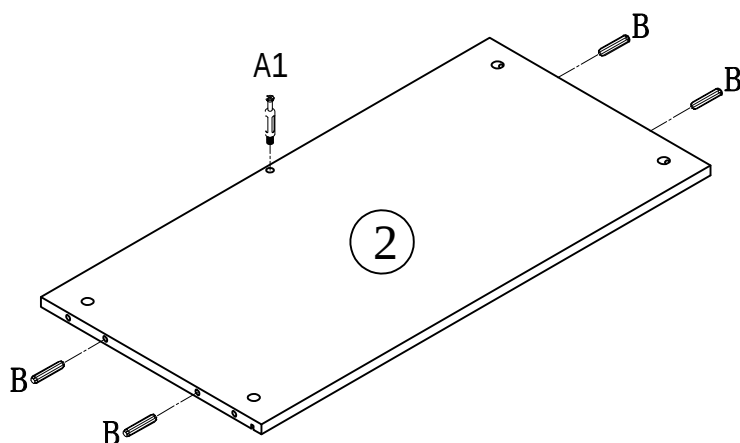


A1



1pcs




B






Φ8*30

4pcs




3

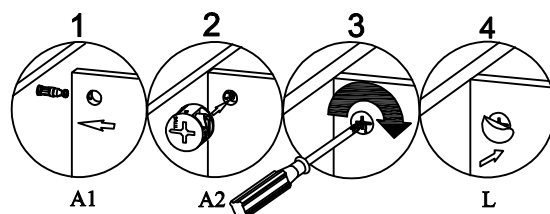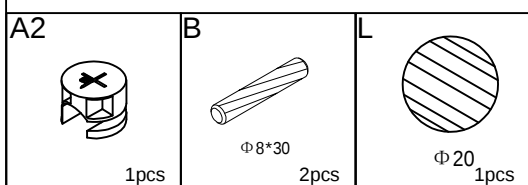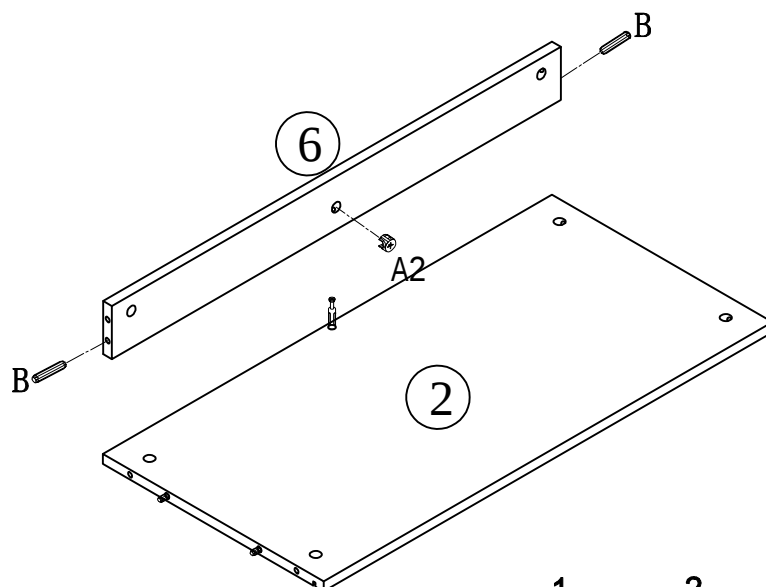




4

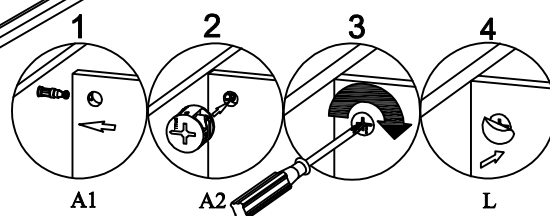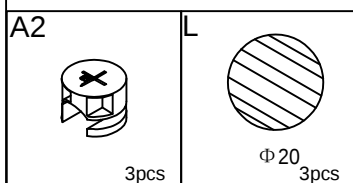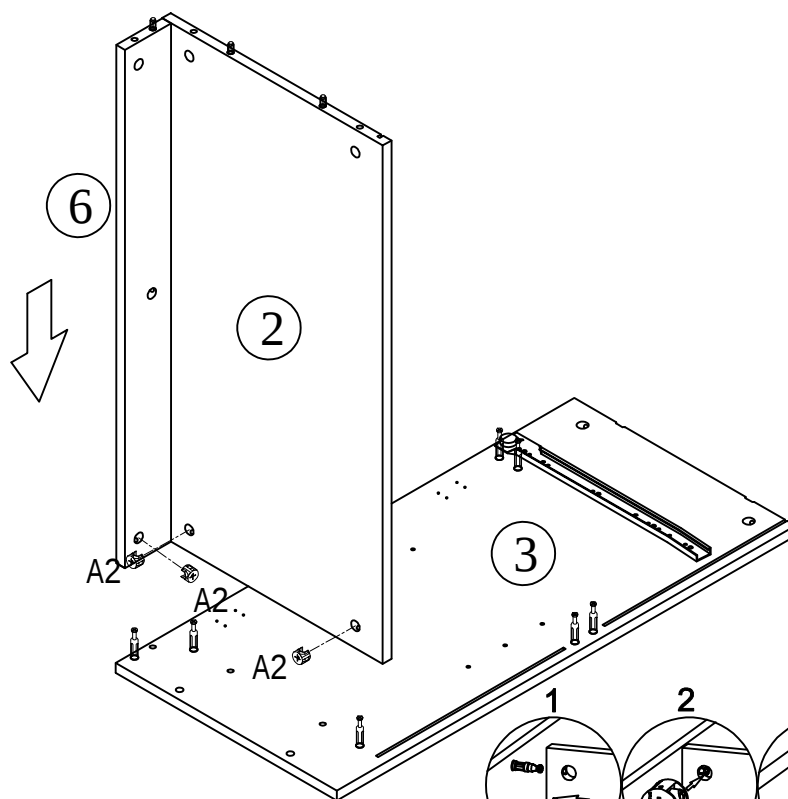


5

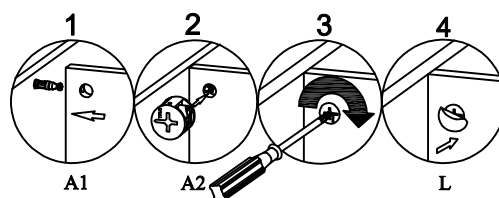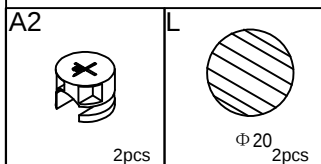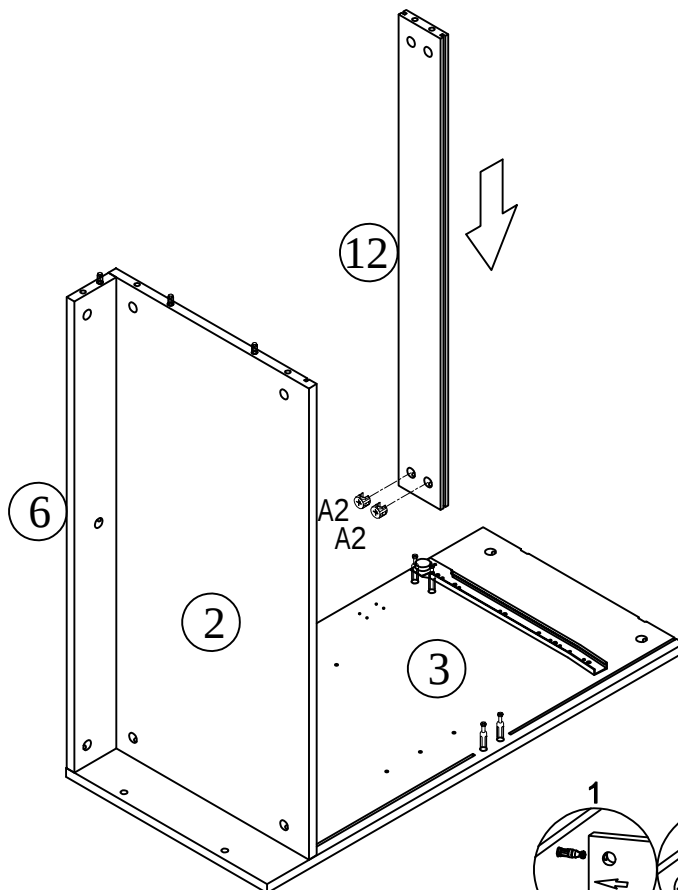



6

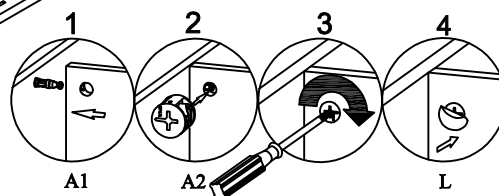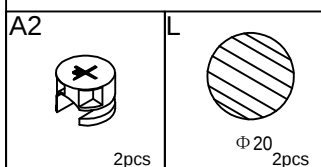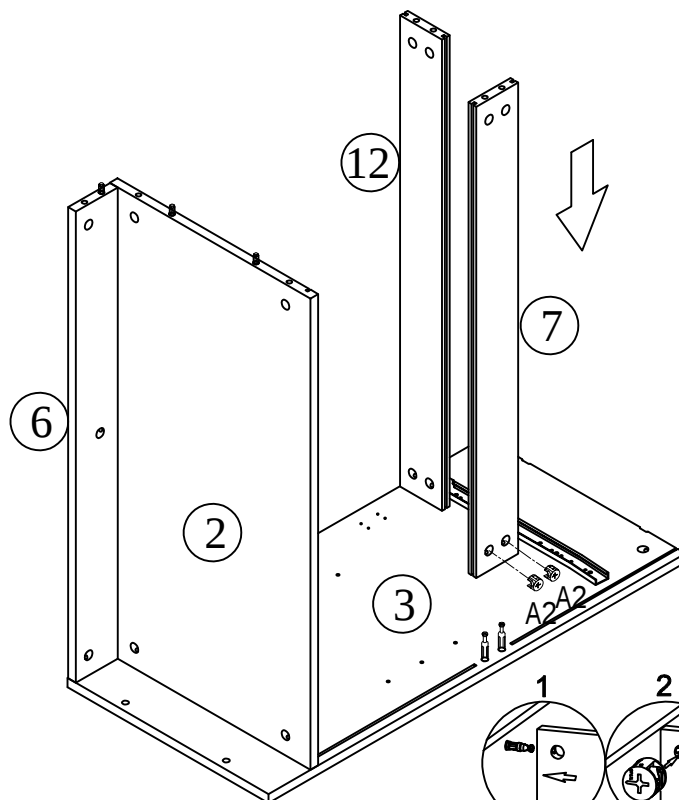


7

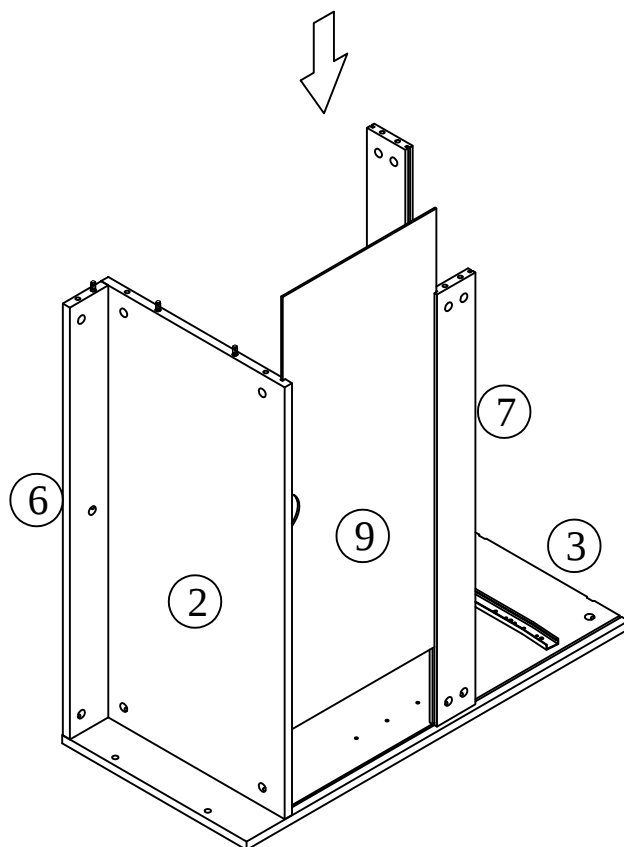


8

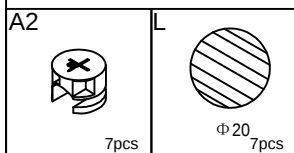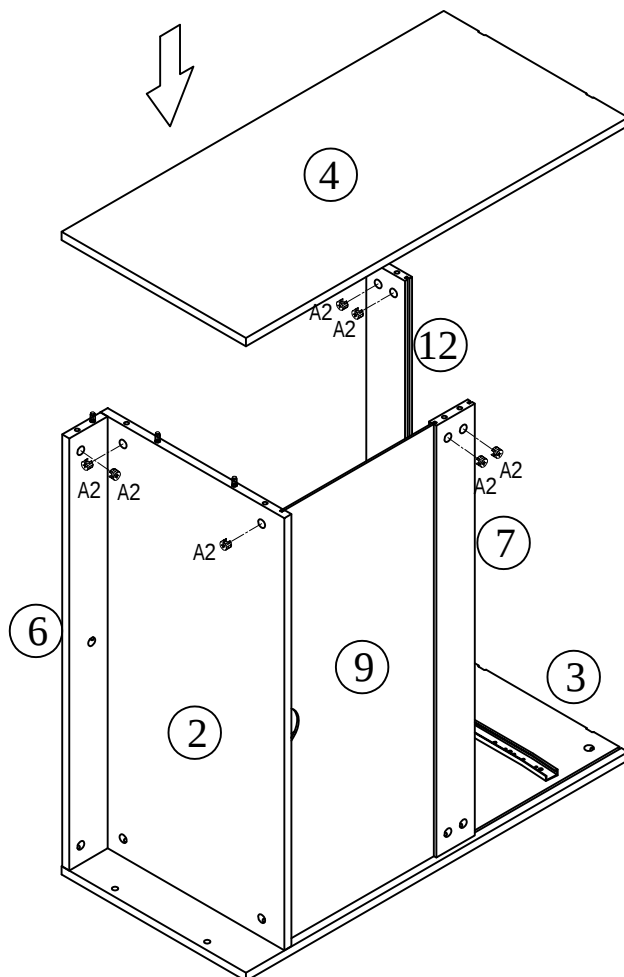

9

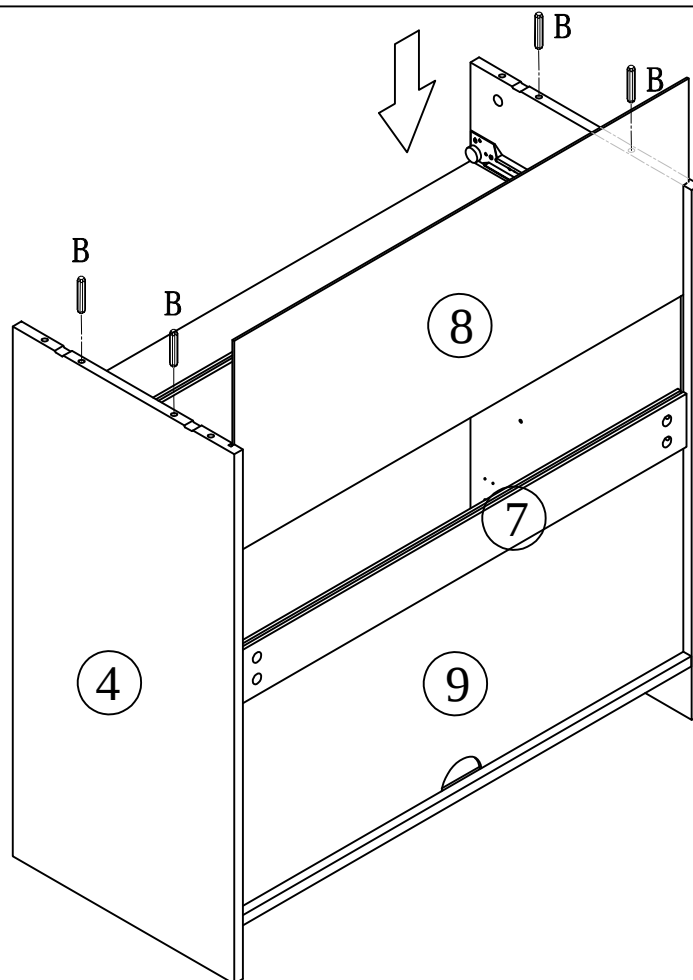


B



Φ 8*30

4pcs

10



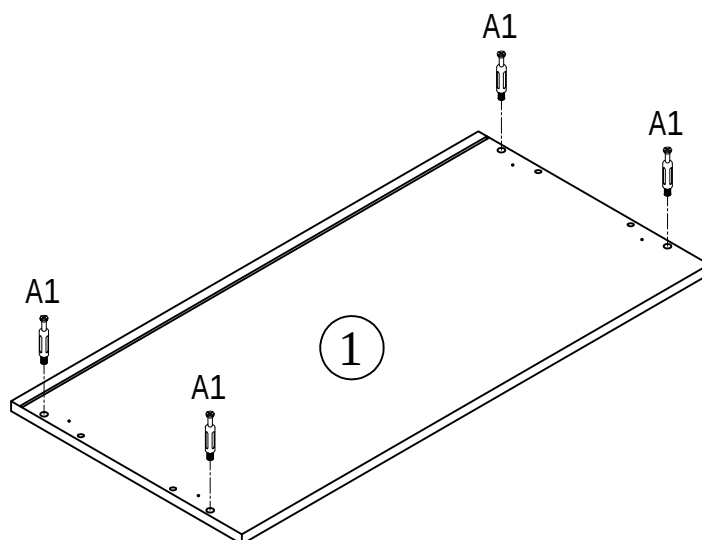


A1







4pcs




11

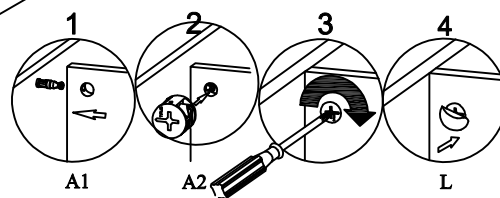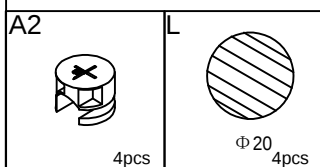
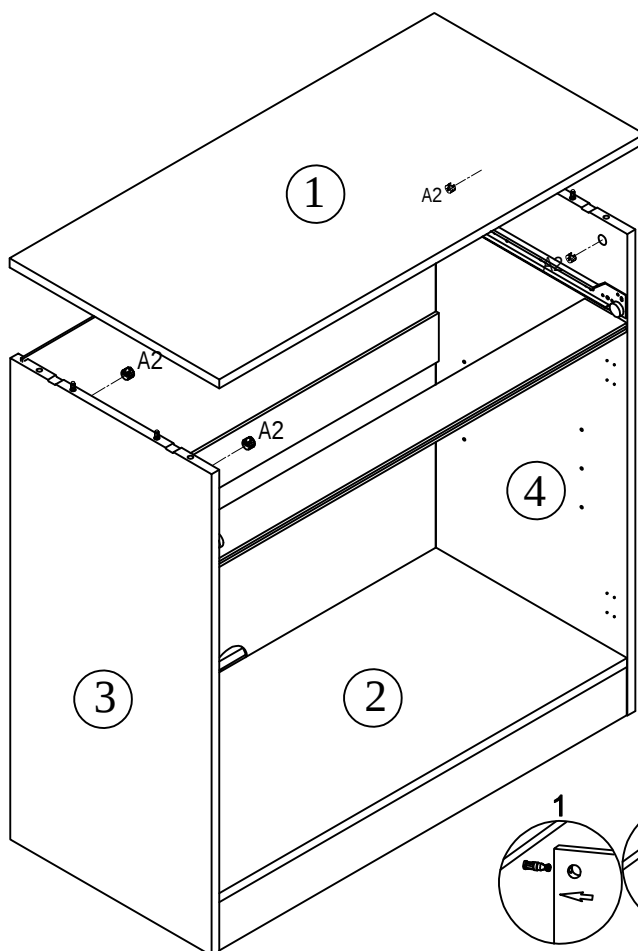


12

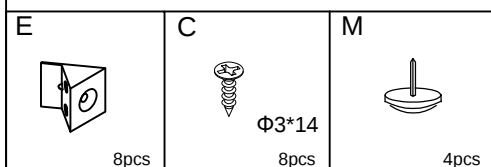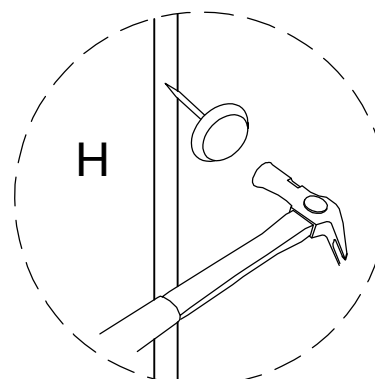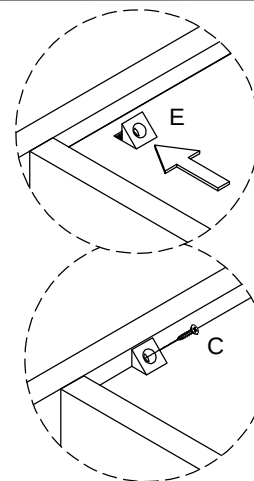
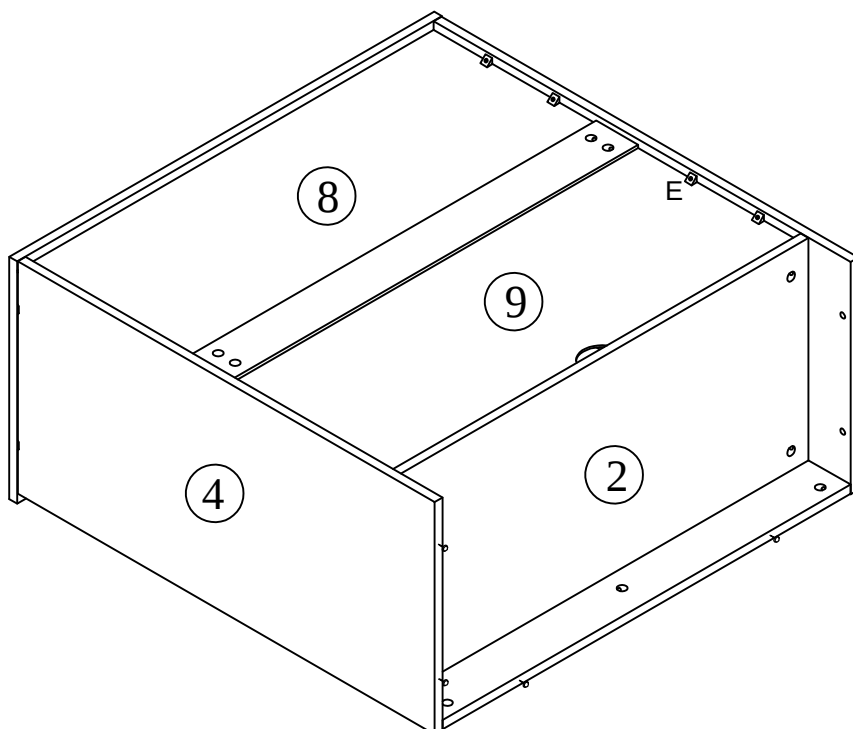


12-2

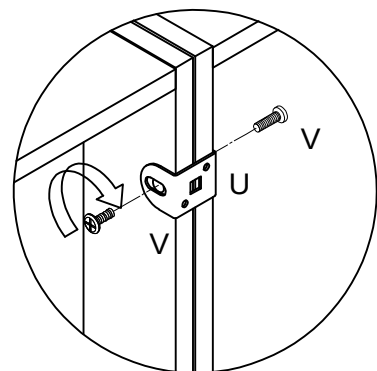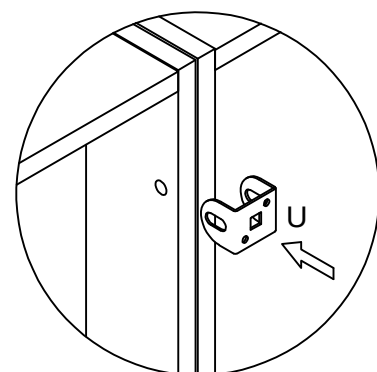
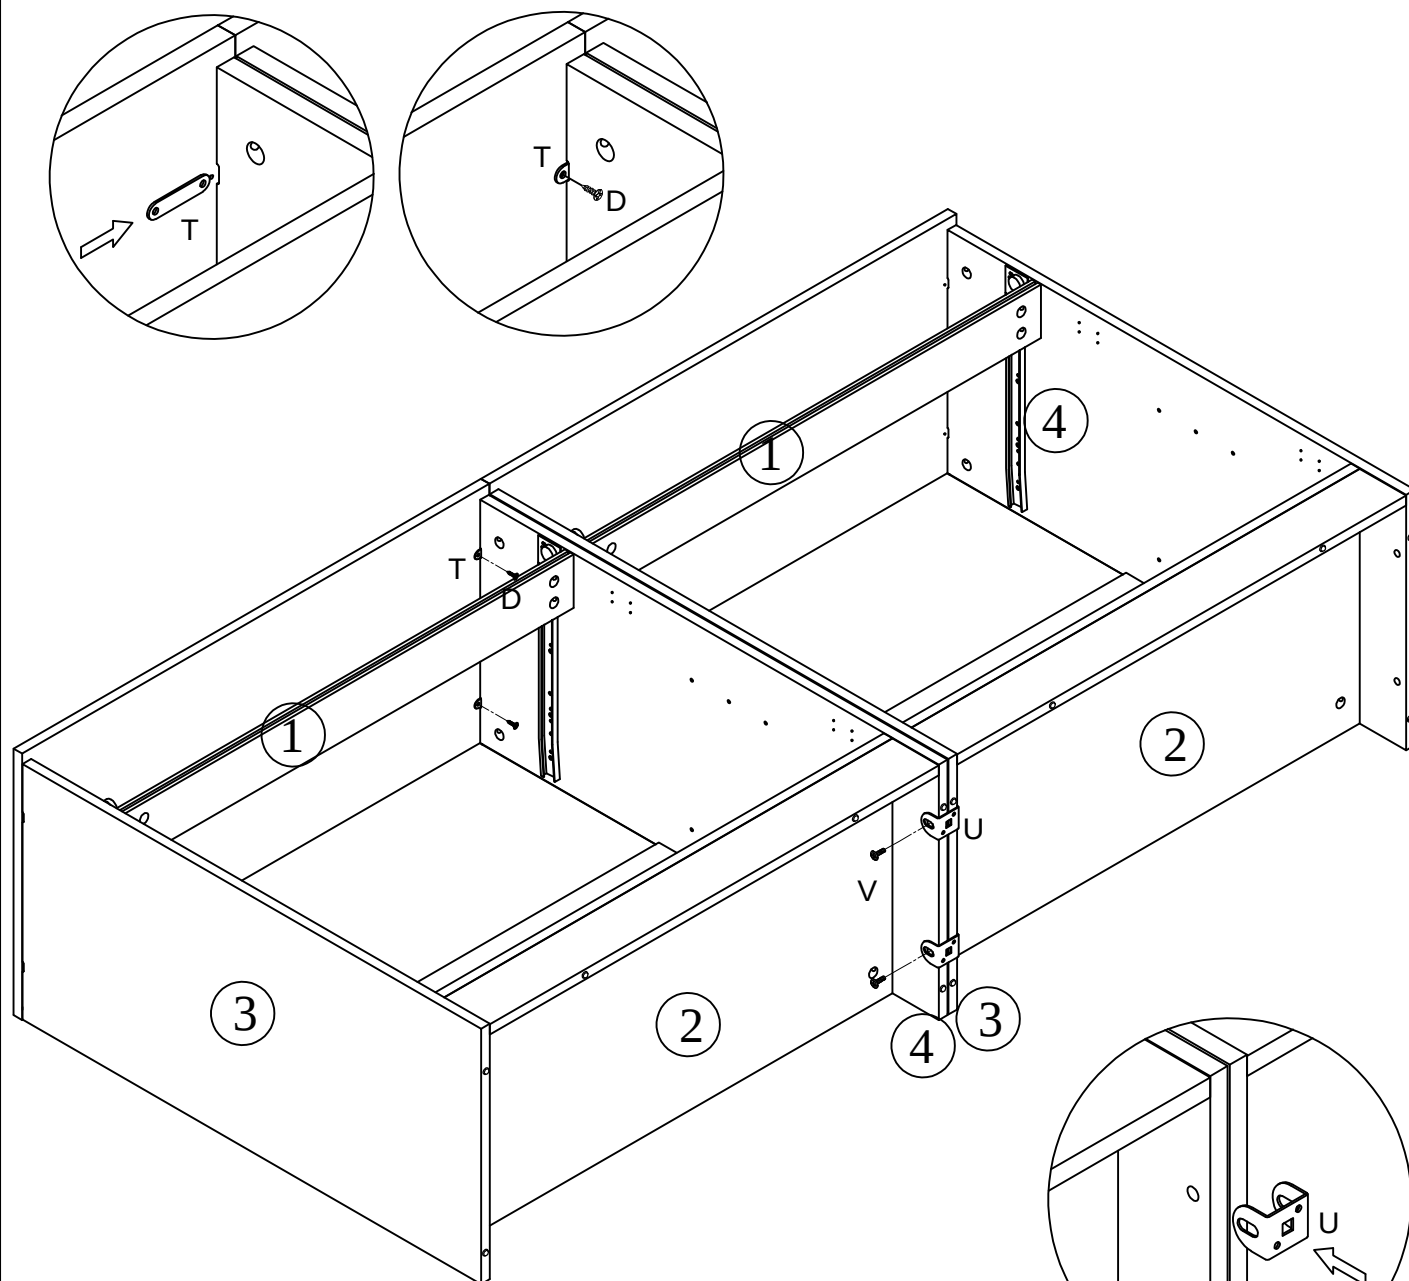


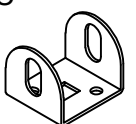U  2pcs	D  Φ3.5*14 4pcs	V  4pcs	T  2pcs
---	--	--	--



13

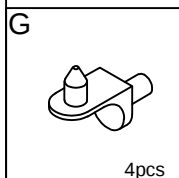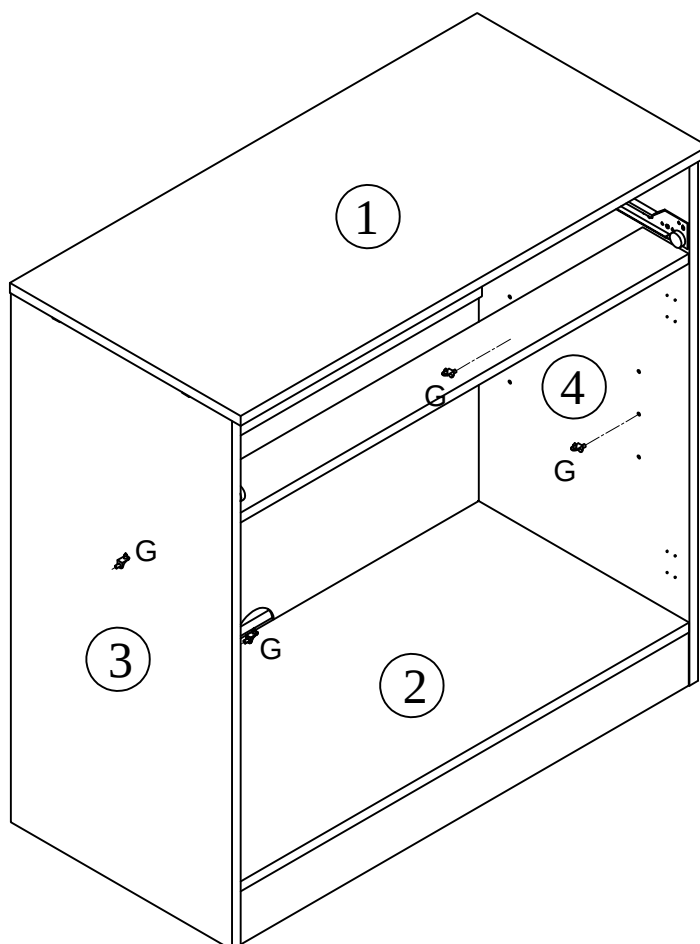



14

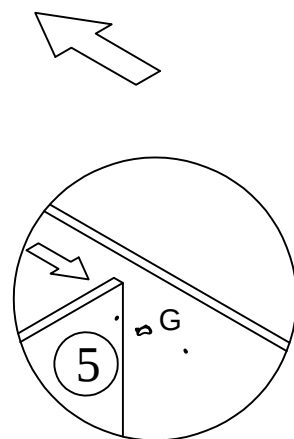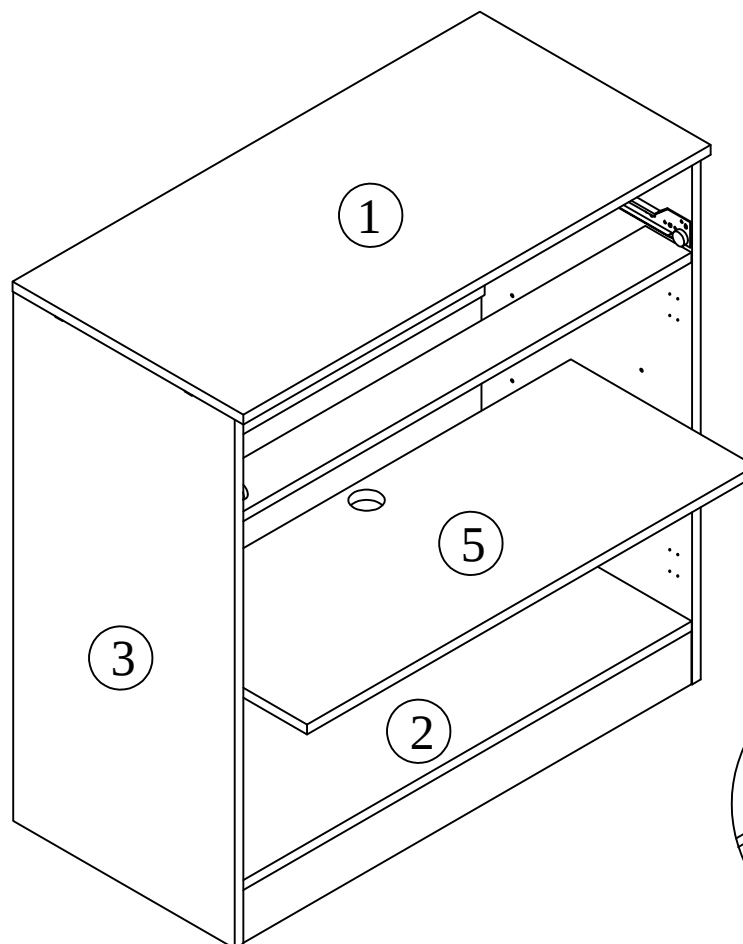


15

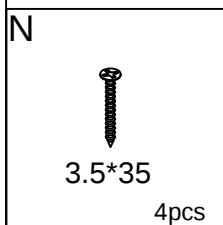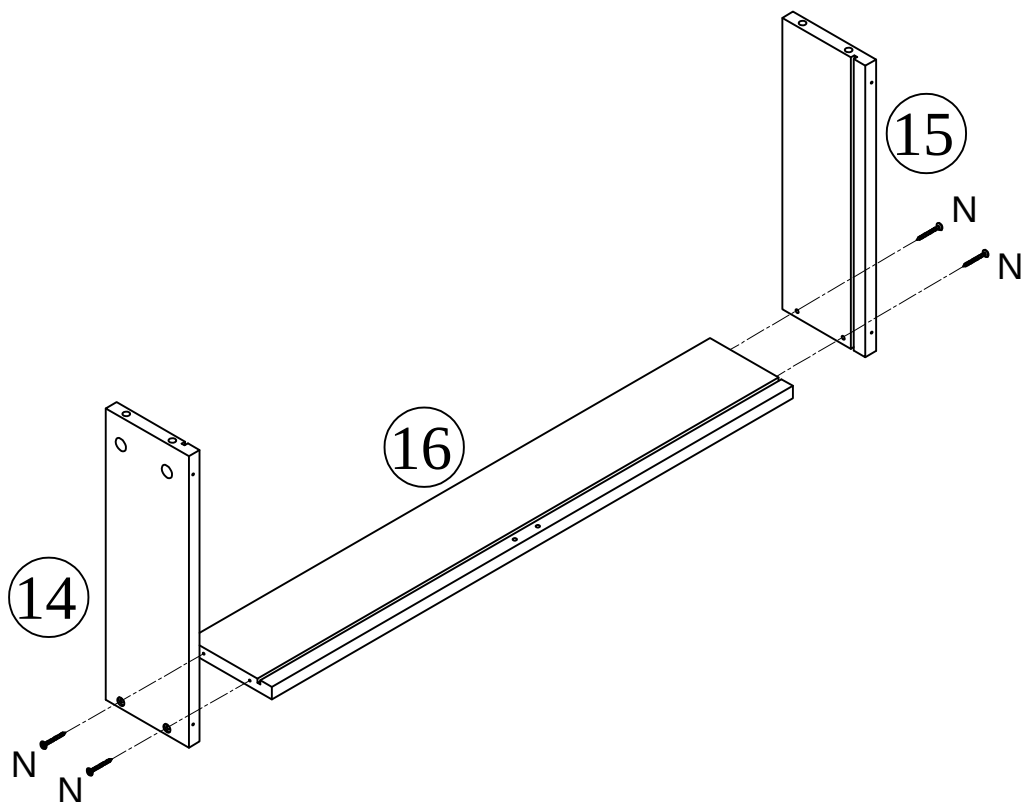


16

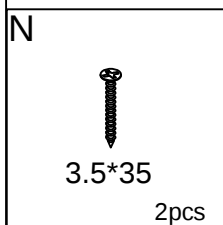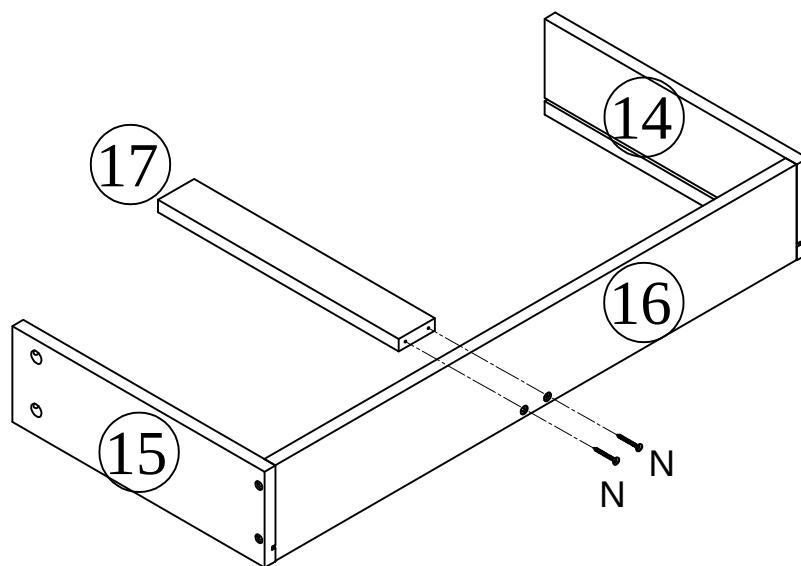

17

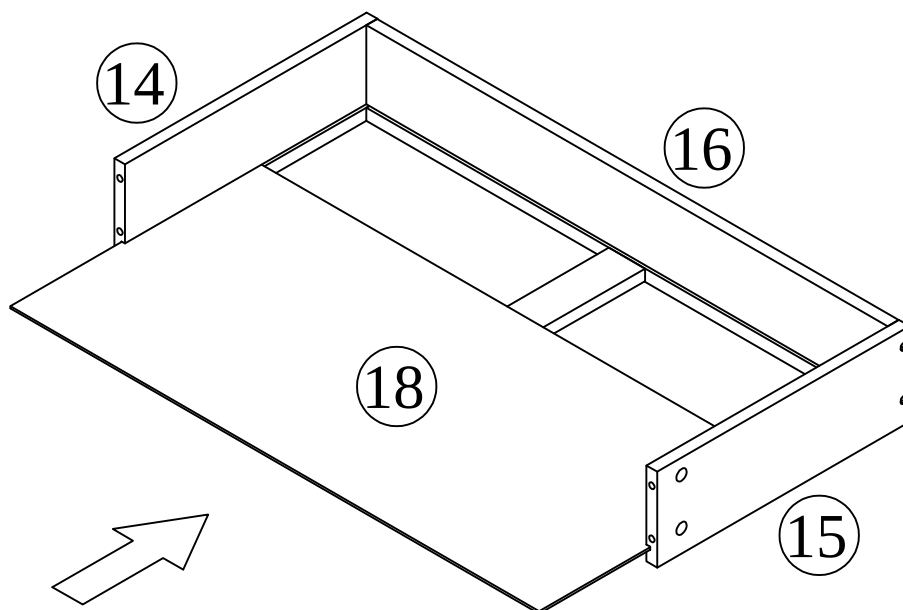

18

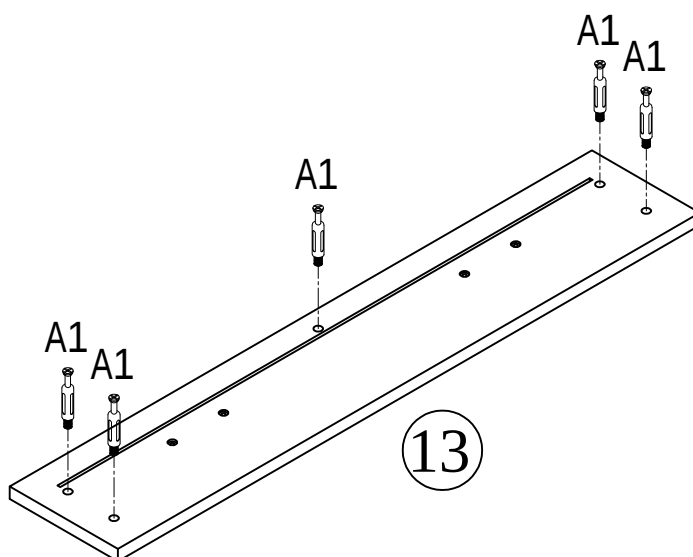


A1



5pcs

19

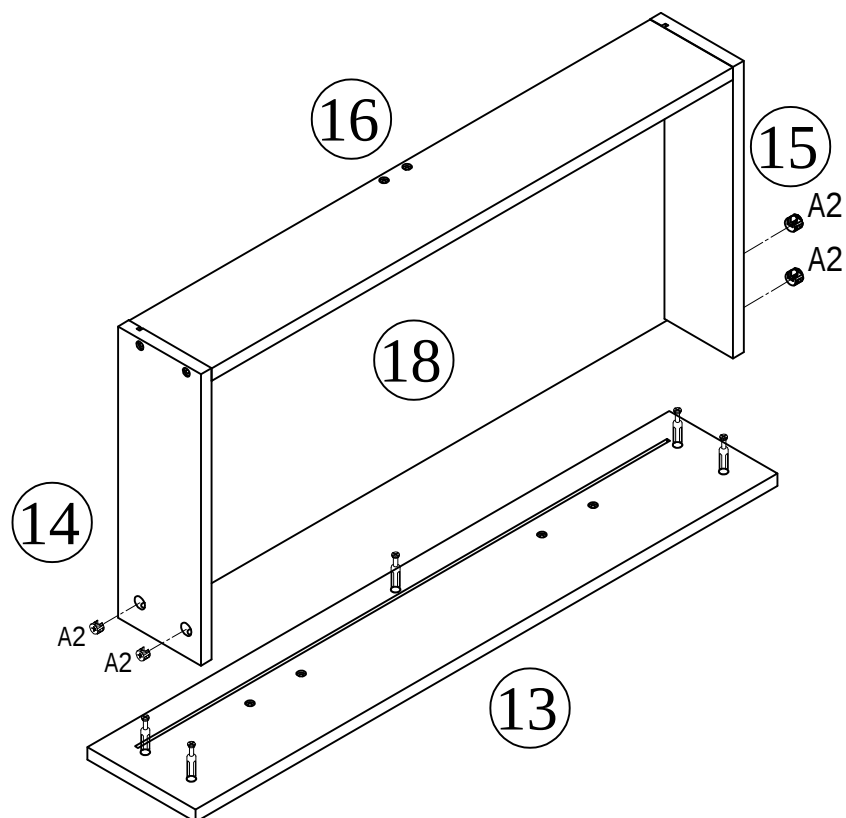


A2



4pcs

20


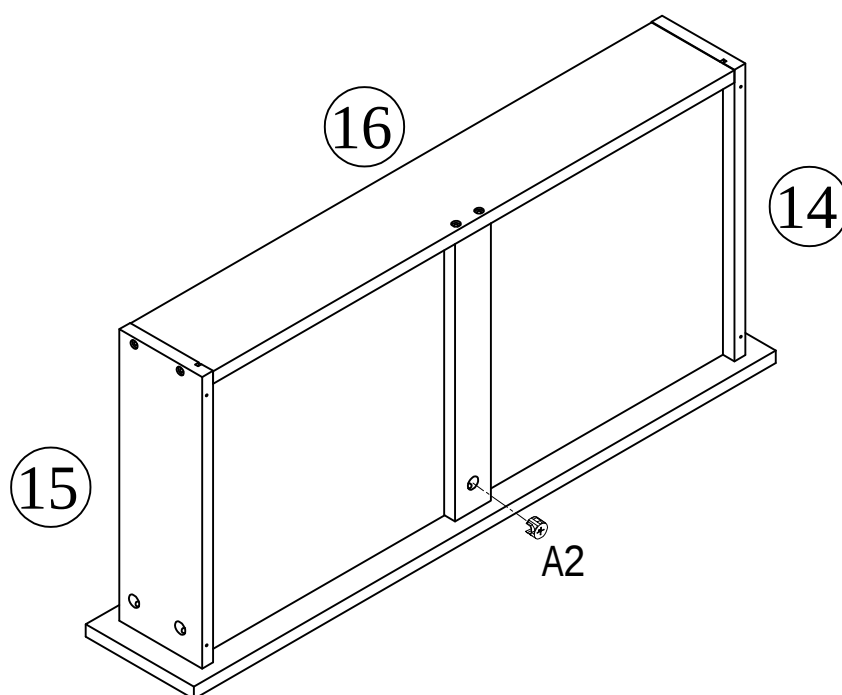


A2





1pcs


21

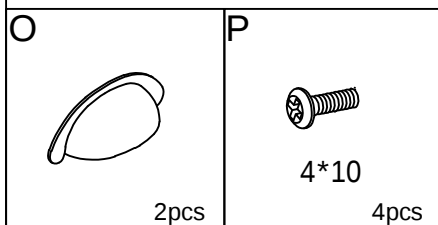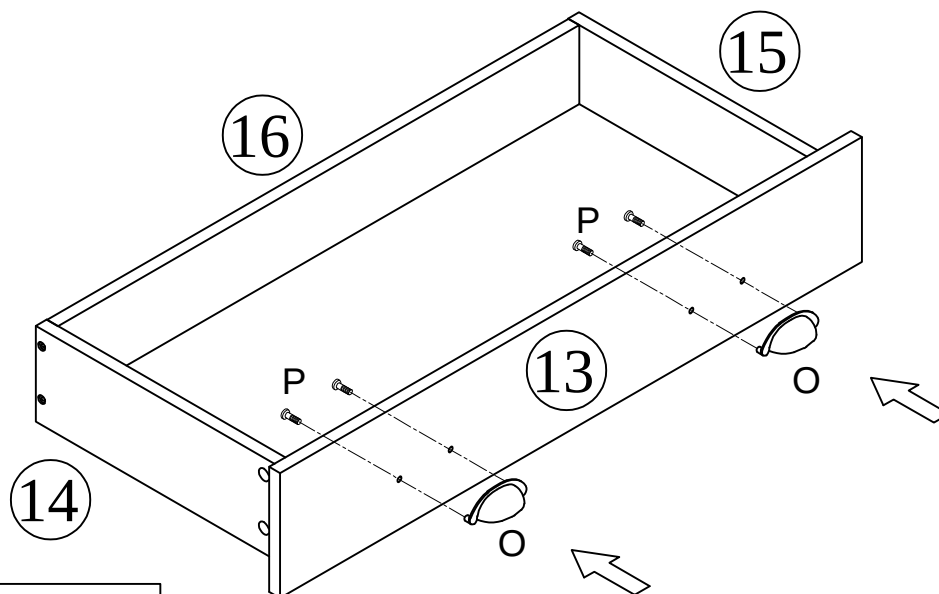



22

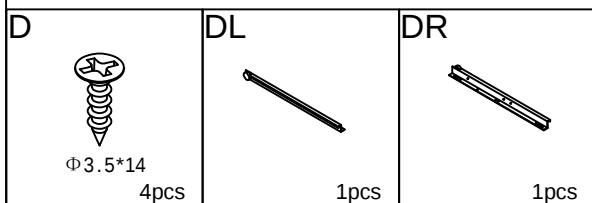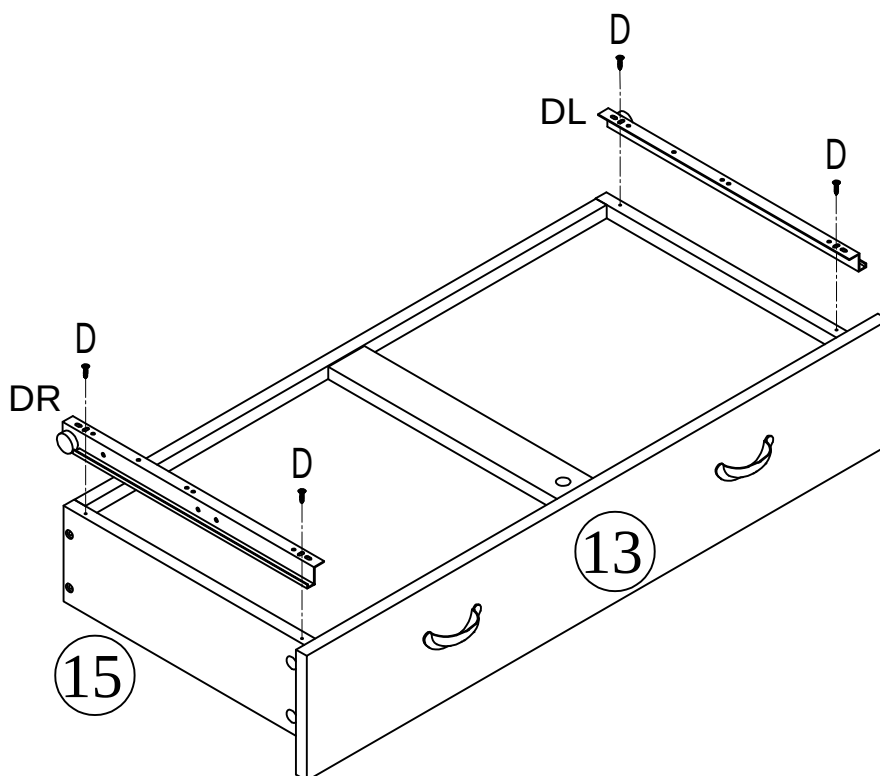

23

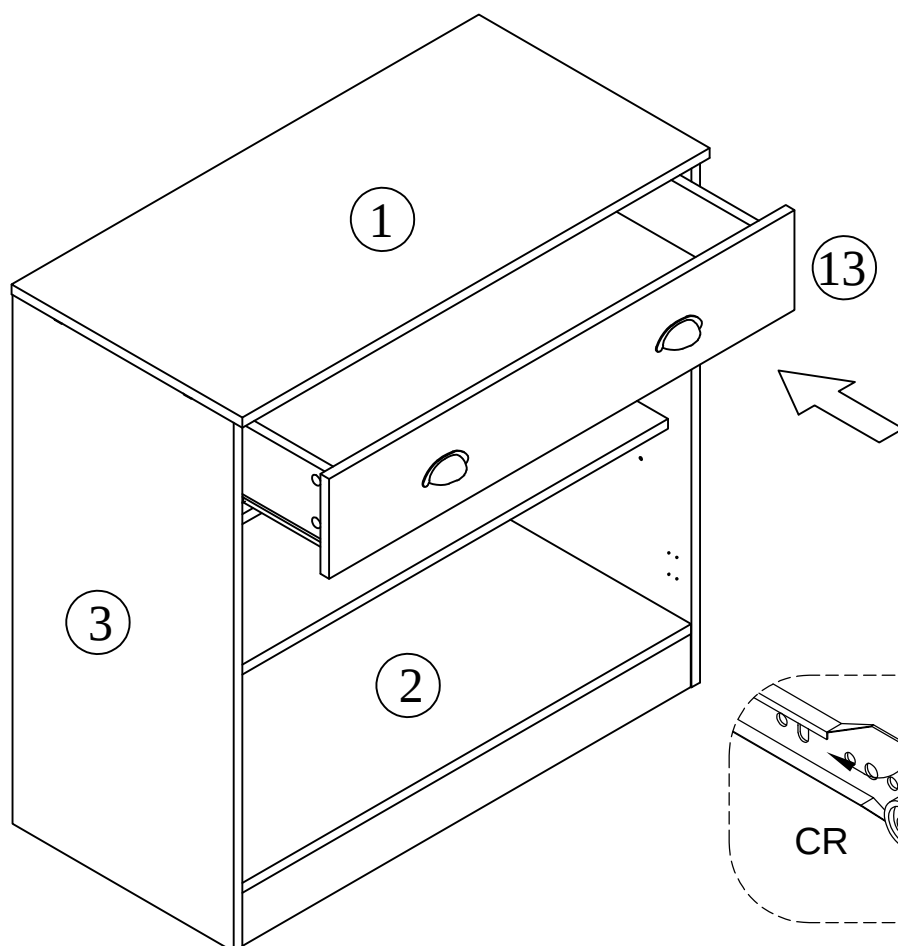

24

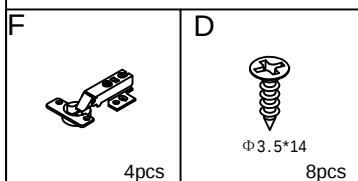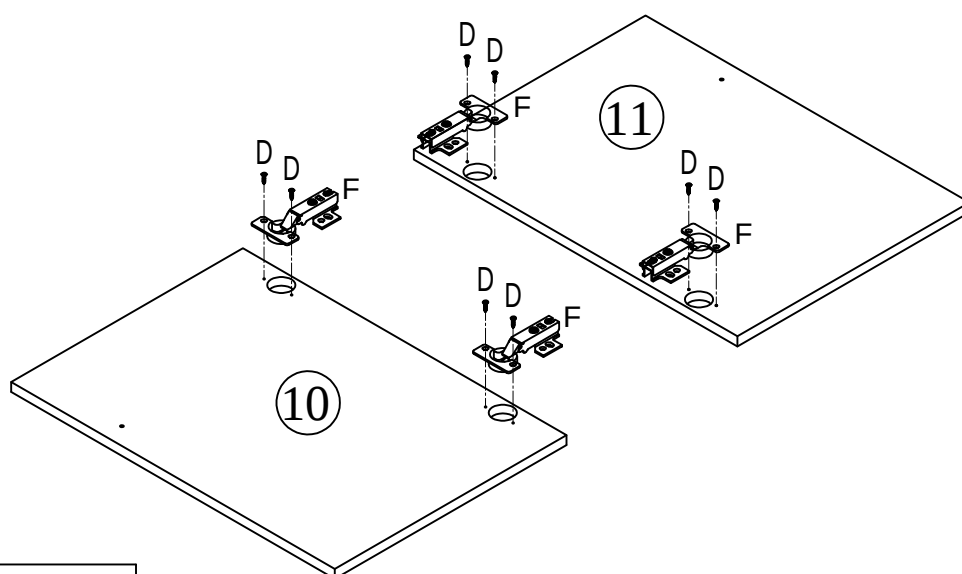

25

Hinge Installation Instructions




1. Attach the hinge using the two pre-drilled round holes and align the door.

2. Tighten the two screws to secure.

△ Two holes are pre-drilled by design.


△ The door works properly with these two screws.

△ Additional screws are optional after alignment

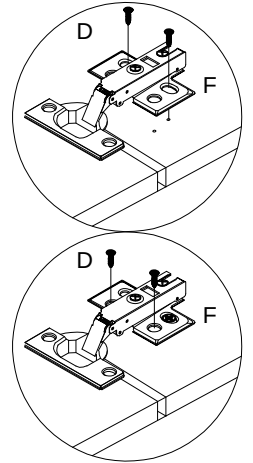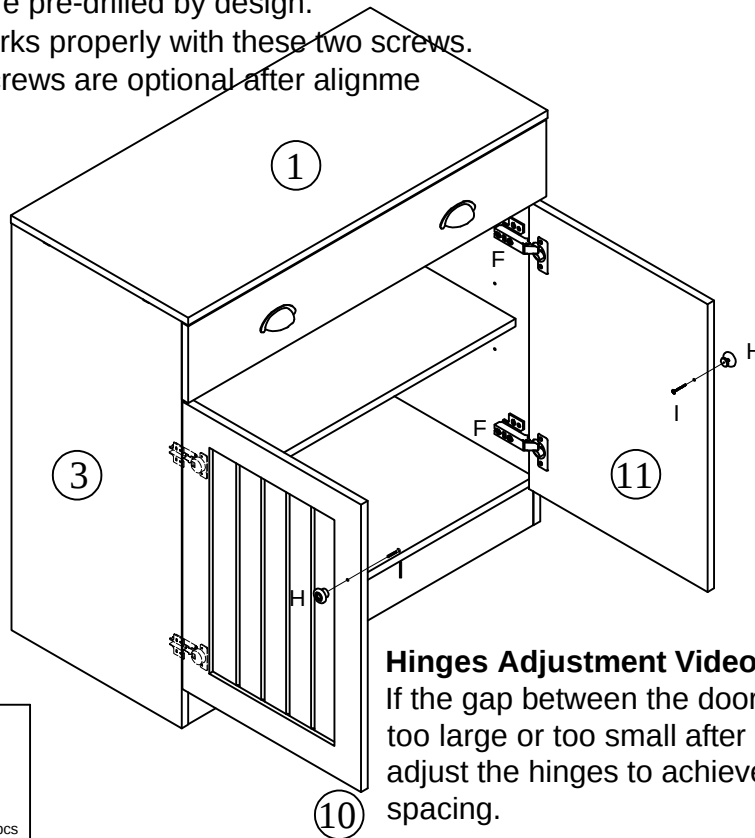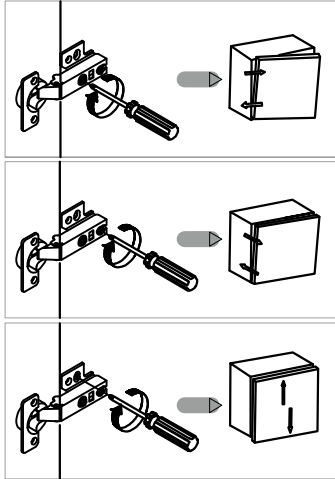

Hinges Adjustment Video:

If the gap between the door and frame is too large or too small after installation, adjust the hinges to achieve the desired spacing.

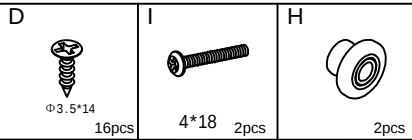

26

