



Installation instruction



DT050AW Installation The number of people needed for

- Please read the manual carefully before installing this product. And strictly follow the
- Please take good care of this manual for your next


Serial number	Shape	Name	Quantity
A	1	Hexagon socket head screw (M8*16mm)	8
В	0	Gaskets	8
С	Elimina	Self-tapping screws (M4*35mm)	8

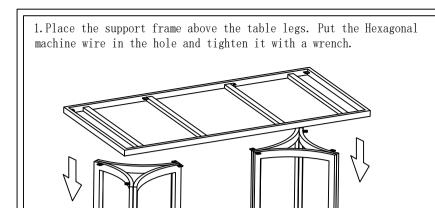

Hexagonal wire+Gaskets


(M8*16mm)

2. Place the desktop above the support frame, put the self-tapping screws in the ear piece position, and tighten the screws with a screwdriver.

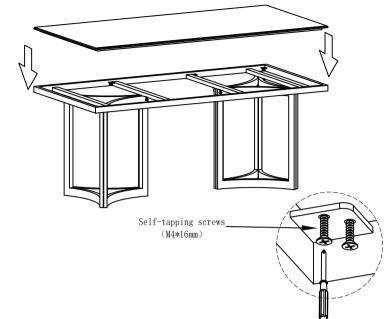

Installation instruction

POV/SON®

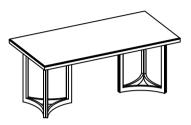

DT050AW-B Installation
The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product.
 And strictly follow the installation process
- Please take good care of this manual for your next installation

Parts list

Serial number	Shape	Name	Quantity
A		Hexagonal wire (M8*16mm)	8
В	3 Junior	Self-tapping screws (M4*16mm)	16
С	0	Gaskets	8

