



ASSEMBLY INSTRUCTION

ITEM DESCRIPTION : 2 DRAWER BEDSIDE

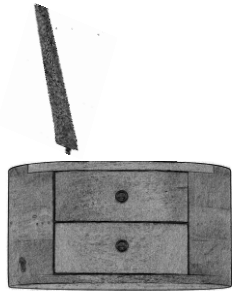


1

Reverse the bedside top & place the leg as shown & align the leg to match the apron.

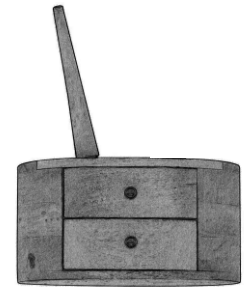


2

Twist the leg into the iron fitting slot by rotating it.

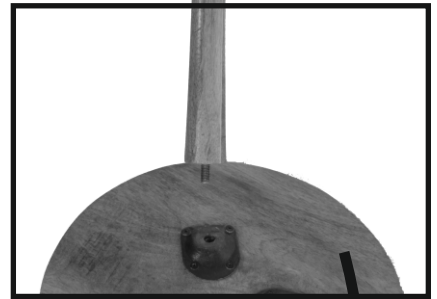

3

Fix the other leg in the similar way

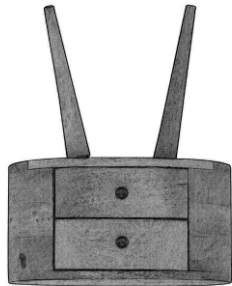

4

Reverse the bedside straight. Now your bedside is ready for use

