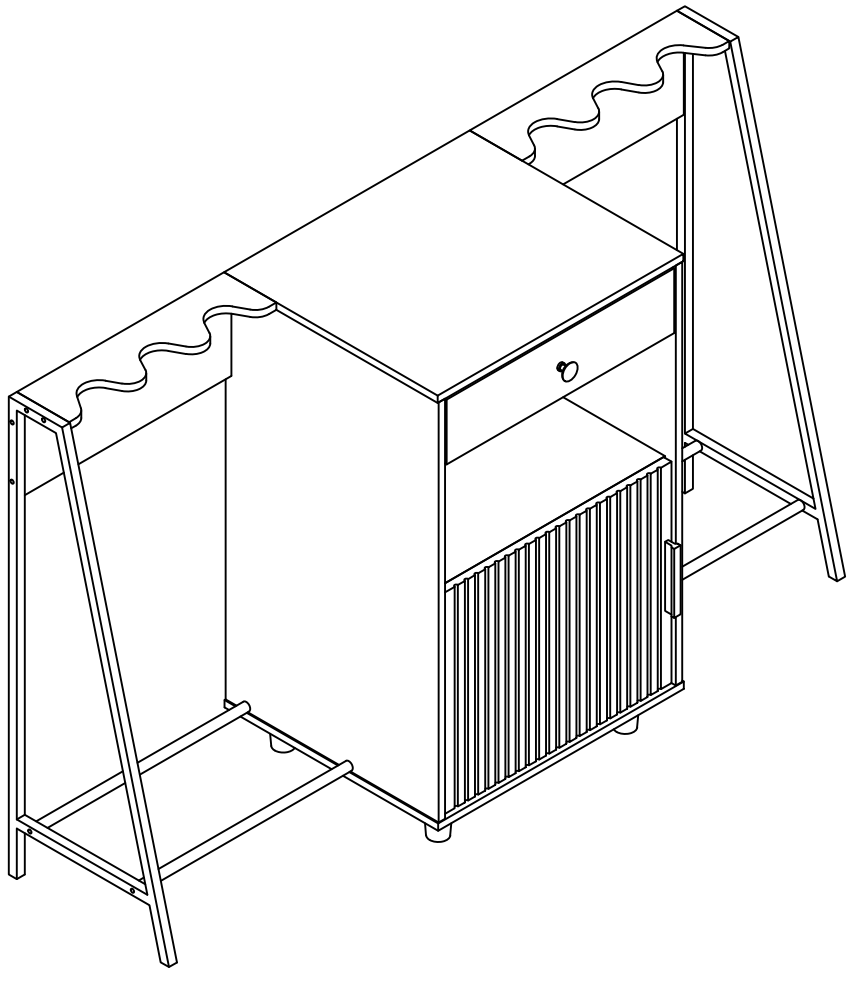
SKU:LM26073101-Walnut

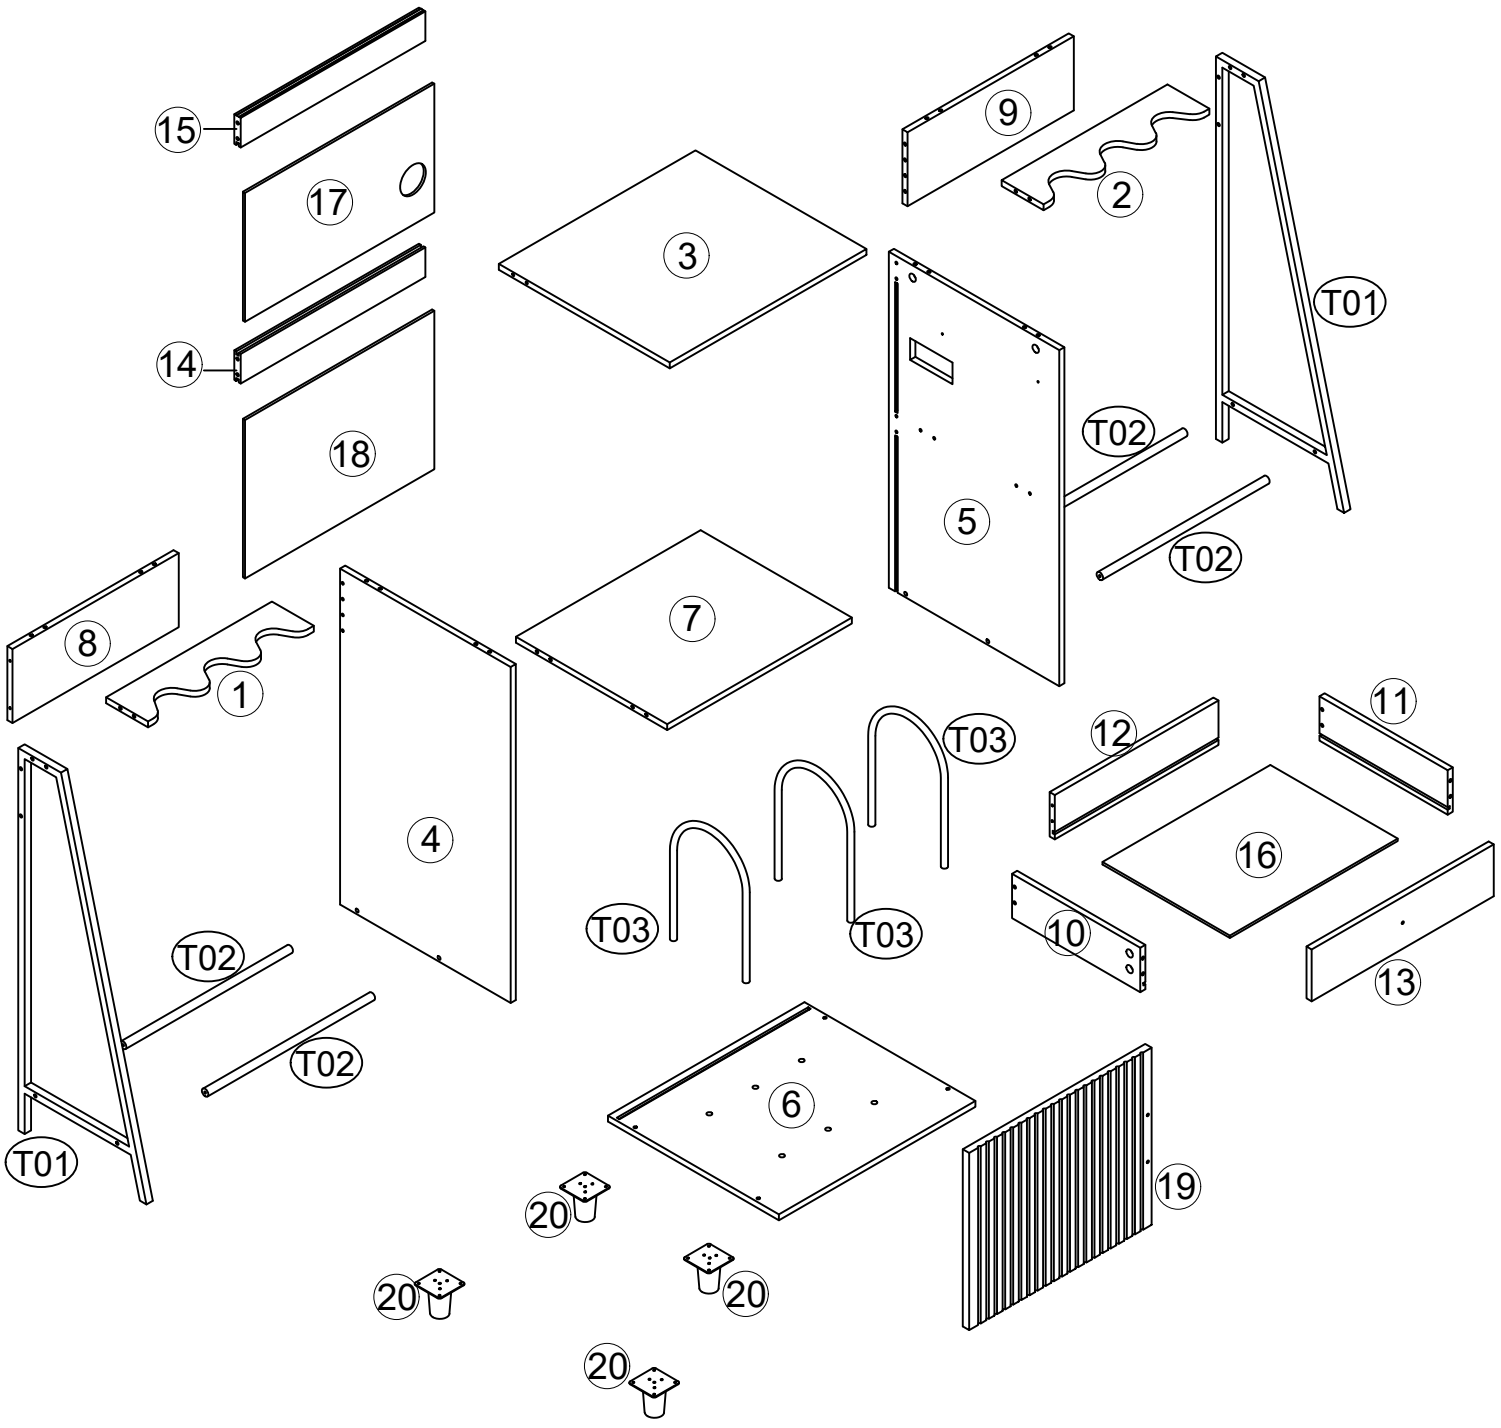
# Assembly Instruction



Team Assembly Recommended

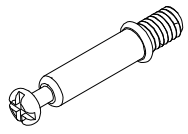
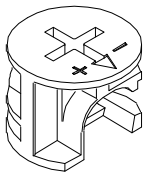

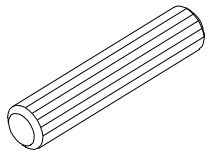
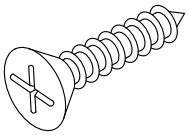
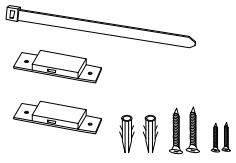

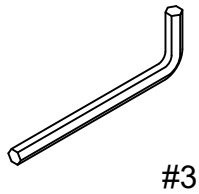
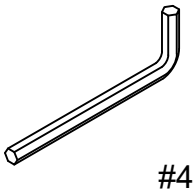
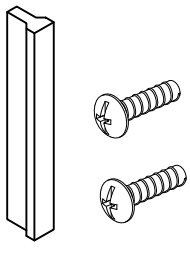



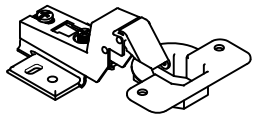
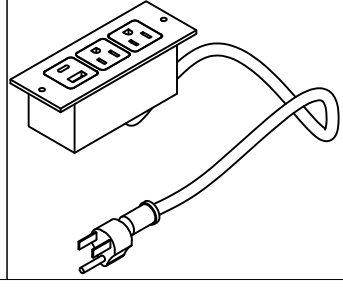
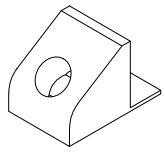
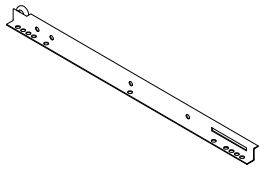
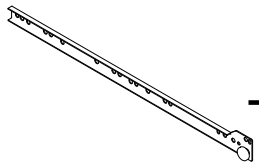
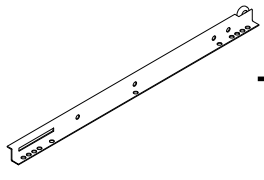
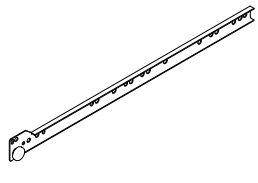
## COMPONENTS ID Nr.

| Part Nr. | Qty | Part Nr. | Qty | Part Nr. | Qty |
|---|---|---|---|---|---|
| 1 | 1pcs | 2 | 1pcs | 3 | 1pcs |
| 4 | 1pcs | 5 | 1pcs | 6 | 1pcs |
| 7 | 1pcs | 8 | 1pcs | 9 | 1pcs |
| 10 | 1pcs | 11 | 1pcs | 12 | 1pcs |
| 13 | 1pcs | 14 | 1pcs | 15 | 1pcs |
| 16 | 1pcs | 17 | 1pcs | 18 | 1pcs |
| 19 | 1pcs | 20 | 4pcs | T01 | 2pcs |
| T02 | 4pcs | T03 | 3pcs | | |

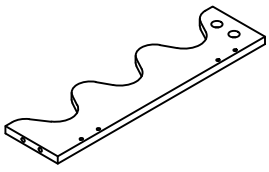
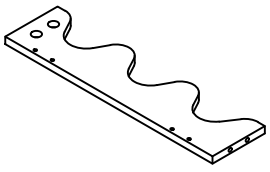
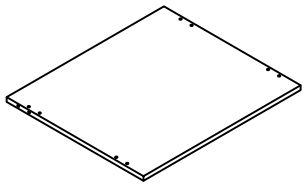


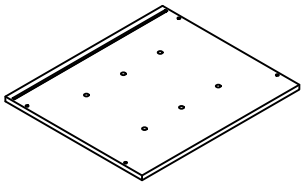
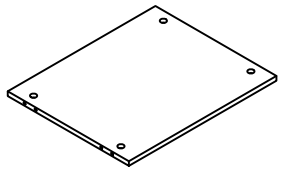
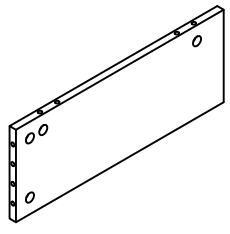
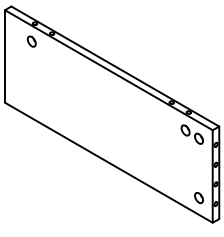
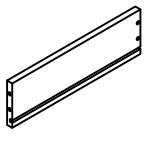
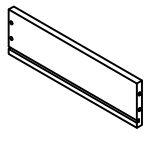
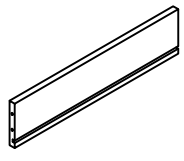
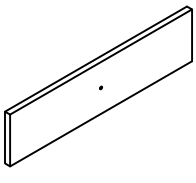
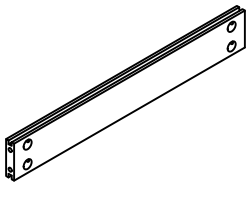
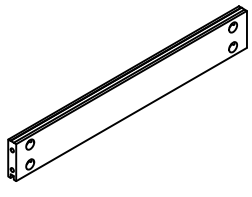
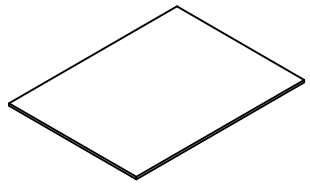
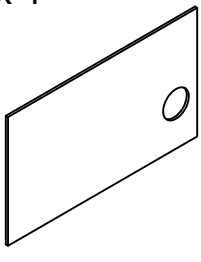
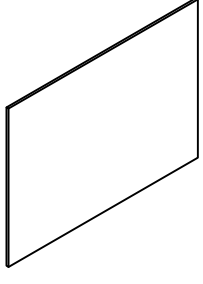
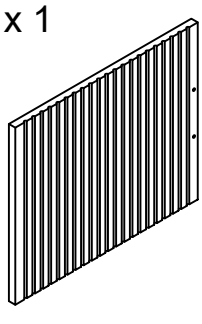
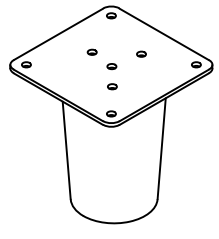

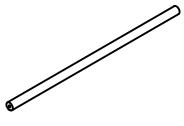




Note:Don't tighten all screws during instation.

## HARDWARE LIST

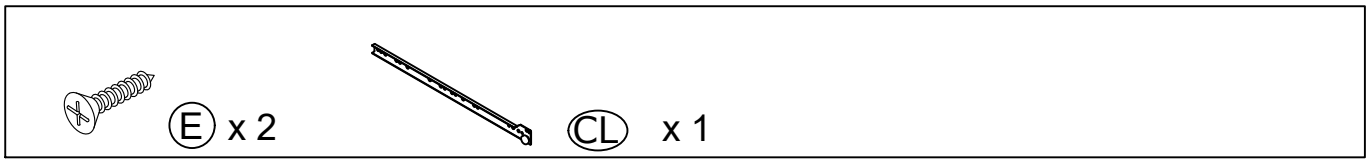
| | | | |
|---|---|---|---|
| A x 32  | B x 32  Ø15X9.5mm | C x 16  D5X40mm | D x 16  Ø6X30mm |
| E x 38  D3.5X12mm | F x 2  | G x 1  | H x 1  #3 |
| J x 1  #4 | K x 1  | L x 1  | M x 8  D3X16mm |
| N x 10  M6X30mm | P x 2  | Q x 1  | R x 8  |
| DR x 1  | CR x 1  | DL x 1  | CL x 1  |
| 12″ | | | |

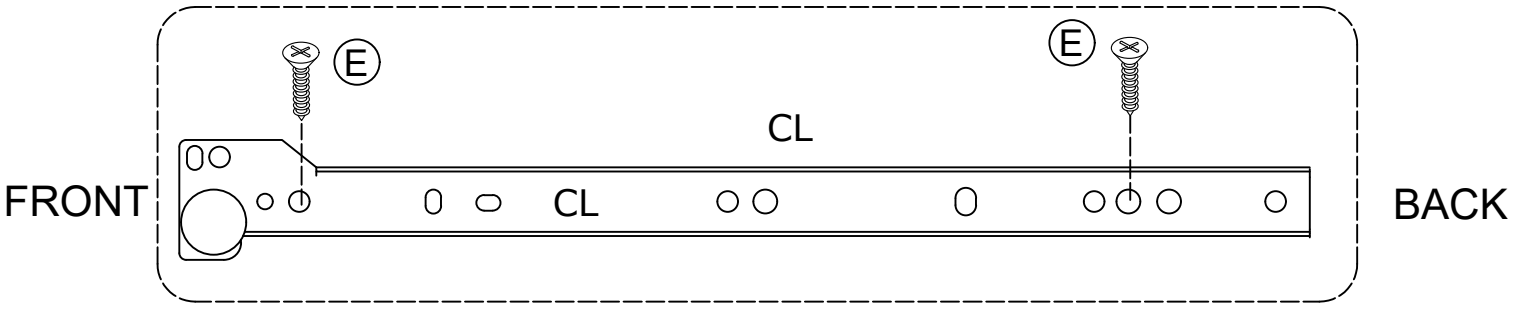
## HARDWARE LIST

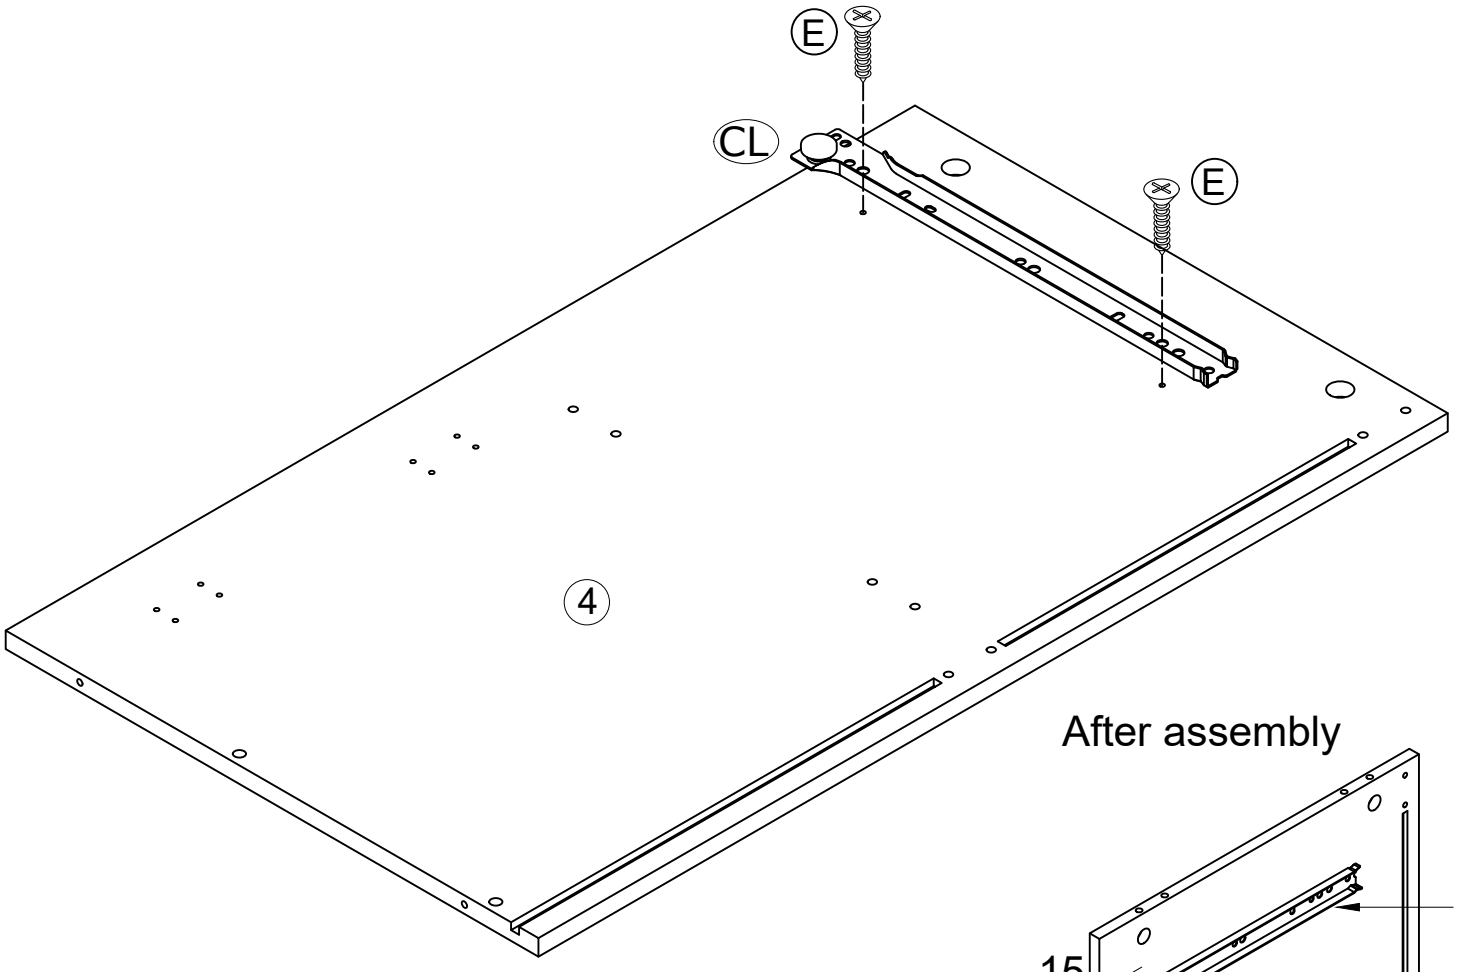
| | | | |
|---|---|---|---|
| 1 x 1  | 2 x 1  | 3 x 1  | 4 x 1  |
| 5 x 1  | 6 x 1  | 7 x 1  | 8 x 1  |
| 9 x 1  | 10 x 1  | 11 x 1  | 12 x 1  |
| 13 x 1  | 14 x 1  | 15 x 1  | 16 x 1  |
| 17 x 1  | 18 x 1  | 19 x 1  | 20 x 4  |
| T01 x 2  | T02 x 4  | T03 x 3  | |

## PRODUCT ASSEMBLY

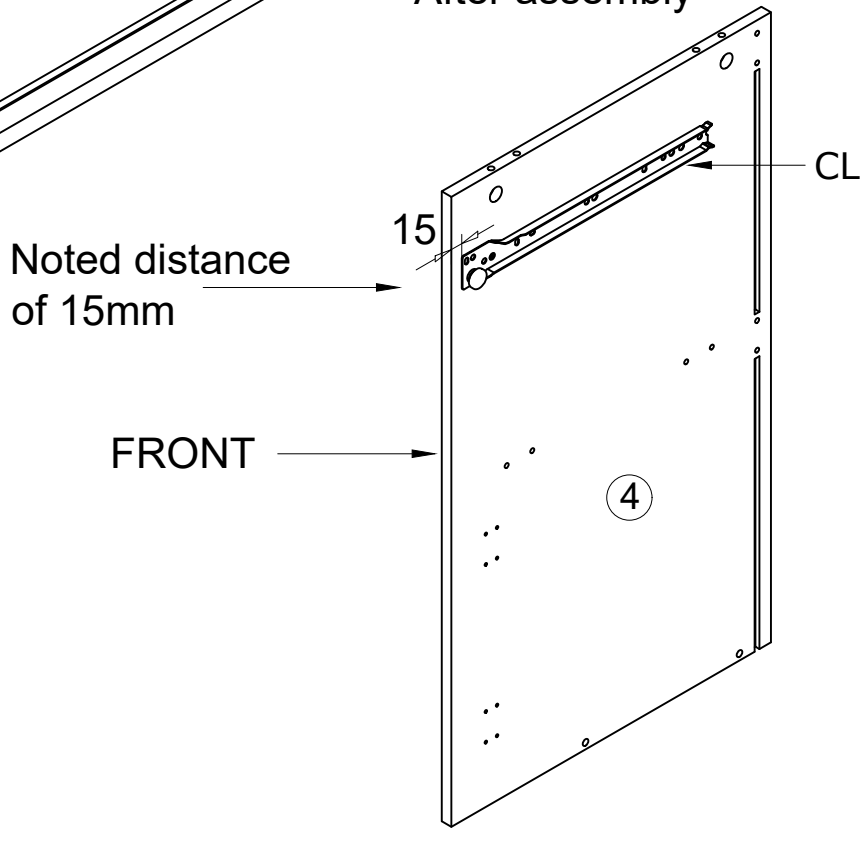
1



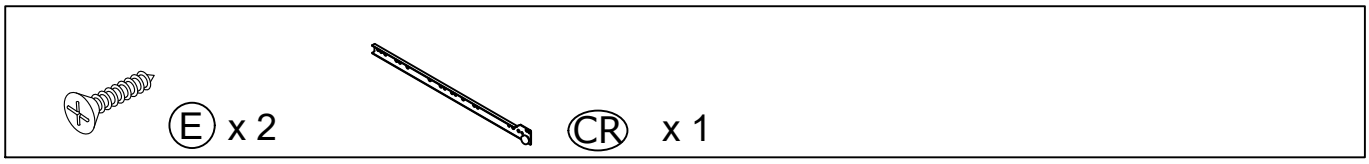



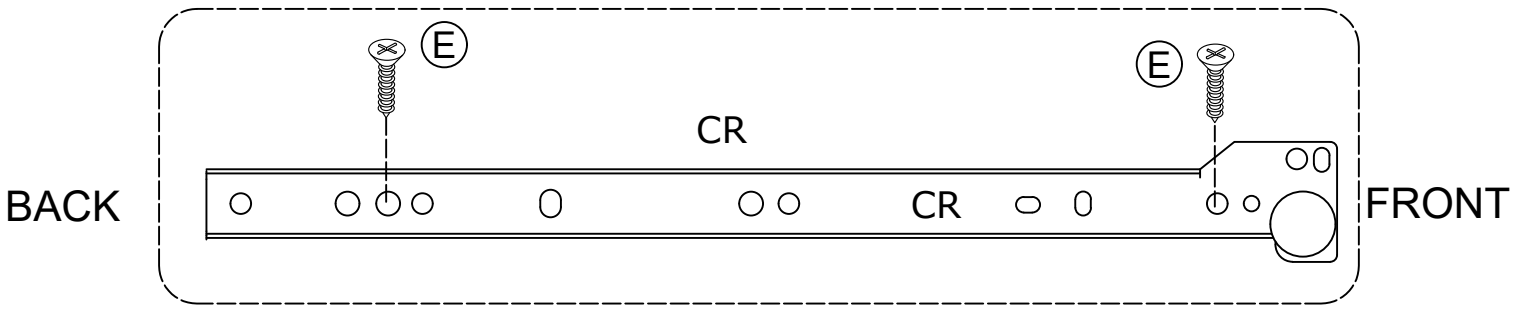

After assembly

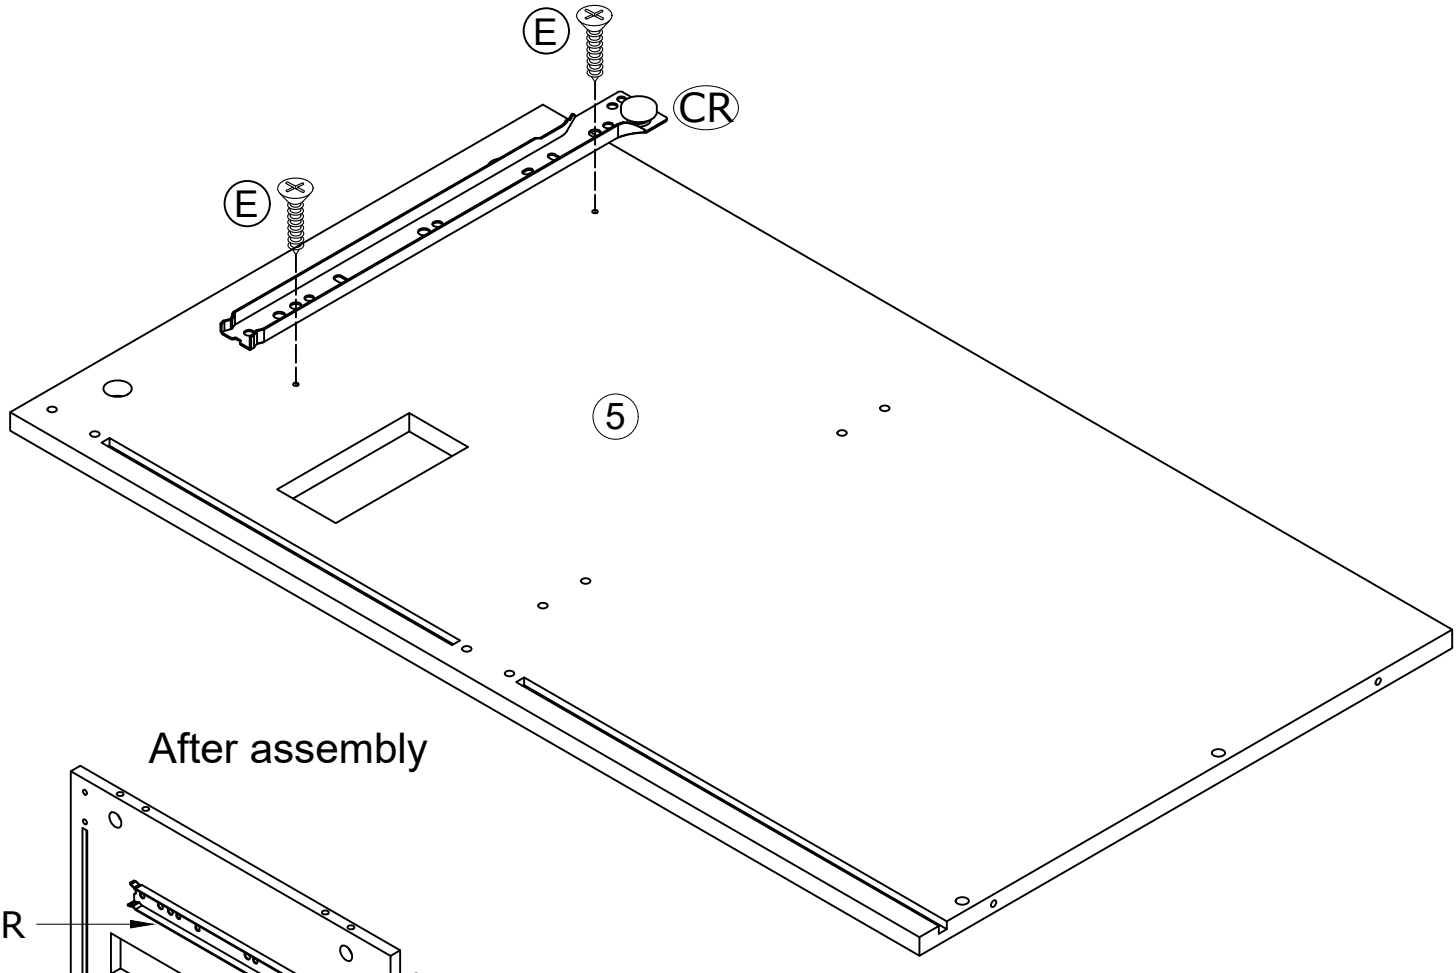


## PRODUCT ASSEMBLY

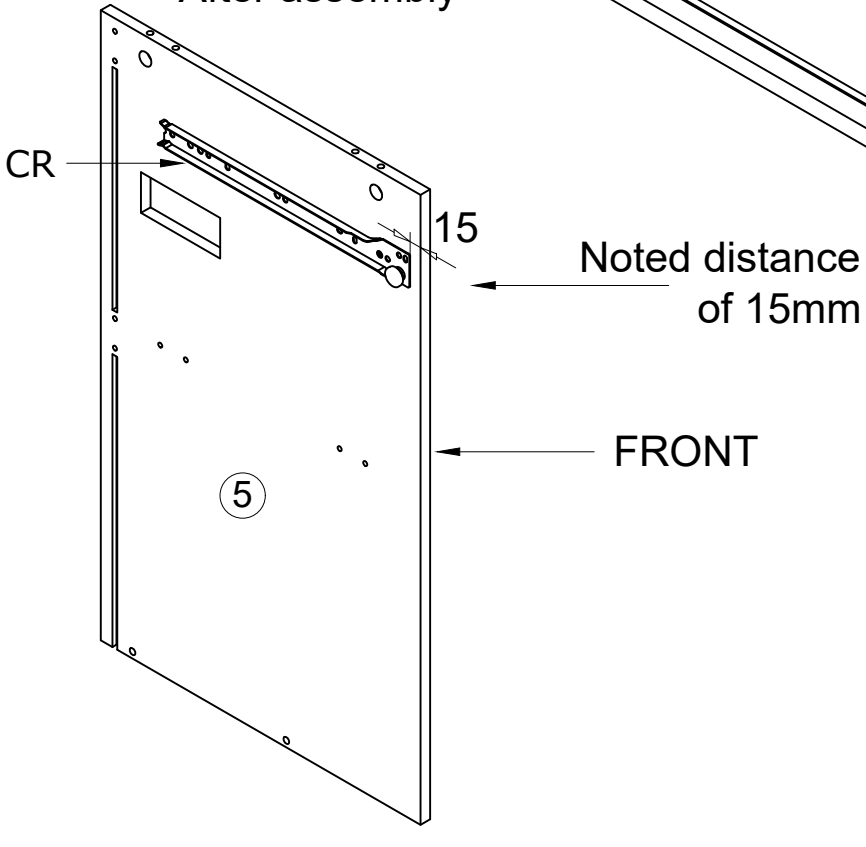
# 2








After assembly

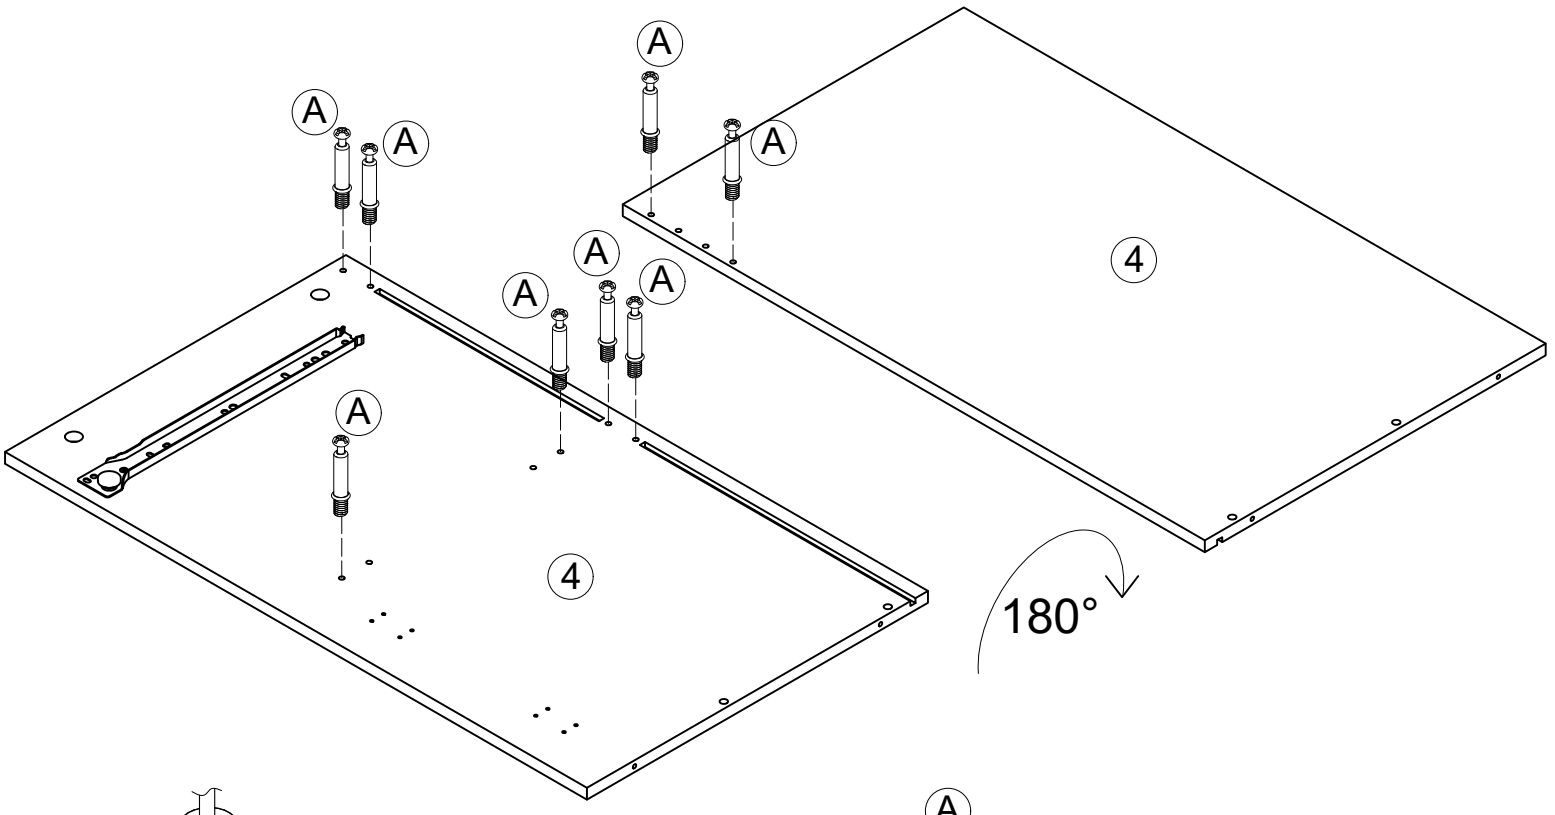


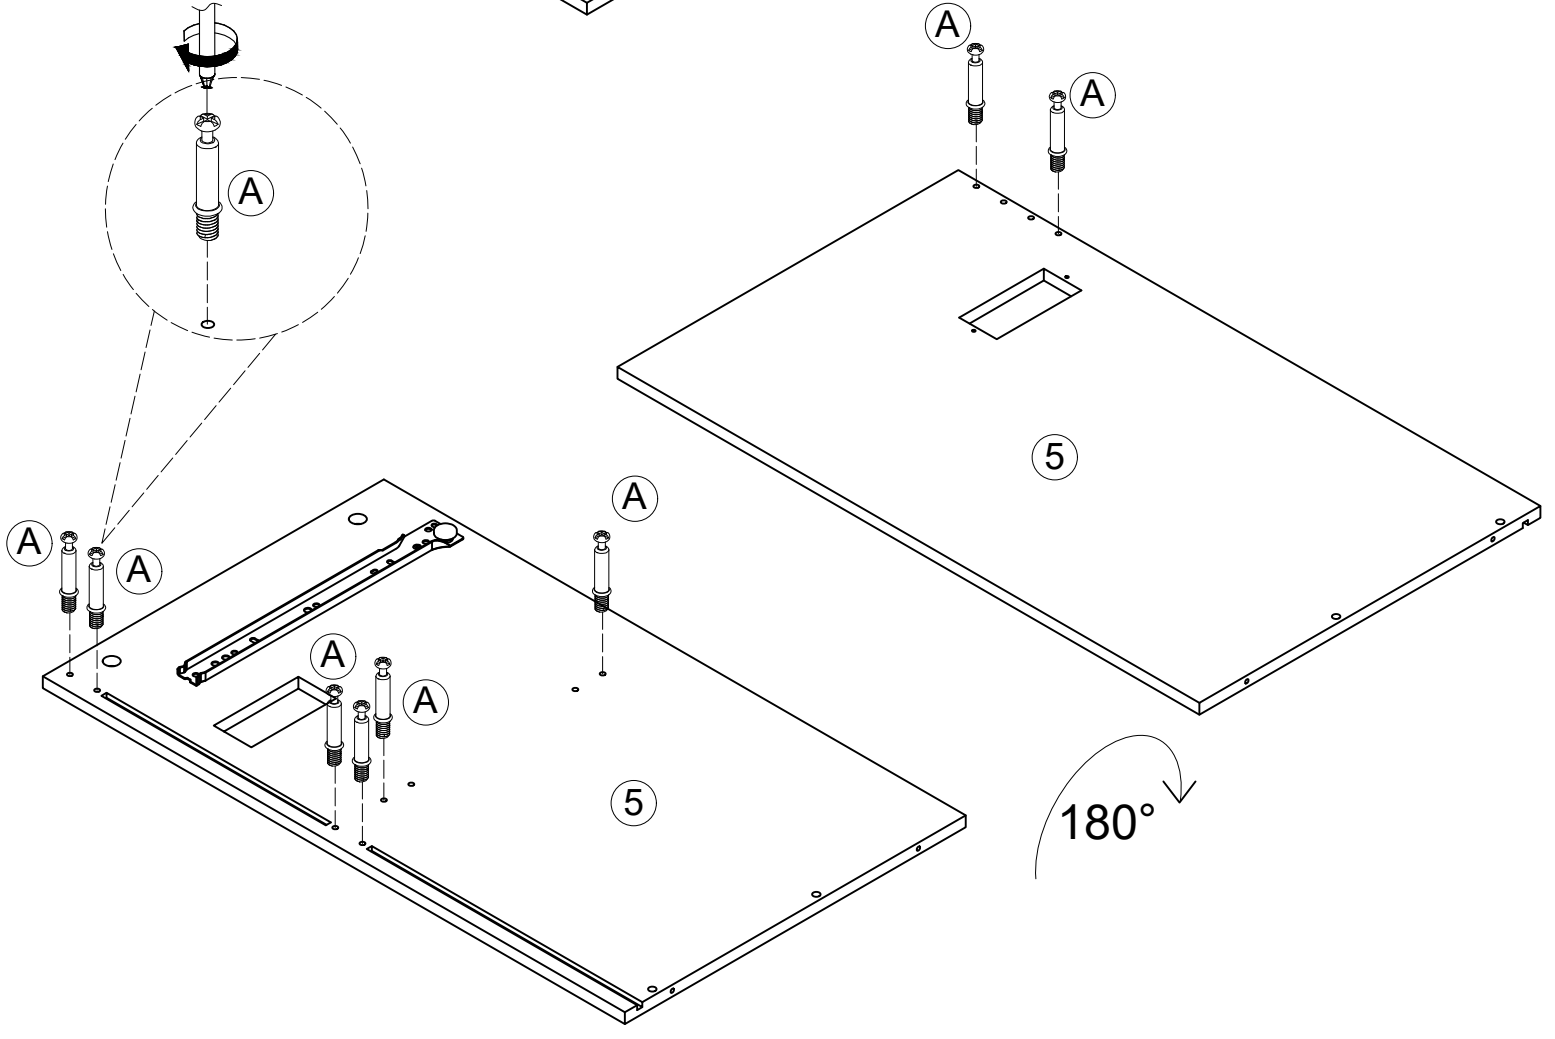
## PRODUCT ASSEMBLY

# 3

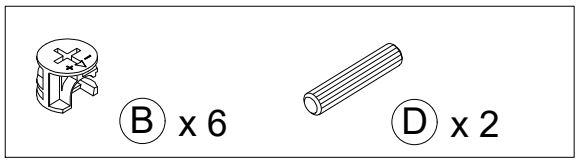


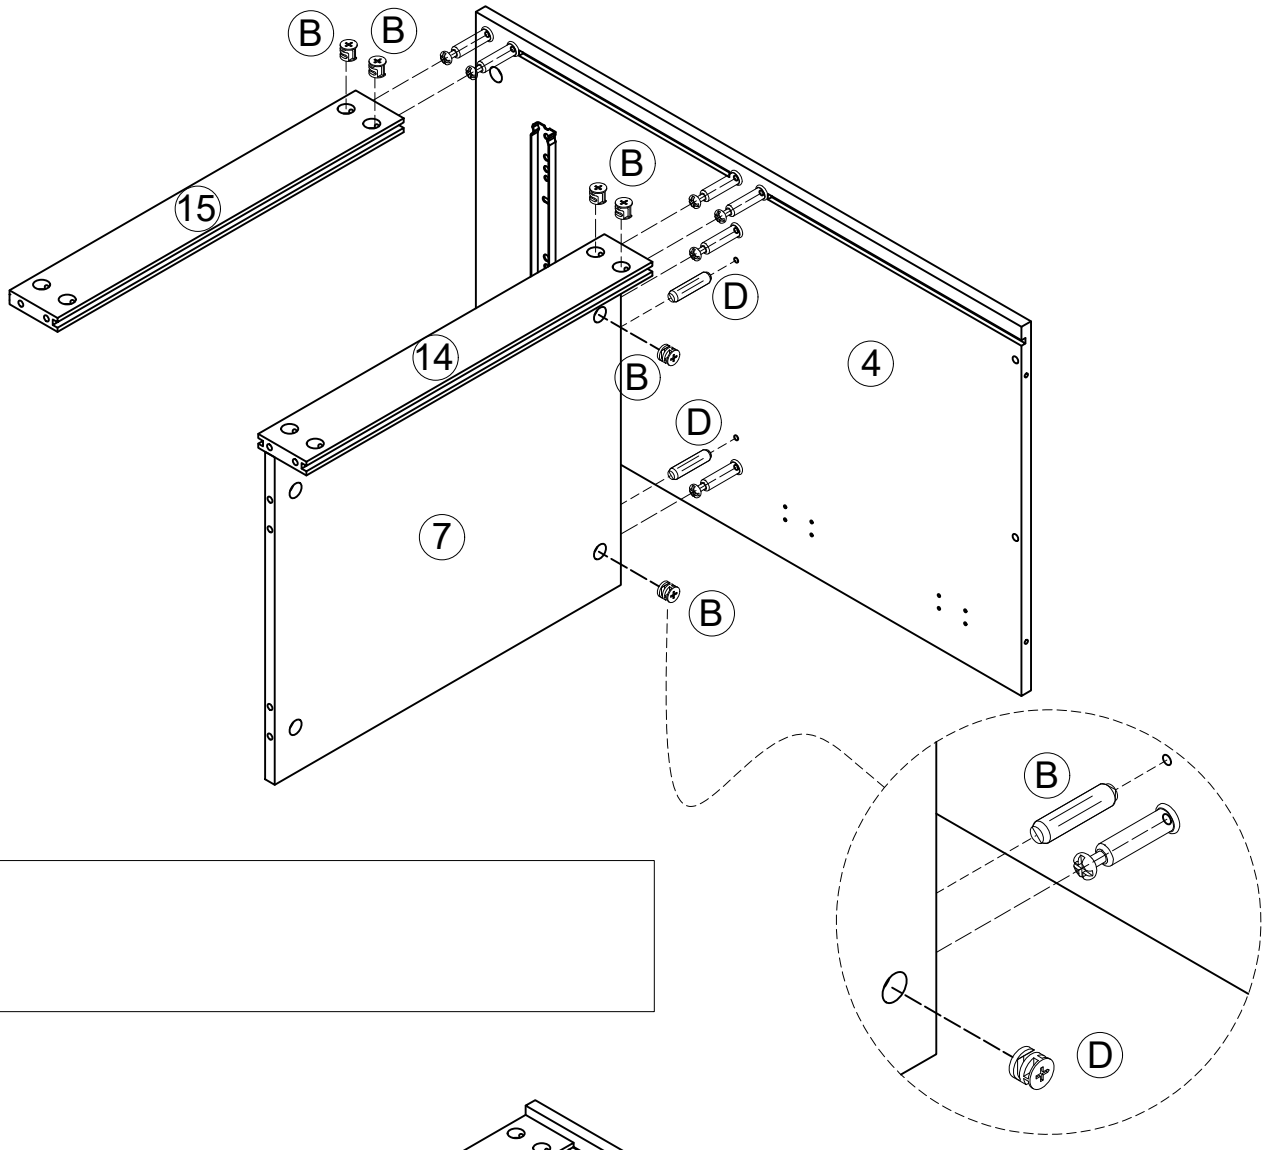
A x 16



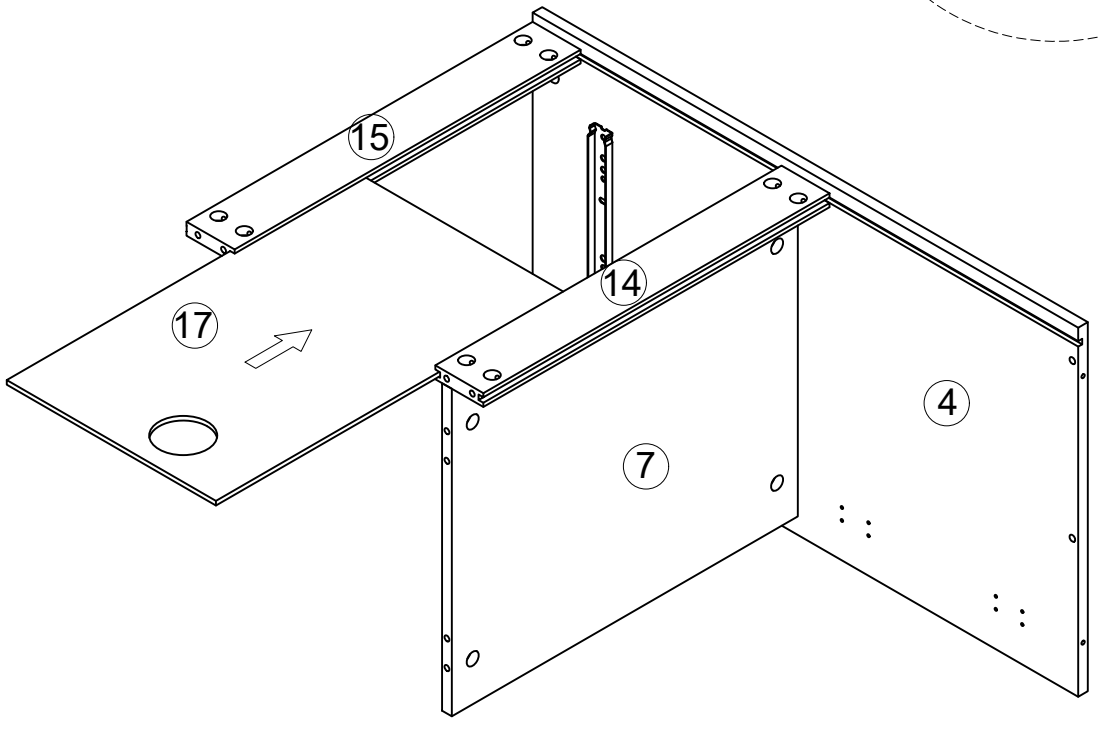



# 4

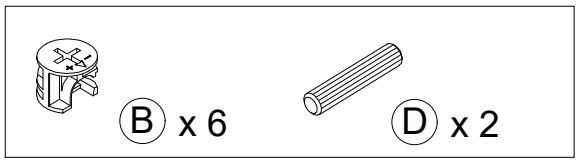


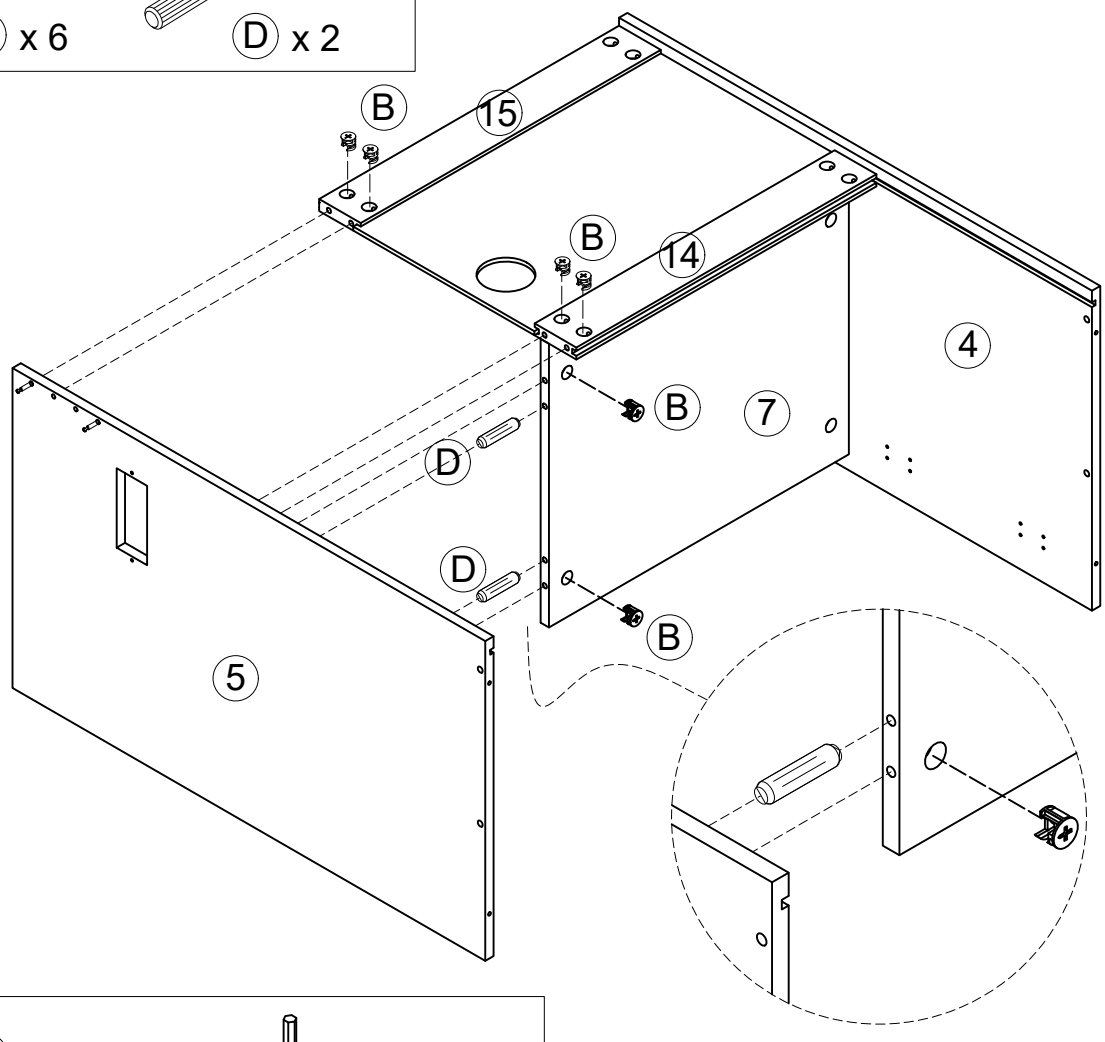




# 5

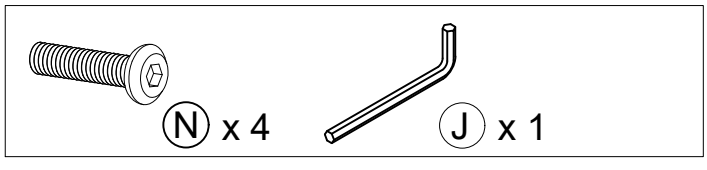


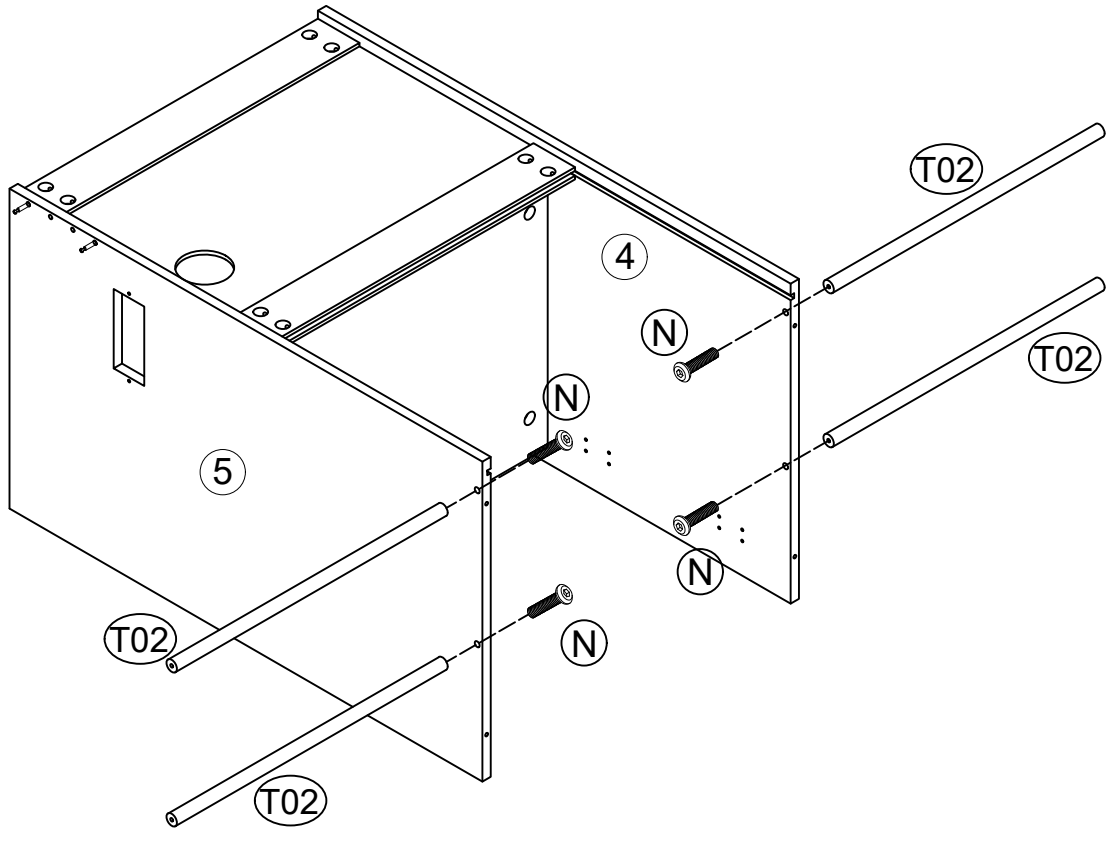
# 6



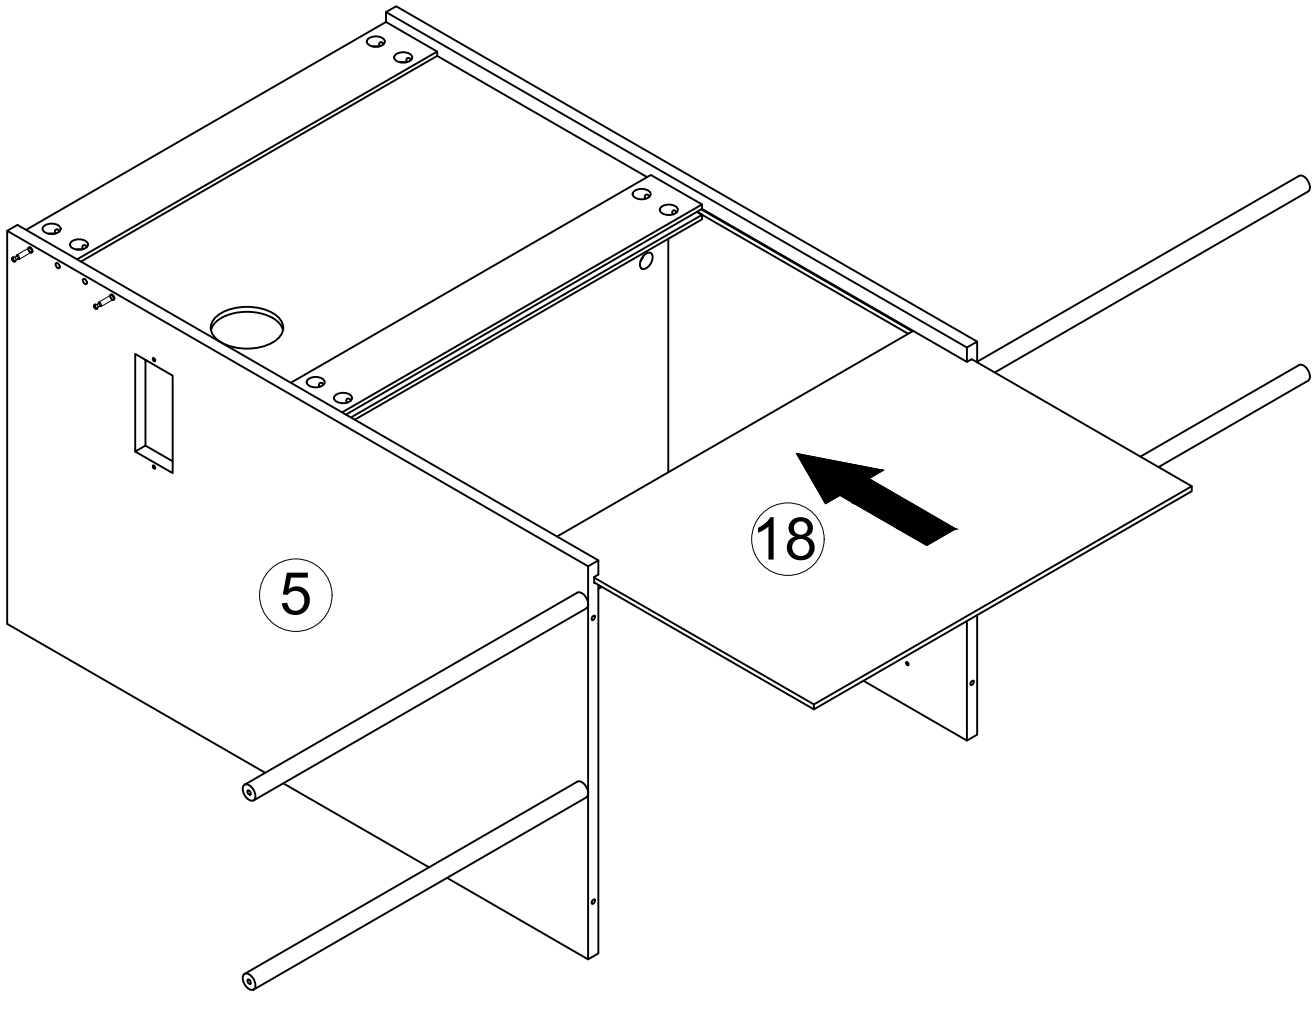




# 7



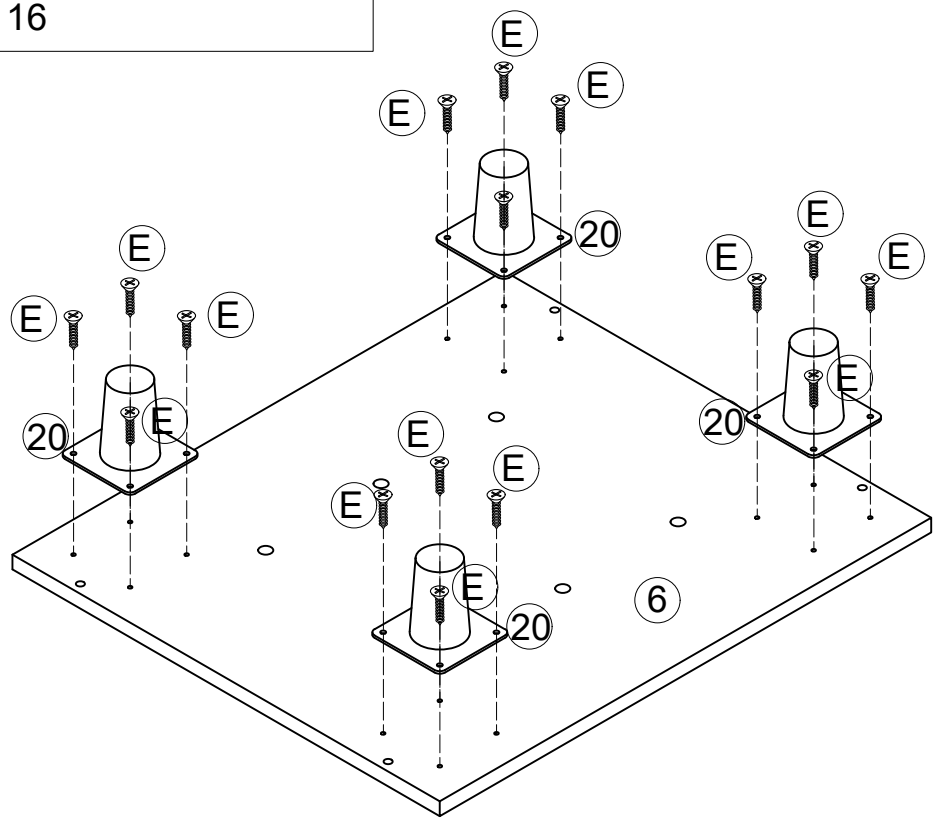



8



# 9

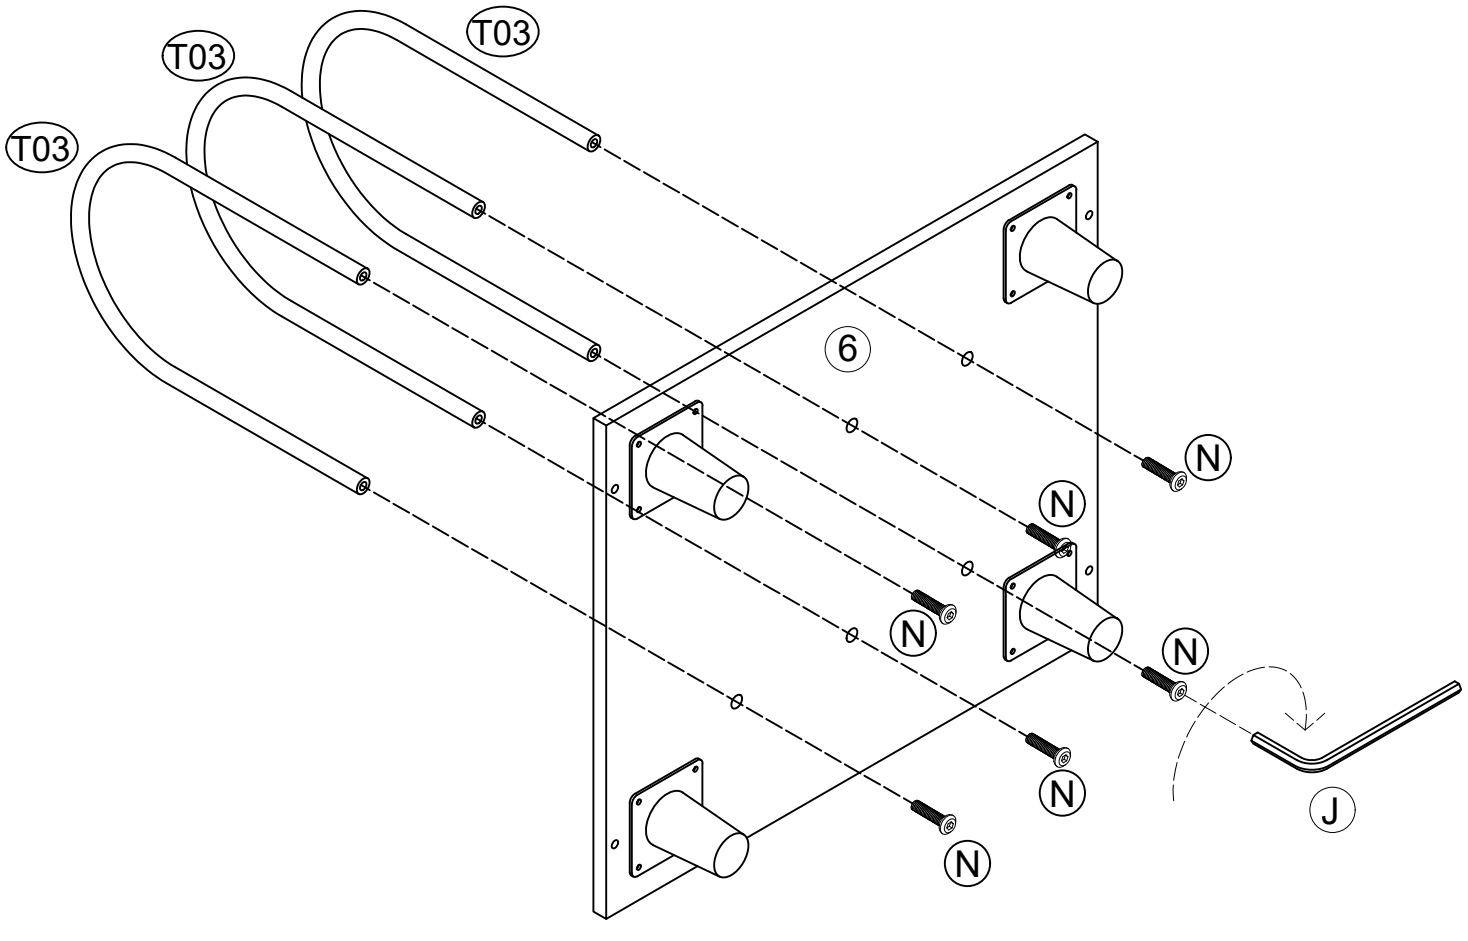
E x 16



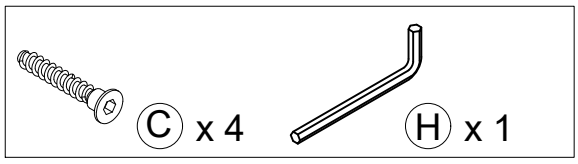

# 10

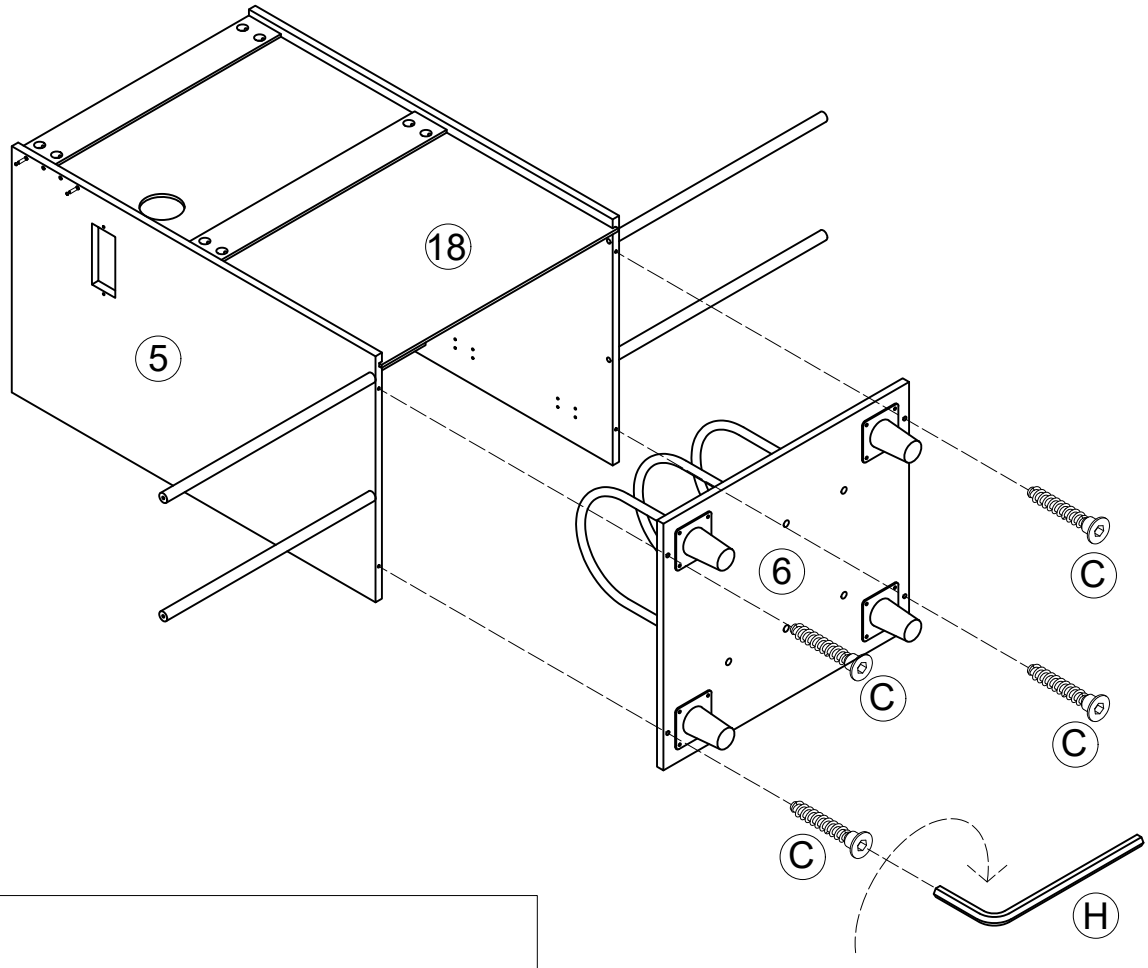
N x 6

J x 1



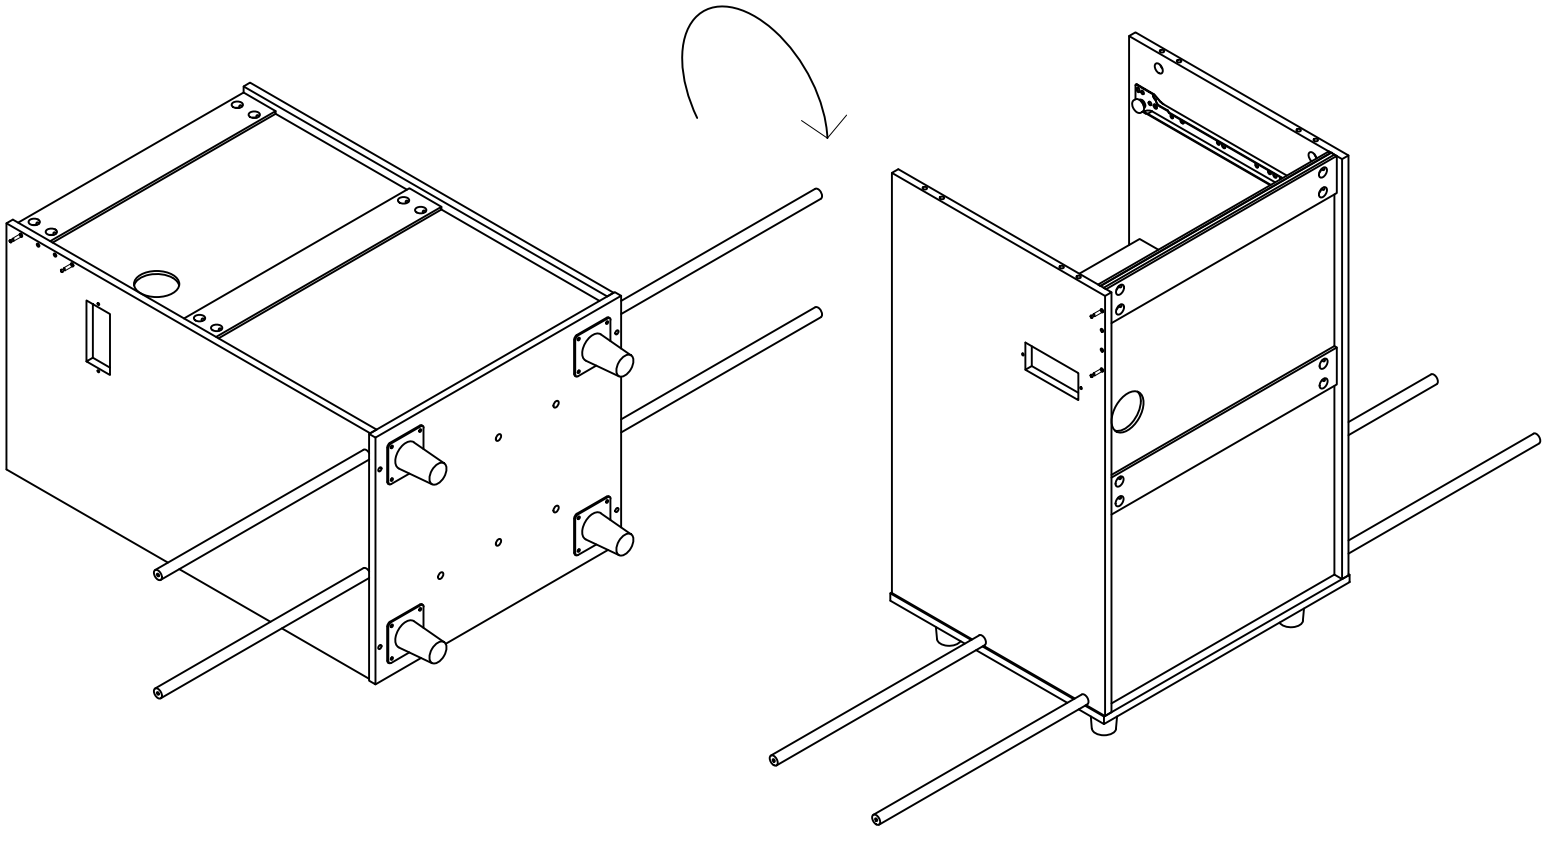
# 11



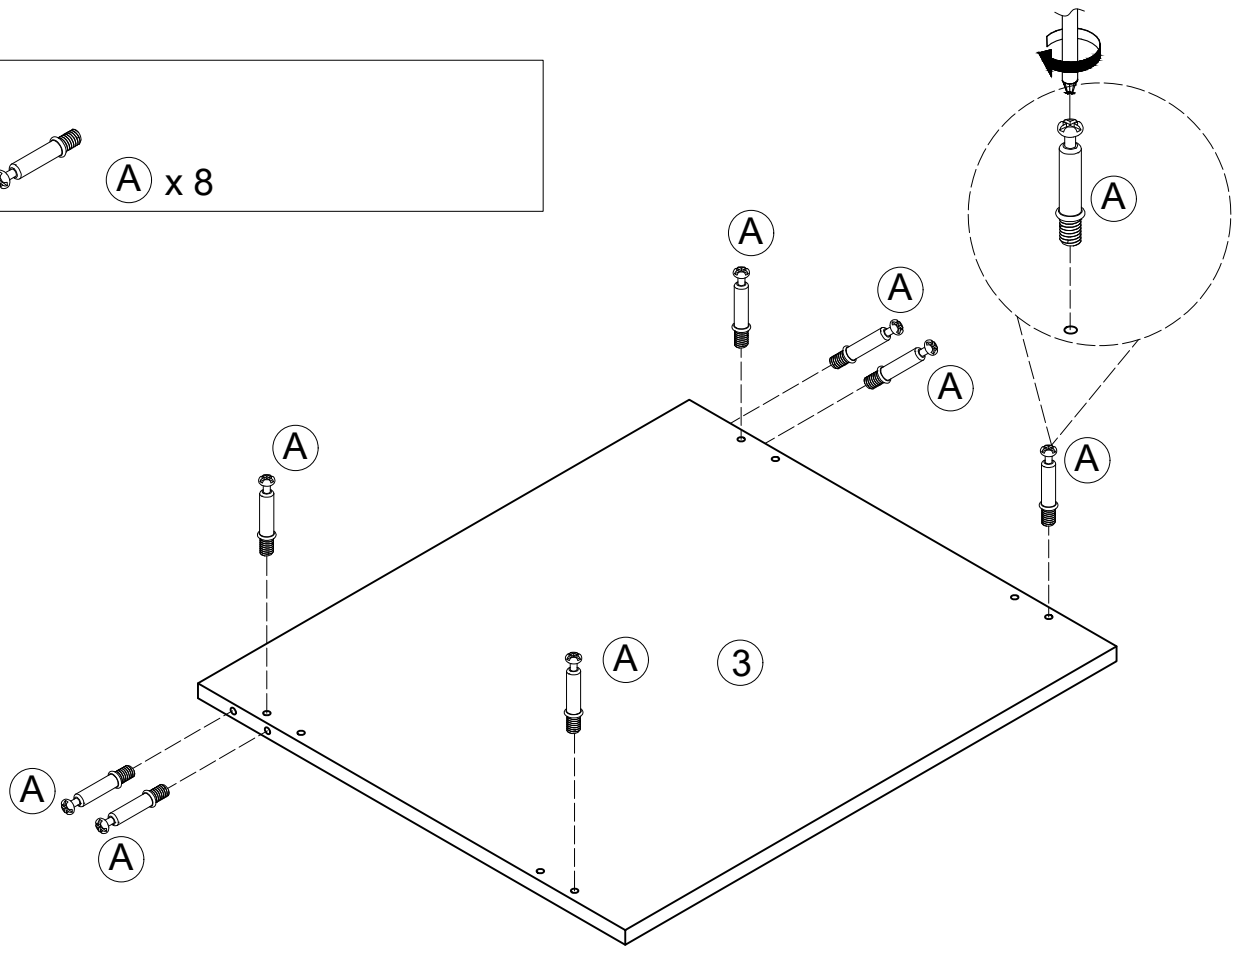

# 12

Pls careful to stand up the product



# 13

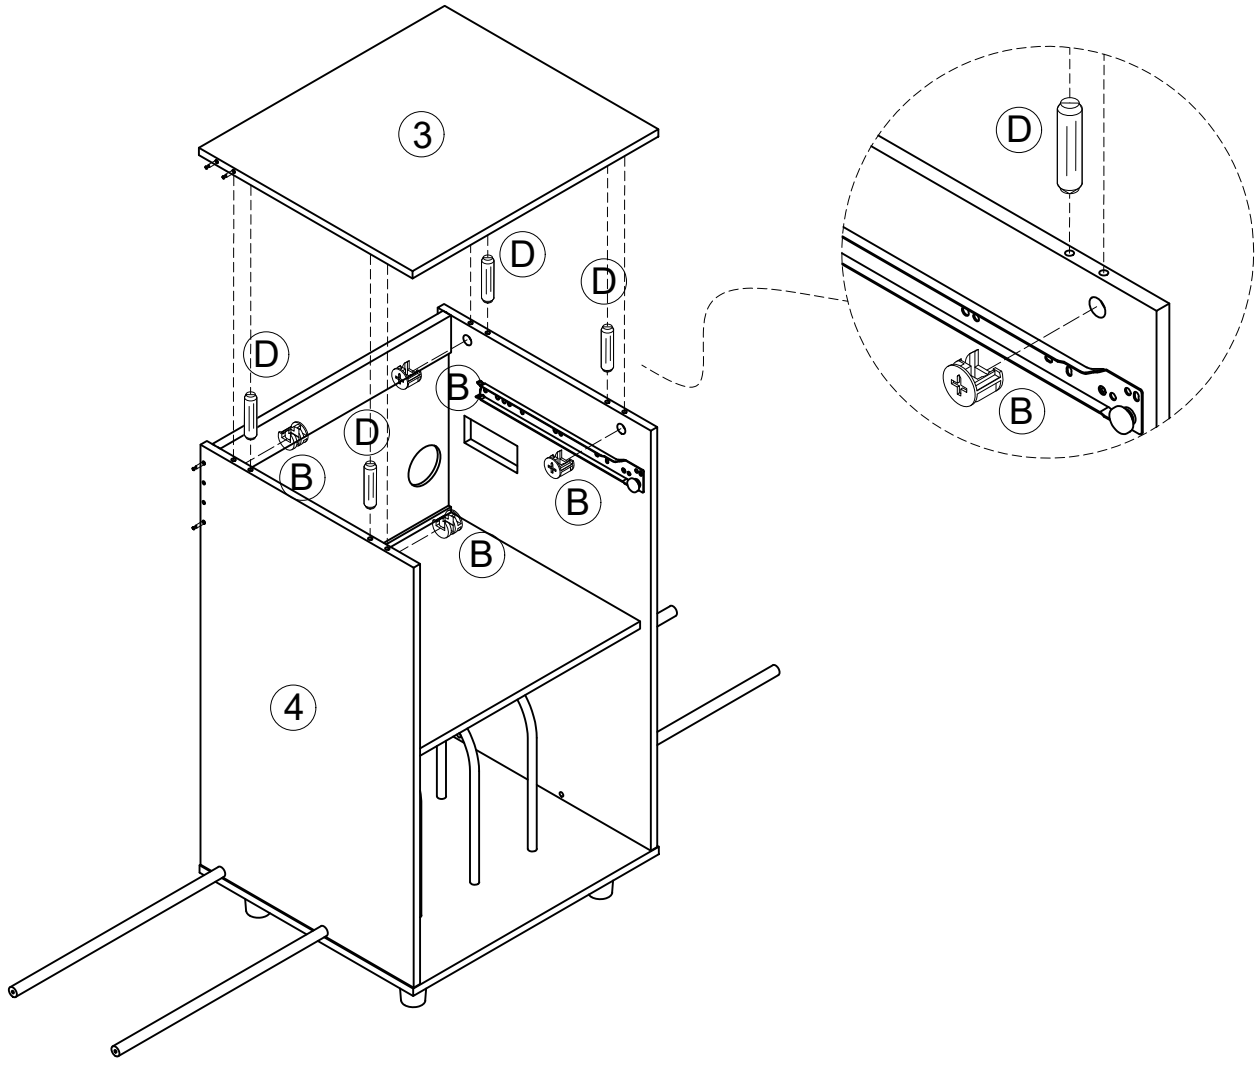
A x 8




# 14

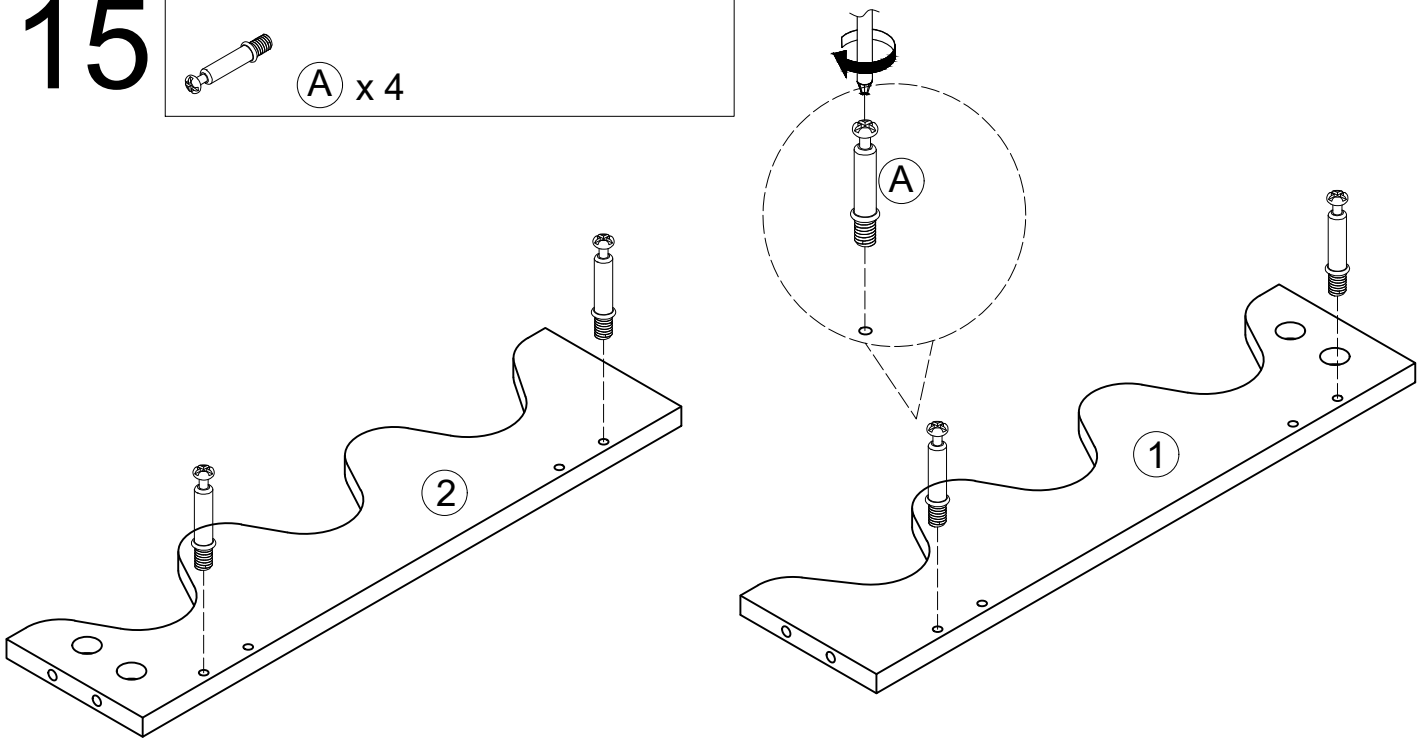
B x 4

D x 4



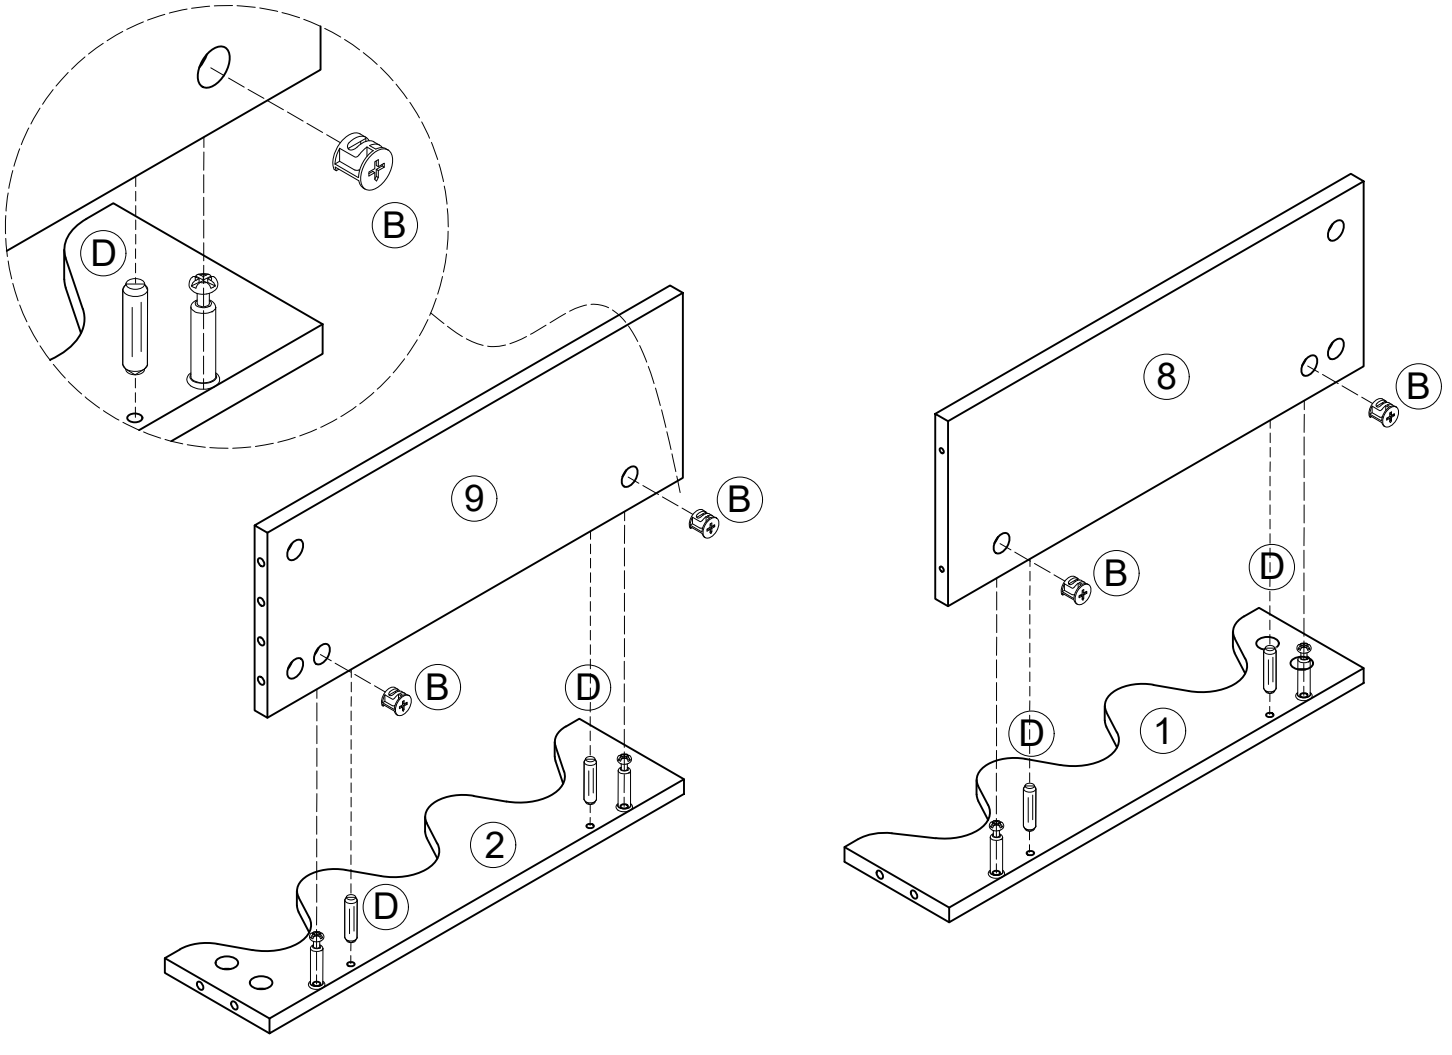
# 15

A x 4

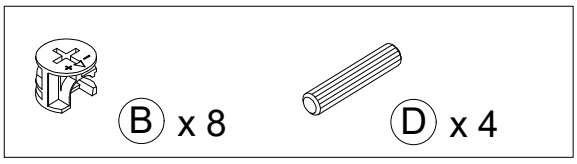



# 16

B x 4 D x 4

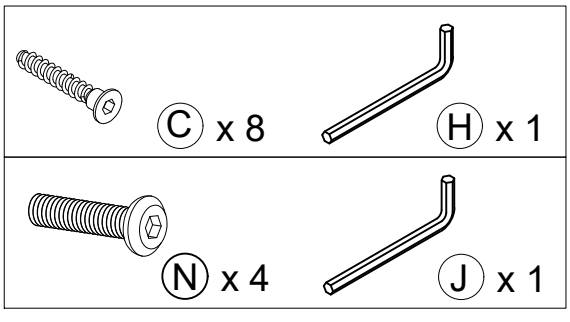


# 17


B x 8
D x 4

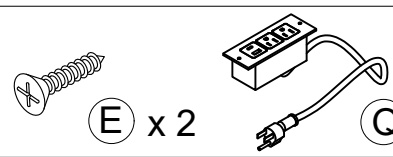

2
9
B
B
B
D
B
B
B
D
D
B
B
B
D
3
1
B
8
4

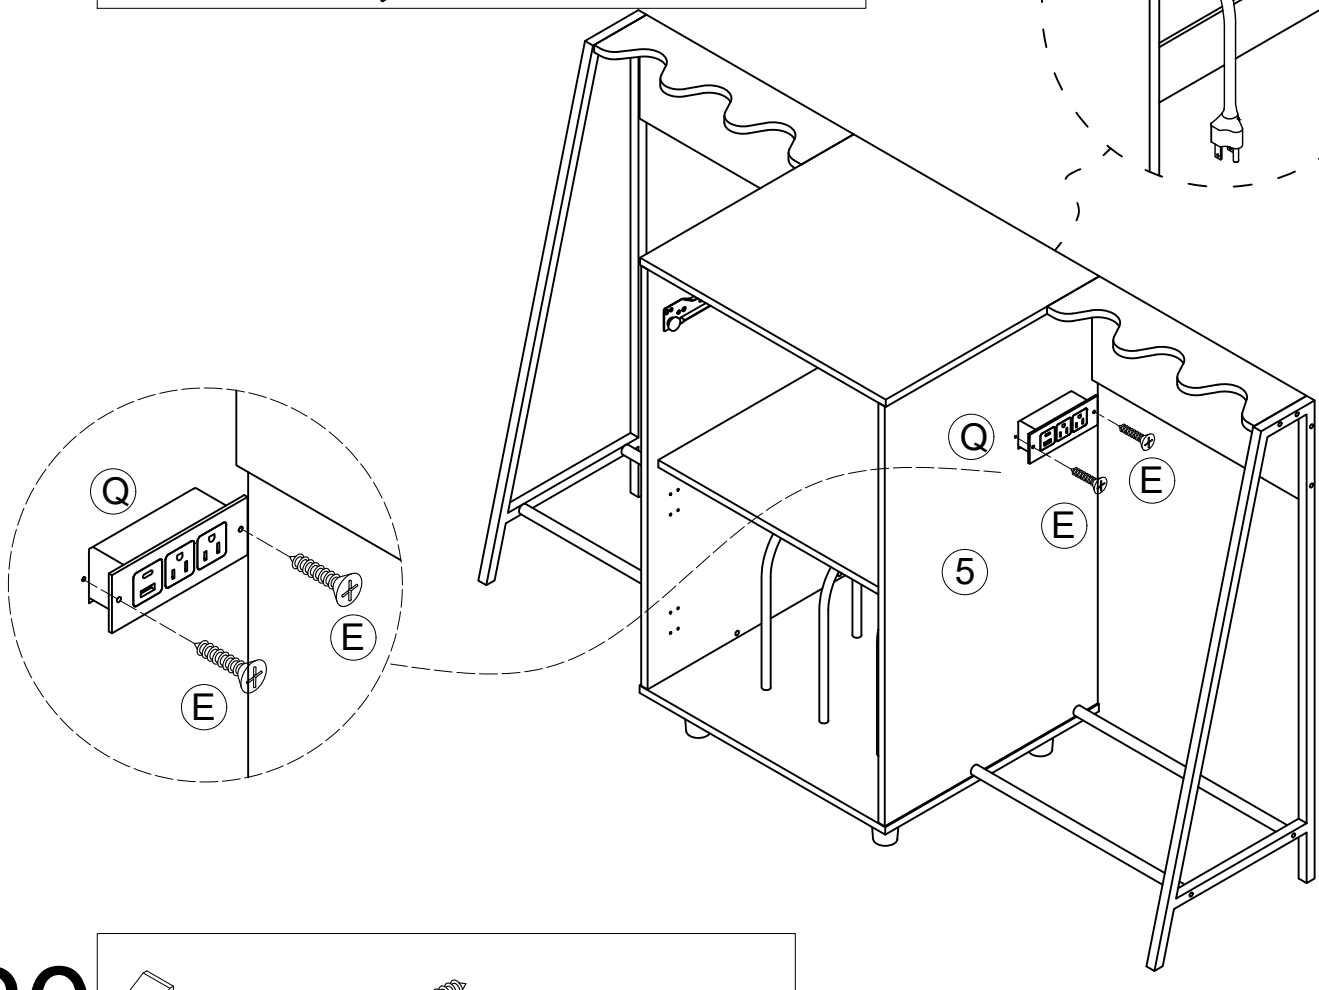
# 18


C x 8
H x 1
N x 4
J x 1


C
C
C
C
2
9
T01
N
N
1
8
C
C
C
C
4
H
T01
N
J
N

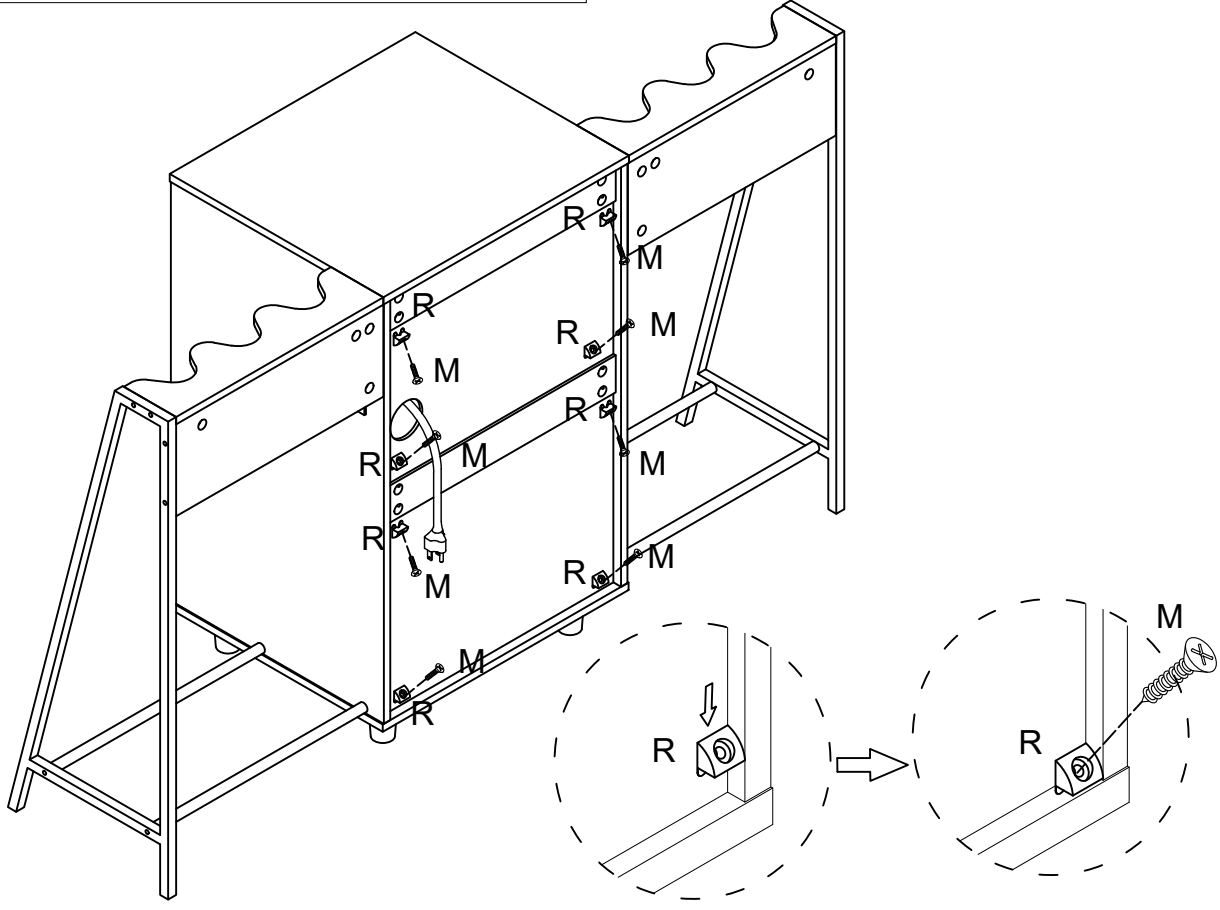
# 19



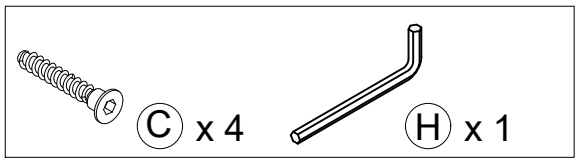



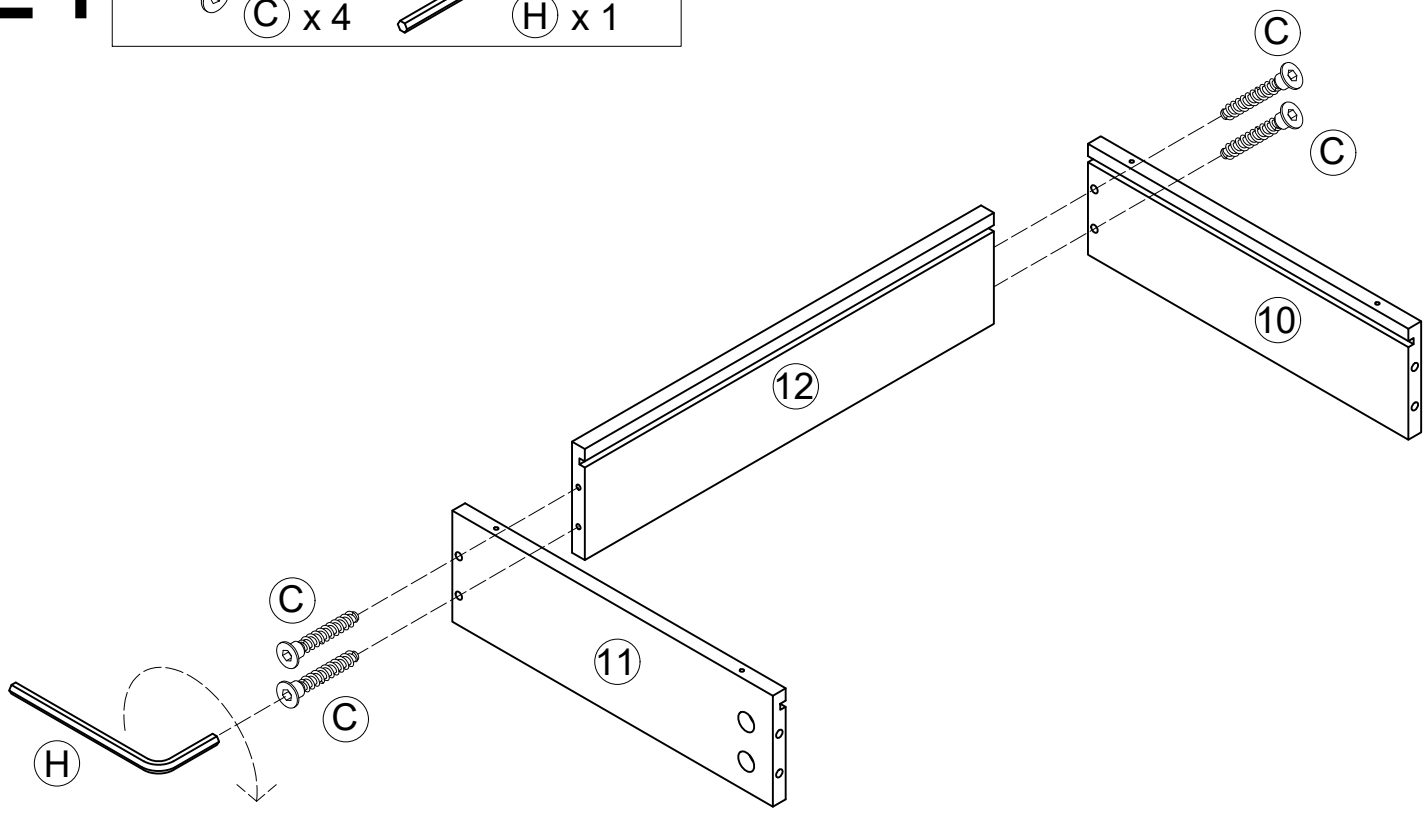

# 20



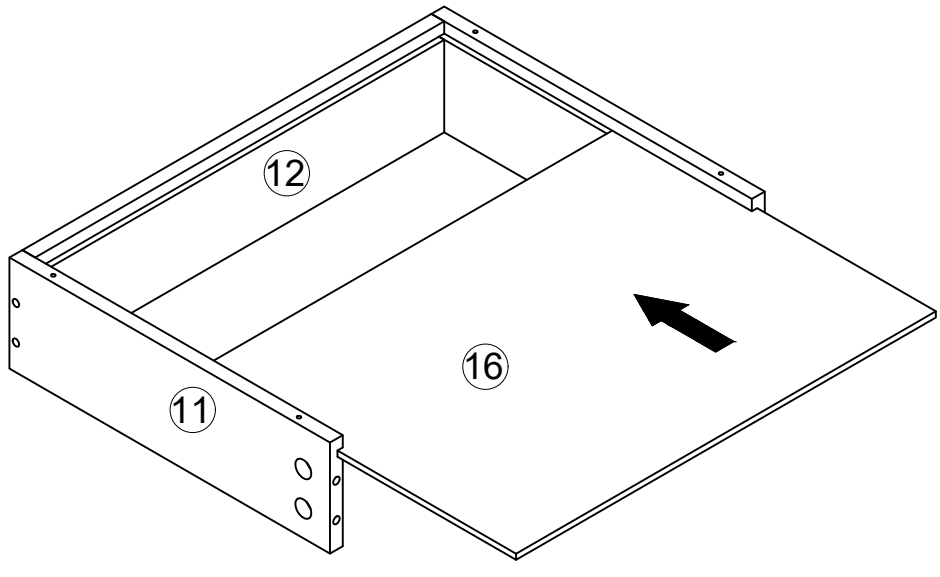



# 21




# 22



# 23

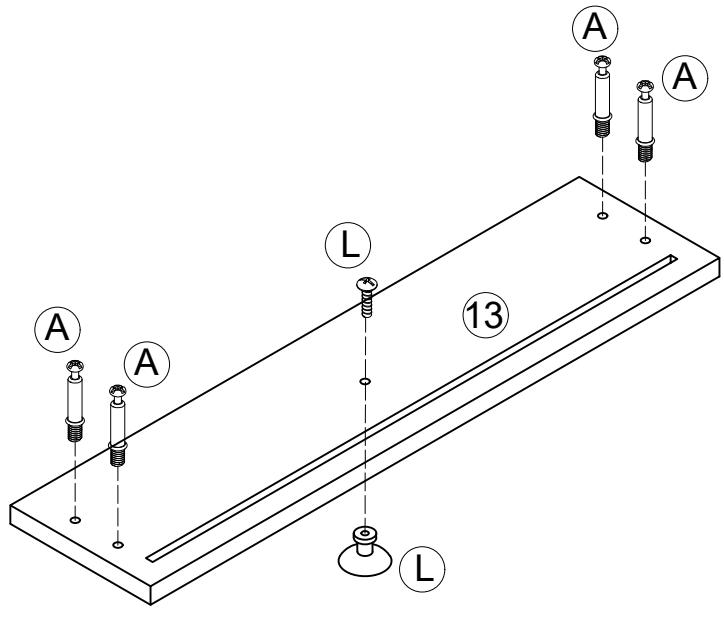


A x 4





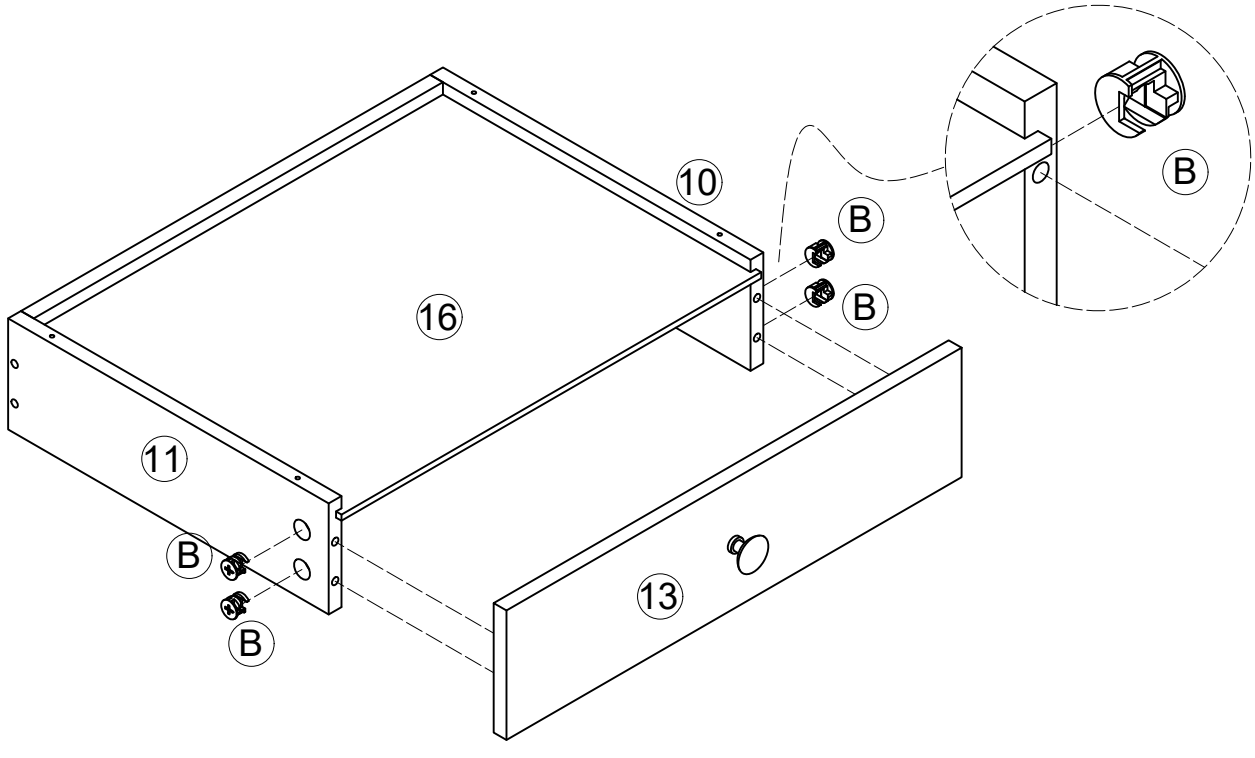
L x 1




# 24



B x 4

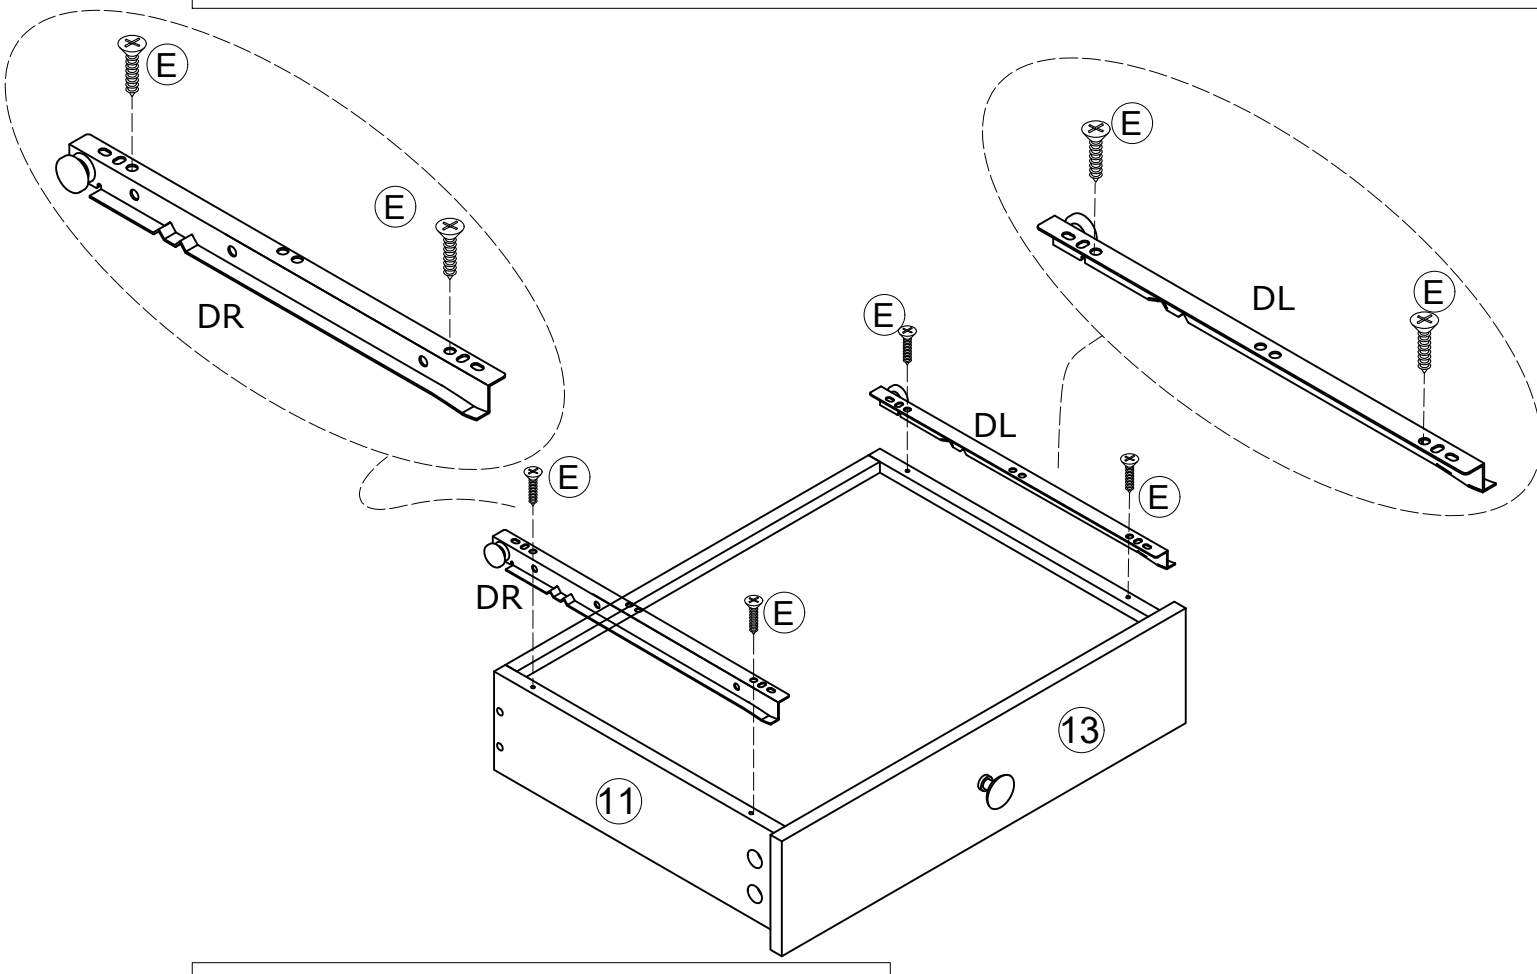


# 25

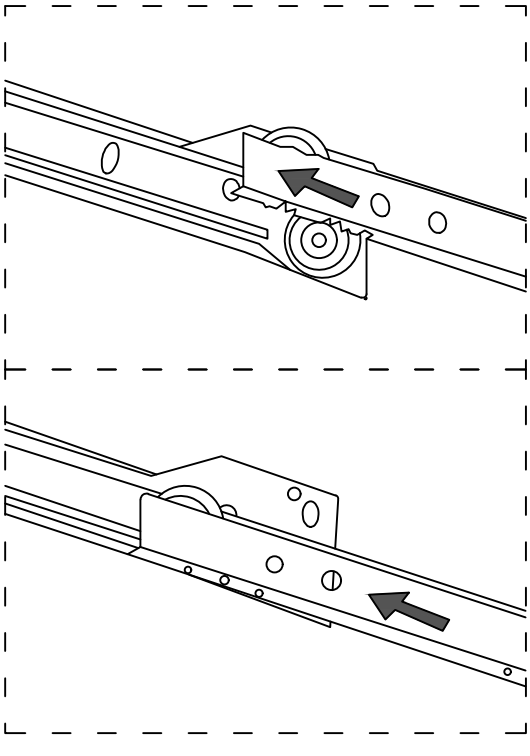
E x 4

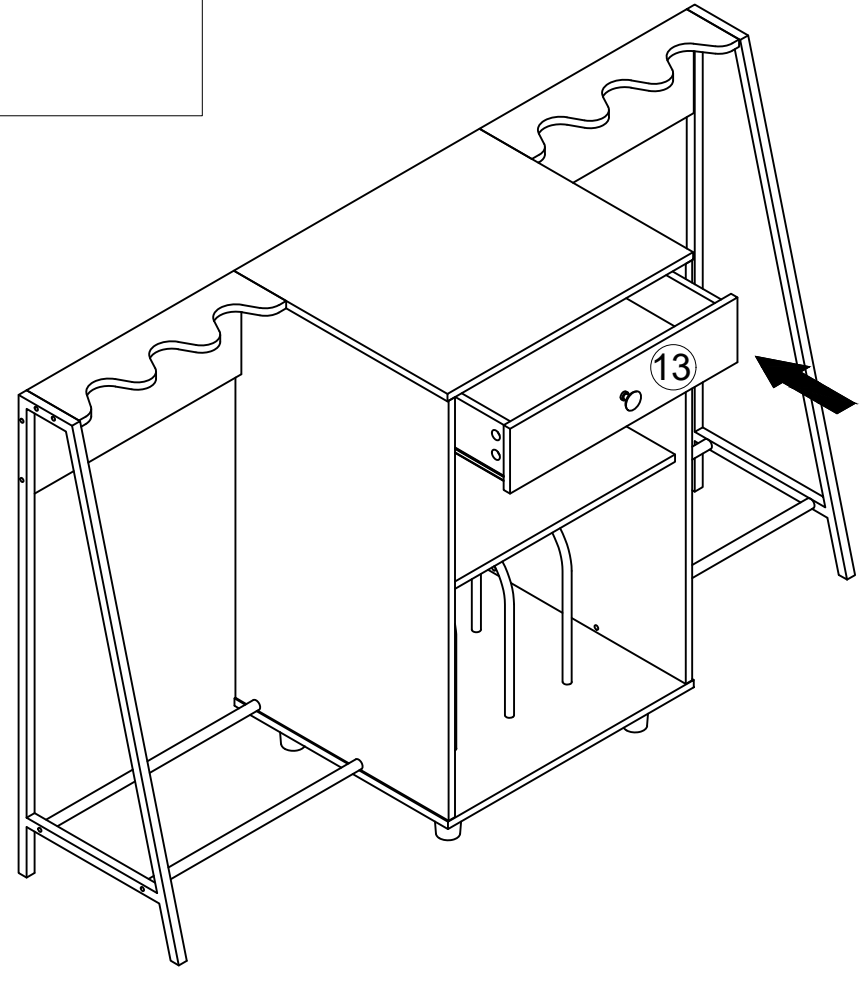
DL x 1

DR x 1

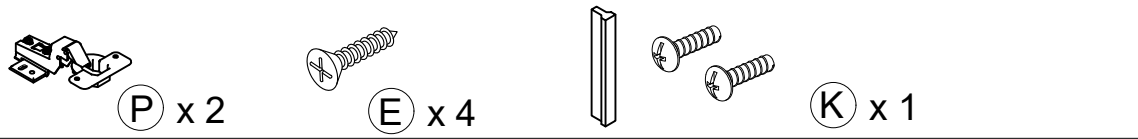


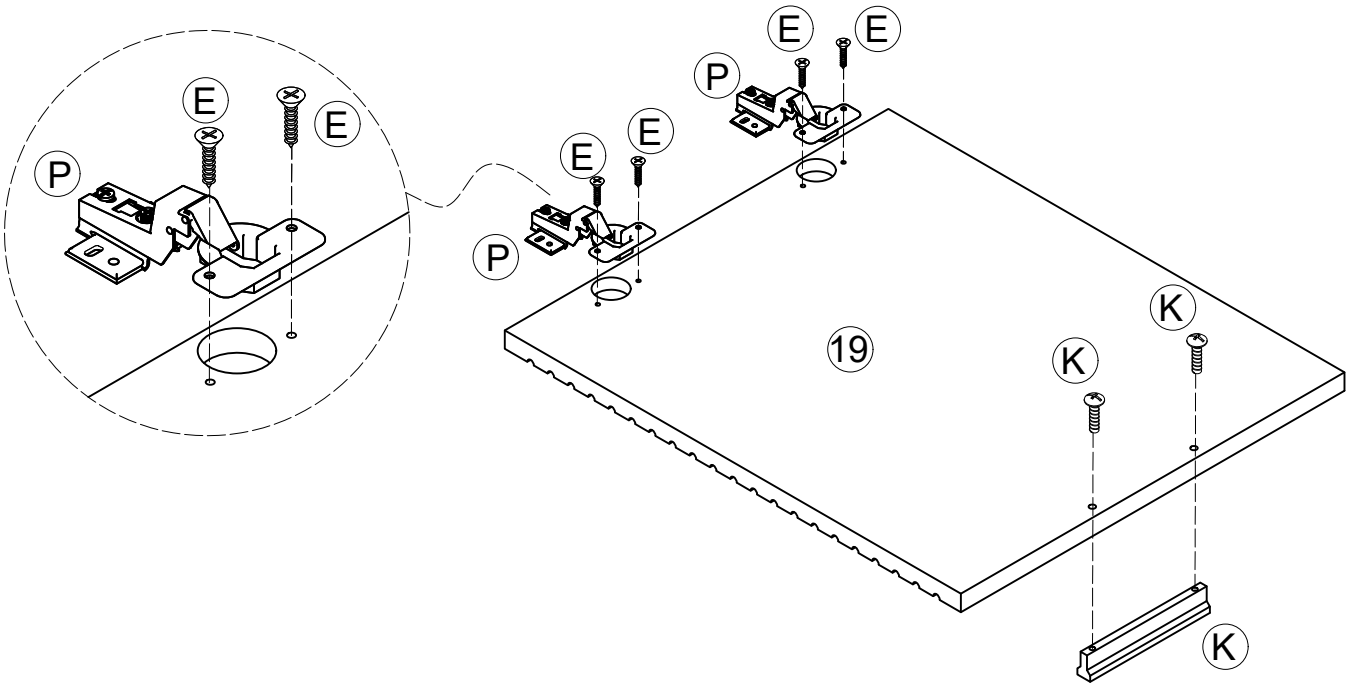

# 26





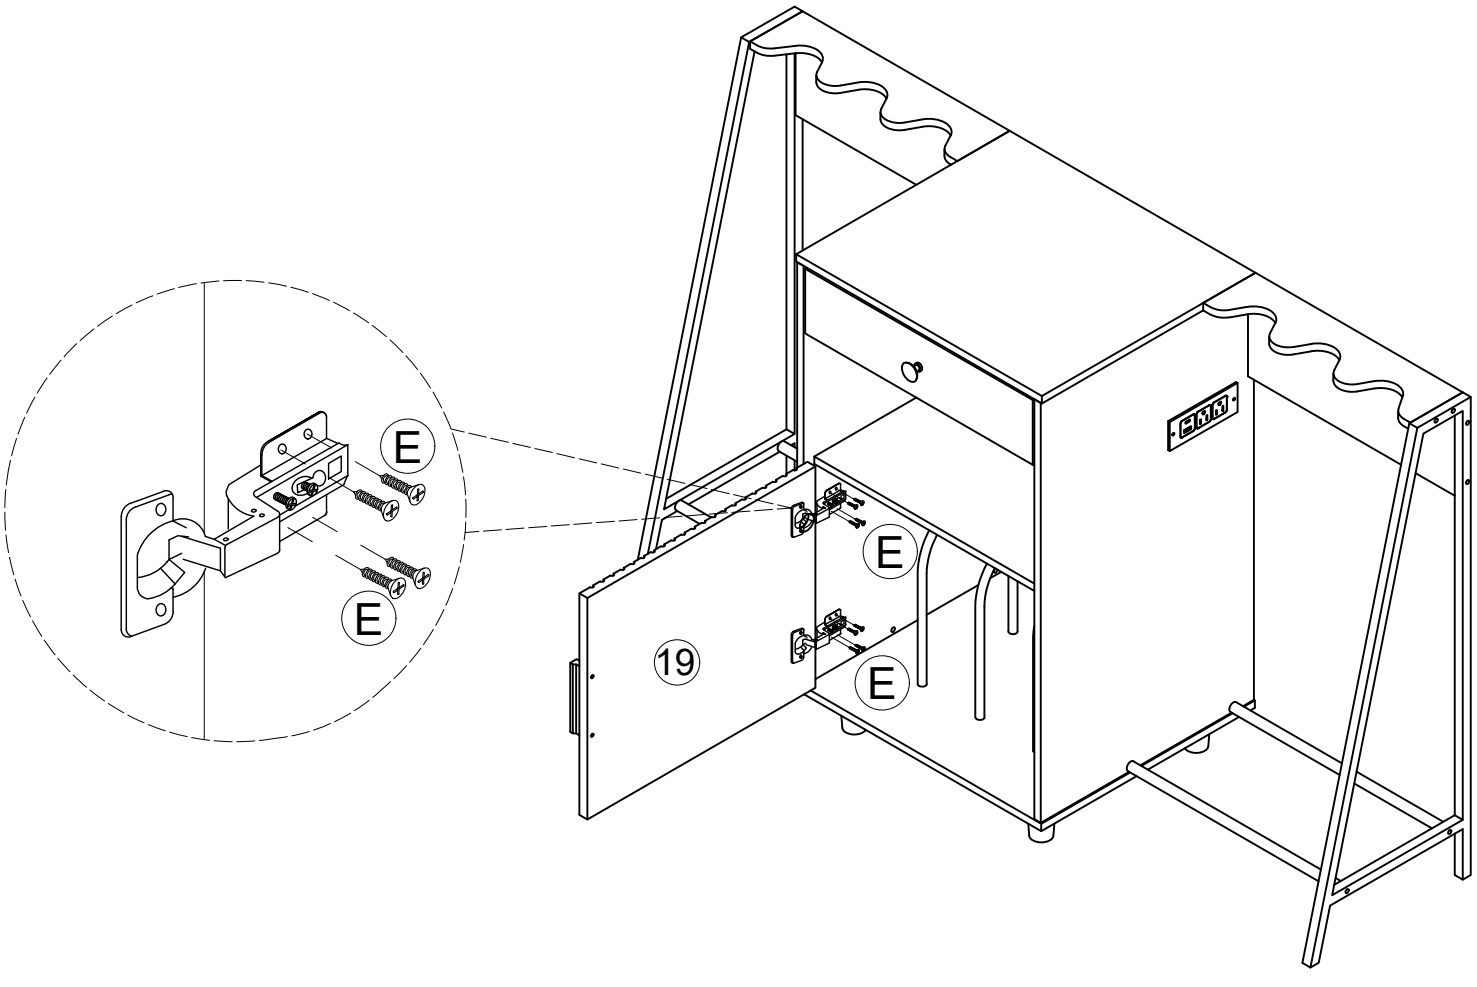
# 27



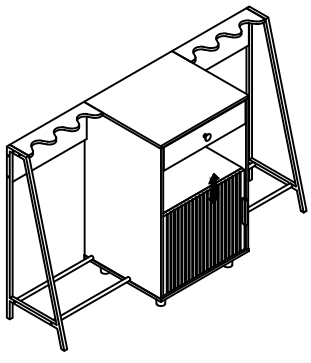



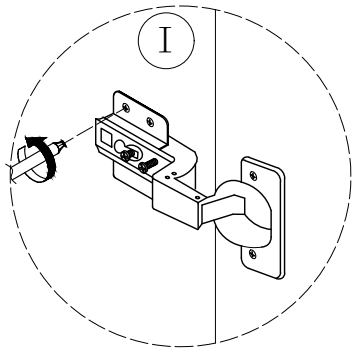

# 28

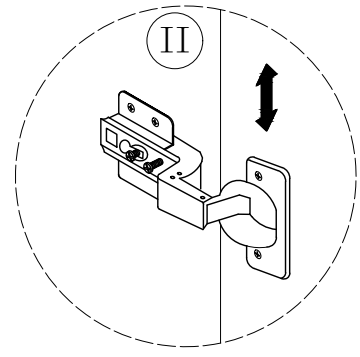


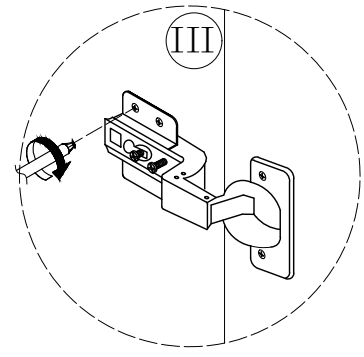



## Up & Down Adjustment

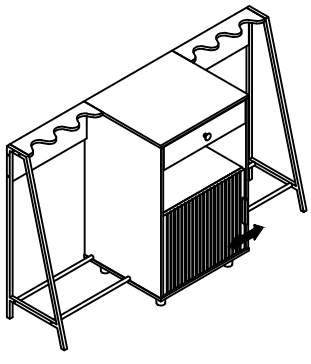


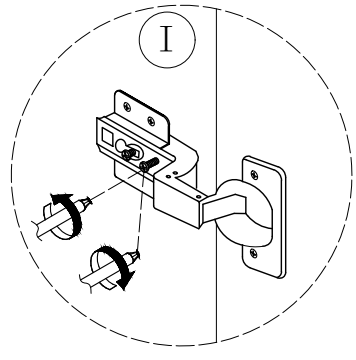


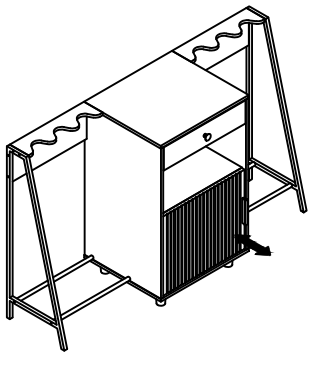



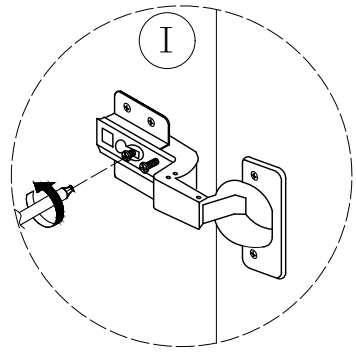

## Left & Right Adjustment

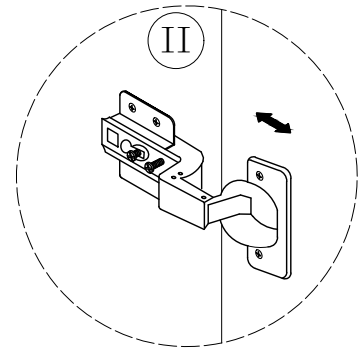


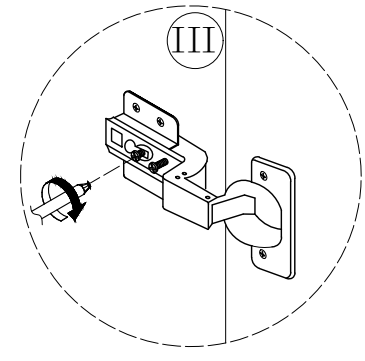



## Forward & Back Adjustment






# 30



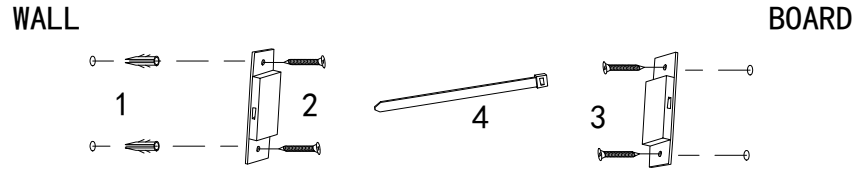
Ⓕ x 2

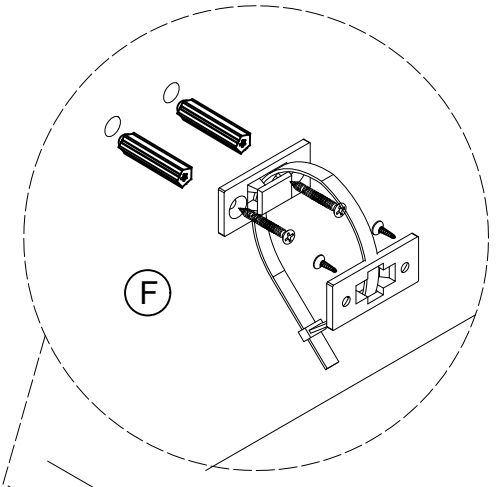
1.Drive the expansion screw into the appropriate position on the wall

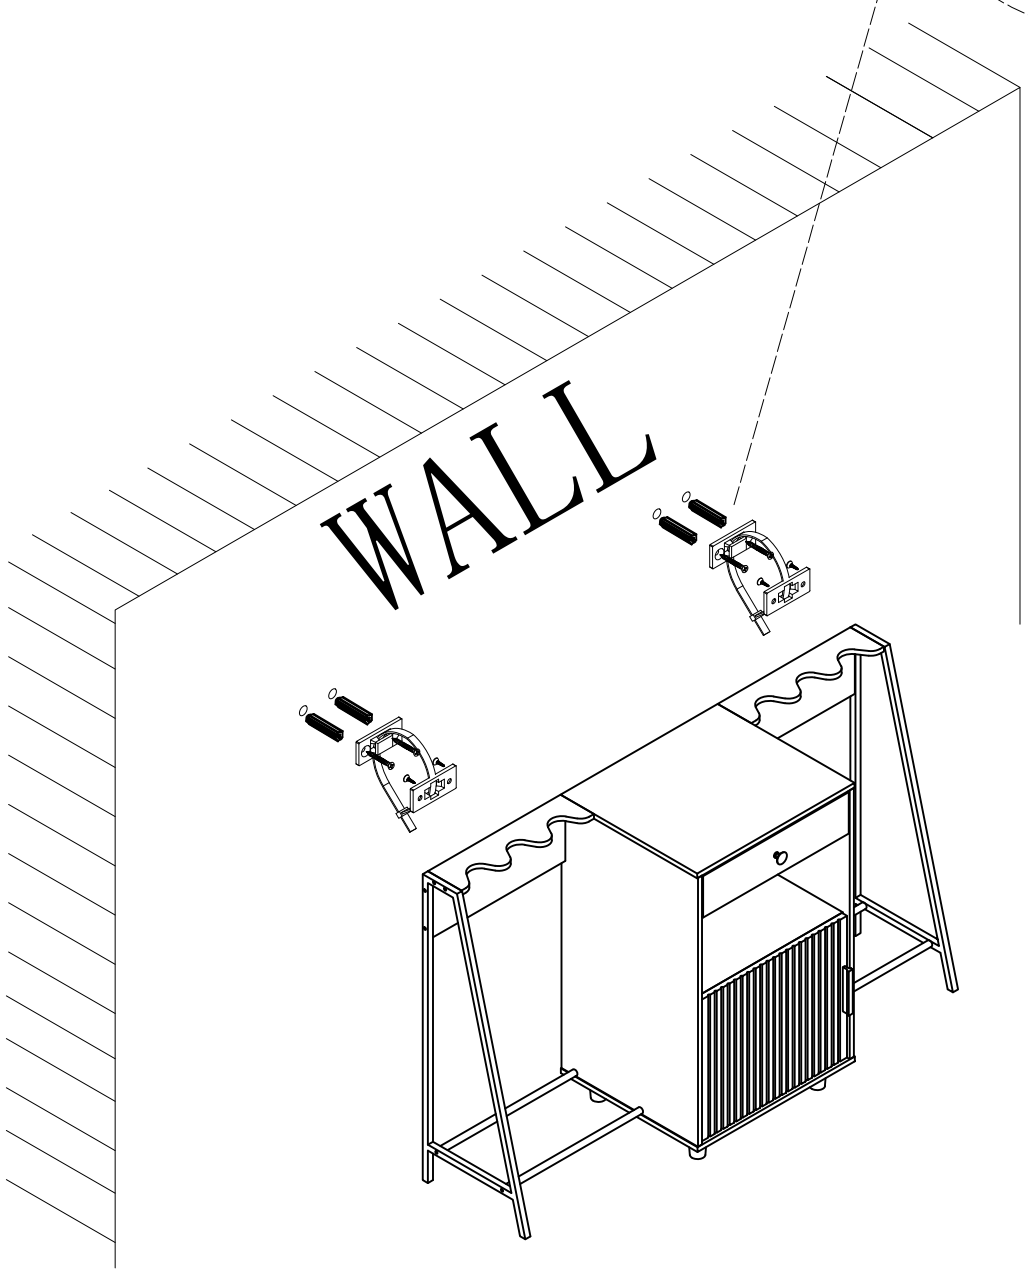
2.Use long screws to install one of the plastic buckle seats in the appropriate position on the wall.

3.Use short screws to install the other plastic buckle in the appropriate position on the cabinet.

4.Push the cable tie through the two plastic buckle seats and pull tight.As shown in the figure.



# 31 Finished assembly

