


ASSEMBLY INSTRUCTIONS


Pet House

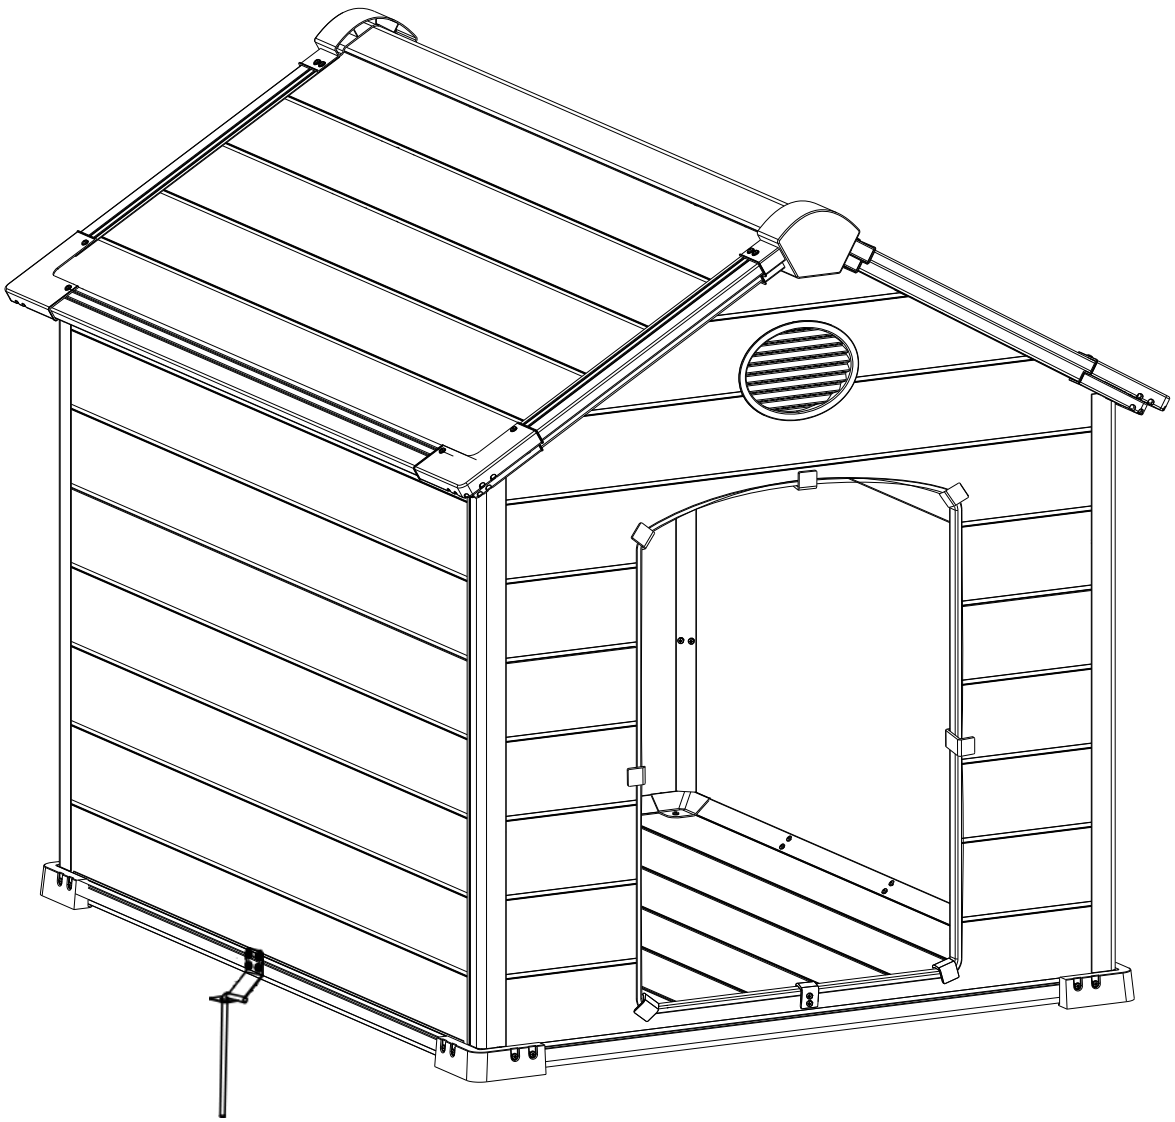

EXPLOSIVE VIEW
PART1

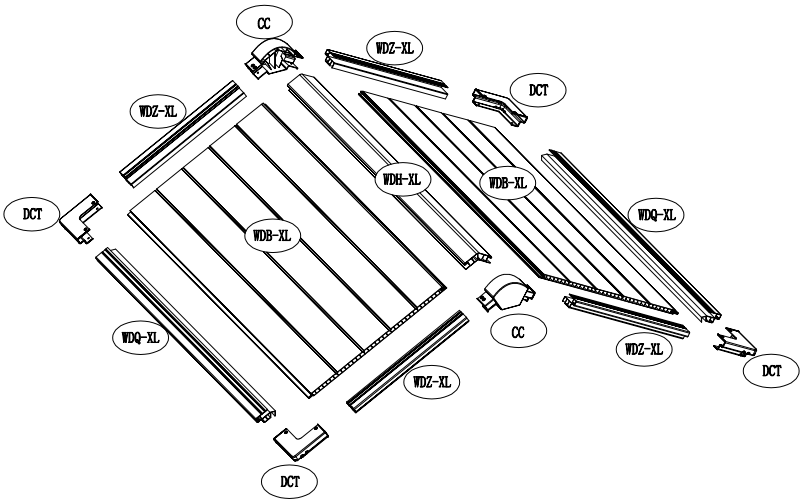

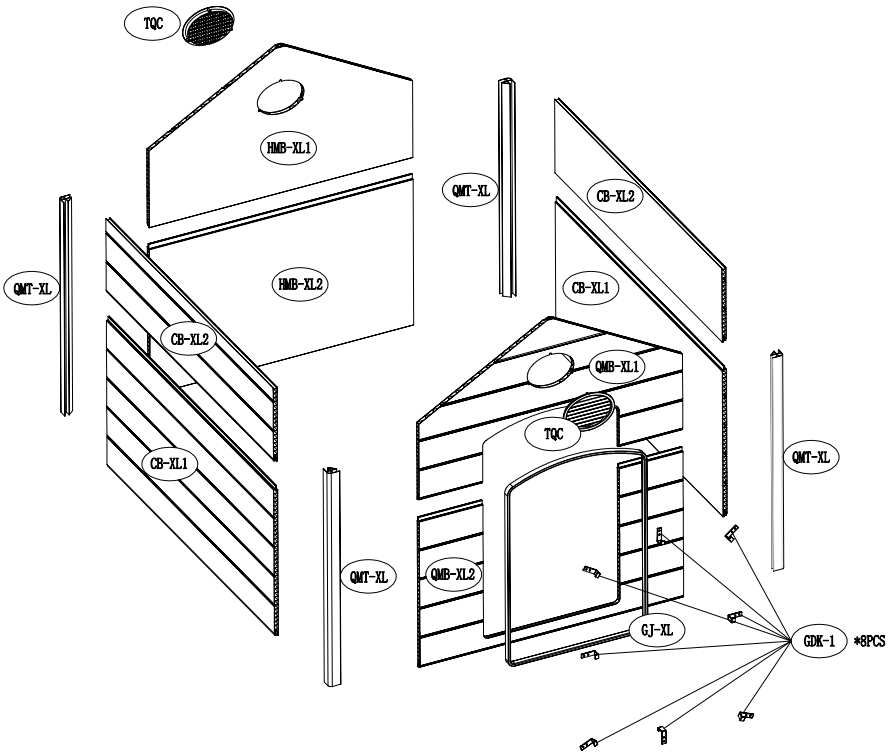


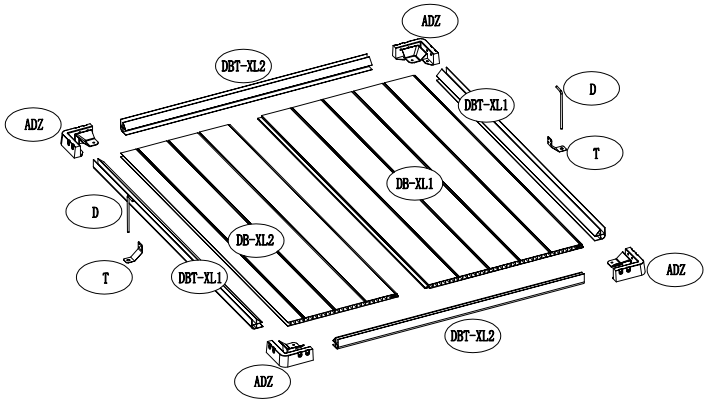


Installation Precautions

Leave enough space

Operating space shall be reserved for external installation work.

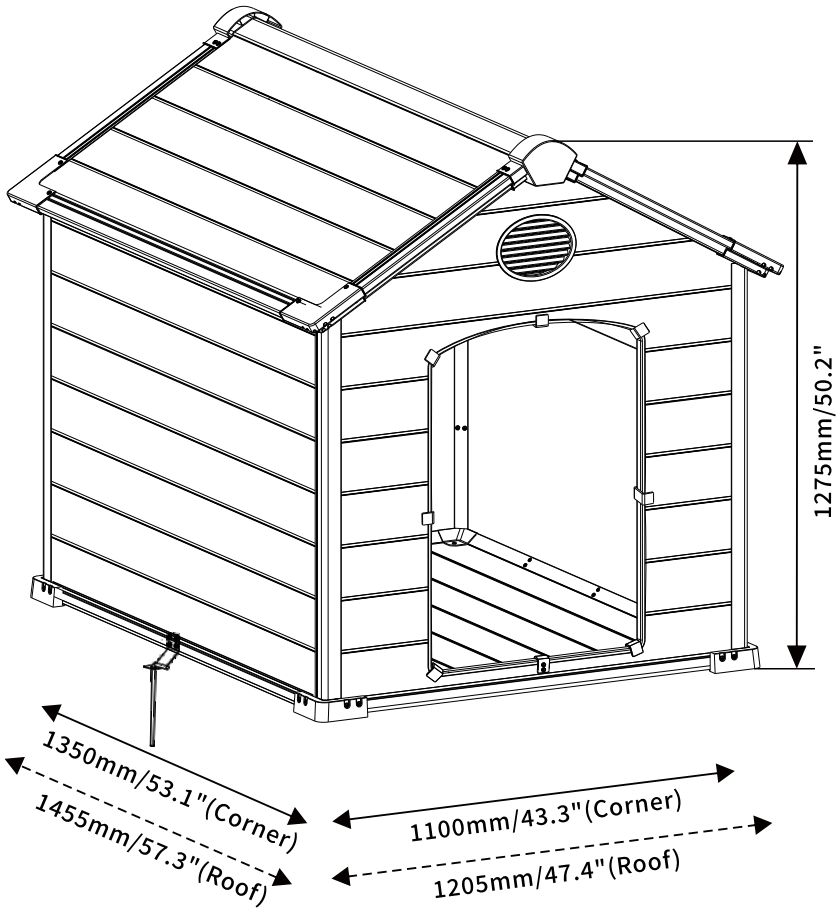














REQUIRED TOOLS




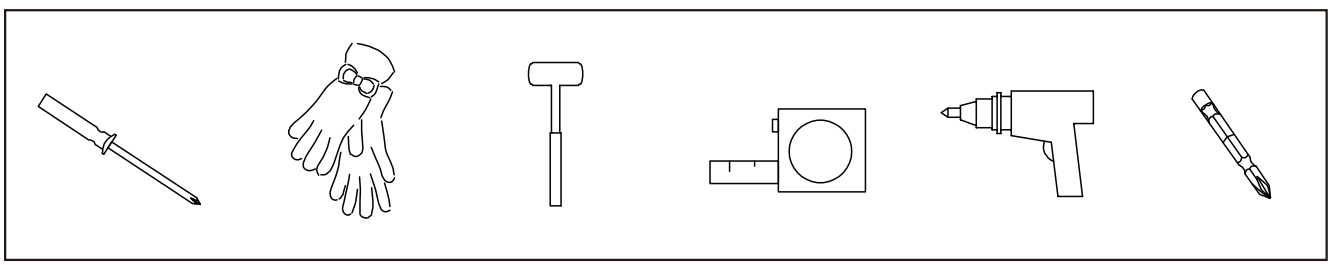


Accessories & Parts 1


"IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY"


1.Gather and organize all required parts before assembling.
2.Assemble on a flat , clean surface.
3.Two or more people are required for assembly.

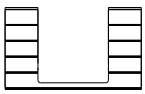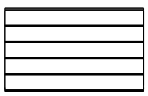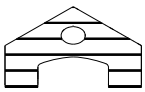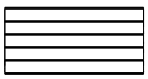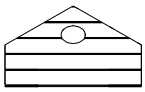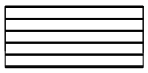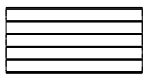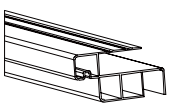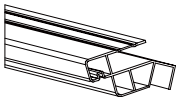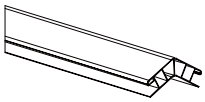Item No.	Reference Image	Qty.
QMB-XL2		X1
HMB-XL2		X1
QMB-XL1		X1
CB-XL1		X2
CB-XL2		X2
HMB-XL1		X1
WDB-XL		X2
DB-XL1		X1
DB-XL2		X1
WDZ-XL		X4
WDQ-XL		X2
WDH-XL		X1
GDK-1		X8

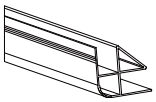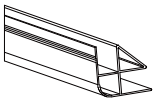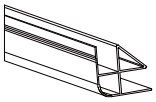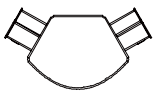
Item No.	Reference Image	Qty.
QMT-XL		X4
DBT-XL1		X2
DBT-XL2		X2
ADZ		X4
DCT		X4
CC		X2
GJ-XL		X1
L	 5X14MM	X121
O	 5X20MM	X16
TQC		X2
T		X2
D		X2
M	 M4X12MM	X16

1

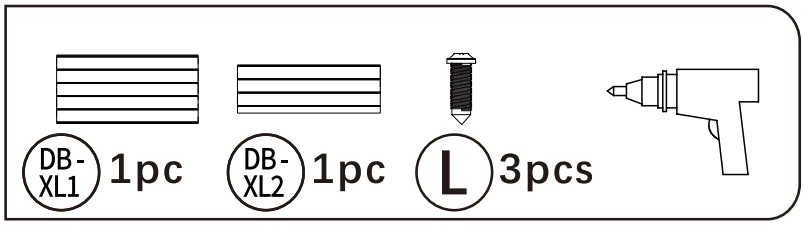

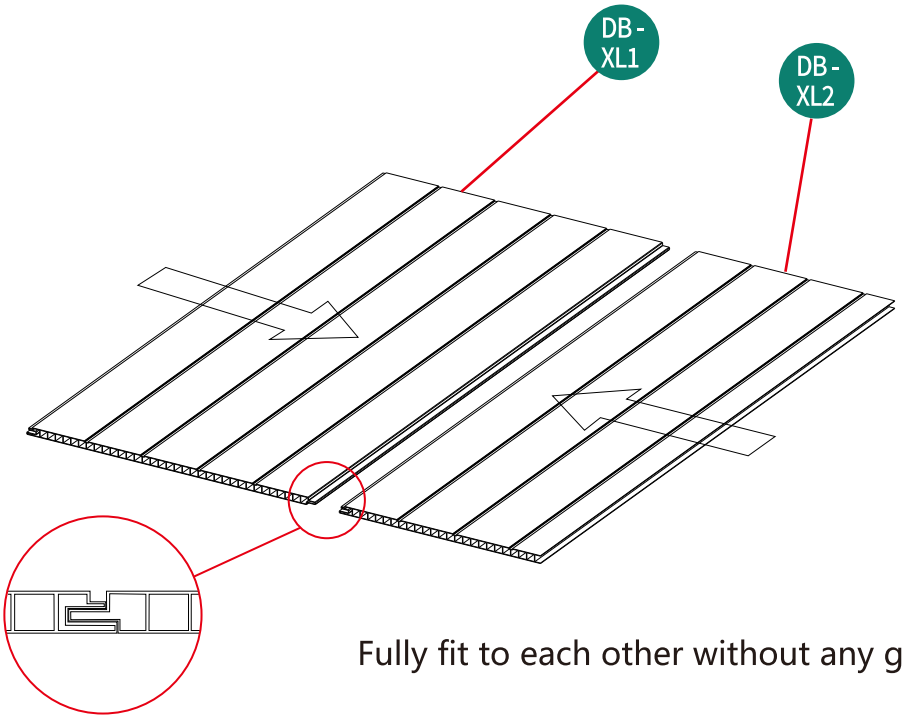


Fully fit to each other without any gap.

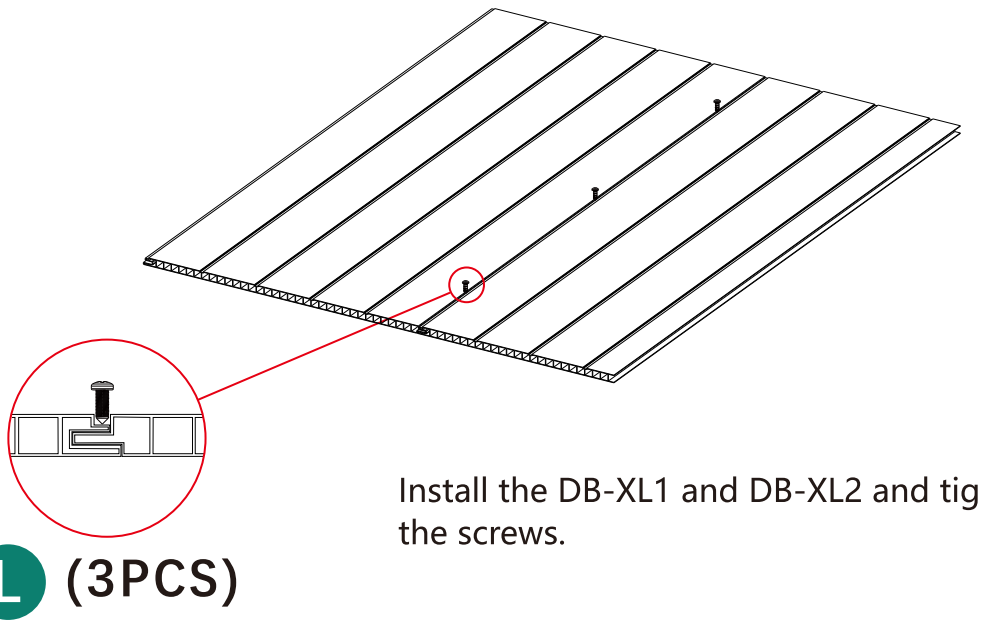


Install the DB-XL1 and DB-XL2 and tighten the screws.

L (3PCS)

2

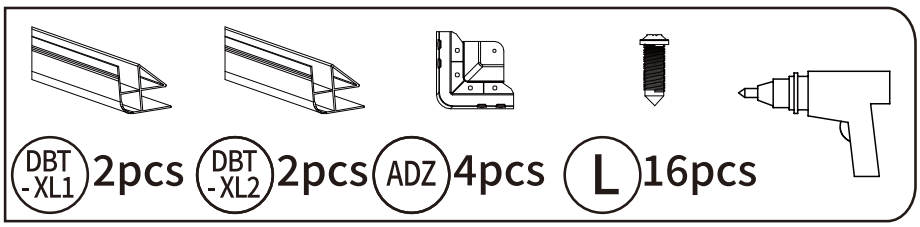

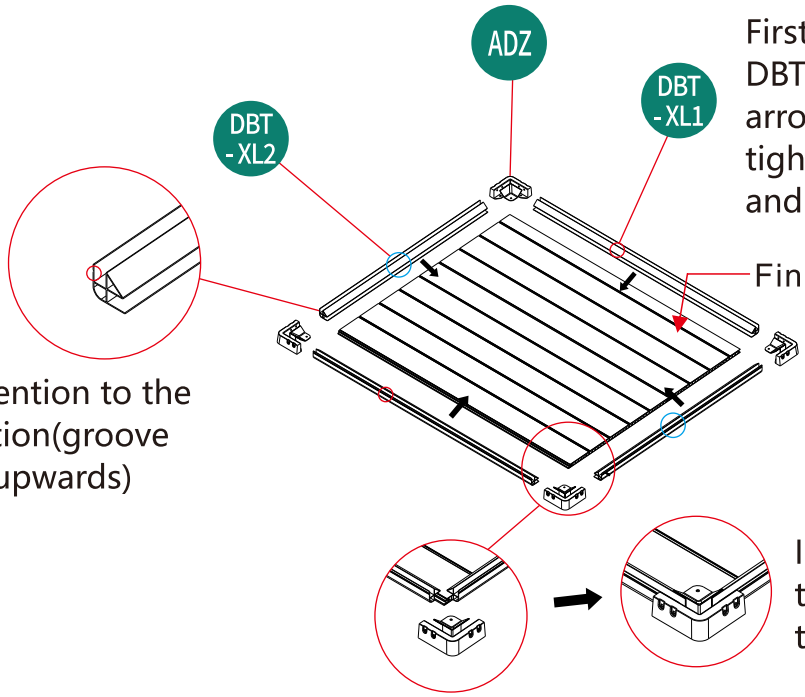


First,install the DBT-XL1 and DBT-XL2 by aligning it with the arrow direction,then secure and tighten it using the ADZ corner and screws.

Finished in step1.


⚠ Pay attention to the illustration(groove facing upwards)


Install the parts following the arrow direction and tighten the screws.

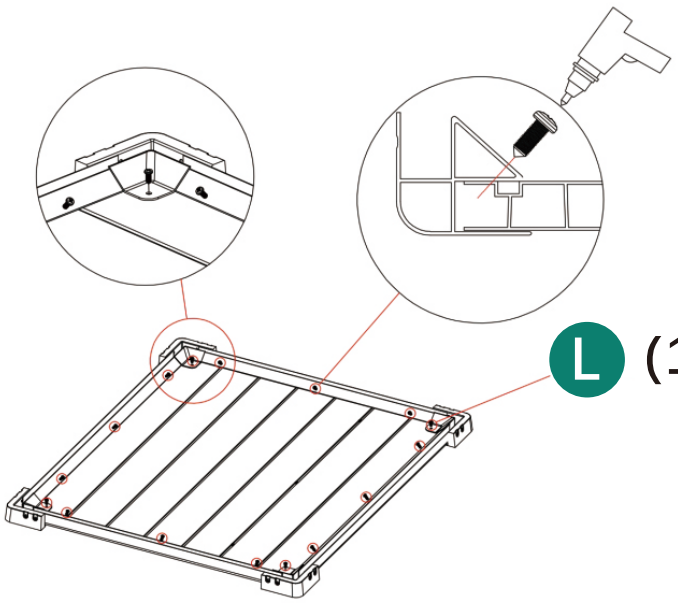


L (16PCS)

3

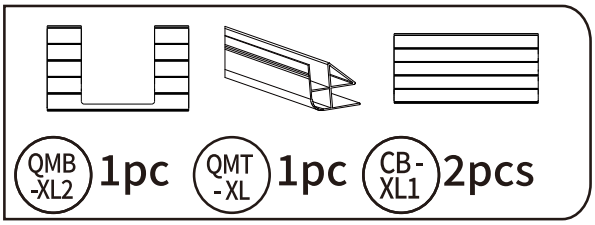


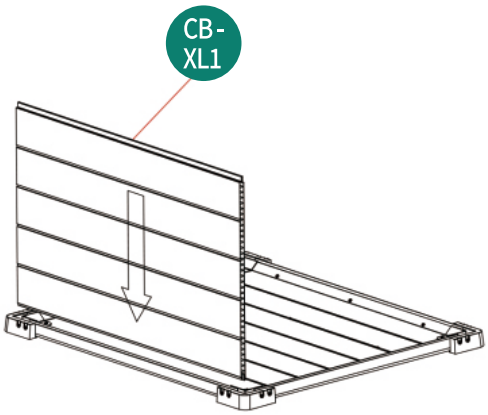


Install the CB-XL1 panel into the slot, following the arrow dircetion.

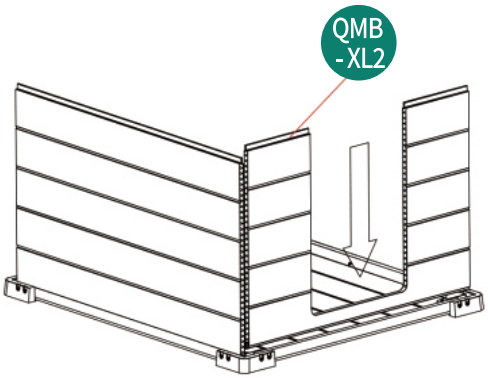

Install the QMB-XL2 panel into the slot, following the arrow dircetion.

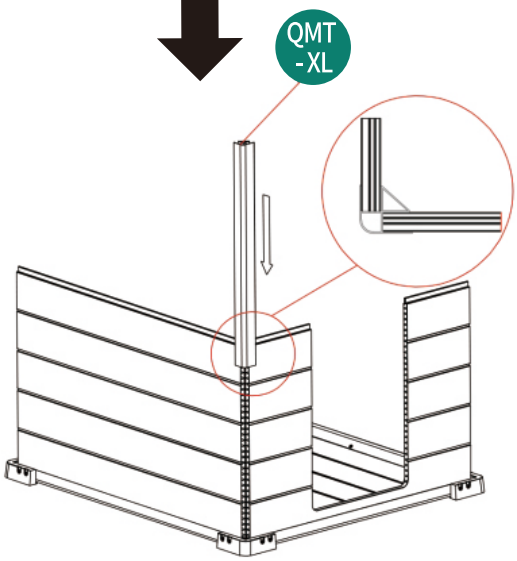



Install the QMT-XL panel into the slot, following the arrow dircetion.

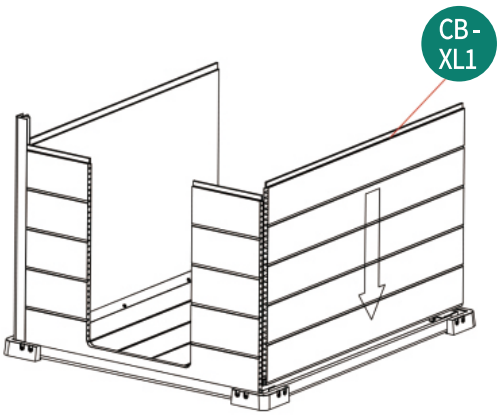


Install the CB-XL1 panel into the slot, following the arrow dircetion.

4

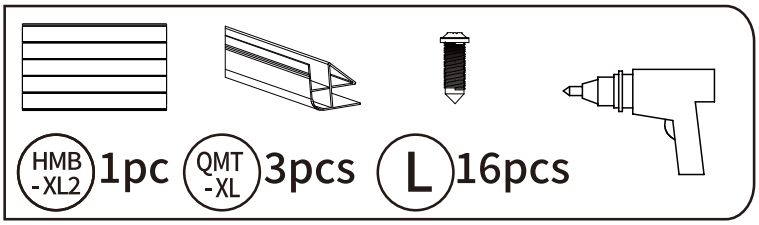


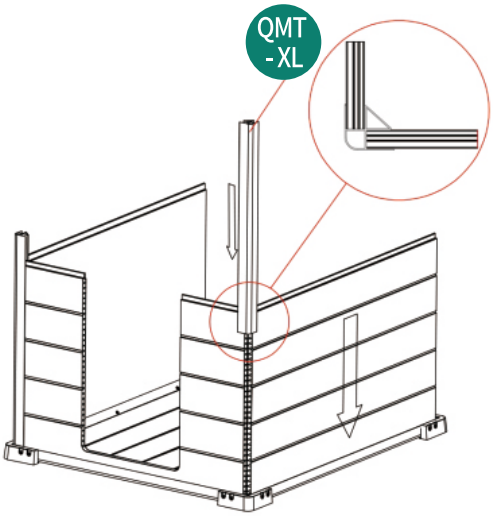

Install the QMT-XL panel into the slot, following the arrow dircetion.

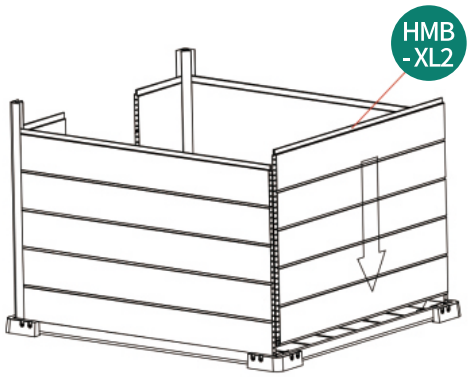


Install the HMB-XL2 panel into the slot, following the arrow dircetion.

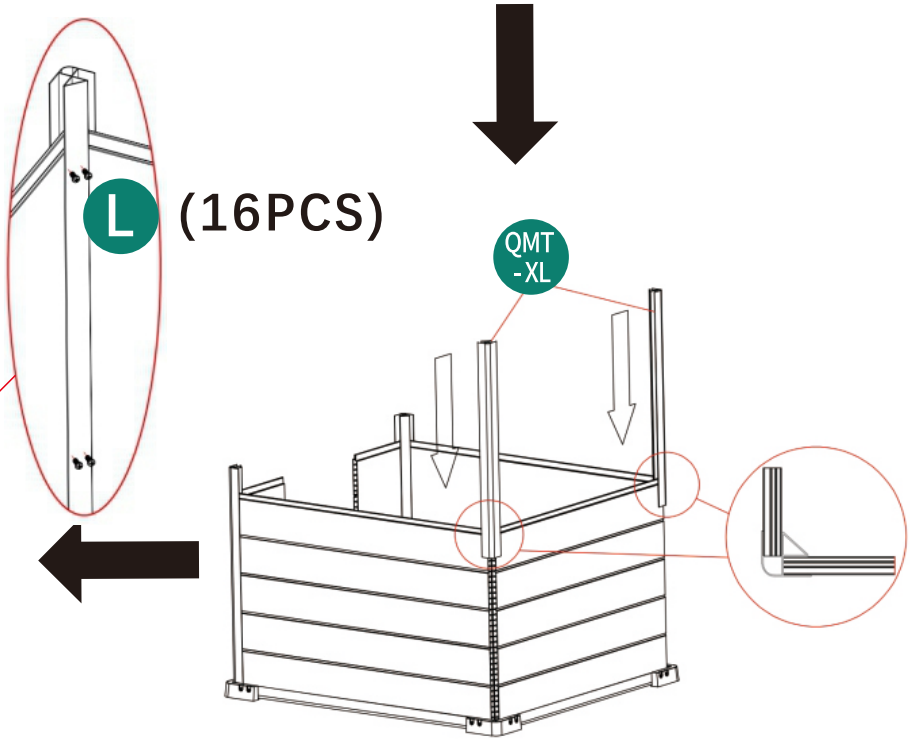



Tighten the screws as shown.

Install the QMT-XL panel into the slot, following the arrow dircetion.


5

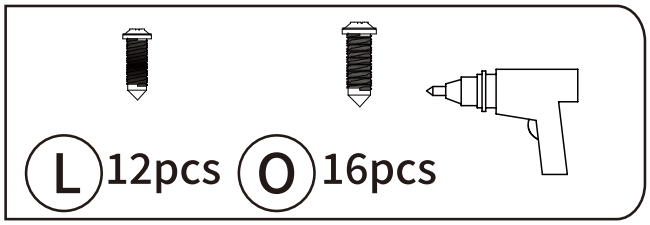

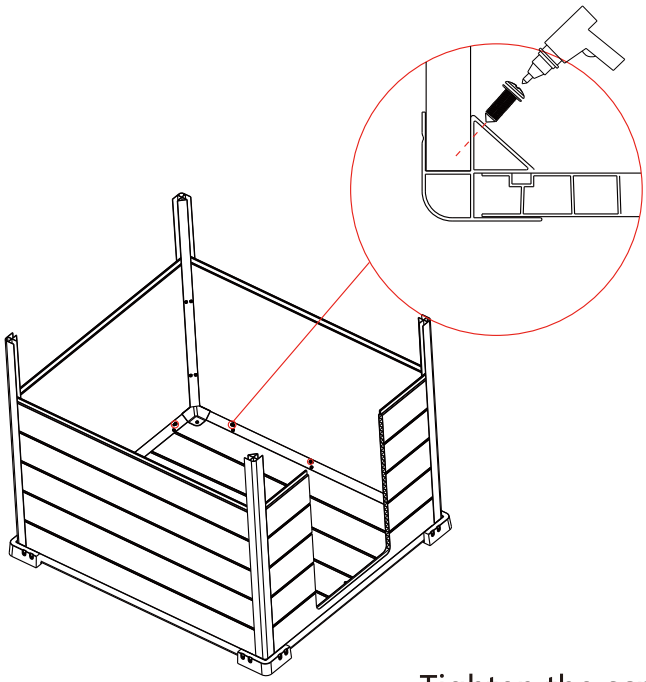


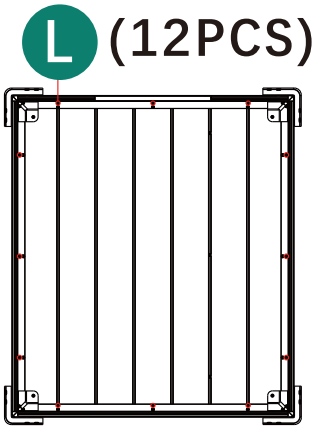


Tighten the screws as shown.

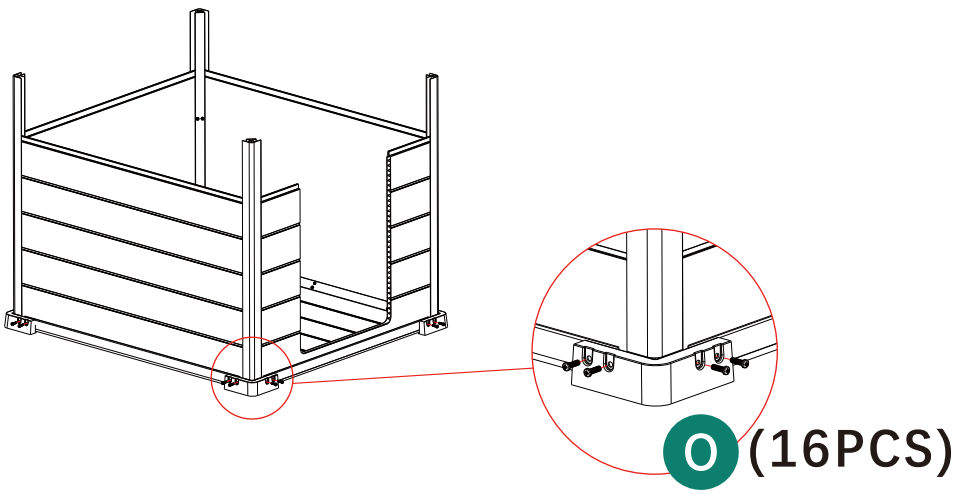


6

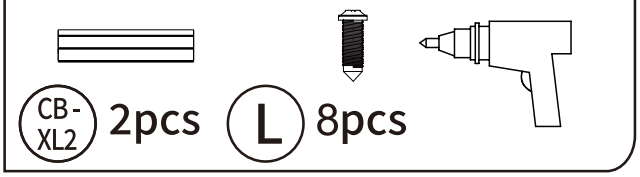


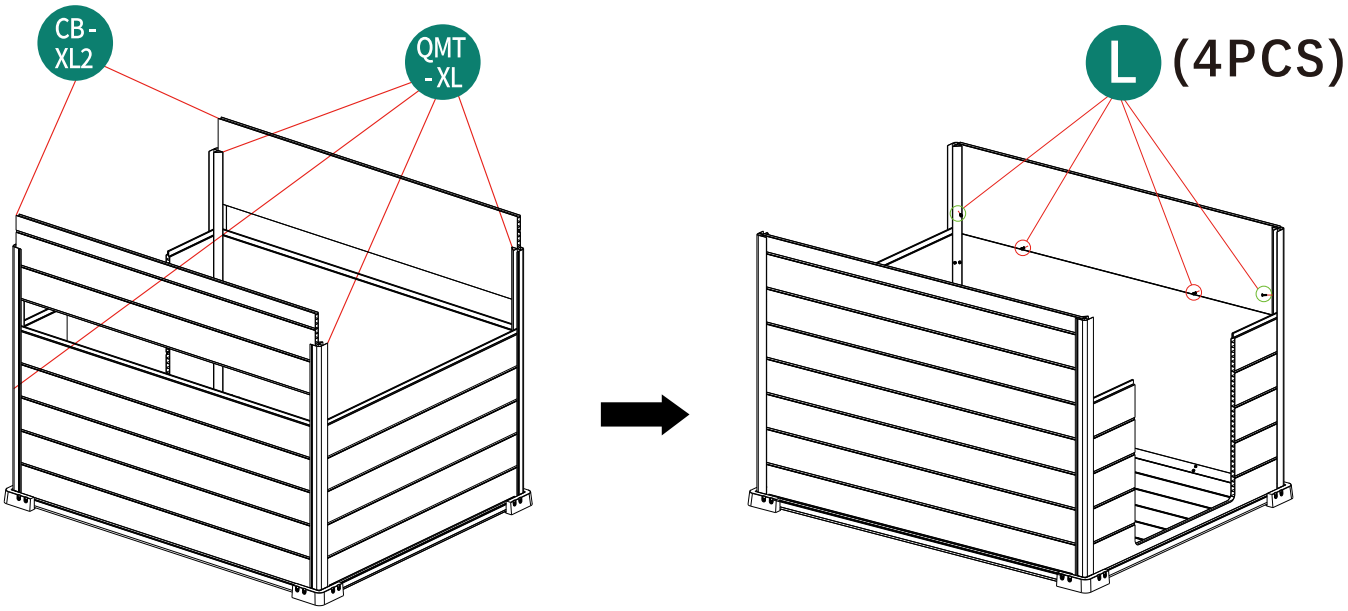


Slide the CB-XL2 panel into the QMT-XL slot and move it downward.

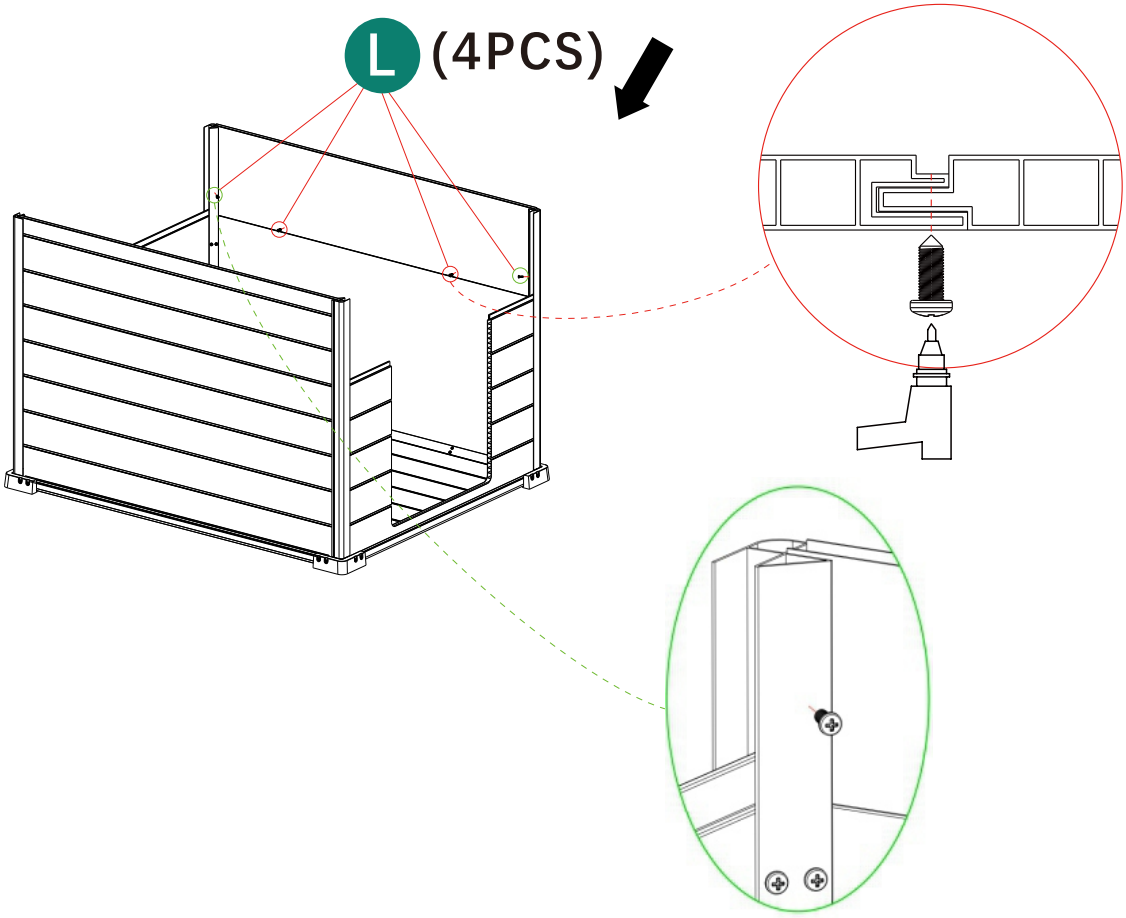


7

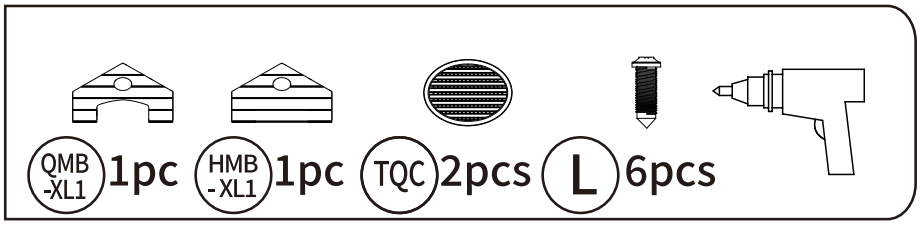


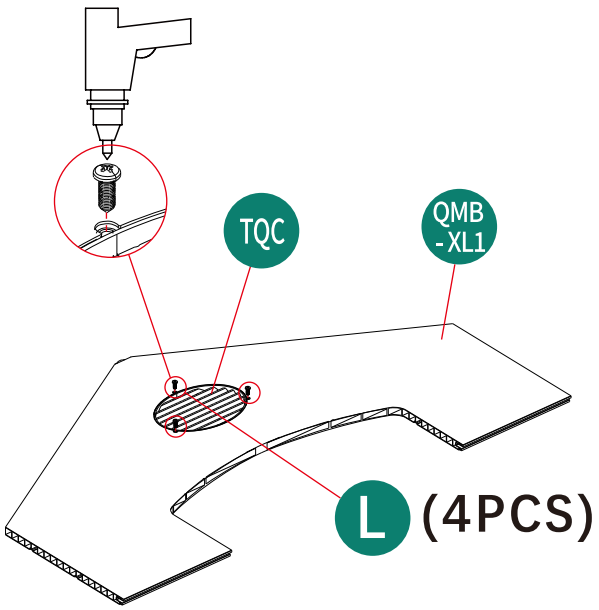


Install the TQC into the QMB-XL1/HMB-XL1 panel and tighten the screws.

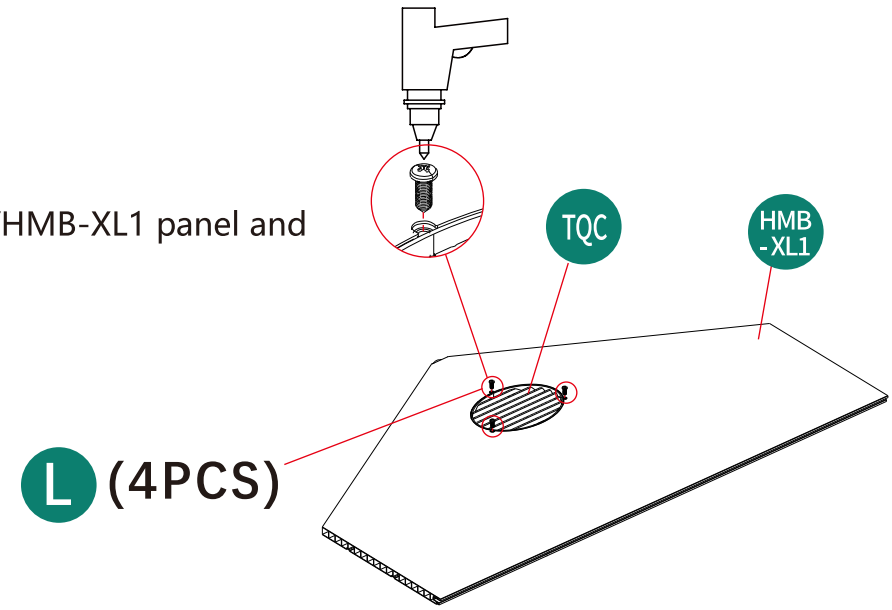



8

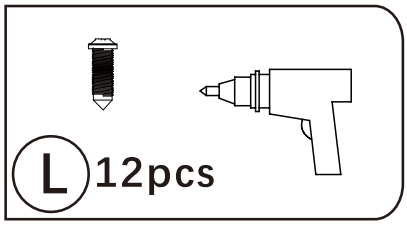

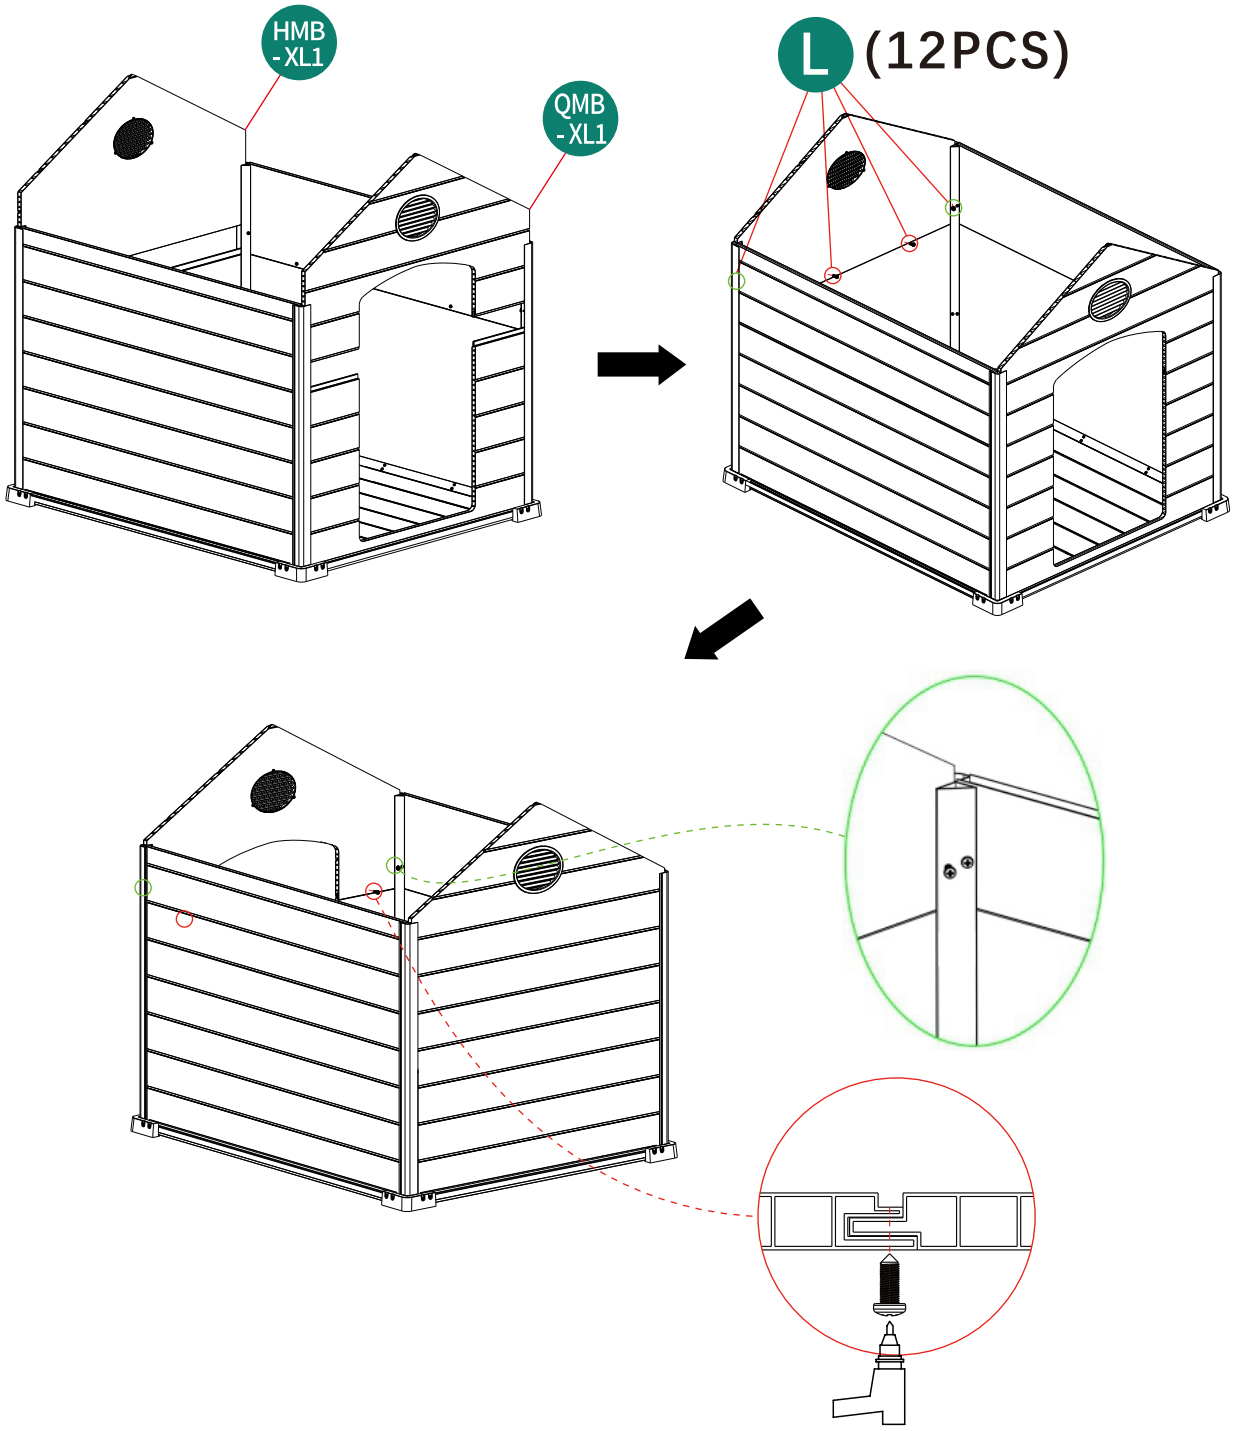


9

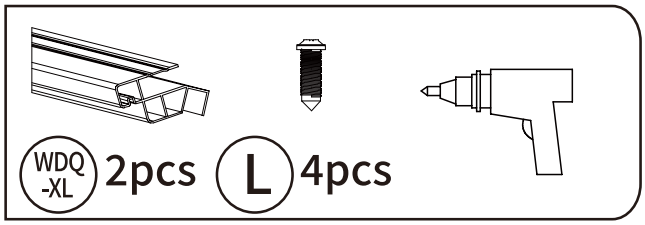


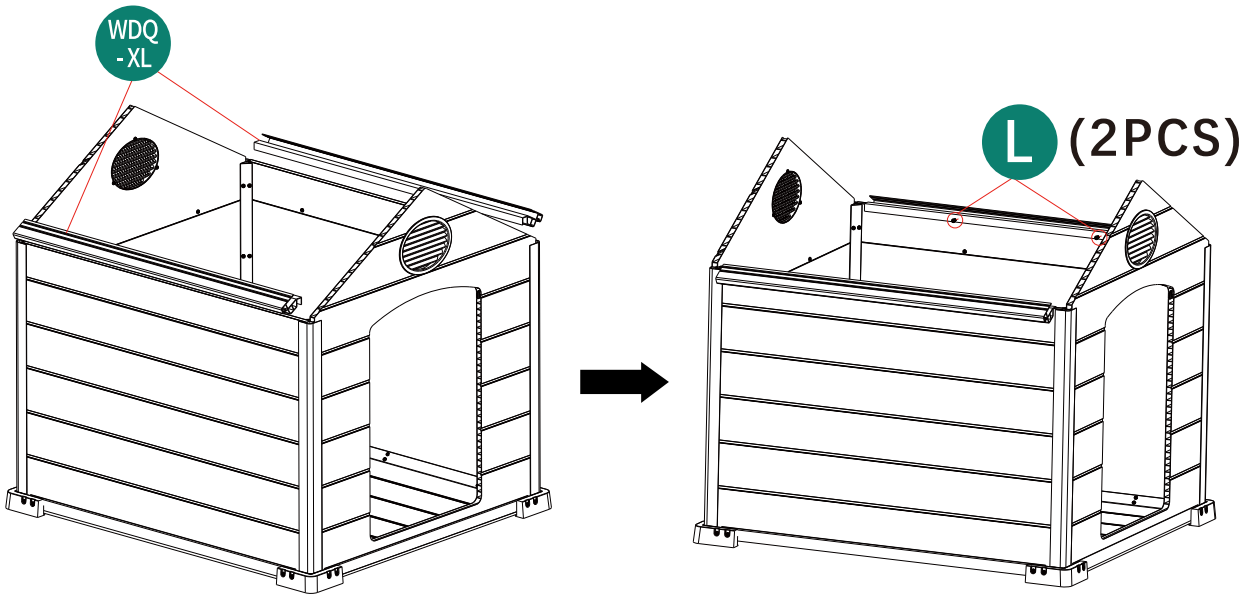


Align the WDQ-XL slot with the CB-XL board and secure it with 2 screws.

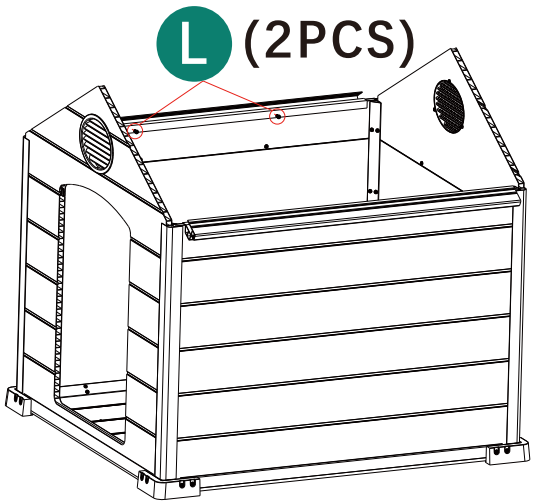


10

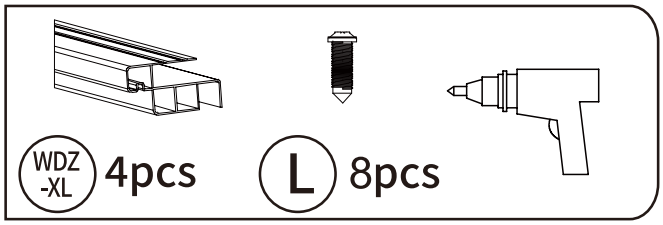


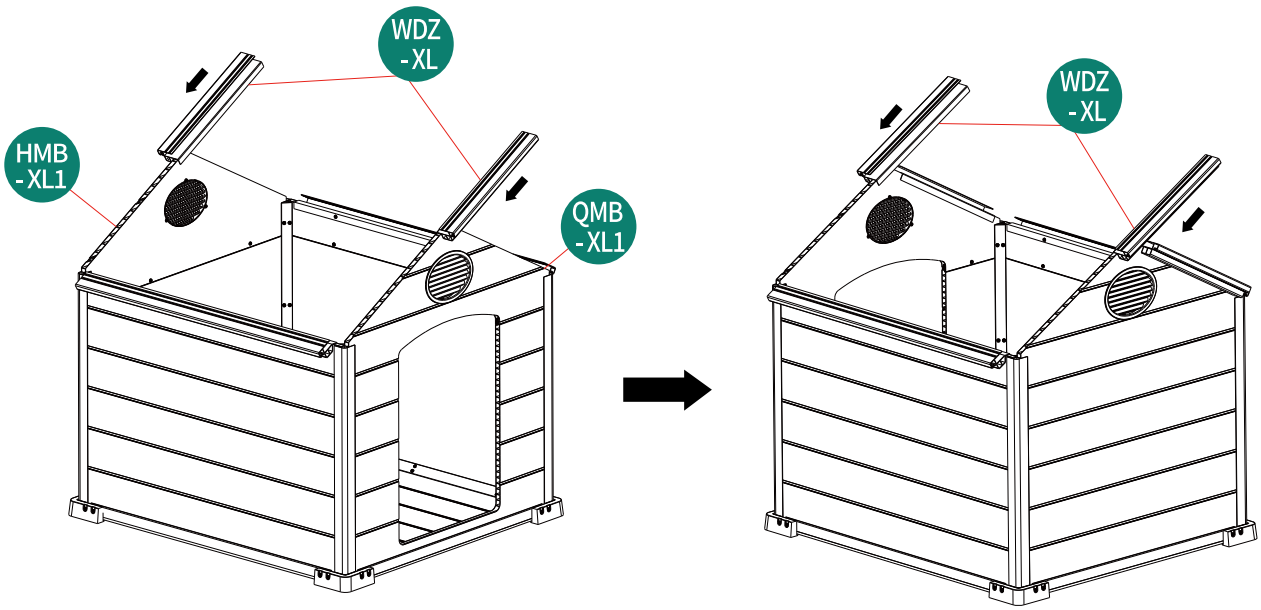


Insert WDZ-XL into QMB-XL2/HMB-XL1 in order, then push in the arrow direction.

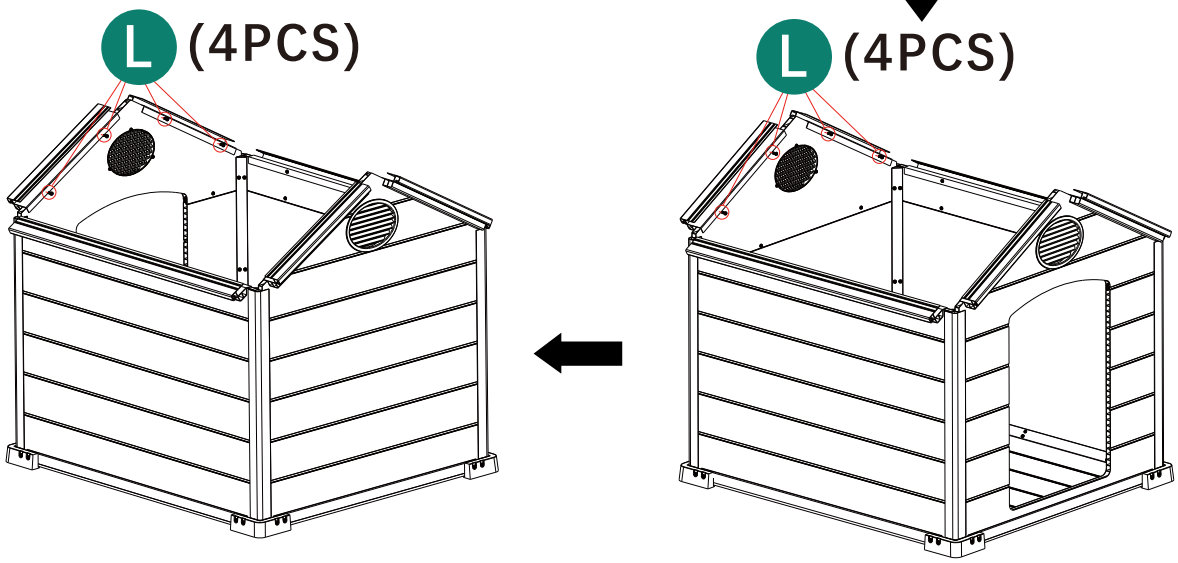


11

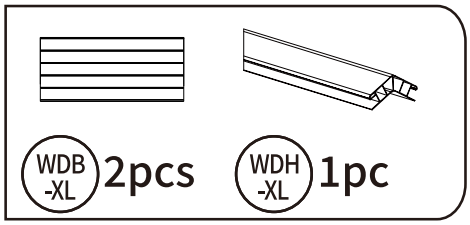

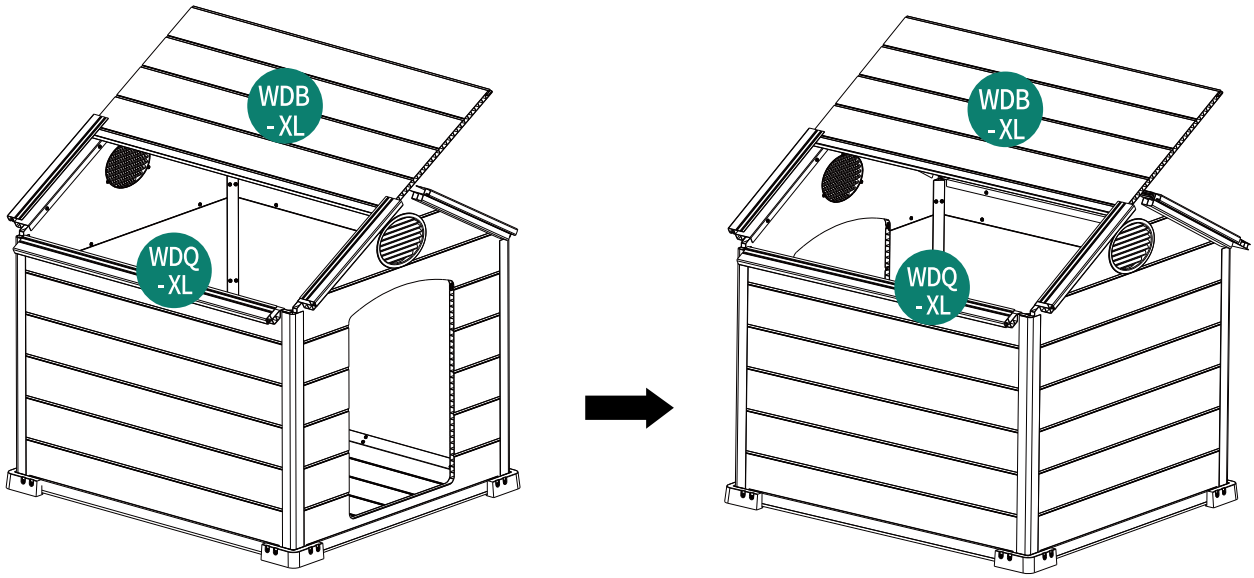



Align WDB-XL with the WDQ-XL slot and push as directed.

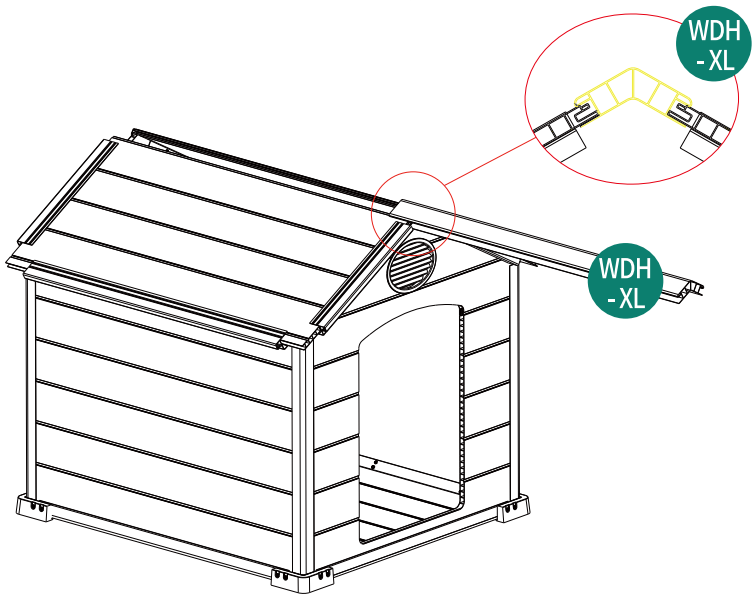


Lock WDH-XL into WDB-XL and push forward(see cross-section for details).

12

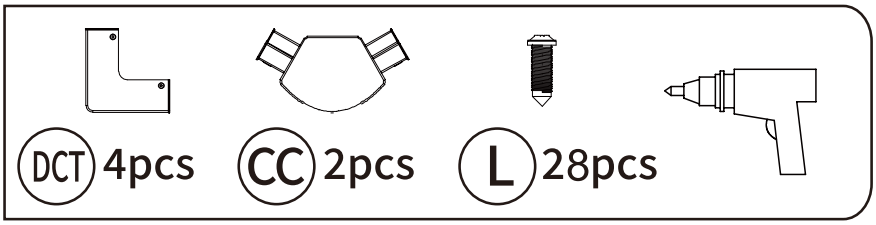


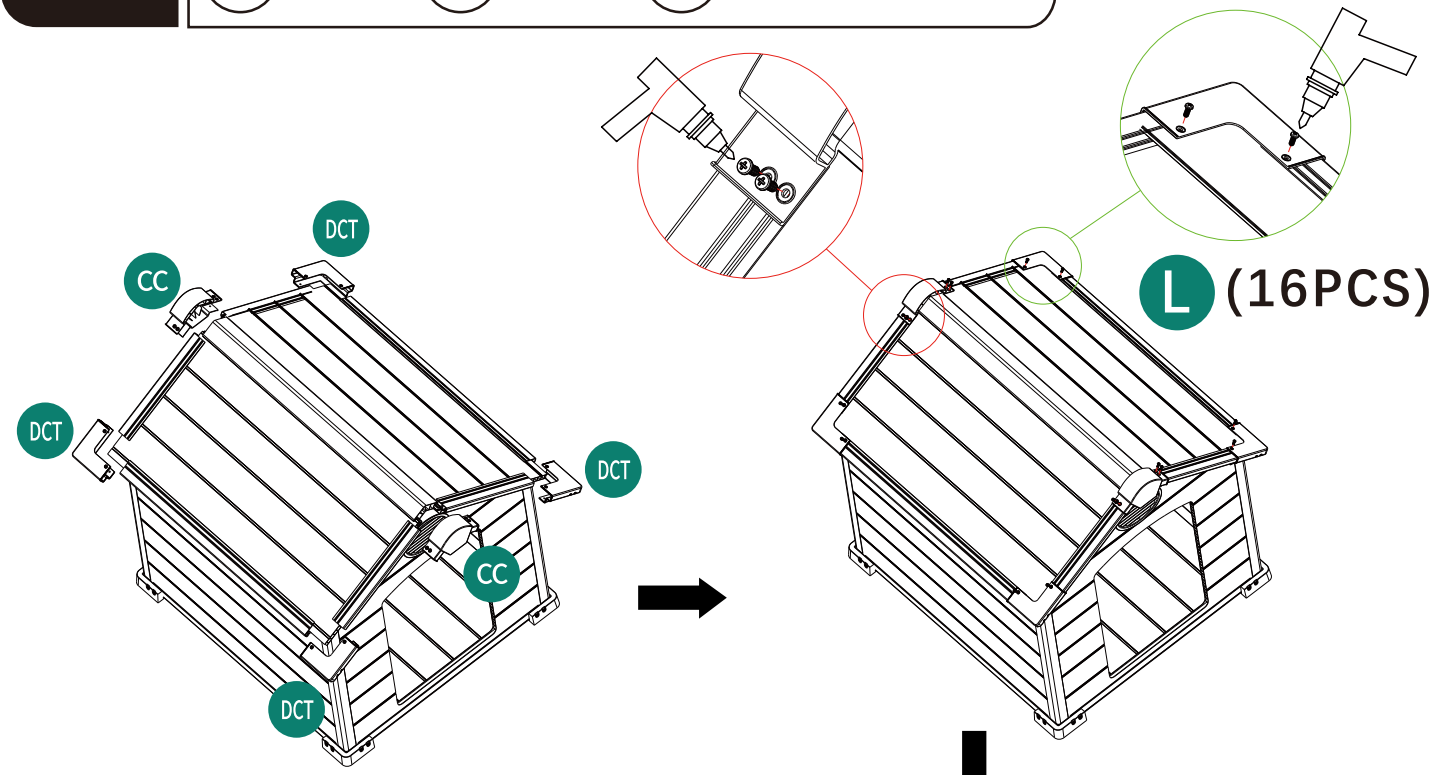


Install DCT/CC as indicated and secure with screws.

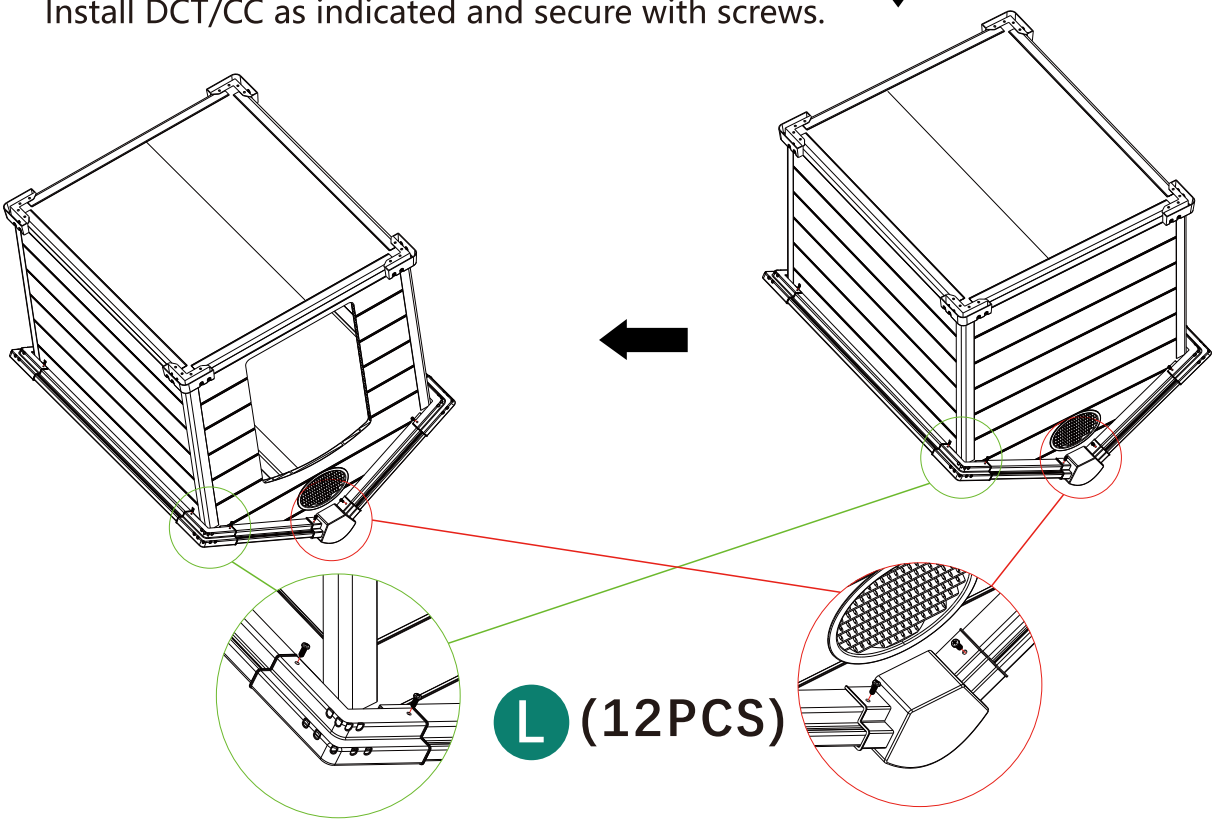


13

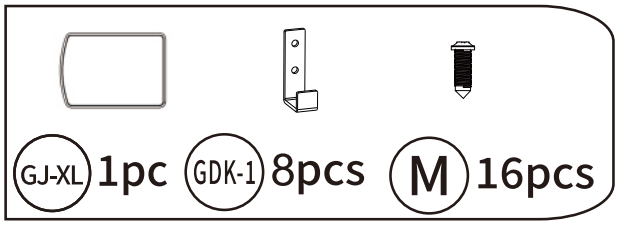


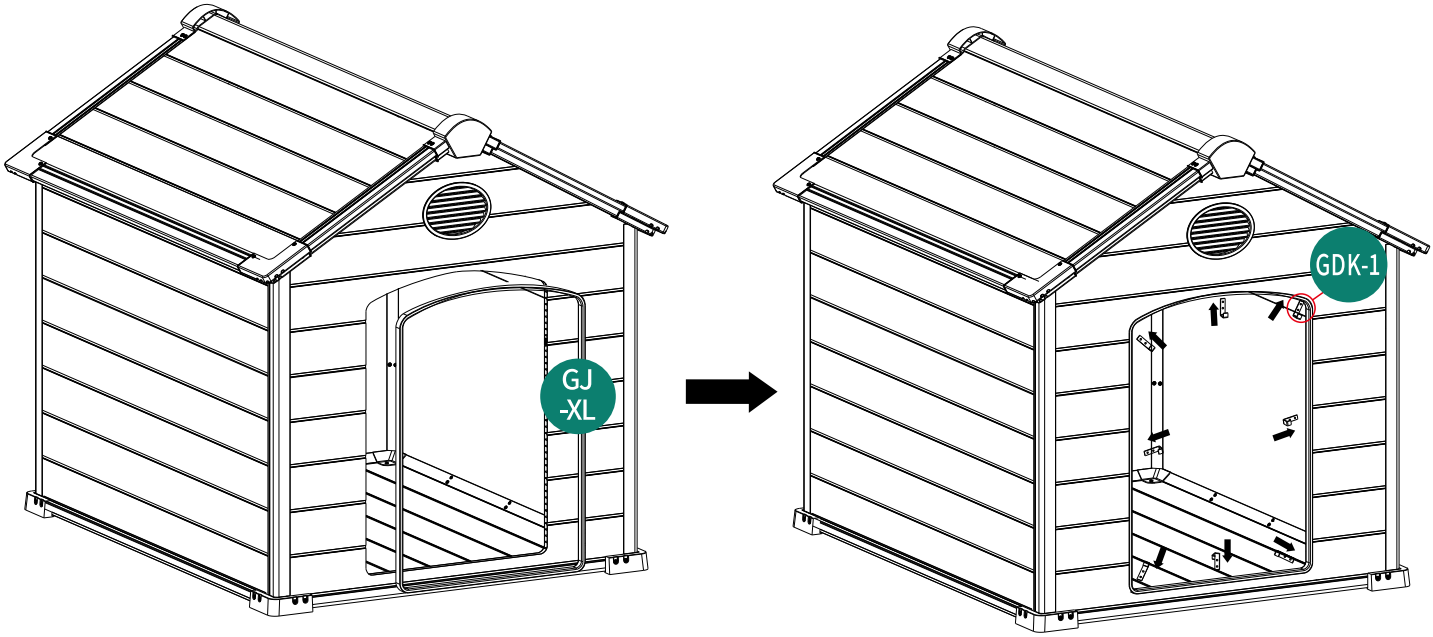


The GJ-XL silicone strip is adjustable in length.Please ensure the length is appropriate, as being too long or too short may affect the funcitonality of the dog house.

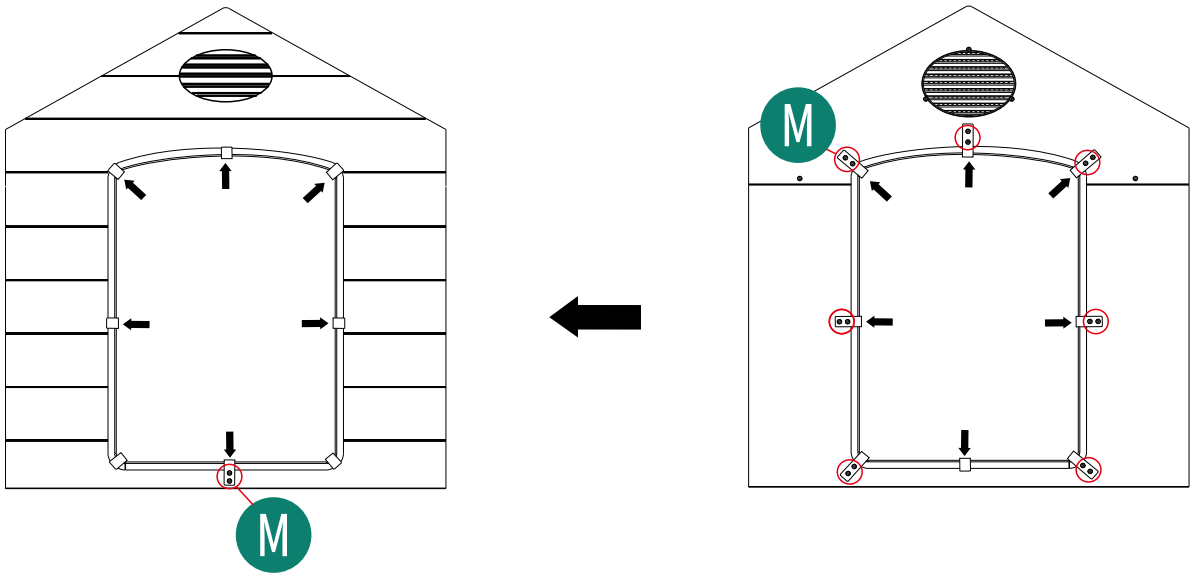


14

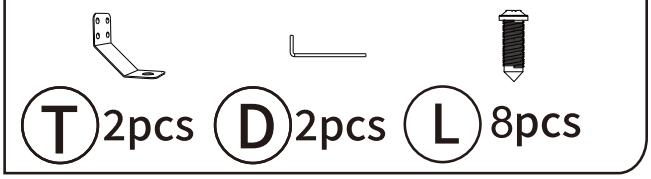

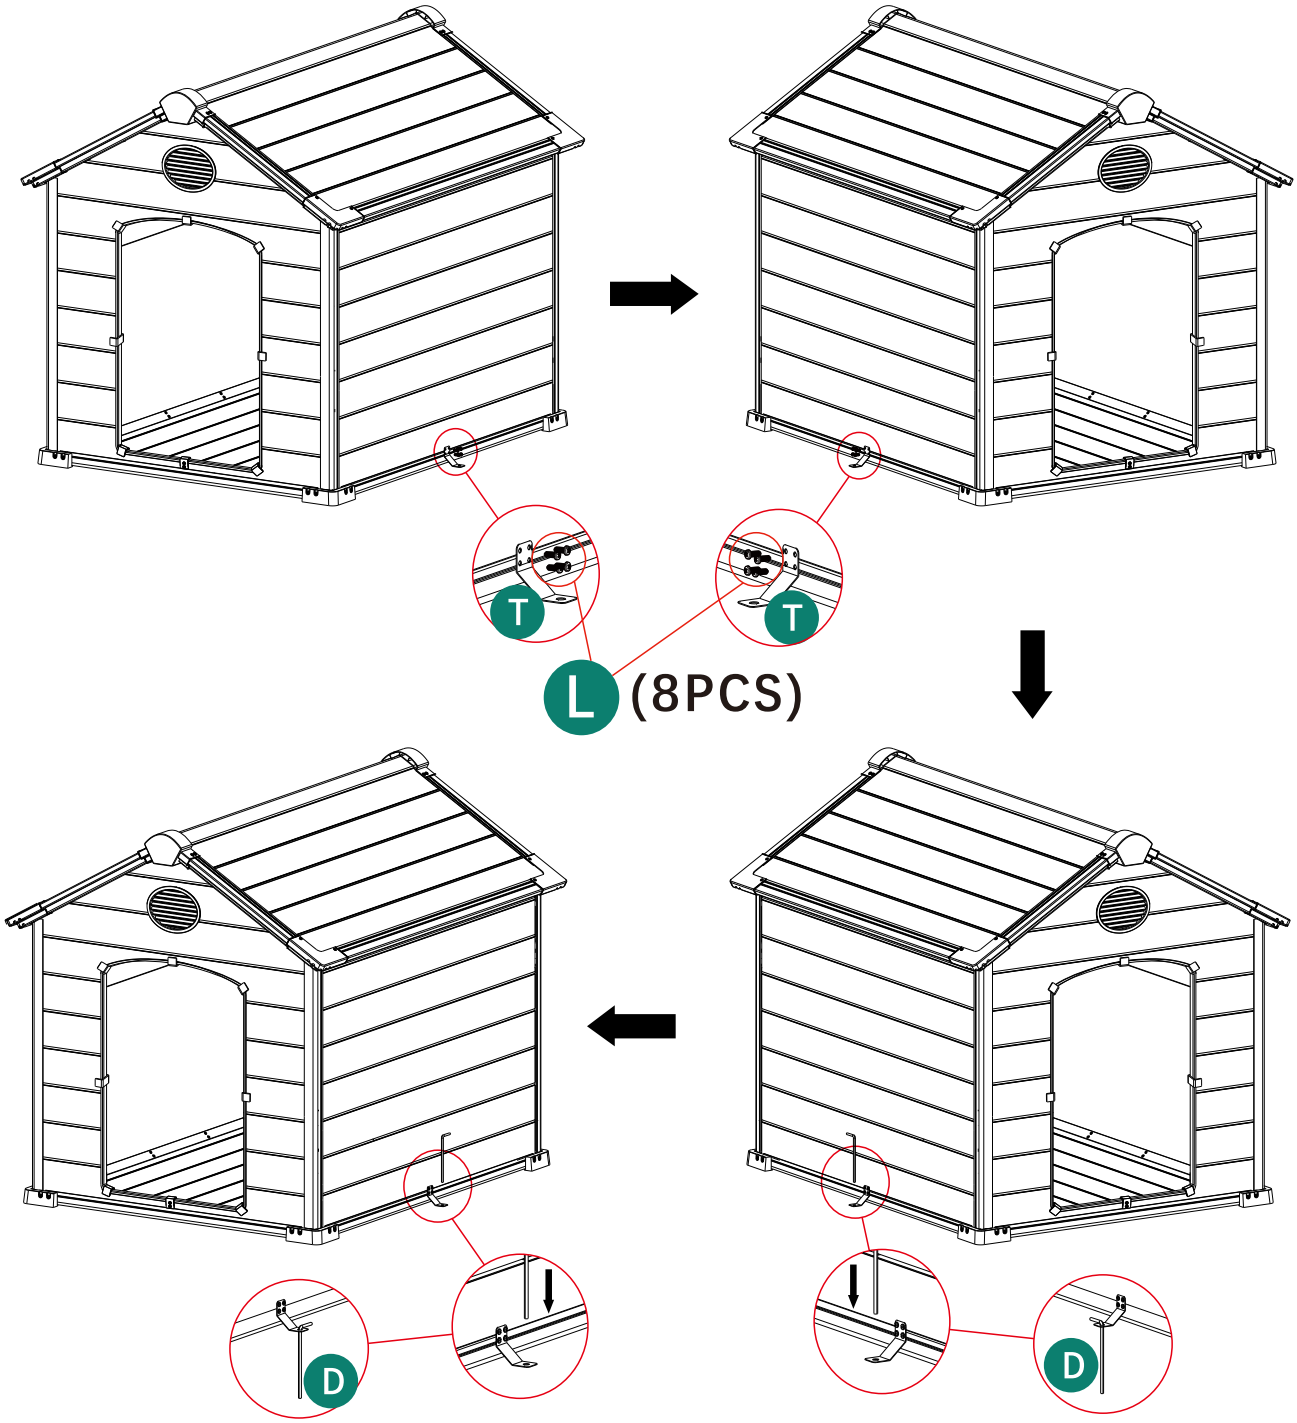

15

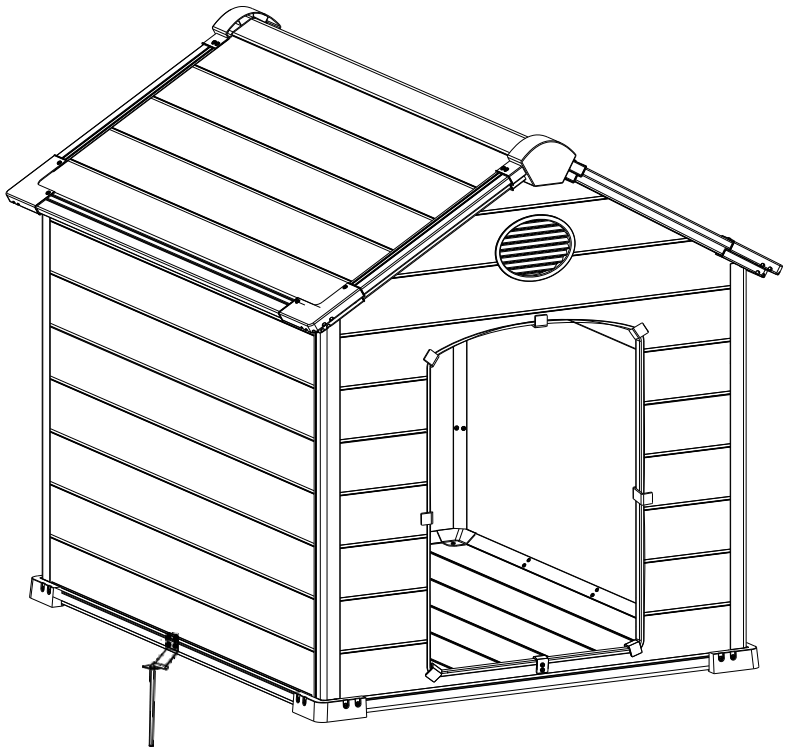

Assembly completed.