



Base Cabinet Assembly Instruction (Item:CVD12-3/CVD15-3)

Hard Ware List	1	8PCS	Ø4×25mm	5	40PCS	Ø4×12mm	6	10PCS		8	3SET		9	6PCS	10	3SET	11	12PCS						
	Flat head screw			Flat head screw			Corner brackets			Slide			prop			slide lock			Bumper					
																								
Cabinet Parts List	A	Frame			B	Side panels(2)			C	Bottom panel			D	Back panel			E	Toe kick			H	Drawer front(3)		
	I	Drawer front panel (3)			J	Drawer back panel (3)			K	Drawer side panel(6)			L	Drawer bottom panel (3)										
	O	panel beam(2)																						


Step1:

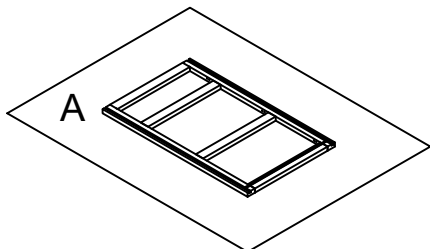


Step2:

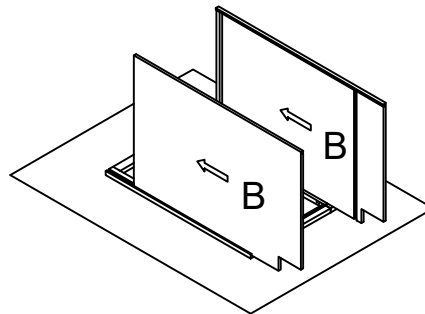


Step3:

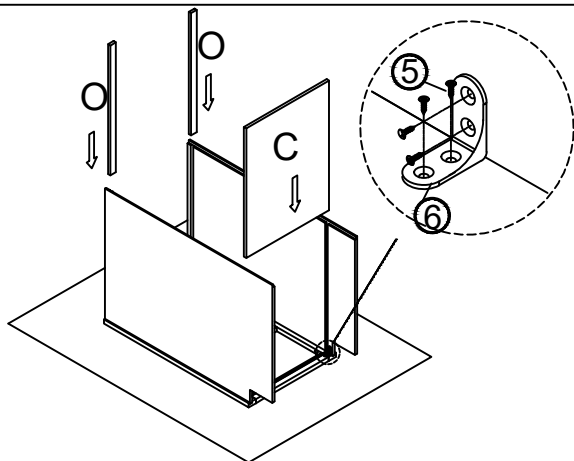


Step4:

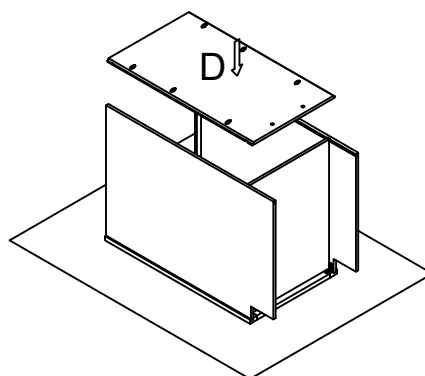


Step5:

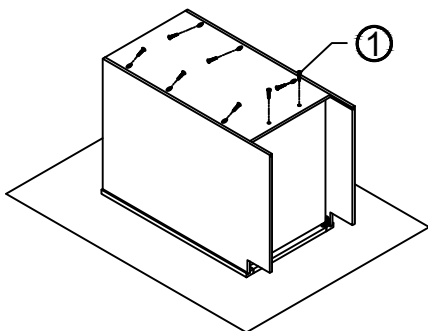


Step6:

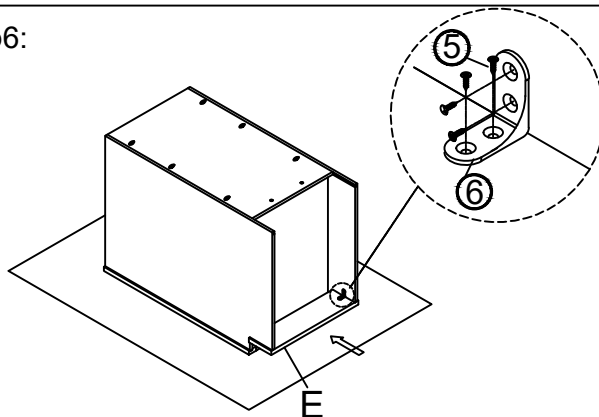

Step7:

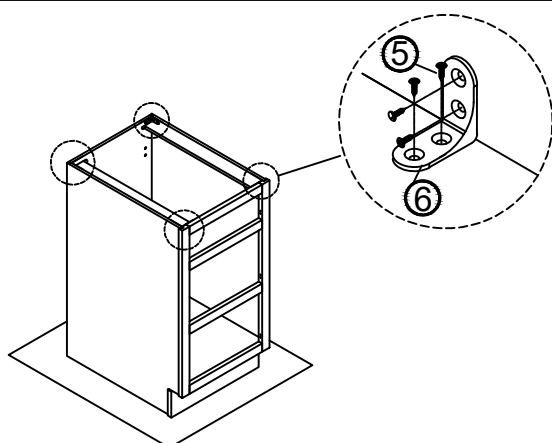


Step8:

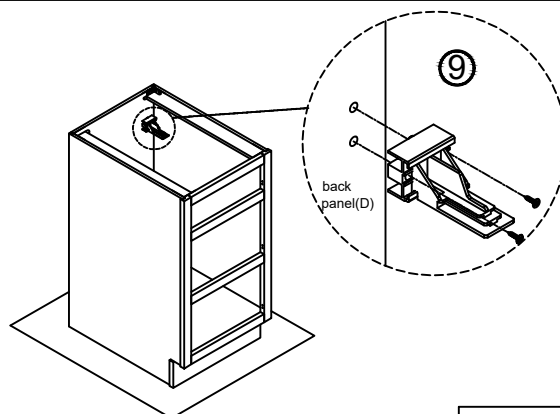


Base Cabinet Assembly Instruction (Item:CVD12-3/CVD15-3)

Hard Ware List	1	20PCS	Ø4×25mm	5	40PCS	Ø4×12mm	6	10PCS		8	3SET		9	6PCS	10	3SET	11	12PCS						
	Flat head screw			Flat head screw			Corner brackets			Slide			prop			slide lock			Bumper					
																								
Cabinet Parts List	A	Frame			B	Side panels(2)			C	Bottom panel			D	Back panel			E	Toe kick			H	Drawer front(3)		
	I	Drawer front panel (3)			J	Drawer back panel (3)			K	Drawer side panel(6)			L	Drawer bottom panel (3)										
	O	panel beam(2)																						
Step10:																								


Step9:

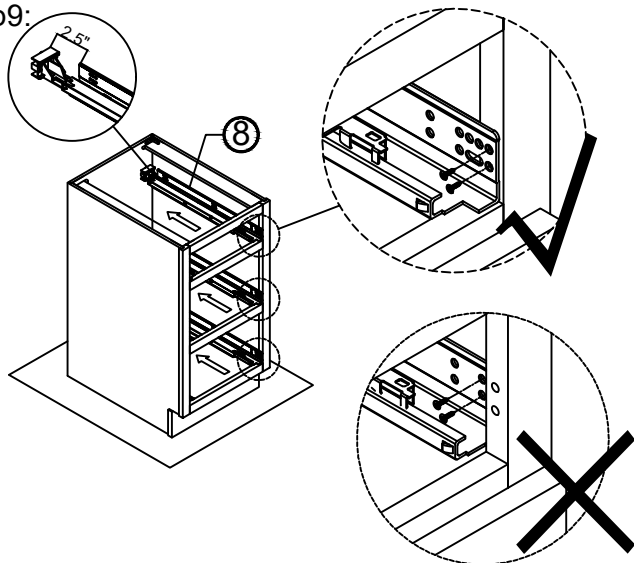


Step10:

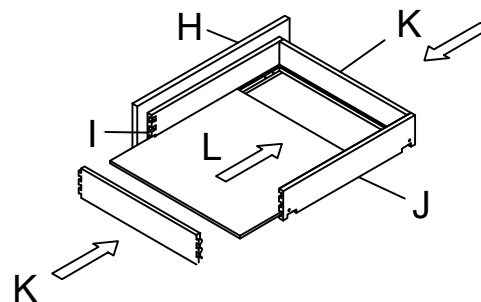

Step11:

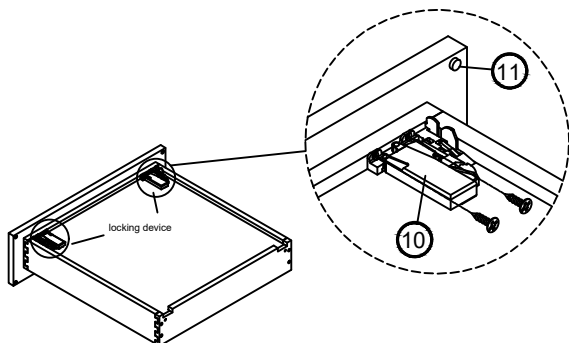

Step12:

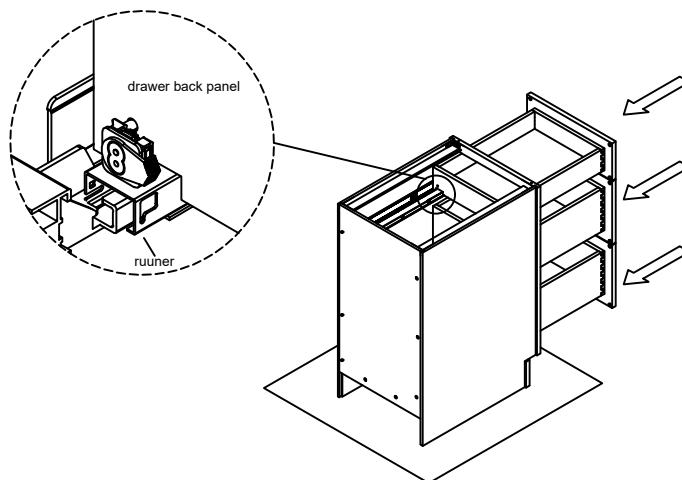

Step13:

