




Product Installation Instructions

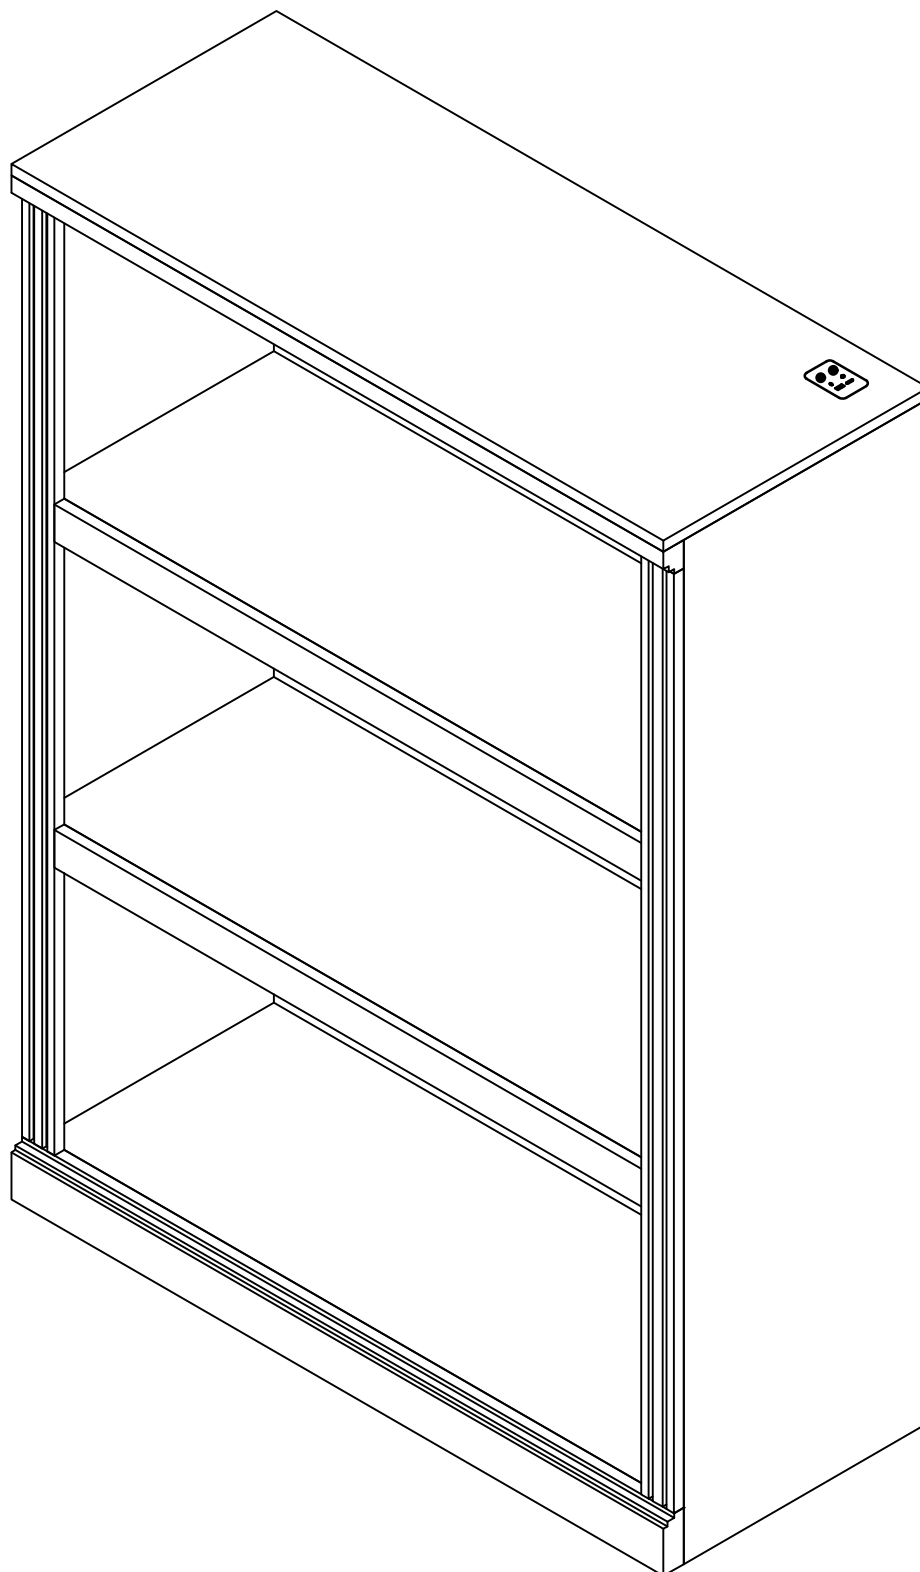


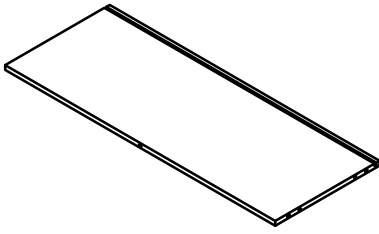


1x1

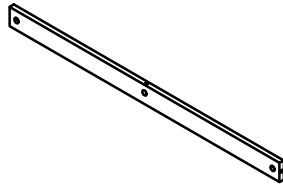


2x1

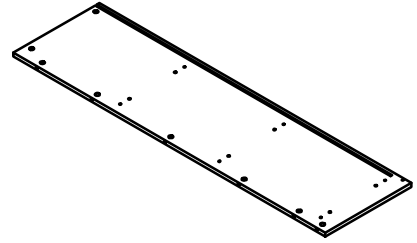

3x1

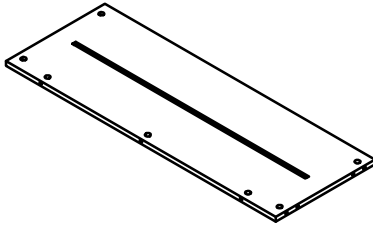


4x2

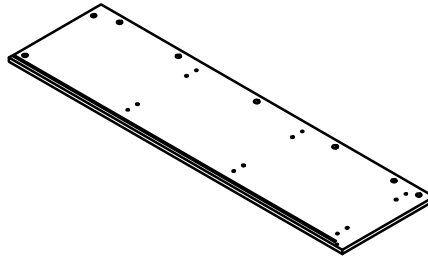


5x1




6x1

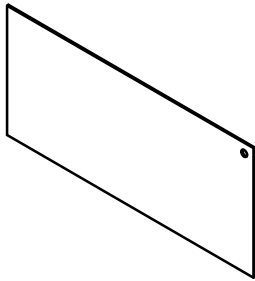


7x3

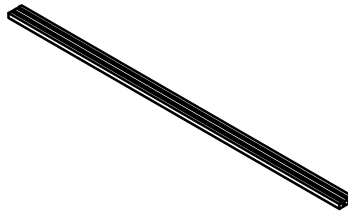


8x2

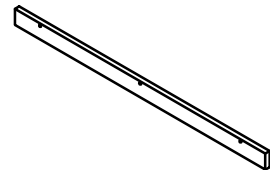

9x2





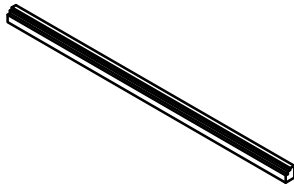



10x1

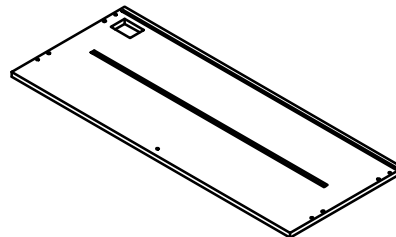


11x1

Accessories list

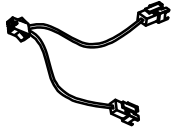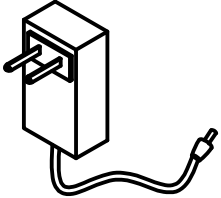A		Two In One Screw (6x28mm)	39pcs +4pcs
B		Two In One Nut (10x12mm)	39pcs +4pcs
C		Wood Chipping (6x30mm)	16pcs +2pcs
D		Fixing clip & screw (3x16mm)	10pcs +2pcs
E		Foot nail	4pcs +2pcs
F		1 bis 2 power extension cable	1pcs
G		Anti inverted right angle grommet Screw(3.5x14mm)	2pcs
		Screw(4*45mm) grommet Countersunk head tapping	2pcs
		AC/DC Adapter (12V = 2.0A)	1pcs




1pcs

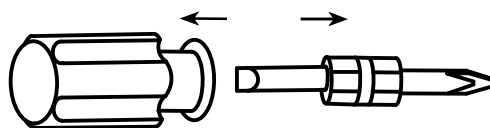


Double-head screwdriver, use as required

Product structure decomposition

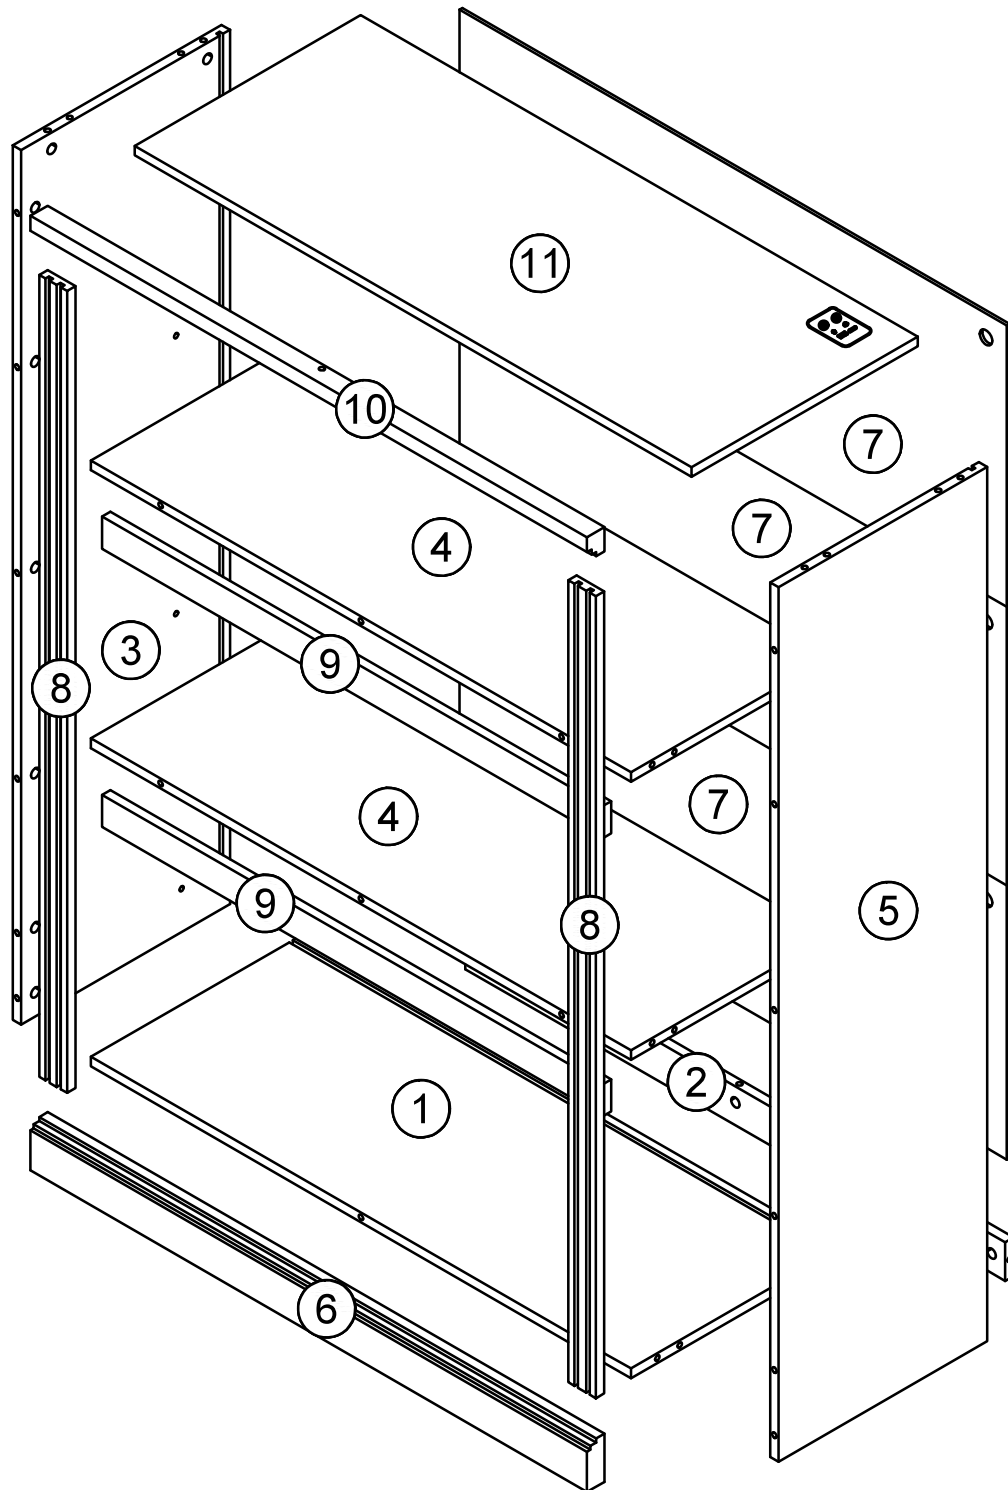


Screw installation method




Step1

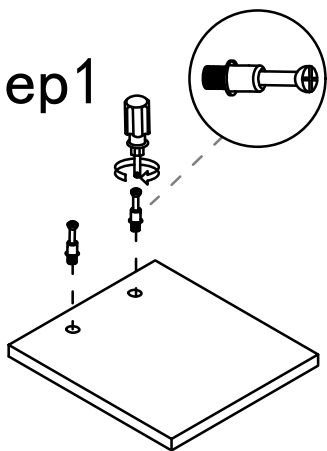

Step2


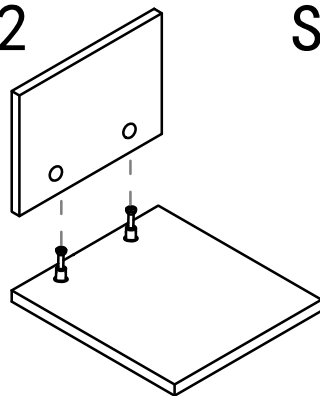


Step3

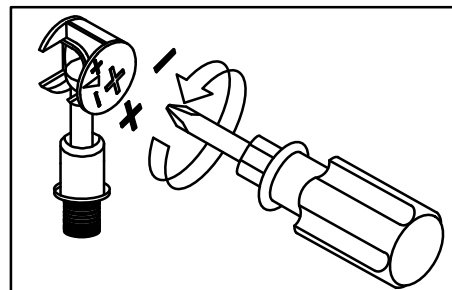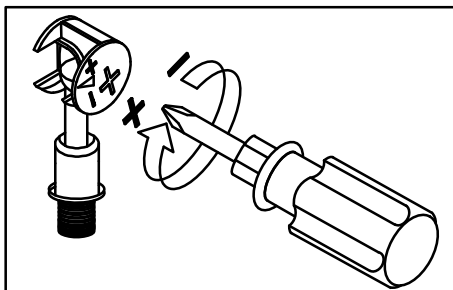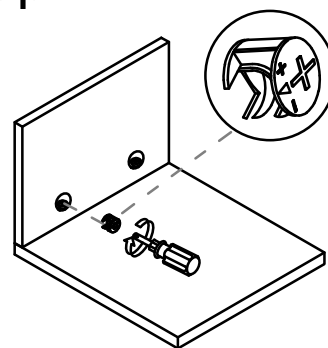

Use a screwdriver to lock in the direction of of "-" sign Disassemble along the direction the "+" sign.

Step 1

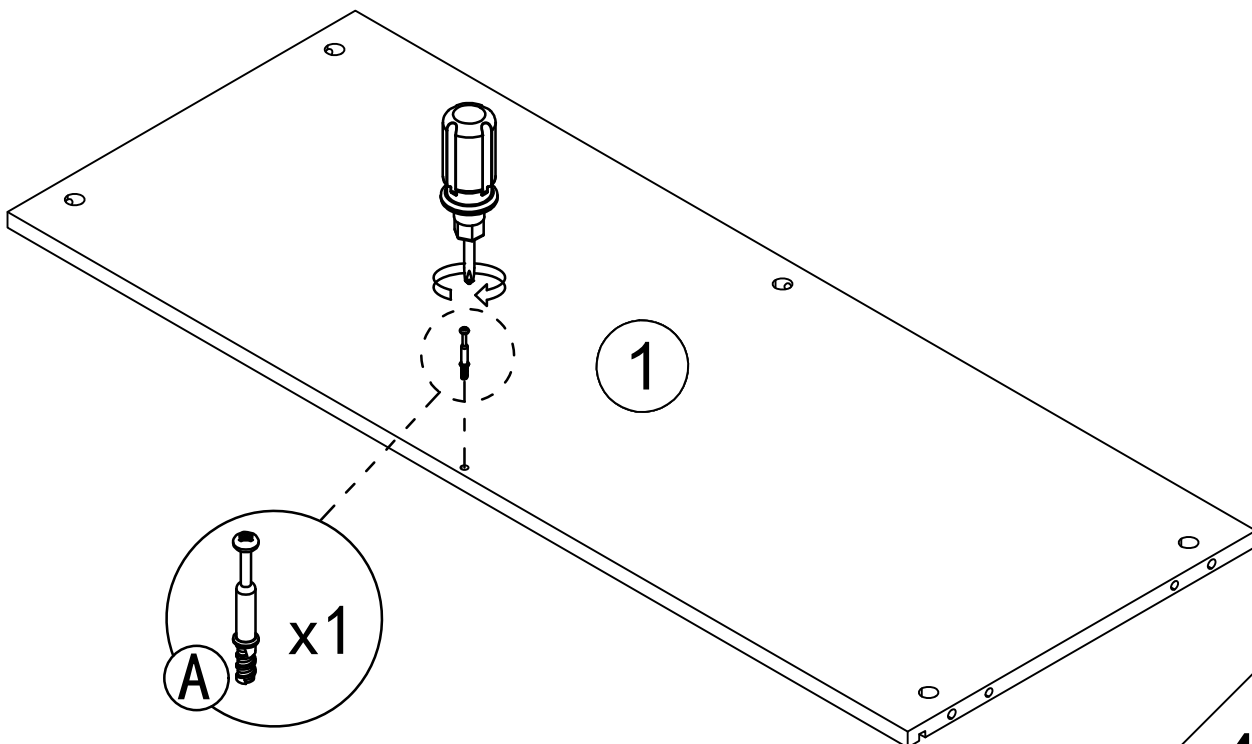
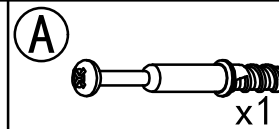


4


Step 2


B  x1

B  x1

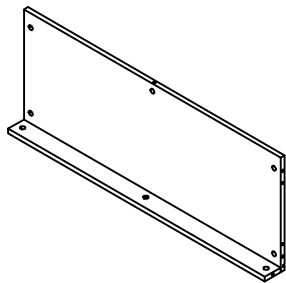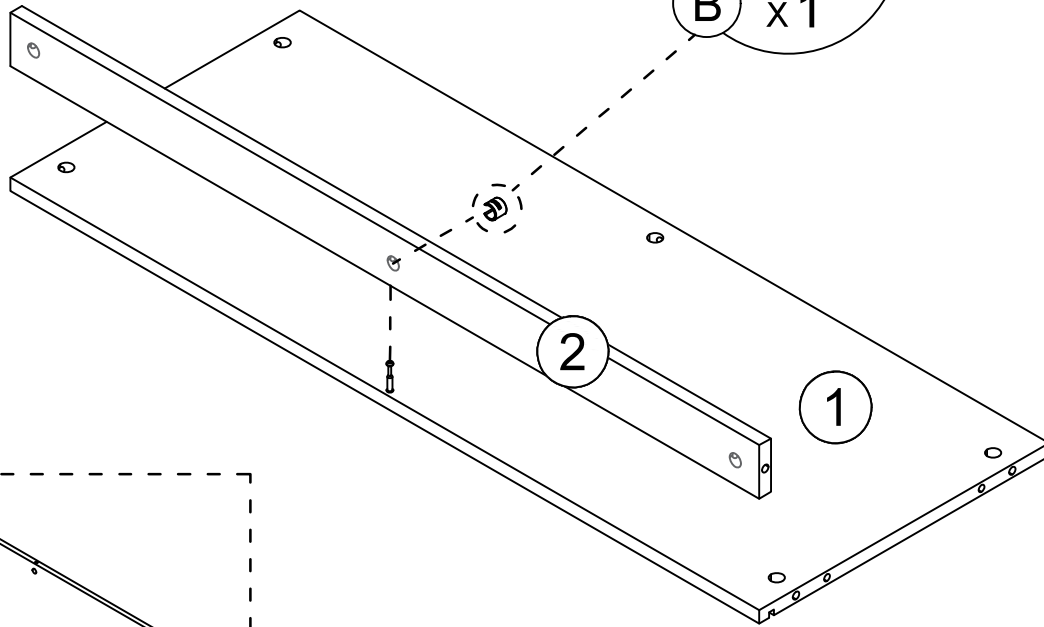


Step 3

A  x7

C  x6


A  x7

C  x6

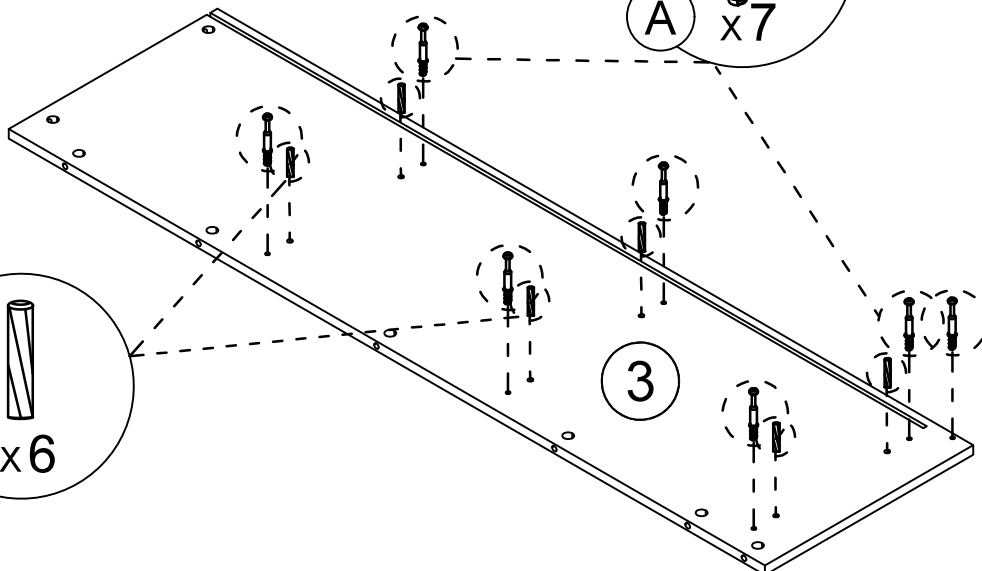


Step 4

(B)  x3


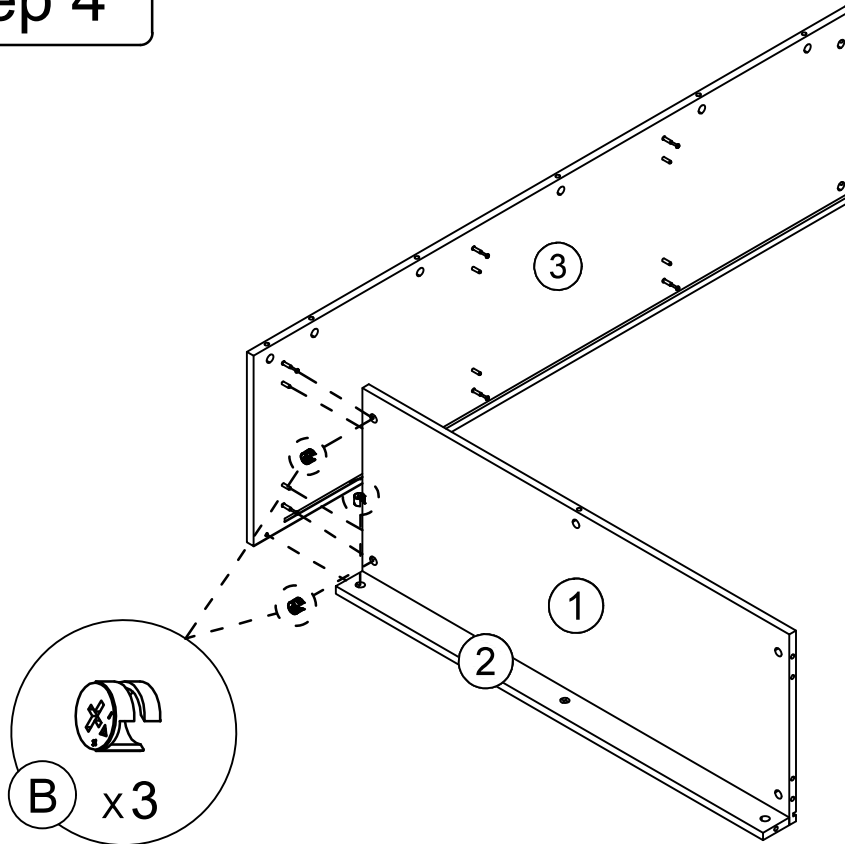


Step 5


(B)  x4

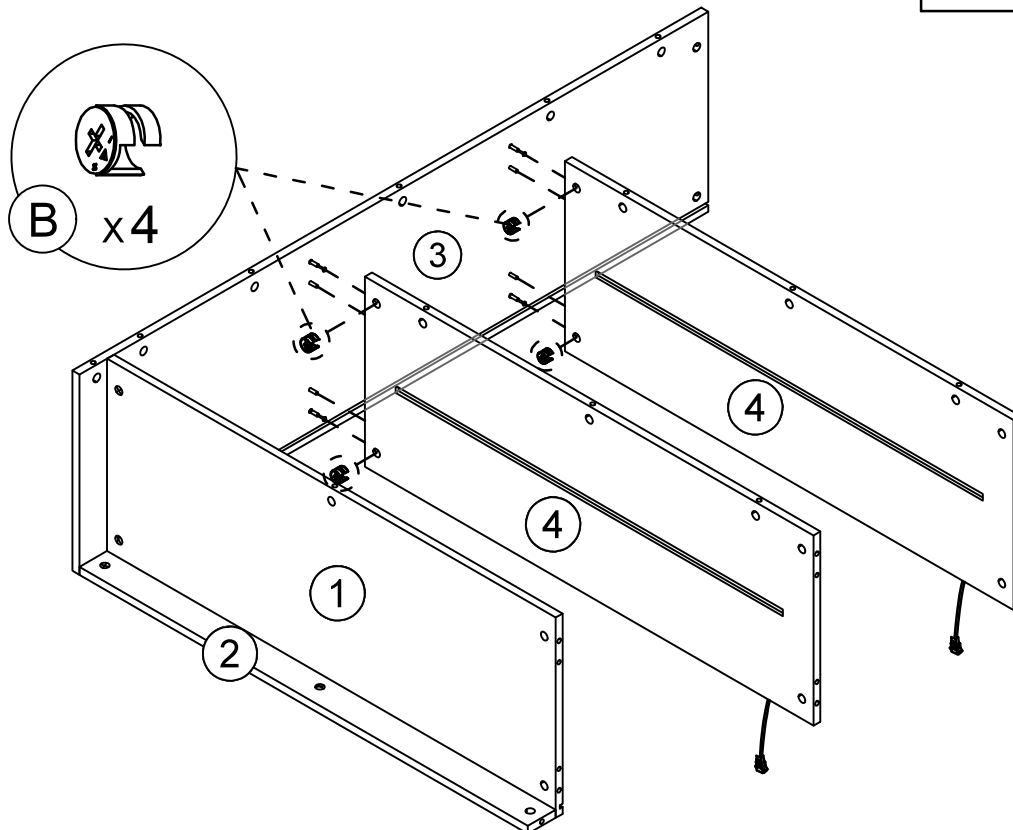



Step 6

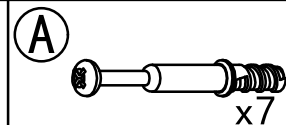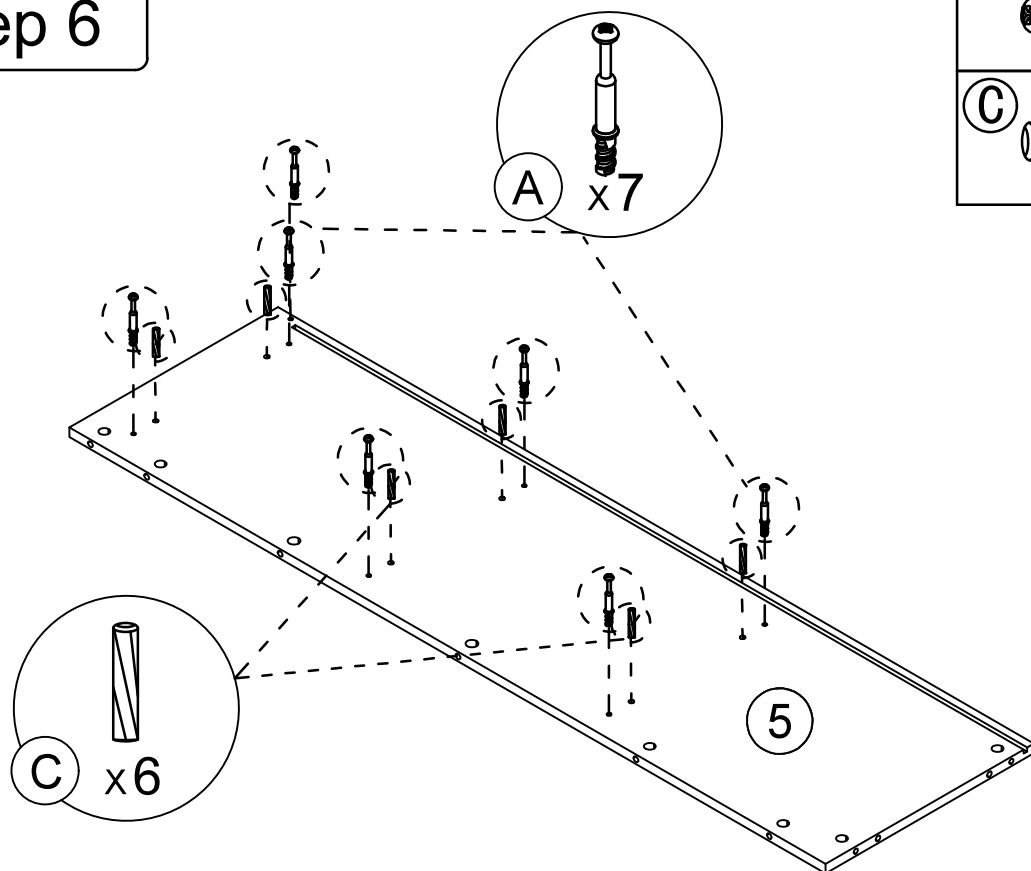



Step 7

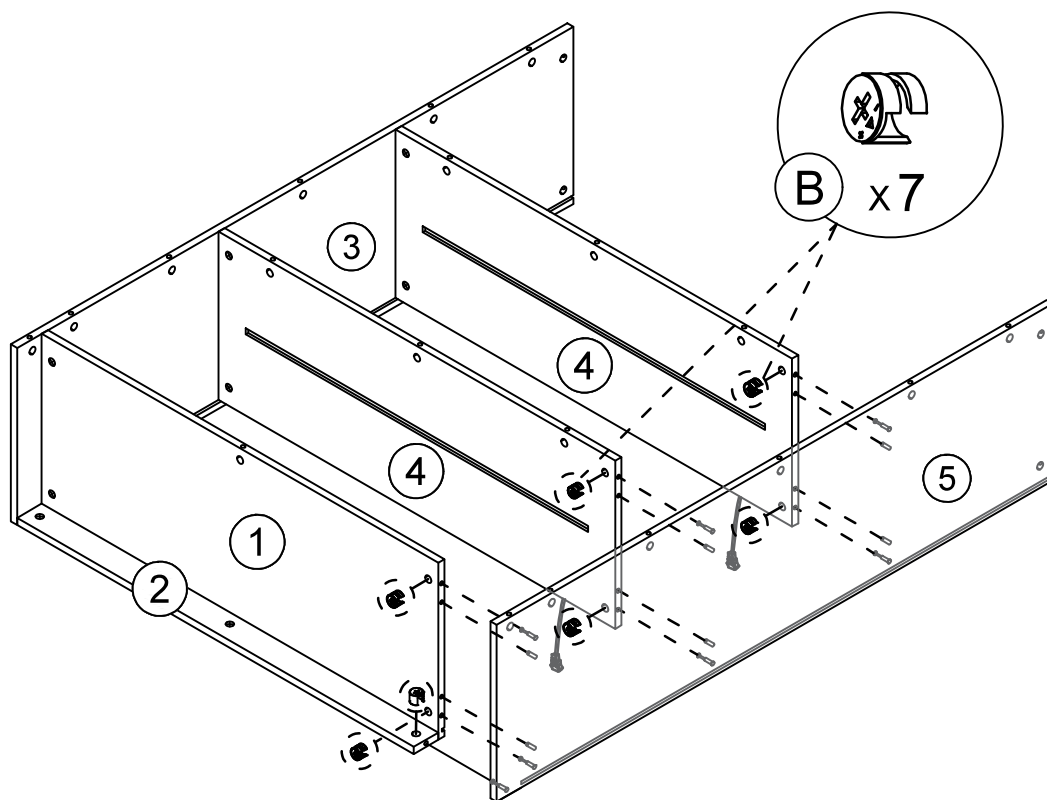


Step 8

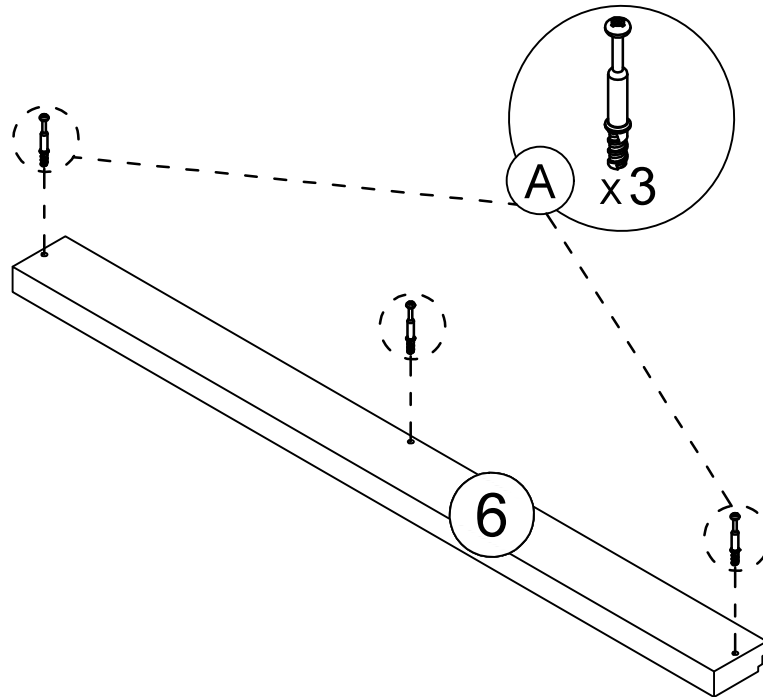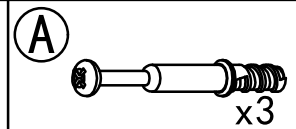



Step 9

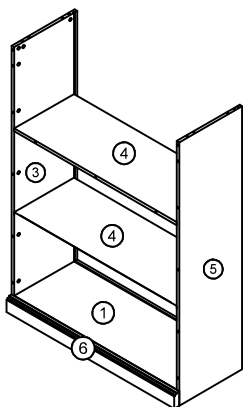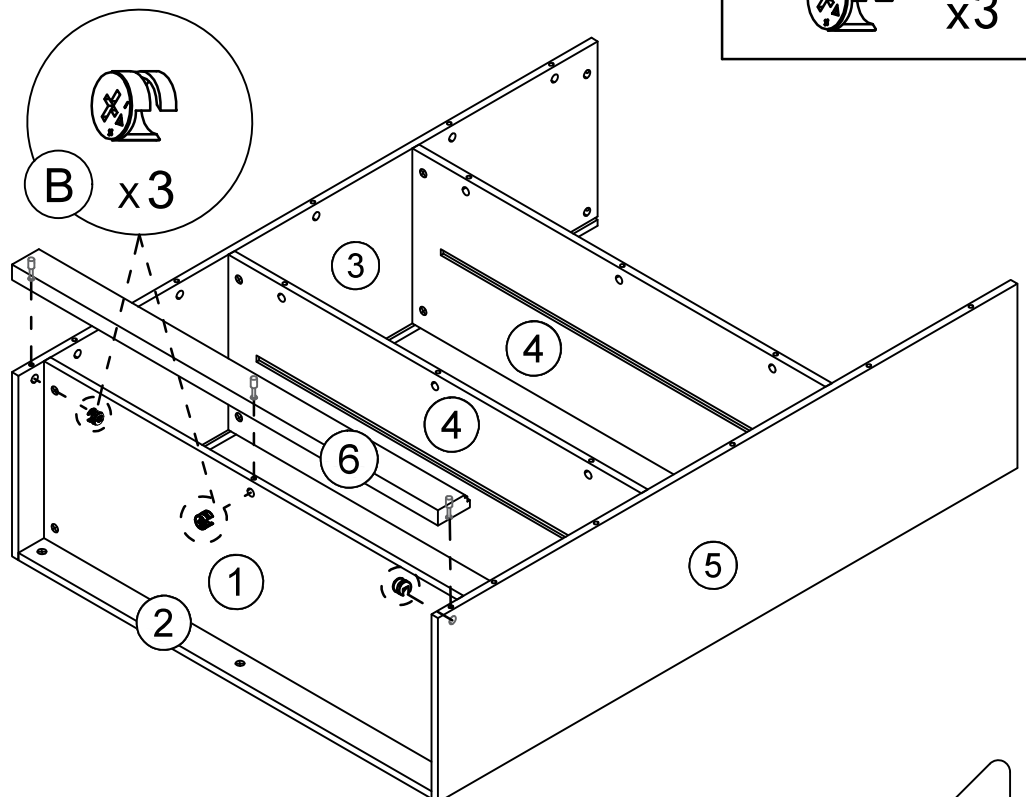

Step 10

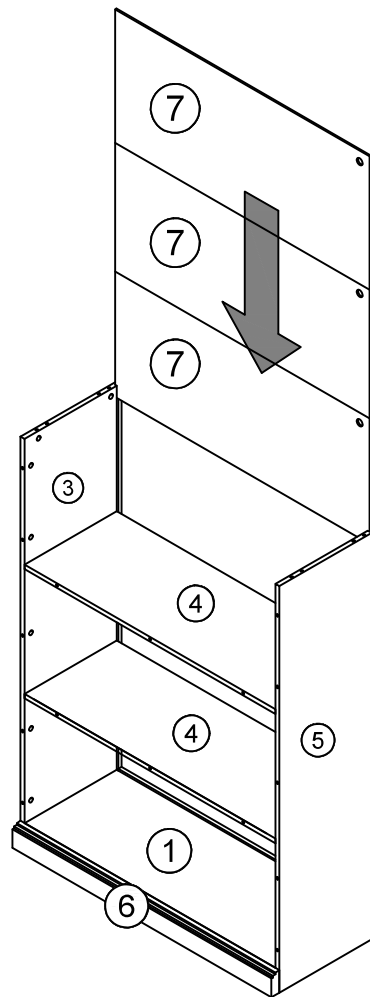


Step 11

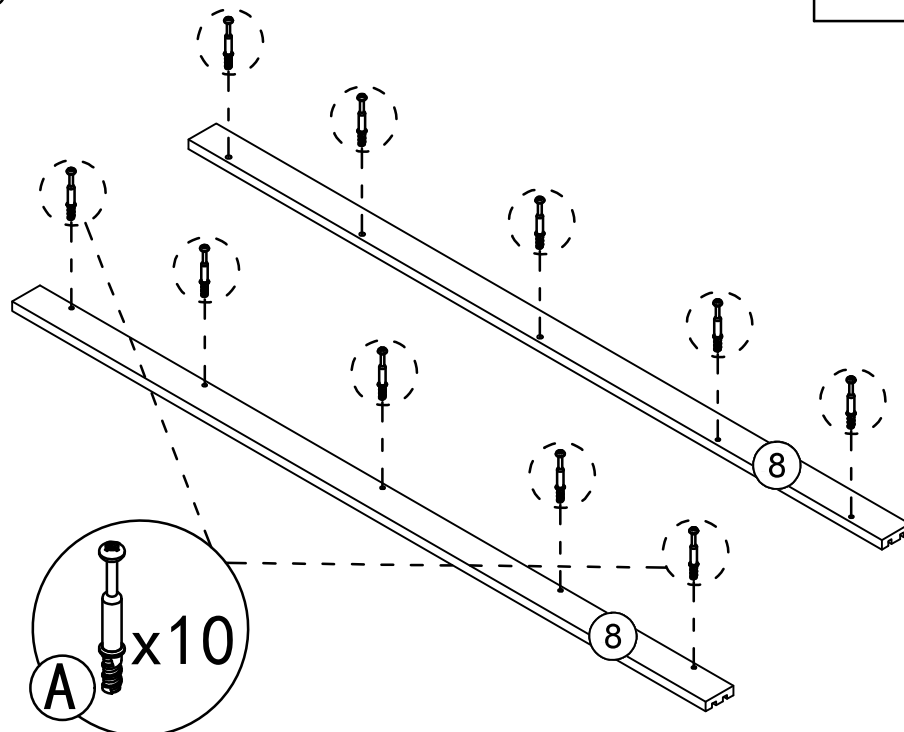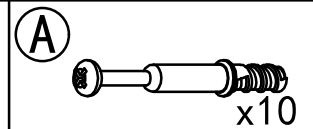



Step 12

(B)  x10


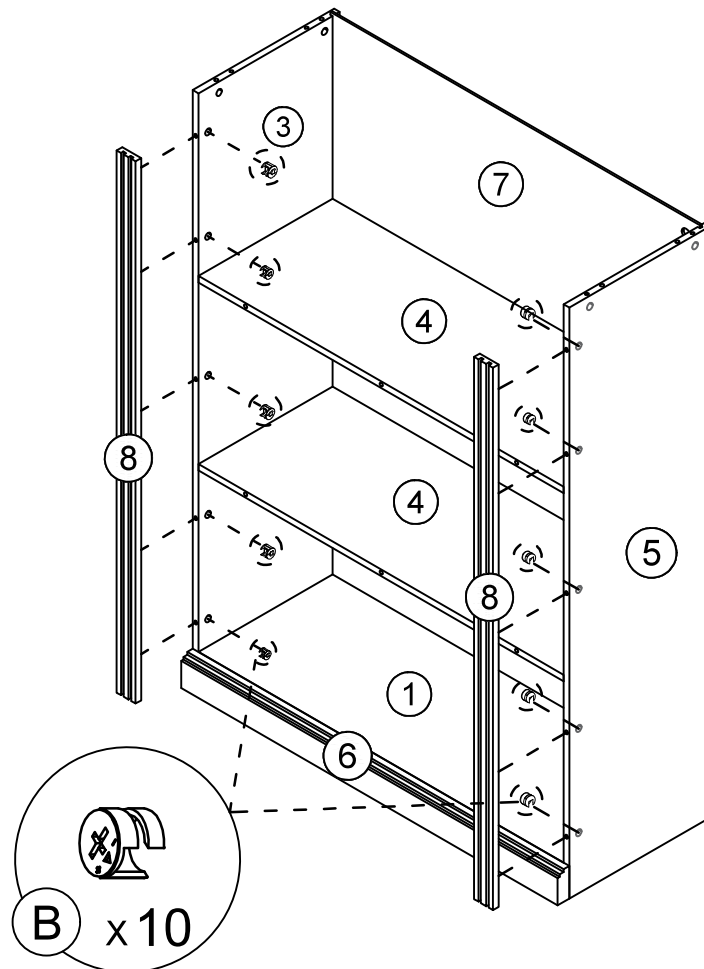


Step 13



(A)  x6

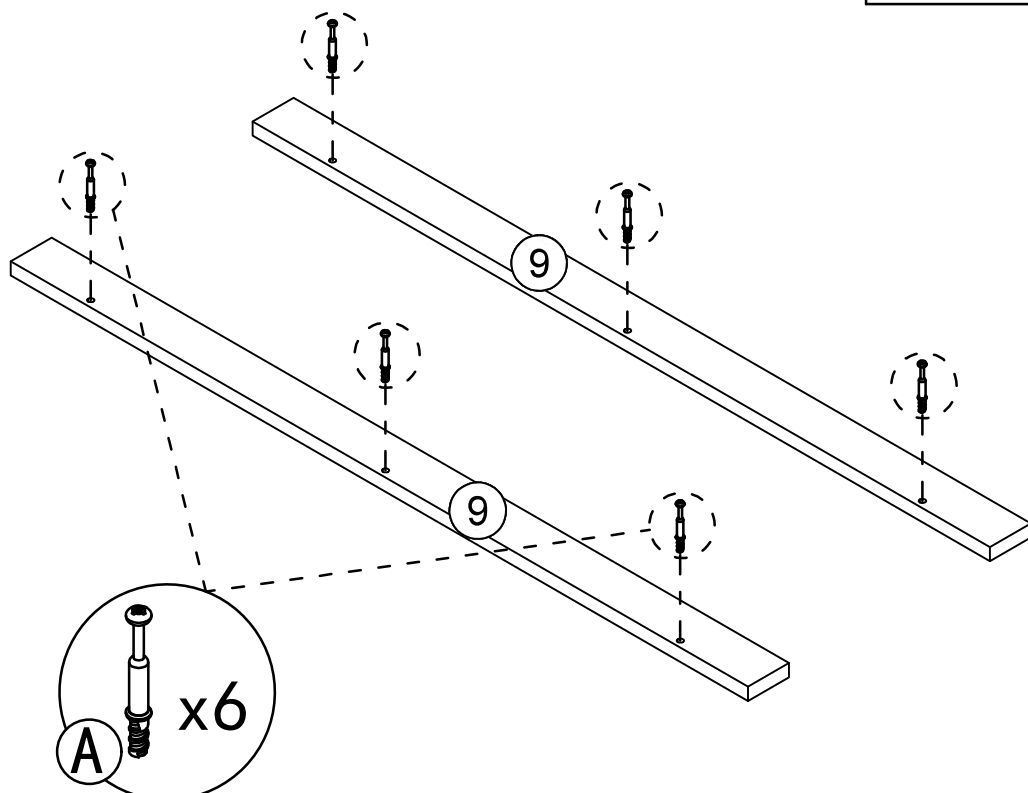

Step 14

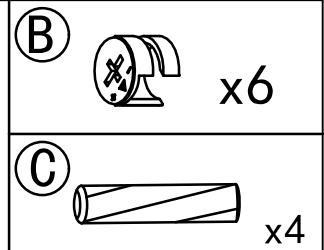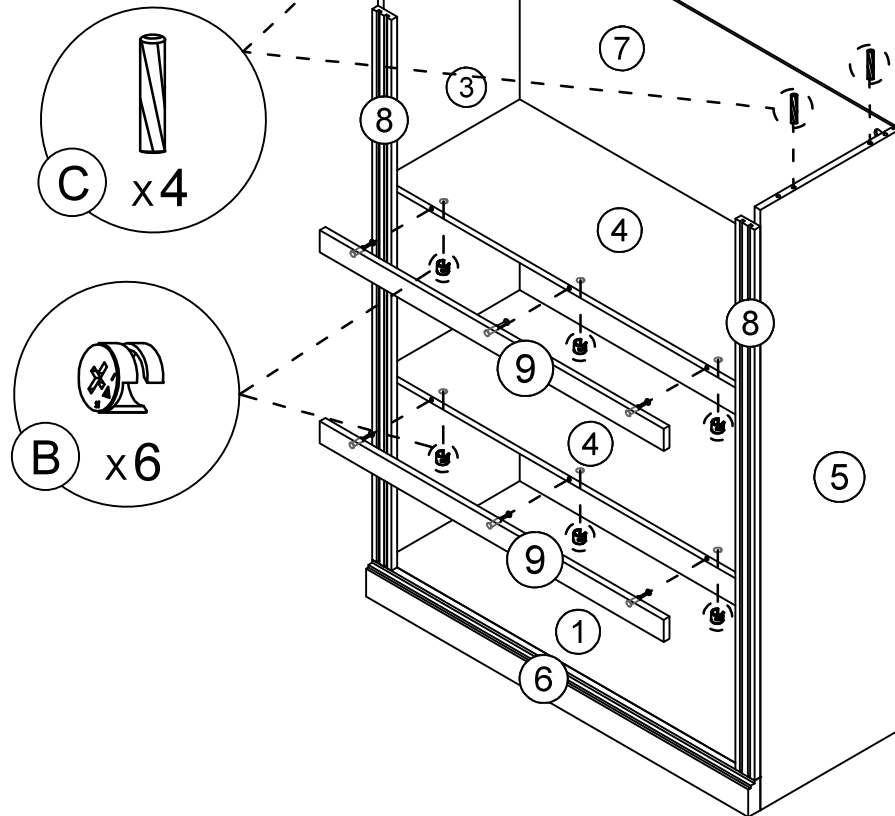


Step 15

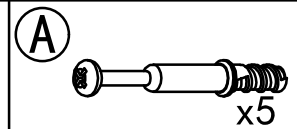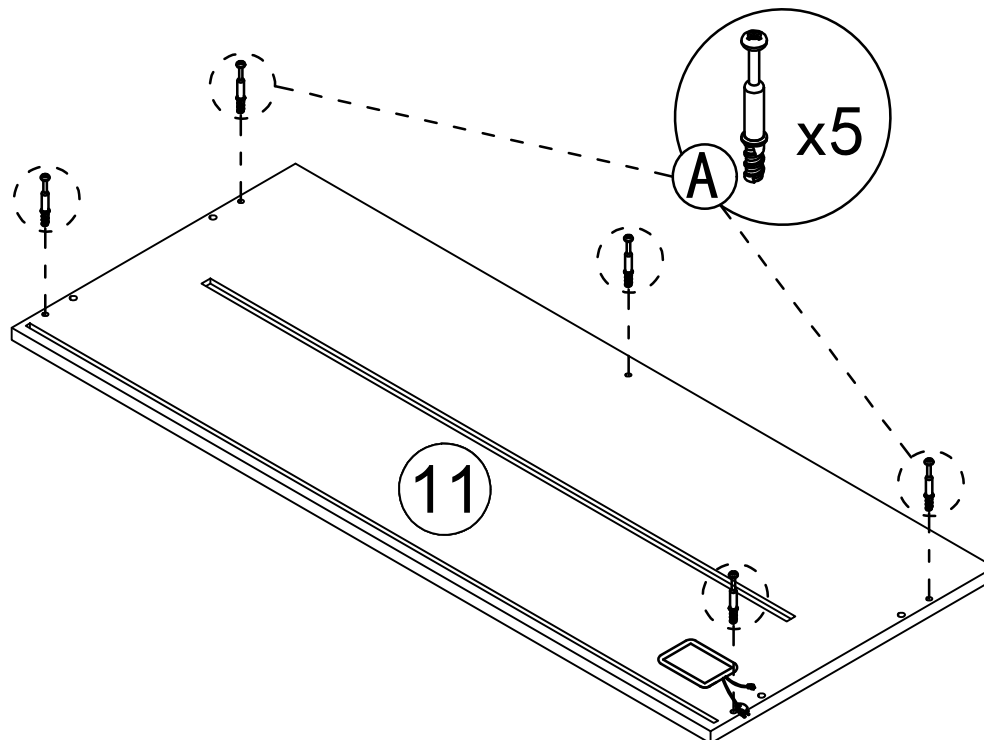


Step 16

(B)  x1

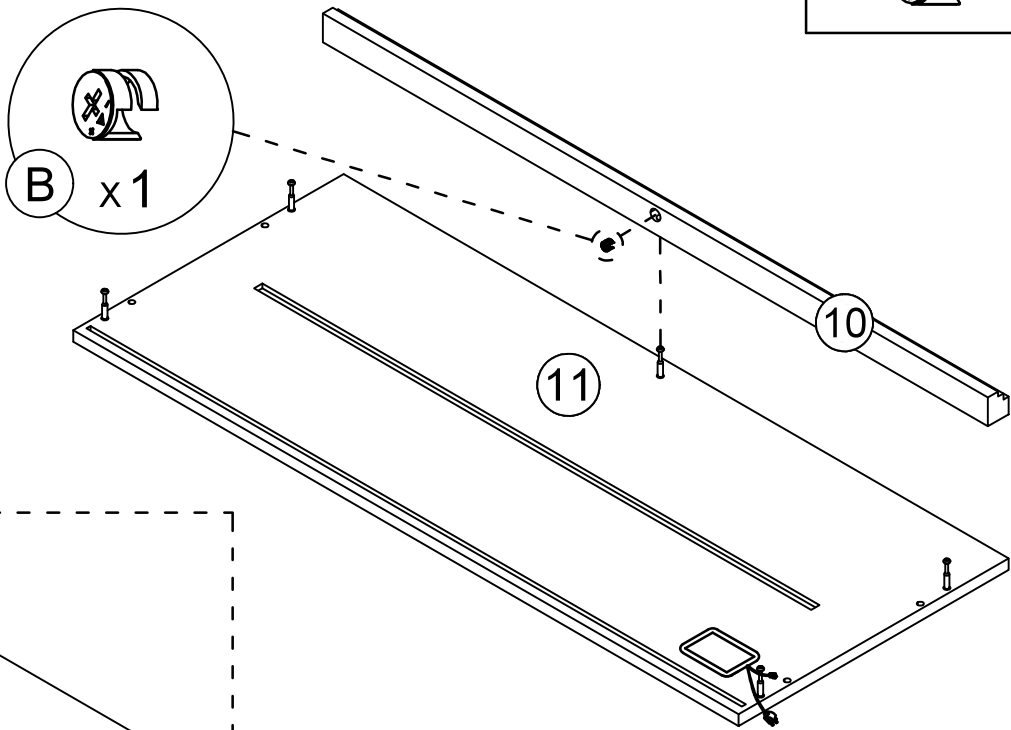



Step 17

(B)  x4


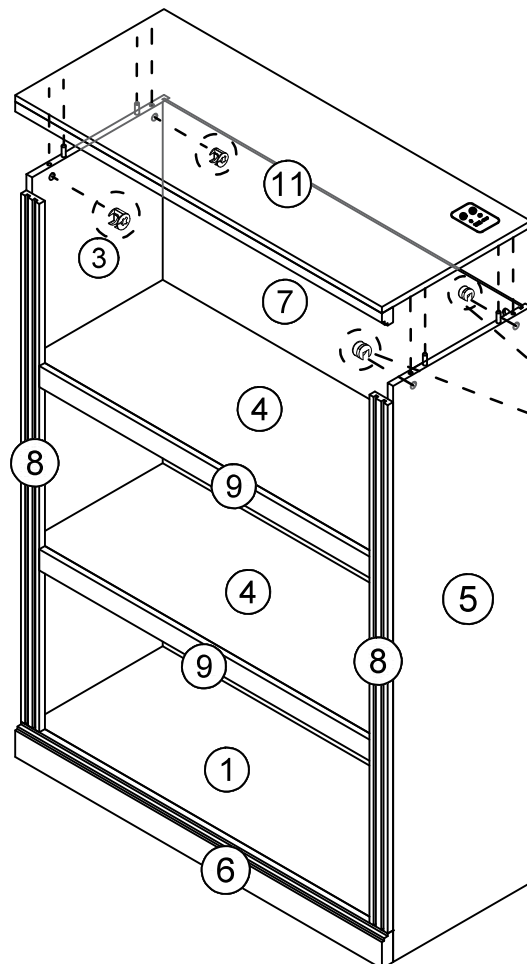


(B)  x4

Step 18


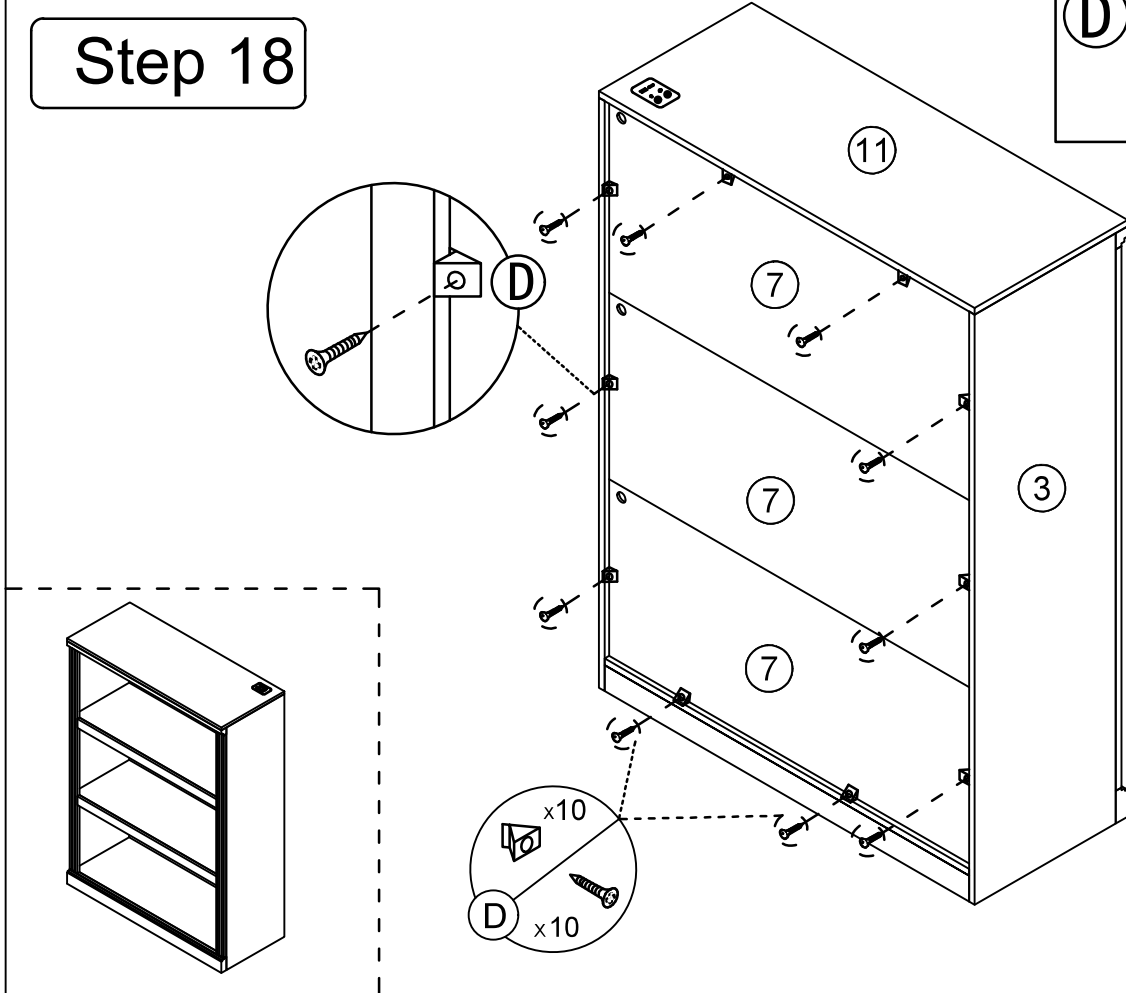
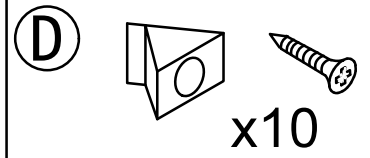


Step 19

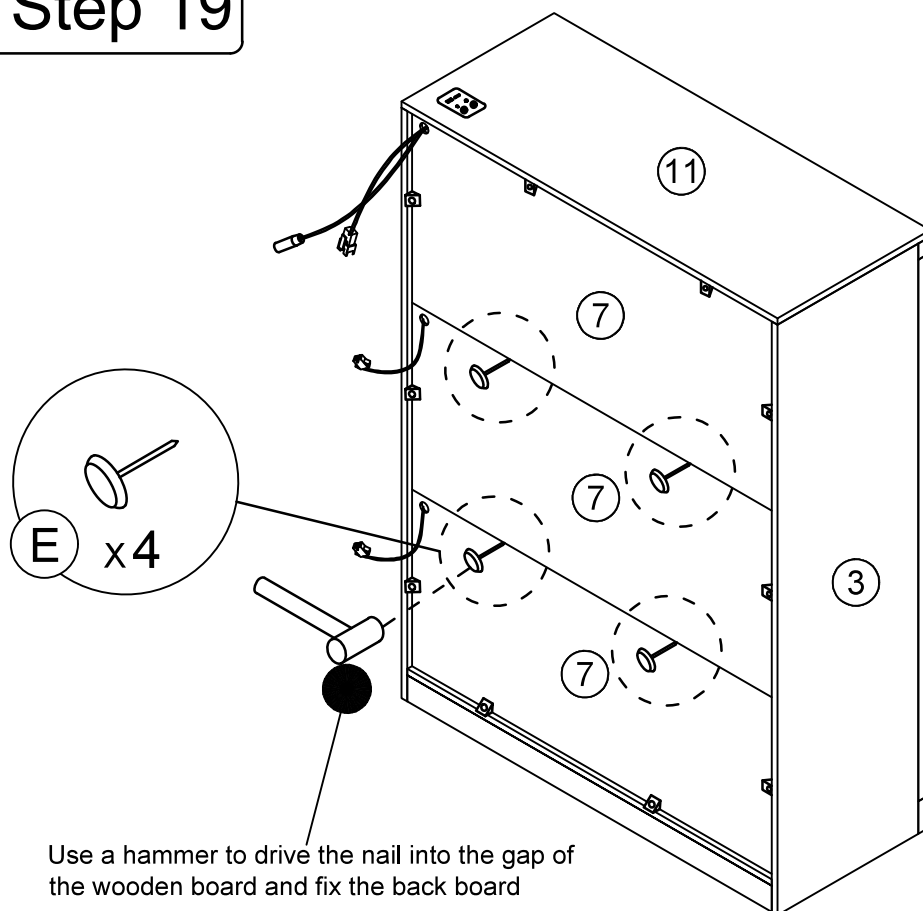
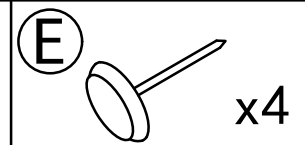


Use a hammer to drive the nail into the gap of the wooden board and fix the back board

Step 20

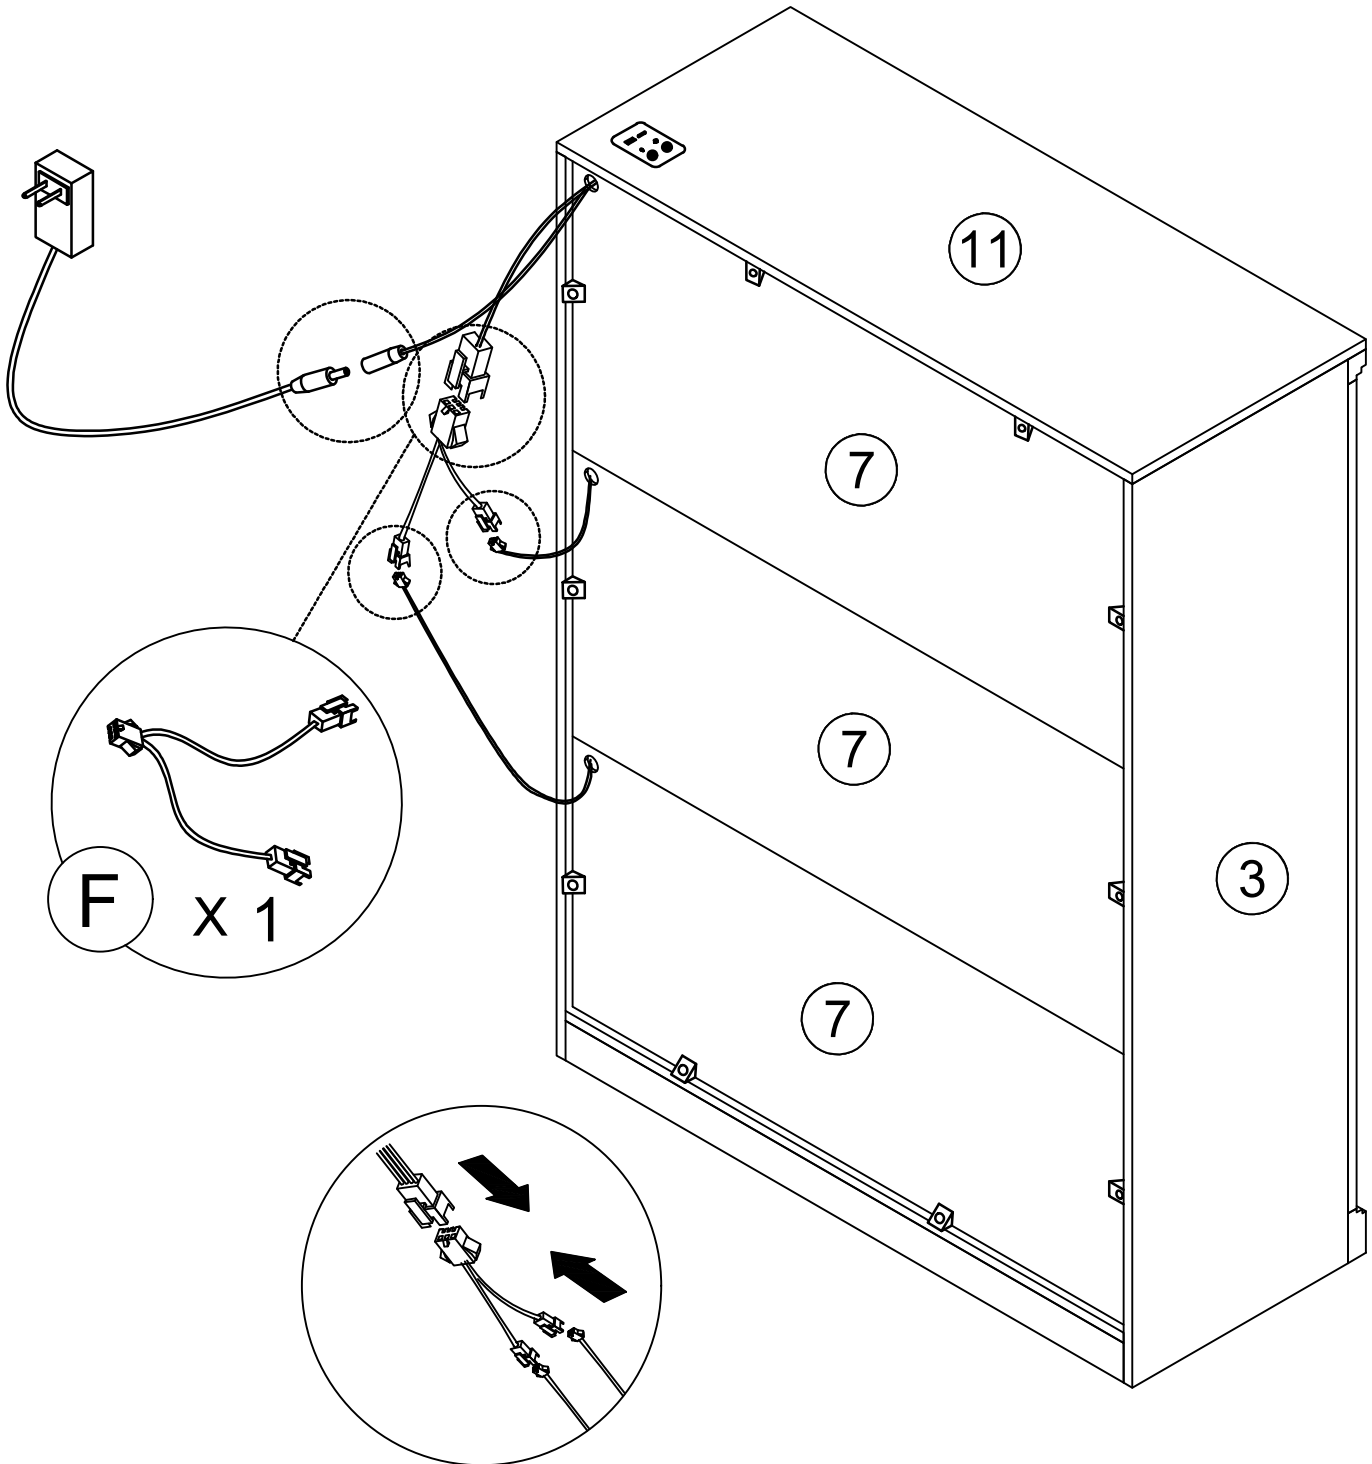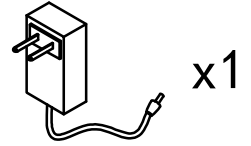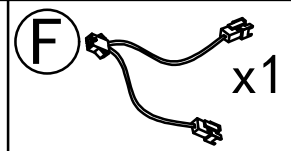

Step 21

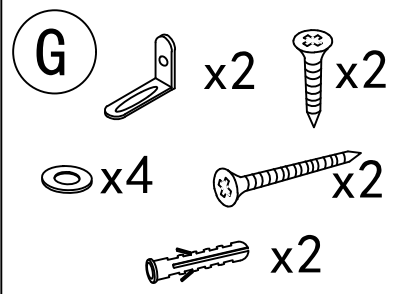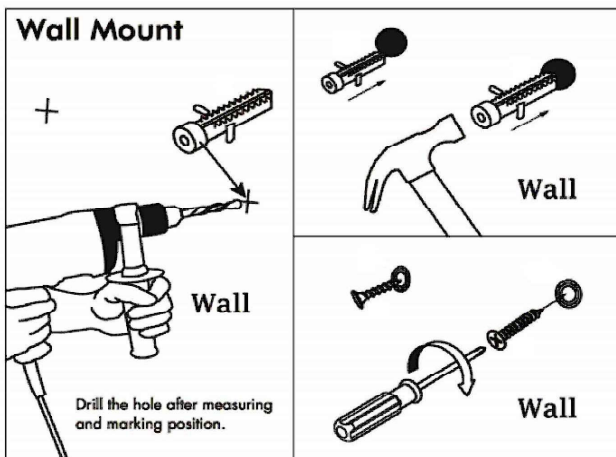

wall

