
## ASSEMBLY INSTRUCTION

## ITEM# CVNZAM011

Take all parts out of box, be careful not to twist the cord. Put them on a flat ground, following below steps for assembly. Don't insert any plug into outlet before completion.

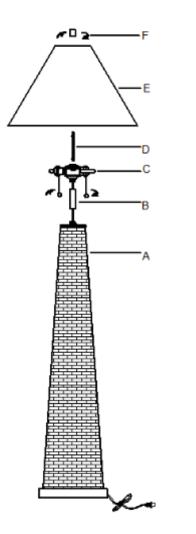

1.Fasten The Lamp body A Into The Base. Becareful not to Twist The Power Cord.

2.Put The Lamp Body B Into The Lamp A.

3.Put The Lamp Body C Into The Lamp B.

4.Put The Lamp Body D Into The Lamp C.

5. Place The Shade E Onto The Pipe D And Tighten The Finial F.