


## Assembly instructions





# Modena Solid wood bed

## 200x90x80 cm

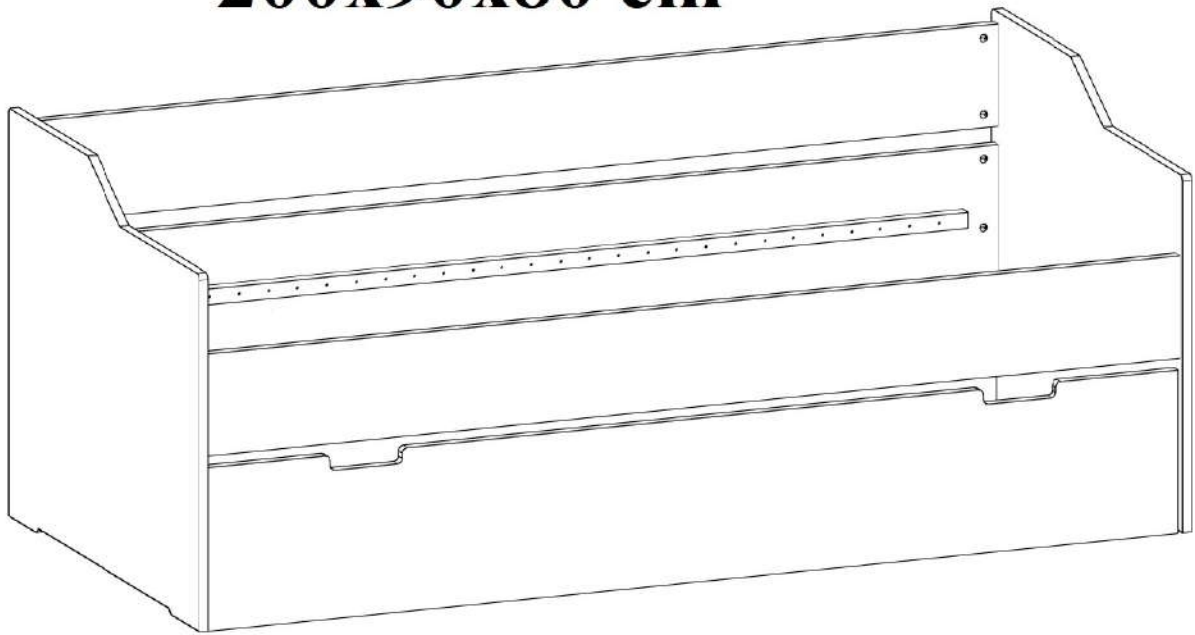

### Screw set:

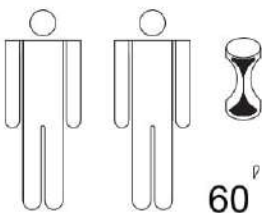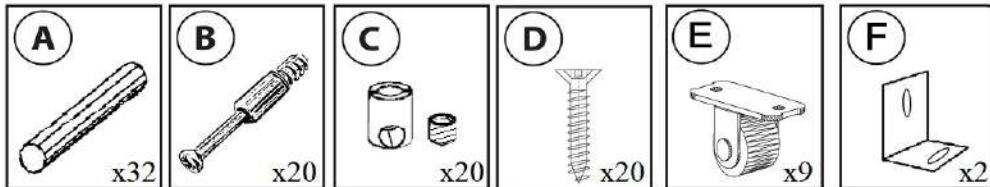


60'

Please do not use an electric screwdriver!



Required assembly tools included in the scope of delivery

A

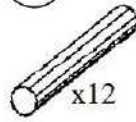


B



1




x2

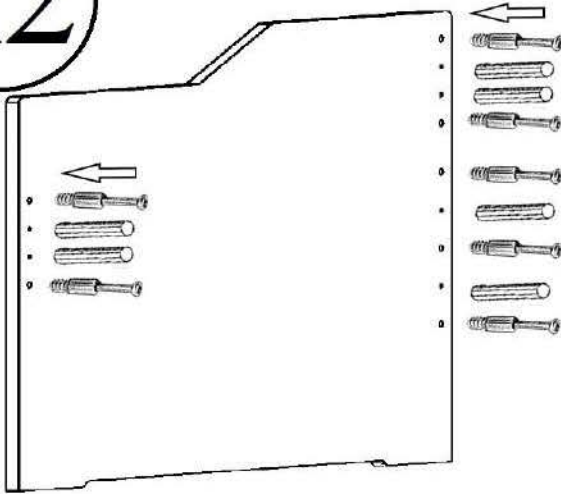

C



2

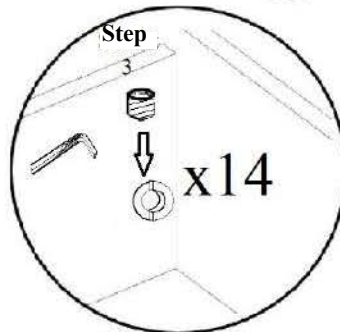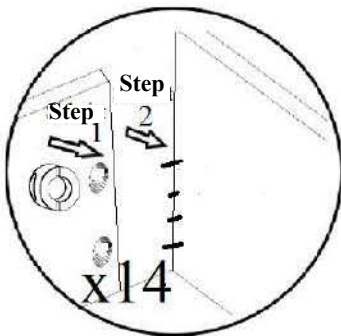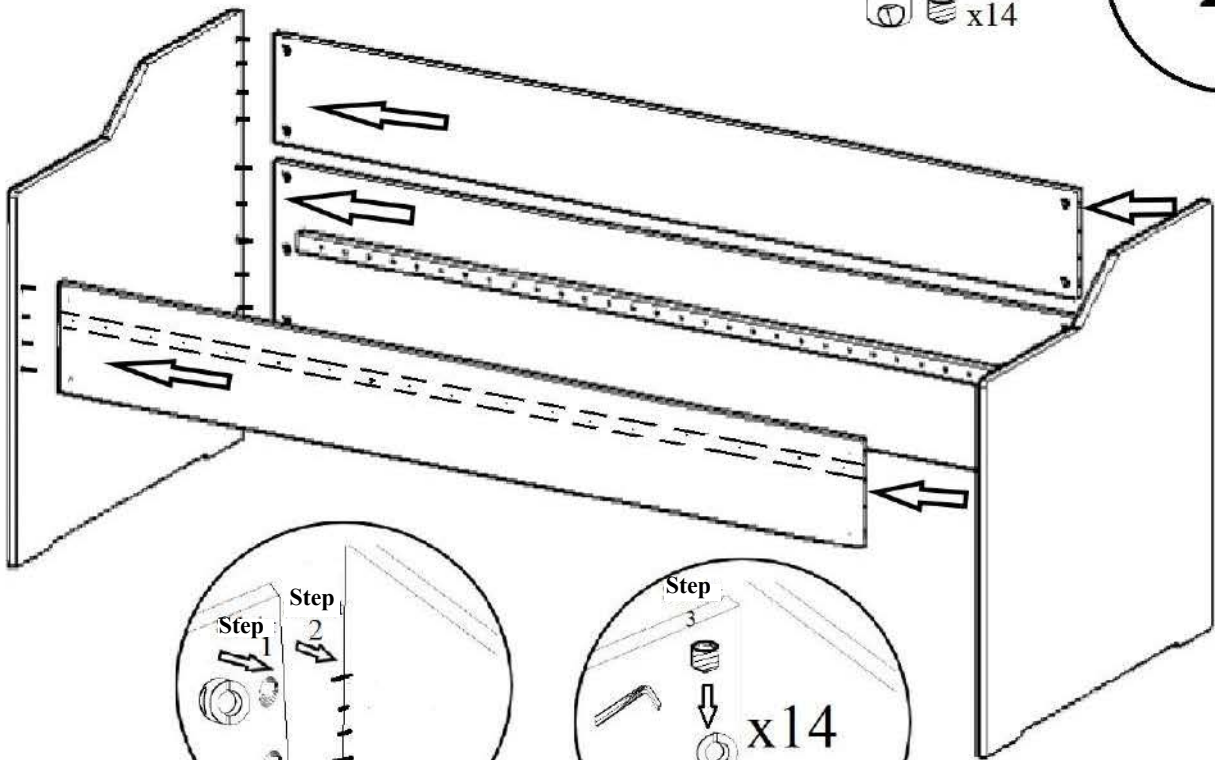



A



B






3

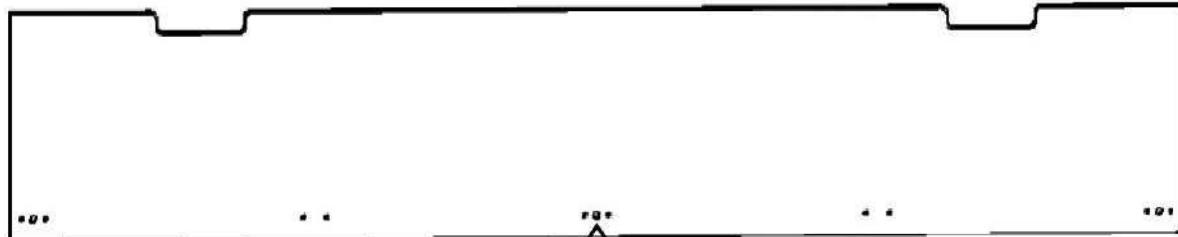


C



4

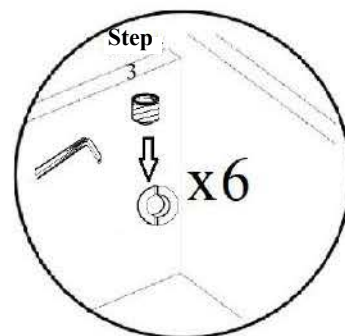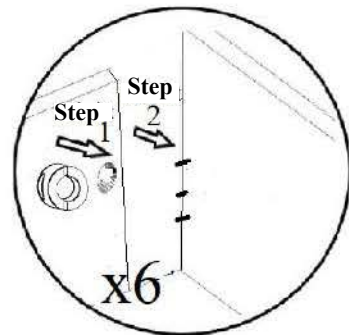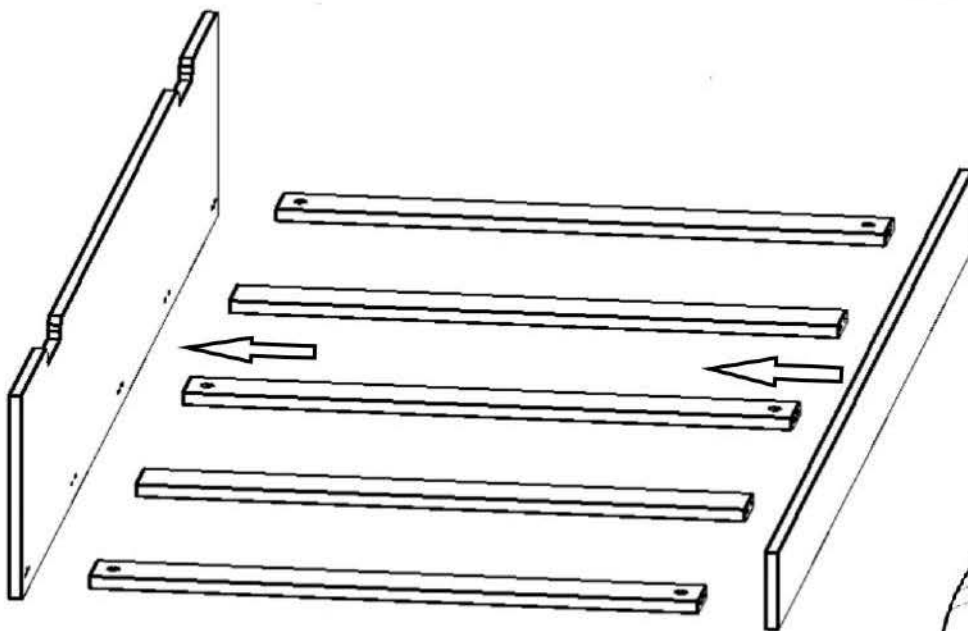

(E)




x9

(D)




x18

5

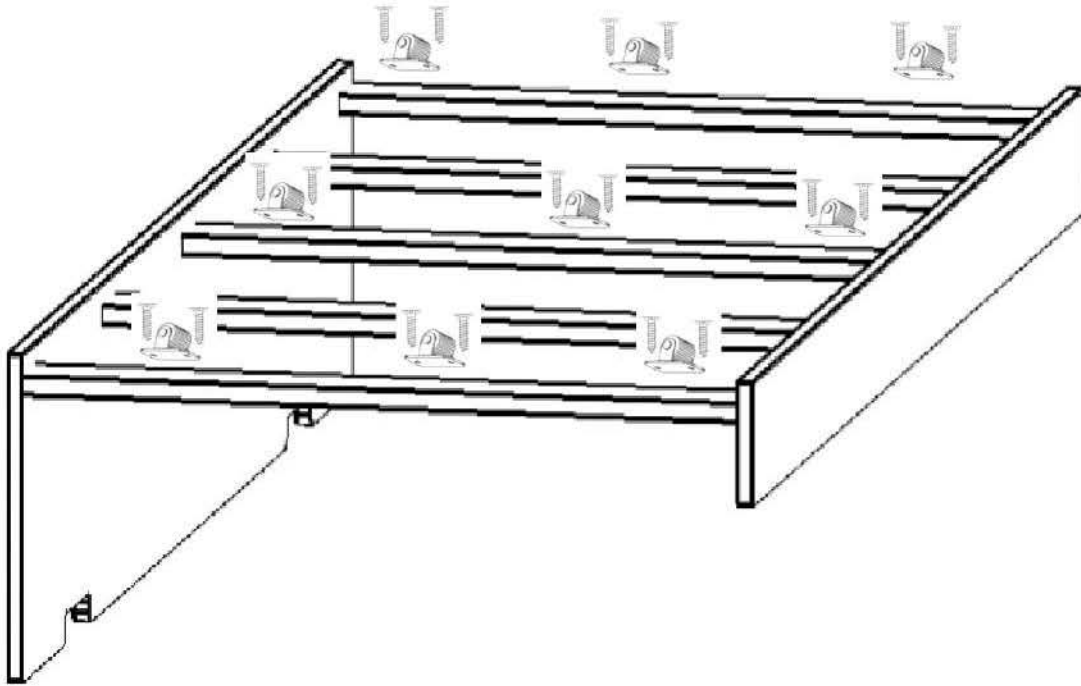

(F)



x2

(D)



x2

6

