
Domi outdoor living

domi
outdoor living

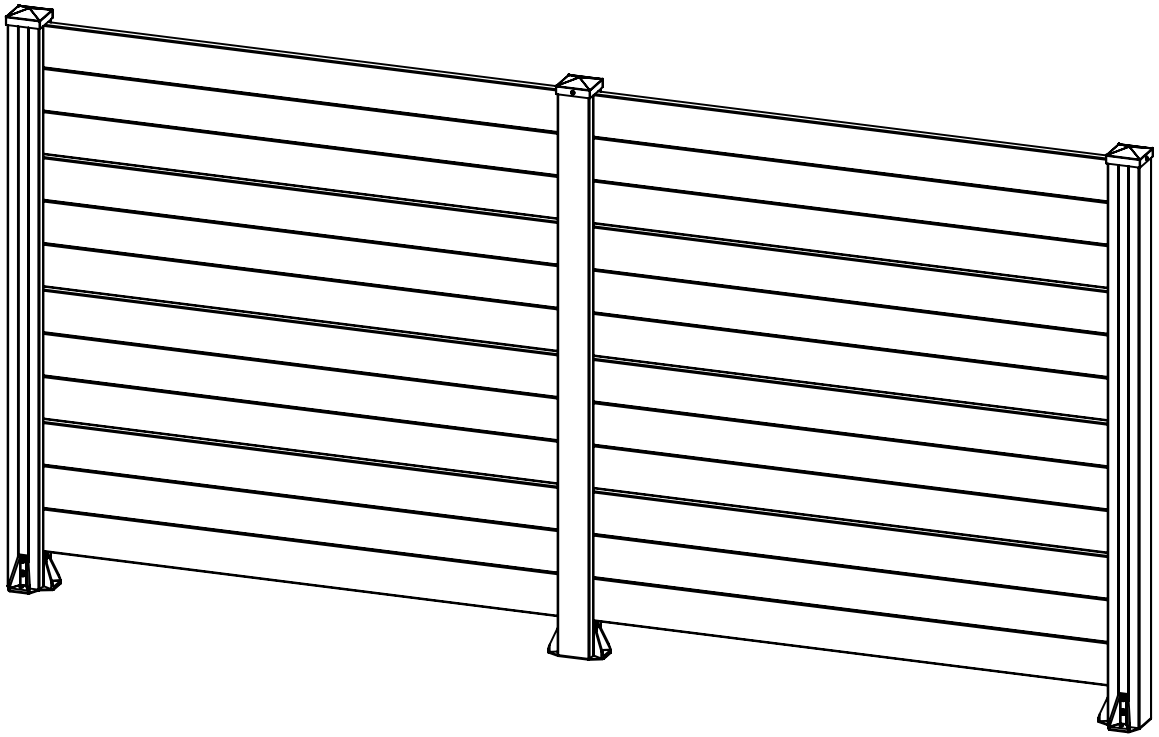



SKU: LNCF0639-2pcs

Outdoor Privacy Screen

Assembly Manual (for Hard Surfaces)


© Copyright 2024-2026 Domi Outdoor Living LLC.All Rights Reserved.

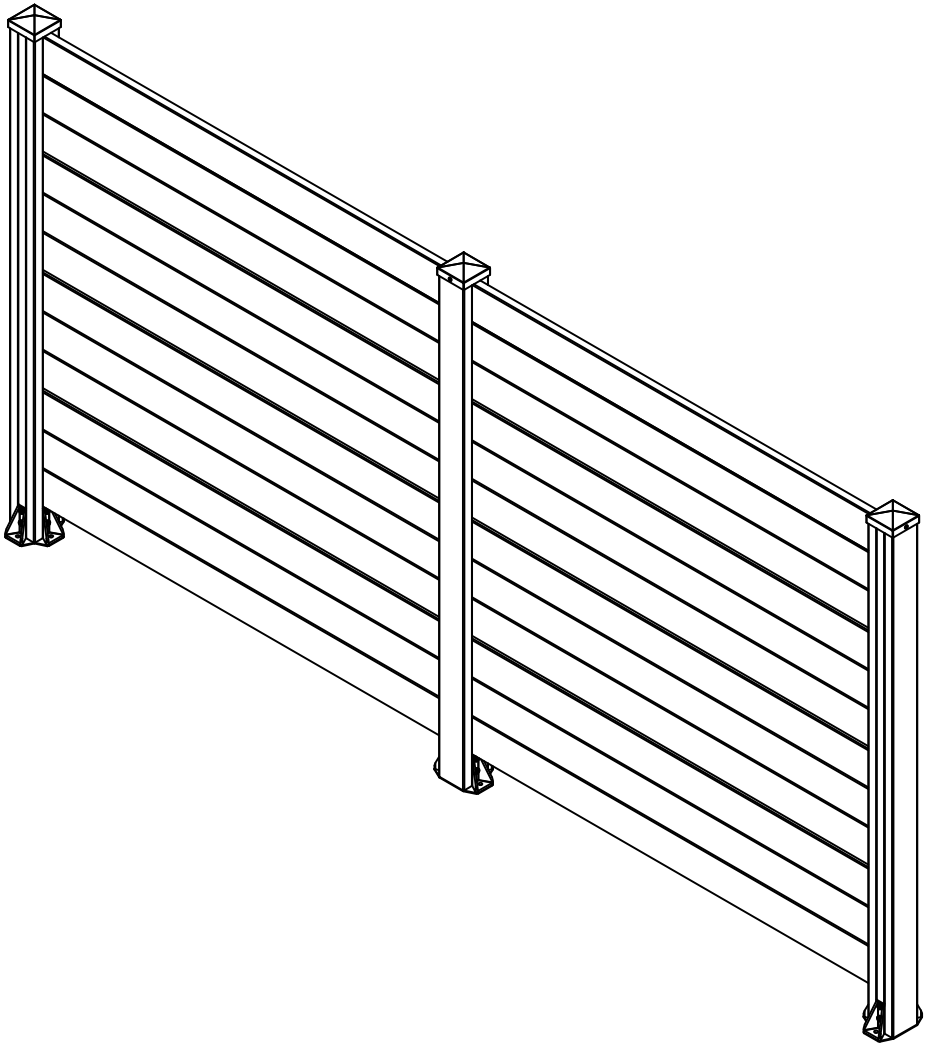

















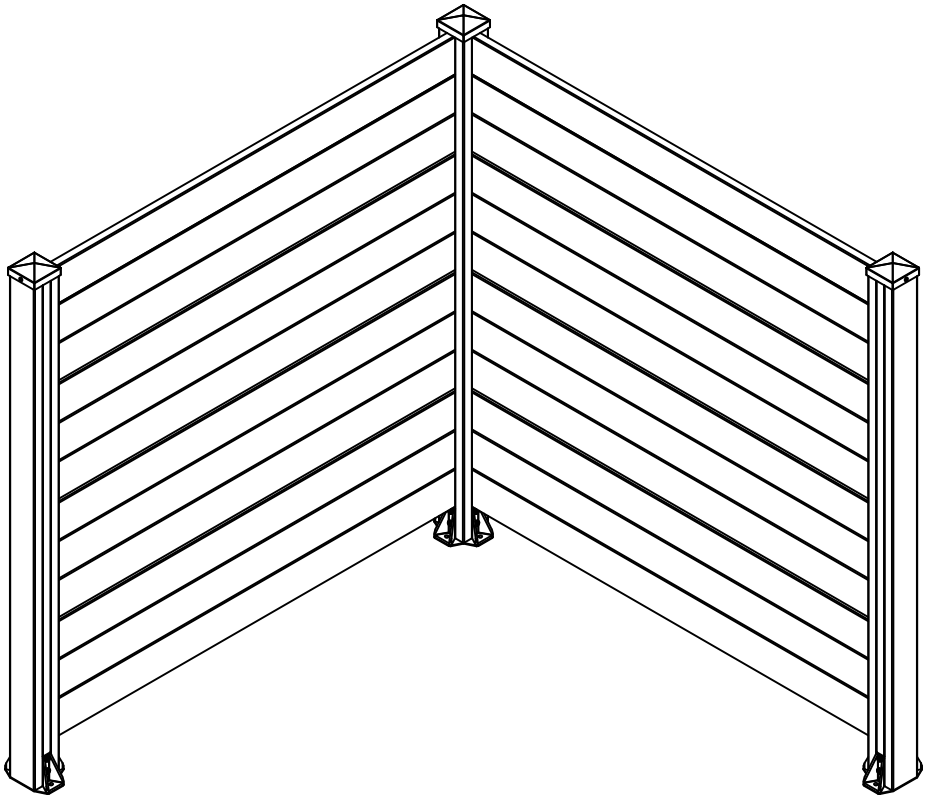



⚠READ & SAVE BELOW INSTRUCTIONS BEFORE ASSEMBLY


1. PLEASE SEPARATE AND IDENTIFY ALL PARTS,MAKING SURE THAT YOU HAVE ALL OF THE PARTS LISTED.
2. TO AVOID ANY SCRATCH DURING ASSEMBLY, PLEASE ASSEMBLE ON A SOFT MAT OR SIMILAR.
3. PLEASE ASSEMBLE STEP BY STEP AND FOLLOW THE INSTRUCTIONS.
4. WASHERS MUST BE USED.
5. WHILE EACH SCREW AND NUT IS PROPERLY FASTENED, DO NOT OVER FASTEN IT.
6. DO NOT COMPLETELY FASTEN EACH SCREW AND NUT UNTIL ALL THE SCREWS ARE PROPERLY FIXED.
7. WEARING PROTECTIVE GLOVES IS RECOMMENDED.

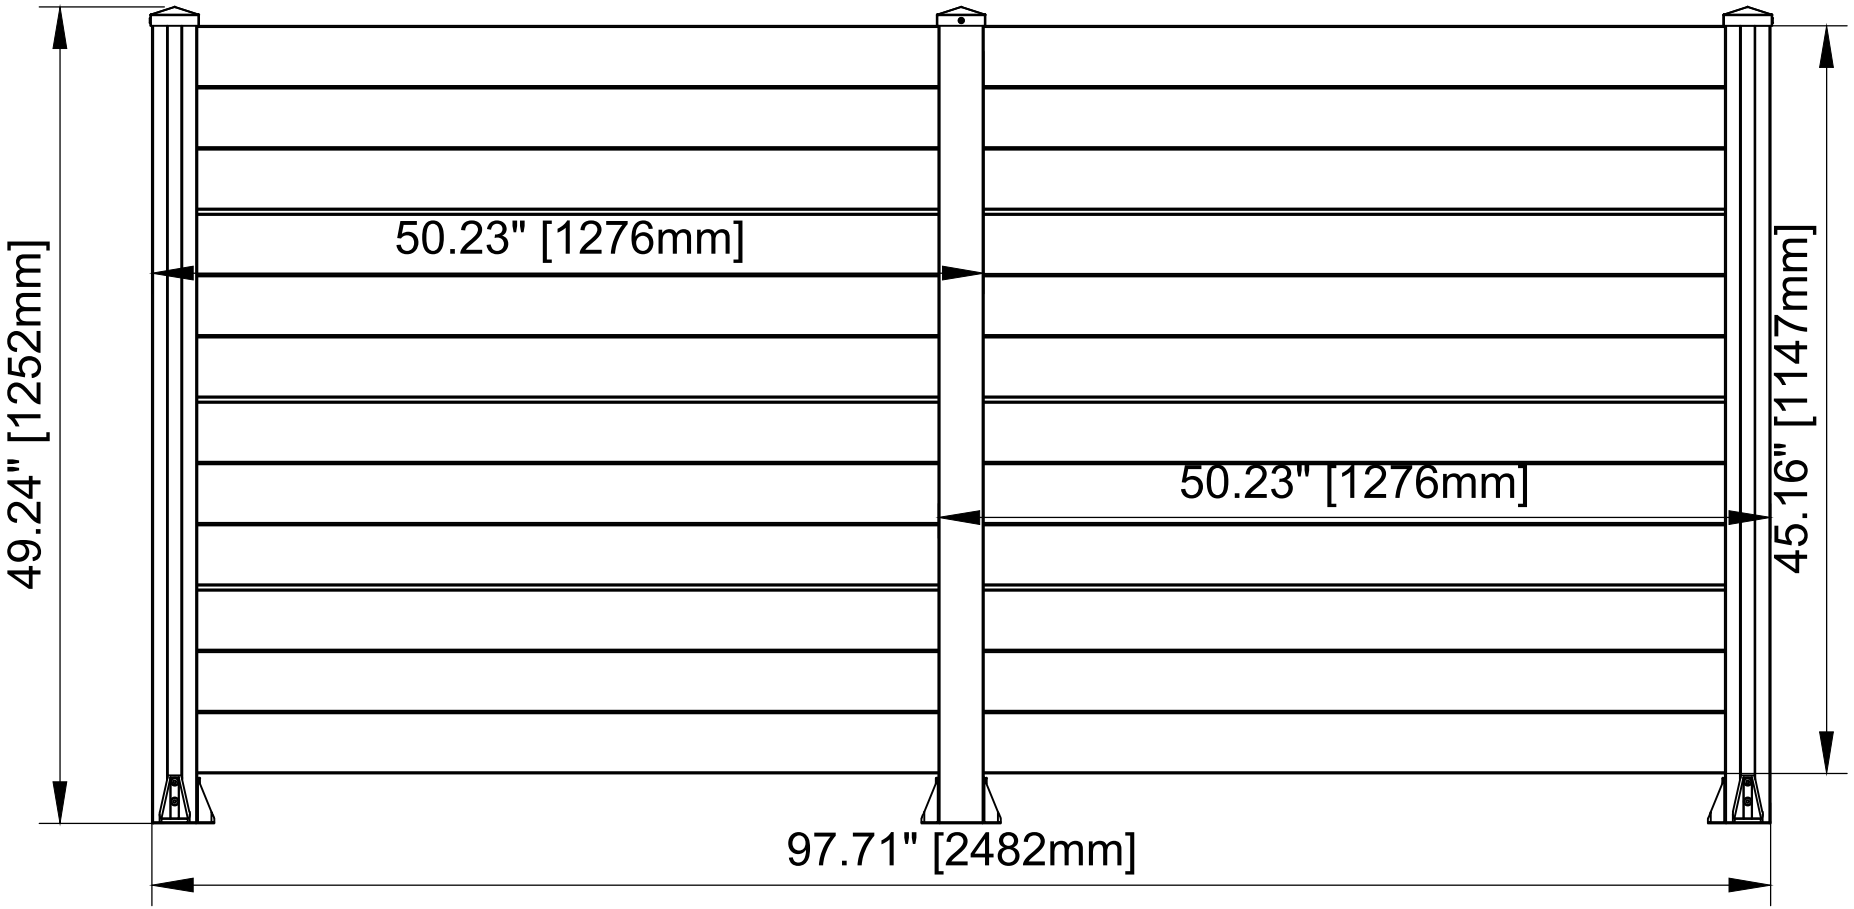

49.24" [1252mm]
50.23" [1276mm]
50.23" [1276mm]
45.16" [1147mm]
97.71" [2482mm]

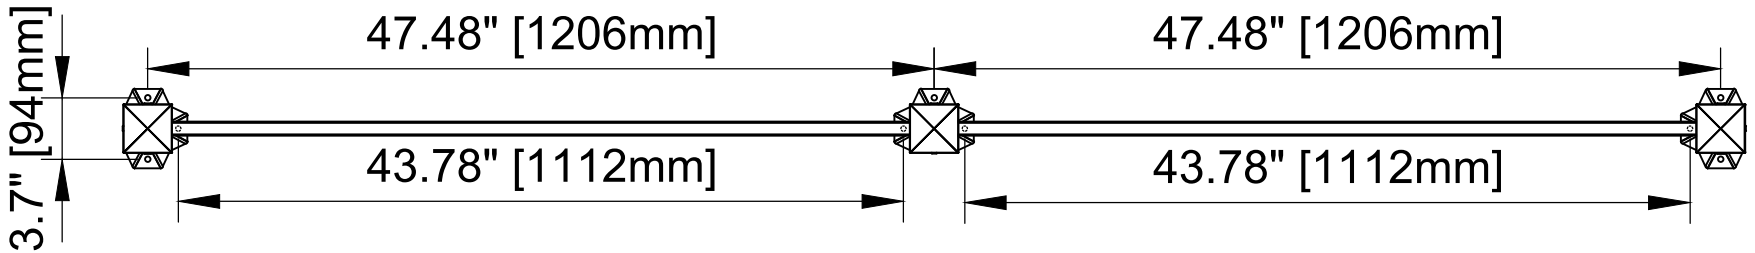
3.7" [94mm]
47.48" [1206mm]
47.48" [1206mm]
43.78" [1112mm]
43.78" [1112mm]

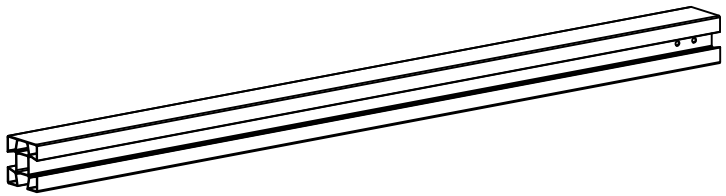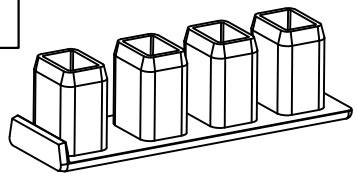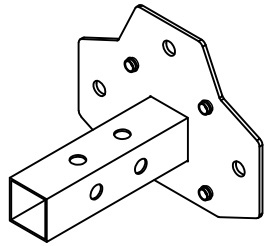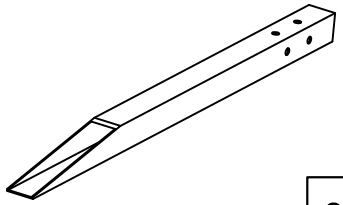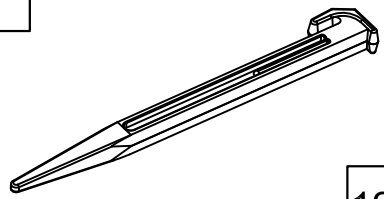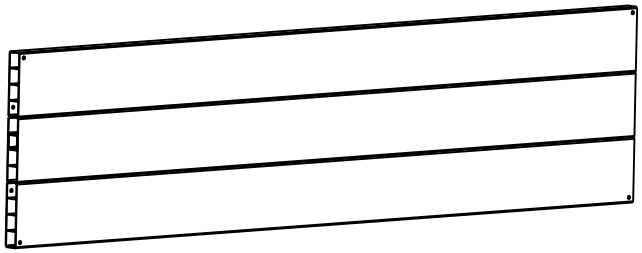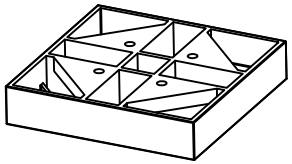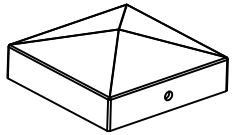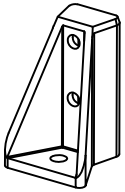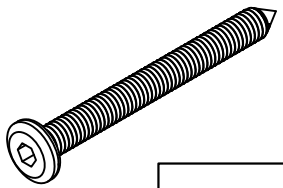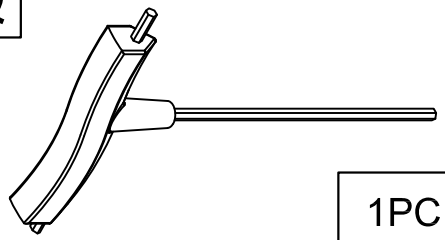
A  3PCS	B  32PCS	C  3PCS		
D  5PCS	E  3PCS	F  12PCS		
G  8PCS	H  3PCS	I  3PCS		
J  9PCS	K  ST4*12 67PCS	L  M6*16 12PCS	M  M6*30 18PCS	
N  9PCS	O  9PCS	P  6*60 9PCS	Q  1PC	

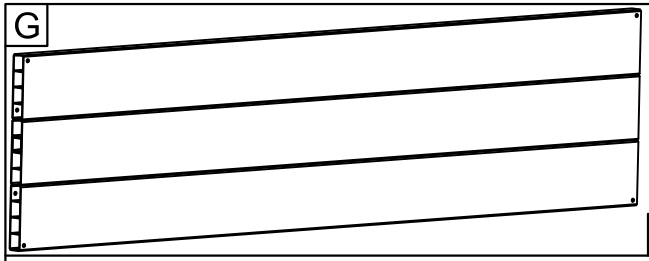

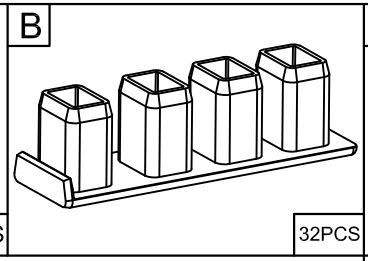

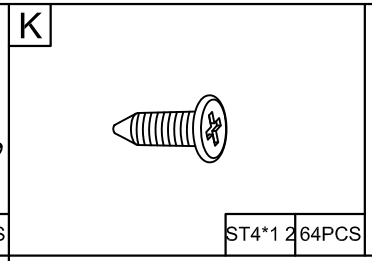


①×8

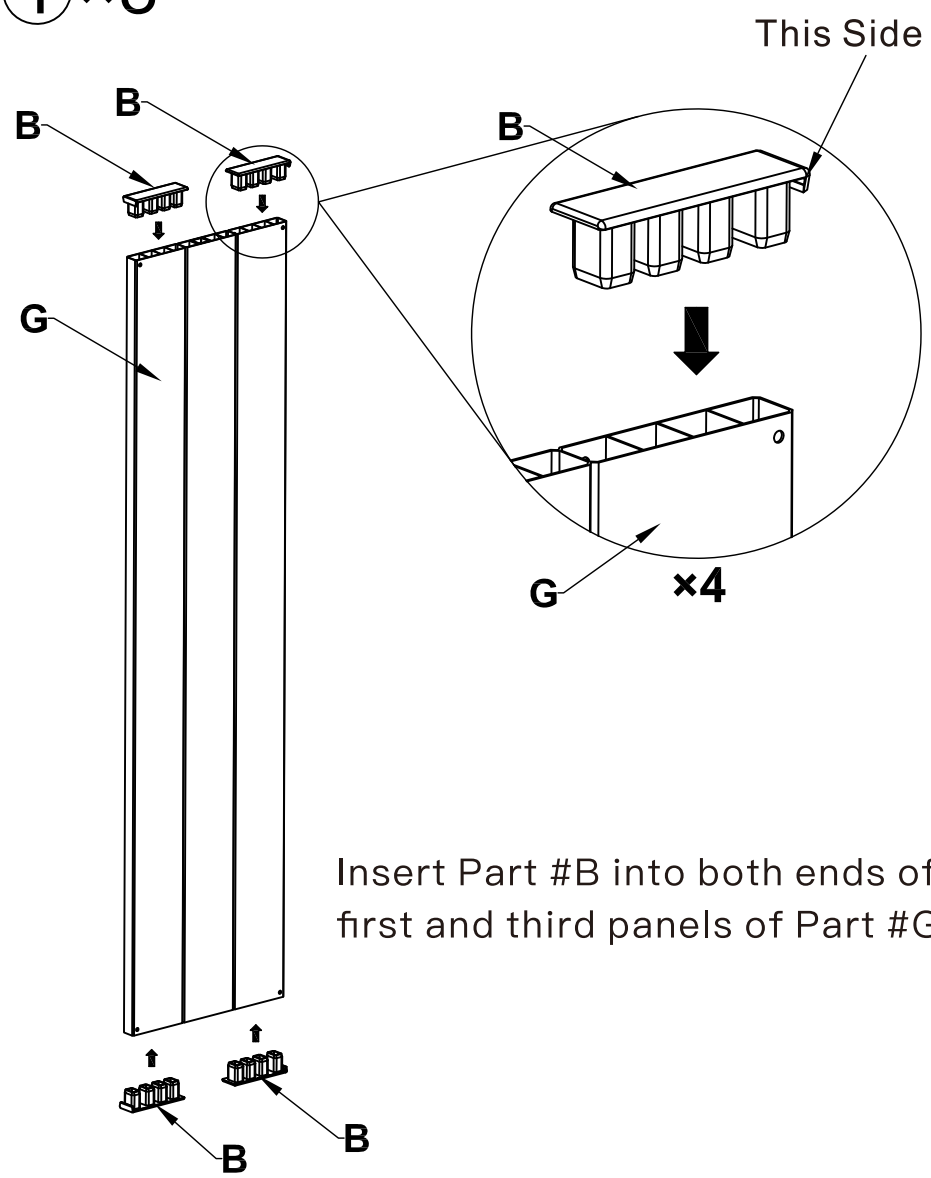



Insert Part #B into both ends of the first and third panels of Part #G


②×8

Use 4 Screws #K to secure Part B through the holes as show.

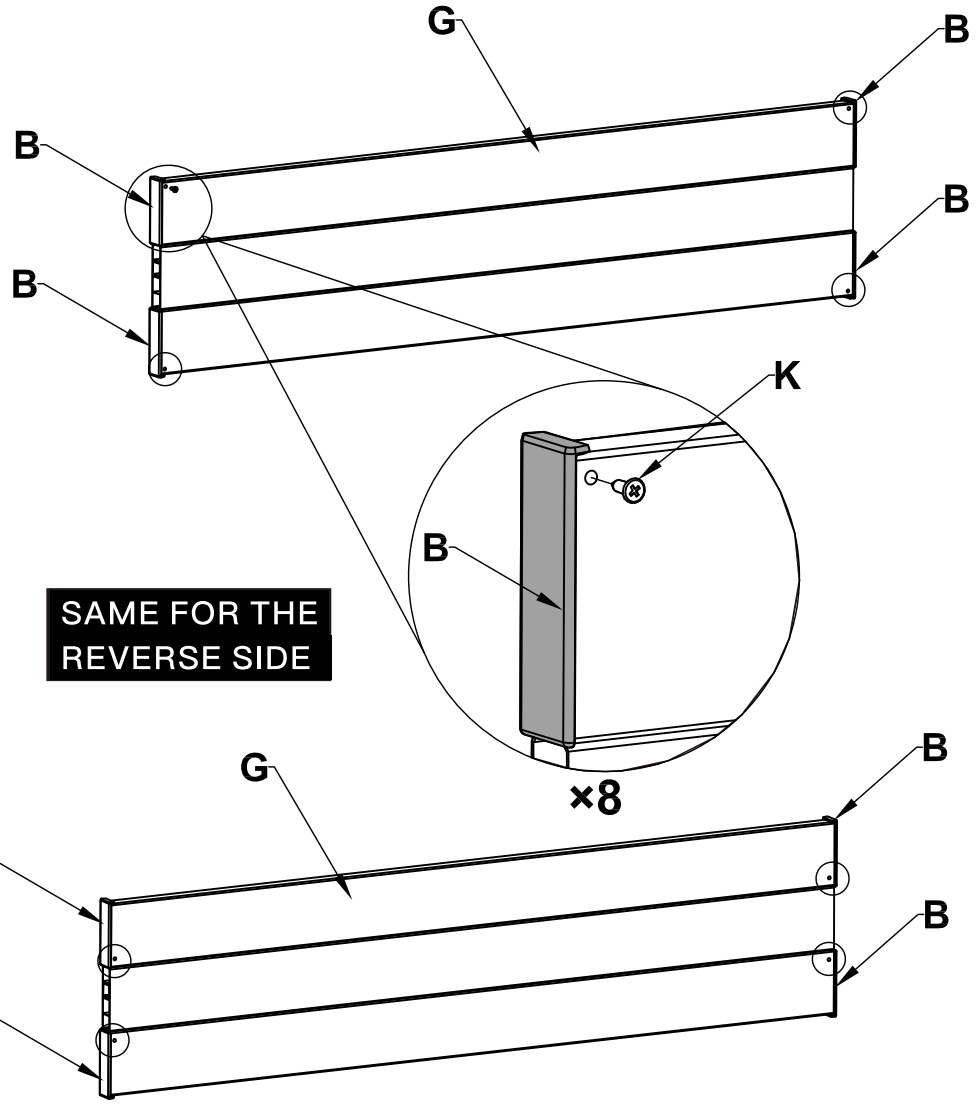


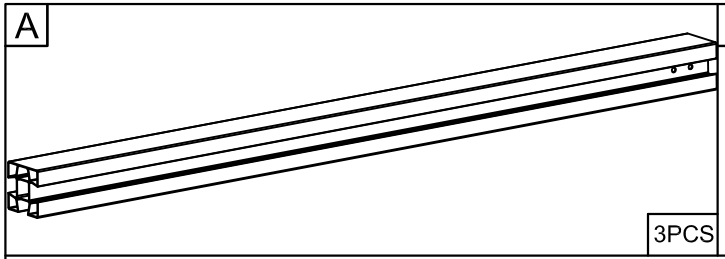

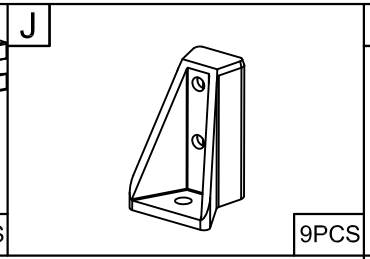

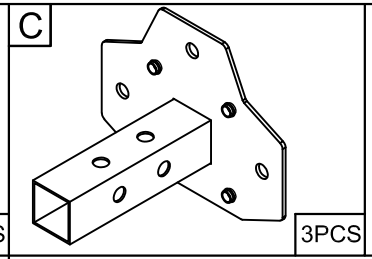


③×3

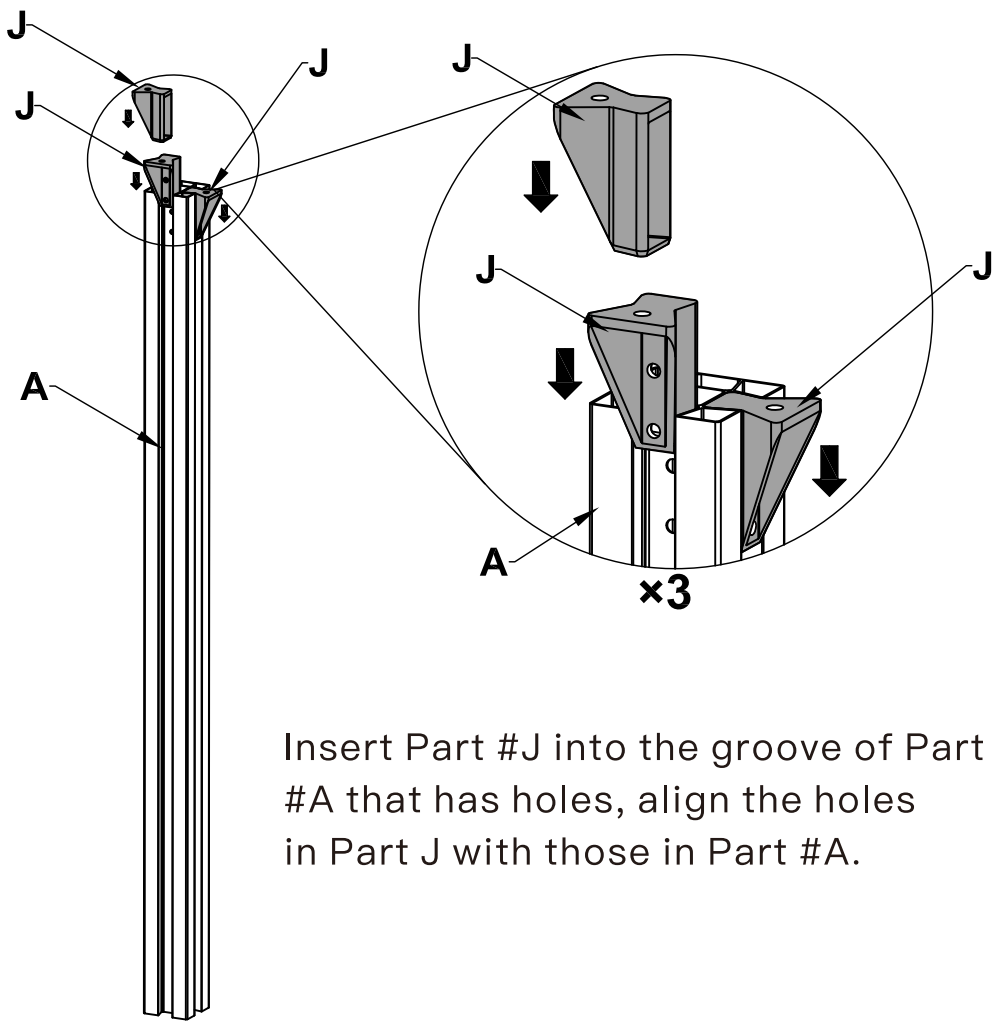


Insert Part #J into the groove of Part #A that has holes, align the holes in Part J with those in Part #A.

④×3

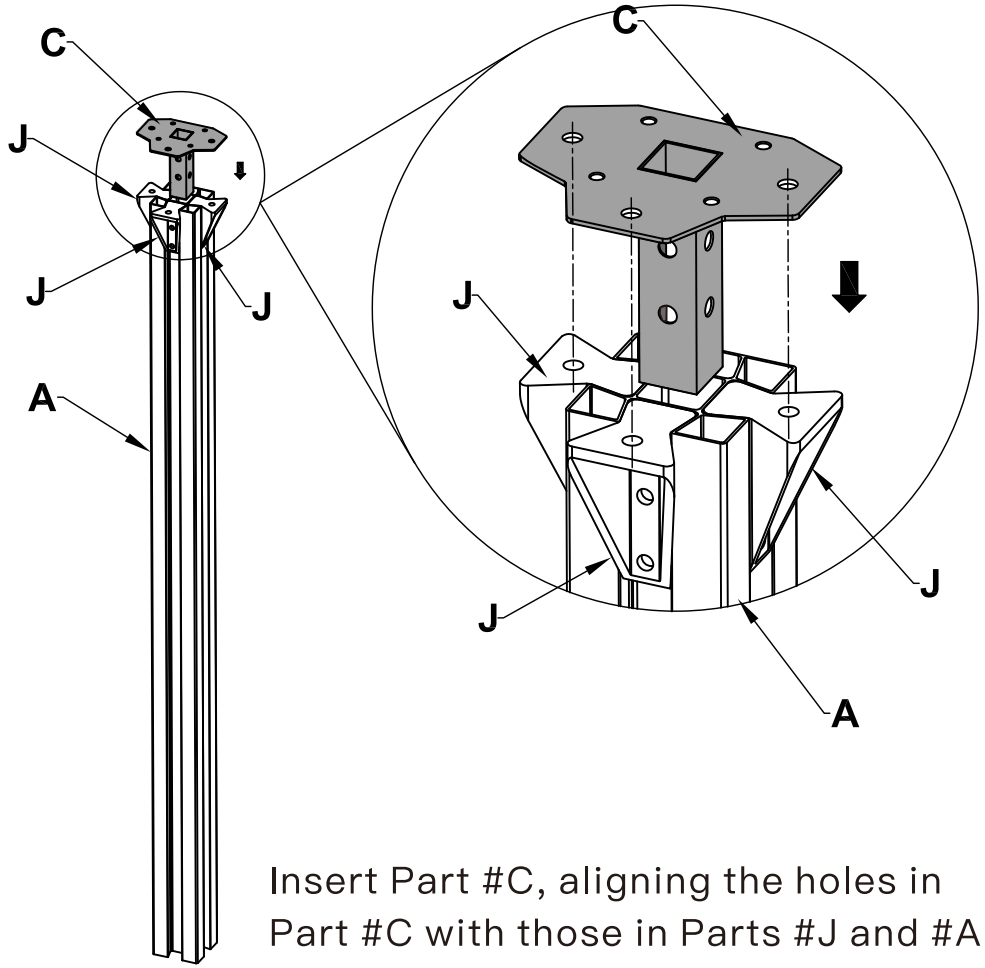


Insert Part #C, aligning the holes in Part #C with those in Parts #J and #A.

E

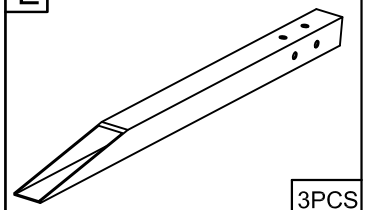

3PCS

M



M6*30 18PCS


Q



1PC


⑤×3

Insert Part #E into Part #C and align the holes.

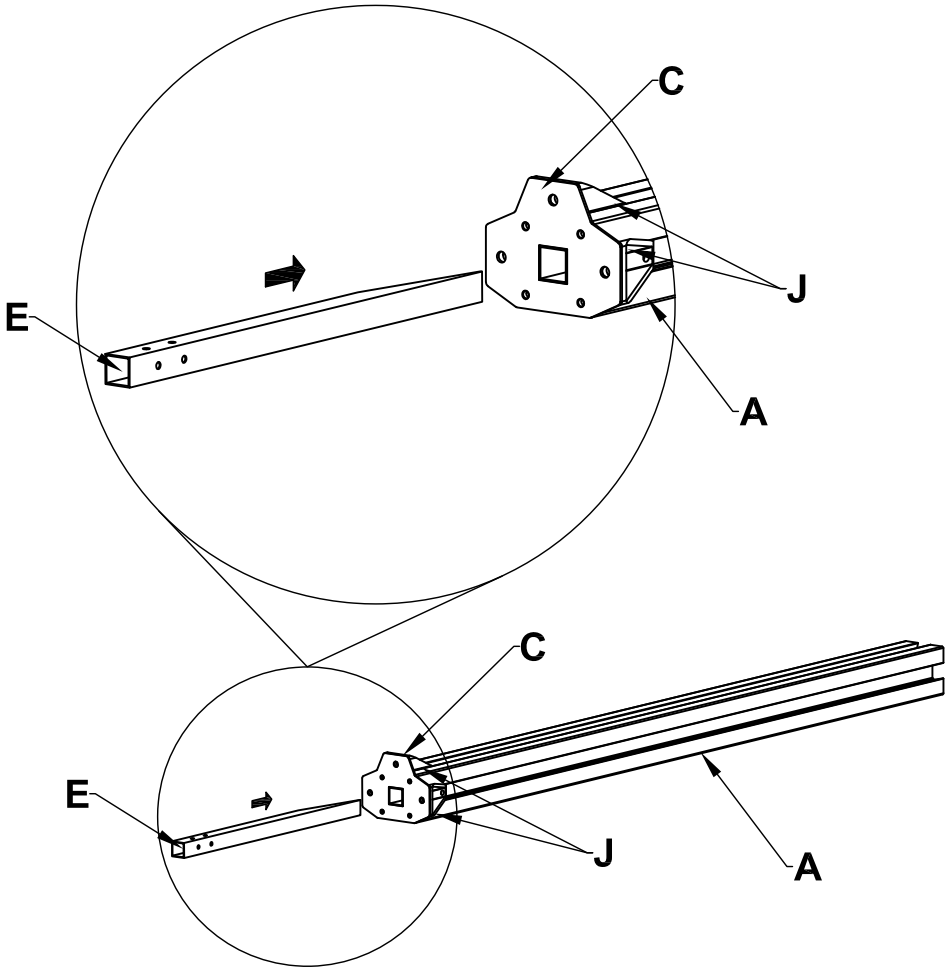


⑥×3

Notice: Tighten all screws to 60% first. After all screws are in place, fully tighten them uniformly.

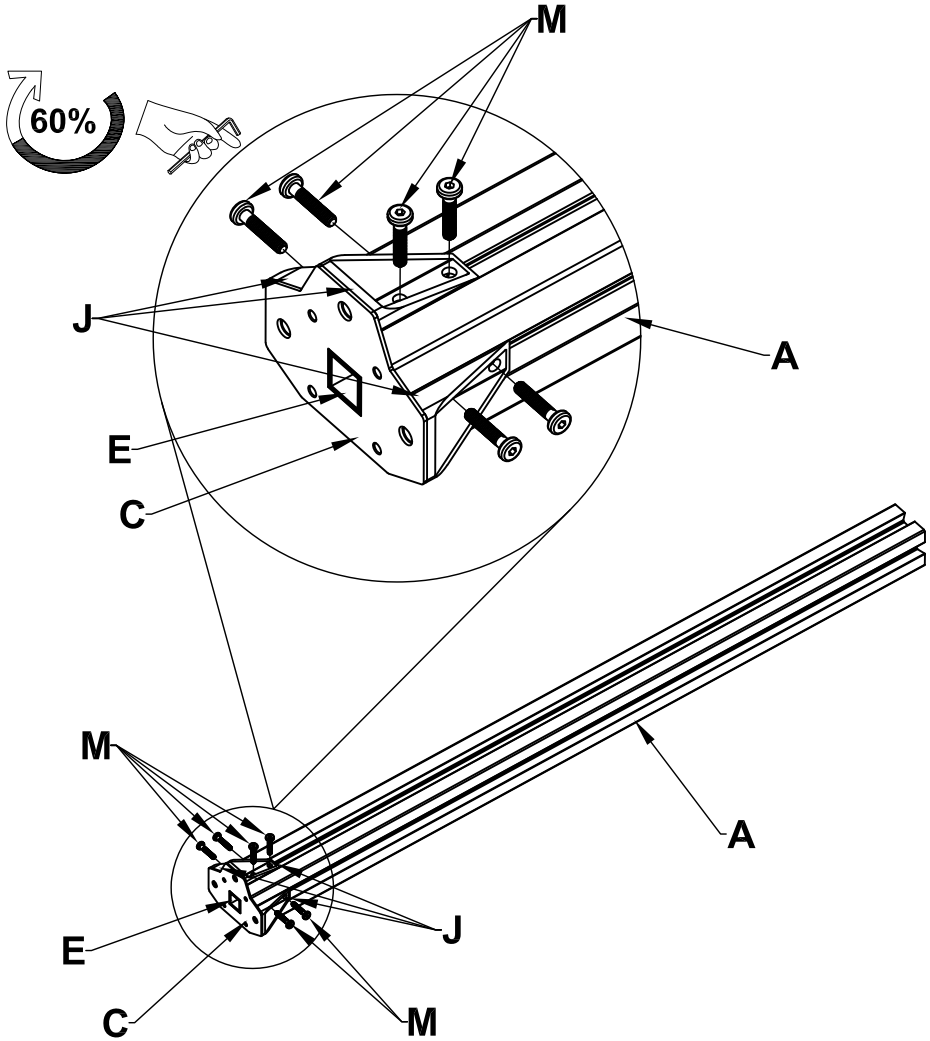


N



6PCS


7

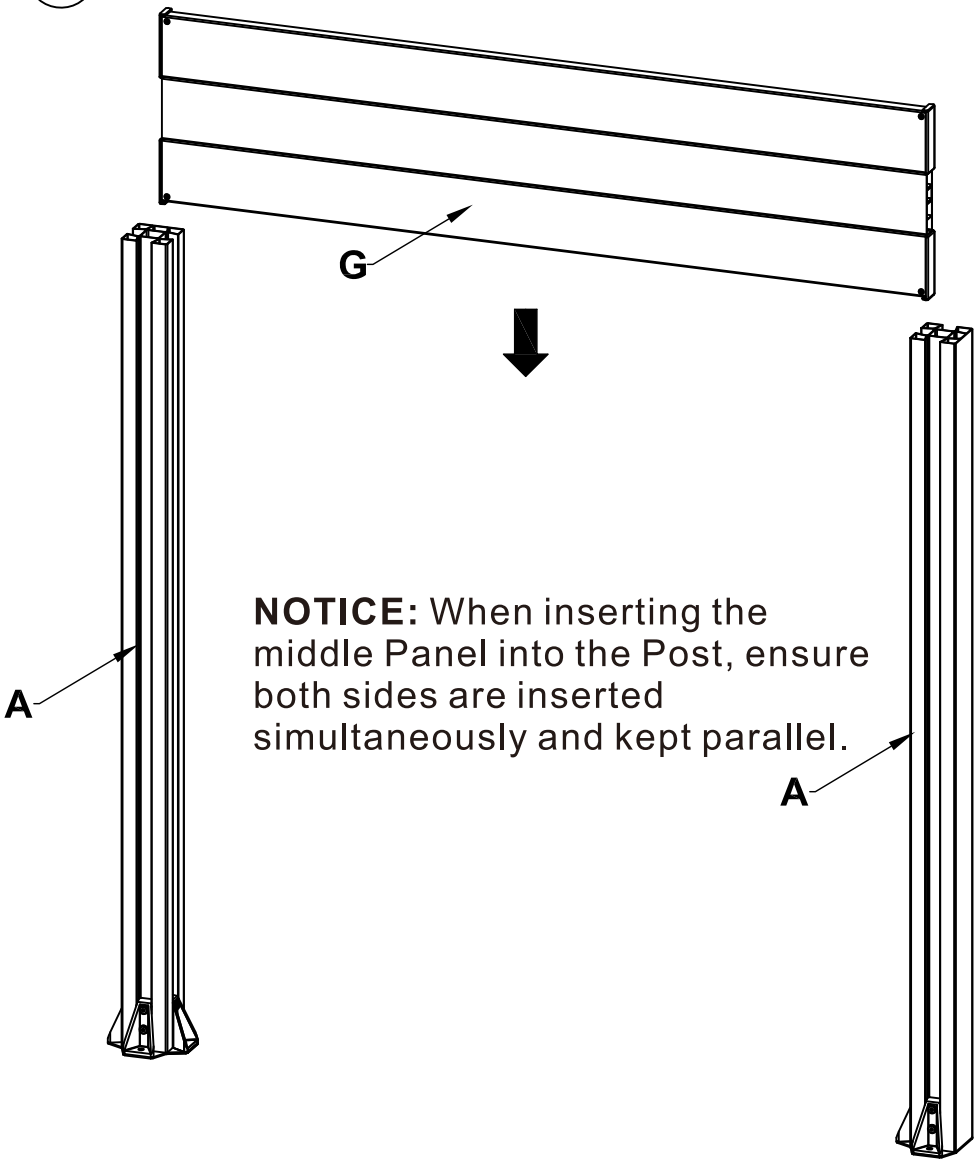


NOTICE: When inserting the middle Panel into the Post, ensure both sides are inserted simultaneously and kept parallel.


8

Please ensure the distance between the two Posts #A remains consistent.
Pre-drill φ12 holes at the corresponding positions on the ground and pre-embed plastic expansion tubes #N.

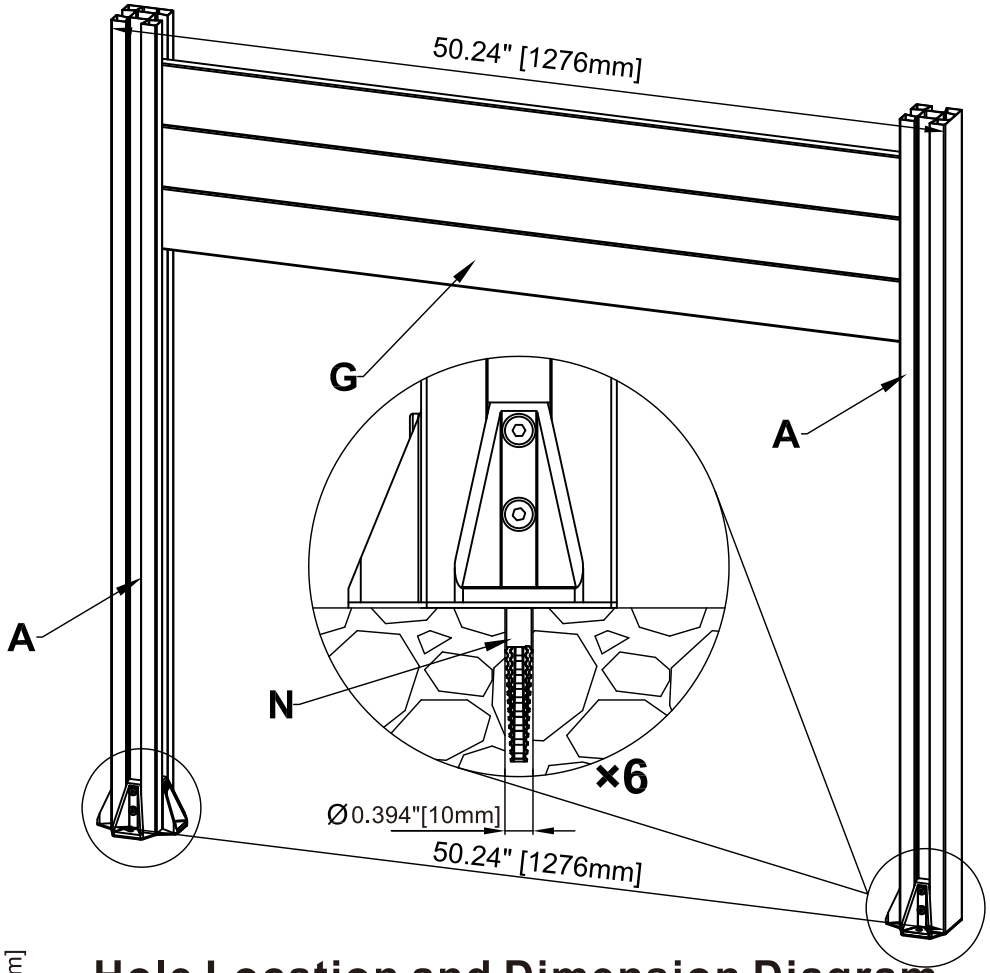


Hole Location and Dimension Diagram

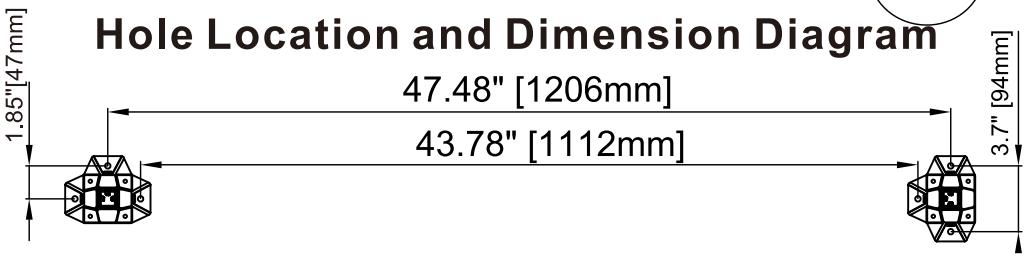

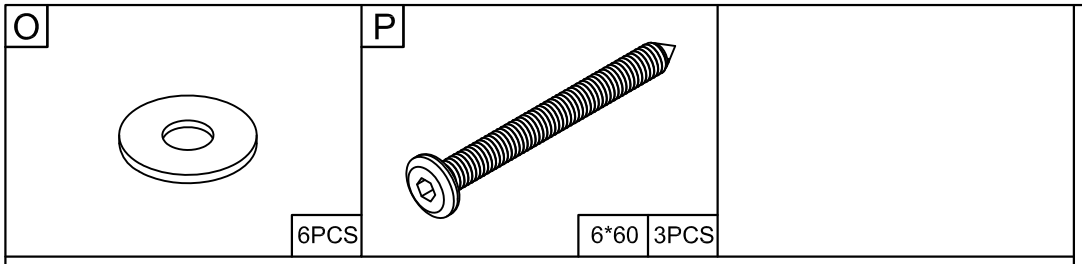


9

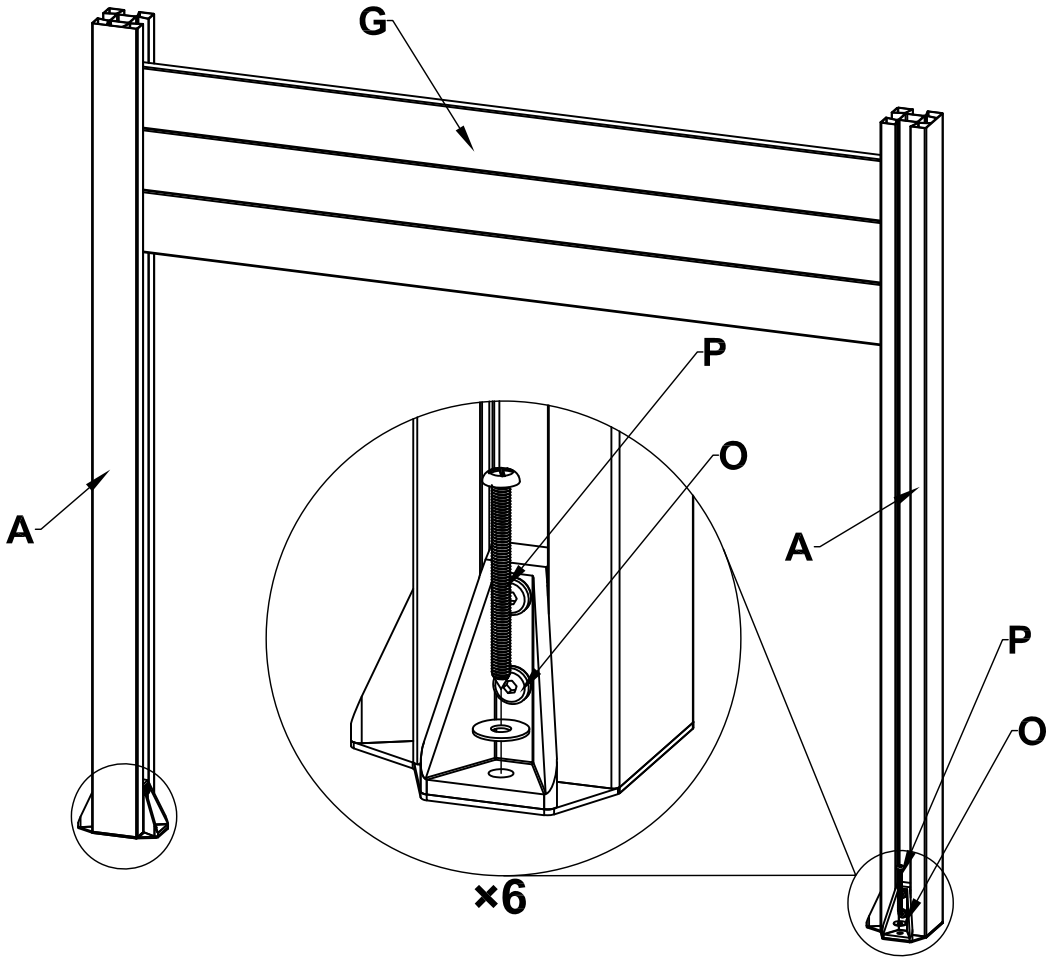


10

NOTICE: When inserting the middle Panel into the Post, ensure both sides are inserted simultaneously and kept parallel.

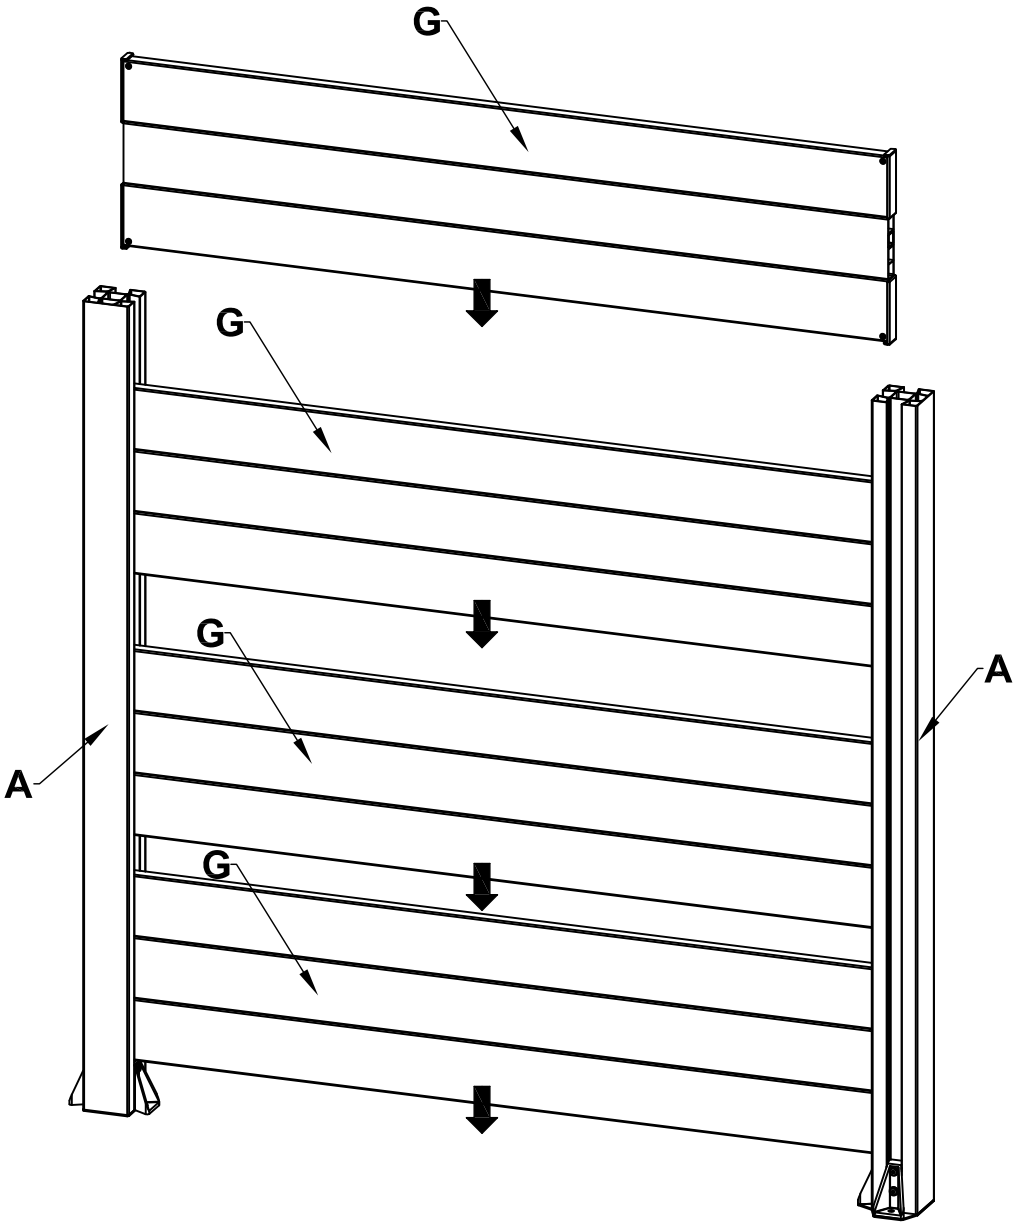


11

NOTICE: When inserting the middle Panel into the Post, ensure both sides are inserted simultaneously and kept parallel.

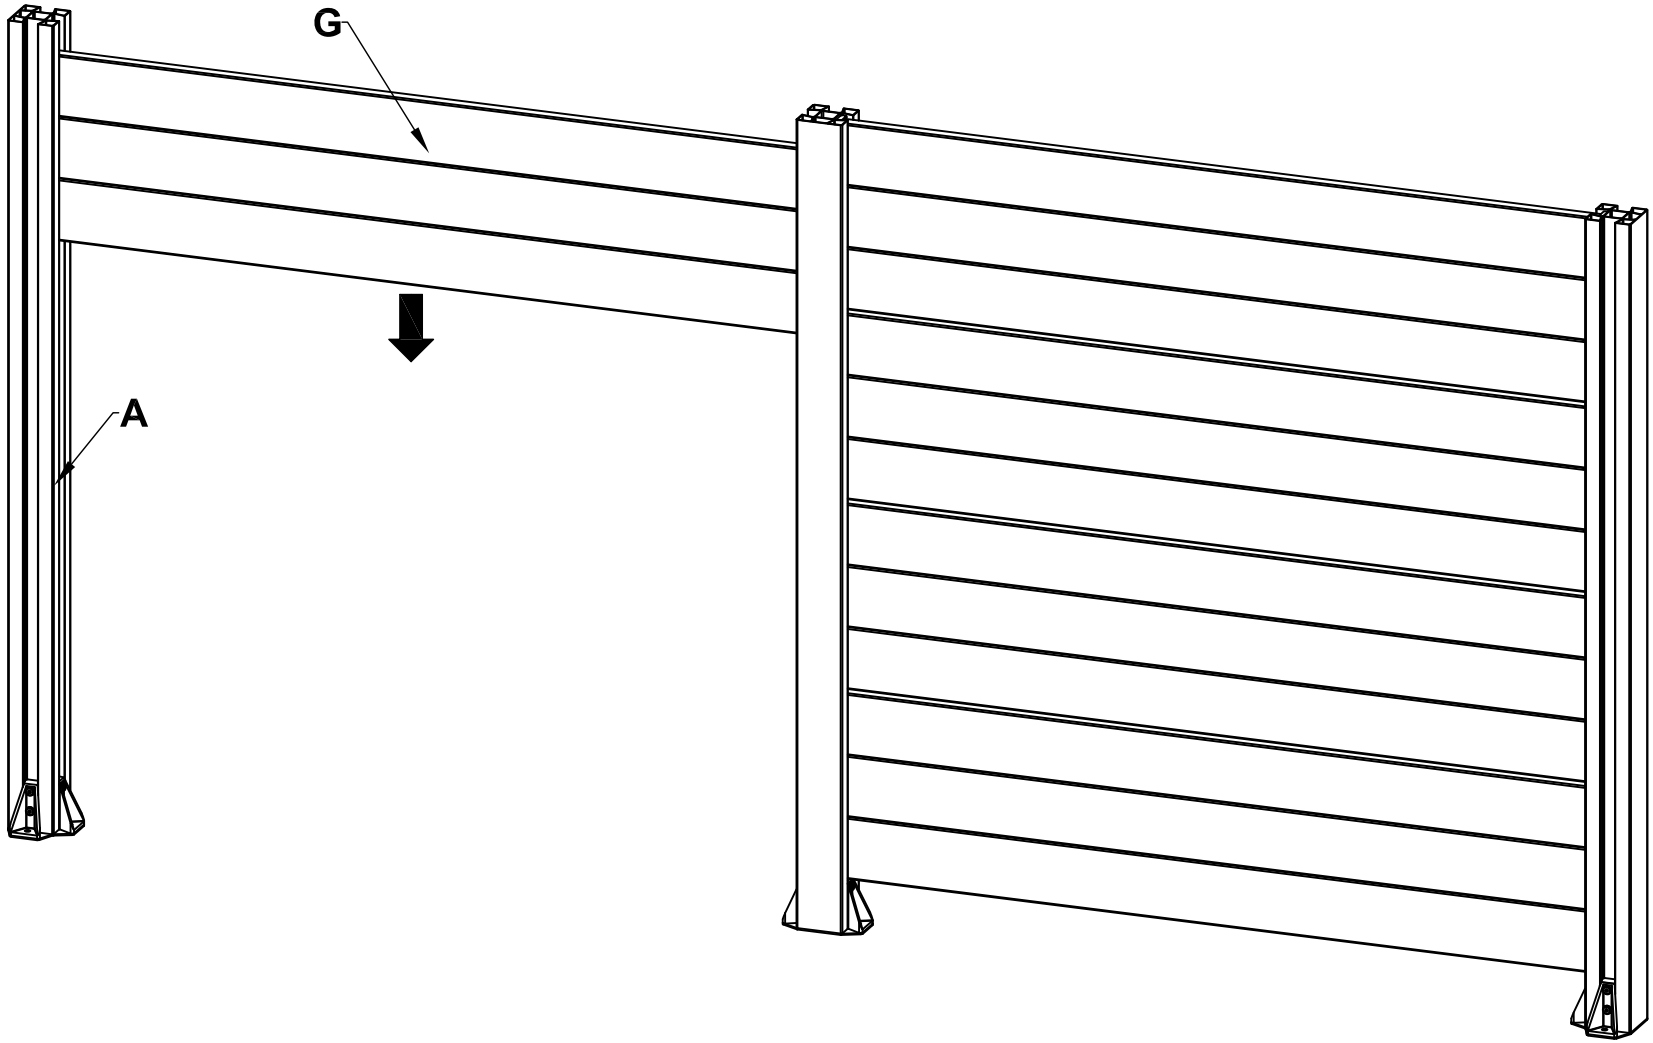


N




3PCS


Please ensure the distance between the two Posts #A remains consistent.
Pre-drill φ12 holes at the corresponding positions on the ground and pre-embed plastic expansion tubes #N.

12

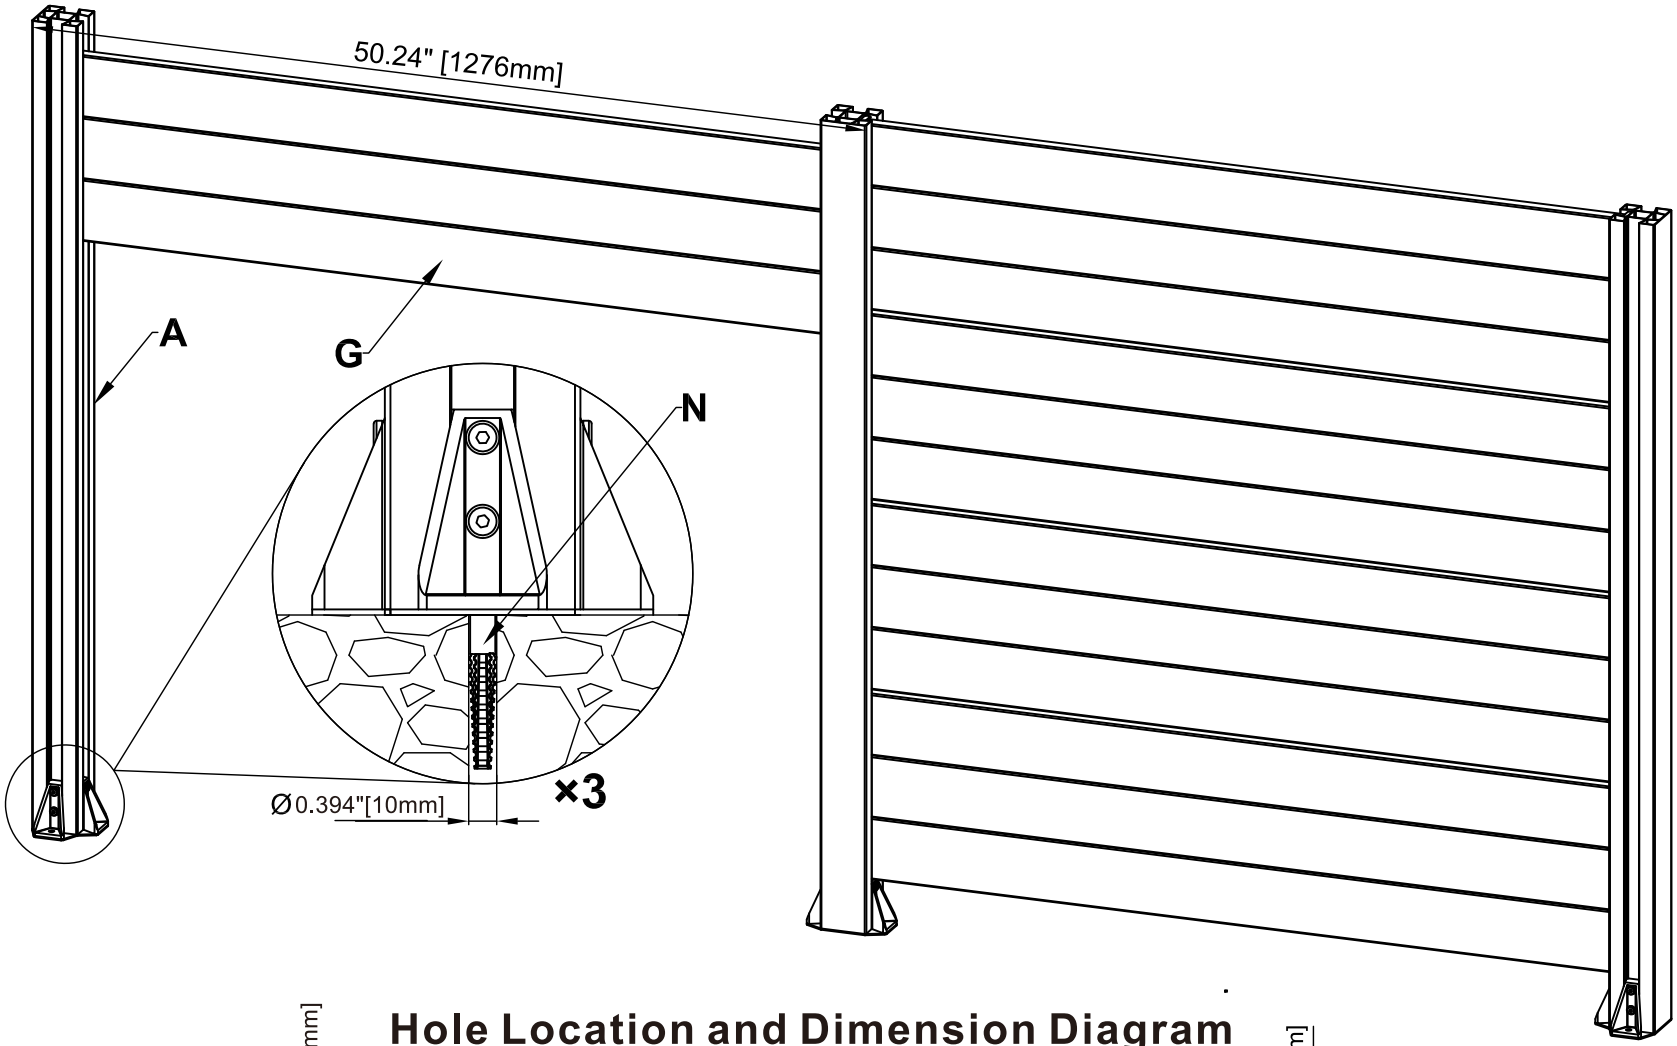


Hole Location and Dimension Diagram

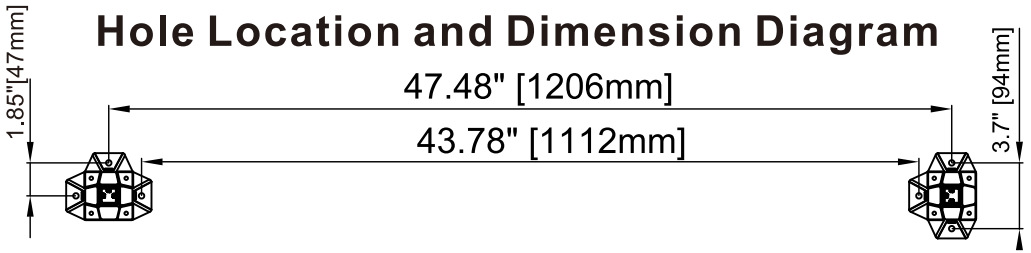

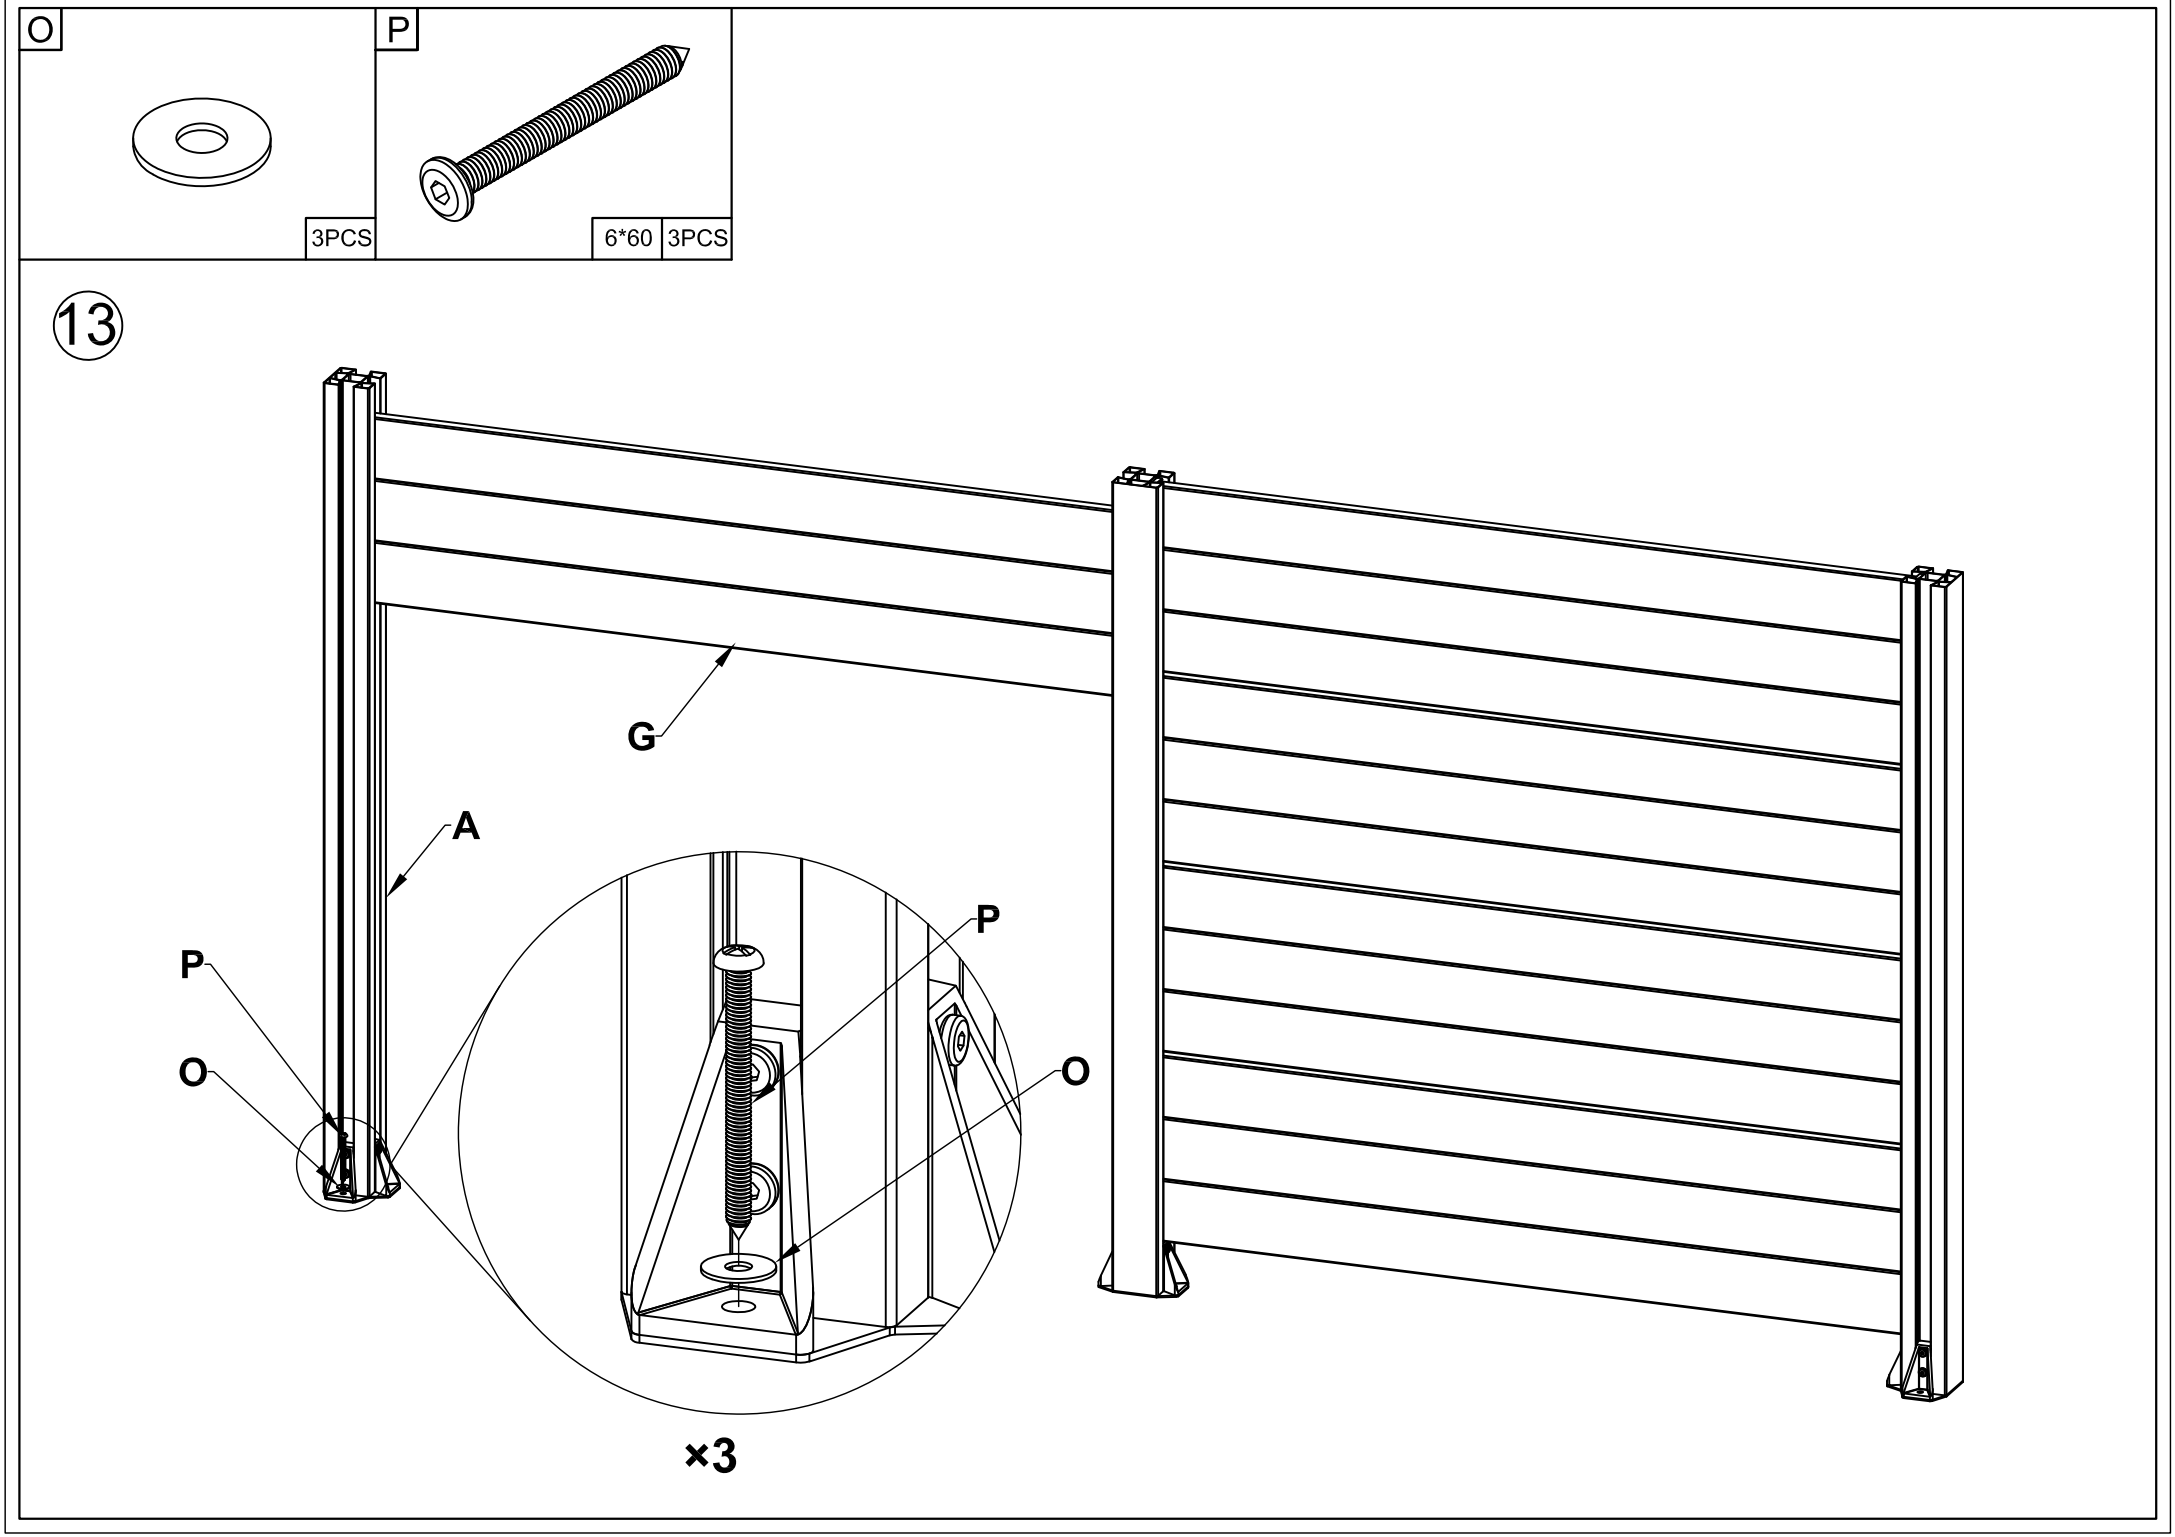
O
3PCS
P
6*60
3PCS
13
G
A
P
O
P
O
×3

14

NOTICE: When inserting the middle Panel into the Post, ensure both sides are inserted simultaneously and kept parallel.

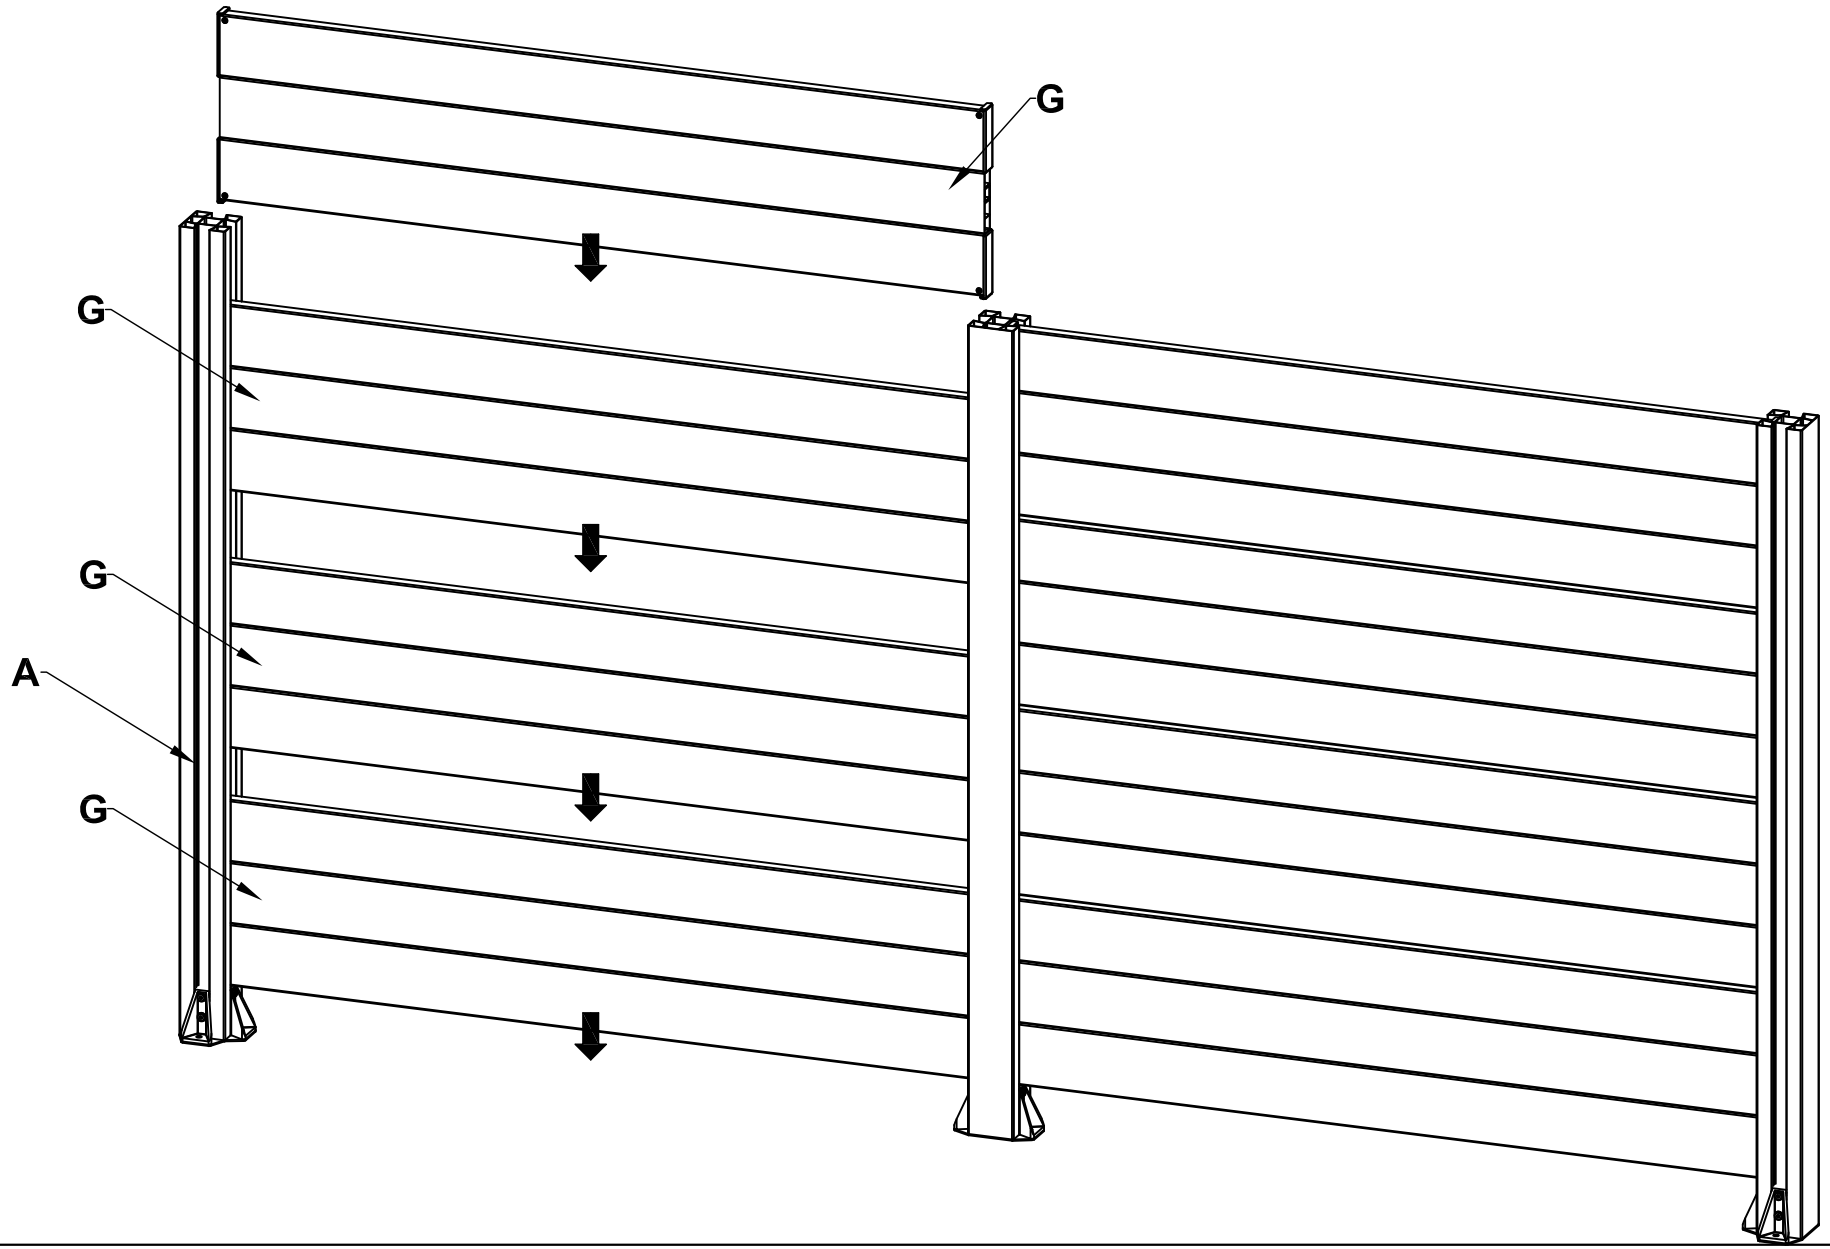


D




5PCS

Please insert Part #D (cover channel) into the posts where no panel is installed to fill the gaps.

15

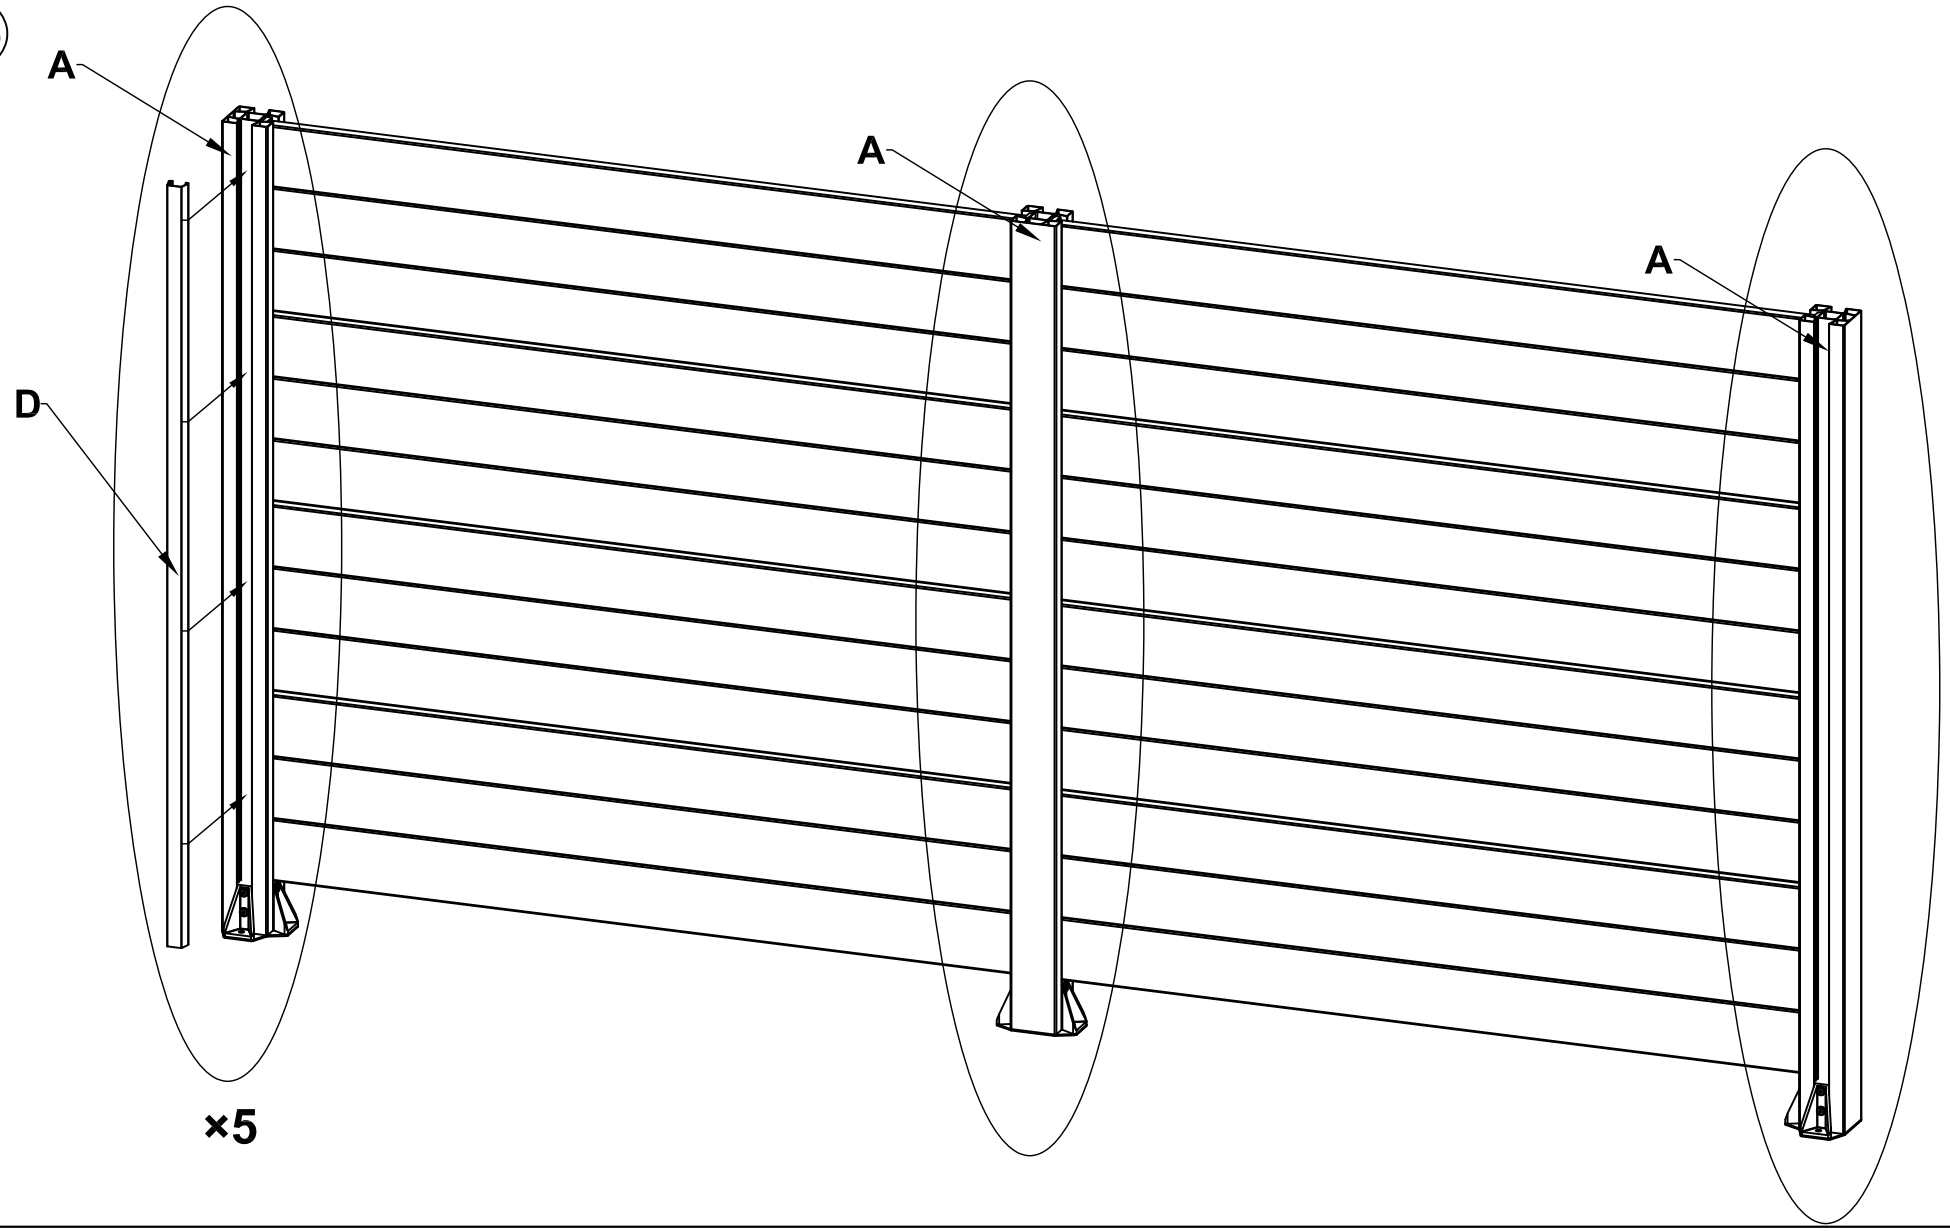


I

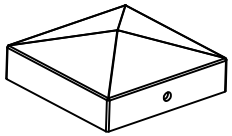


3PCS

Please orient Part #I (top cover) so that the side with holes faces the side of the post without the slot/groove.

16

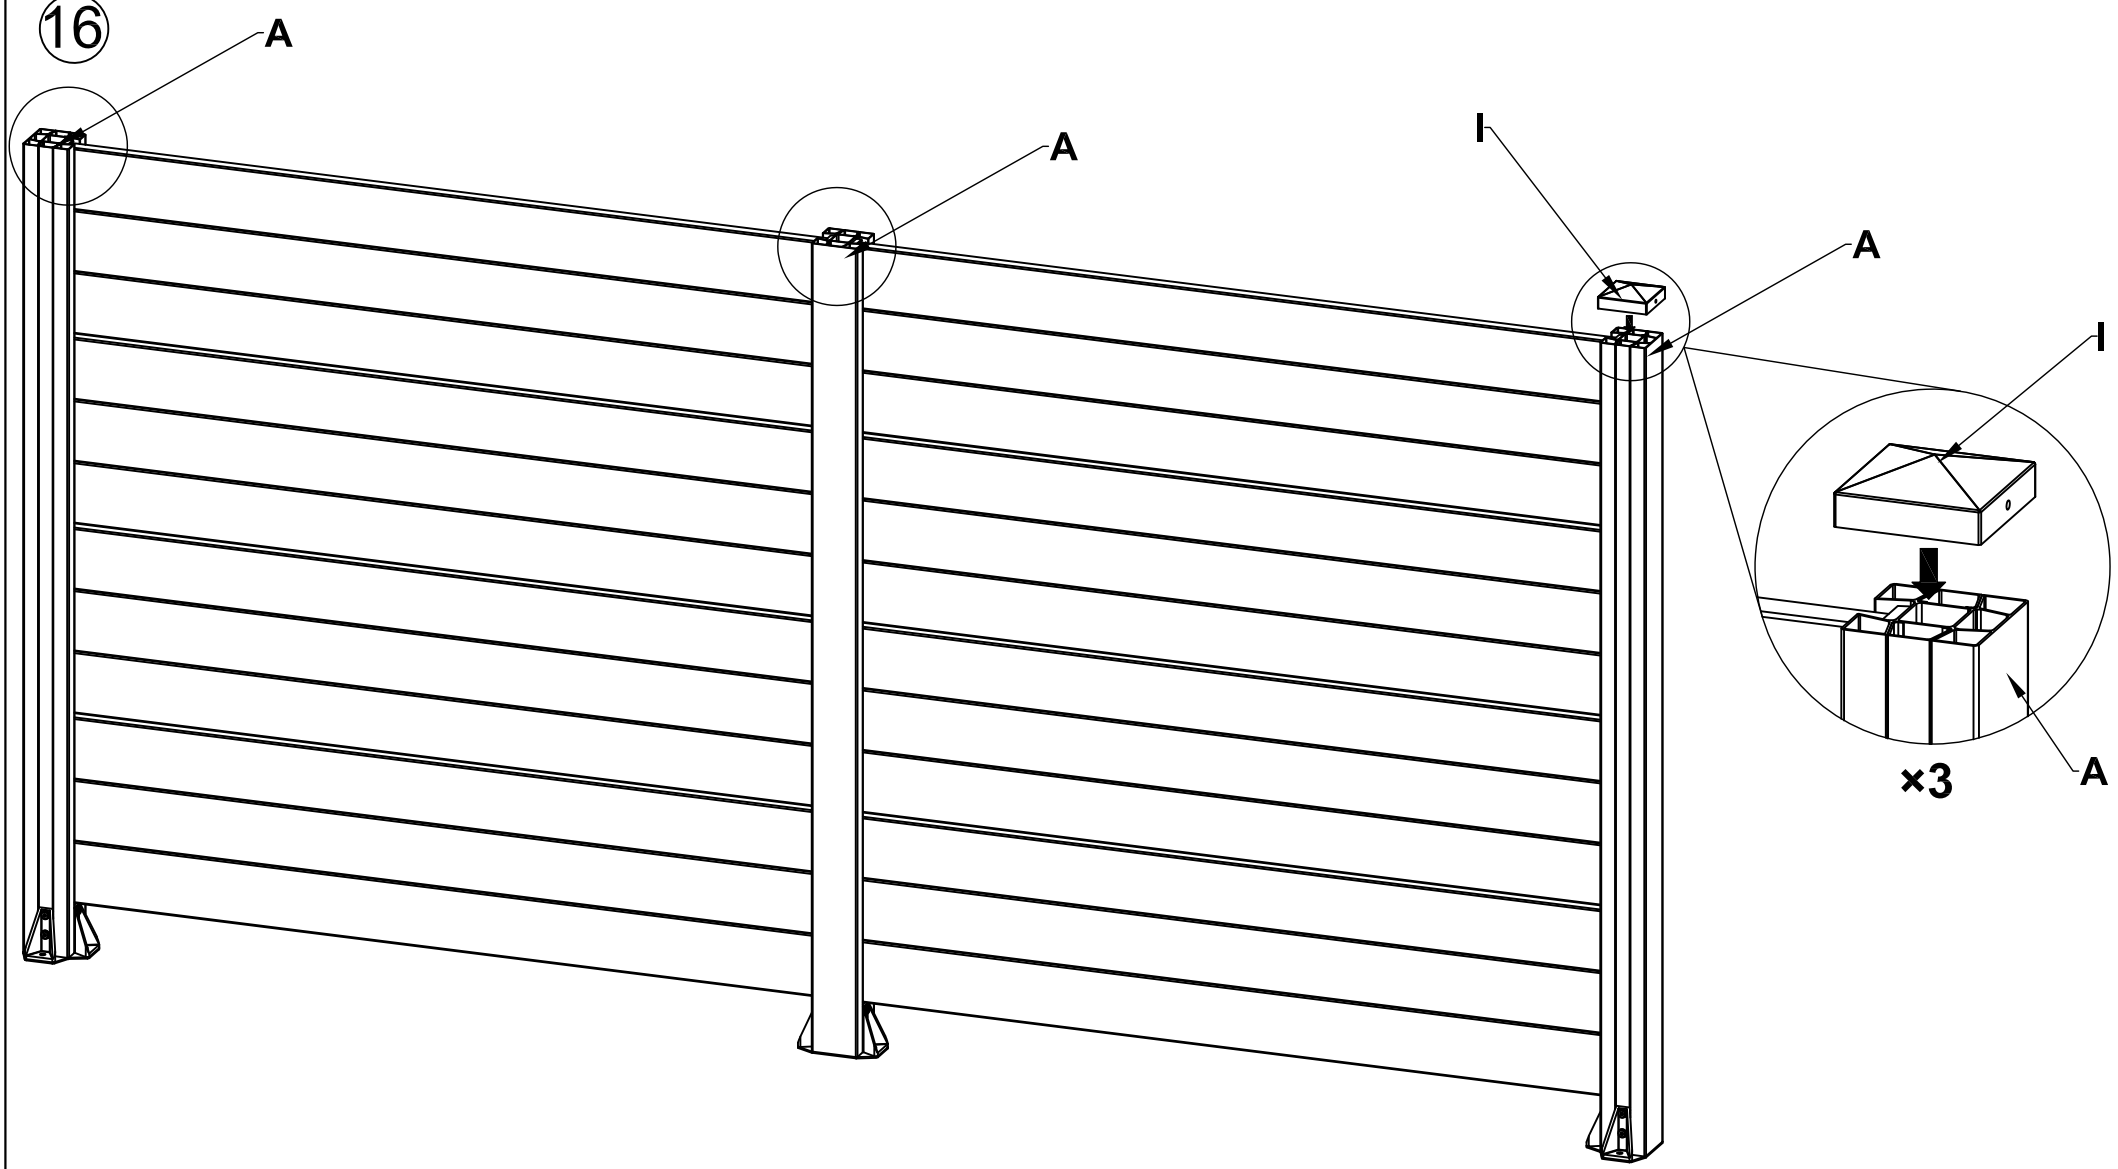


K




ST4*1.2 3PCS

17

Secure with Screws #K.

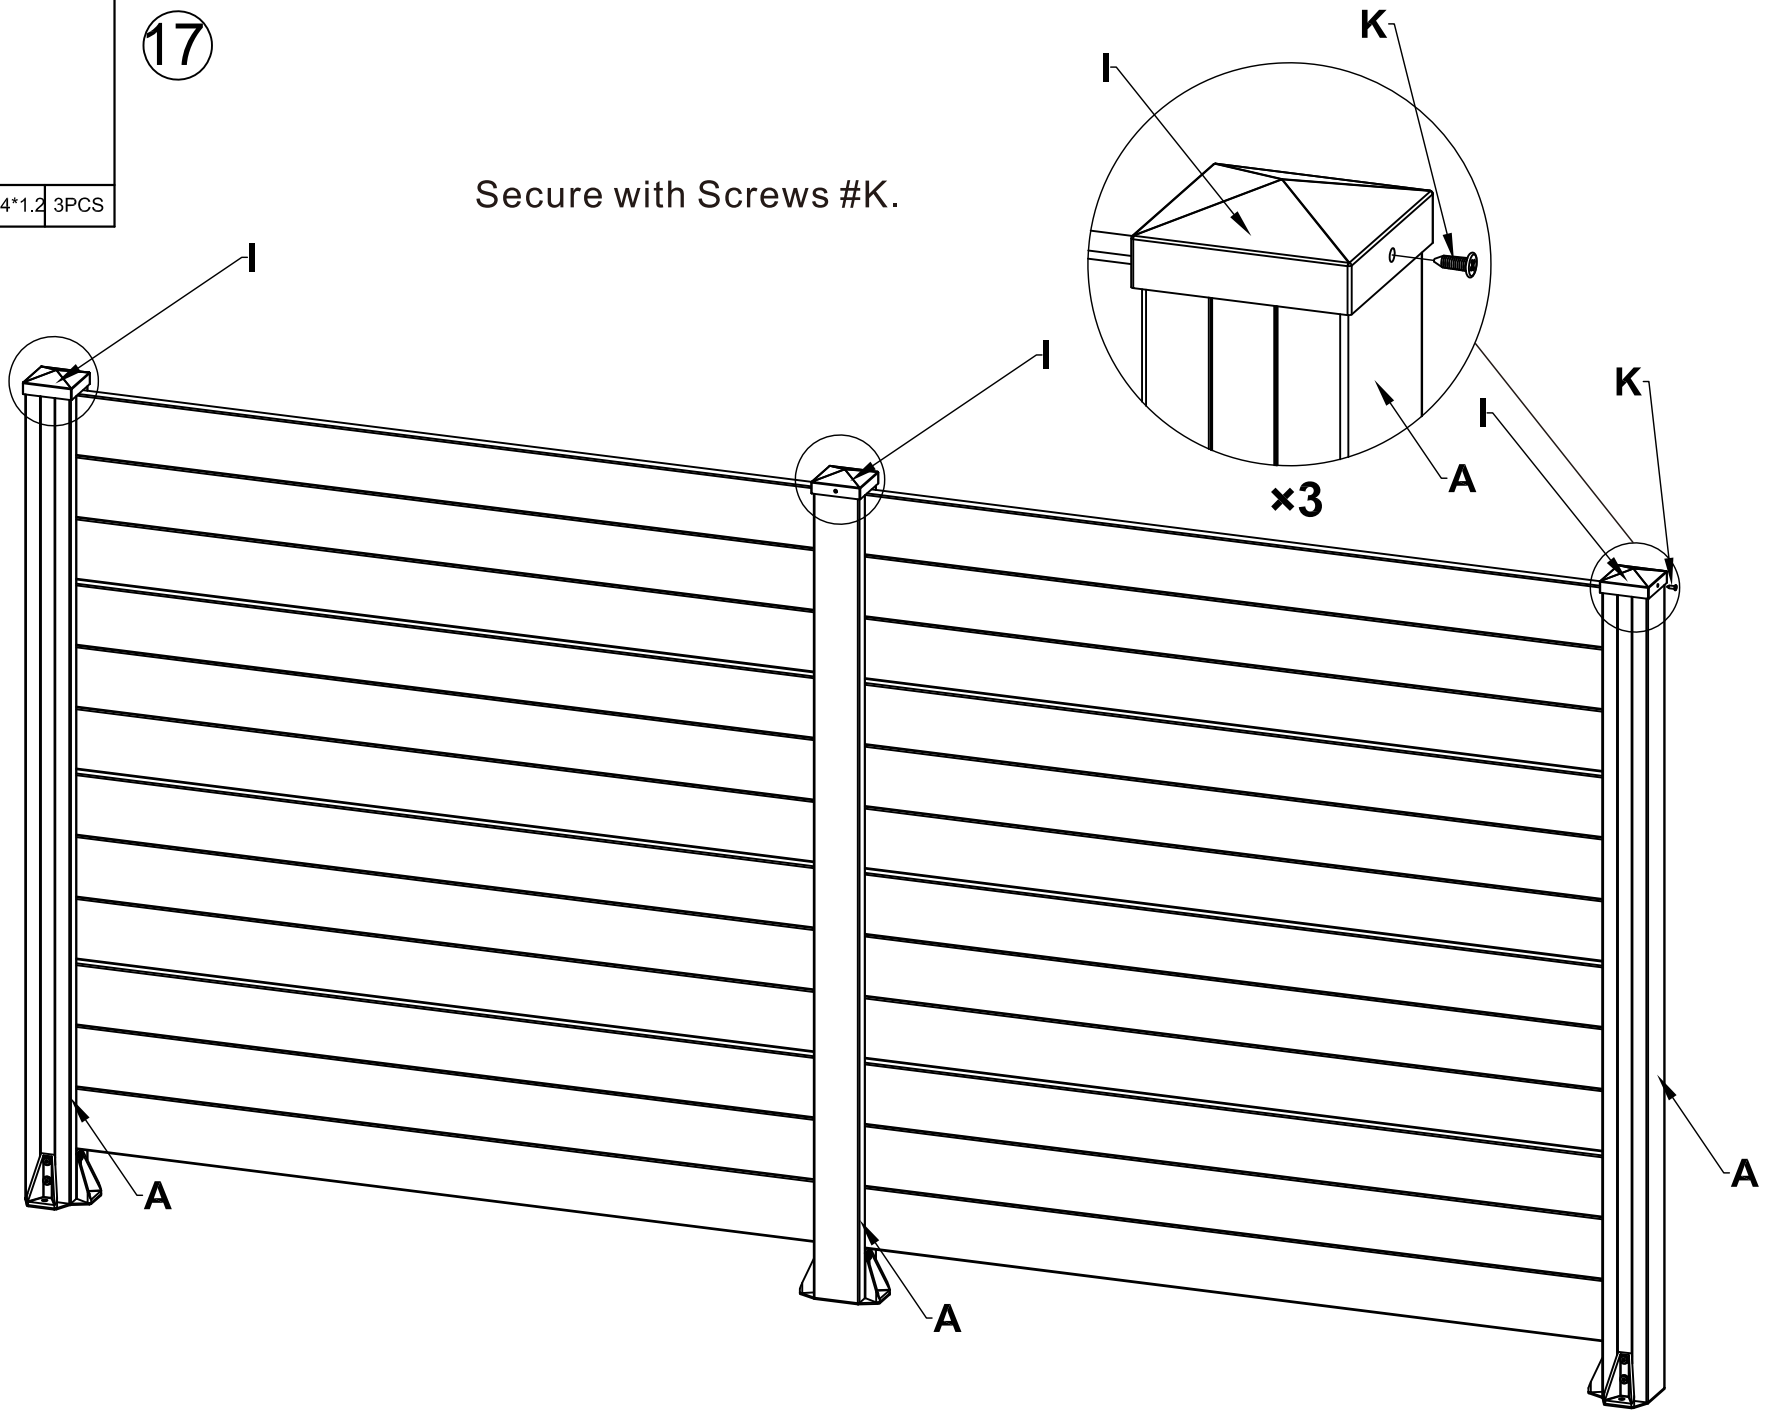

18

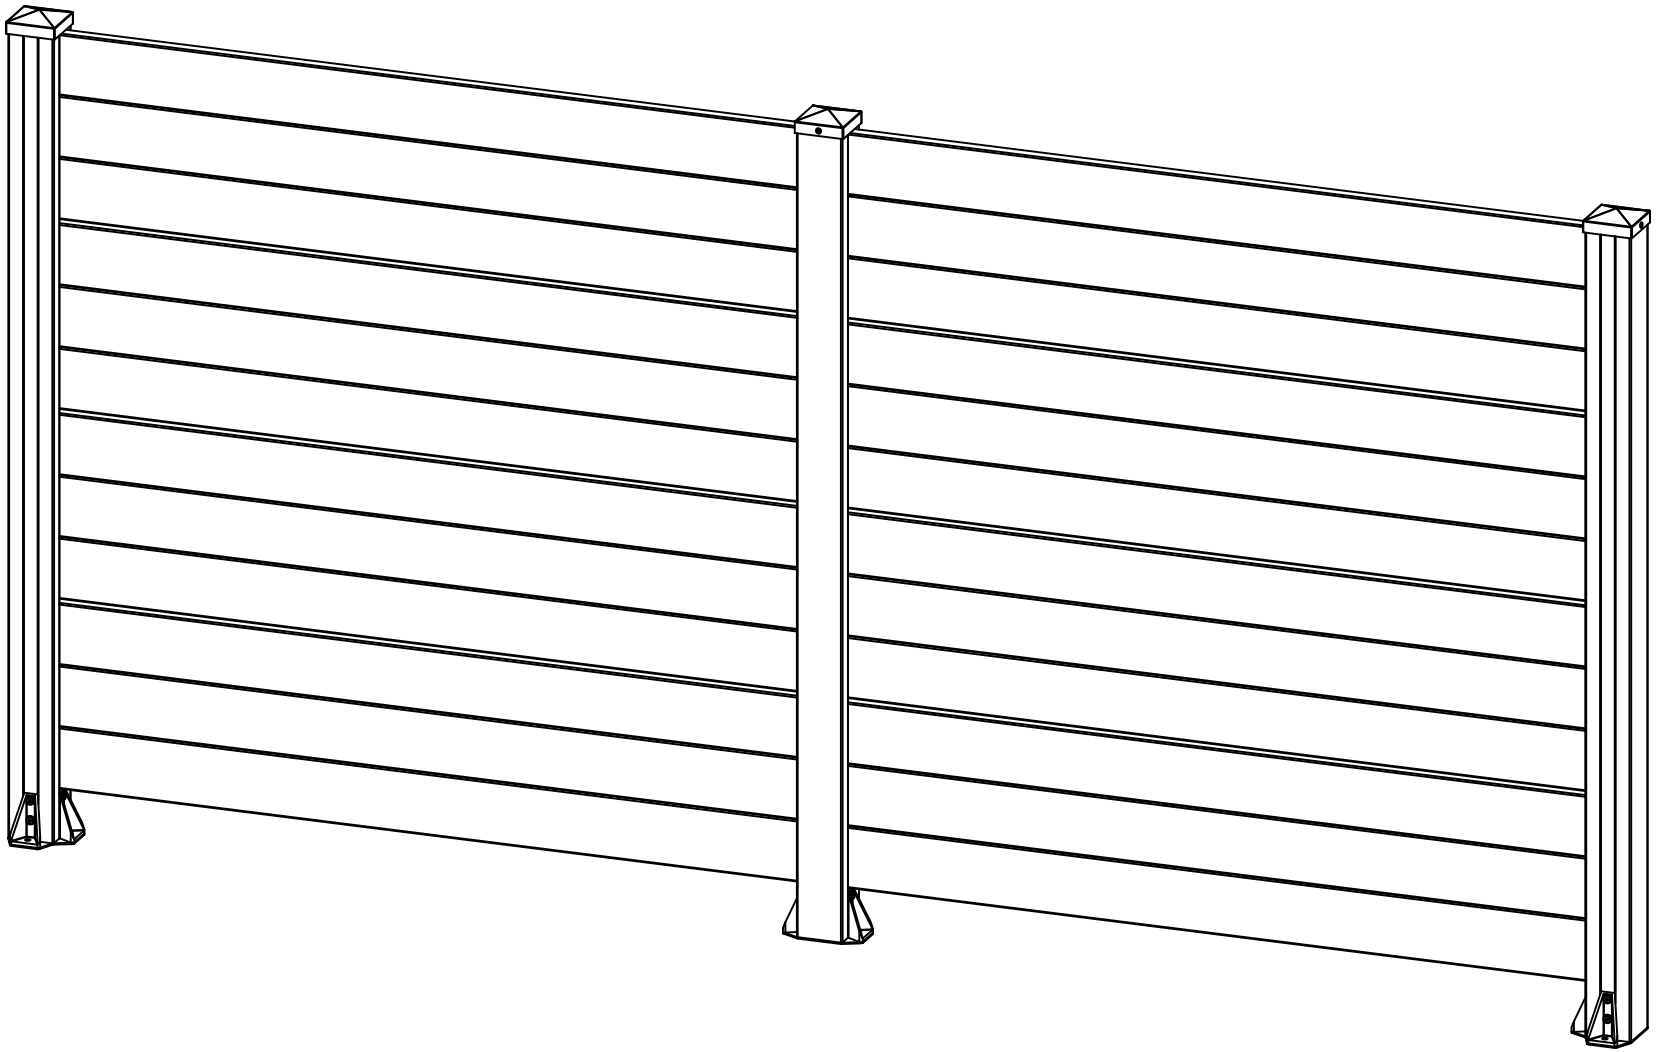

domi
outdoor living

RESORT COMFORT IN YONR

OWN BACKYARD

Support:

Business cooperation contact email:
marketing@domioutdoorliving.com

After-sales contact email:
service@domioutdoorliving.com

Please tell us your order ID when contact.

Attach photos of damaged part for instant reply.