


Farmhouse Executive Desk

ASSEMBLY, CARE & USE INSTRUCTIONS

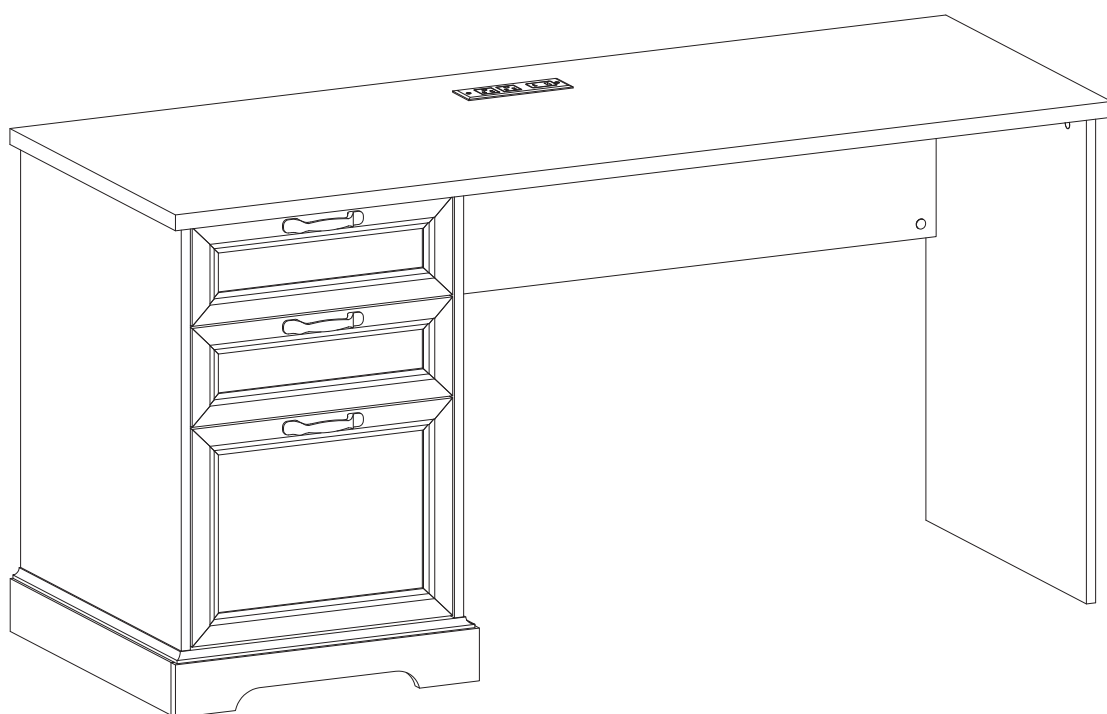


THANK YOU

We appreciate the trust to purchase our Executive Desk. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing us!




Estimated time for assembly:

120 mins



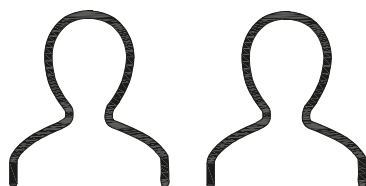



2 Personer

PACKAGE CONTENTS

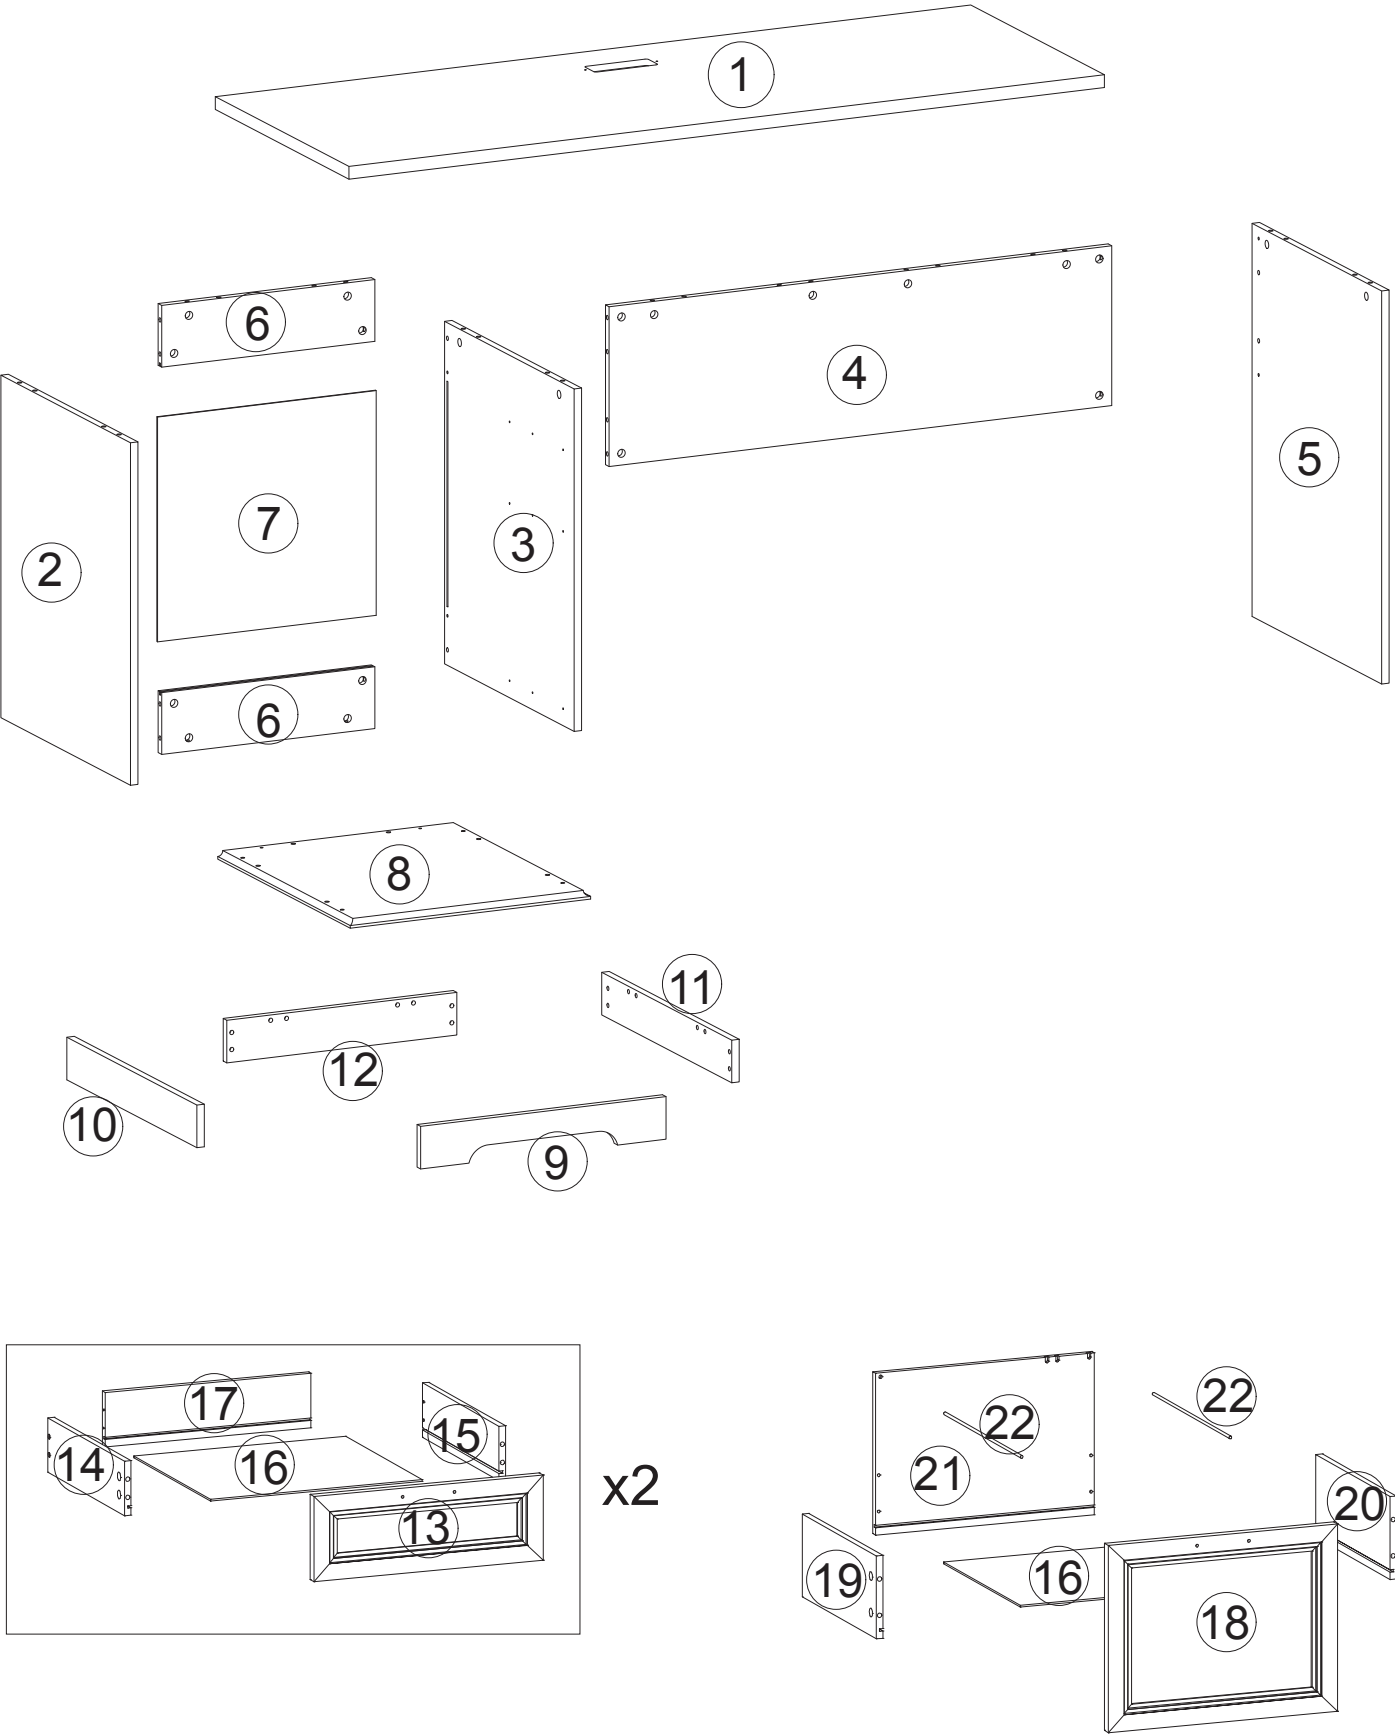


Hardware List

A		Ø8x30mm	Wood dowel	26+1 PCS
B		Ø6x33.5mm	Cam bolt	34+1 PCS
C		Ø15x 9.5mm	Cam lock	34+1 PCS
D			Sticker	34+1 PCS
E			Power socket	1 PCS
F			Connector	12 PCS
G		M6x12mm	Bolt	24+1 PCS
H			Back buckle	4 PCS
I		Ø3x16mm	Flat-head screw	4 PCS
J		M 4	Hex key	1 PCS
K		ø6x48mm	Screw	4 PCS
L			Handle	3 PCS
M		ø4x22mm	Handle bolt	6 PCS
N		ø4x30mm	Screw	12+1 PCS
O		L350mm	Drawer slider	3 PCS
P		ø3.5x12mm	Screw	38+1 PCS

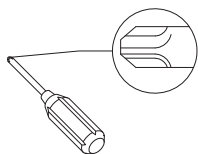


Philips head screwdriver required for assembly
(not included)

Step 1

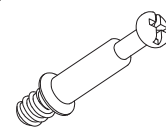




B x4





O-CLx3




P x3

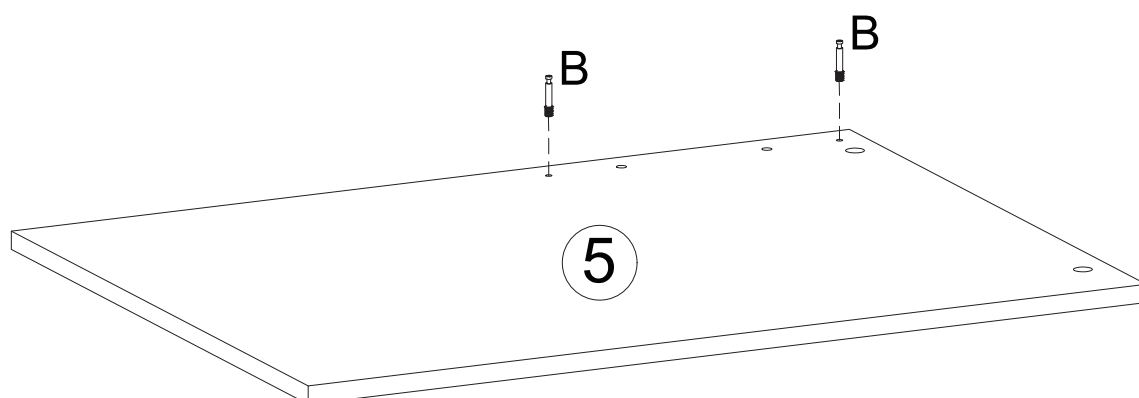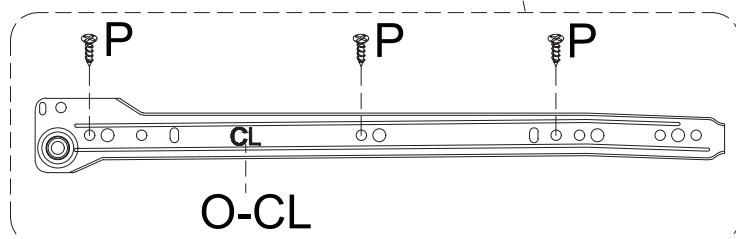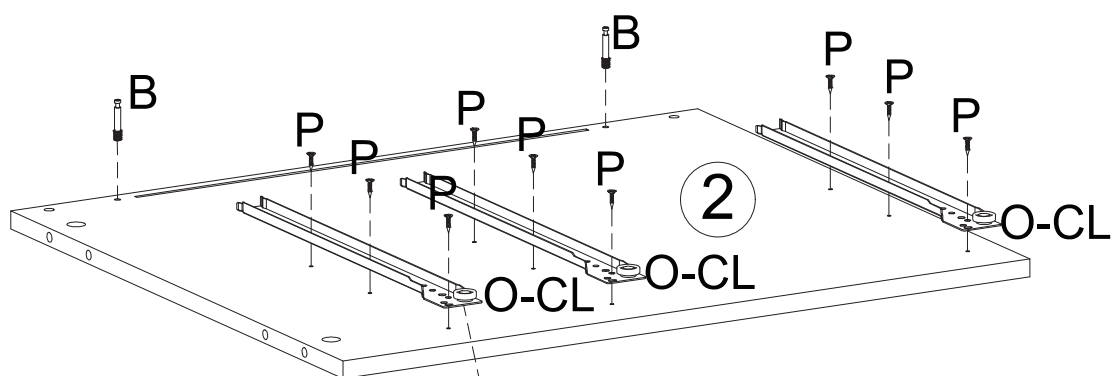

Step 2

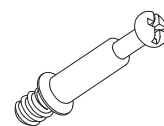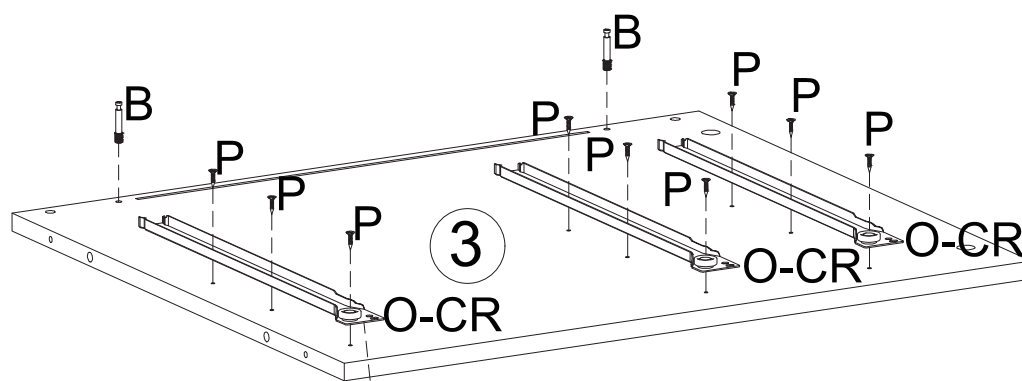



B x4




O-CRx3






P x9

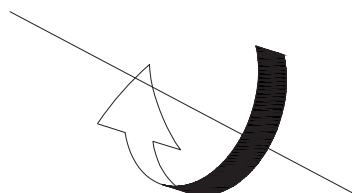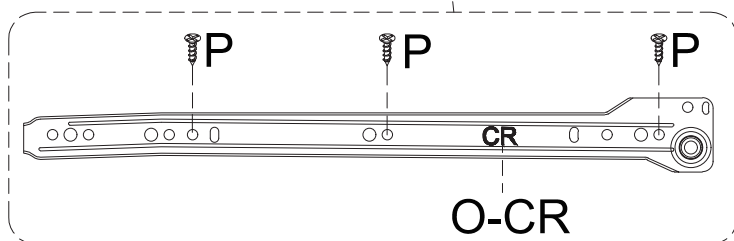

180°

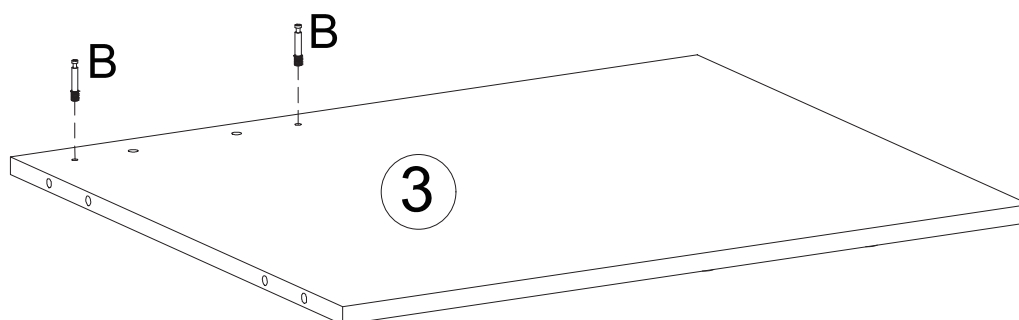


Step 3

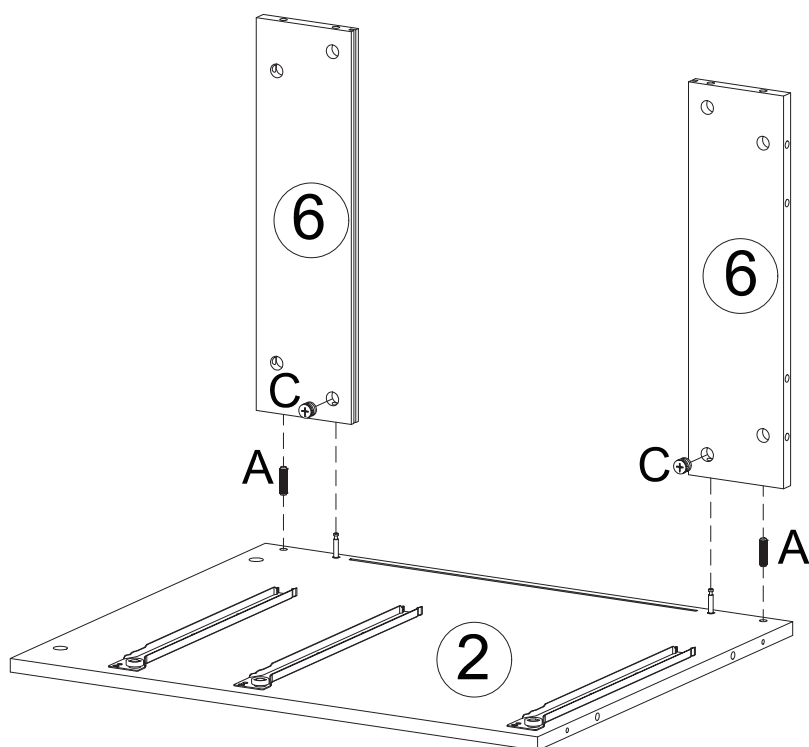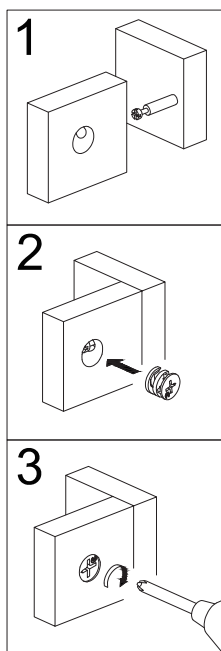



A x2



C x2

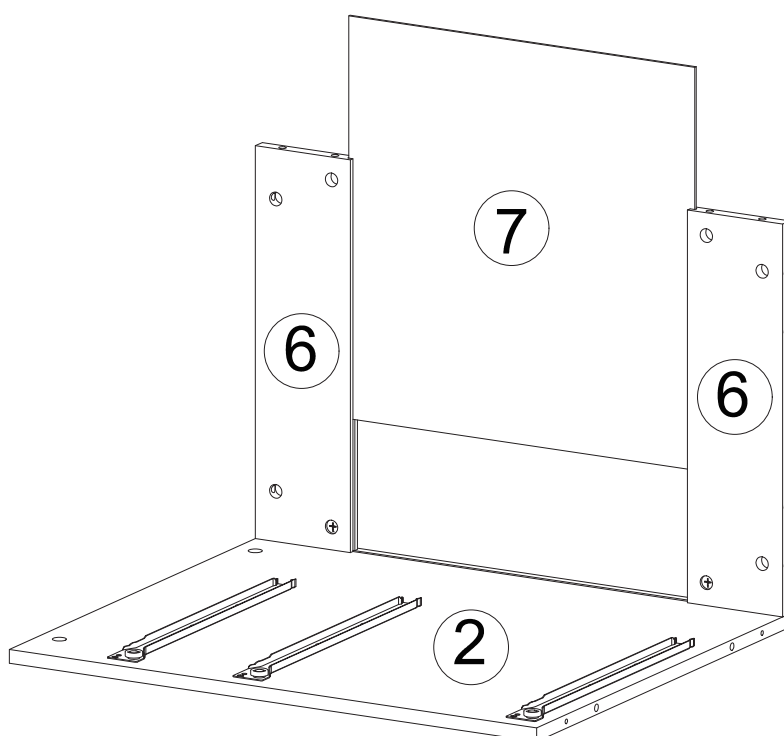


Step 4

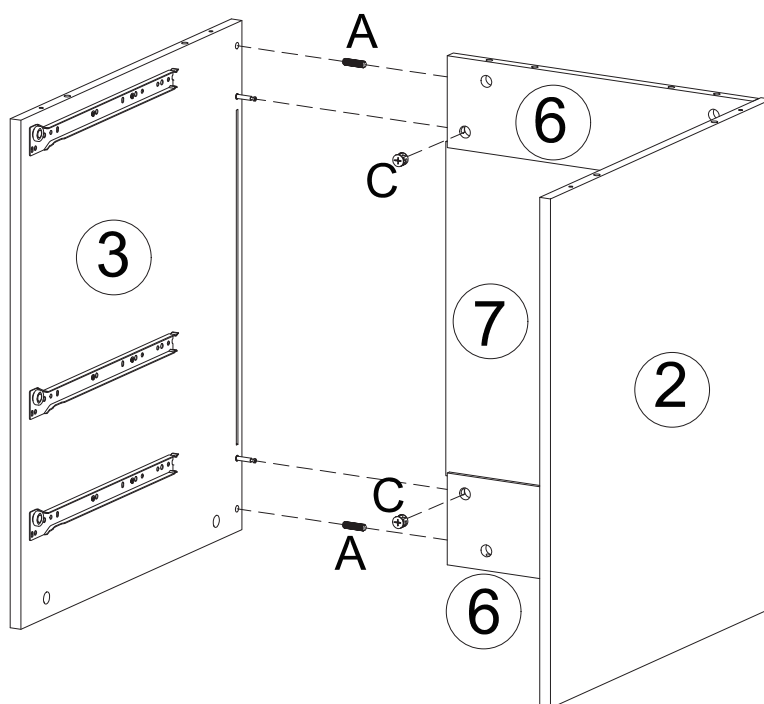




A x8



C x2

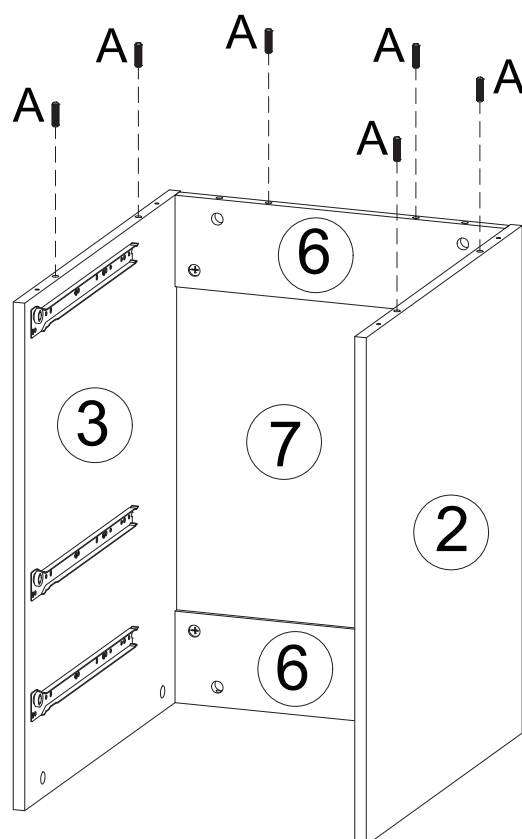

Step 5

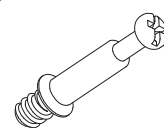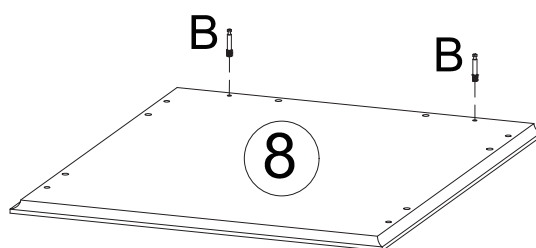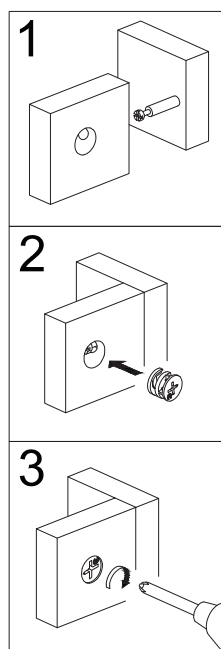

B x2




K x4





C x2



J x1

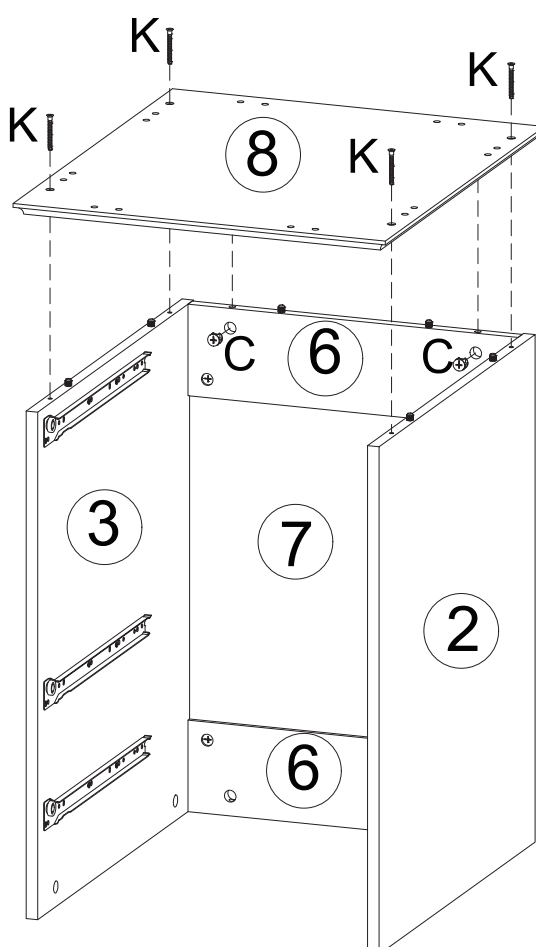




Step 6

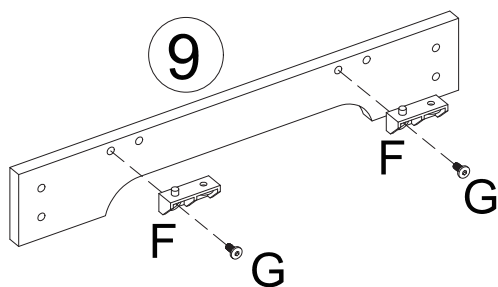

F x12



G x12

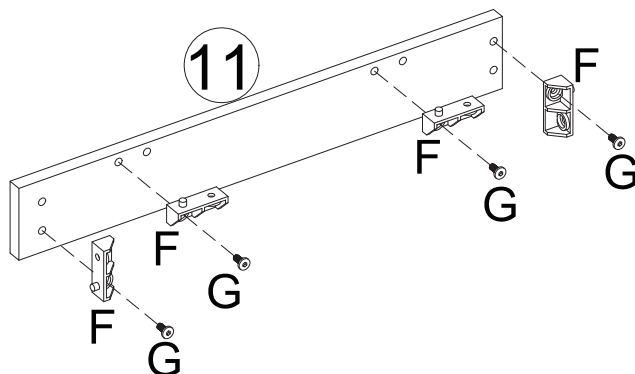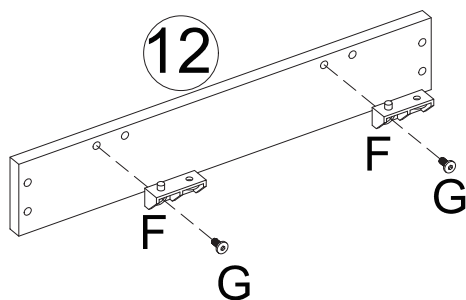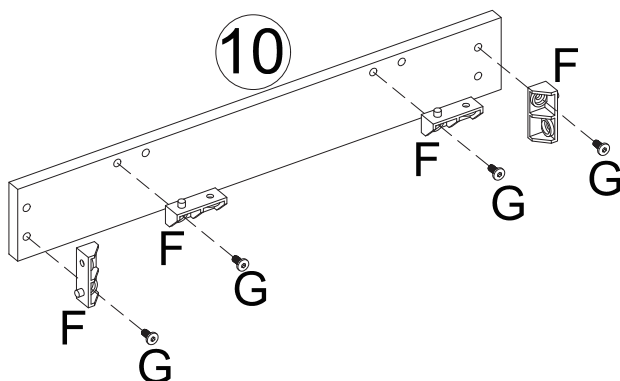

J x1


Step 7



G x4



J x1

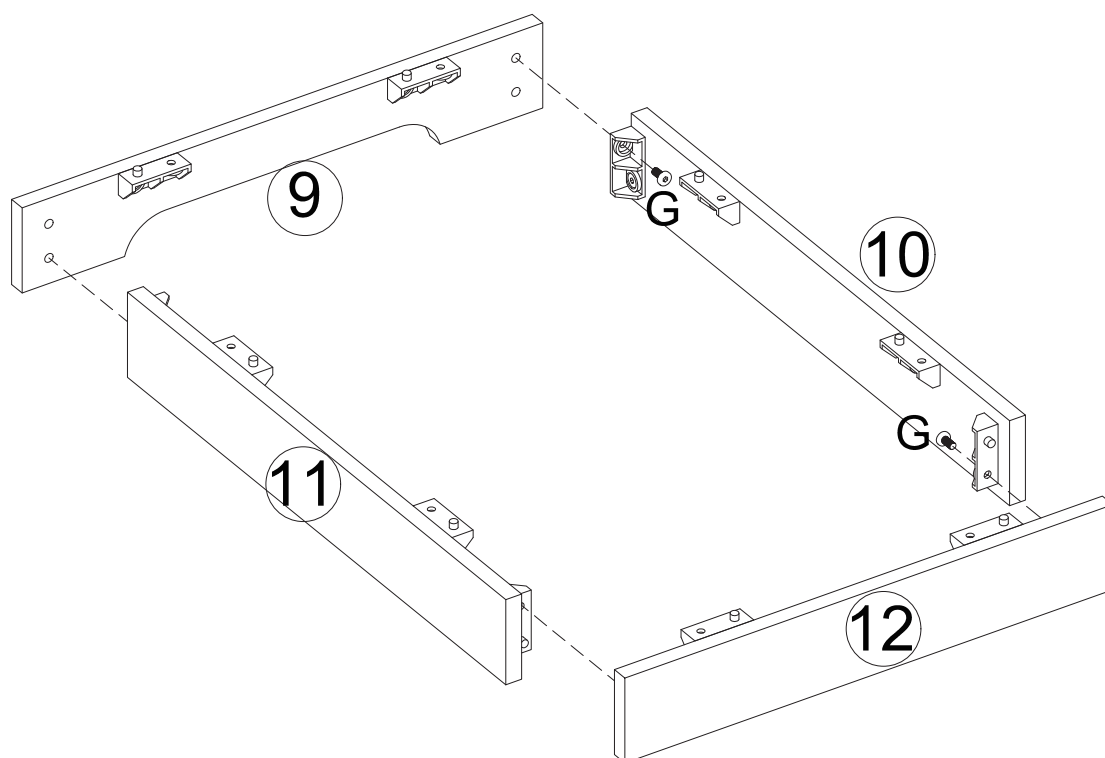


Step 8




G x8



J x1

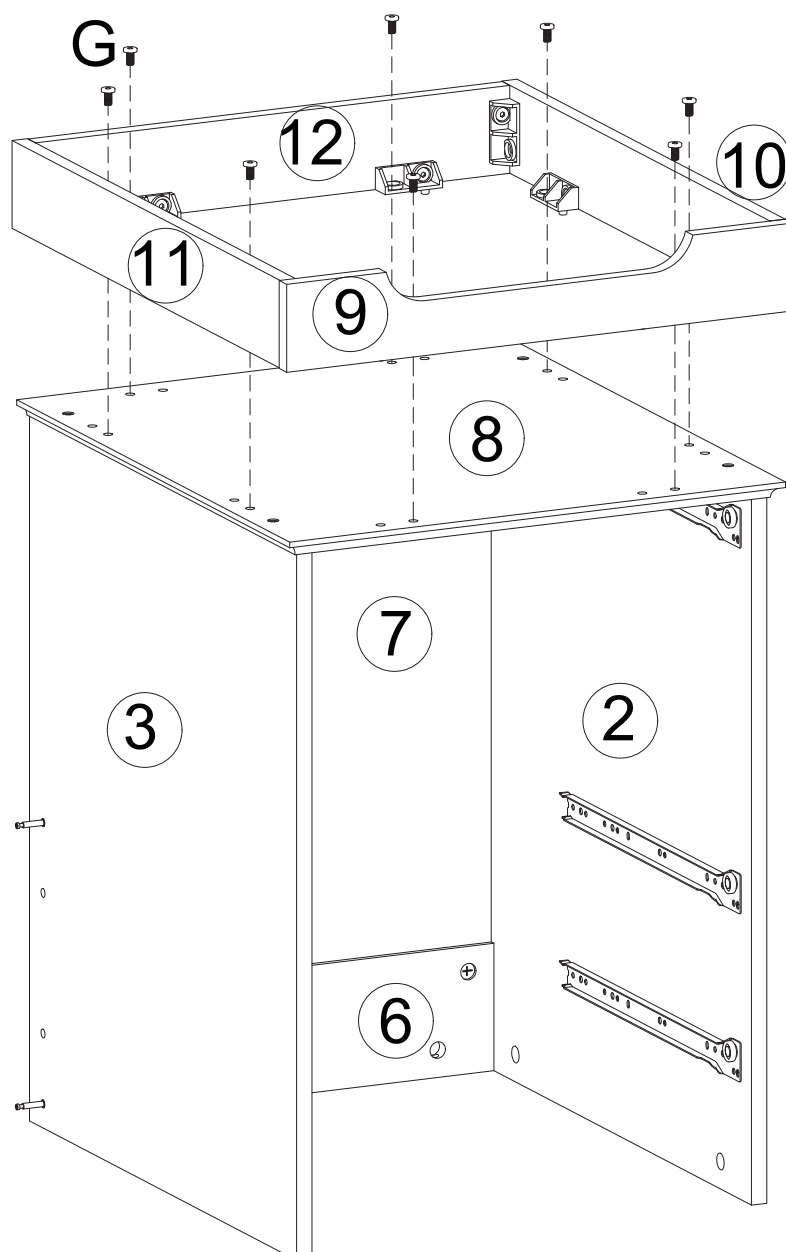



Step 9





A x2



C x2

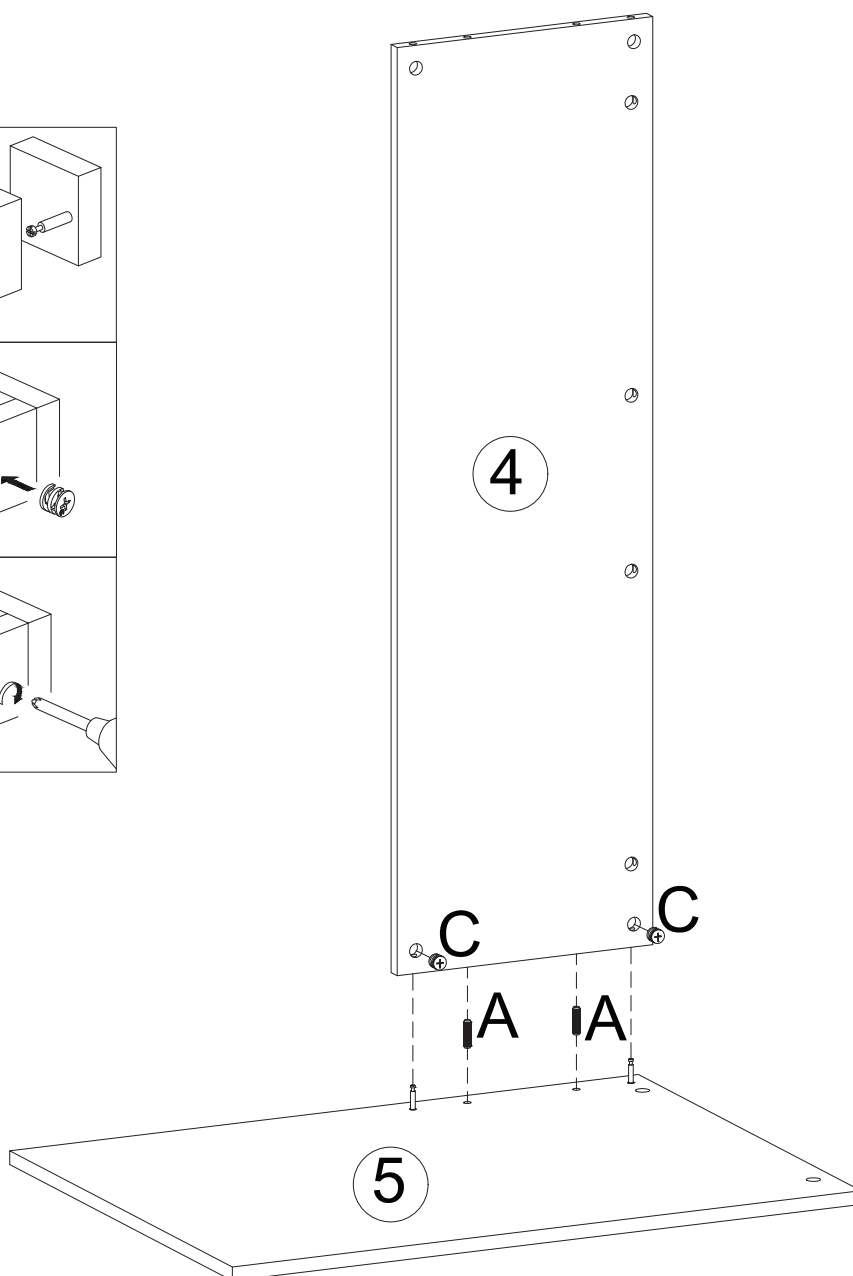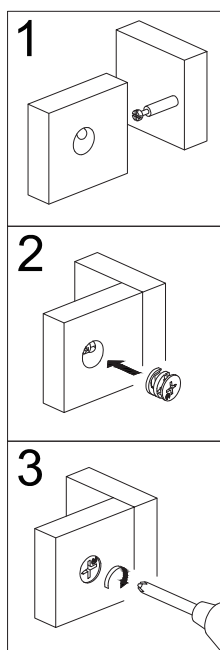


Step 10

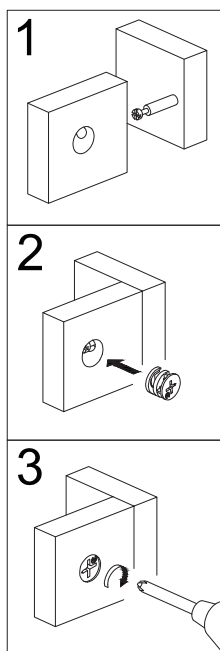


A x2




C x2

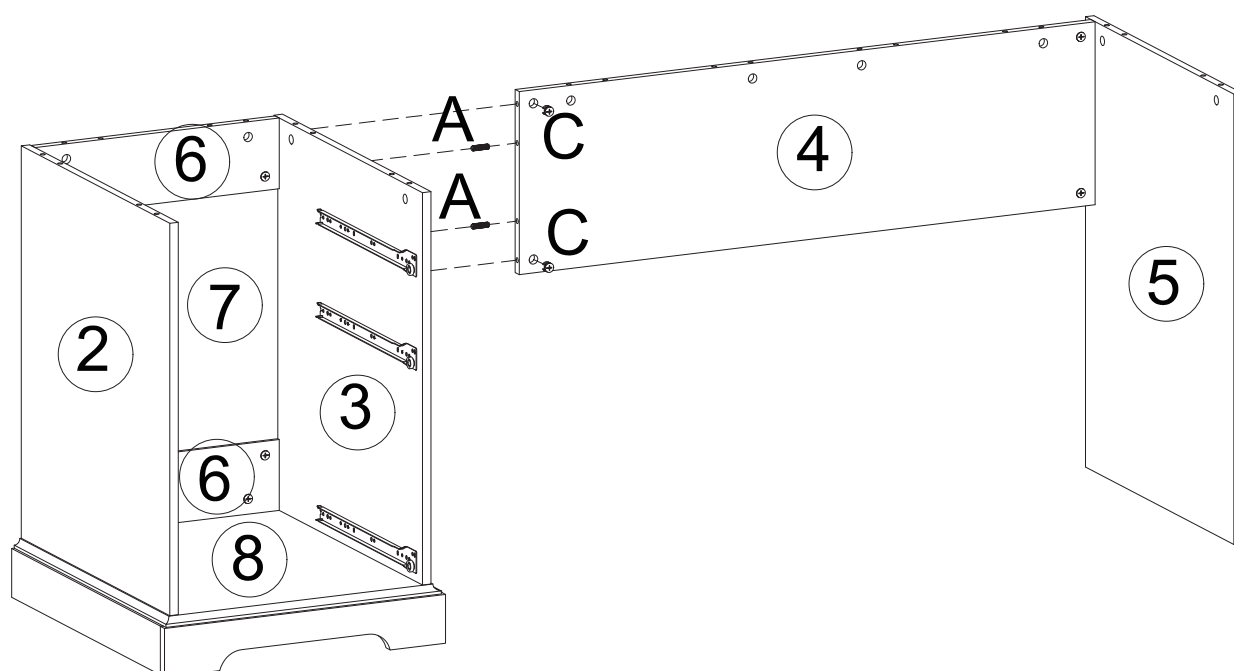



Step 11




A x12

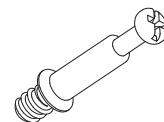


B x12

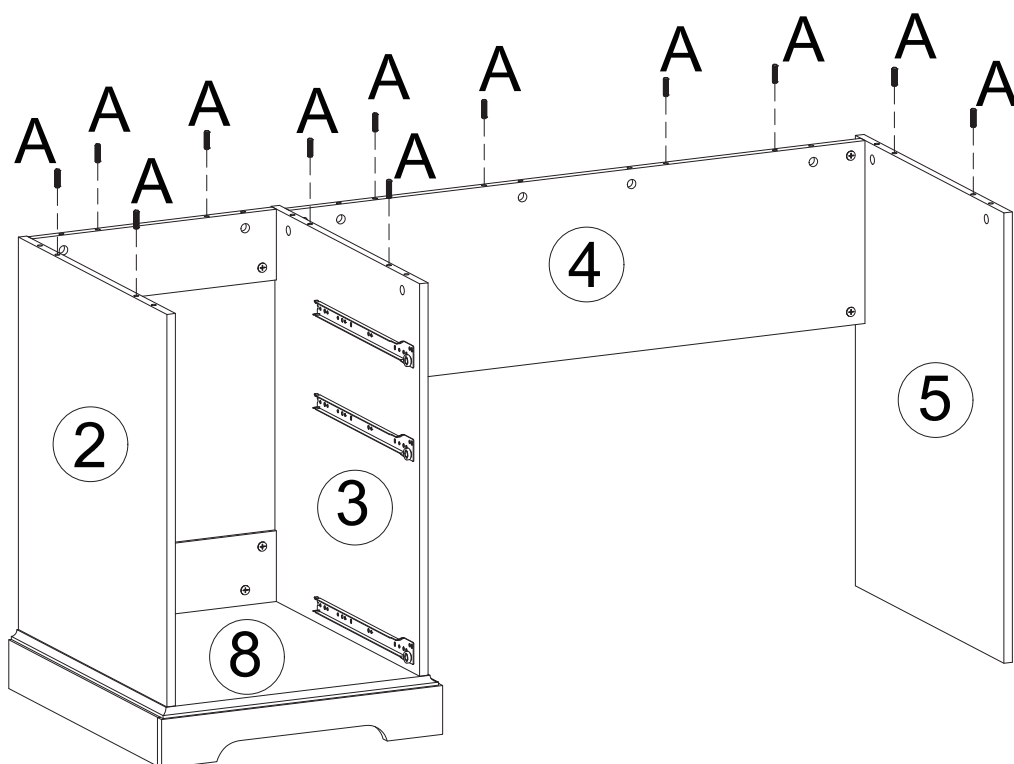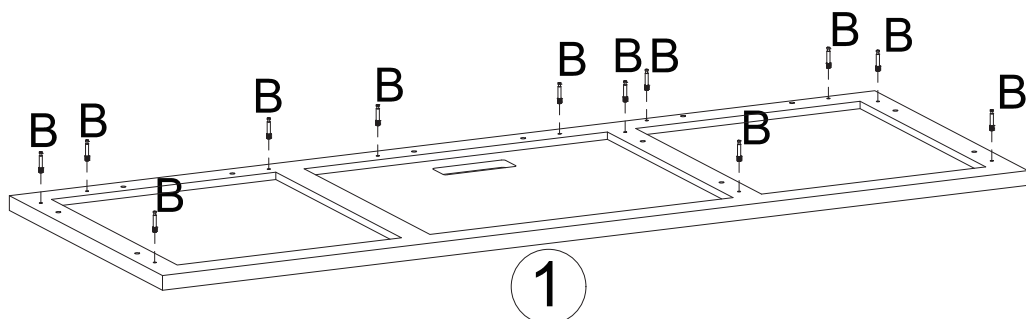


Step 12

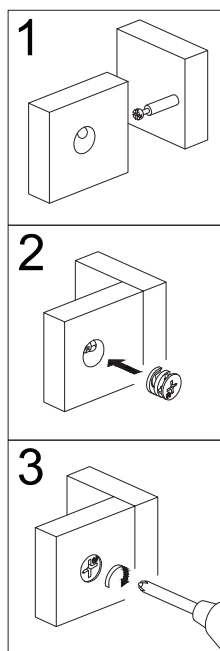

C x12

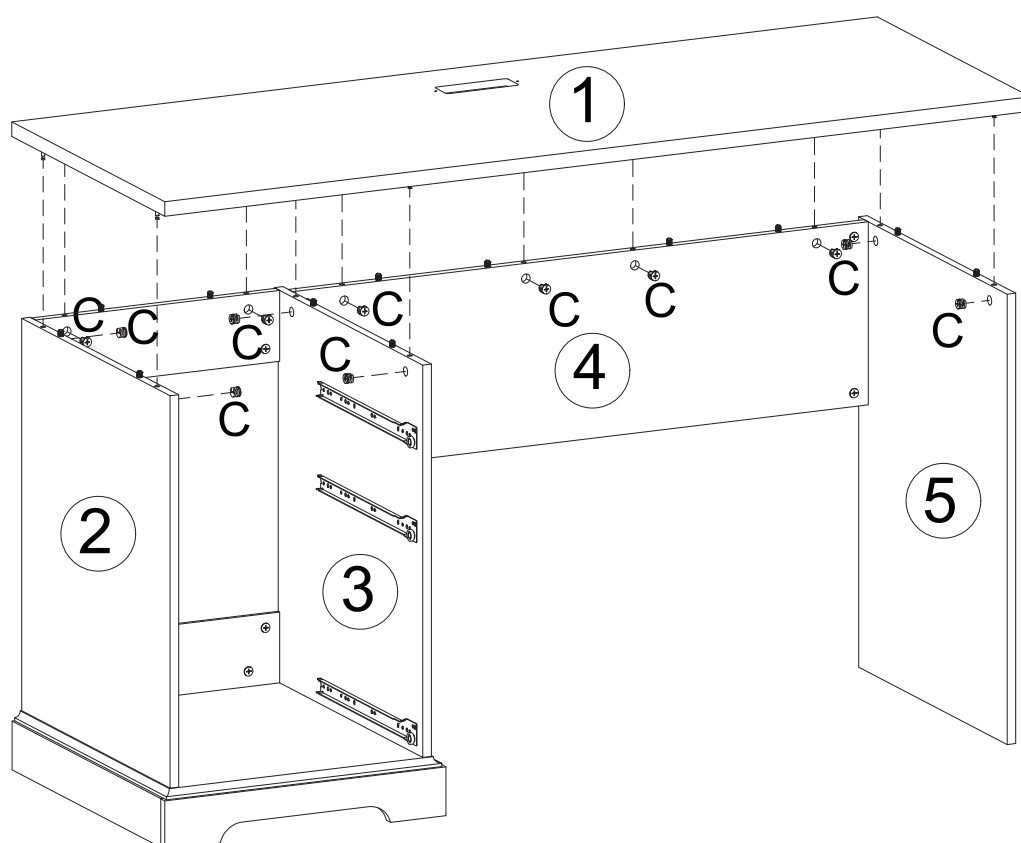



Step 13







H x4



I x4

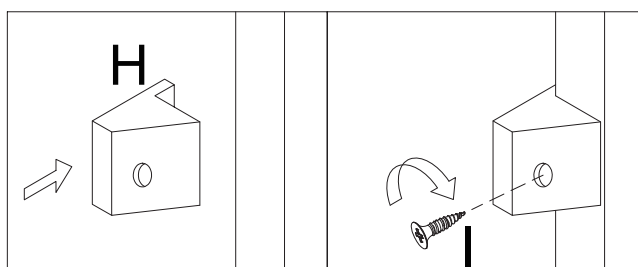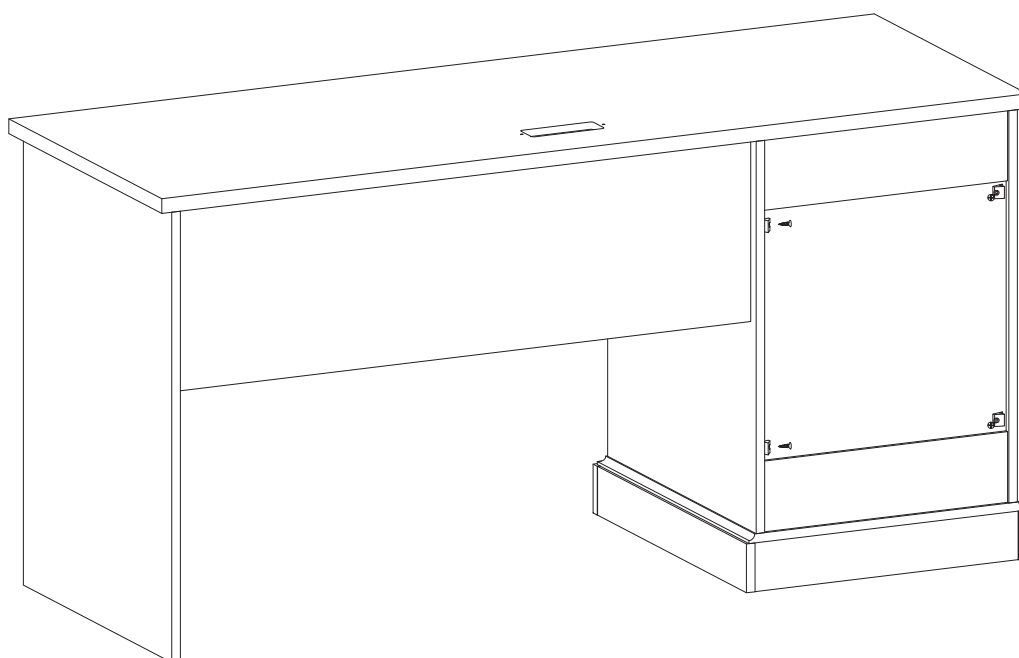



Step 14

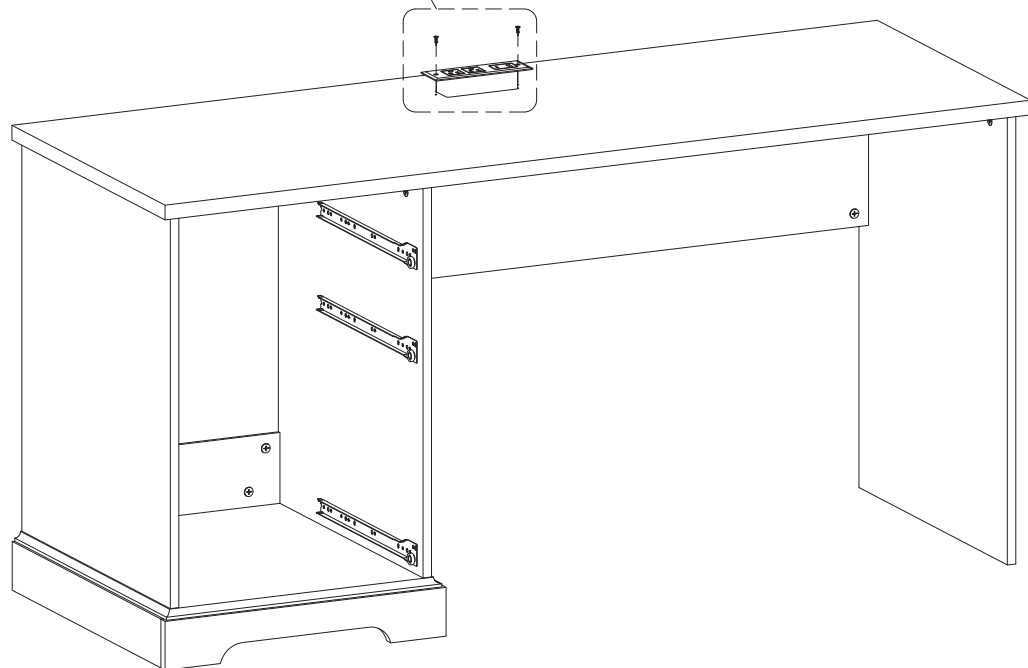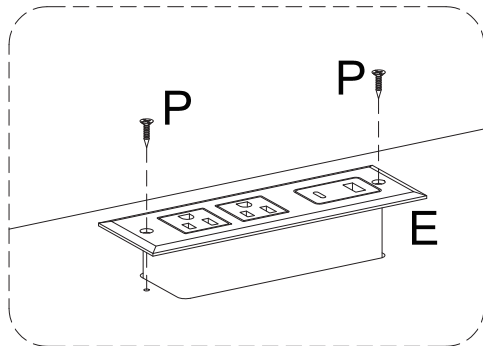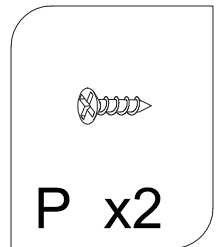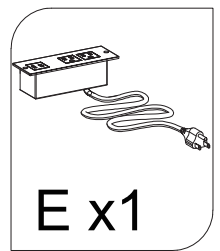

Step 15










N x8

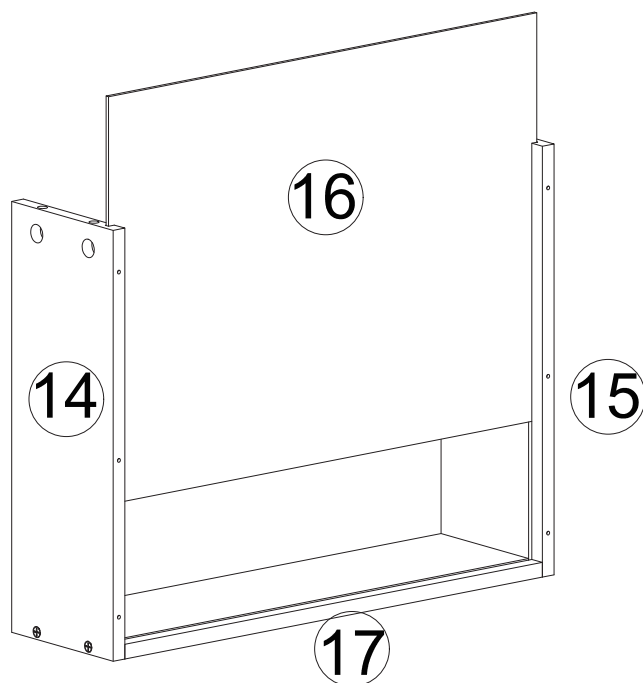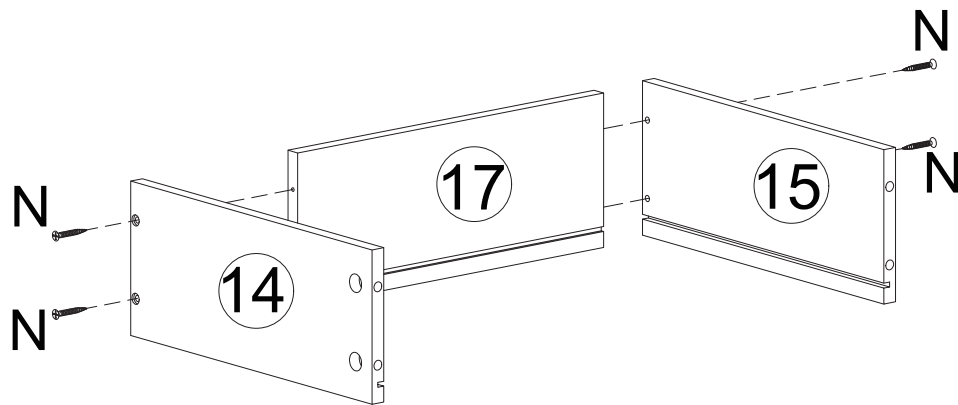

x2

Step 16

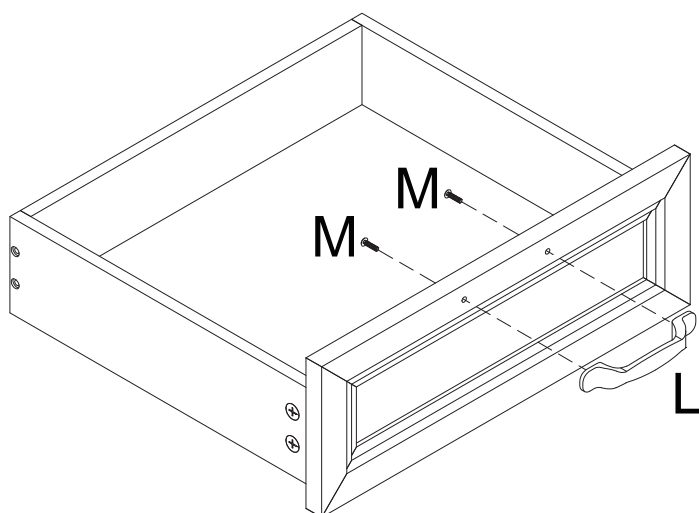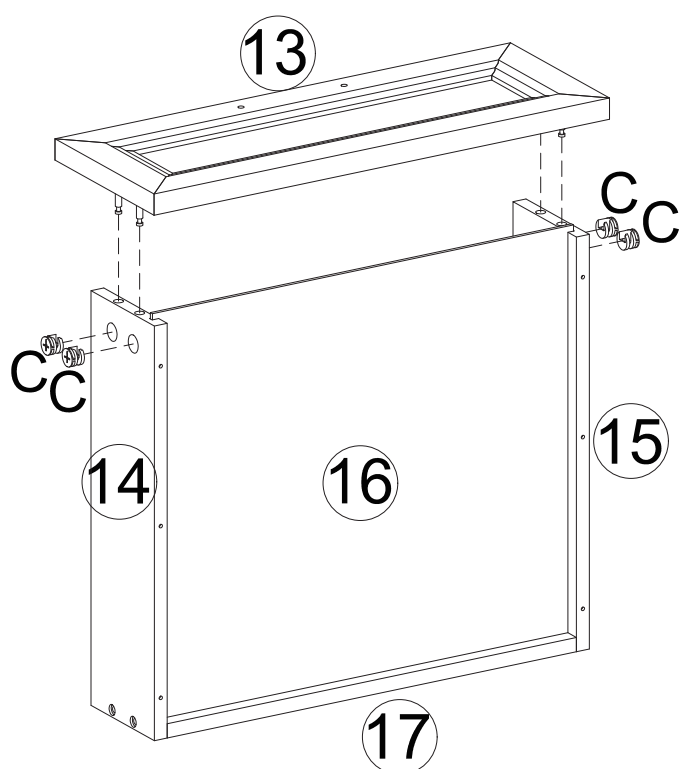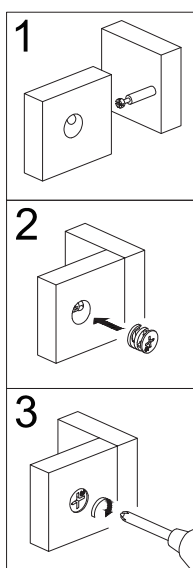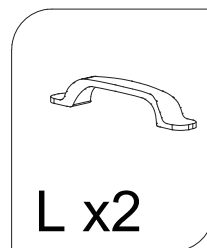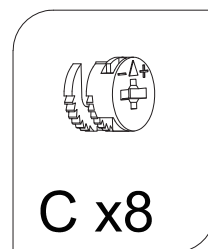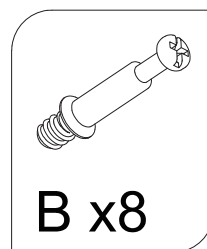
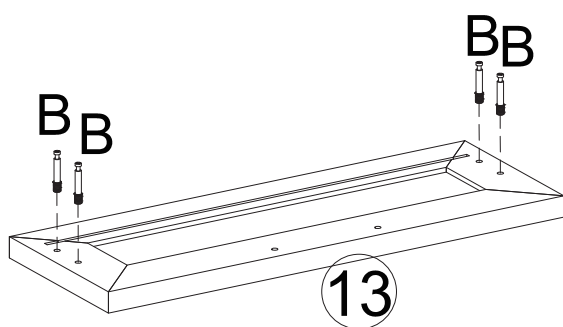


x2







Step 17



N x4

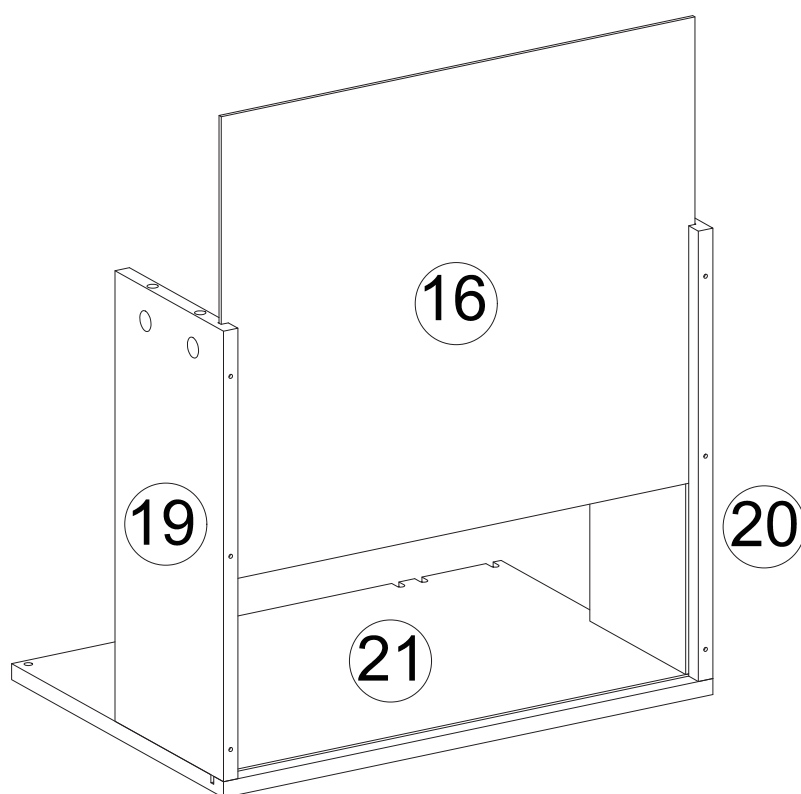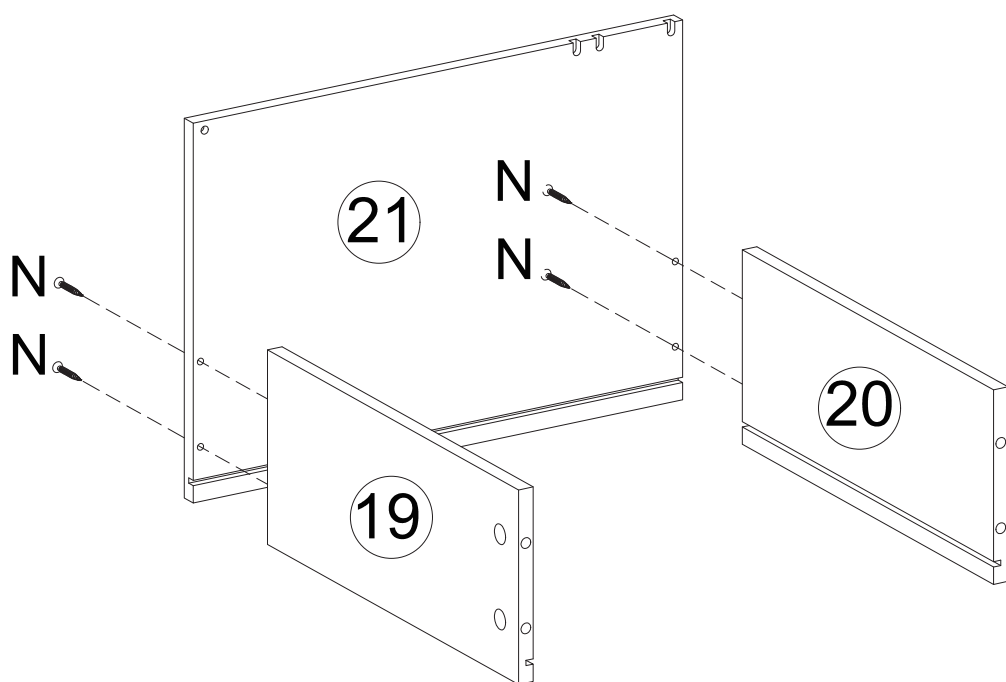


Step 18

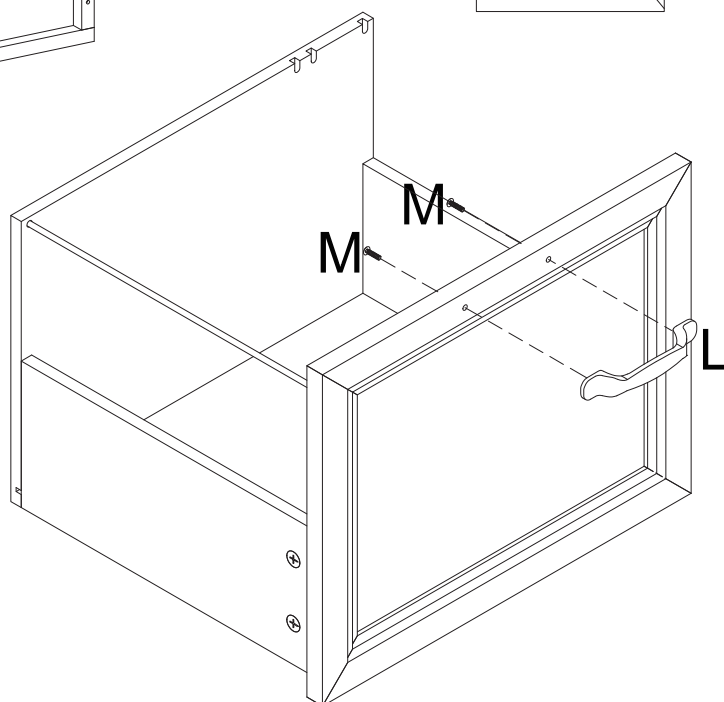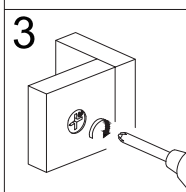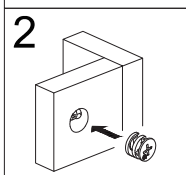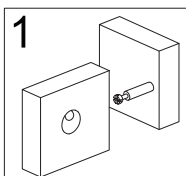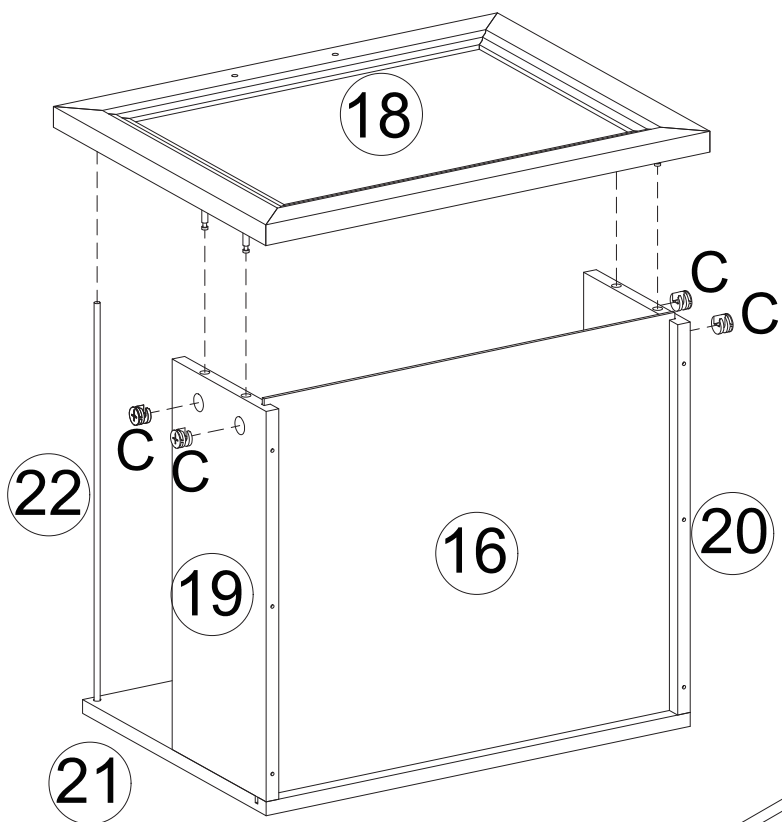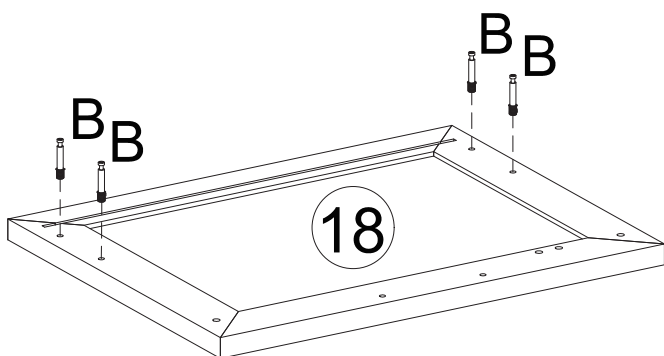


Step 19




P x12



O-DLx2



O-DRx2

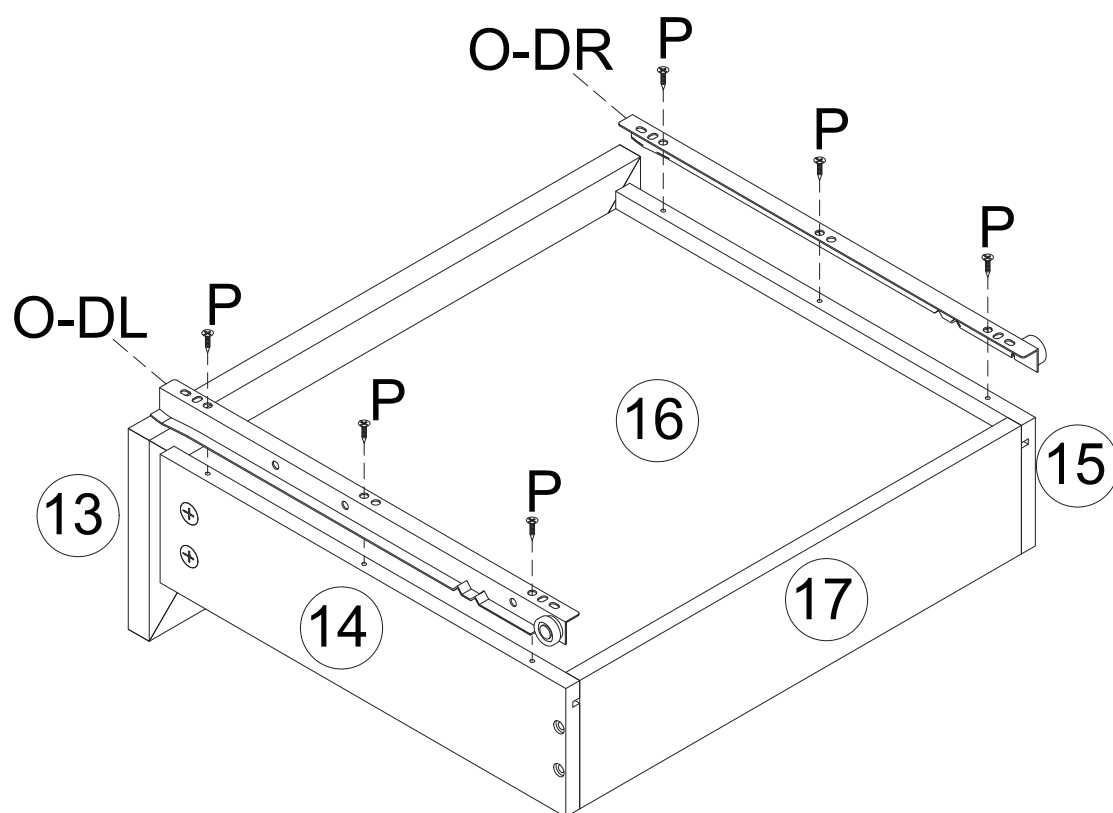


x2


Step 20




P x6






O-DLx1




O-DRx1

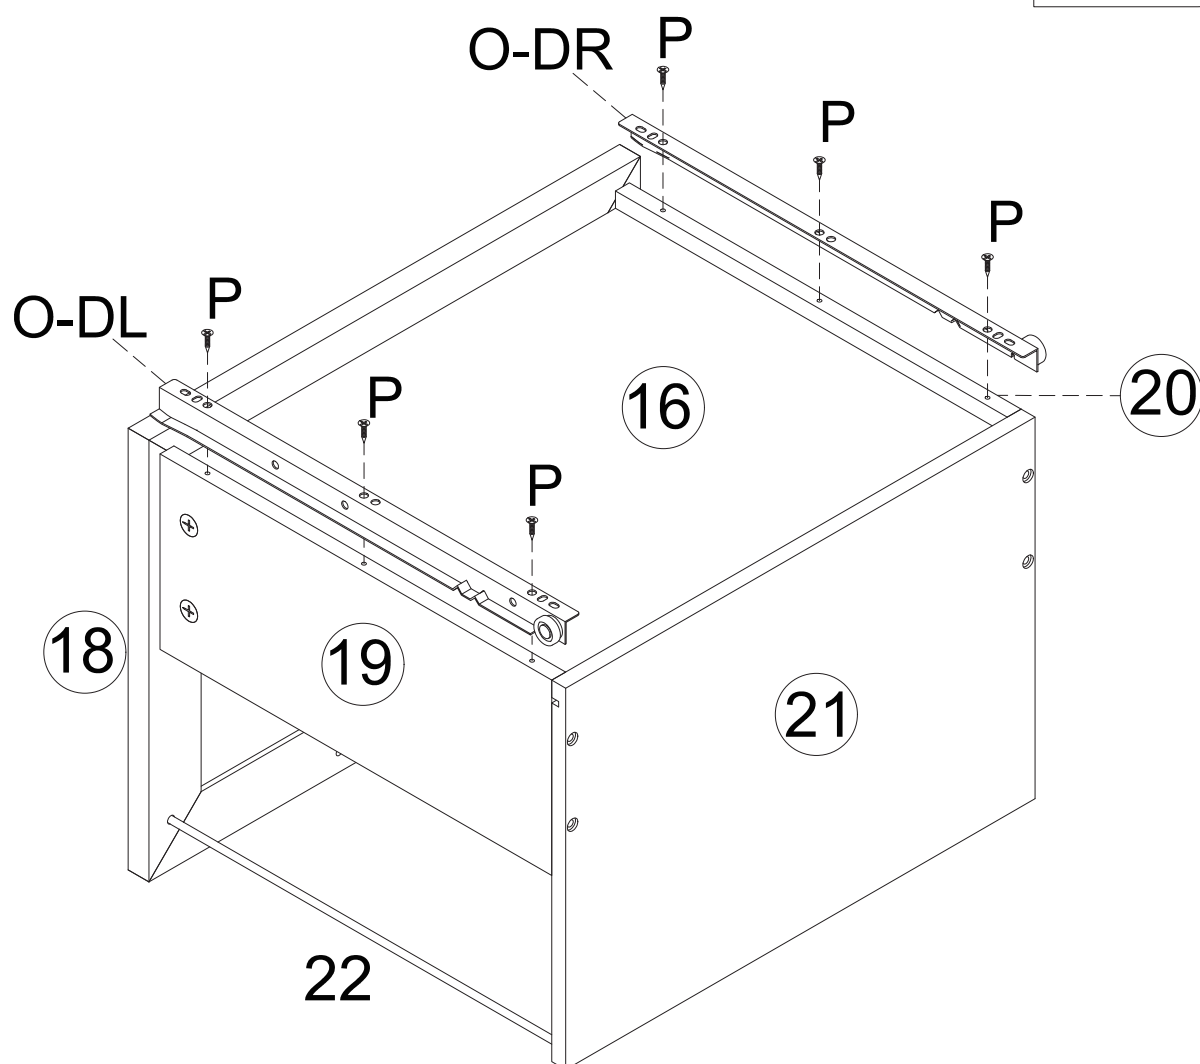


Step 21

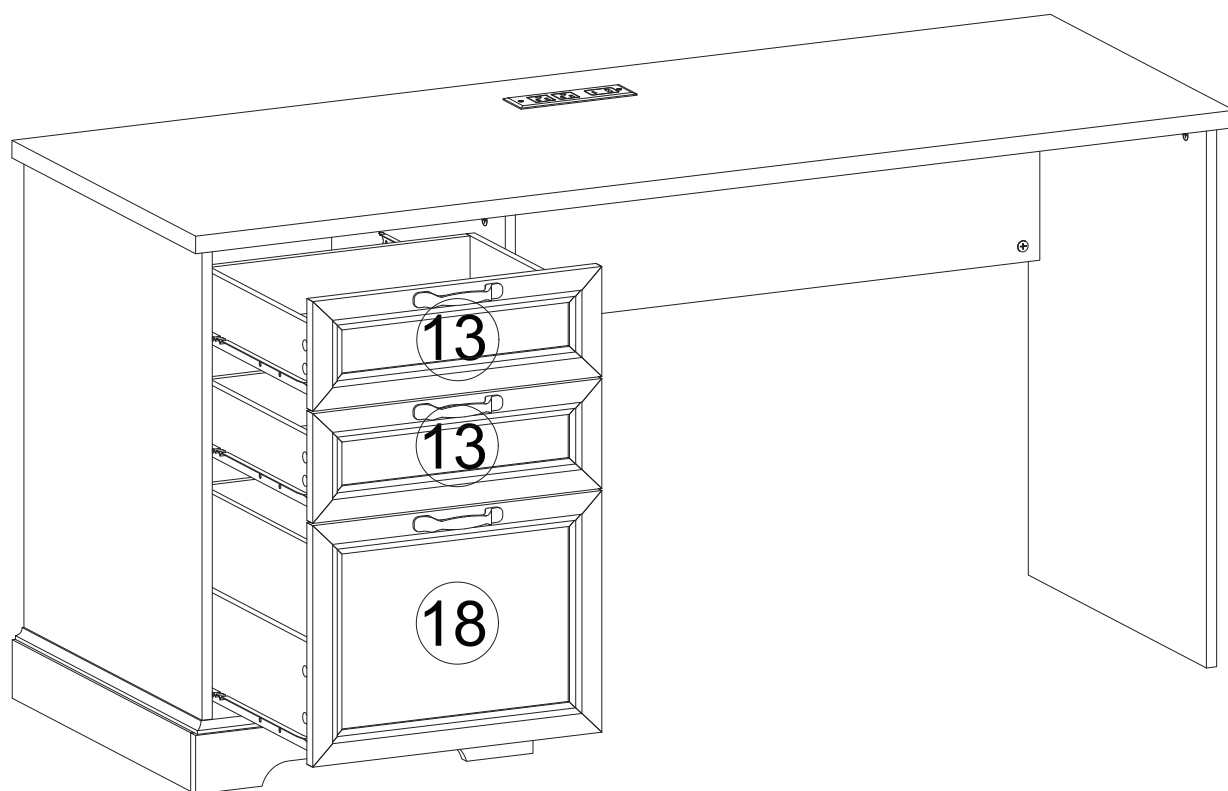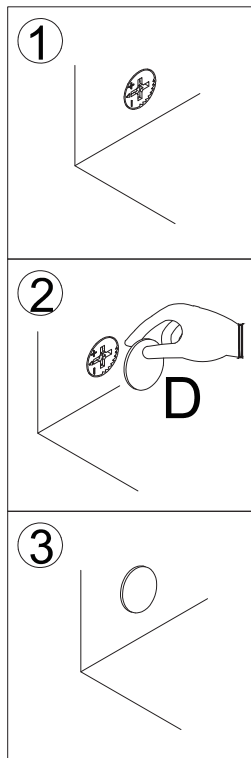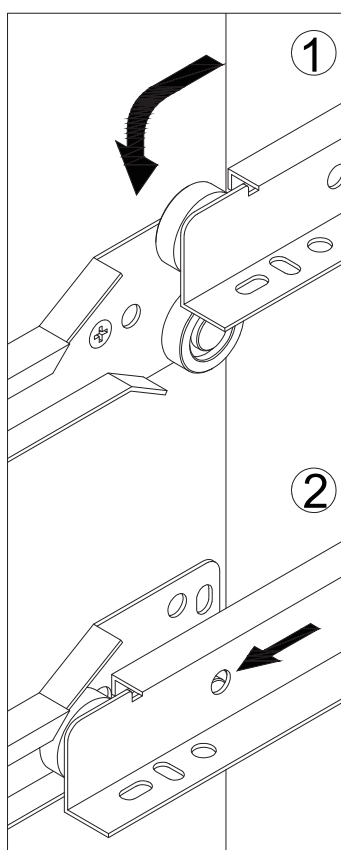

Step 22

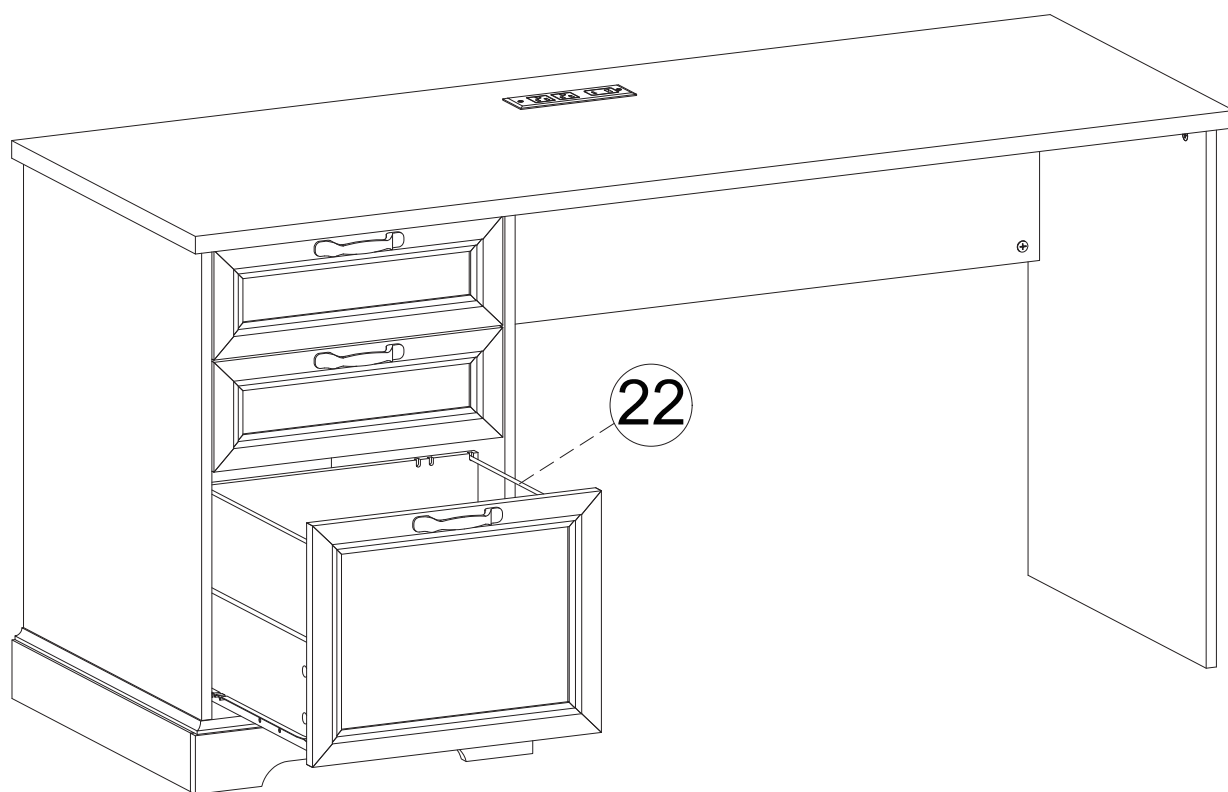


Step 23

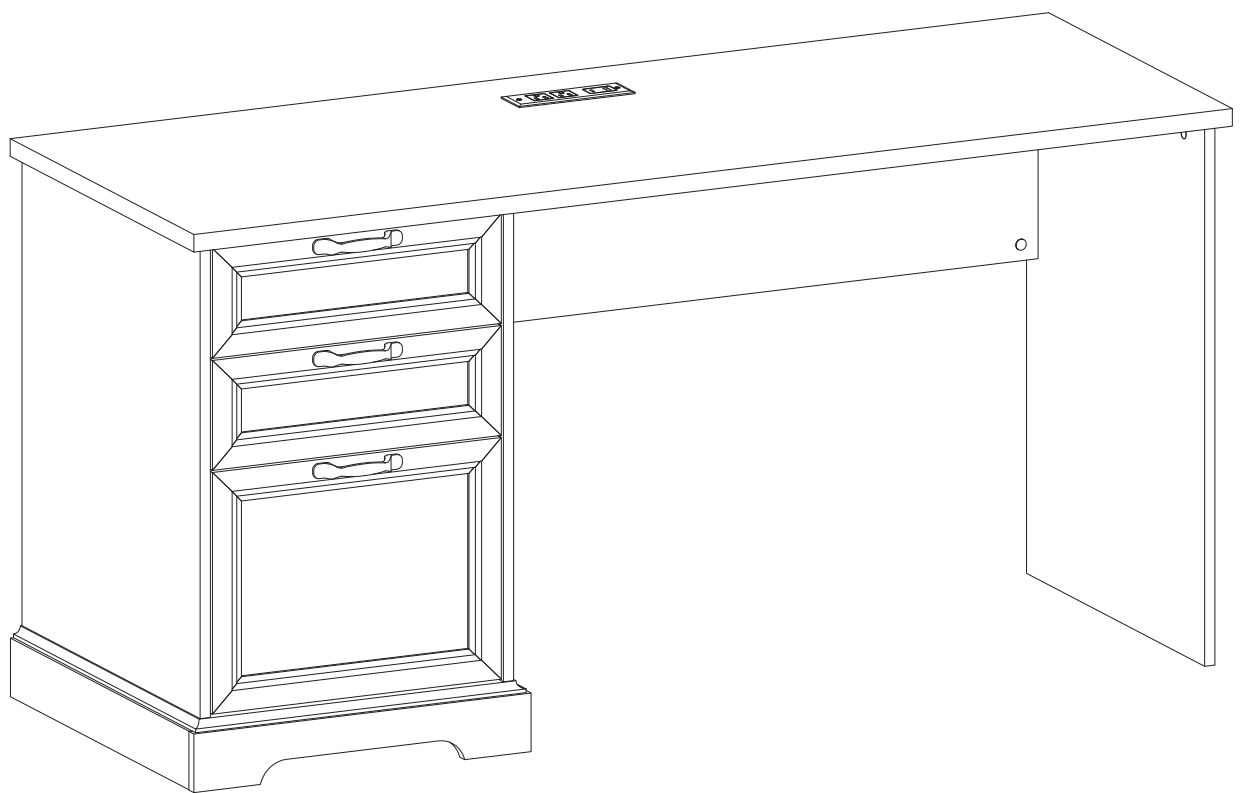

Mobile Lateral Filing Cabinet

ASSEMBLY, CARE & USE INSTRUCTIONS

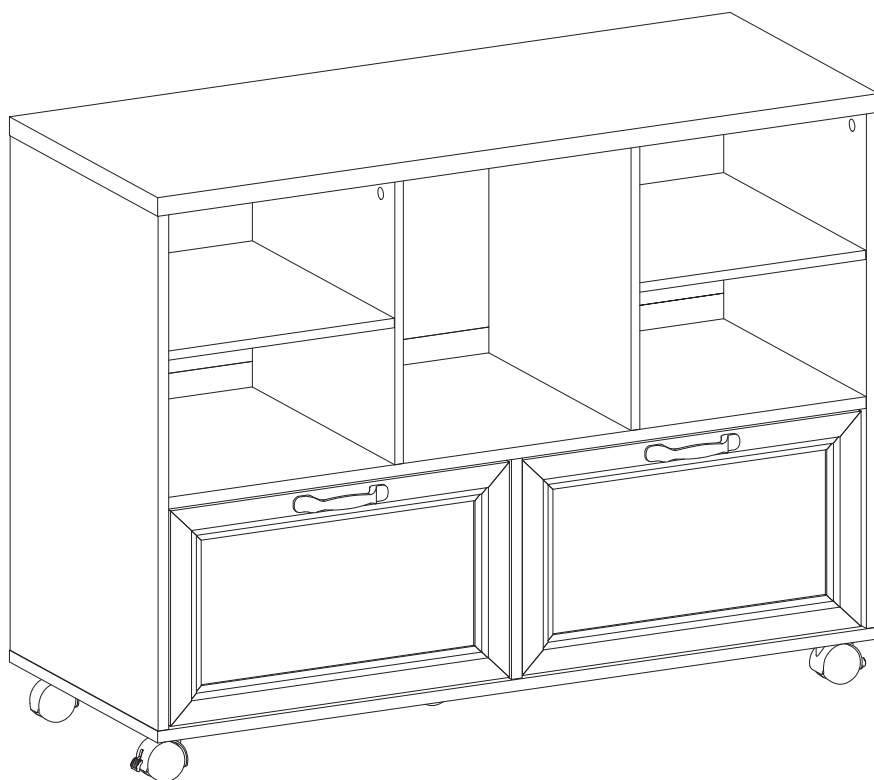


THANK YOU

We appreciate the trust to purchase our Filing Cabinet. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing us!





Estimated time for assembly:

120 mins

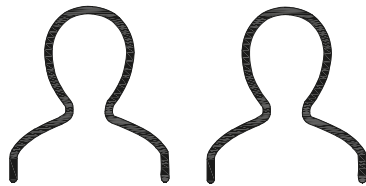


2 Personer


PACKAGE CONTENTS

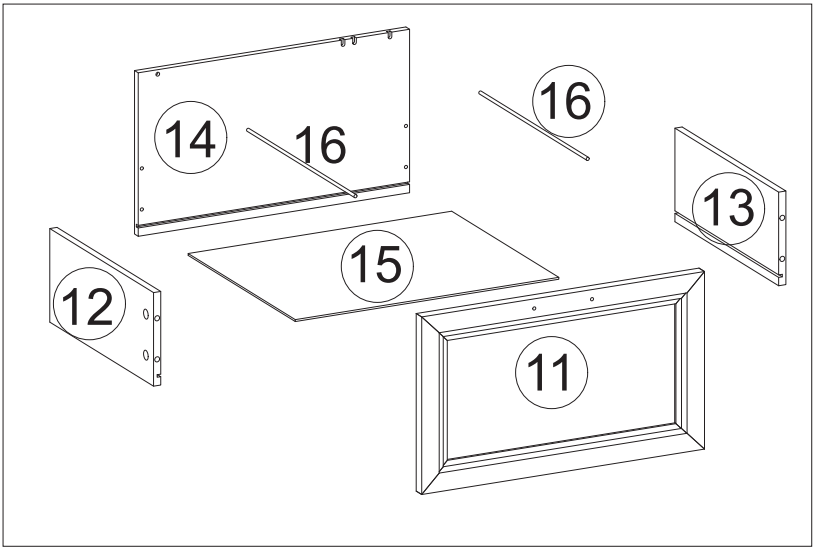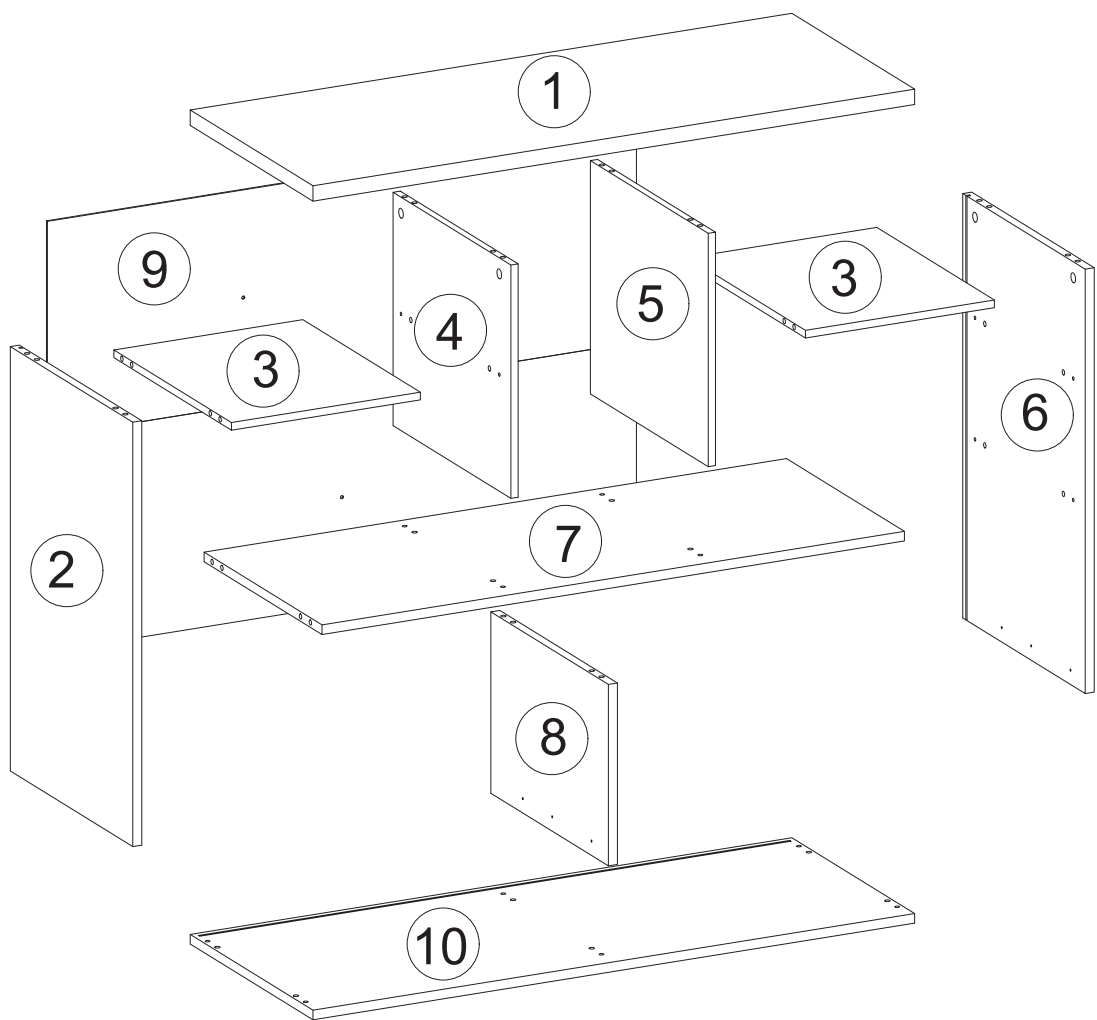

x2




Hardware List

A		ø6x30mm	Wood dowel	32+1 PCS
B		Ø6x33.5mm	Cam bolt	30+1 PCS
C		Ø15x9.5mm	Cam lock	30+1 PCS
D			Sticker	30+1 PCS
E				3 PCS
F				2 PCS
G		ø3.5x14mm	Screw	20+1 PCS
H			Back buckle	12 PCS
I		Ø3x16mm	Flat-head screw	12 PCS
J		ø3x14mm	Screw	3 PCS
K		ø5x48mm	Screw	10+1 PCS
L			Handle	2 PCS
M		ø4x22mm	Handle bolt	4 PCS
N		ø4x30mm	Screw	8 PCS
O		L350mm	Drawer slider	2 PCS
P		ø3.5x12mm	Screw	24+1 PCS

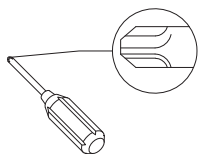


Philips head screwdriver required for assembly
(not included)

Step 1

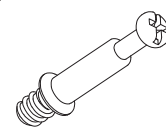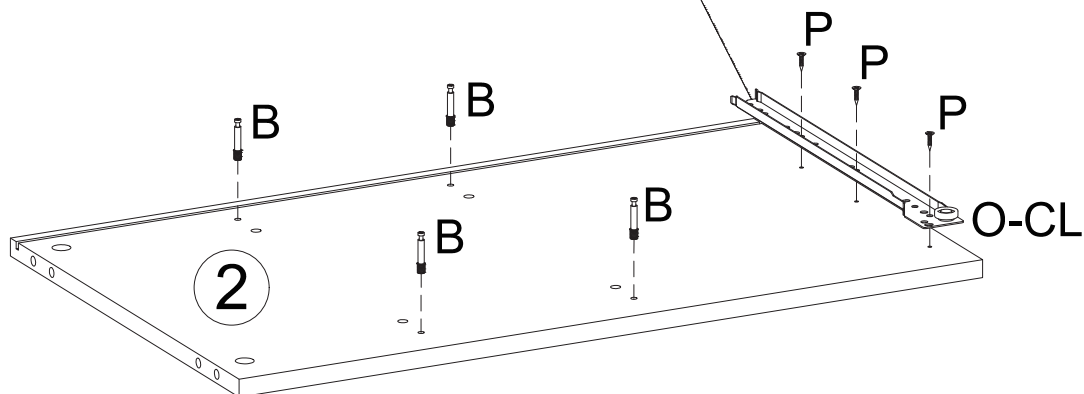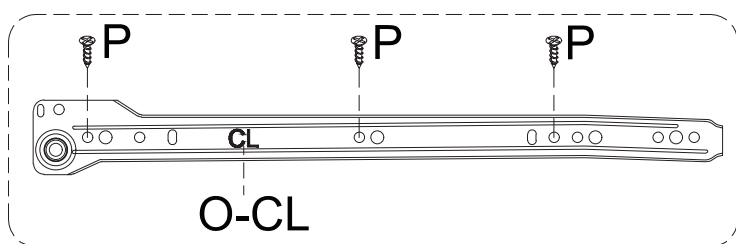

B x4






O-CLx1




P x3

Step 2

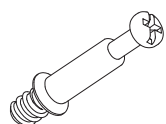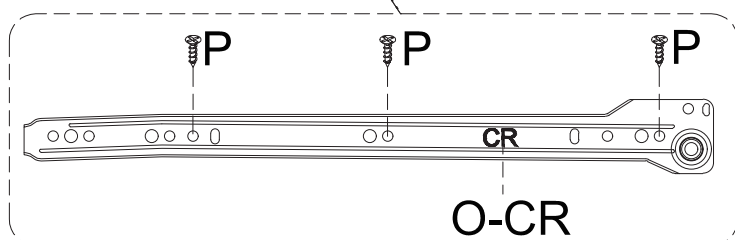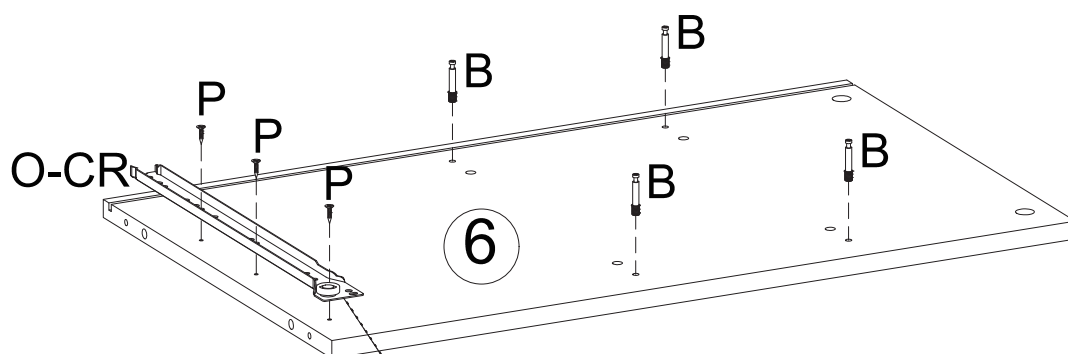

B x4









O-CRx1




P x3





Step 3

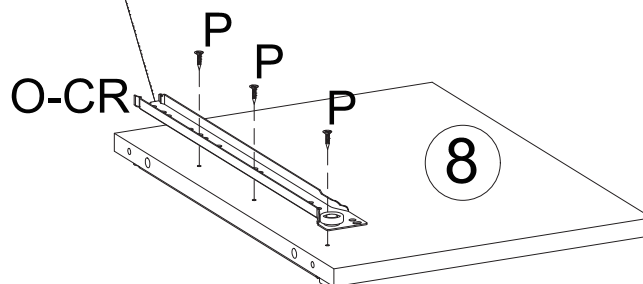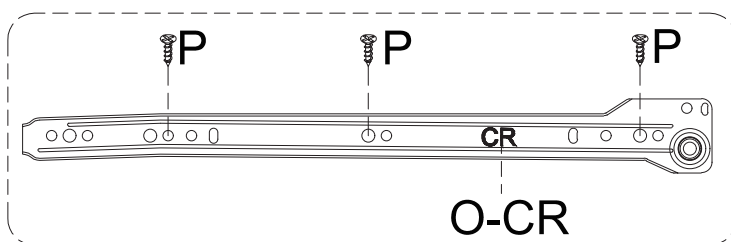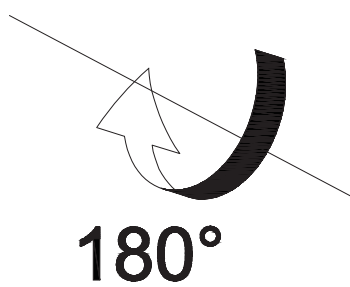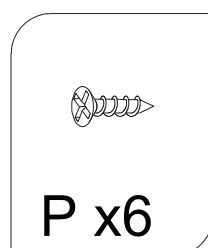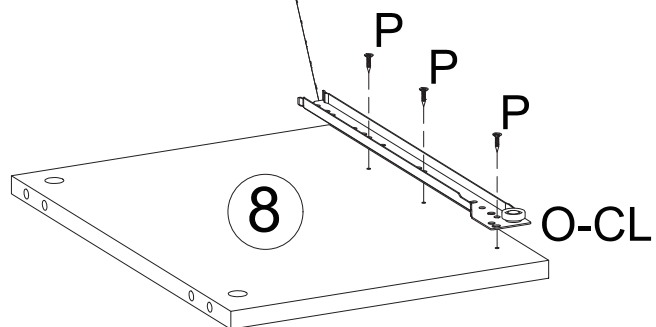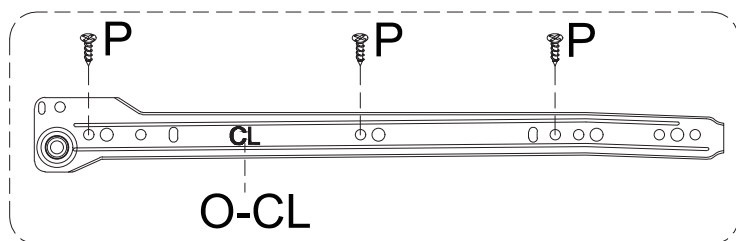




Step 4

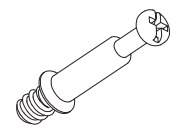

B x14

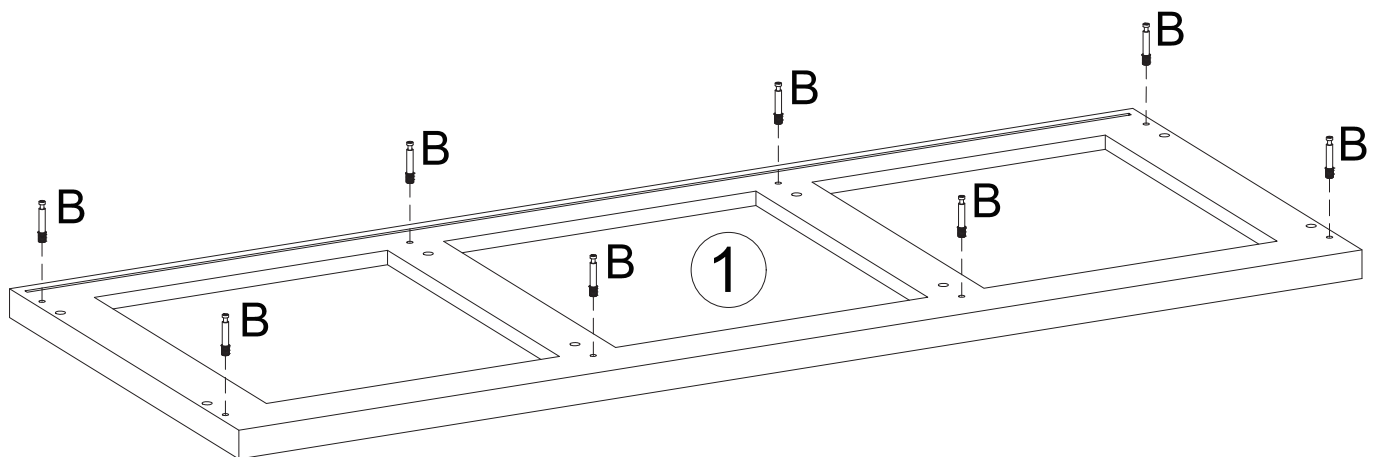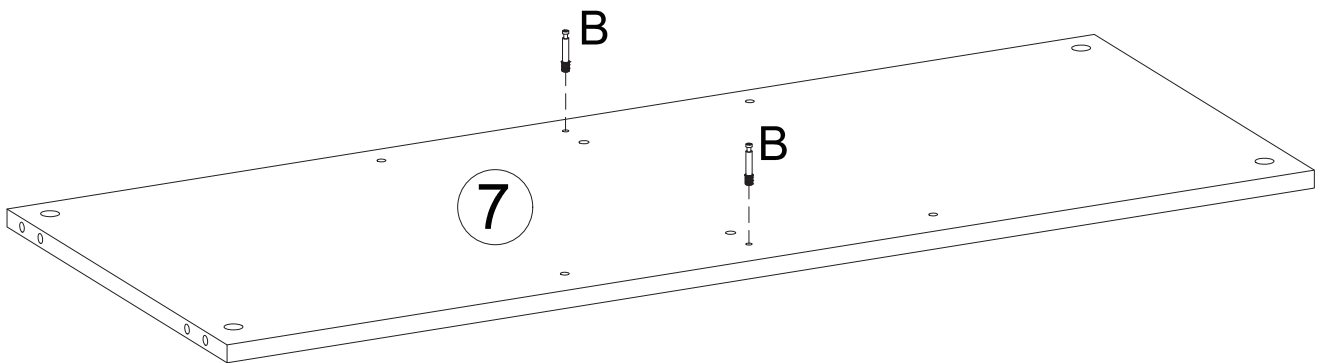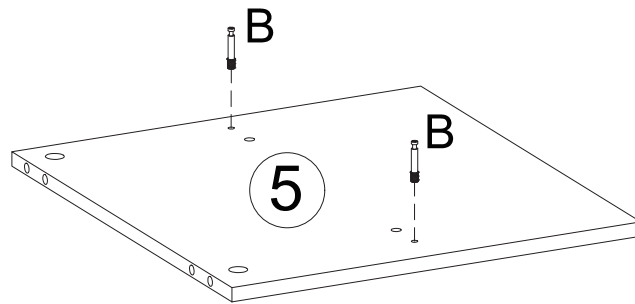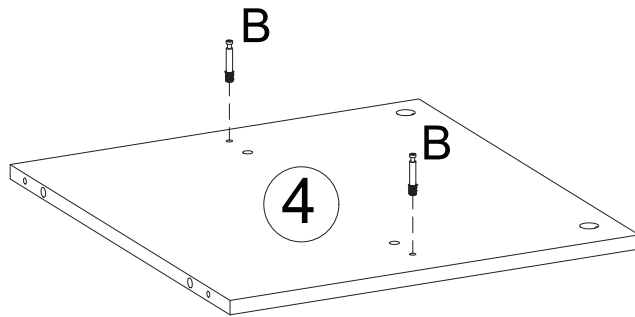

Step 5

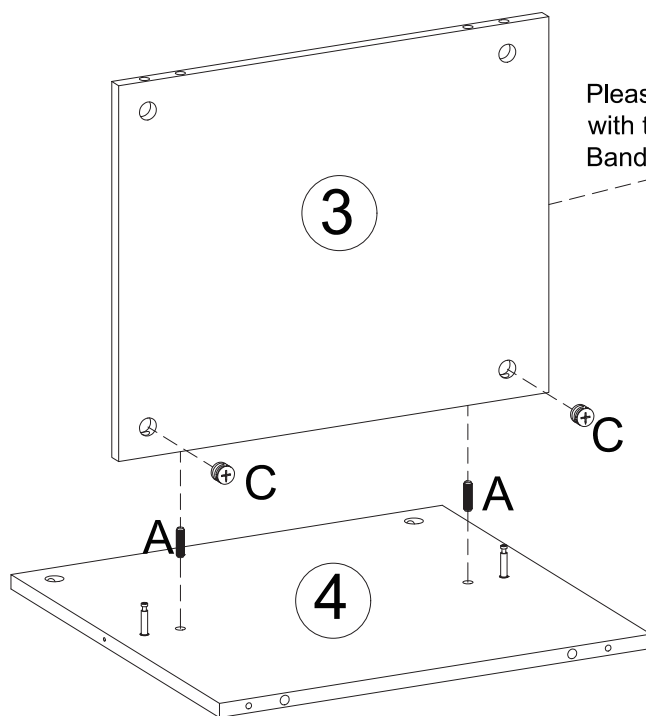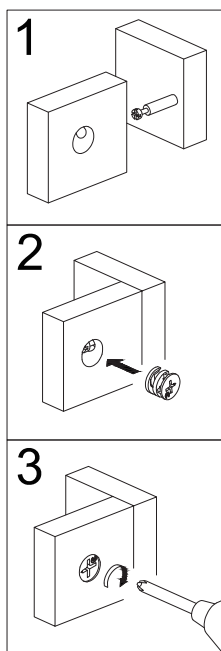


A x4






C x4



Please put the side with the Pvc Edge Banding facing forward.

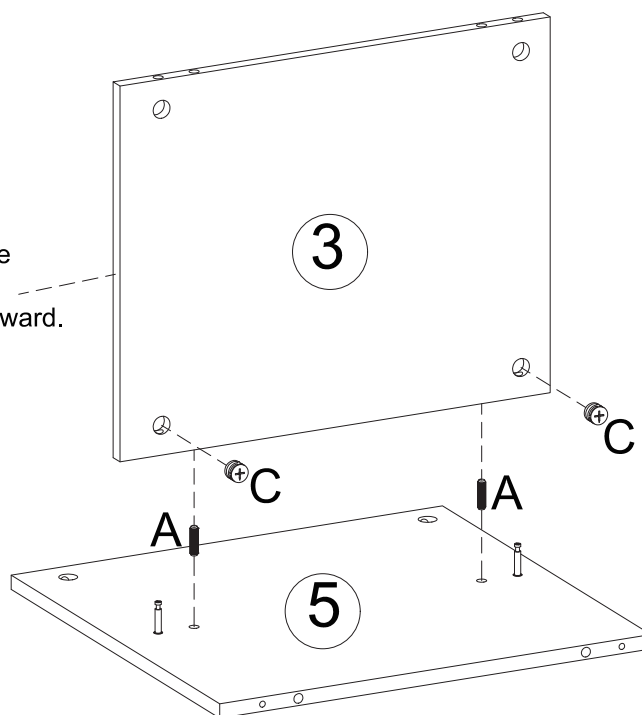

Step 6

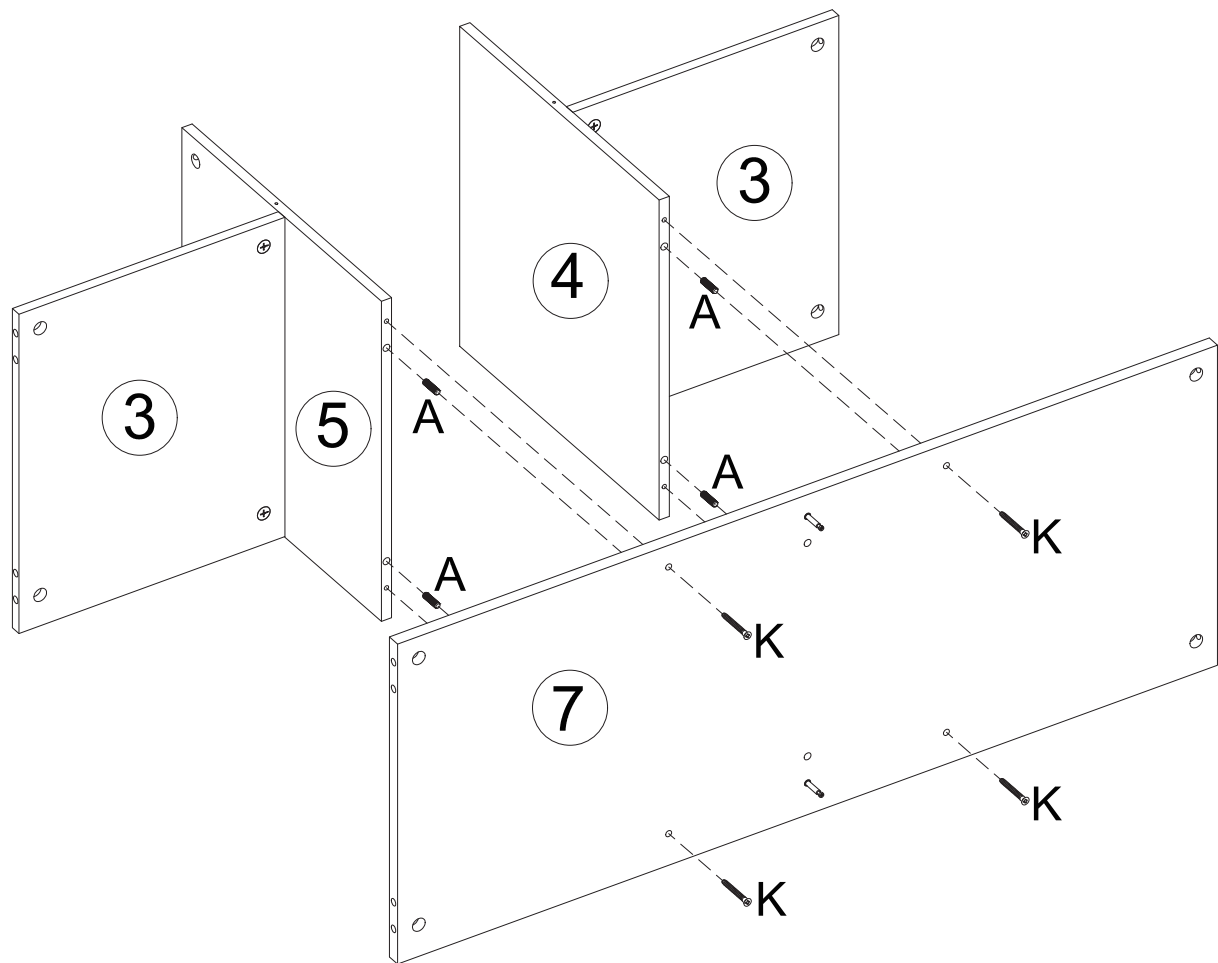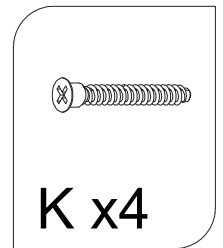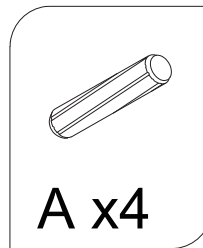


Step 7

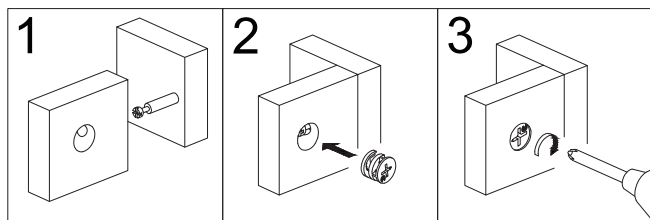





A x2






C x2

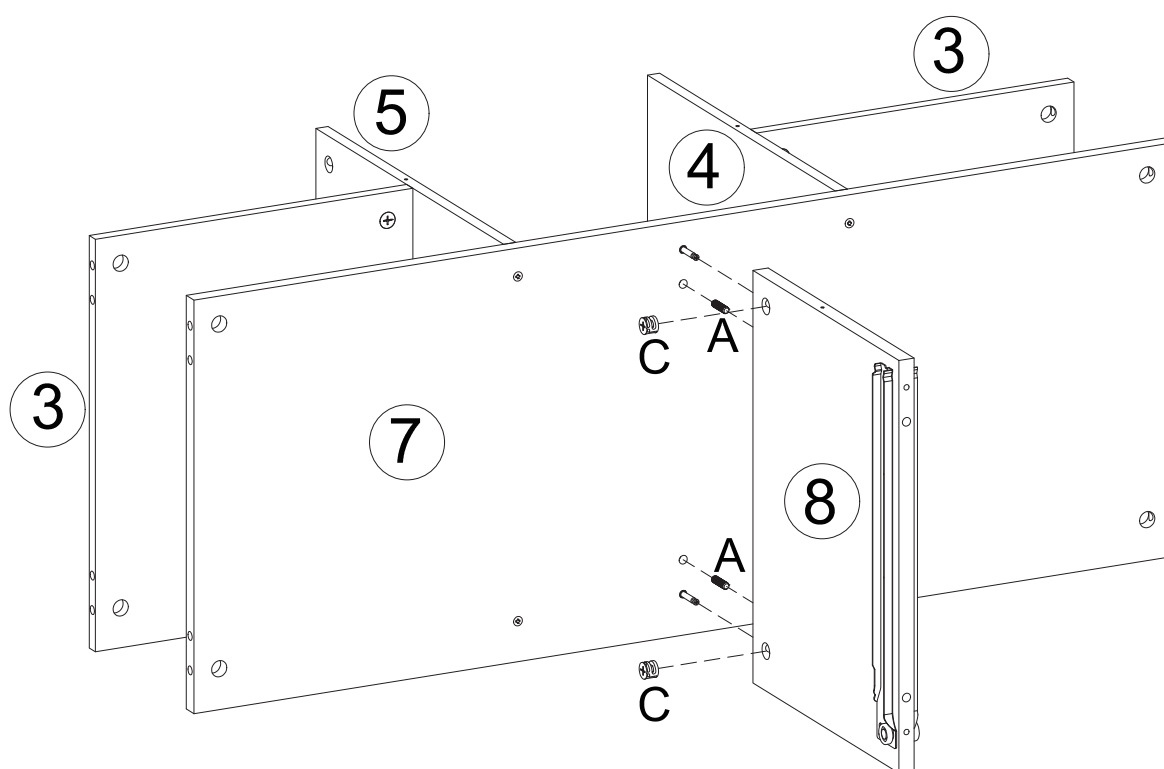





Step 8

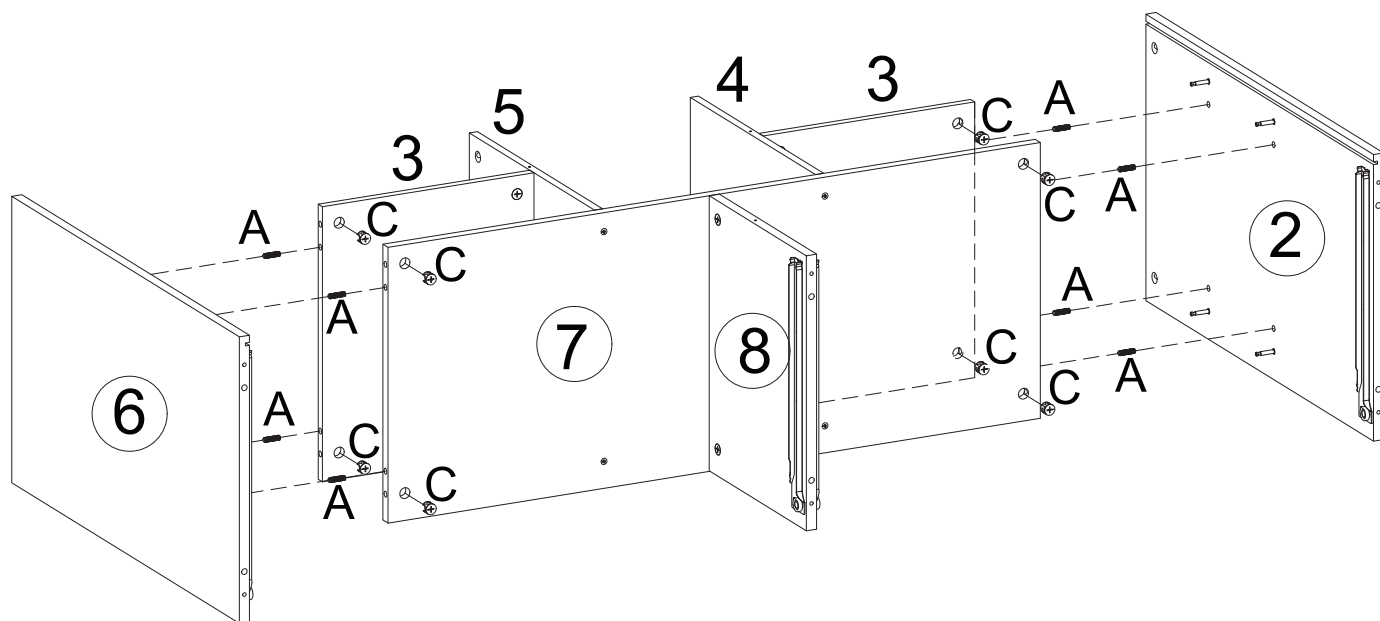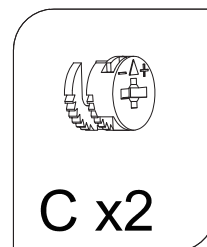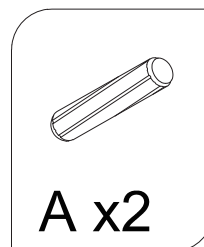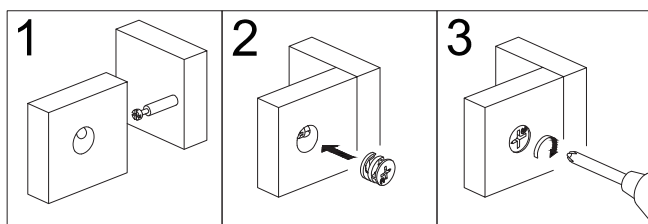



Step 9

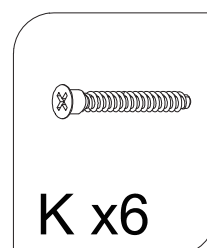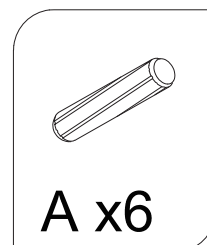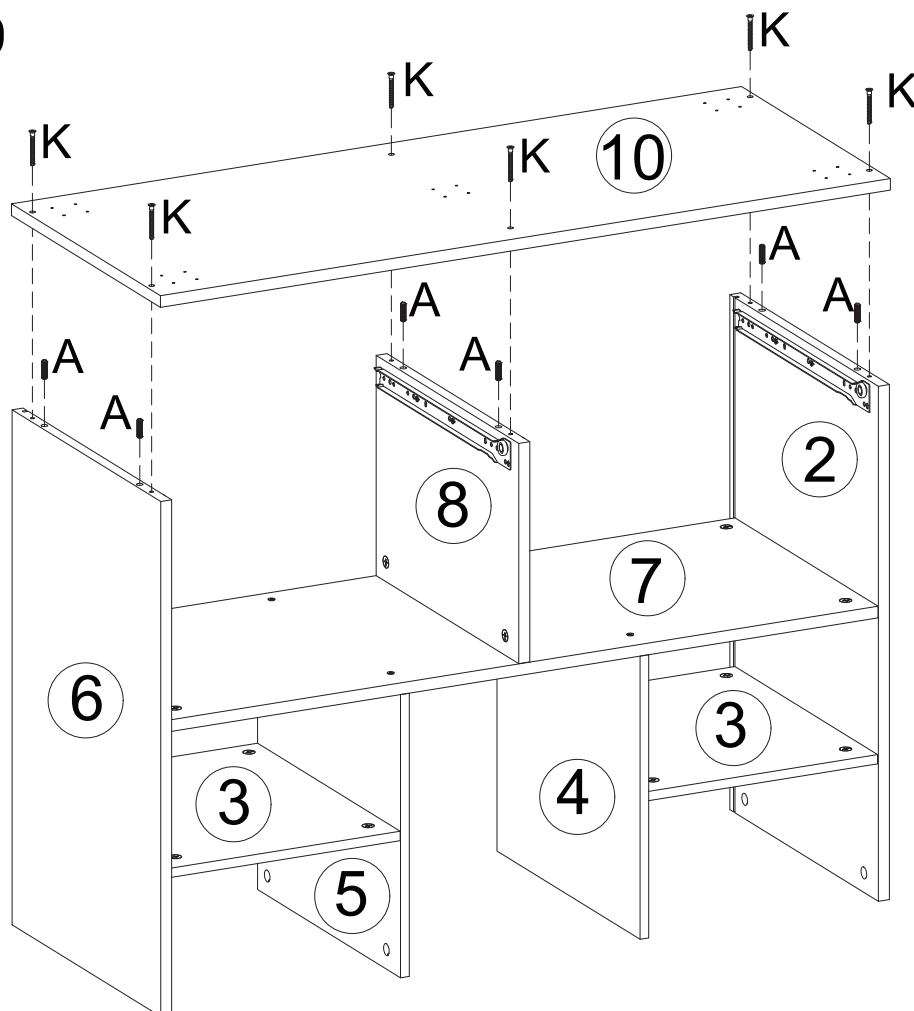


Step 10

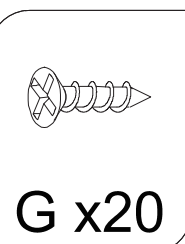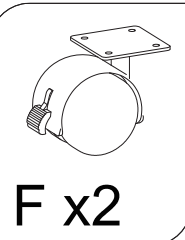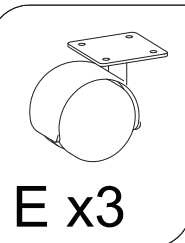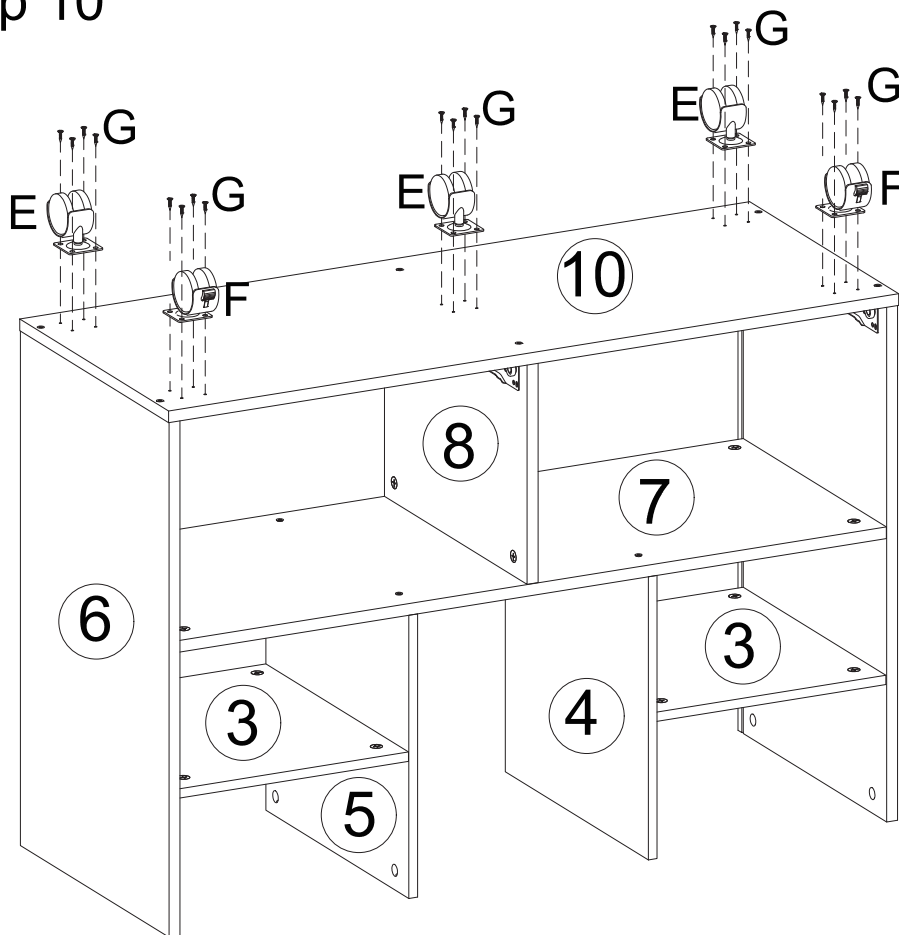




Step 11

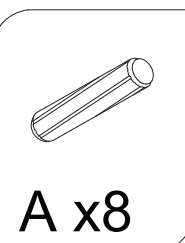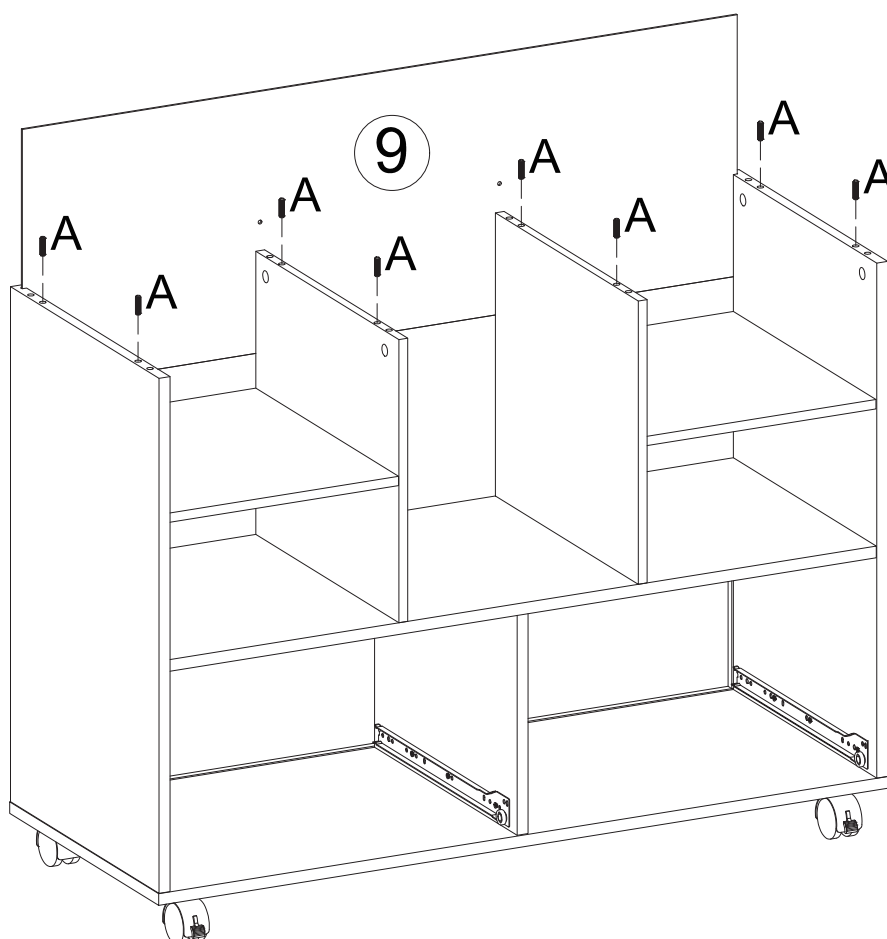




Step 12

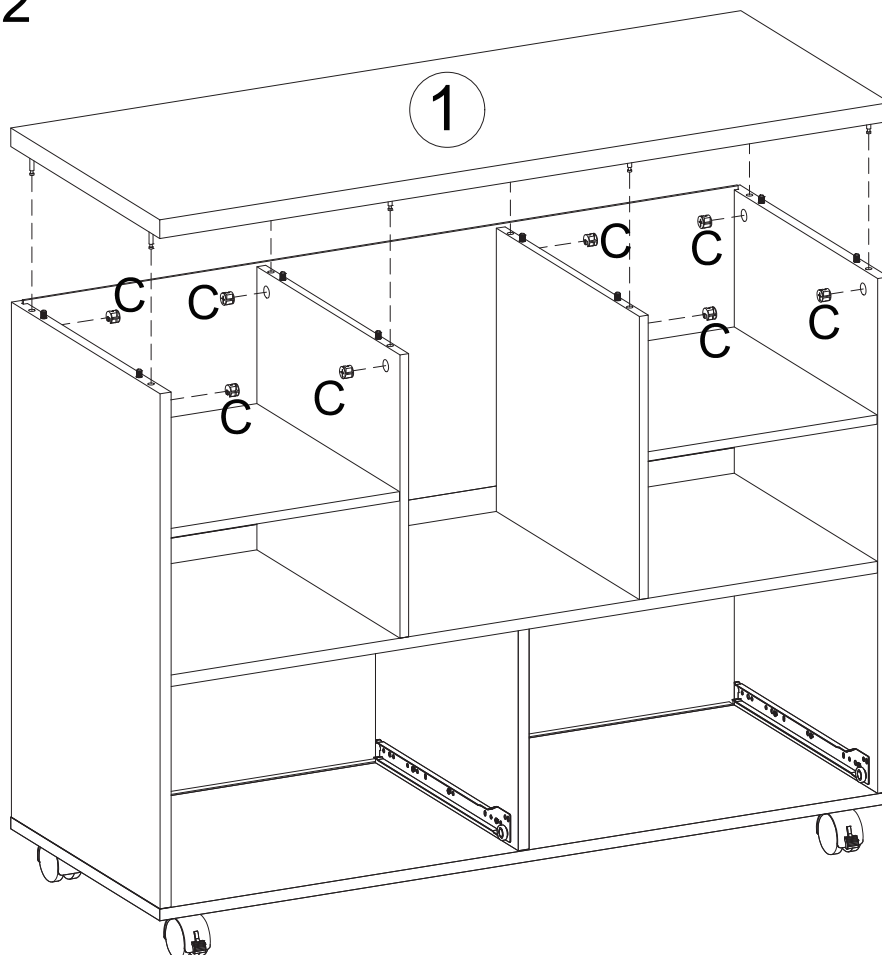


C x8

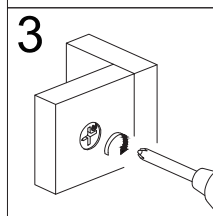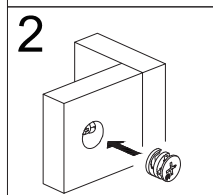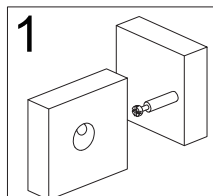


Step 13

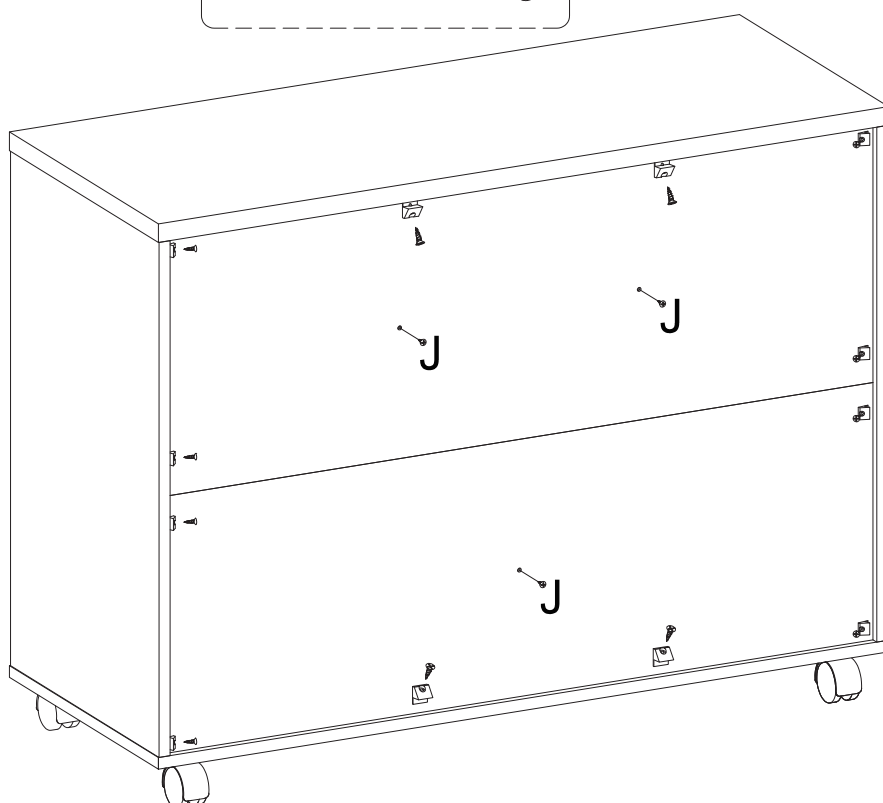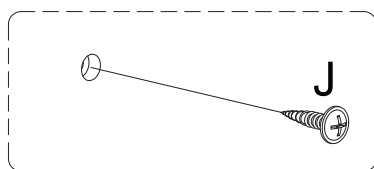


H x12



I x12





J x3

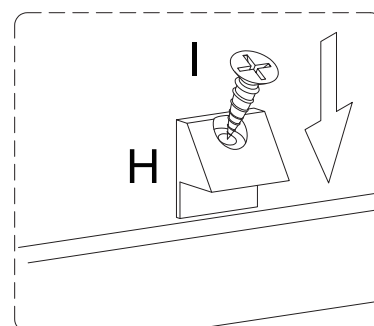

Step 14










N x4

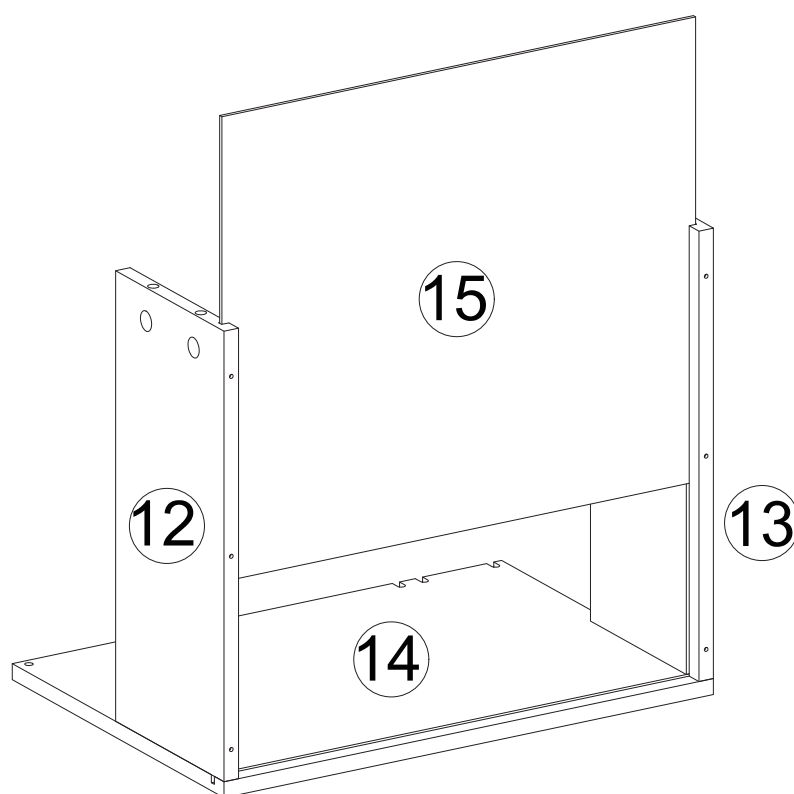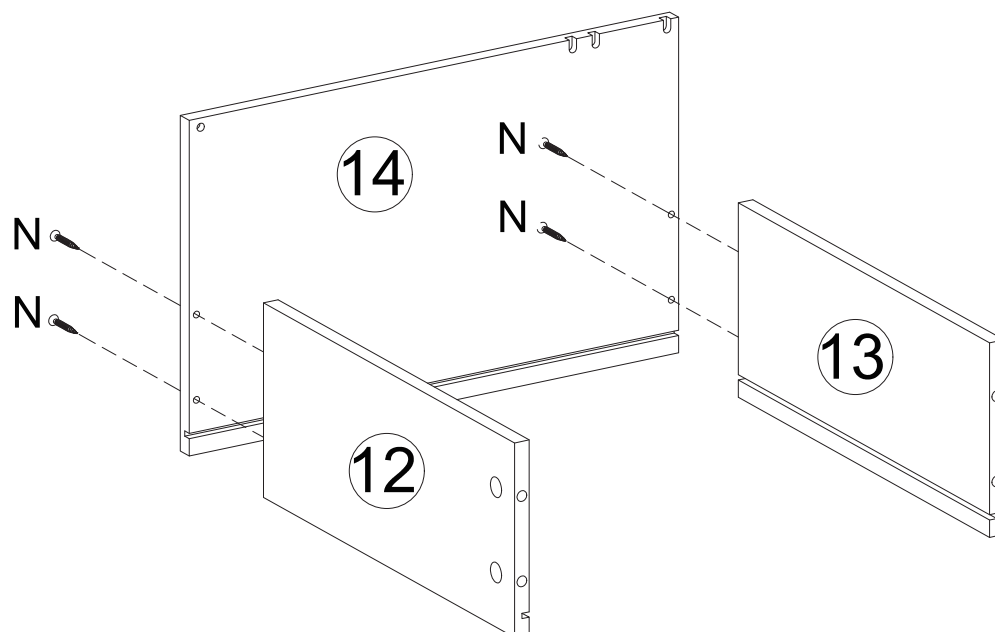

x2

Step 15

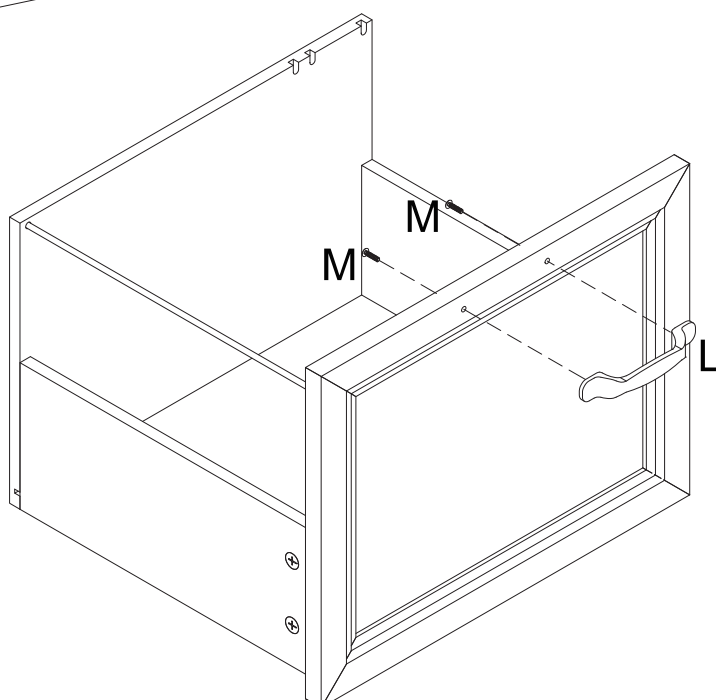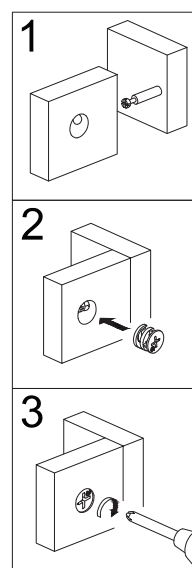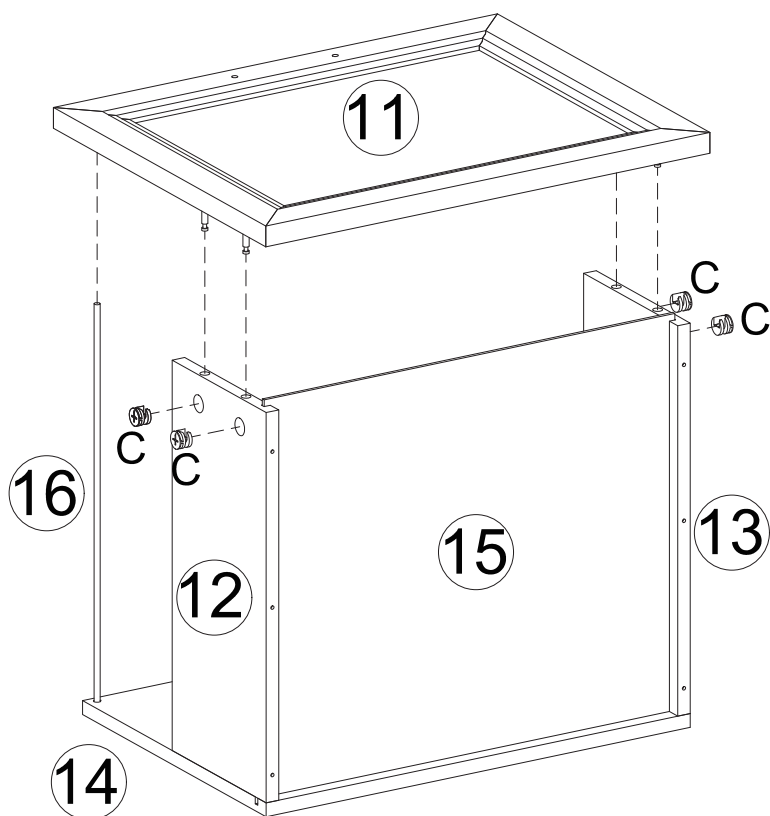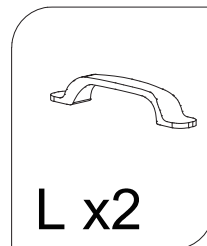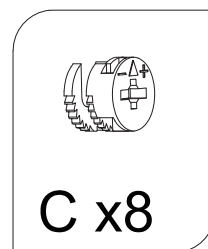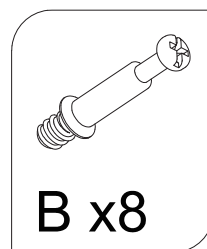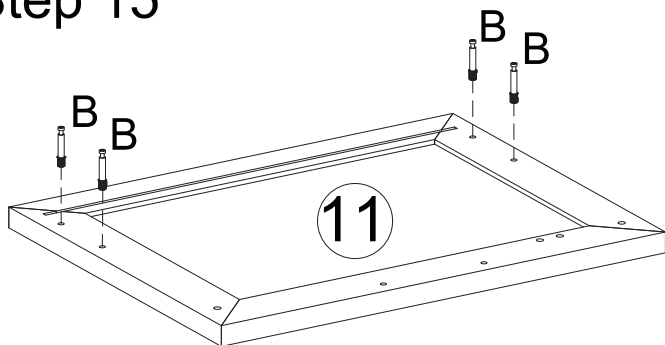


x2


Step 16




P x12



O-DLx2



O-DRx2

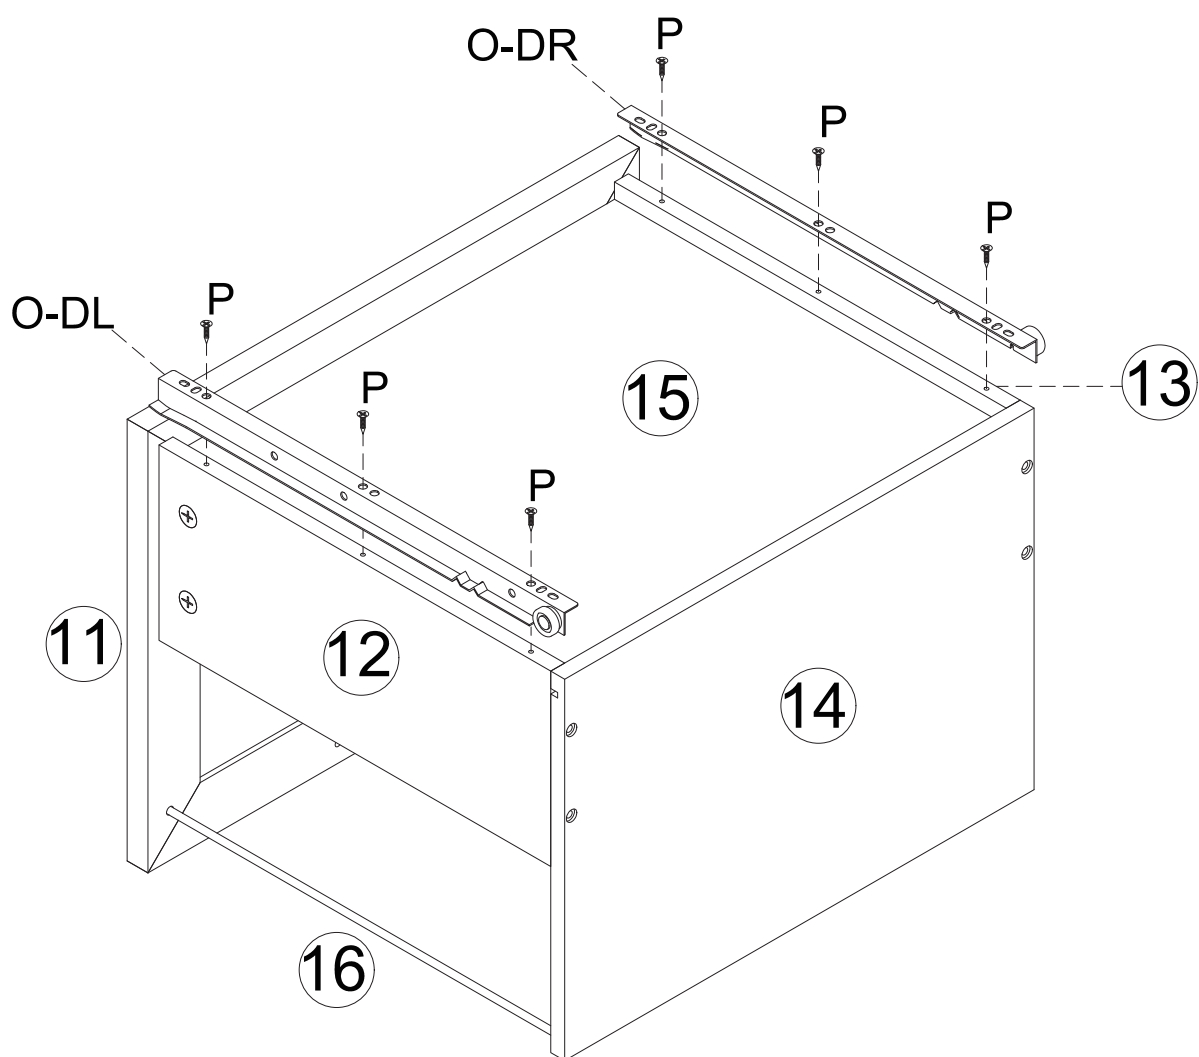

x2

Step 17

