

Metal Cabinet-Installation Manual

Important Installation Notes-Please Read First

1. Safety First

Wear the gloves provided in the carton to avoid any injuries. Work on a clean, flat, and stable surface to avoid scratching the cabinet or causing instability during assembly.

2. Adult Supervision Required

This product for adult assembly only. Keep small parts (screws, washers, etc.) away from children and pets to prevent choking risks.

3. Parts Checklist


Before beginning, open the carton box and lay out every part against the parts list to verify that all parts needed are included in your package. If any parts are missing, damaged, or defective, contact our customer service immediately


4. Tools You'll Need

We recommend using an electric screwdriver for cabinet assembly if you have one.











Thank you for choosing our metal storage cabinet. We're honored it now stands in your space. May its strong, quiet shelves turn everyday clutter into calm order, giving you more room to breathe, create, and relax. Here's to neater days and simpler moments-every time you open the door.

The strips on the doors feature magnetic installation design,What you see when you open the package is only their factory-default layout.You can rearrange them into any of following 1 different styles to match your personal preference-simply lift,move,and let the magnets snap them into place.

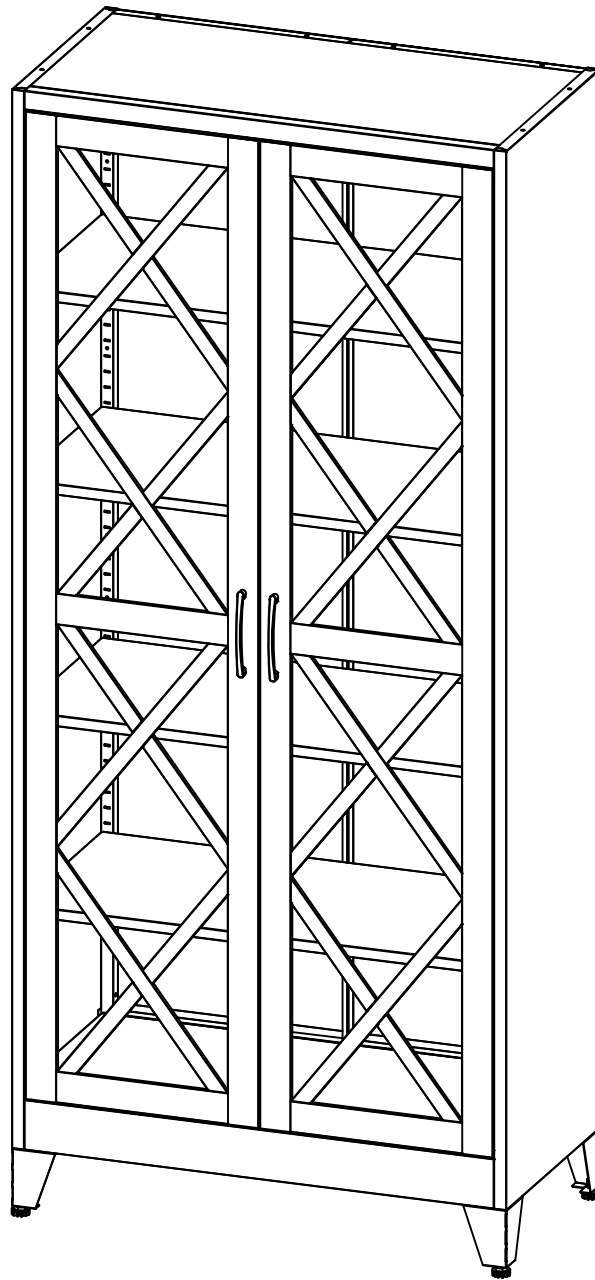

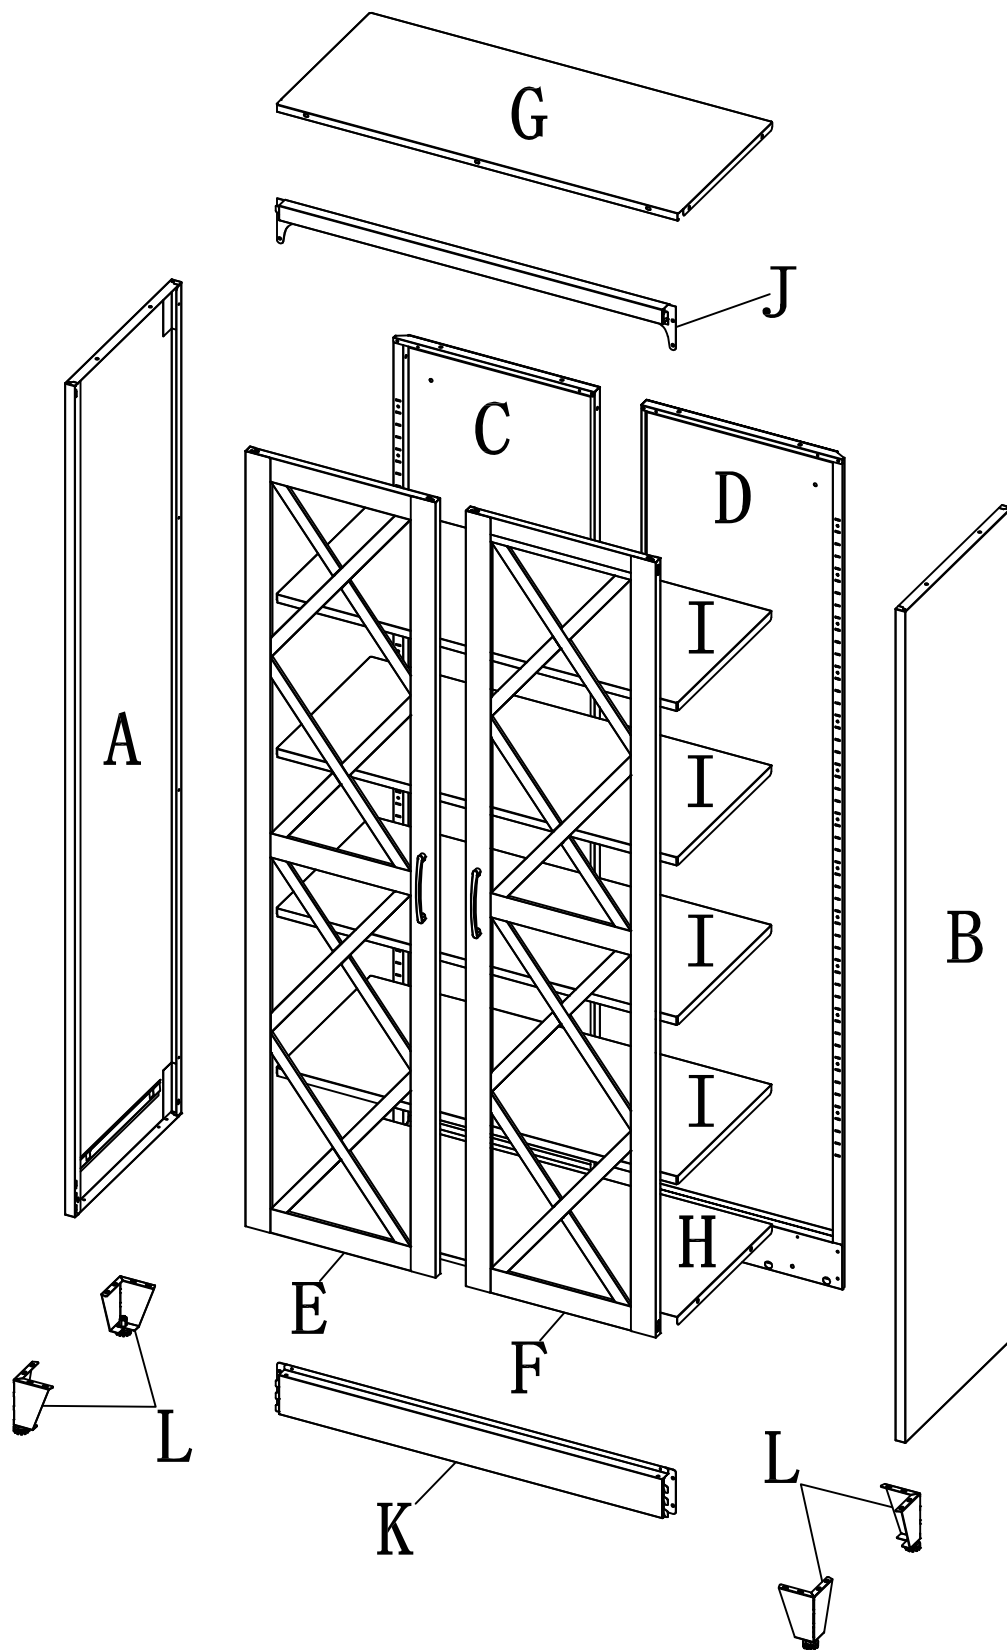



PARTS LIST

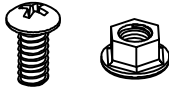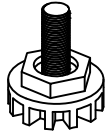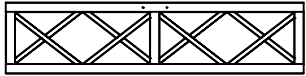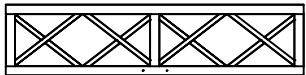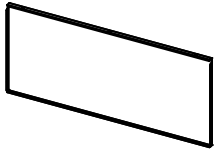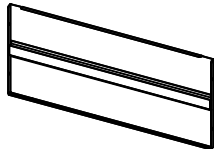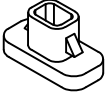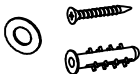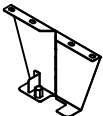Name		Part	Qty	Name		Part	Qty
A	Left Side		1	M	13/32 "Screw		43
B	Right Side		1	N	13/32 "Screw		4
C	Left Back Panel		1	O	Door Pivot Pin and Shim		2
D	Right Back Panel		1	P	Adjustable feet		4
E	Left Door		1	Q	Shelf Support		16
F	Right Door		1	R	Door handle		2
G	Top Panel		1	S	Handle screw		4
H	Bottom Panel		1	T	Magnet		4
I	Shelves		4	U	Reverse rope		2
J	Top header		1	V			
K	Kick Plate		1	W			
L	Standing leg		4	X			




1

N×4 

Let's start with the cabinet rear structure. Take Back Panels C and D. Align the two rear panels together, then fasten them with four sets of bolts and nuts to secure in place. (As shown in the figure)

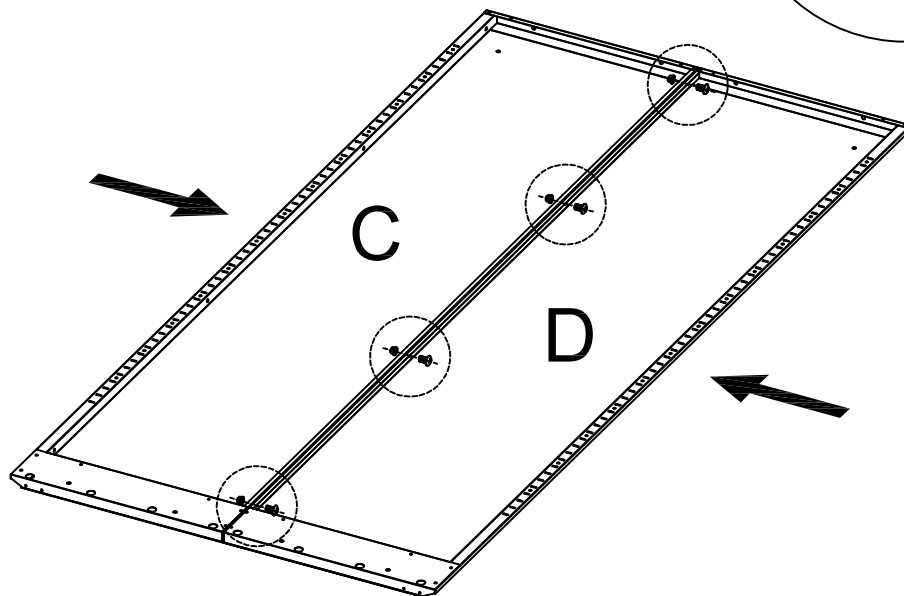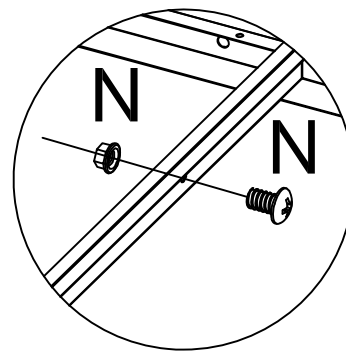

2

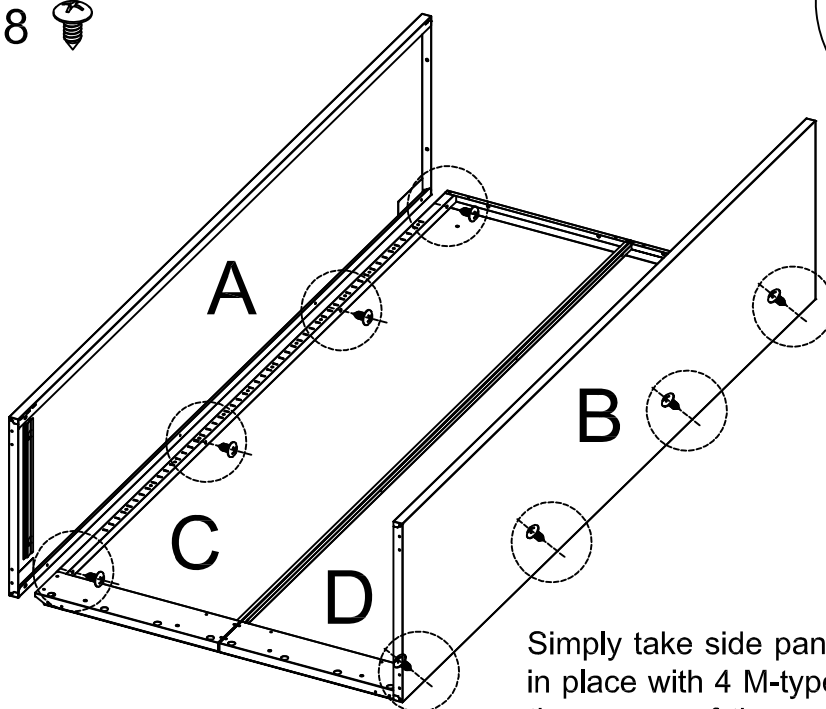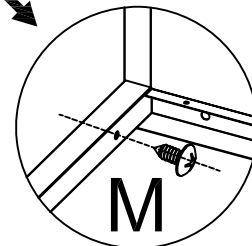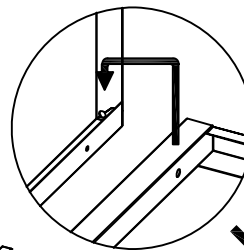M×8 

Simply take side panels A and B, then fasten each side in place with 4 M-type screws. Slide each side panel into the groove of the rear panel, and secure each side with three screws. Note: Panel A is for the left side and Panel B is for the right side. Misplacement will affect the overall assembly.

3





Install the Bottom Panel (K)

Align and snap the three buckles on Panel K into the matching holes on both side panels.

Press down firmly until it locks into place with a click.

Secure the panel from the inside using 4 screws (Size M).

M×4 

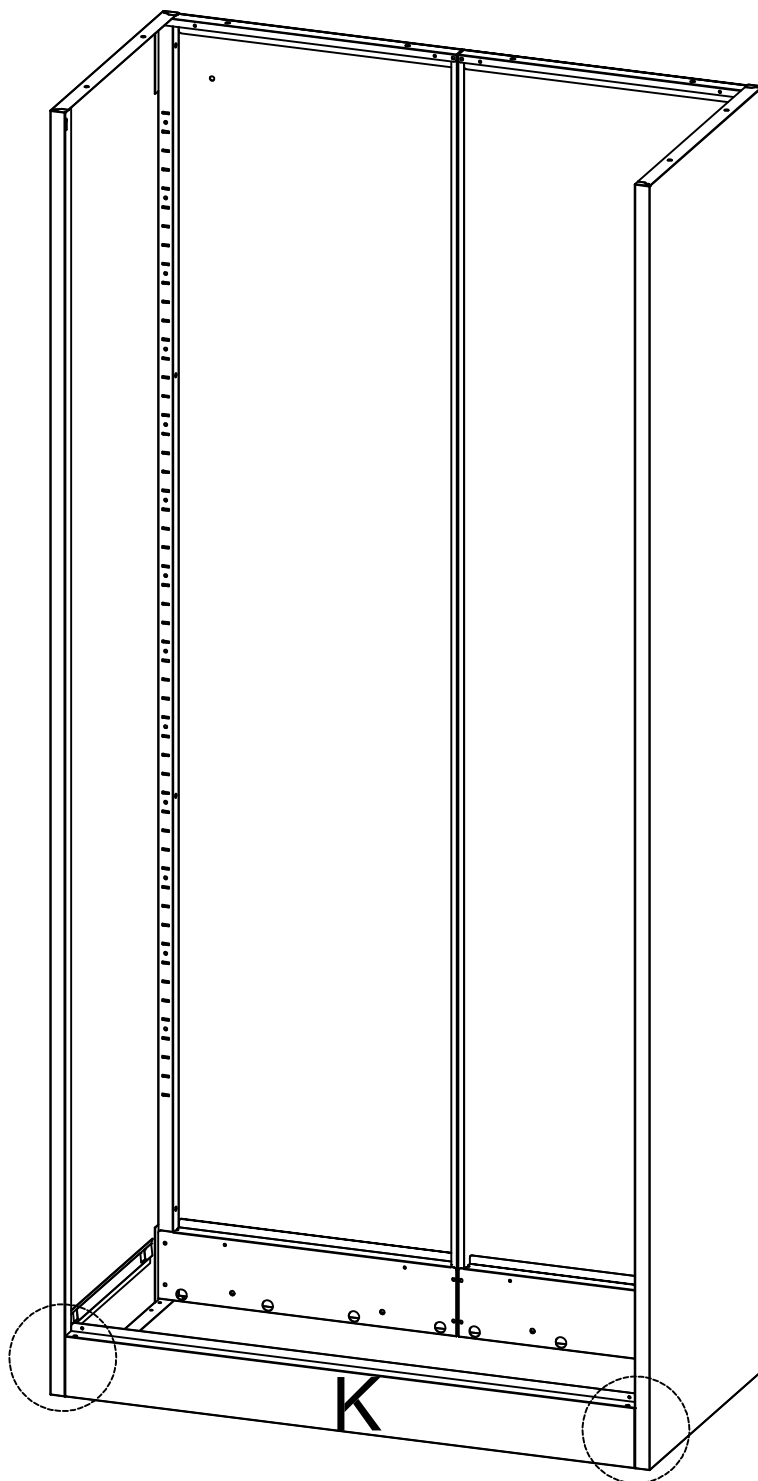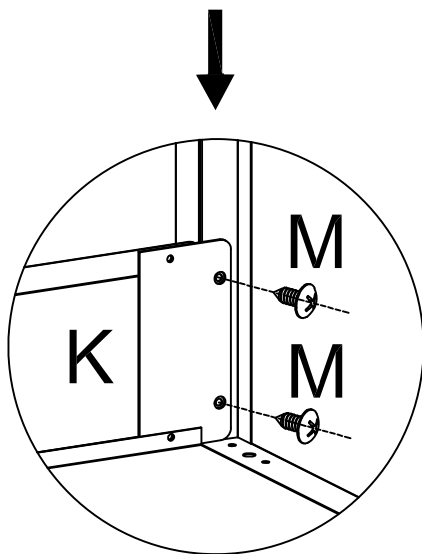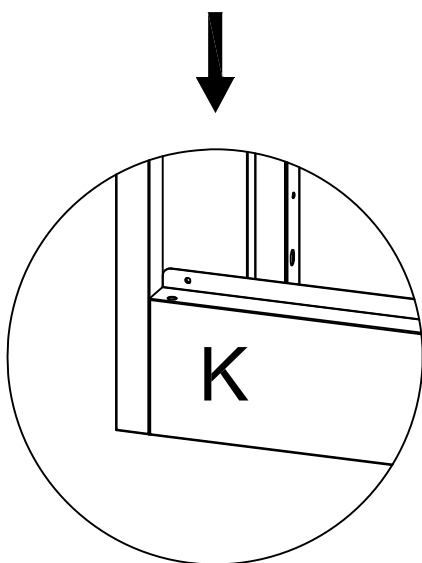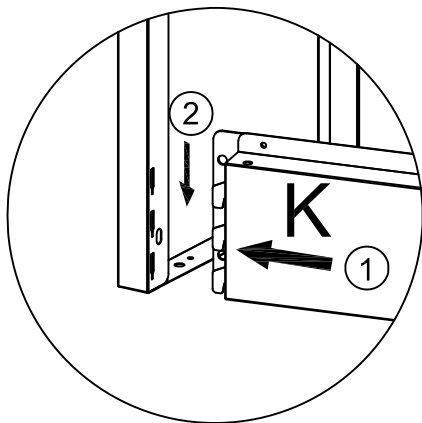

4





Install the Top Panel (J)

Snap the buckles on Panel M into the pre-drilled holes on the Side Panels.

Push upward firmly until the panel locks securely.

Secure the panel from the inside with 4 screws (Size M).




M×4 

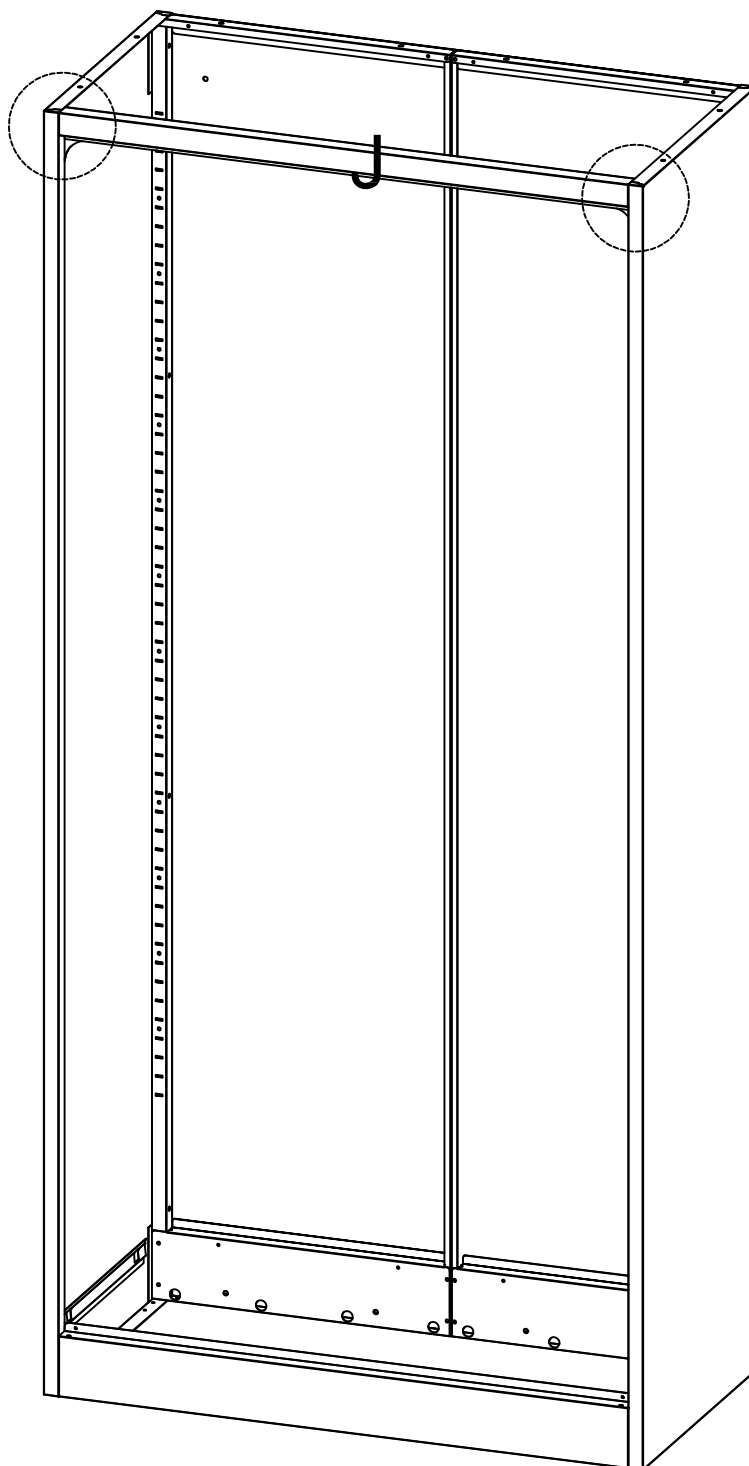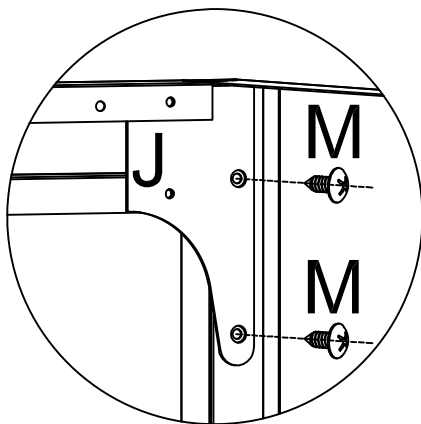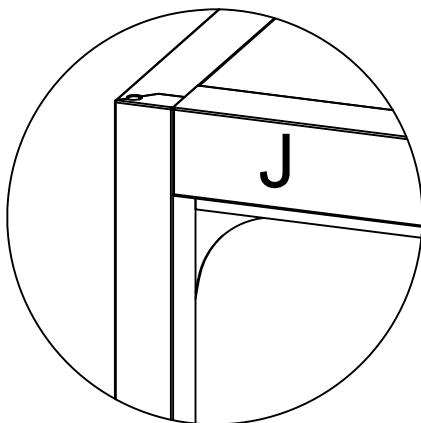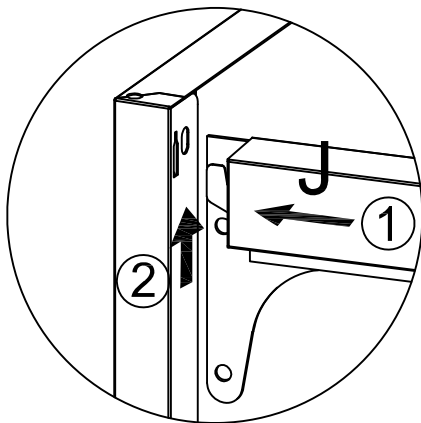

5

Attach the Top Panel (G)

Fit the Top Panel into position from above, then secure it with 7 screws (M) through the holes at each corner.



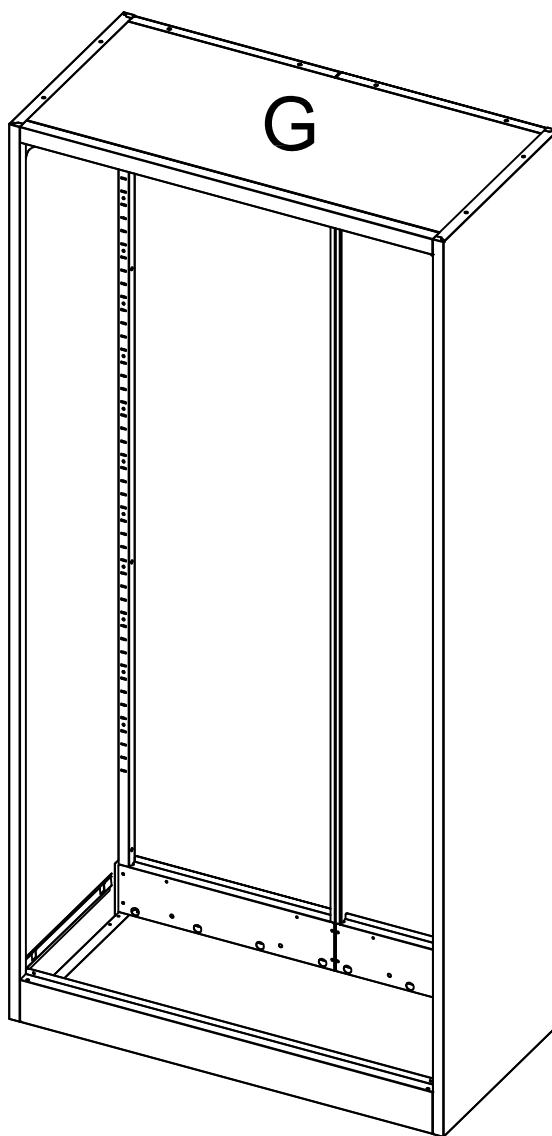
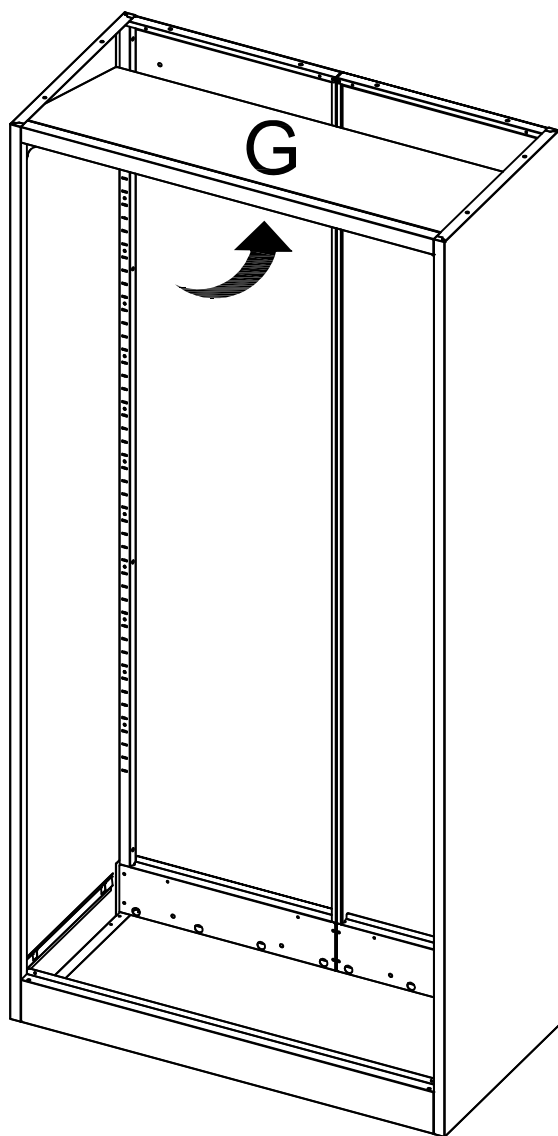
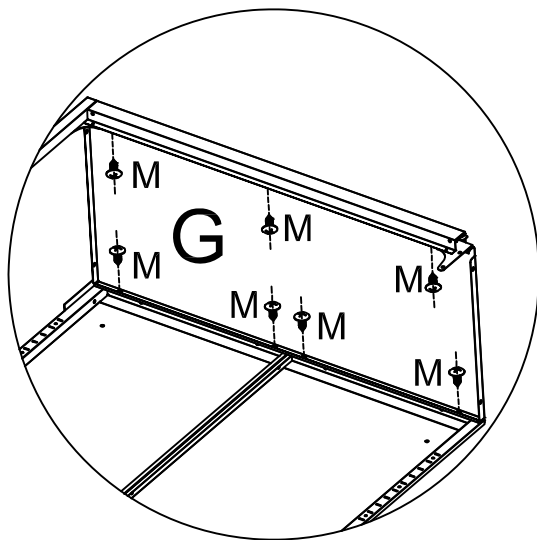
M×7 

6



Install Bottom Shelf (H)

Place Part F inside the cabinet with its notched edge facing forward, then secure it with 4 screws (M) at the cabinet bottom.




M×4 

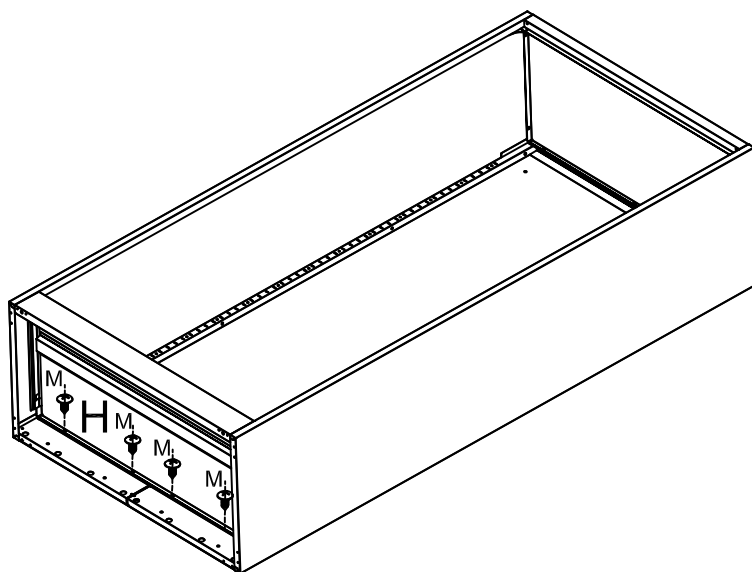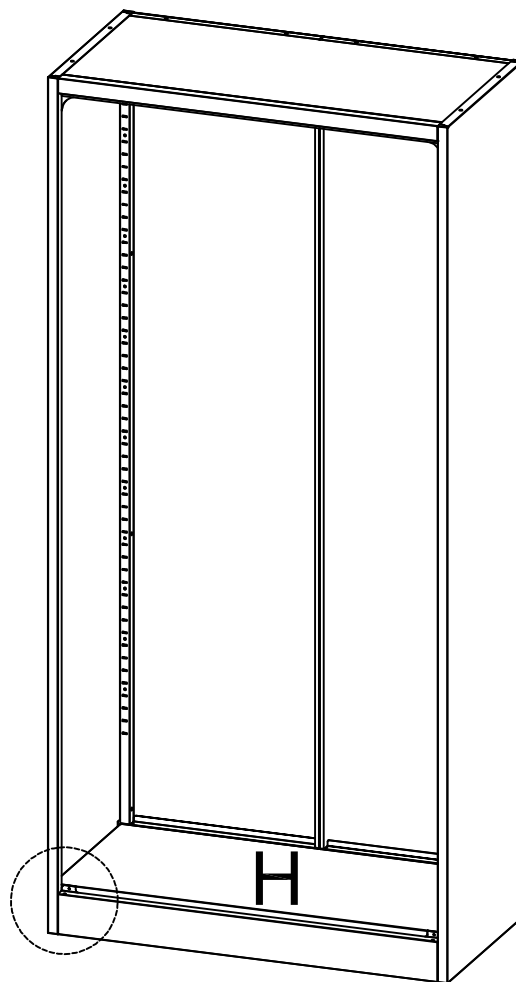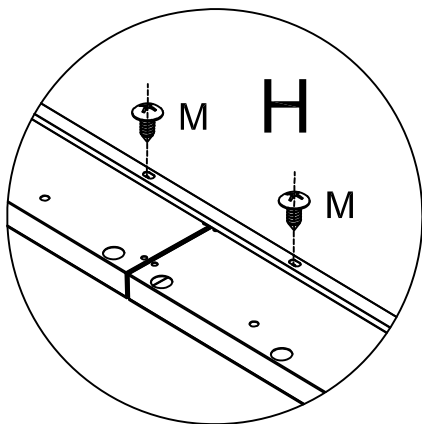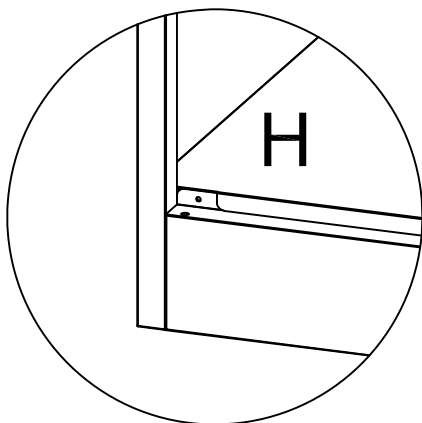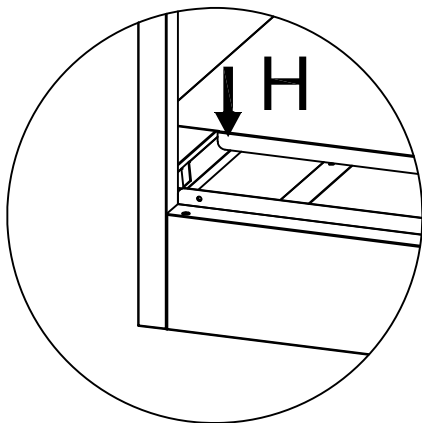

7

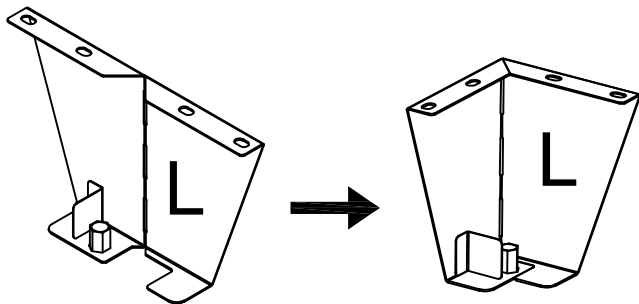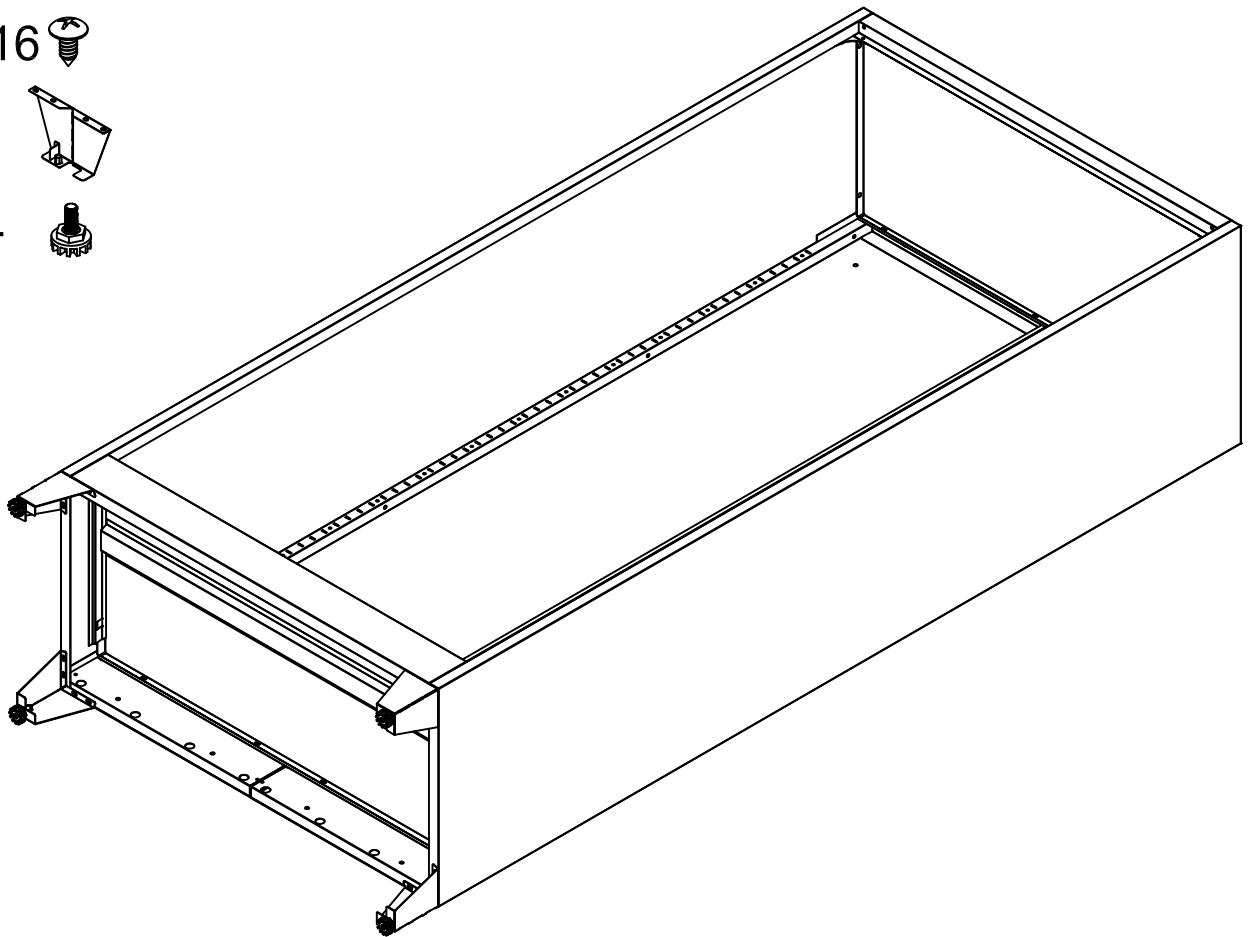M×16 L×4 P×4 **Install the Legs (G)**

Fold each of the 4 legs (L) into a right angle, then fasten them to the base with 16 type-M screws. Finally, fit the black adjustable foot pads.


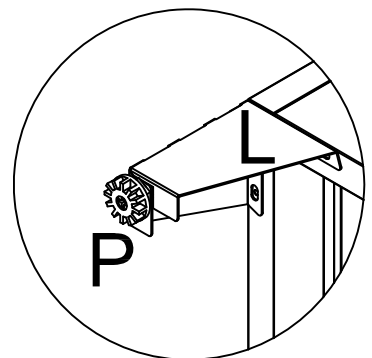
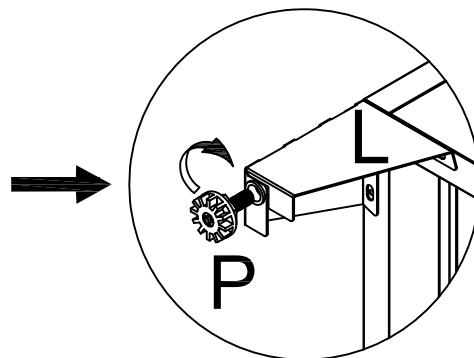
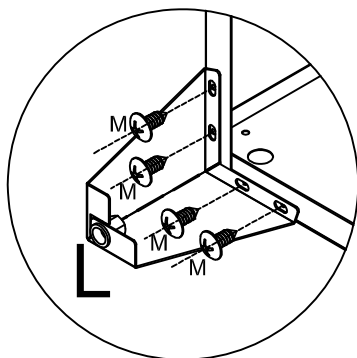


8

Q×16

**Install Shelves (1)**

You may choose the mounting position for the 4 shelves. Insert the metal clips (O × 16) into the holes on both side panels as desired. Then place the 4 shelves (I × 4) onto the clips. (Tilt each shelf at an angle to fit it into the cabinet, then lay it flat for easier installation.)

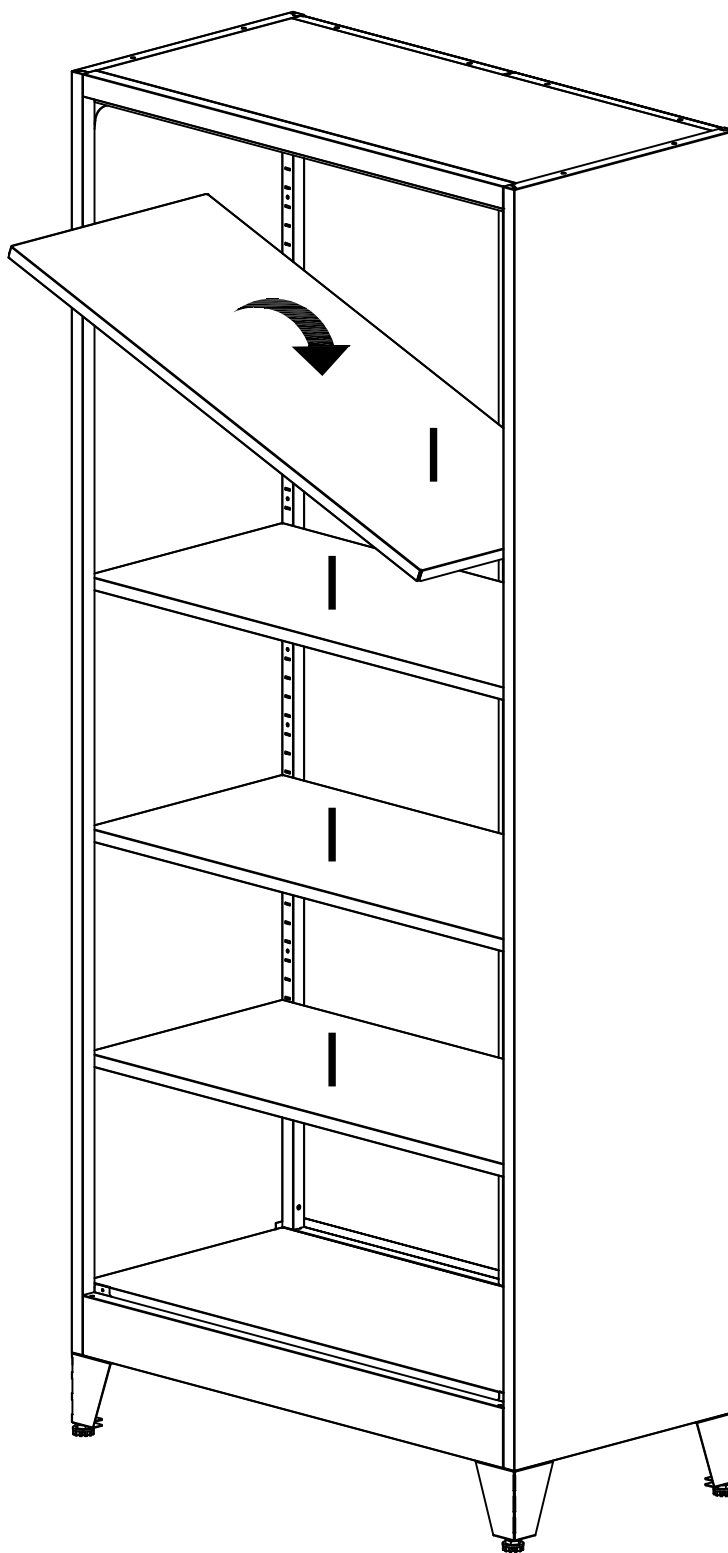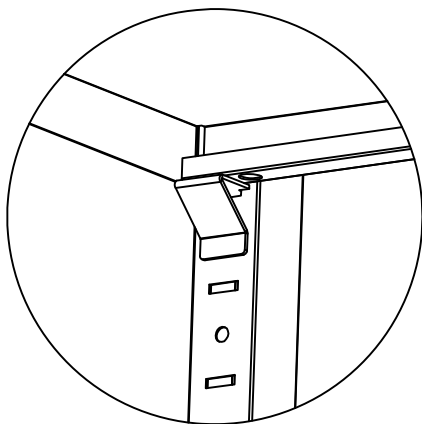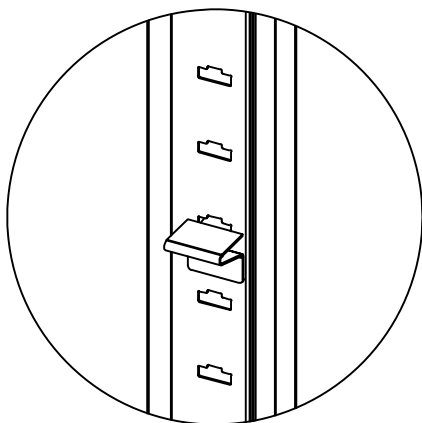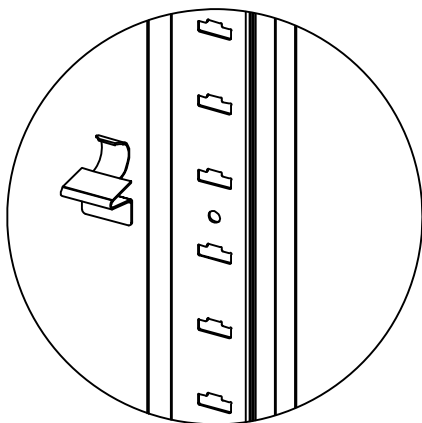







9

O×2



Attach Doors (E&F)

Press the upper hinge pin to snap it into the top frame hole, then release to lock it in place automatically.

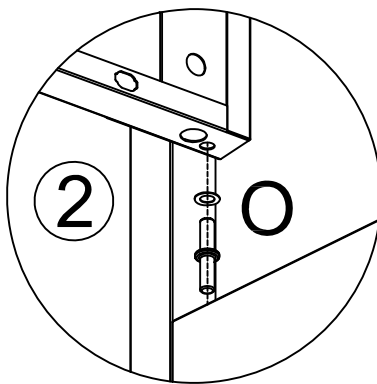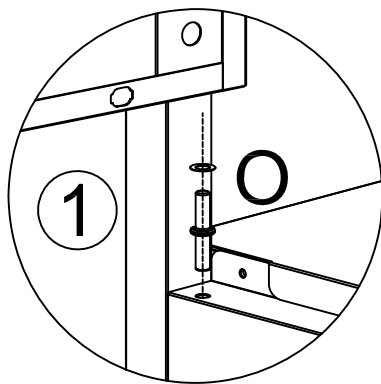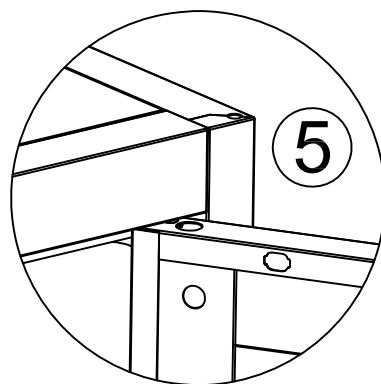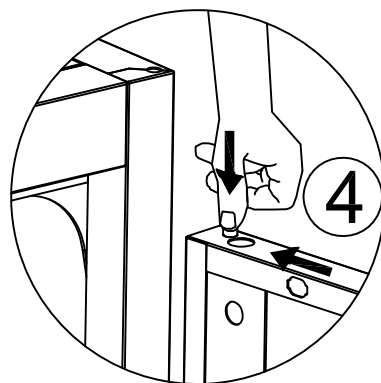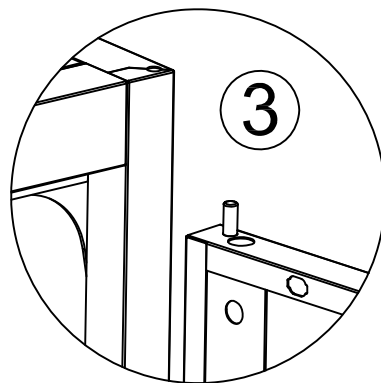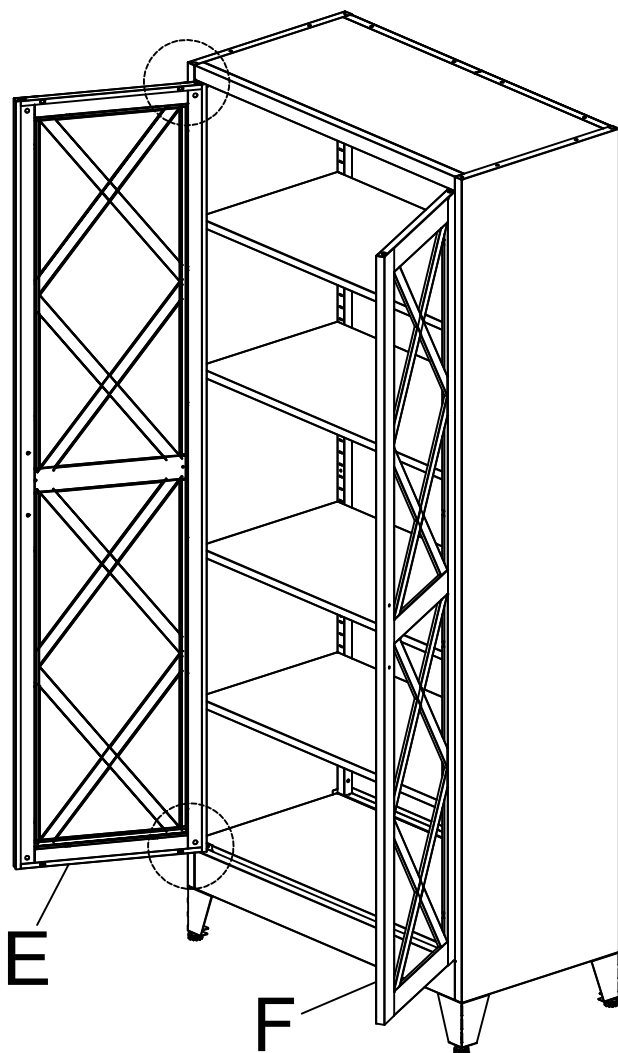


Drop 2pcs O bottom hinge pins into the pre-drilled holes on the base frame, then fit the small plastic ring. Align the door bottom hole with the pin and lower door (E & F) into position.

10

R×2 



S×4 

T×4 

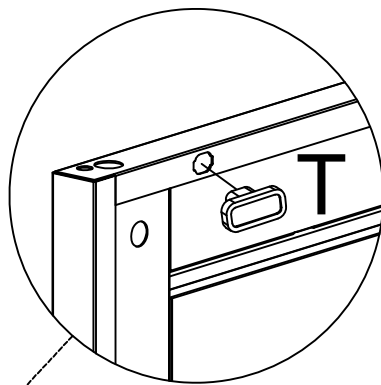

Fit Handles and Magnets (R & T)

Affix 4 pcs magnetic parts (T) to each corner of the doors.
Mount door handles (R×2) with screws (S×4).

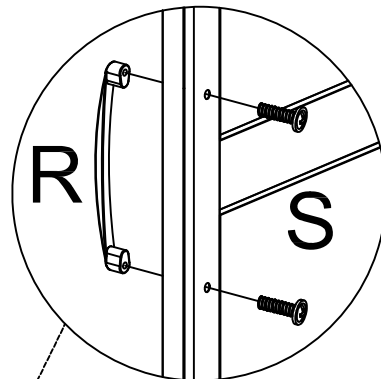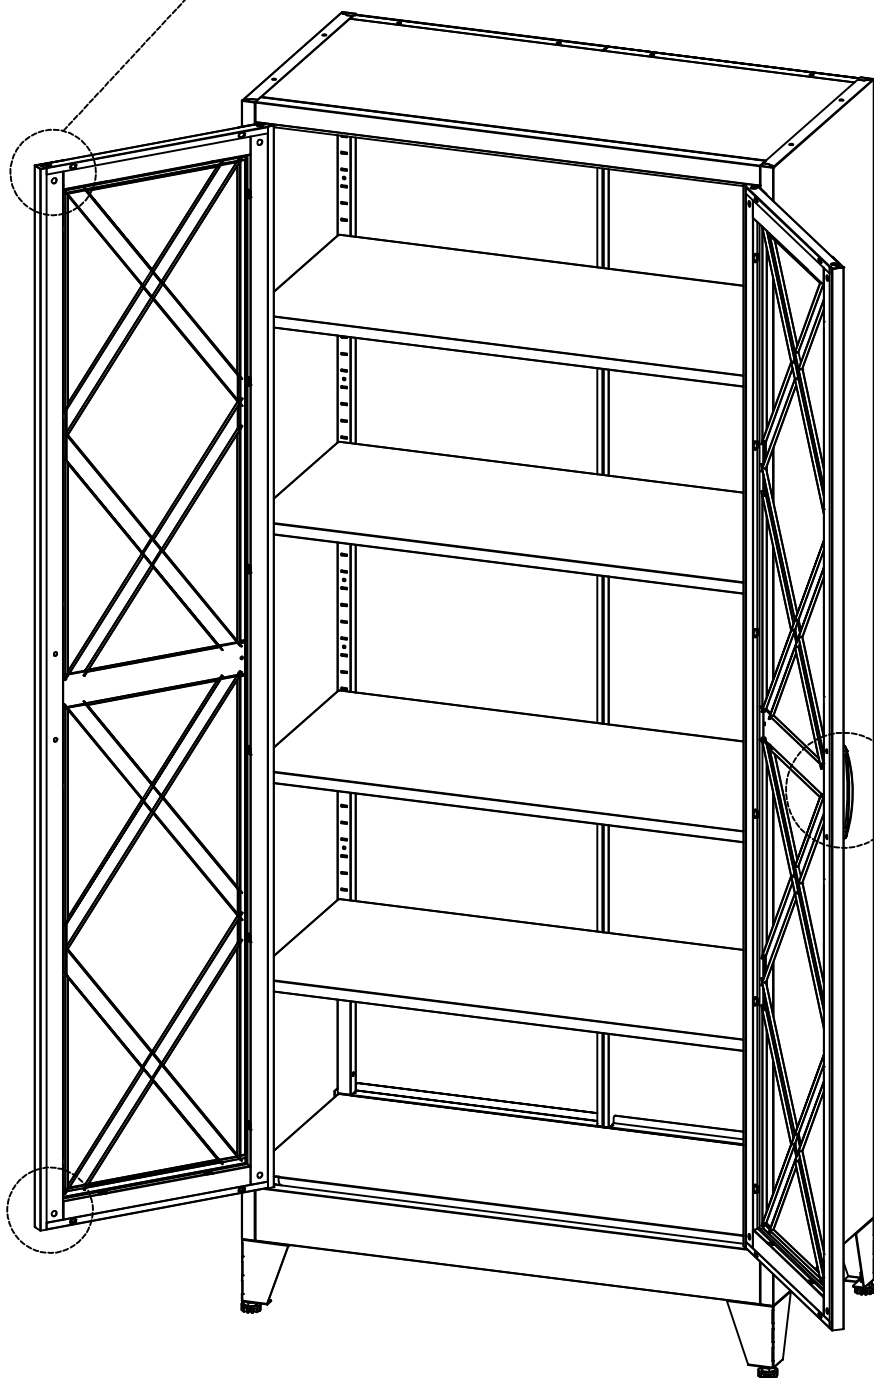

11

U×2


**Secure to Wall (Optional)**

Push the cabinet against the wall.

Mark the drilling points through the pre-drilled holes in the back panel.



Drill the holes and insert wall plugs (T×2).

Secure the cabinet with the screws provided.

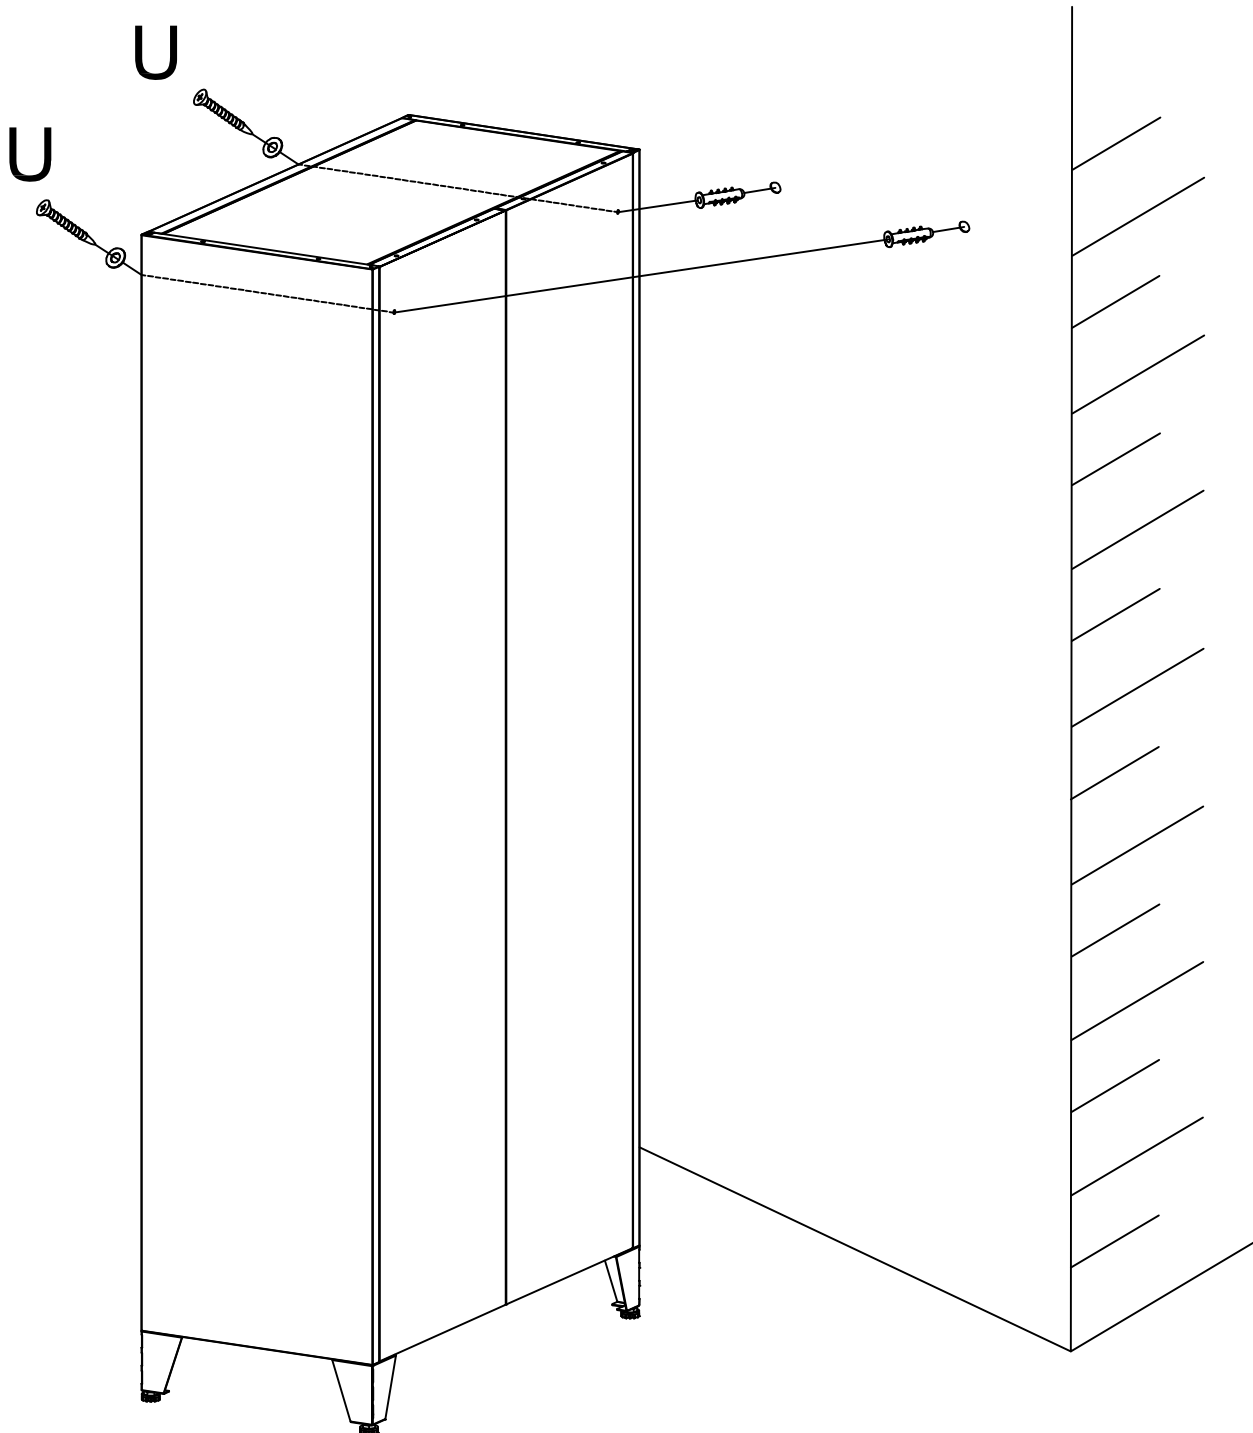

Problems and Solutions

Question 1:when encountering uneven height of two door panels, adjust the bottom adjustment foot to make it flat.

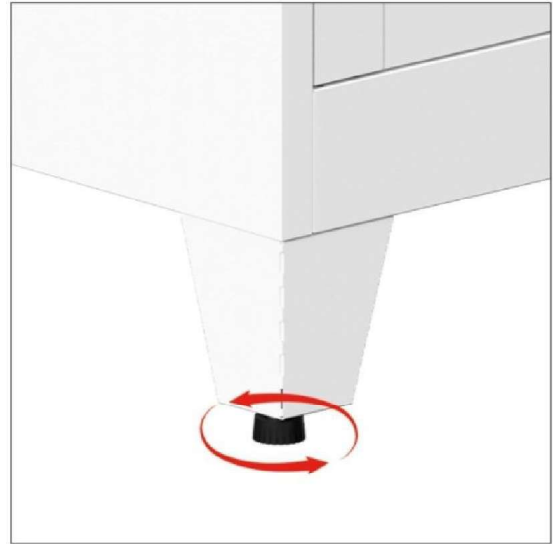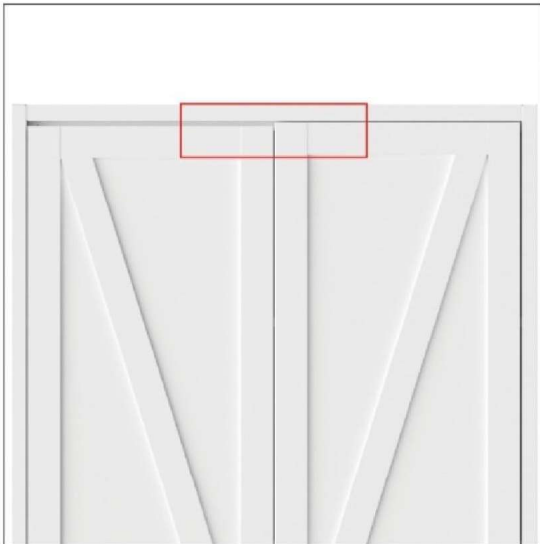

Question 2:When the door is closed, it still protrudes outward.

That's because the door is made of steel plate and has stretchability. You can adjust it according to the method shown in the picture.

