














Assembly Instruction

Thank you for purchasing this quality product. Be sure to check all packaging material carefully for small parts that may have come loose inside the carton during shipment.


PARTS LIST:

NO	DESCRIPTION	SKETCH	QTY
A	Top		1PC
B	Wooden tray		2PCS
C	Pedestal		2PCS
D	Middle board		1PC
E	Base		1PC

HARDWARE LIST:


NO	DESCRIPTION	SKETCH	QTY
a	Long bolt	 M8X110	4PCS
b	Bolt-1	 M8X35	6PCS
c	Bolt-2	 M8X40	6PCS
d	Flat washer	 Ø20XØ8	16PCS
e	Spring washer	 Ø12XØ8	16PCS
f	Nut	 M8	4PCS
g	Allen key	 5#	1PC
h	Hexagon socket	 14#	1PC

STEP 1

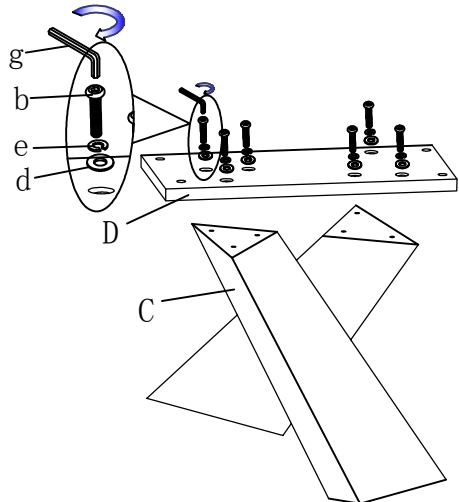

PUT THE MIDDLE BOARD ON THE PEDESTAL AND USE THE ALLEN KEY TO FASTEN THE NUTS AND FLAT WASHERS, SPRING WASHERS TO THE BOLT-1.

STEP 2

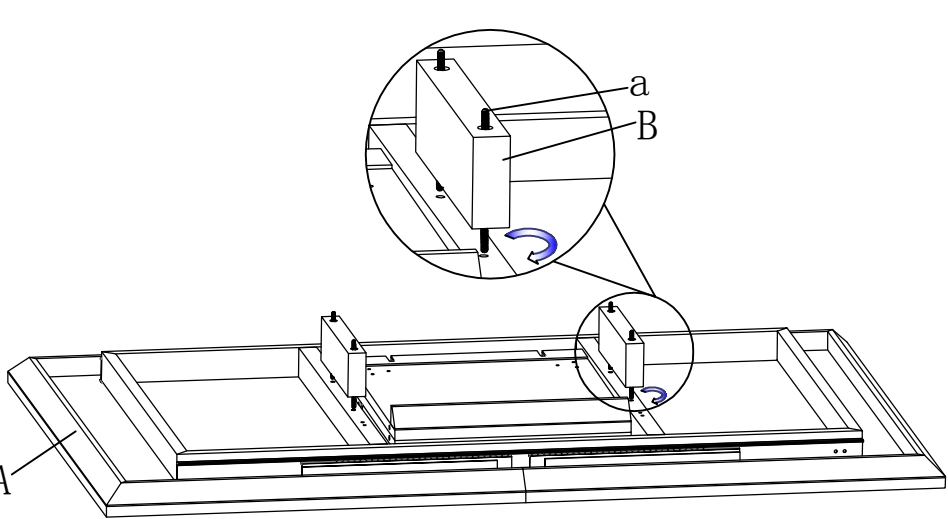


FASTEN THE LONG BOLTS AND INSERT WOODEN TRAY.

MADE IN CHINA


Assembly Instruction

STEP 3


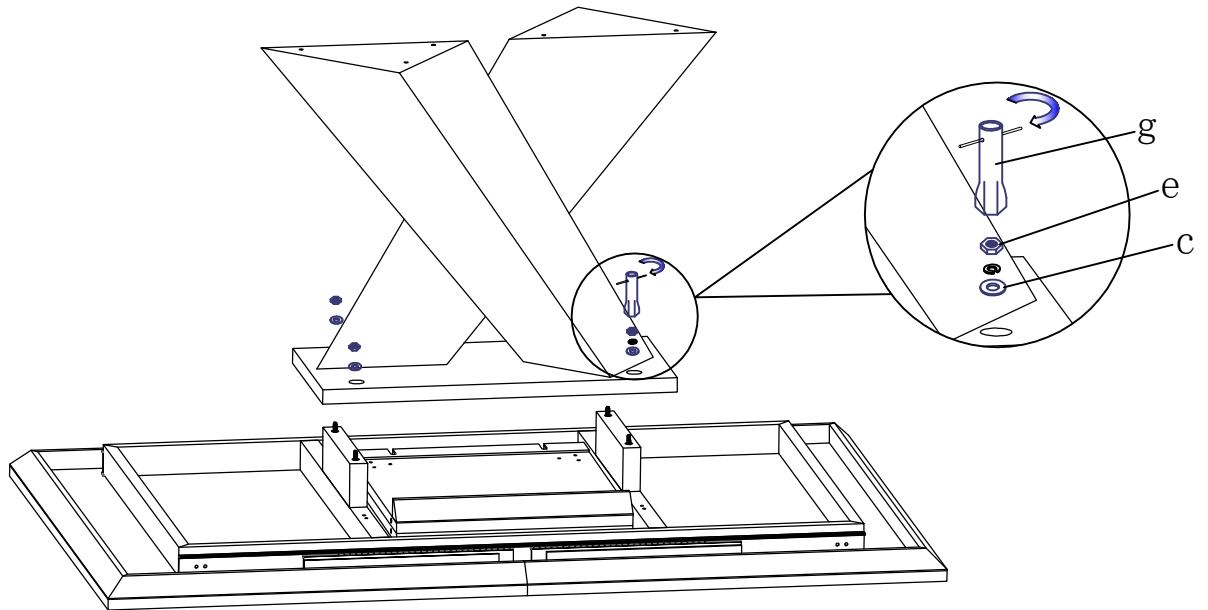


PLACE THE PEDESTAL THROUGH THE LONG BOLTS AND USE THE SOCKET TO FASTEN THE NUTS AND WASHERS TO THE BOLTS.

STEP 4

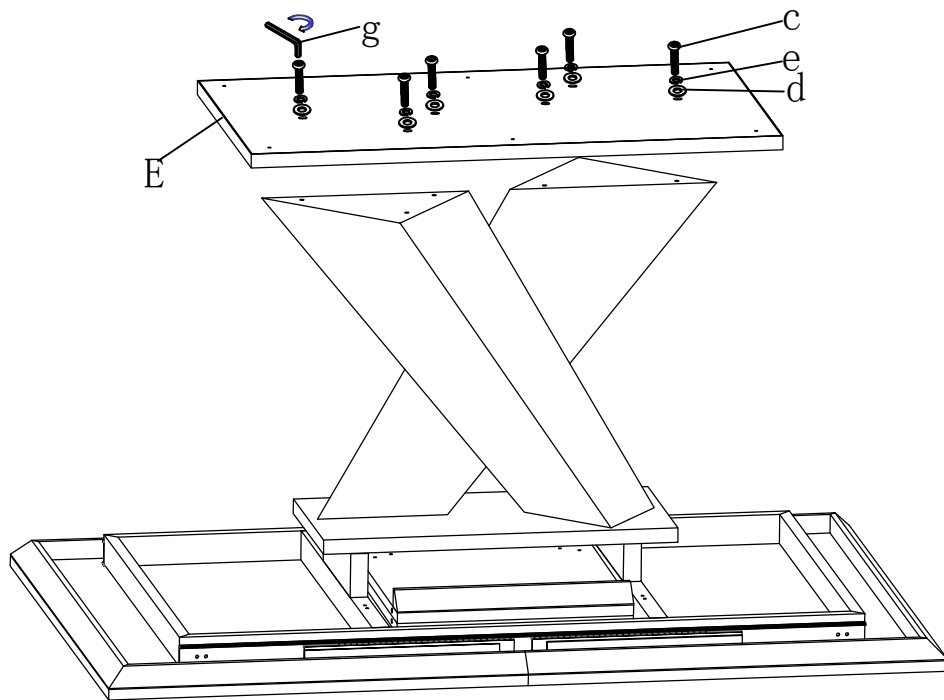

PLACE THE BASE ON THE PEDESTAL AND USE THE ALLEN KEY TO FASTEN THE BOLT-2 AND WASHERS.

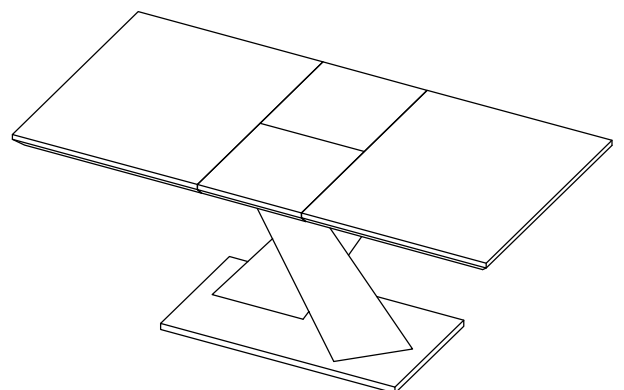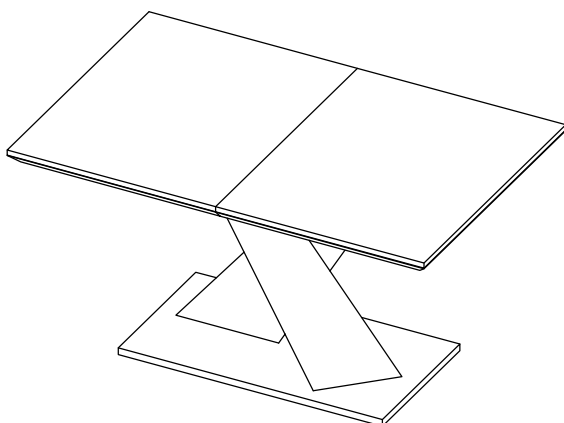

MADE IN CHINA