JAMIE YOUNG Co

CONFETTI MIRROR

6CONF-MICR

SAFETY, INSTALLATION & CARE INSTRUCTIONS

PARTS INCLUDED

A. Mirror with hanger cleat.
B. Wall Anchor- 6 Pcs
C. Mounting Screws- 6 Pcs
D. 15.75 Inch Wall Cleats- 1 Pc

INSTALLATION PROCEDURE

1. Safety Precaution- Ensure the wall can support the weight of the mirror 12.000 Kgs/ 26.450 Lbs
2. Unpack all parts and place them on a protected work surface.
3. Determine the exact location of the fixture and mark holes on the wall surface using the holes in the wall cleats (D) as a guide.
4. Drill small holes on each point location on the wall.
5. Each hole should be just large enough to accommodate wall anchor (B).
6. Insert the anchors (B) into the holes on the wall
7. Mount the wall cleat (D) into the wall using screws (C) and check it is securely screwed into the wall.
8. Place the mirror with hanger cleat onto the wall cleat fixed on wall.
9. Installation is complete.

CARE INSTRUCTIONS

1. Clean with a soft, dry cloth or static duster.
2. Avoid the use of harsh chemicals or abrasive cleaners.
3. Ensure the wall can support the weight of the mirror.


JAMIE YOUNG Co

CONFETTI MIRROR

6CONF-MICR

SAFETY, INSTALLATION & CARE INSTRUCTIONS

Fig. 1: Front View & Back View

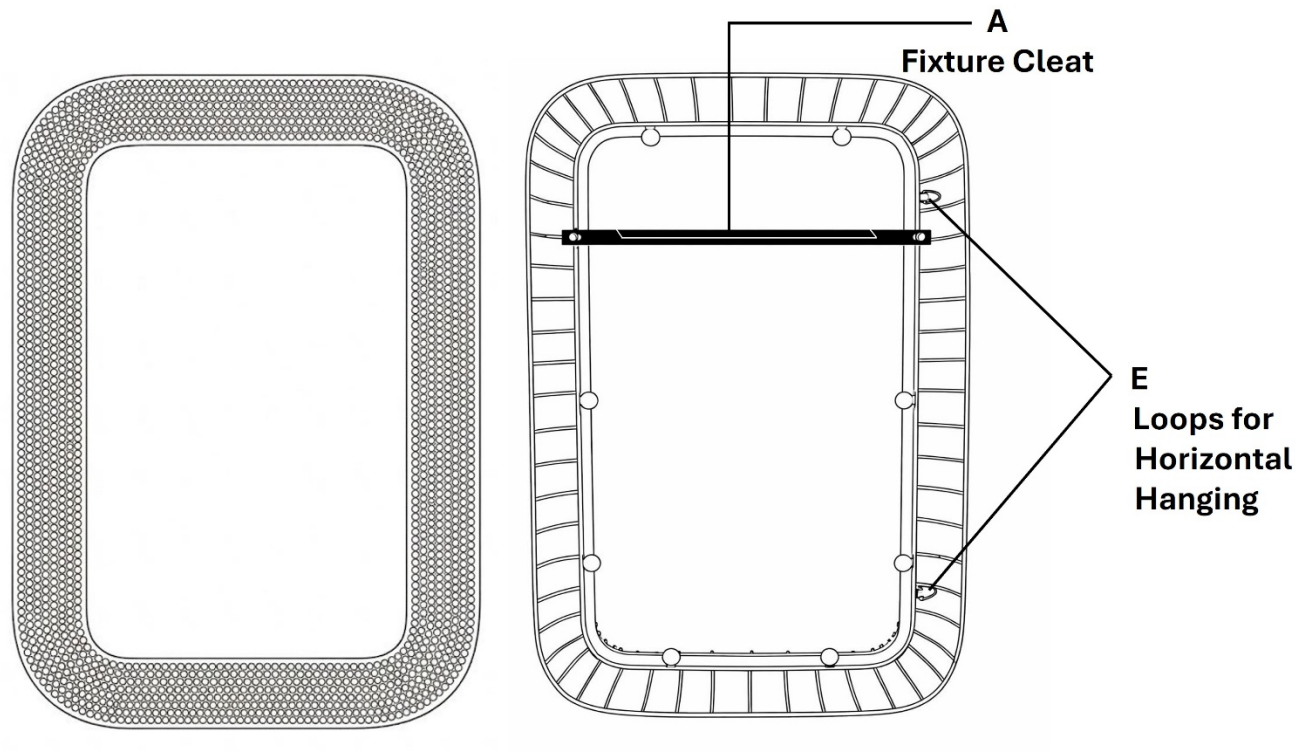

NOTE: This mirror is designed for dual orientation and can be hung both vertically and horizontally. The vertical orientation is equipped with a cleat hanging system, while the horizontal orientation includes metal loops (F) for secure mounting.

JAMIE YOUNG Co

CONFETTI MIRROR

6CONF-MICR

SAFETY, INSTALLATION & CARE INSTRUCTIONS

Fig. 2: Cleat Installation

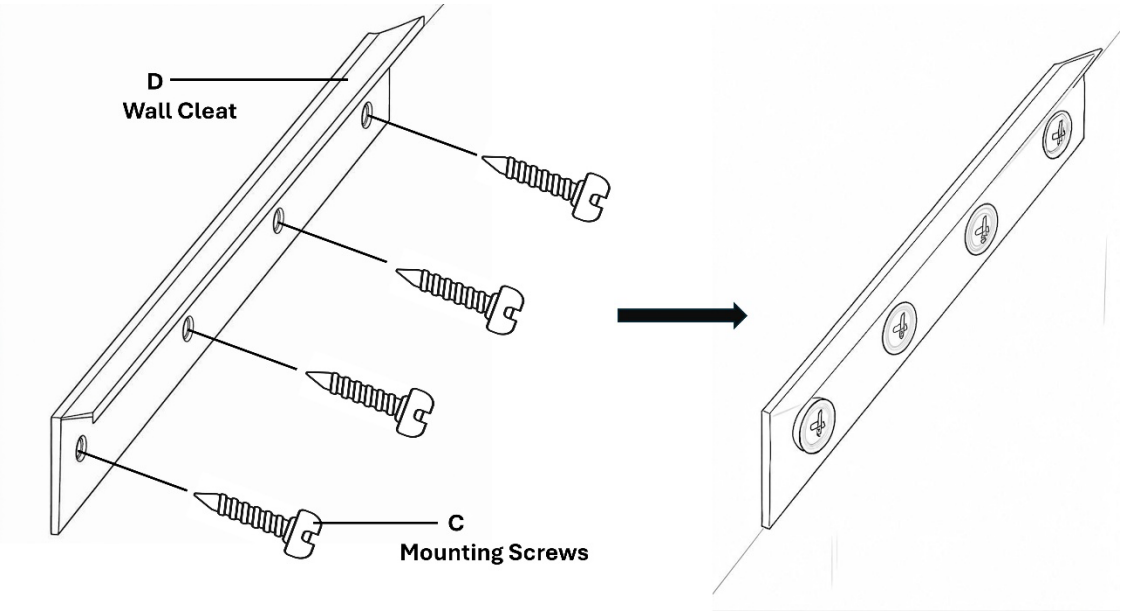


Fig. 3: Horizontal Orientation View

