

EASTERN KING SIZE BED

ASSEMBLY INSTRUCTIONS



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:













1. Remove Hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.















Warning !

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.

PARTS IDENTIFICATION

A		HEADBOARD	1 PC
B		FOOTBOARD	1 PC
C		LEFT BED RAIL	1 PC
D		RIGHT BED RAIL	1 PC
E		BASE PANEL	1 PC
F		LEFT BED RAIL TOP	1 PC
G		RIGHT BED RAIL TOP	1 PC
H		FOOTBOARD TOP	1 PC
I		ROLL SLAT (14 PCS)	1 SET
J		CENTER RAIL	1 PC
K		BED SLAT SUPPORT WITH LEVELER	3 PCS
L		TRESTLE BAR WITH L BRACKET	3 PCS

HARDWARE IDENTIFICATION


1		ALLEN WRENCH	1 PC
2		FLAT WASHER	20 PCS
3		LOCK WASHER	20 PCS
4		SHORT BOLT	10 PCS
5		LONG BOLT	26 PCS
6		LIGHT SET	1 SET
7		SCREW	2 PCS
8		WOOD DOWEL	19 PCS
9		ZIGZAG SPRING CLICK	5 PCS
10		LONG FLAT HEAD SCREW	16 PCS
11		BARREL NUT	10 PCS
12		SHORT FLAT HEAD SCREW	12 PCS

NOTE : ALL HARDWARE WAS PACKED IN A BAG AND PUT IN HEADBOARD BOX (BOX 1)

ASSEMBLY INSTRUCTIONS

STEP 1

Align and fasten left and right bed rails to headboard using long bolt, lock washer and flat washer and tighten with Allen wrench. Repeat the same process for footboard.

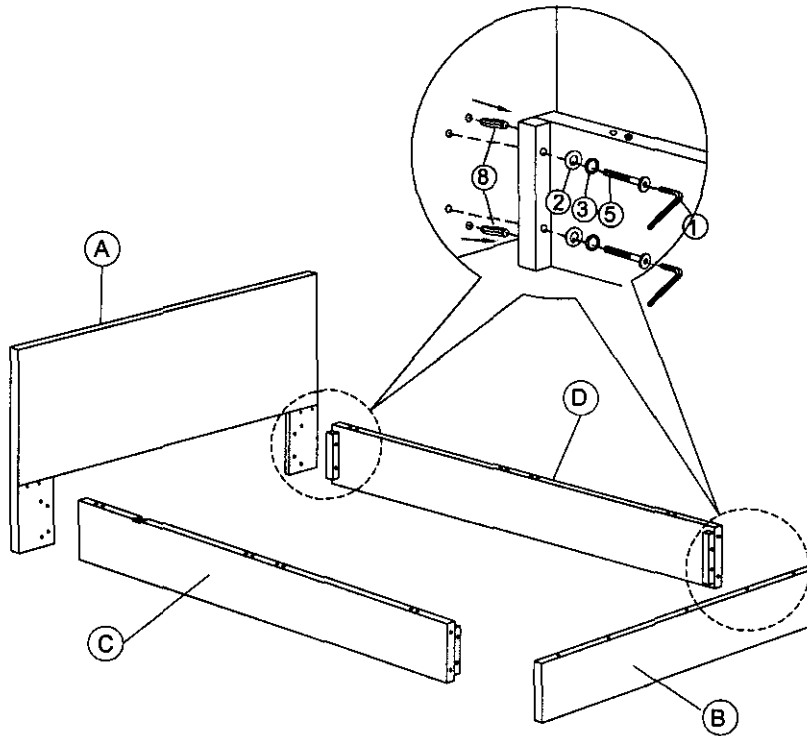


STEP 2

2.1 Align and screw in bed slat support with leveler to center rail. Adjust leveler to touch the floor.

2.2 Insert wood dowel to the top of rail and footboard.

2.3 Align pre-drilled holes on roll slat with wood dowel on bed rail. As shown in DIAGRAM 2.3.


**NOTE: ADJUST LEVELER
TO TOUCH THE FLOOR**

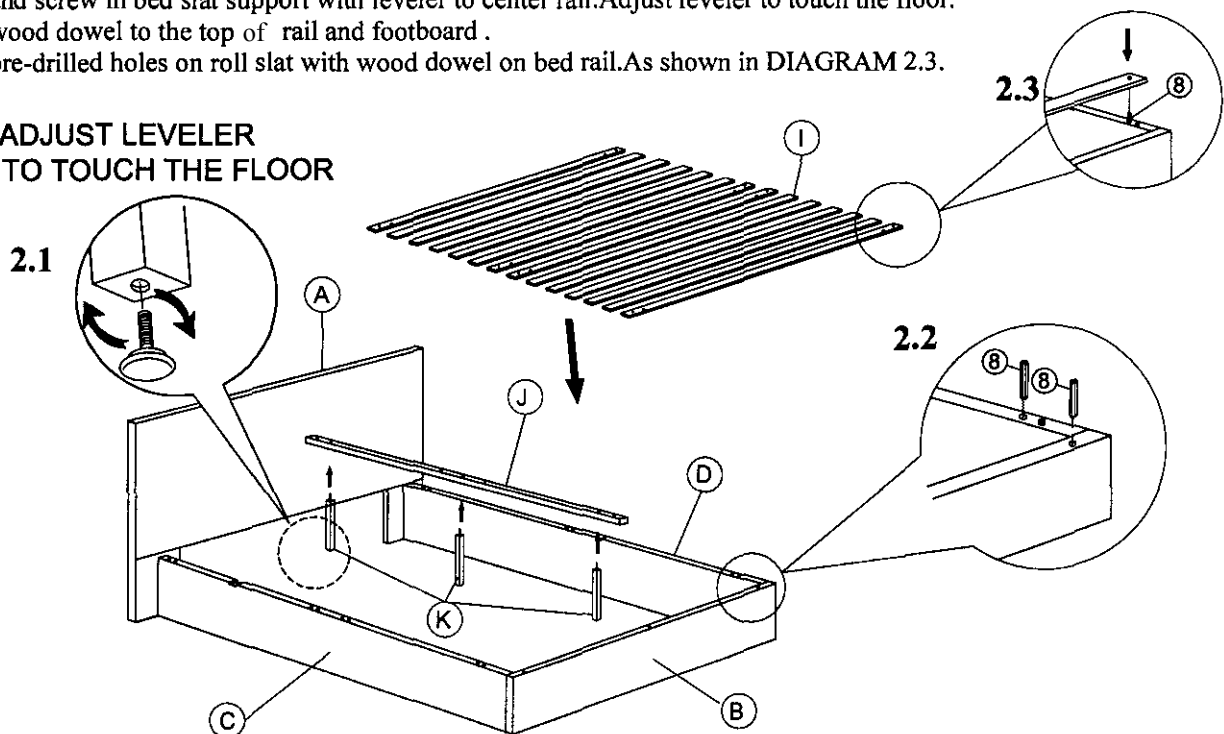

ASSEMBLY INSTRUCTIONS


STEP 3

- 3.1 Align and fasten roll slat to both ends of center rail using long bolt (as per diagram shown). Tighten with Allen wrench.
3.2 Align and fasten roll slat to both ends of bed rail using long bolt and barrel nut (as per diagram shown). Tighten with Allen wrench.

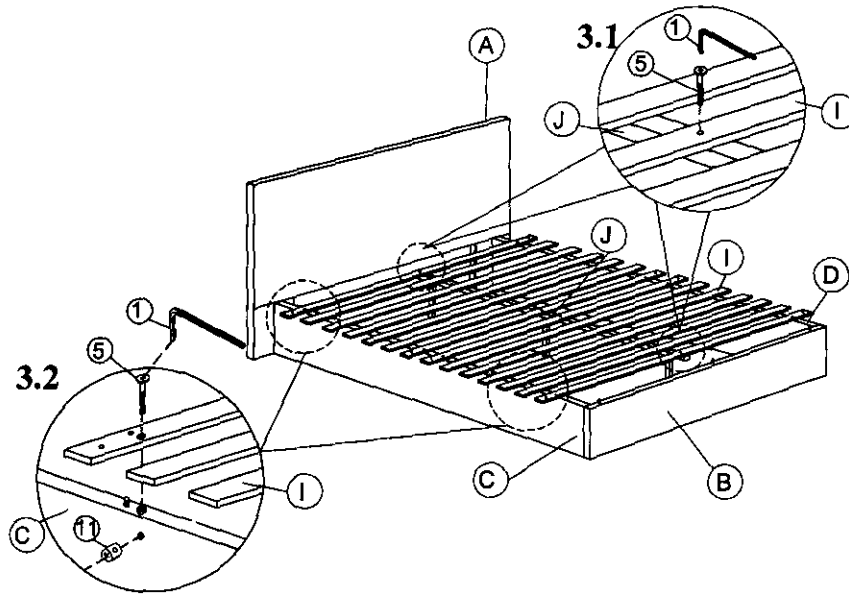

STEP 4


- 4.1 Divide and roll up the roll slats (as per diagram shown).
4.2 Align and fasten trestle bar with L bracket to bed slat support with leveler using short flat head screw and tighten with screw driver(not included).
4.3 Align and fasten trestle bar with L-bracket to the left and right bed rail using short flat head screw and tighten with screw driver (not included).

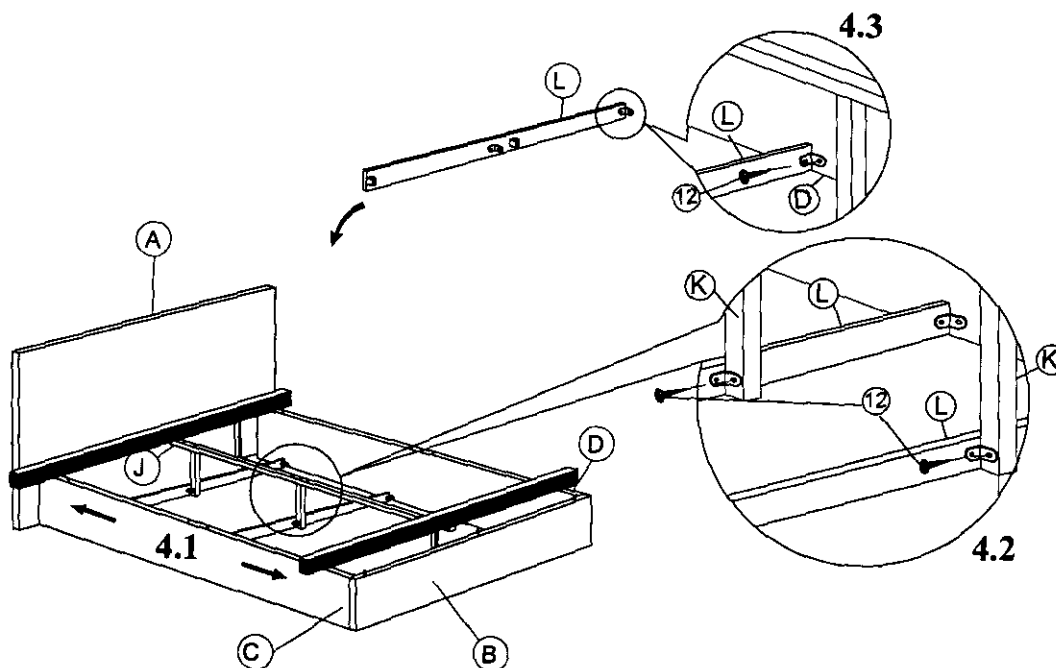

ASSEMBLY INSTRUCTIONS


STEP 5

- 5.1 Align and fasten roll slat to the center of center rail using long bolt (as per diagram shown). Tighten with Allen wrench.
 5.2 Align and fasten roll slat to the center of bed rail using long bolt and barrel nut (as per diagram shown). Tighten with Allen wrench.
 5.3 Align and fasten base panel to the top of footboard using long bolt and barrel nut. Tighten with Allen wrench.

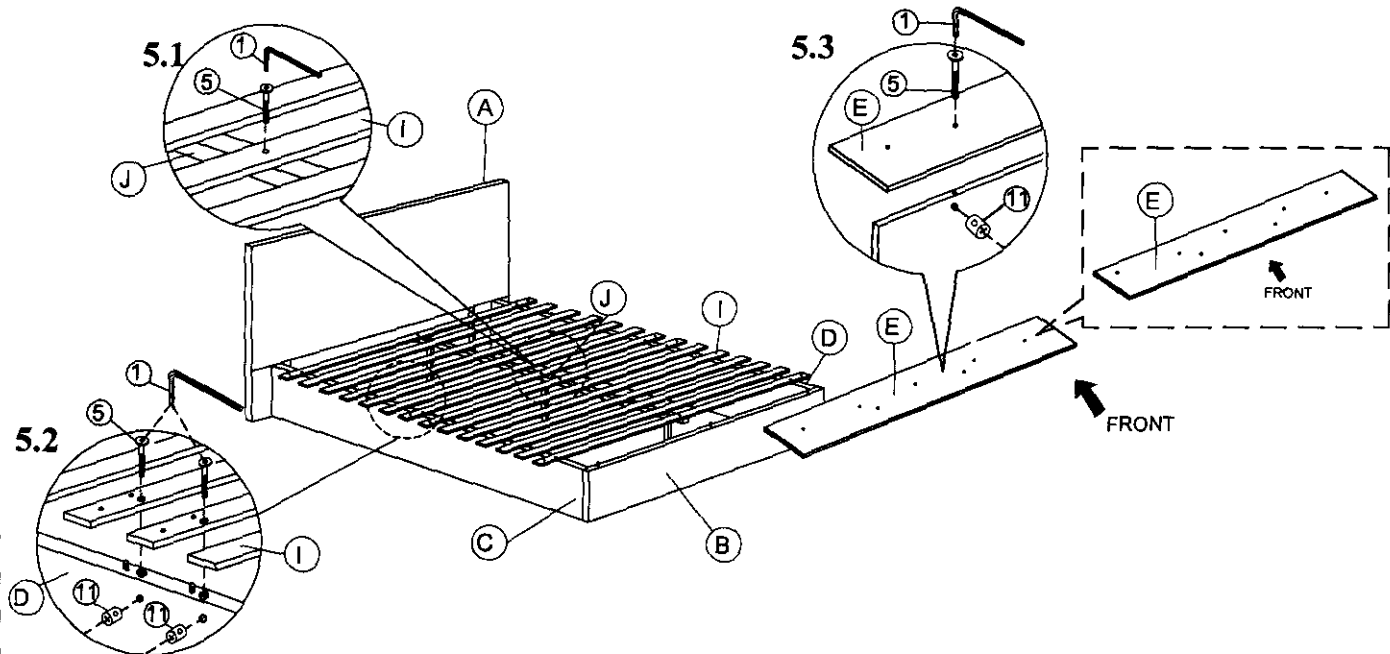

STEP 6

- 6.1 Align and fasten zigzag spring click using long flat head screw and tighten with screw driver(not included).
 6.2 Align and fasten light set using long flat head screw to the pre-drilled holes of bed rail and footboard.
 6.3 Align and fasten the light set conductor to left bed rail top using screw and tighten with screw driver(not included).

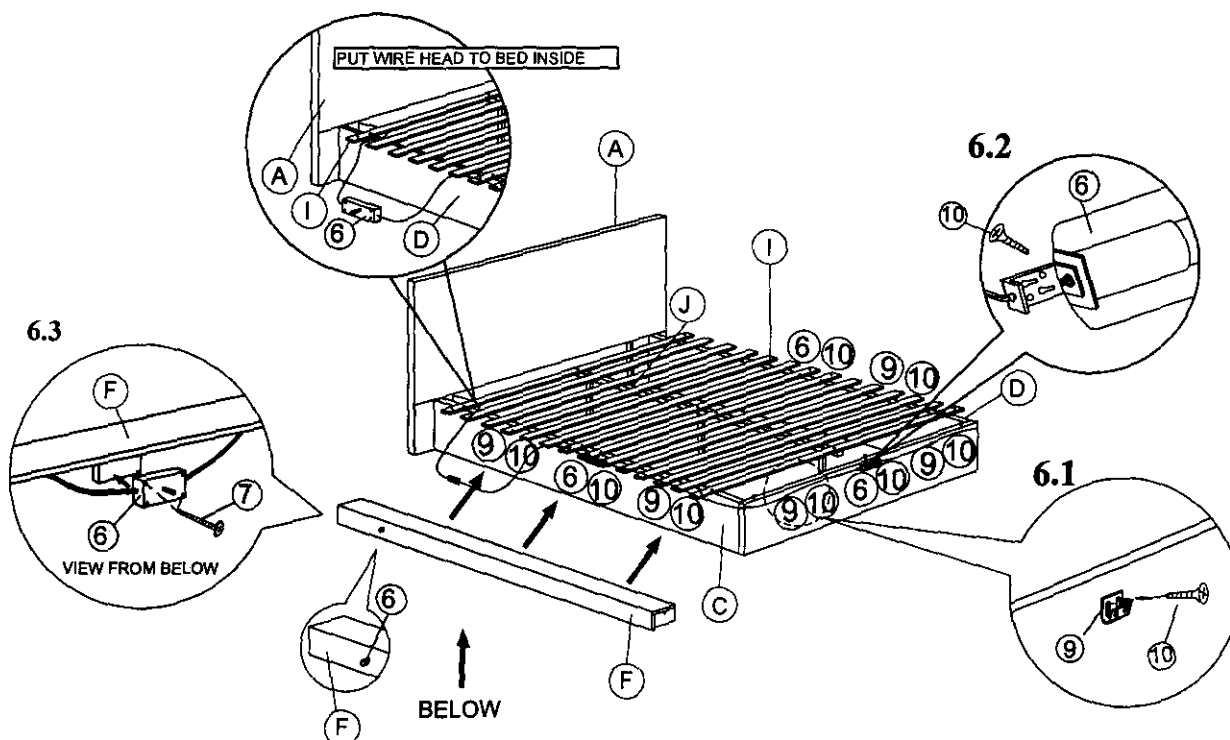


ASSEMBLY INSTRUCTIONS

STEP 7

7.1 Insert wood dowel into bed rail top.

7.2 Align and fasten headboard to bed rail top using long bolt and tighten with Allen wrench.

7.3 Align and fasten roll slats to the bottom of bed rail top using short bolt, lock washer and flat washer and tighten with Allen wrench (downwards to upwards).

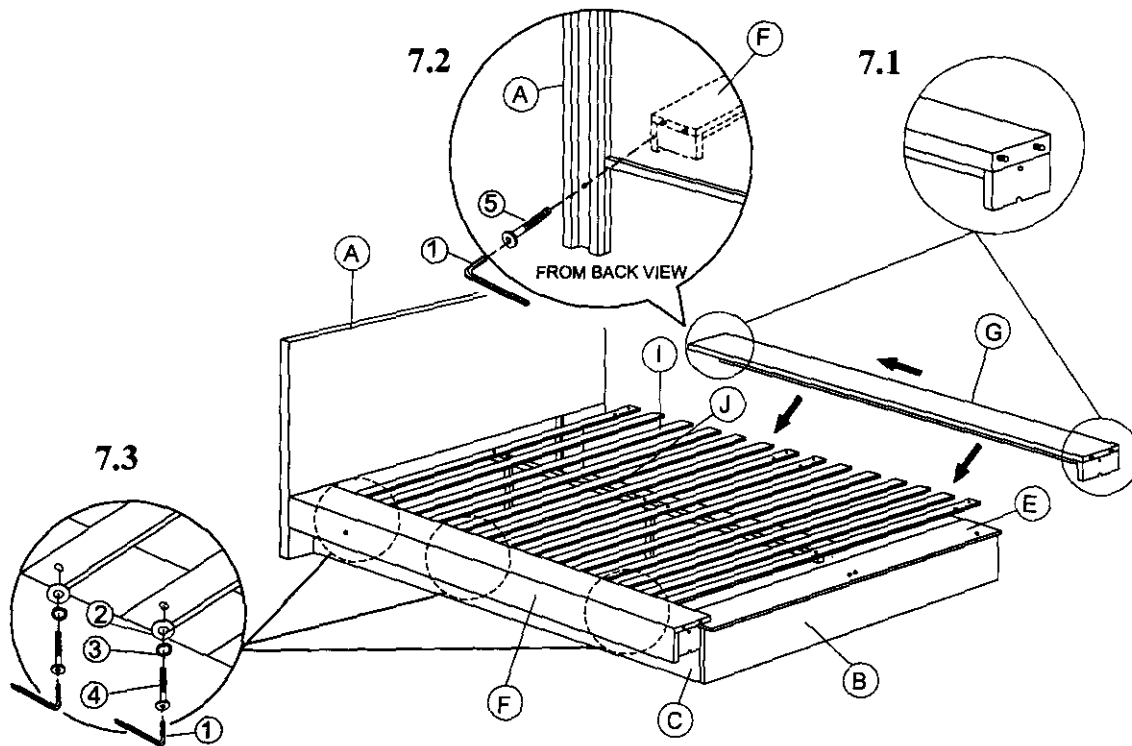

STEP 8

8.1 Align and fasten bed rail top to footboard top using long bolt, lock washer and flat washer and tighten with Allen wrench.

8.2 Align and fasten base panel to the bottom of footboard top using short bolt, lock washer and flat washer and tighten with Allen wrench (downward to upwards).

