

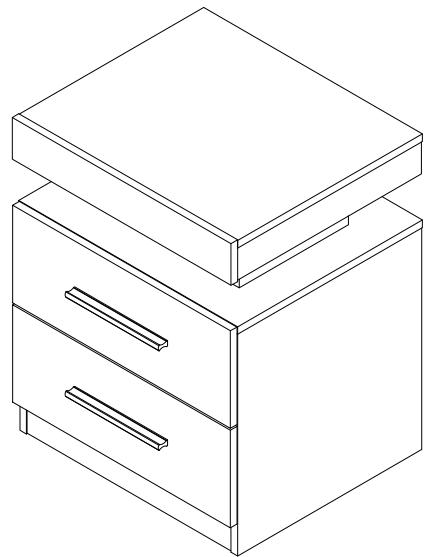







INSTRUCTION MANUAL

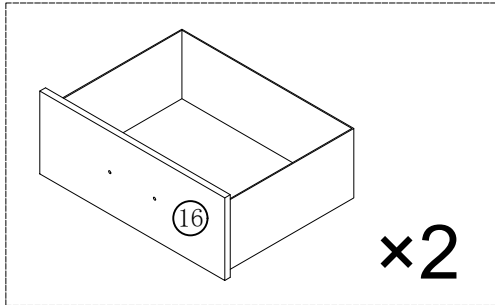

Model: B02



Customer service email: info@i-aplus.com

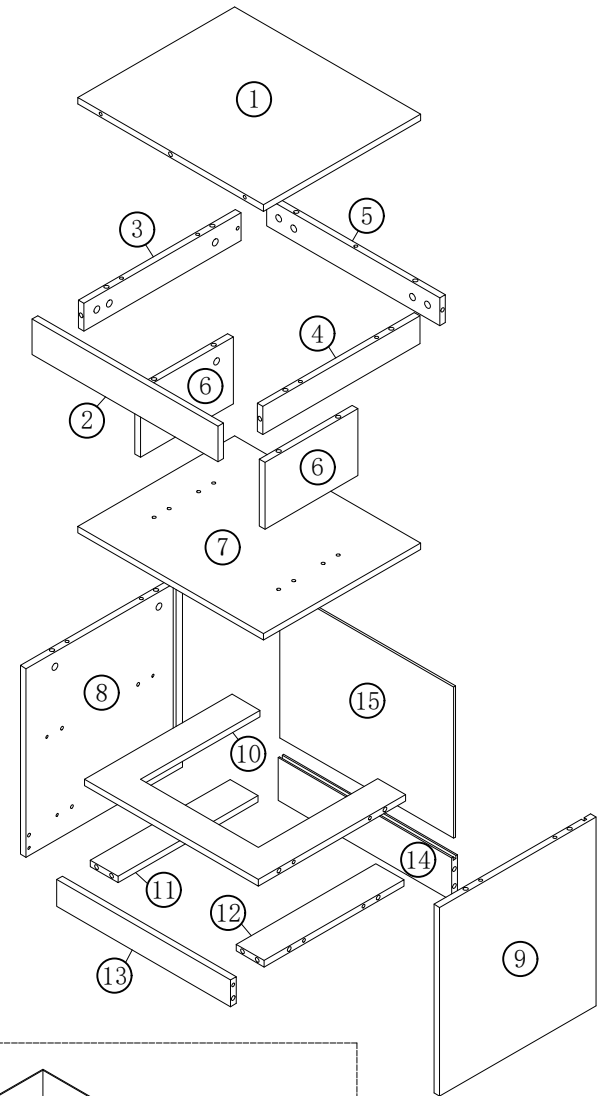

 CU	 15*9	 8*30	 3.5*12
A*37	B*37	C*25	D*6
		 18mm	
E*4	F*2	G*4	H*6
			
I*41	LED*1	TOOL	

Cam Lock Fastening System

This Lock Fastening System System will be used throughout the assembly process

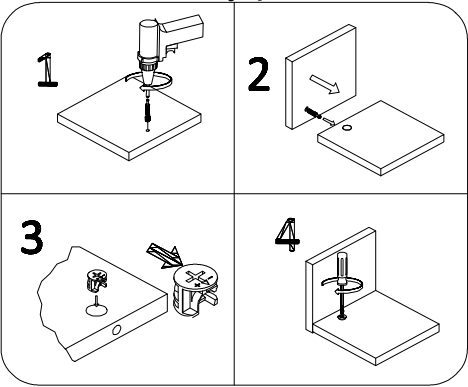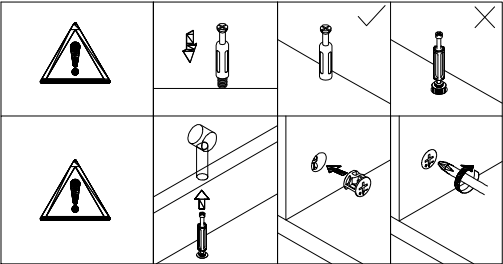


A




B

STEP 1

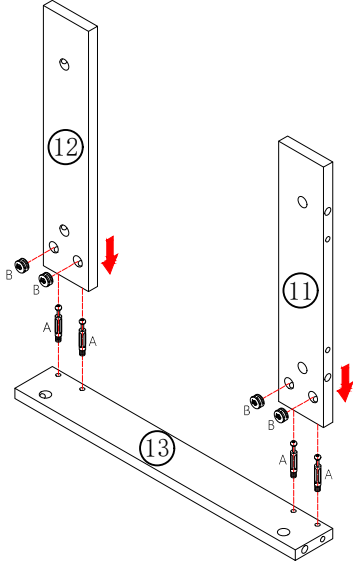


	A*4
	B*4

STEP 2

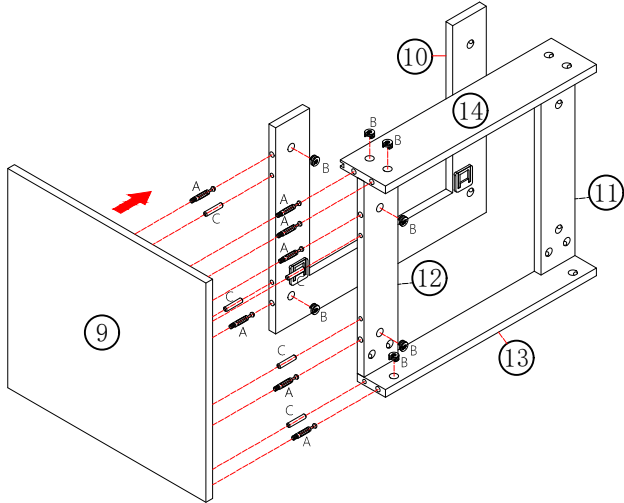


	A*7
	B*7
	C*5

STEP 3

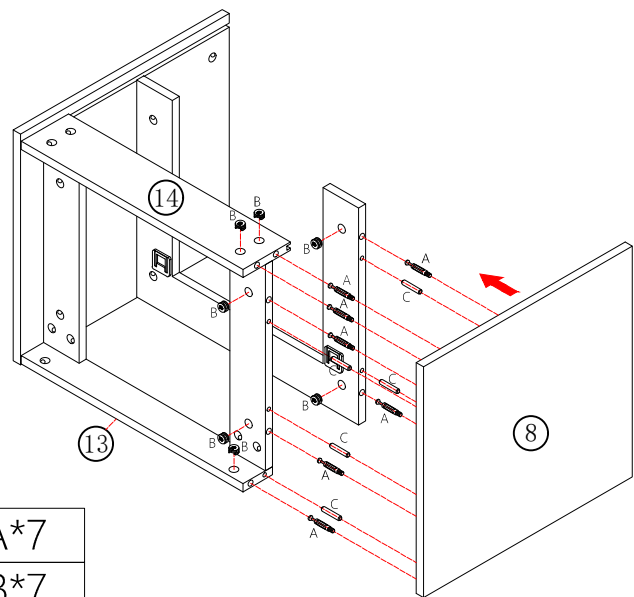


	A*7
	B*7
	C*5

STEP 4

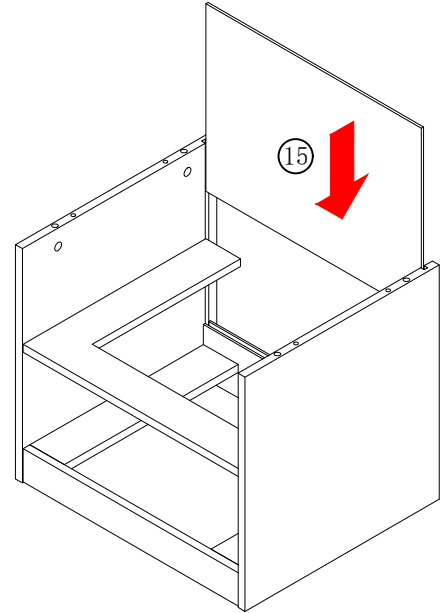


STEP 5

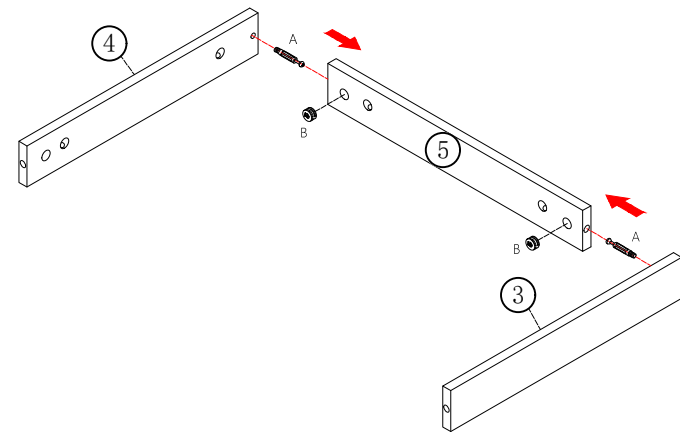


	A*2
	B*2

STEP 6

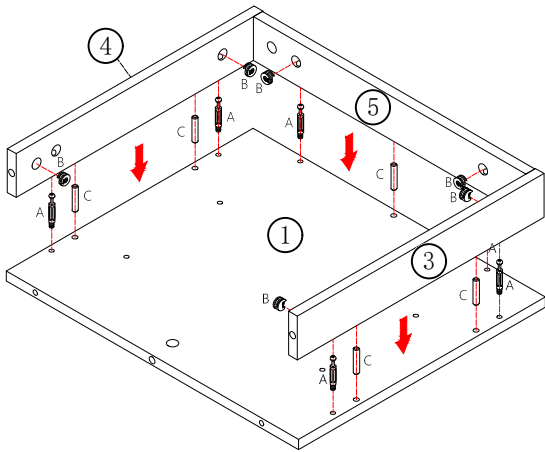

	A*6
	B*6
	C*5


STEP 7

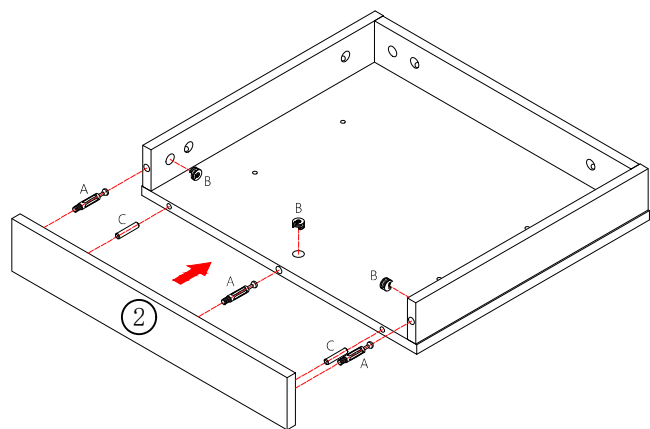

	A*3
	B*3
	C*2


STEP 8

Collez la bande LED sur la plaque 2.

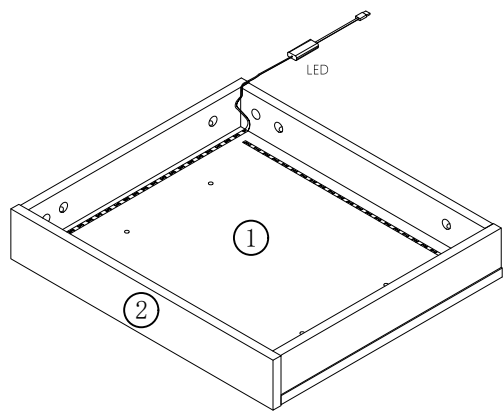


	LED*1
---	-------


STEP 9

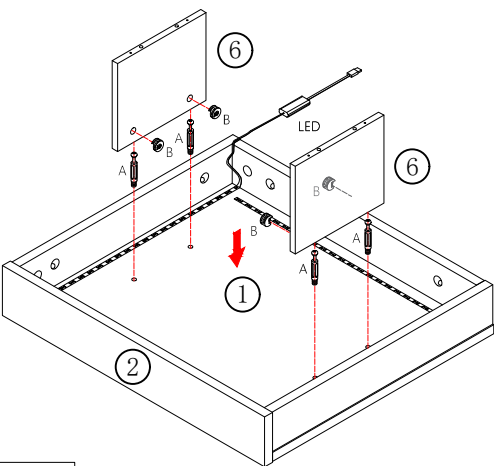


	A*4
	B*4

STEP 10

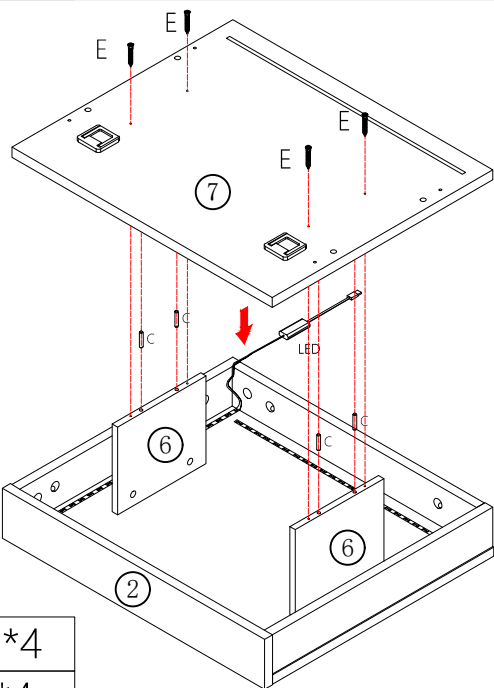



	C*4
	E*4

STEP 11

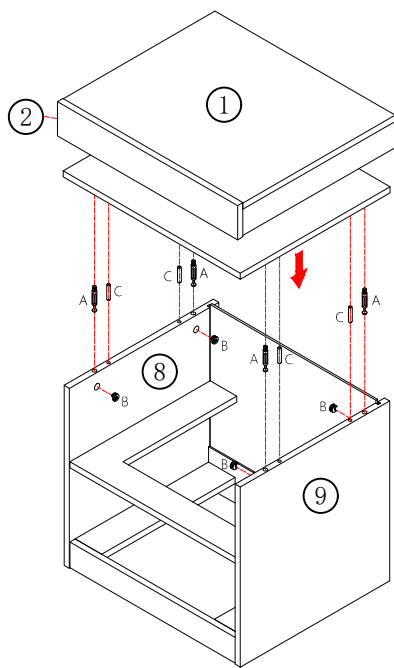

	A*4
	B*4
	C*4




STEP 12

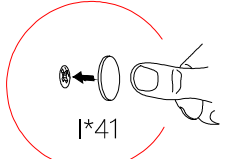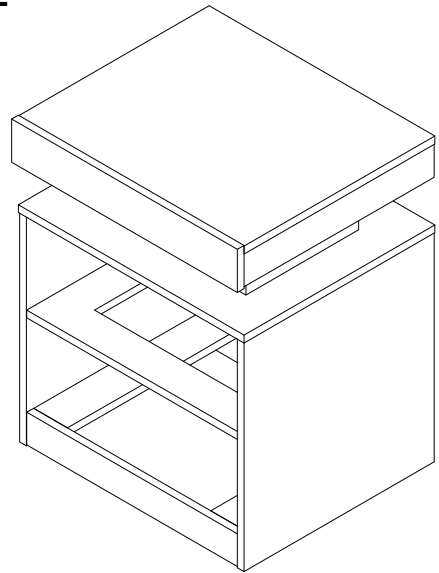

Using Cover-up Sticker (I)*41 to cover the exposed part of Screws.


	I*41
---	------

STEP 13

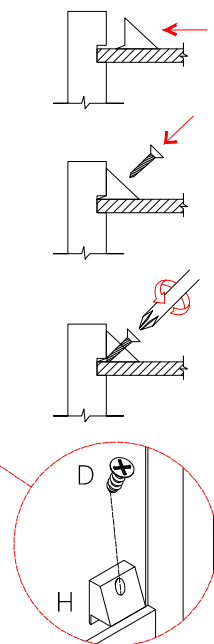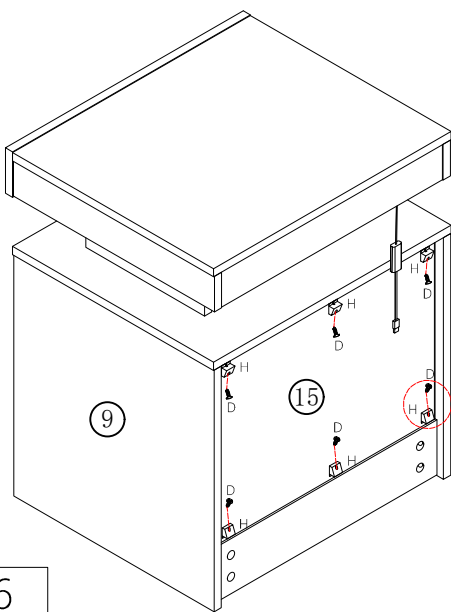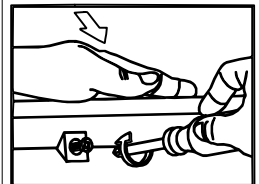

	D*6
	H*6


STEP 14

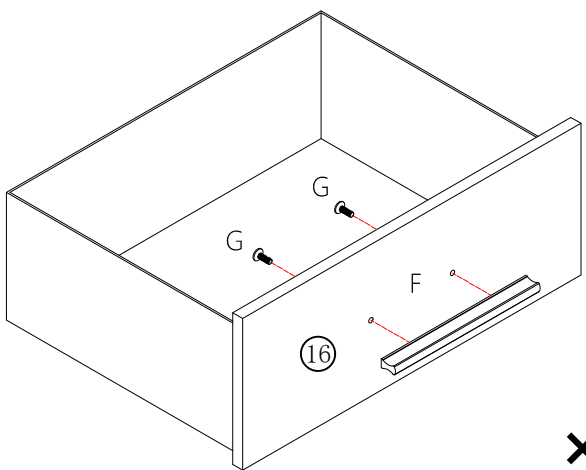

×2

	F*2
	G*4

STEP 15

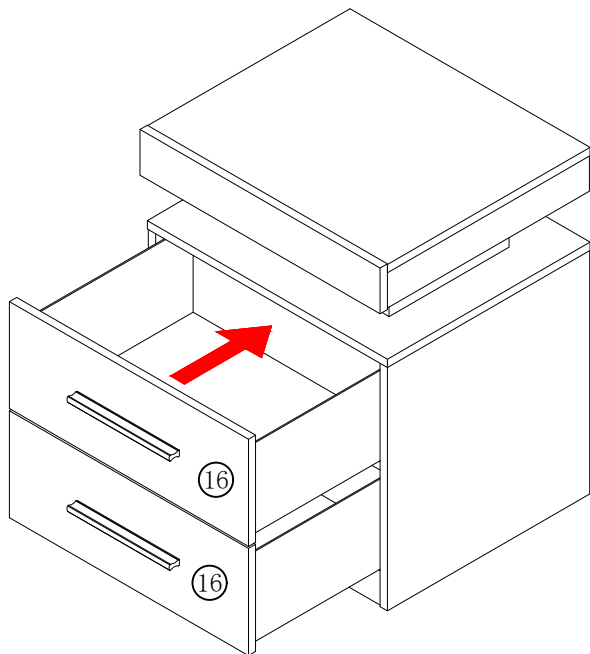

STEP 16

