



Step 1

## Step 2

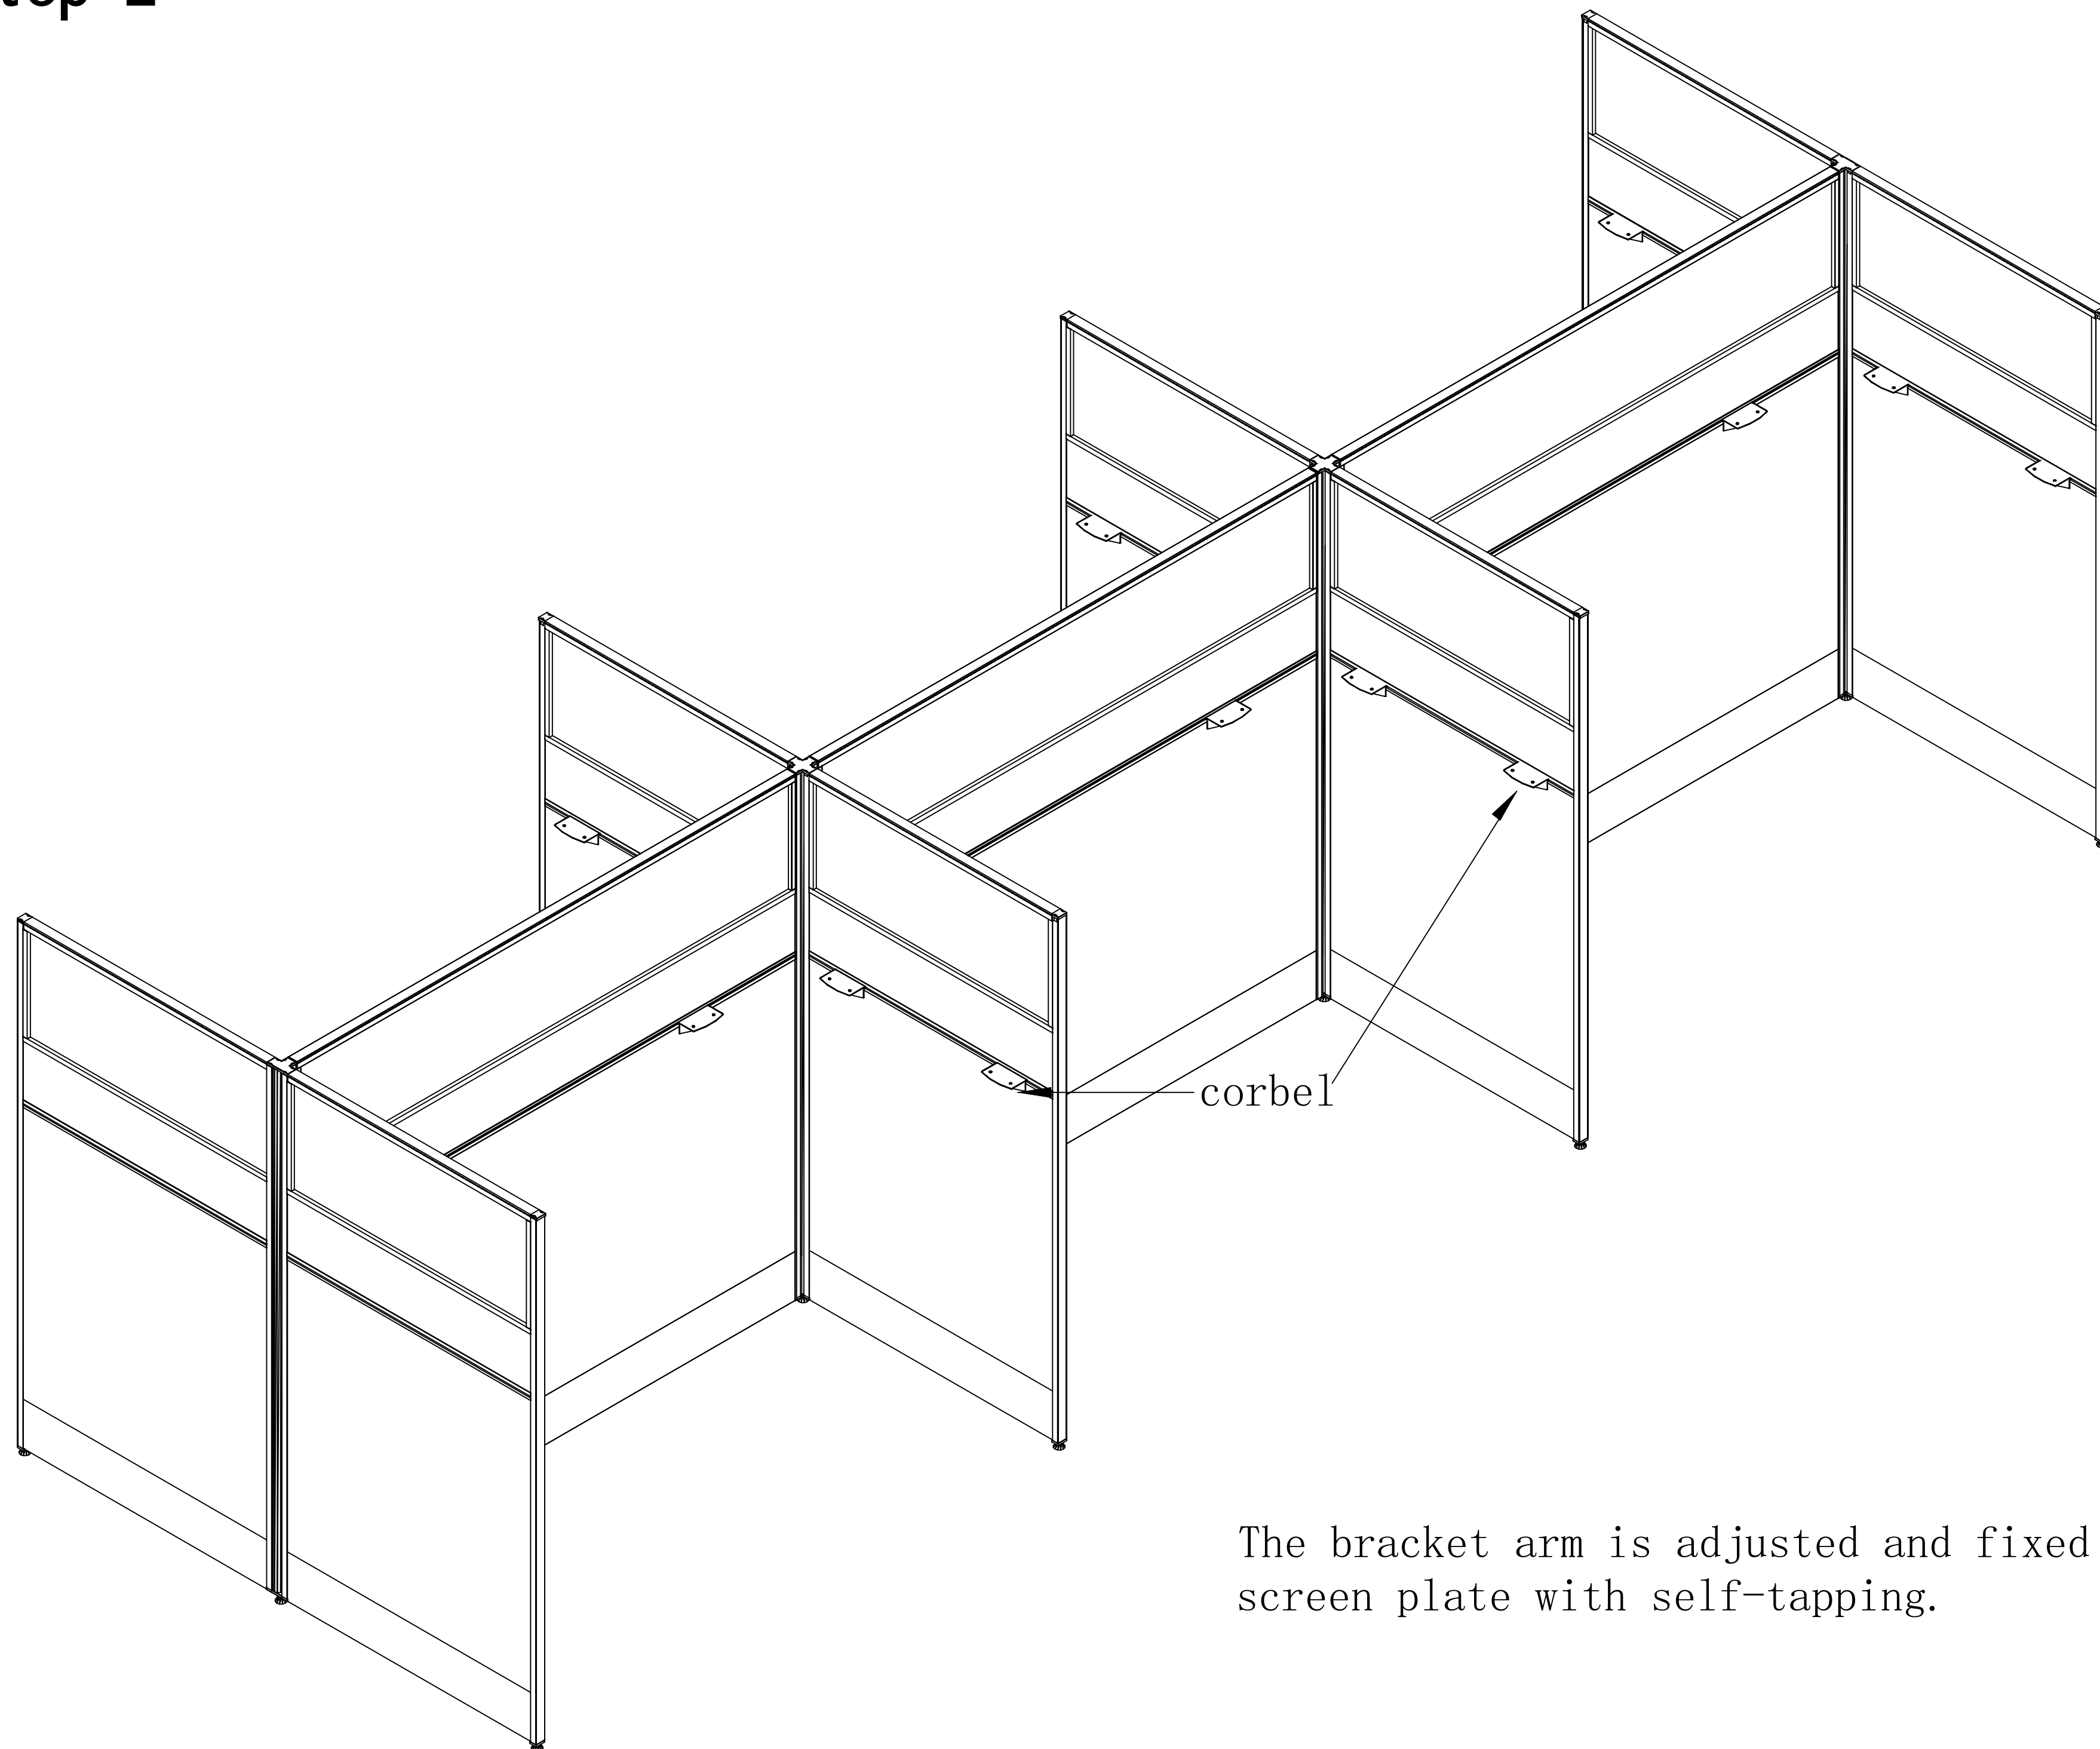

The bracket arm is adjusted and fixed on the screen plate with self-tapping.

## Step 3

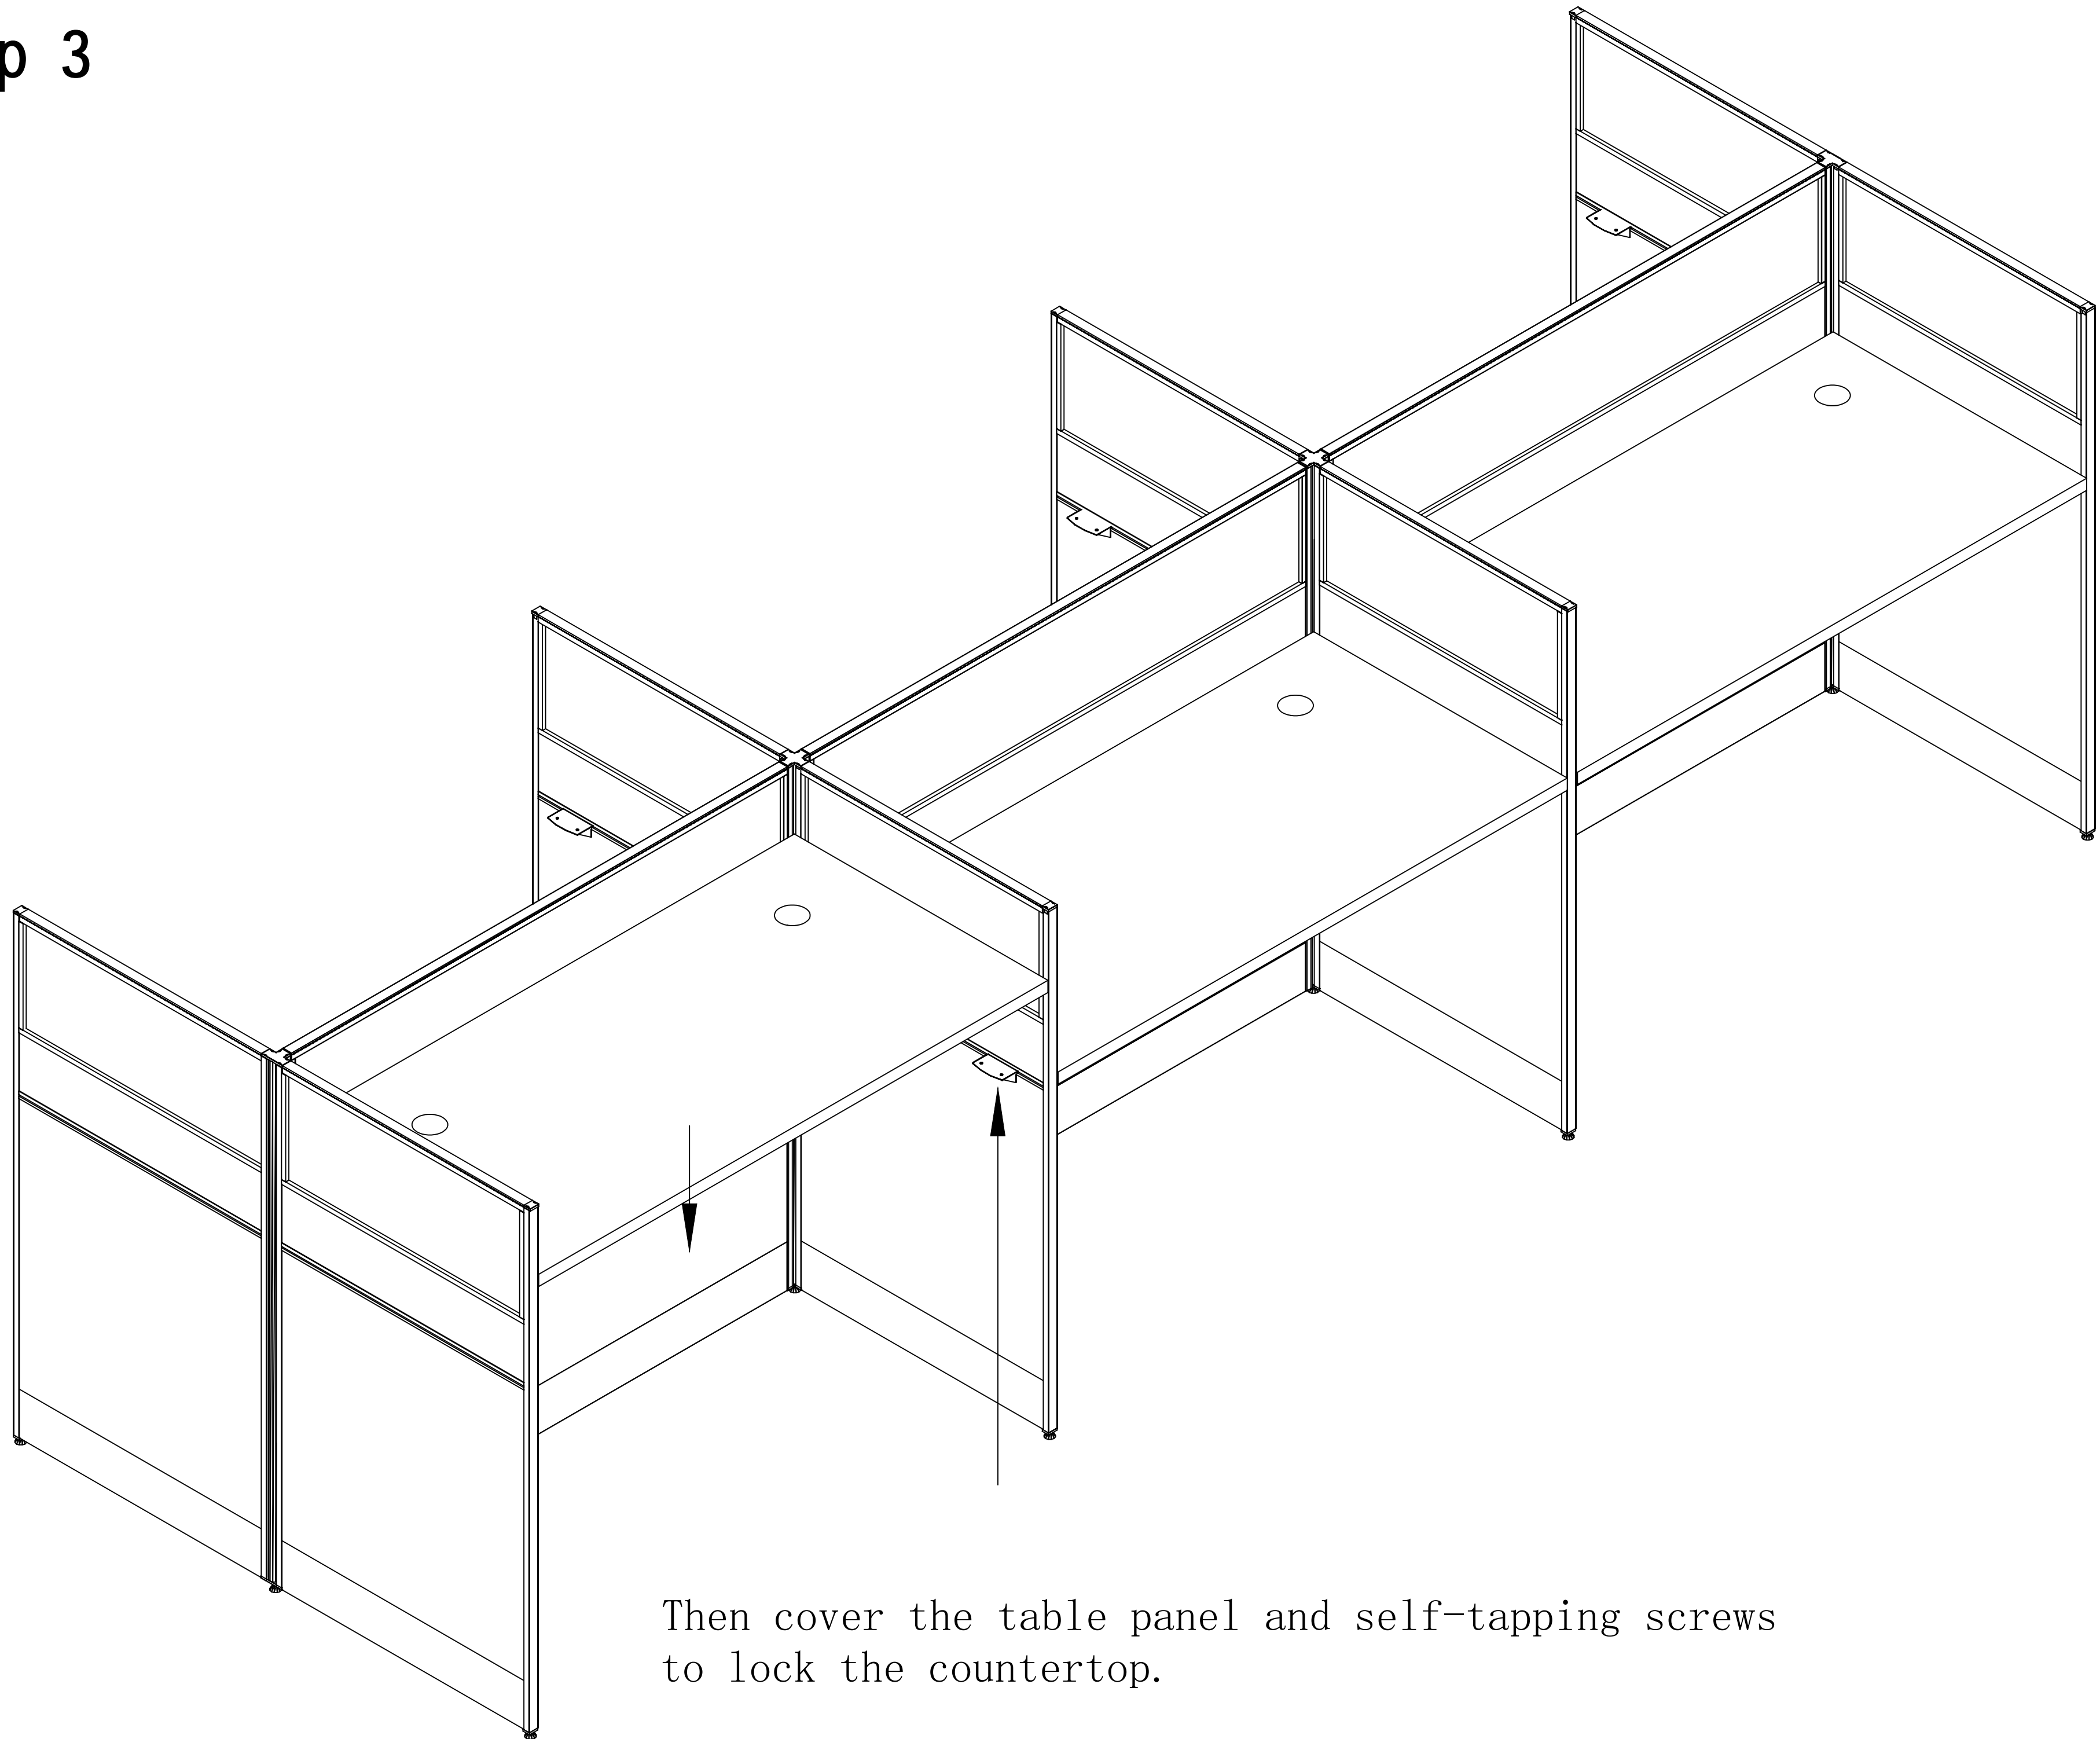

Then cover the table panel and self-tapping screws  
to lock the countertop.