

INSTALLATION INSTRUCTIONS

PARTS LIST

The extra parts are for spare

Table board #2

Table board #1

Support frame

Large cabinet

Support frame

front panel

Small cabinet

Eccentric nut

Three-in-one screw

(The 3-in-1 connector consists of two parts)

screw#1 x6

screw#2 x8

Double-ended connector x2


desktop cable holes

drawer handle x4

computer vents



STEP 1

Install the Three-in-one screw into the holes on the sides of the two cabinets

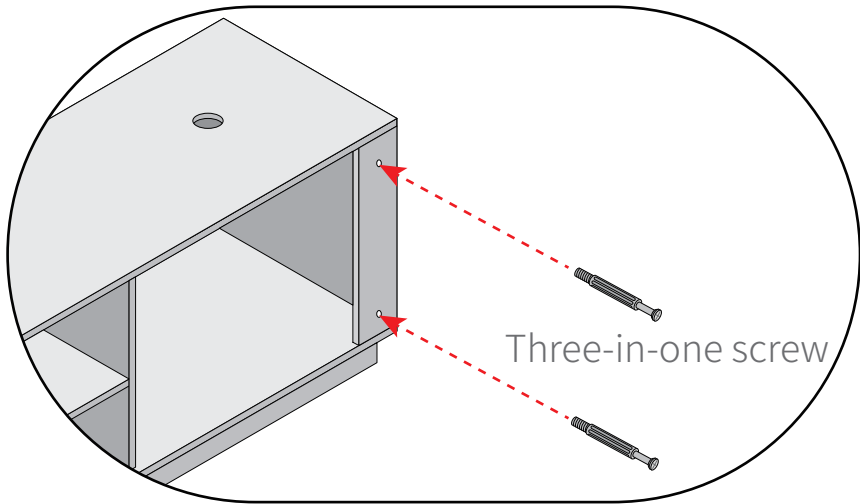



STEP 2

Connect the two cabinets using the front panel.

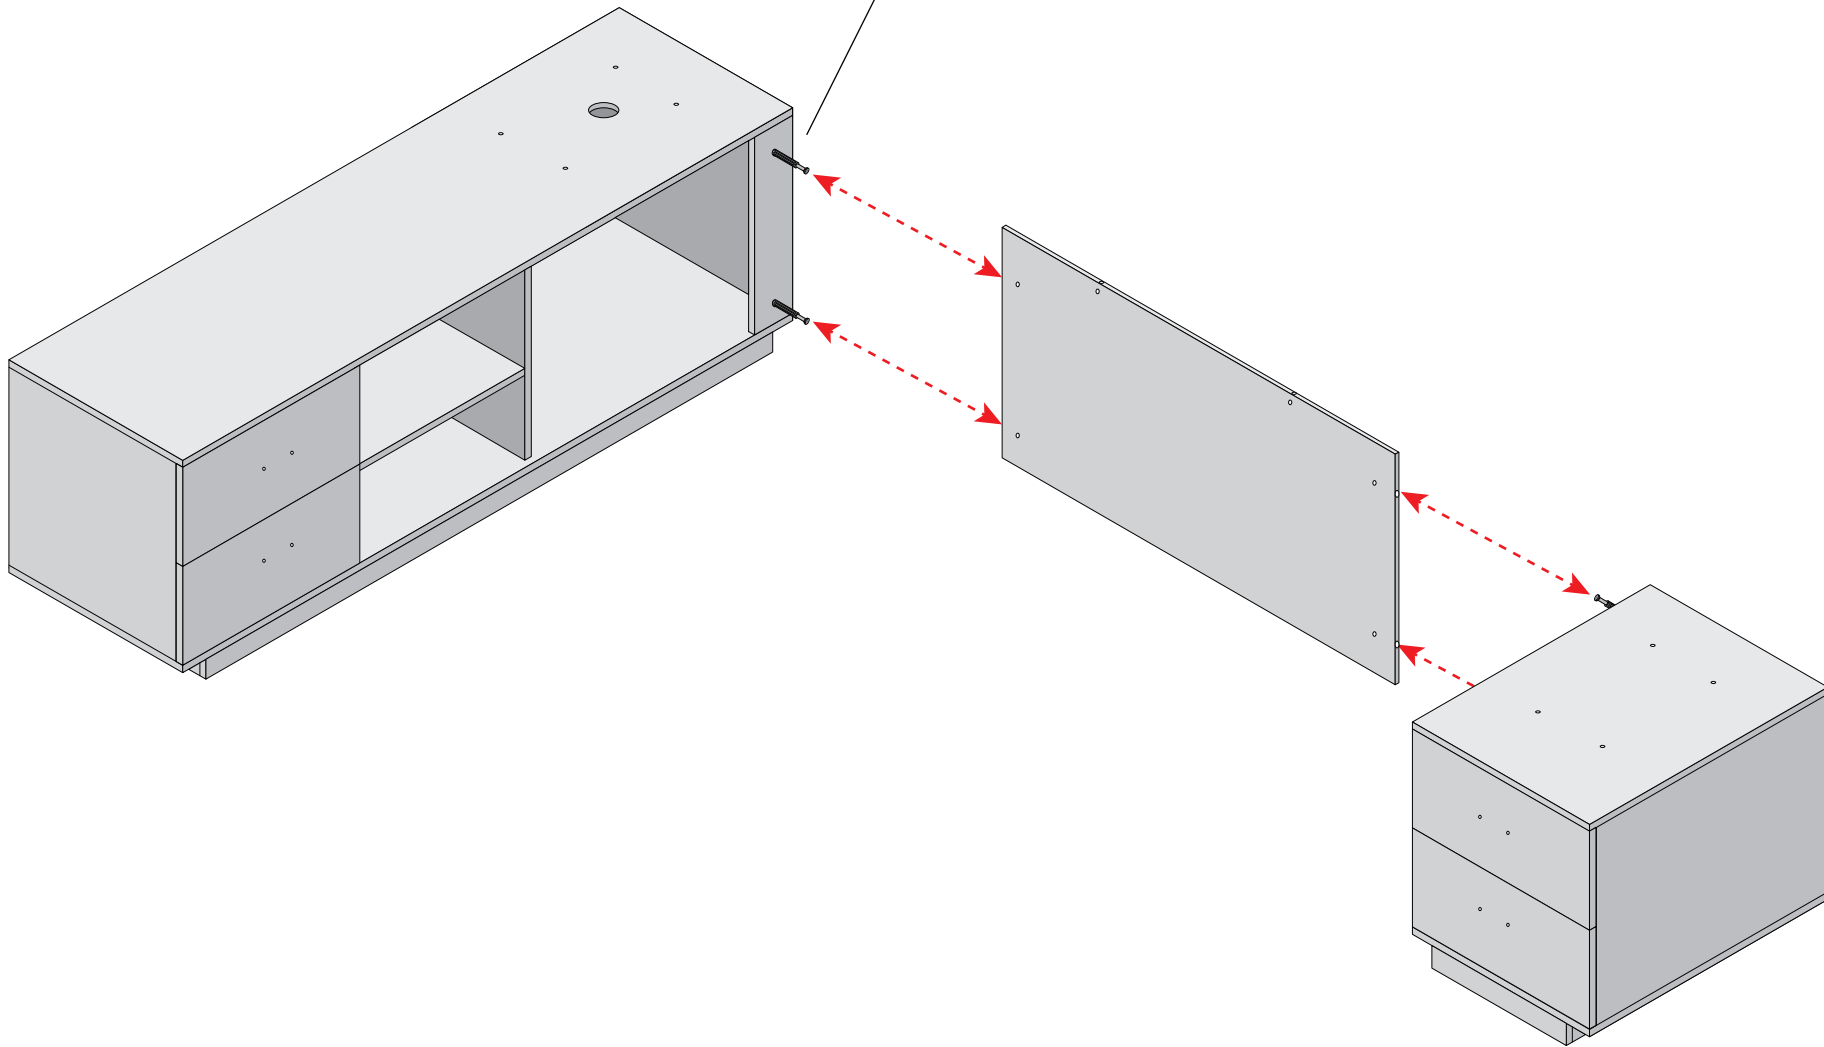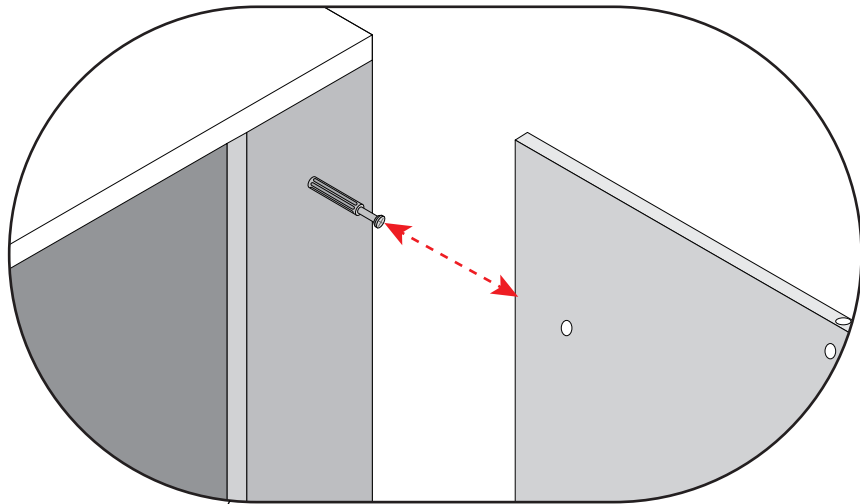


STEP 3

It is fixed by Eccentric nut

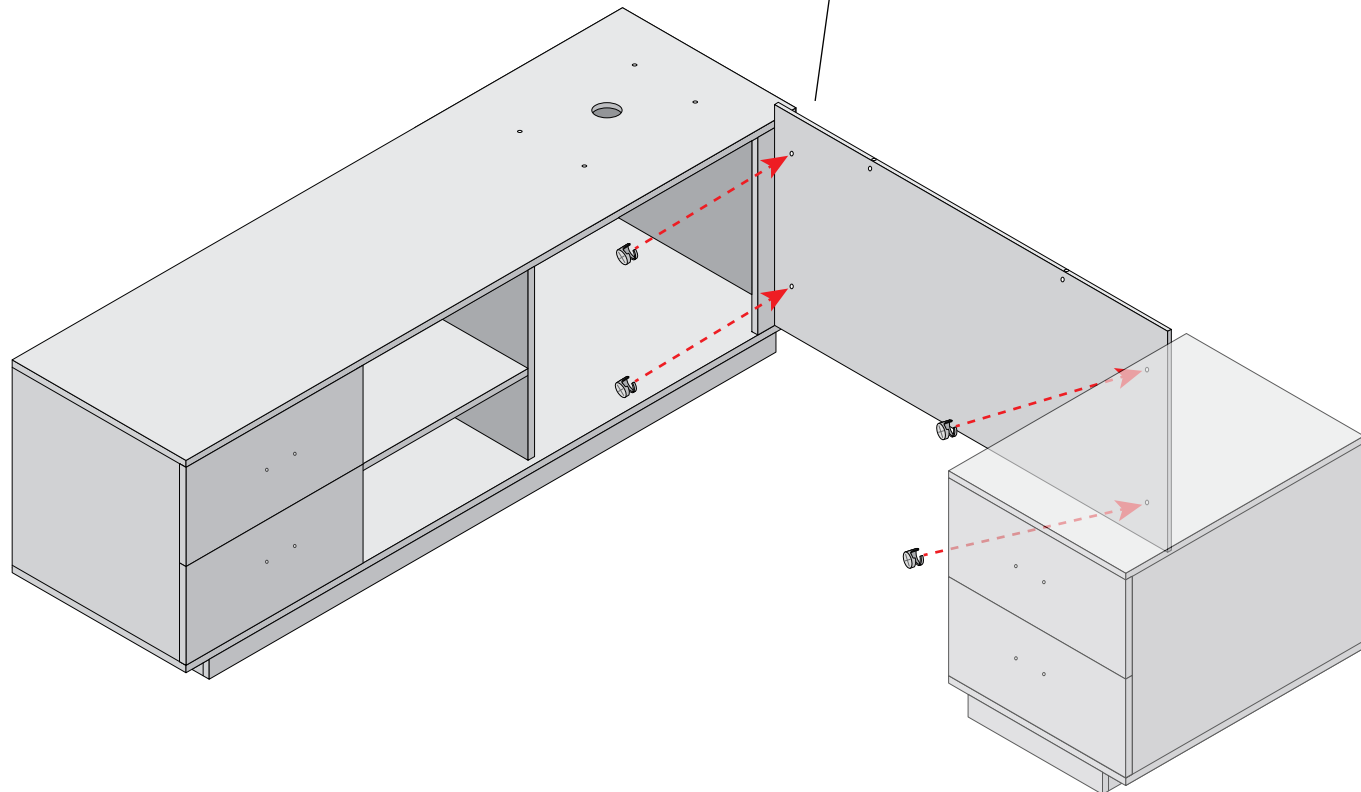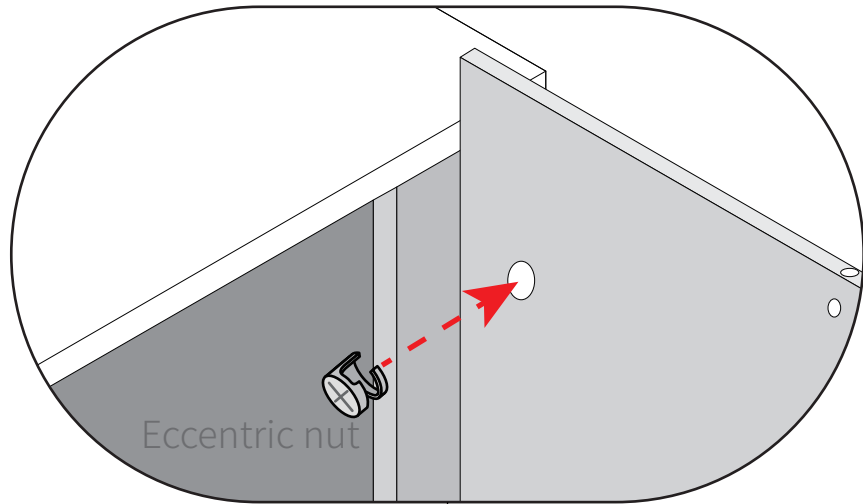


STEP 4

Install the 3-in-1 screws into the top holes of the two cabinets

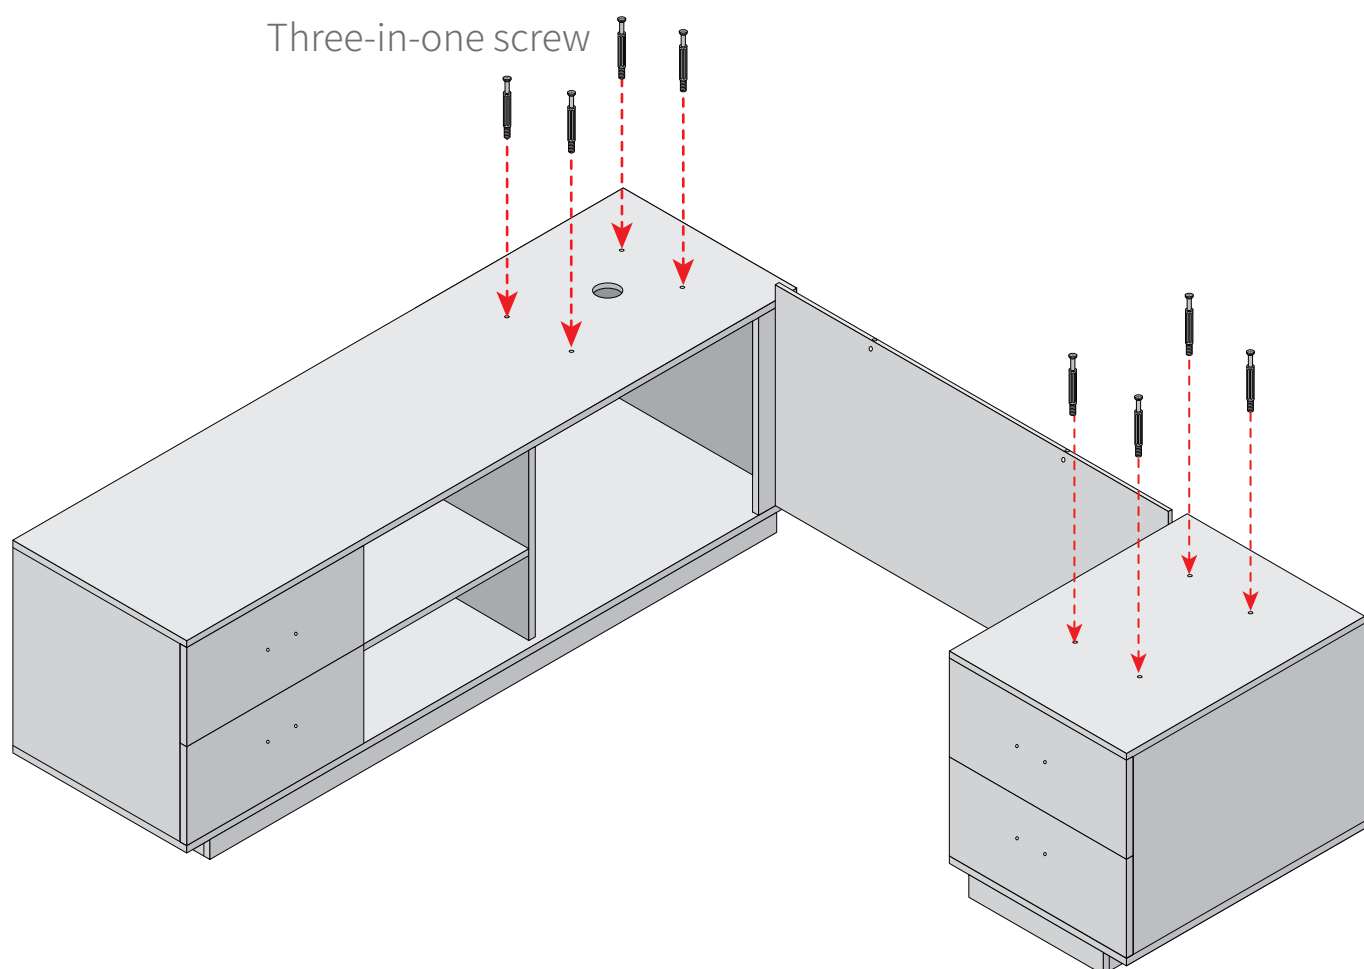



STEP 5

Install the support frame on the cabinet

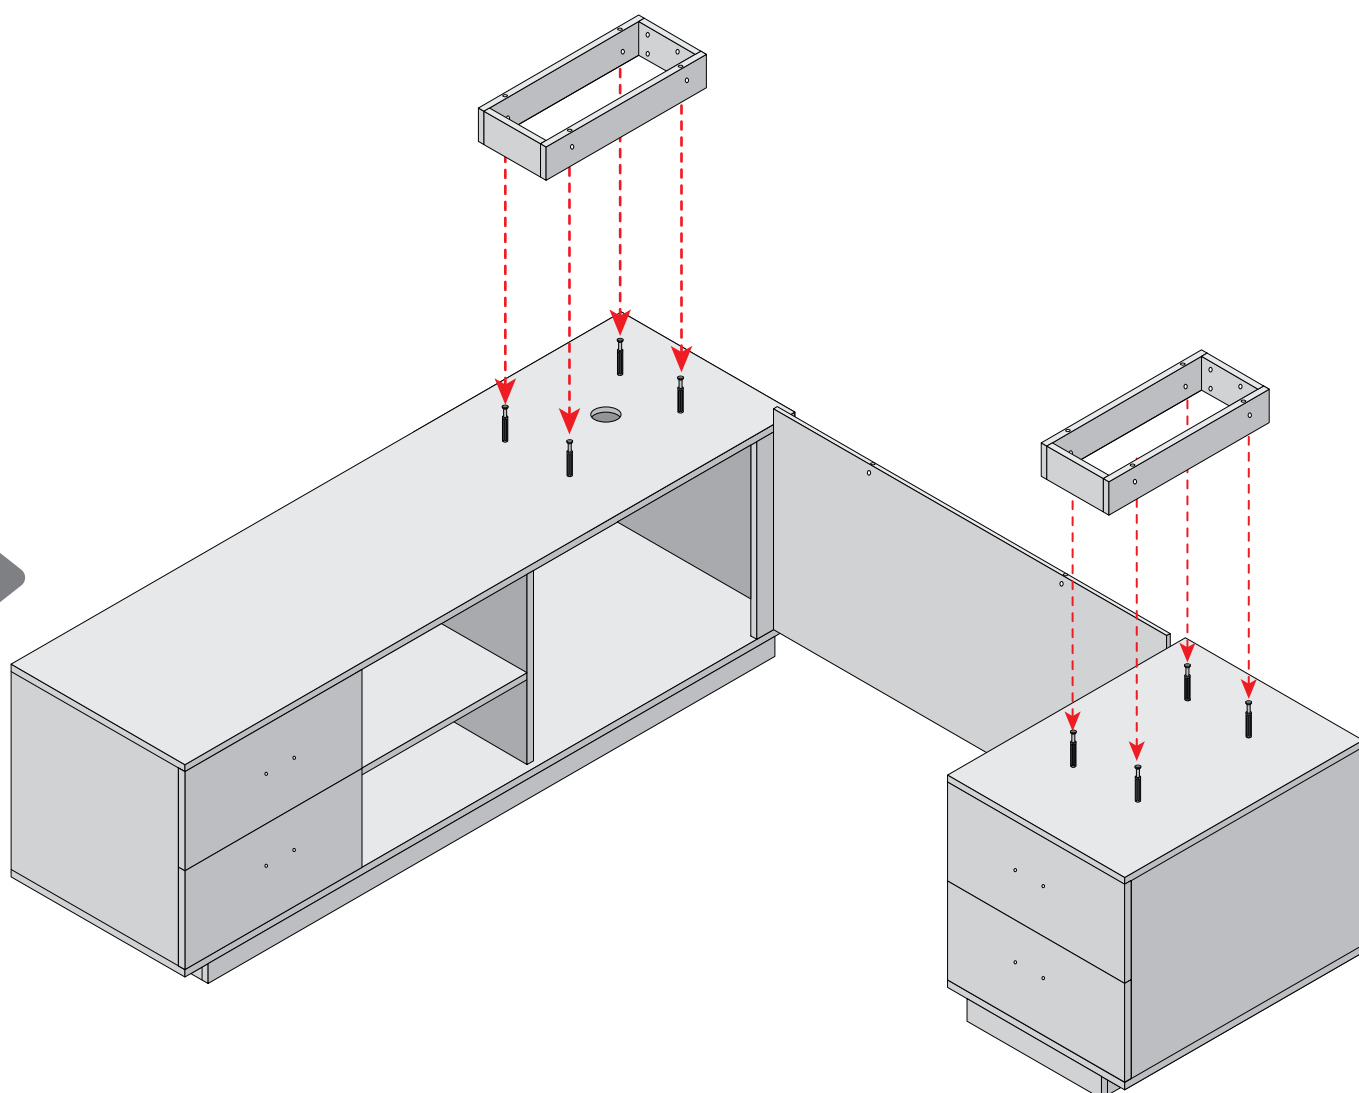


STEP 6

It is fixed by Eccentric nut

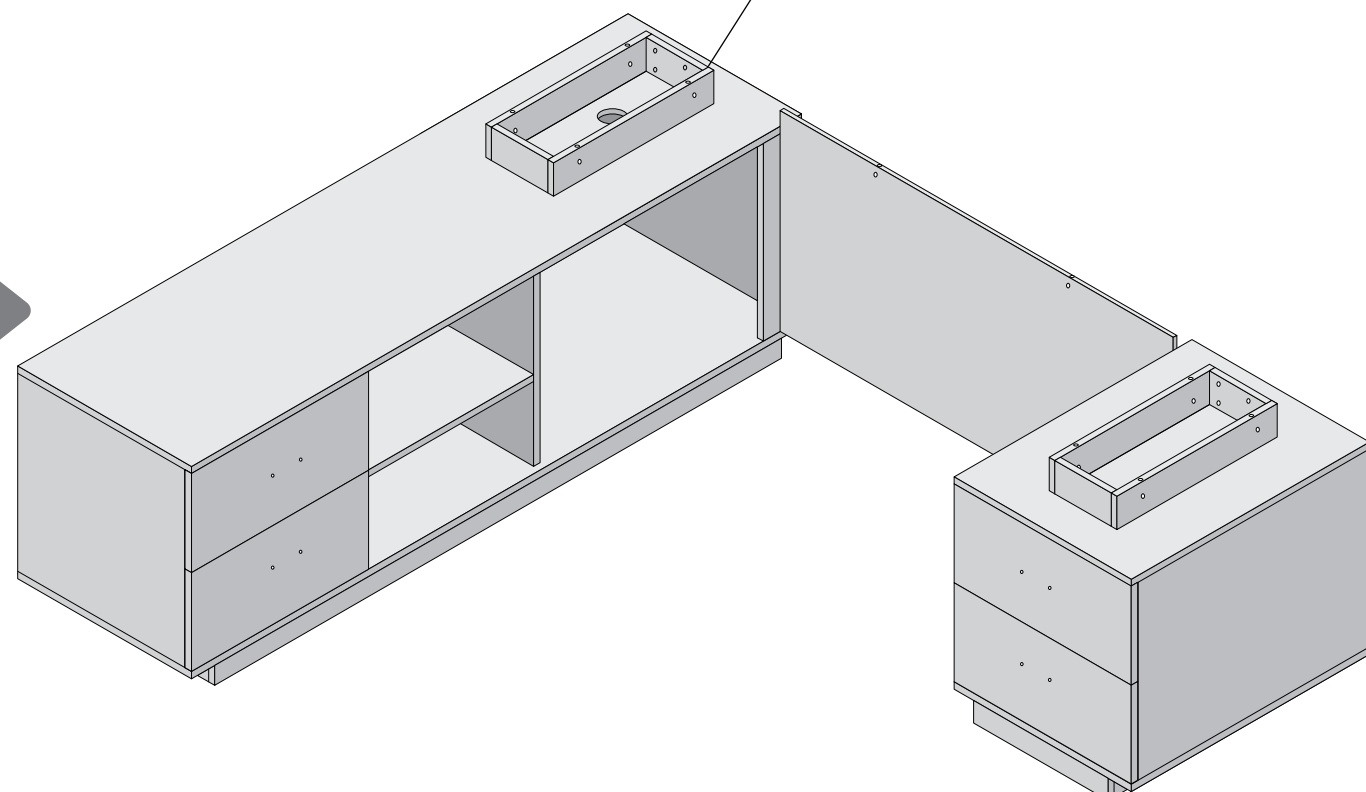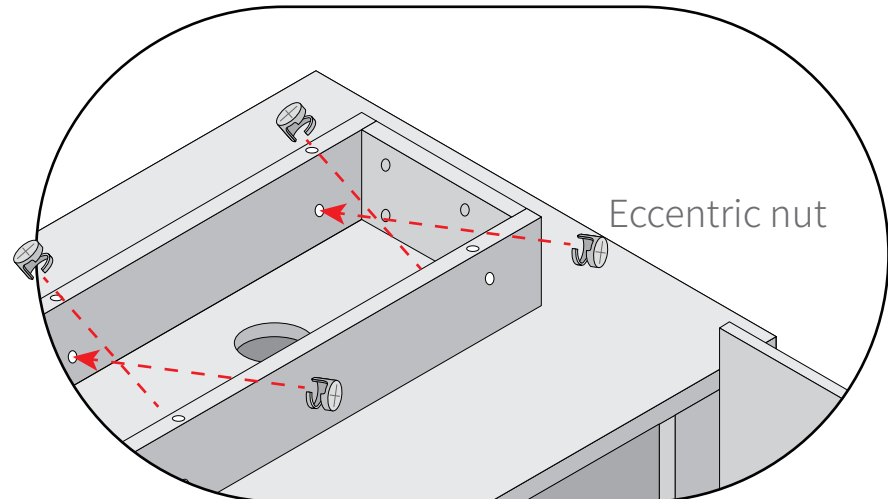


STEP 7

Install 3-in-1 screws on the bottom of the two tables tops,
Install two double-ended connectors on the bottom edge of Table board #2
Place the two tables on the support frame and align the holes

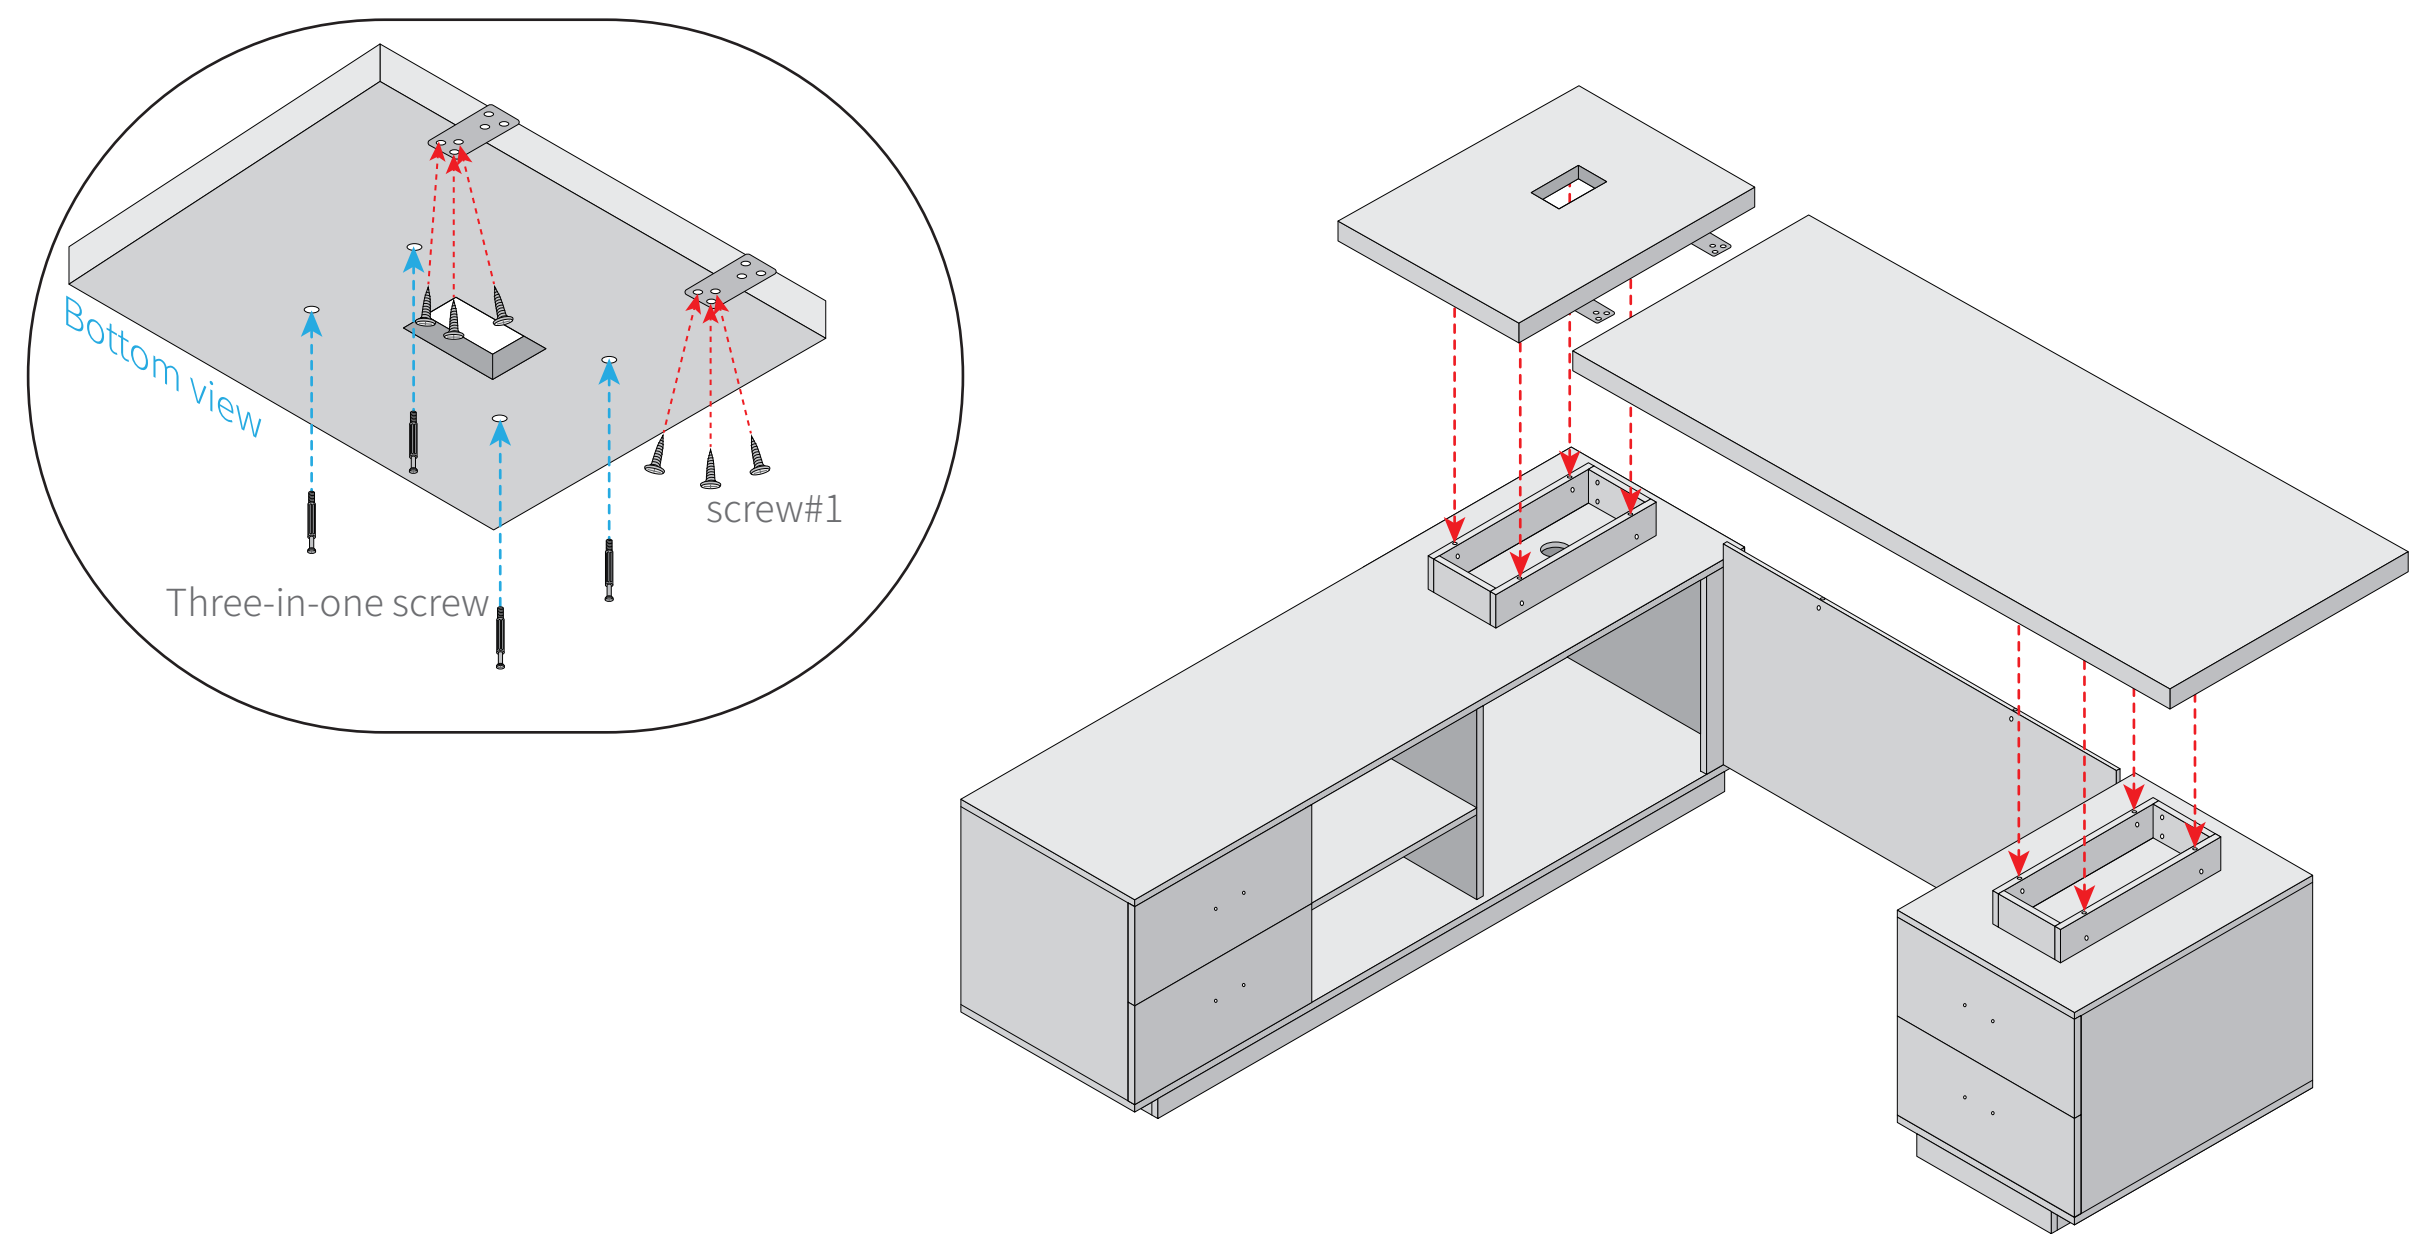


STEP 8

Use eccentric nuts on the left and right sides of the support frame.
Screws are used to secure the double-ended connector at the joint of the two tables

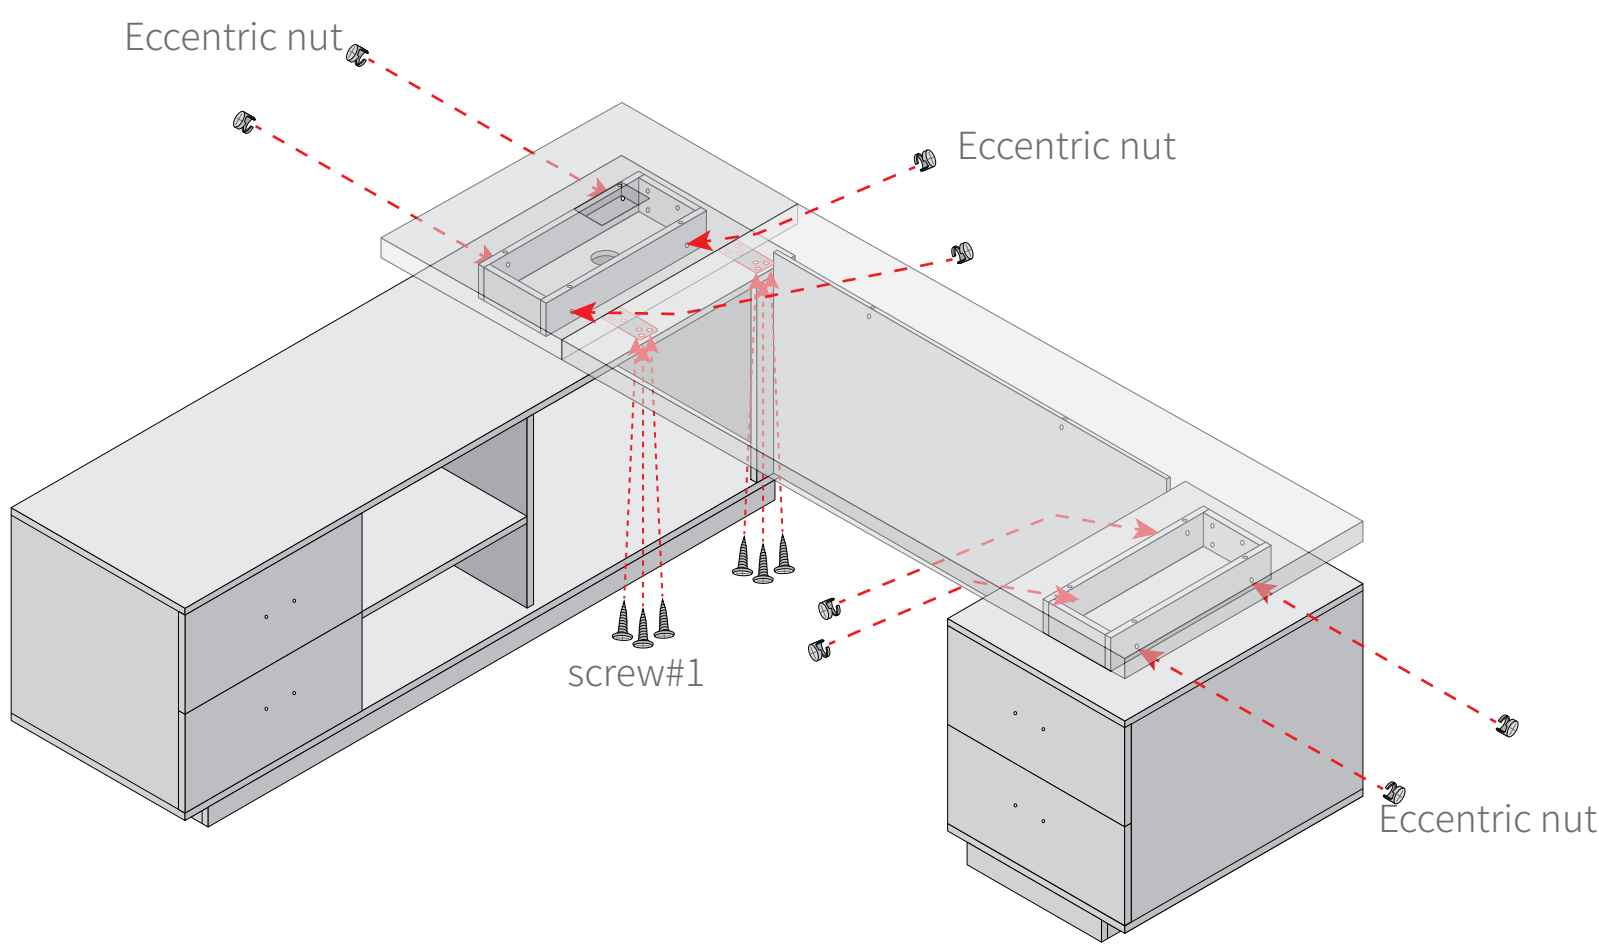


STEP 9

Install computer vents and desktop cable holes

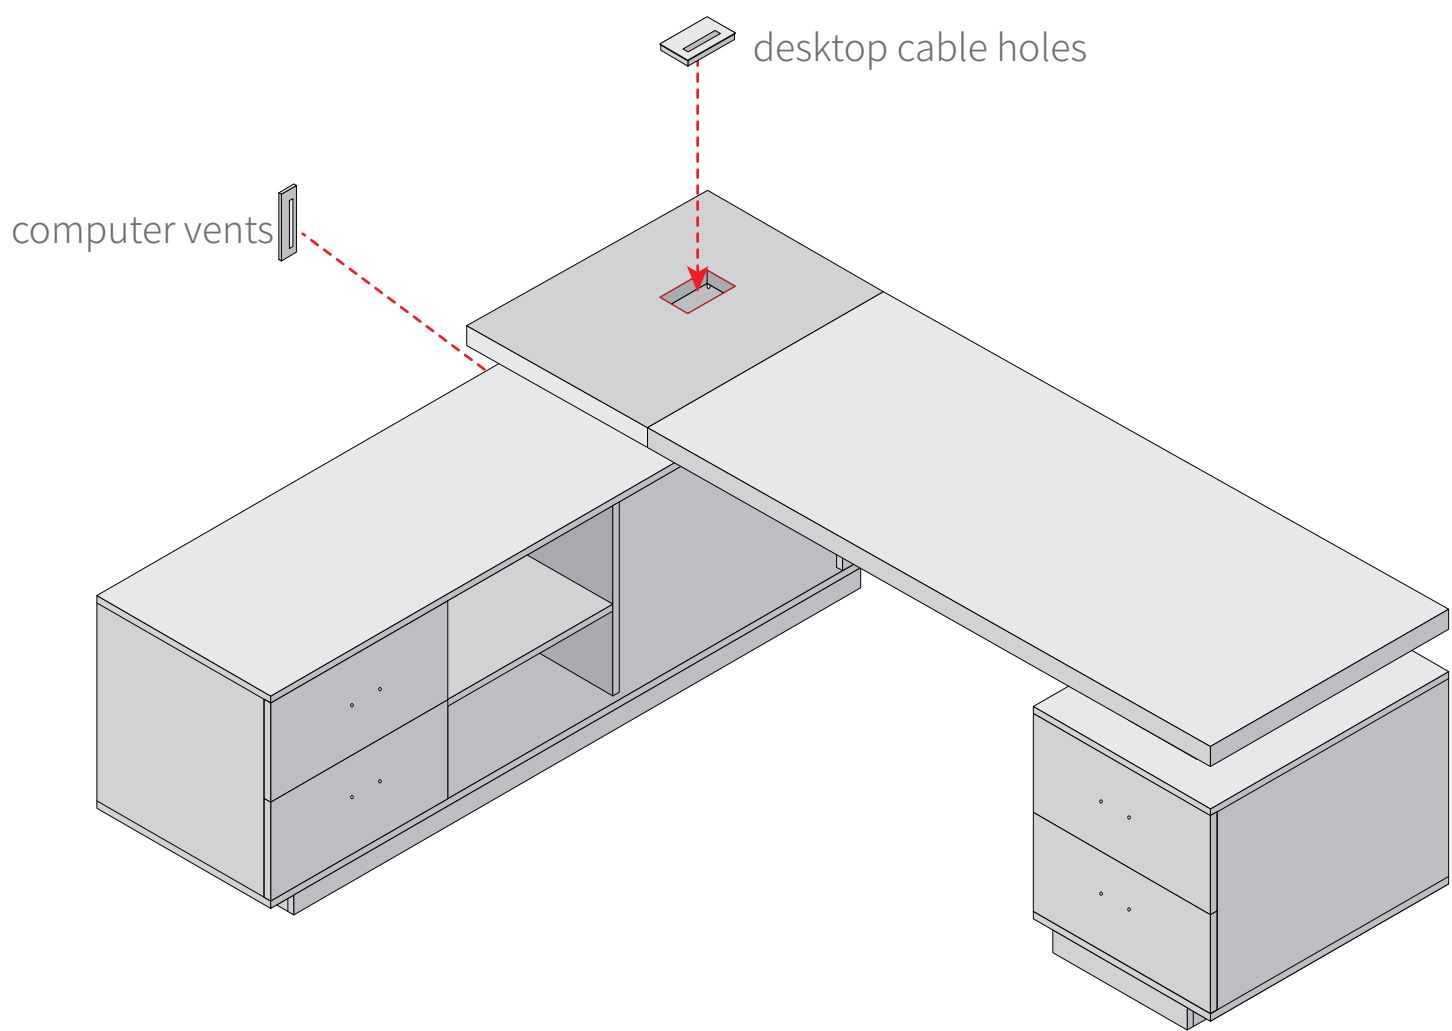

STEP 10

Install the handle with screw #2 from the inside of the front panel of the drawer

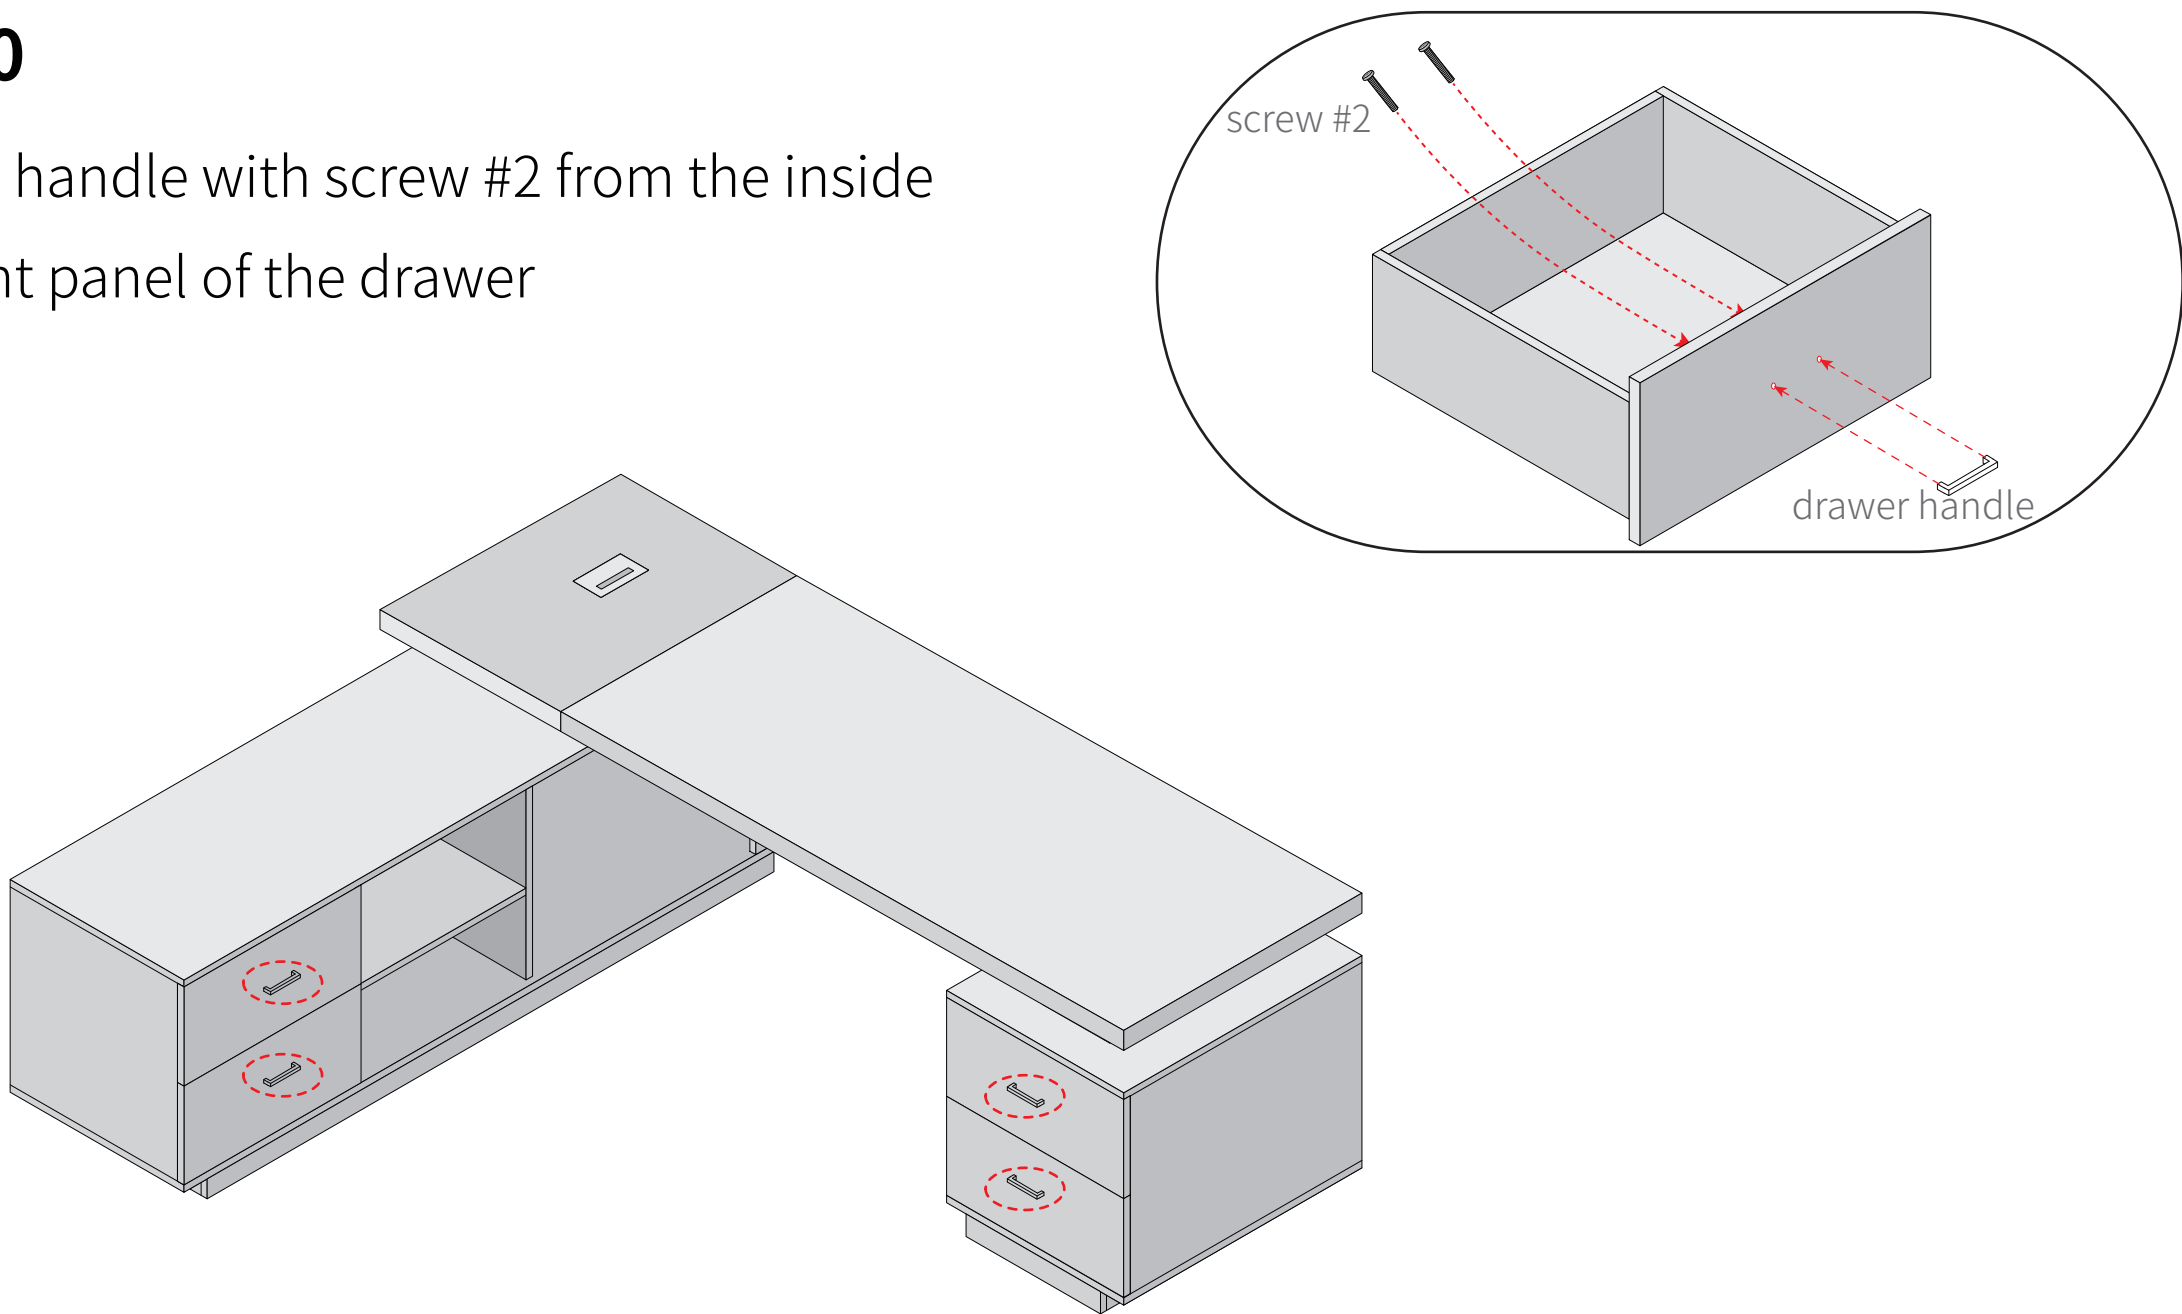

INSTALLATION COMPLETED

