


DOMICON

Bar Cabinet Assembly Instructions

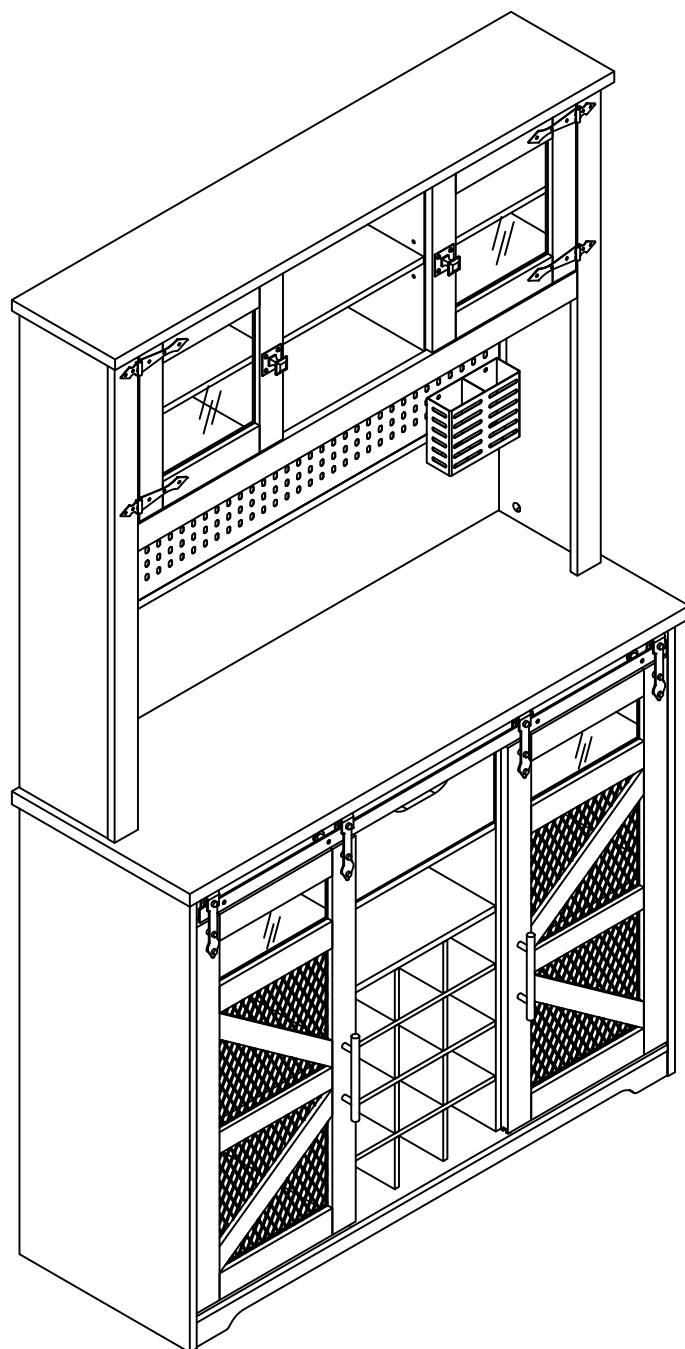

Please read this manual carefully before any operation
and keep it properly for future use.

Contents


Panel List.....	2
Hardware List.....	3
Installation Steps.....	5
Warranty Information.....	32

 Email Address



















domiconcsc@gmail.com

domiconservices@gmail.com






Panel List

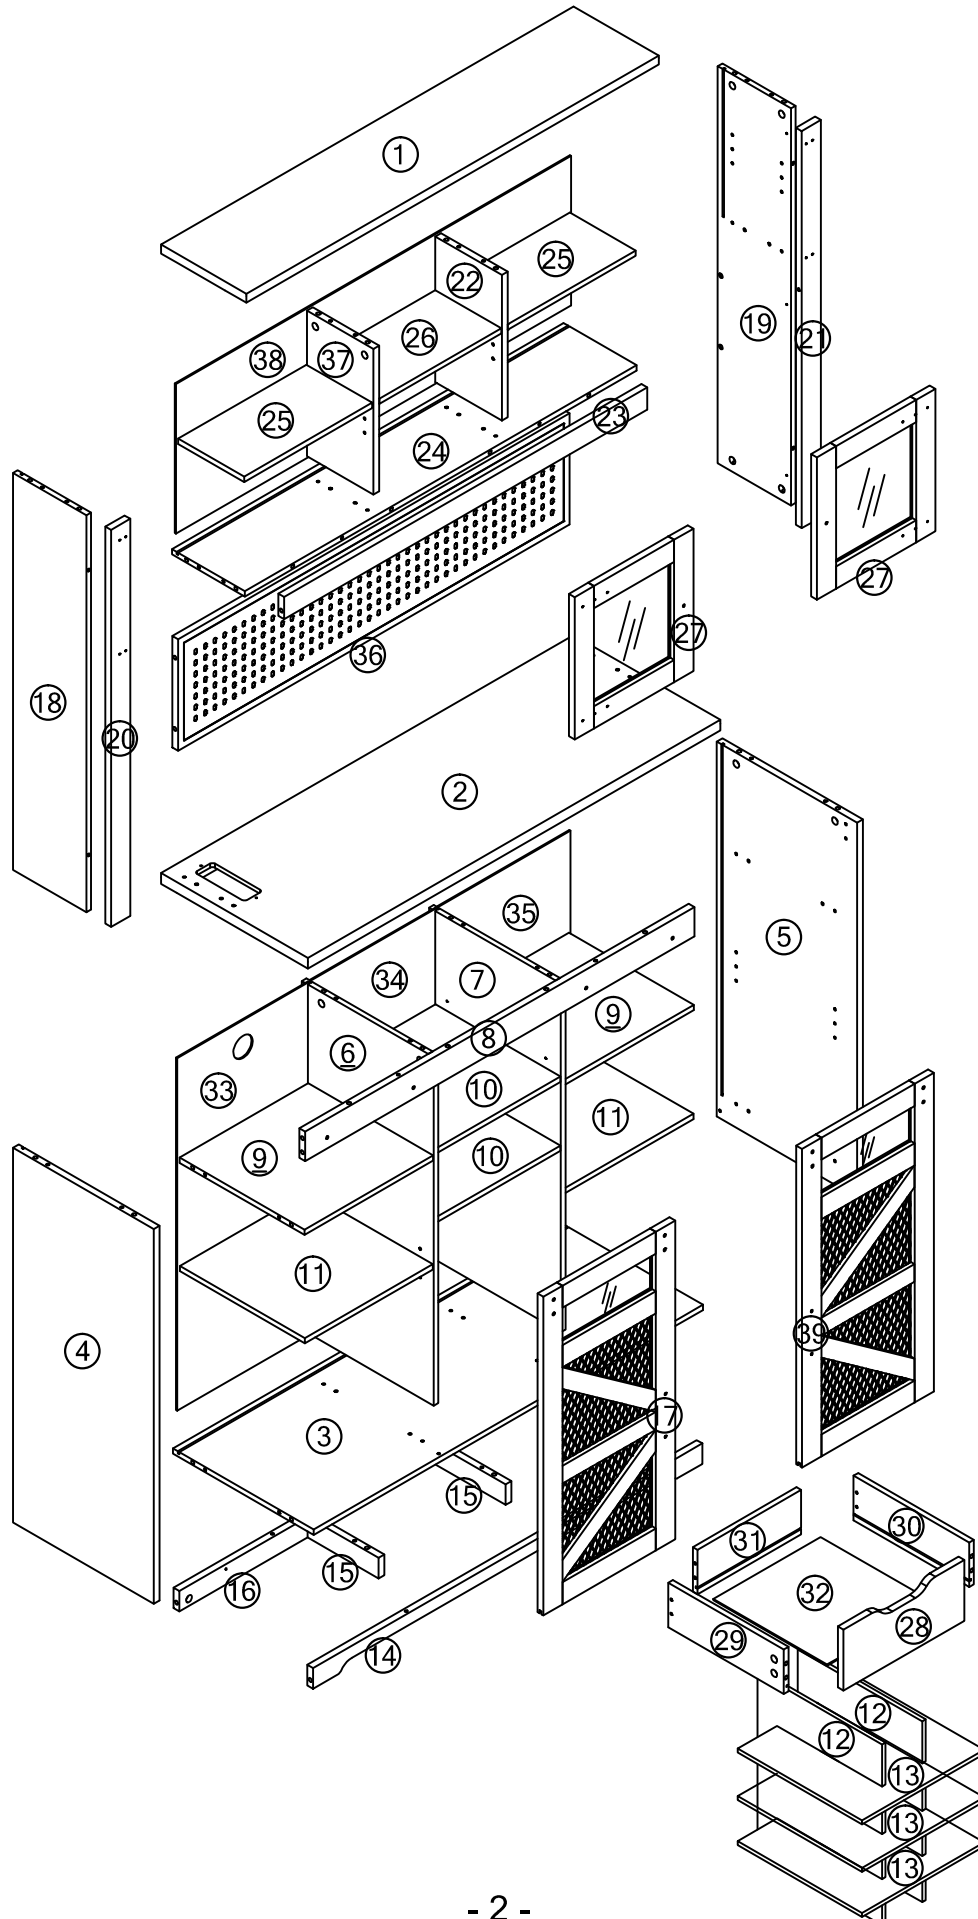

Hardware List

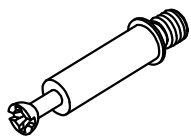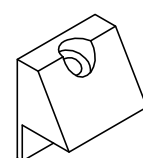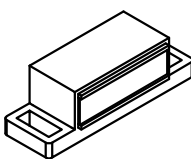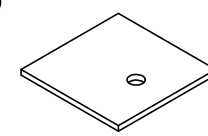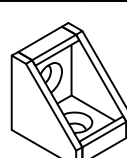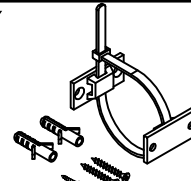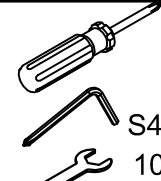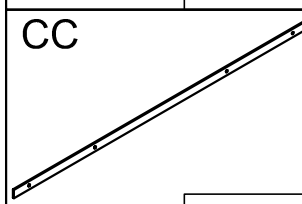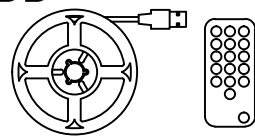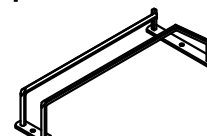A  Ø5.8*32mm 66+2PCS	B  Ø15 x 9mm 66+2PCS	C  Ø21mm 26+2PCS	D  Ø6 x 30mm 68+2PCS
E  Ø3 x 12mm 48+2PCS	F  Ø6.3X50mm 14+1PCS	G  Ø3x16mm 28+2PCS	H  15x15x10mm 24+2PCS
I  45x15x12mm 2PCS	J  Ø5mm 20+2PCS	K  Ø5x17mm 2PCS	L  155x30mm 2PCS
M  40x40x25mm 2PCS	N  5/32"x20mm 6+1PCS	O  30x22x1mm 2PCS	P  20x20x18mm 14+1PCS
Q  M6x12mm 2PCS	R  Ø4x12mm 20+2PCS	S  M6mm 6+1PCS	T  48x14x3mm 6+1PCS
U  Ø3x12mm 7+1PCS	V  24x7x5mm 7+1PCS	W  M6x45mm 4PCS	X  M6x25mm 12+1PCS
Y  2 SETS	Z  S4 10mm 1SET	AA  120x24mm 4PCS	BB  M6x21mm 4PCS
CC  1000x25mm 1PC	DD  1 SET	EE  1PC	FF  2PCS





Hardware List

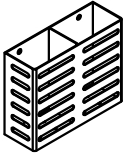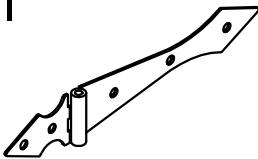GG  1 PC	HH  70x15x46mm2PCS	II  143x24mm4PCS	CL  L300mm1PC
CR  L300mm1PC	DL  L300mm1PC	DR  L300mm1PC	

Step 1




Tip: Please pay attention to confirm the hole locations in this step.

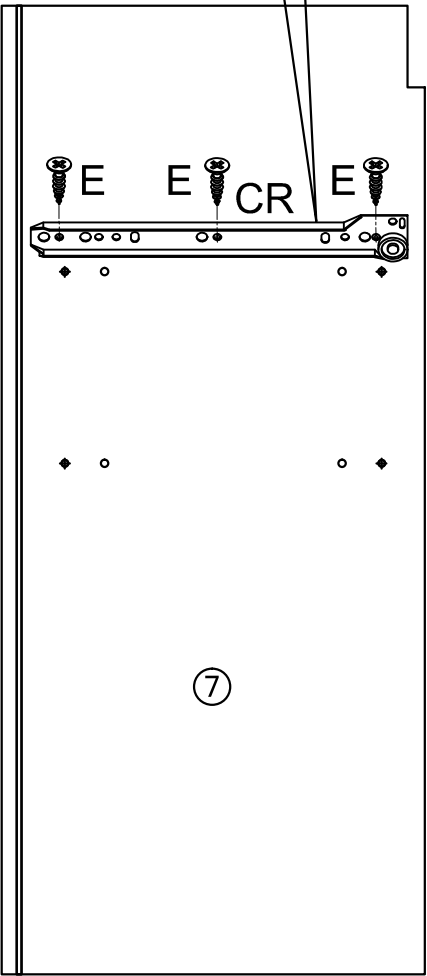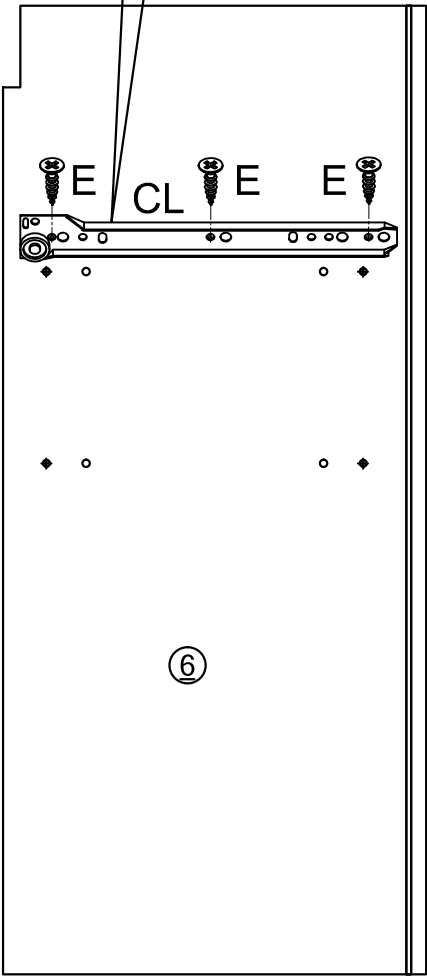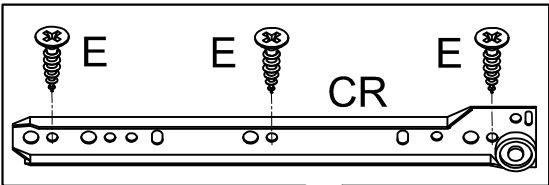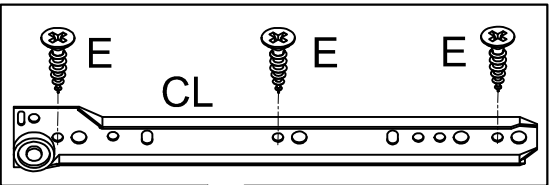



	E x 6PCS
	CL x 1PC
	CR x 1PC

Step 2

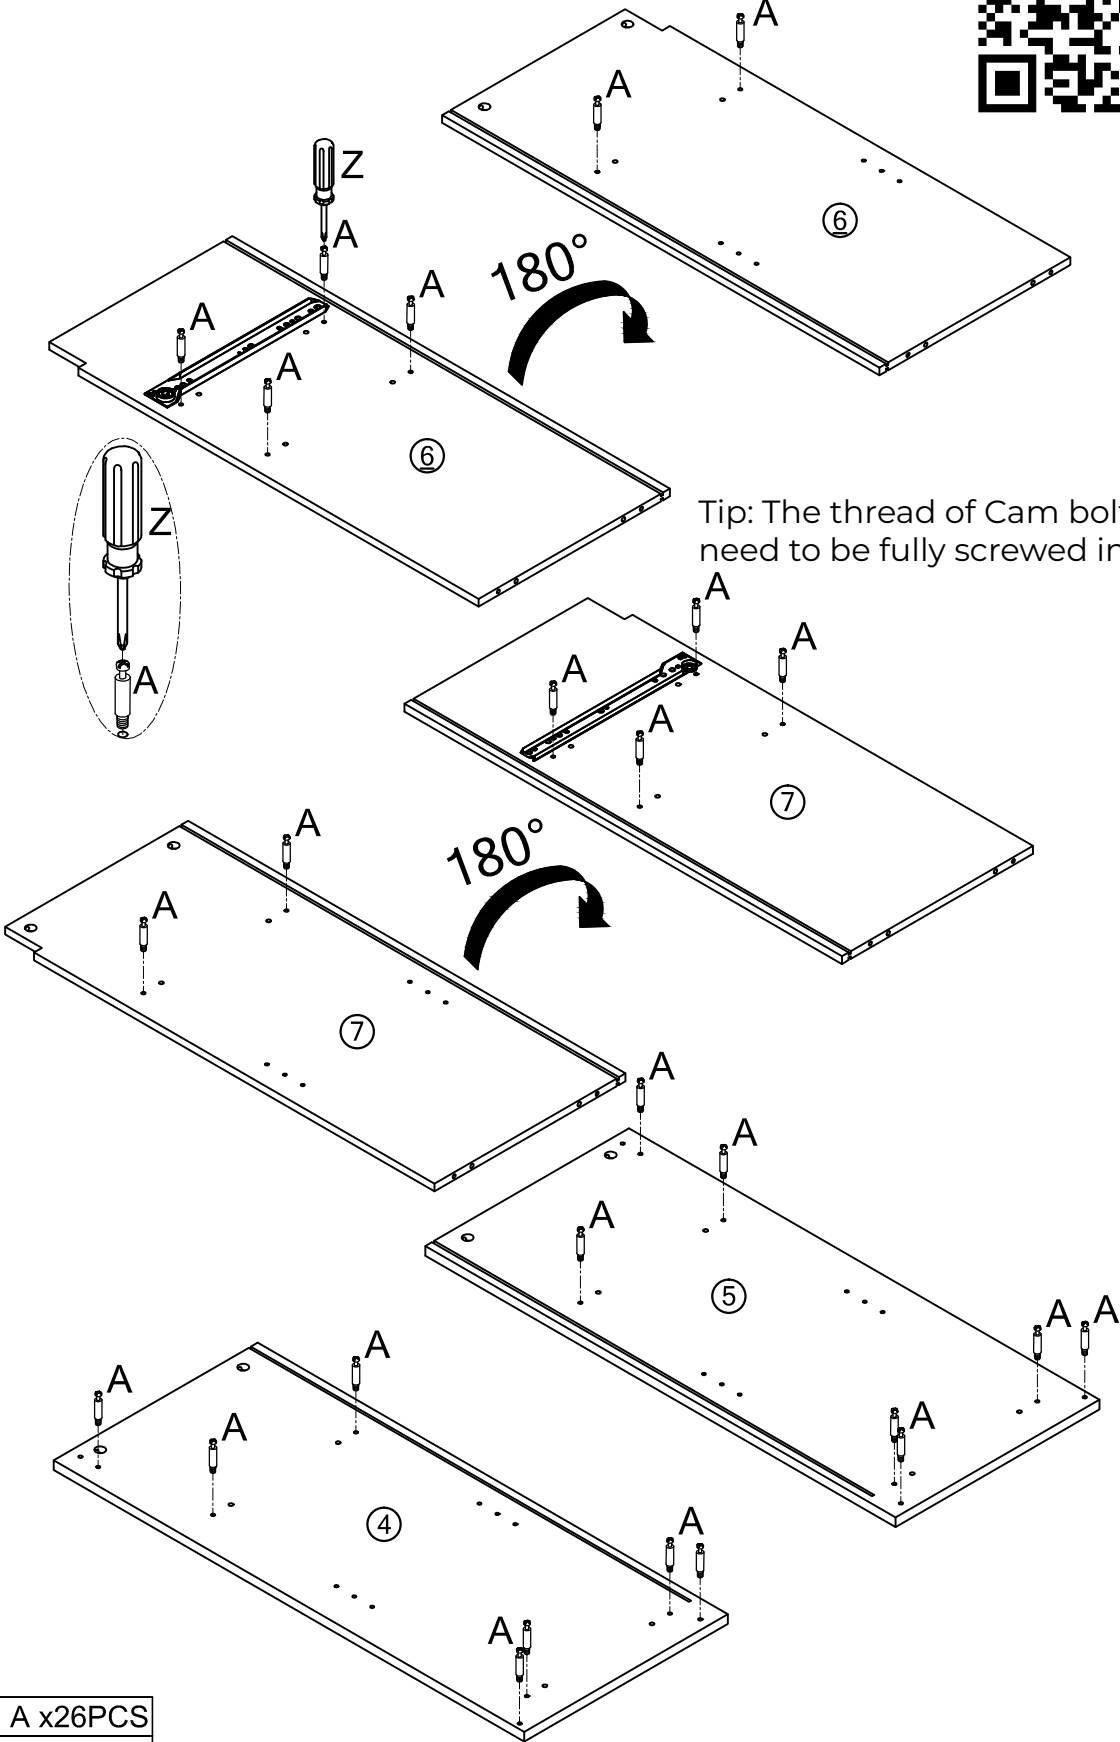


	A x26PCS
	Z x 1 PC

Step 3

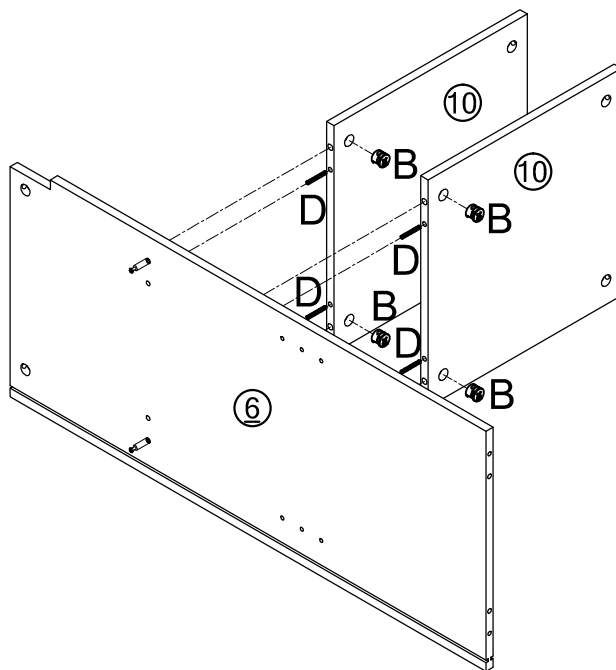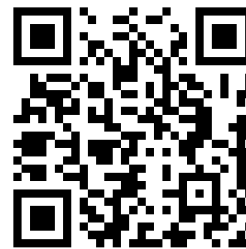


Tips: The opening of the Cam lock (#B) is aligned with the direction of the Cam bolt (#A) and then rotate and tighten.

	B x 4PCS
	D x 4PCS

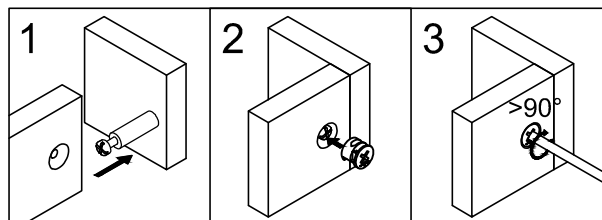


Step 4

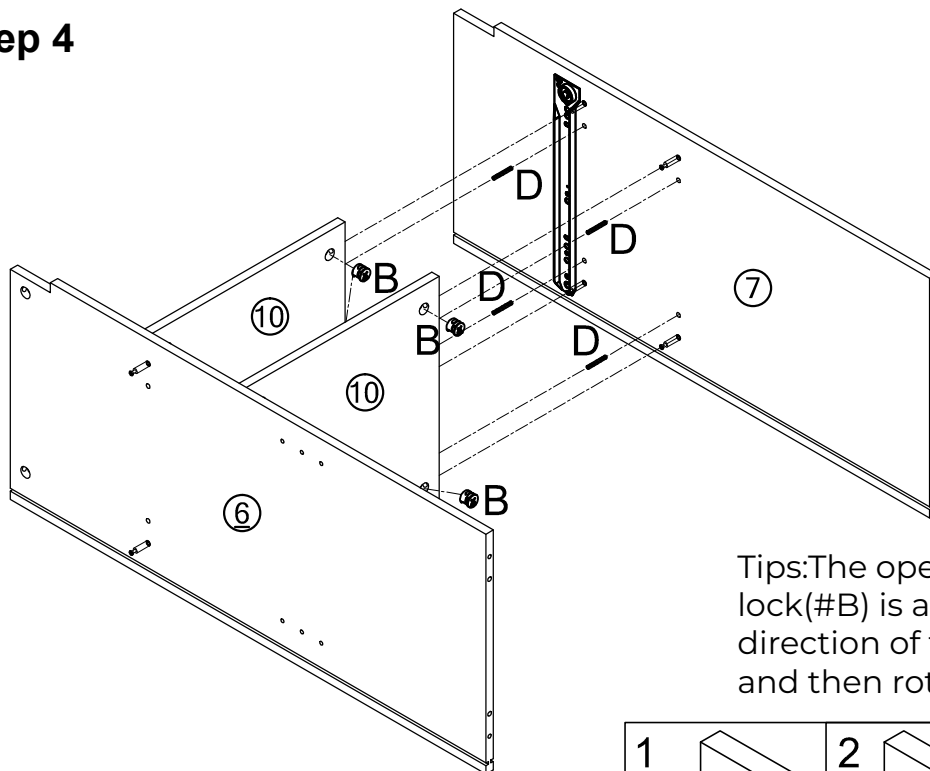



Tips: The opening of the Cam lock (#B) is aligned with the direction of the Cam bolt (#A) and then rotate and tighten.

	B x 4PCS
	D x 4PCS

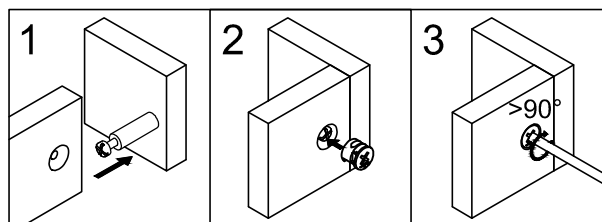

Step 5


An electric drill could assist with installation.

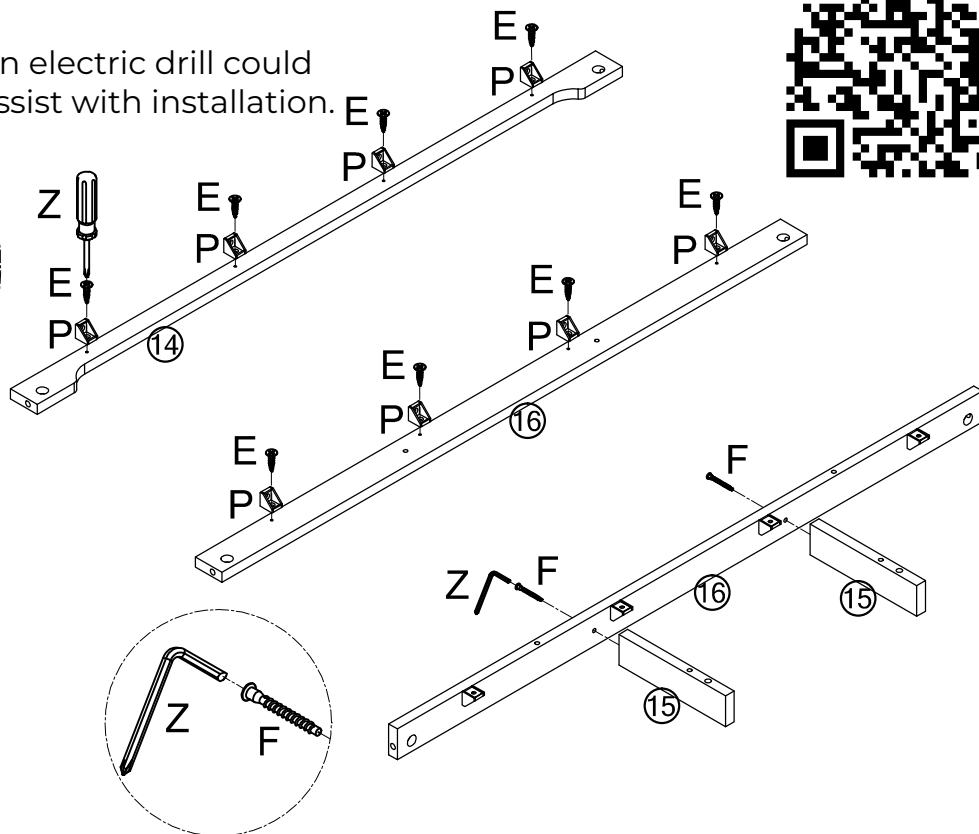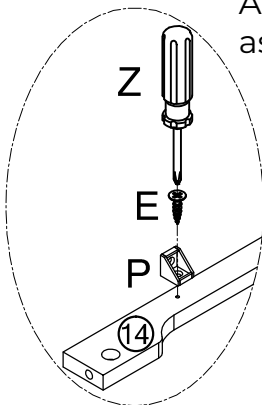

	E x 8PCS
	F x 2PCS
	P x 8PCS
	Z x 1PC


Step 6

The threads of Cam bolt (#A) need to be fully threaded into the panel.

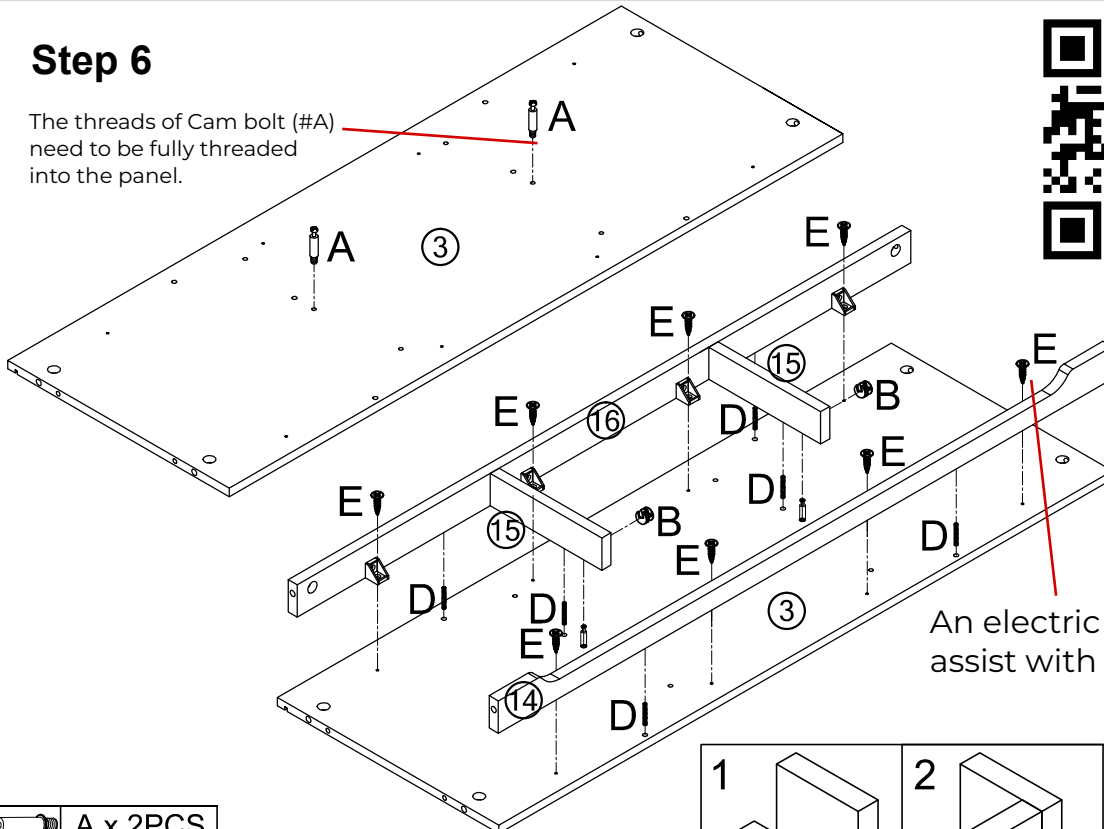


An electric drill could assist with installation.

	A x 2PCS
	B x 2PCS
	D x 6PCS
	E x 8PCS

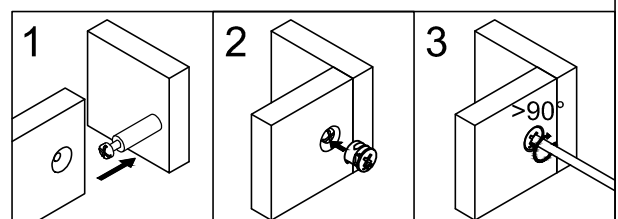


Step 7

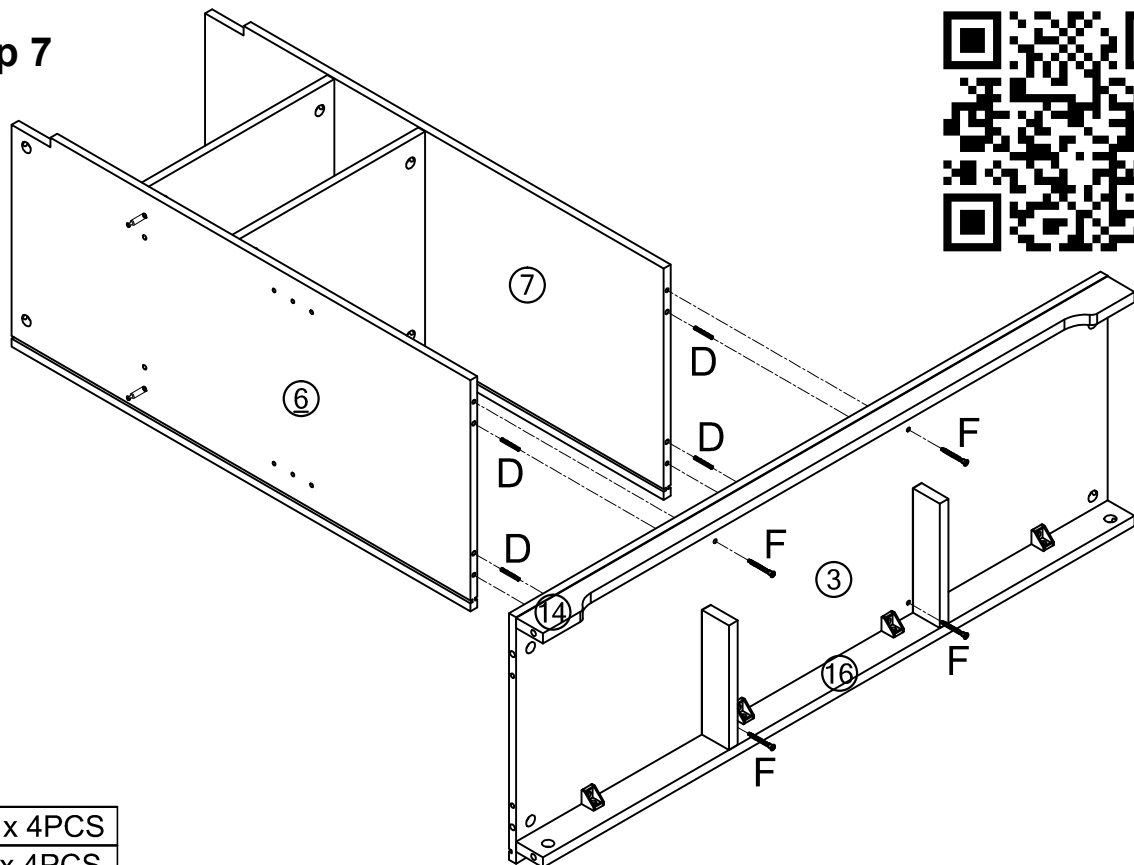


	D x 4PCS
	F x 4PCS


Step 8

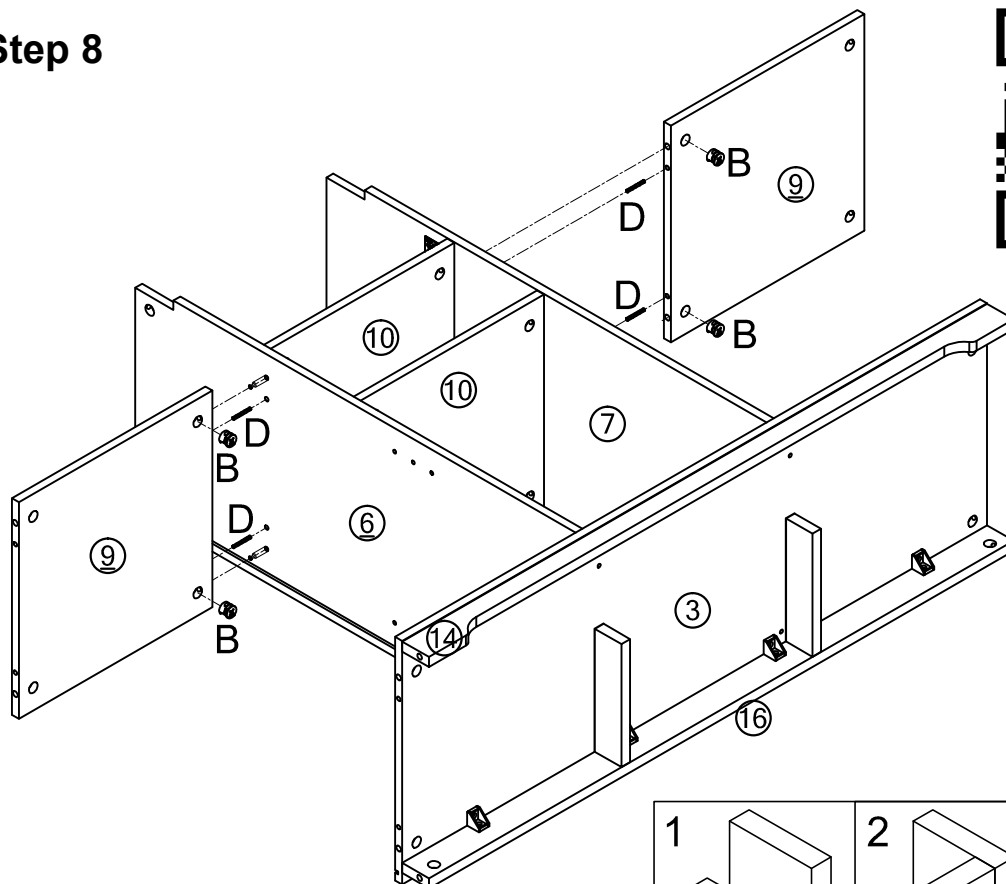


	B x 4PCS
	D x 4PCS

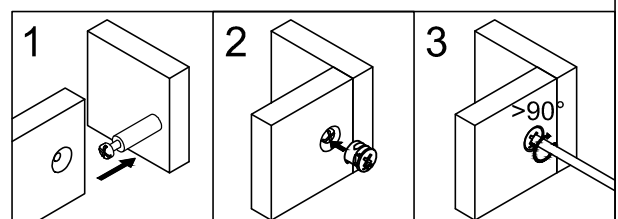


Step 9

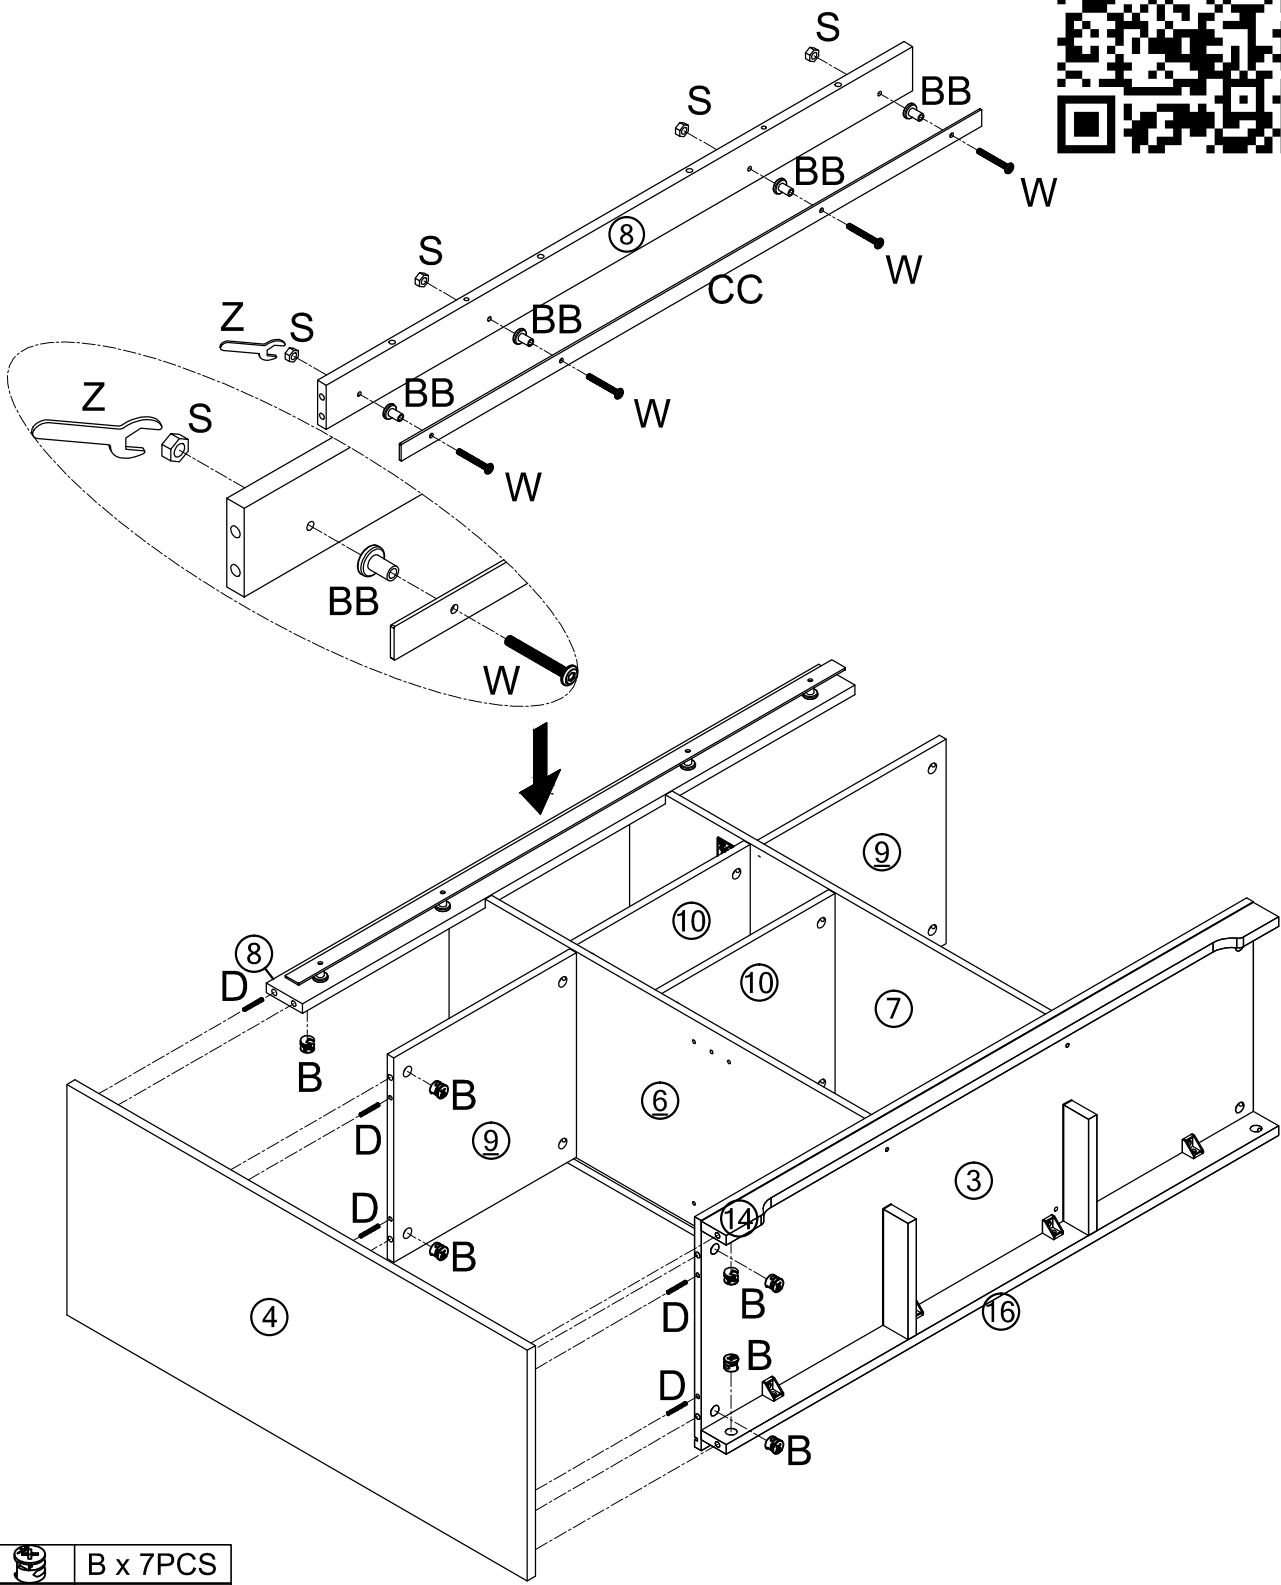


	B x 7PCS
	D x 5PCS
	S x 4PCS
	Wx 4PCS
	BBx4PCS
	CCx1PC
	Z x 1PC

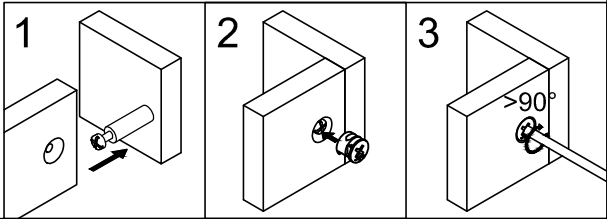


Step 10

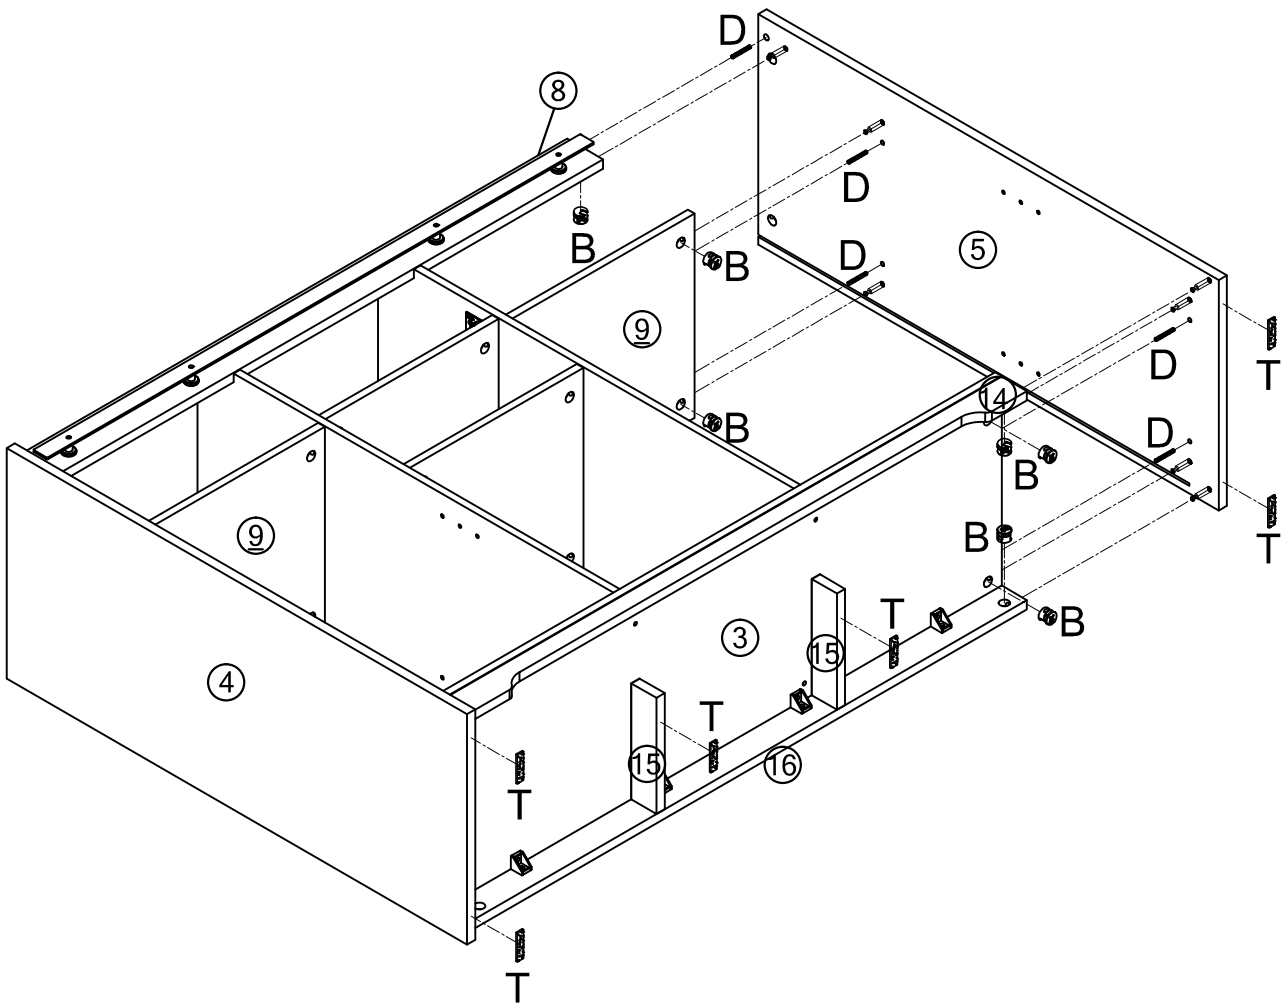


	B x 7PCS
	D x 5PCS
	T x 6PCS

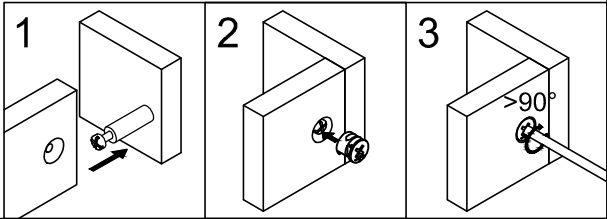

Step 11

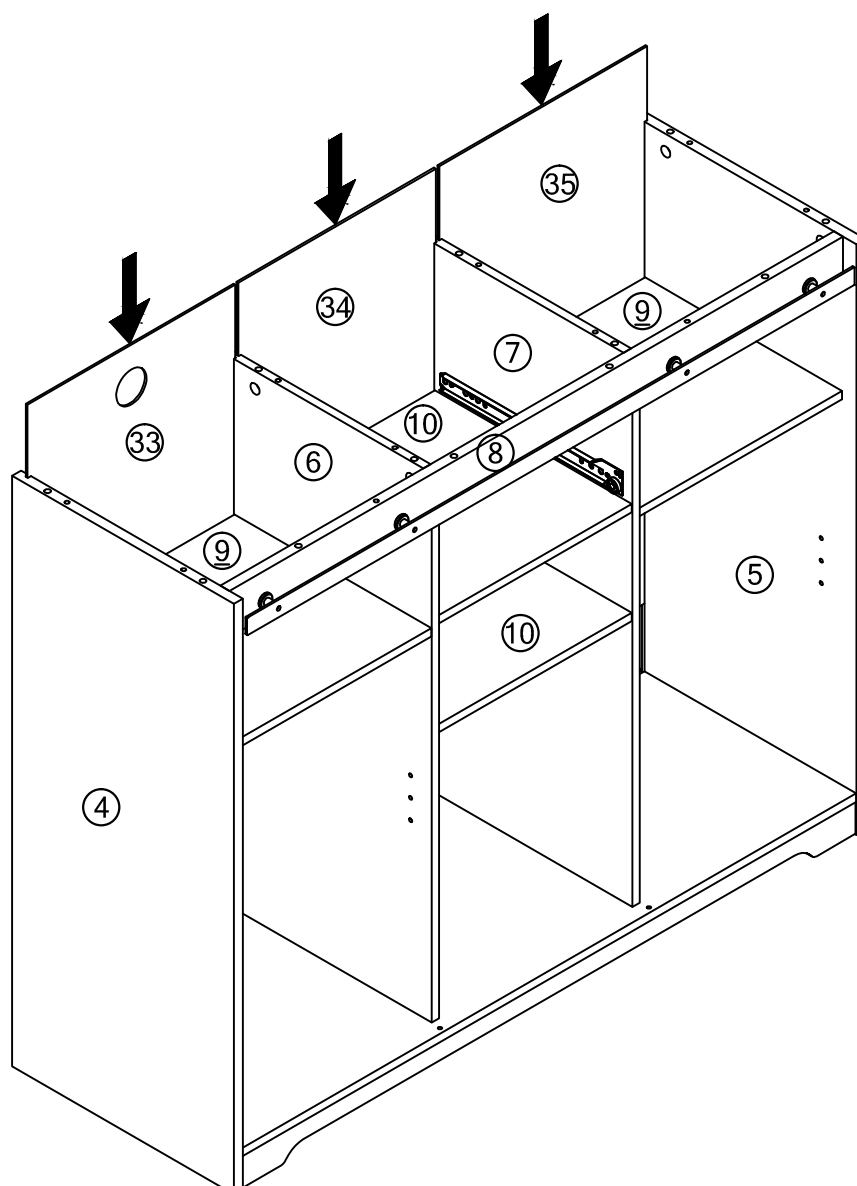

Step 12

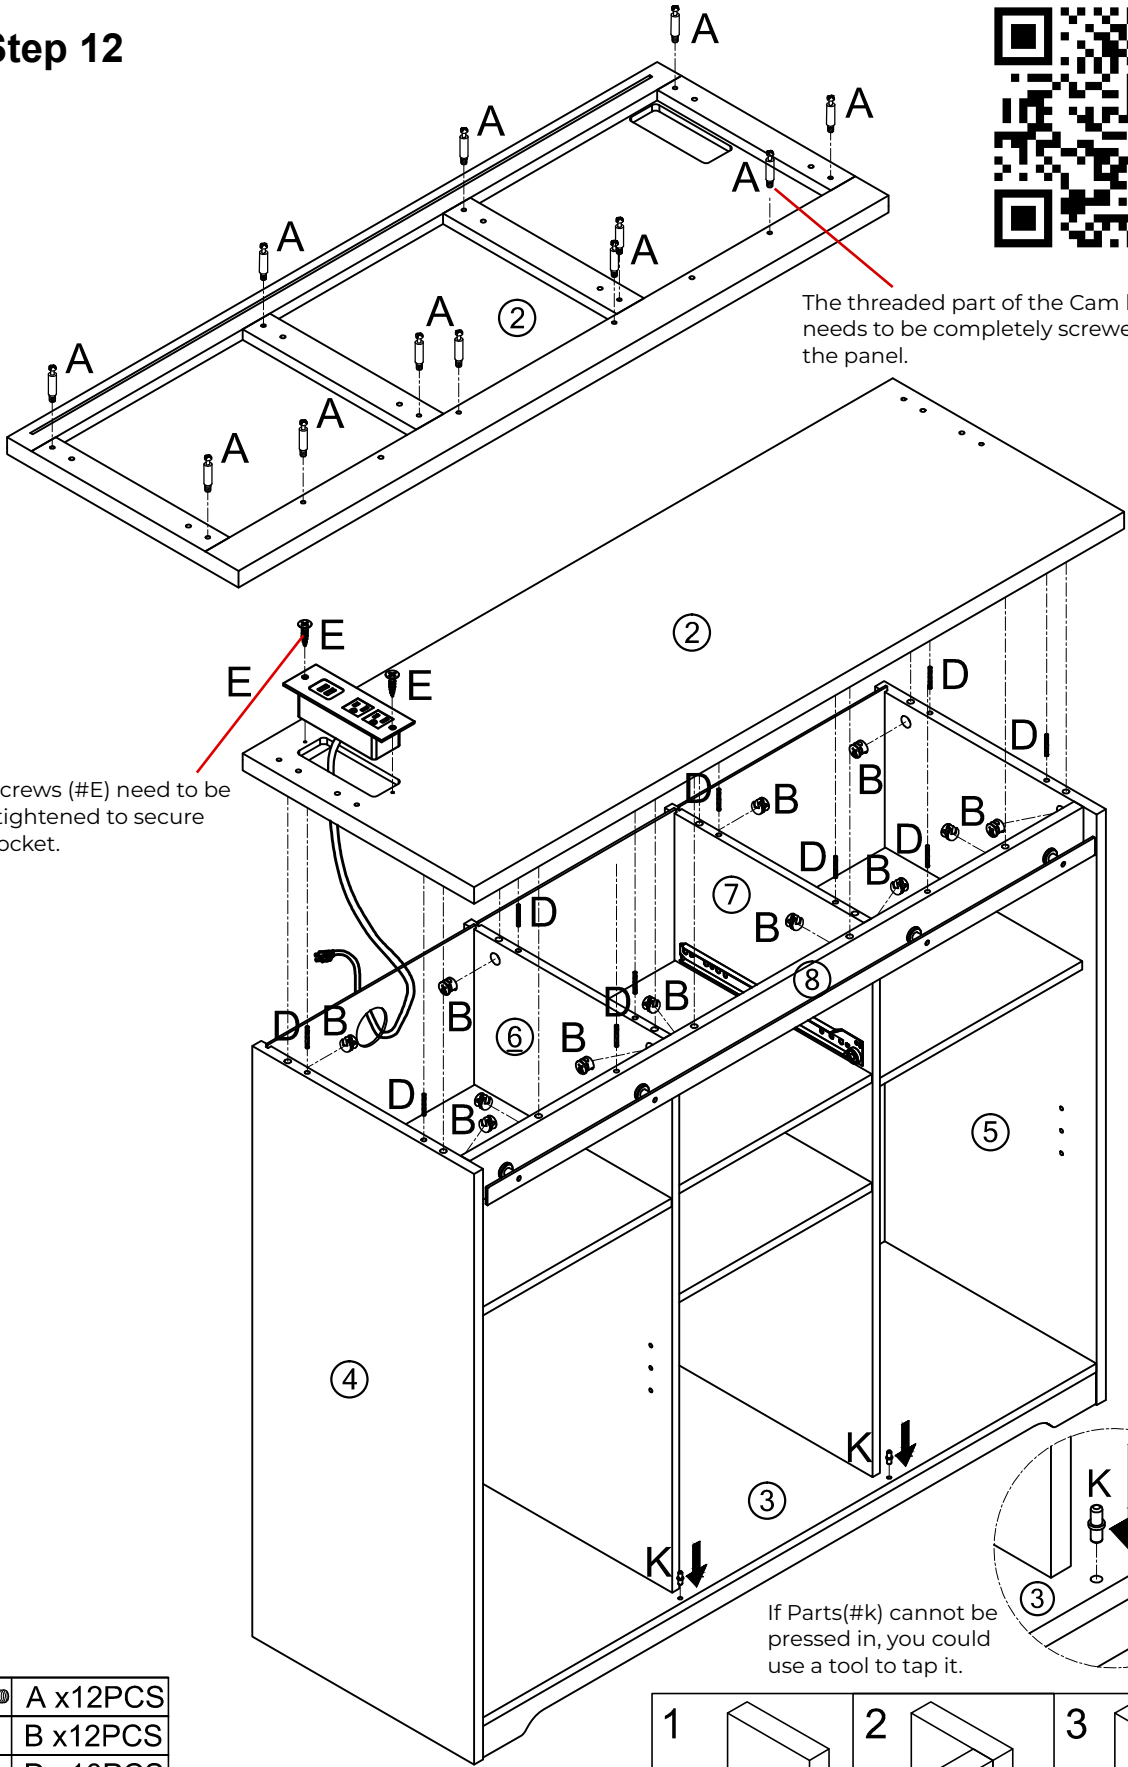


The threaded part of the Cam bolt (#A) needs to be completely screwed into the panel.


The screws (#E) need to be fully tightened to secure the socket.

If Parts(#k) cannot be pressed in, you could use a tool to tap it.

	A x12PCS
	B x12PCS
	D x10PCS
	E x 2PCS
	K x 2PCS
	EE x1 PC

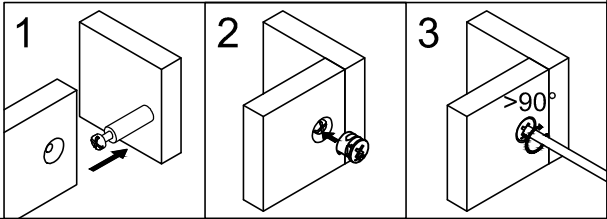

Step 13

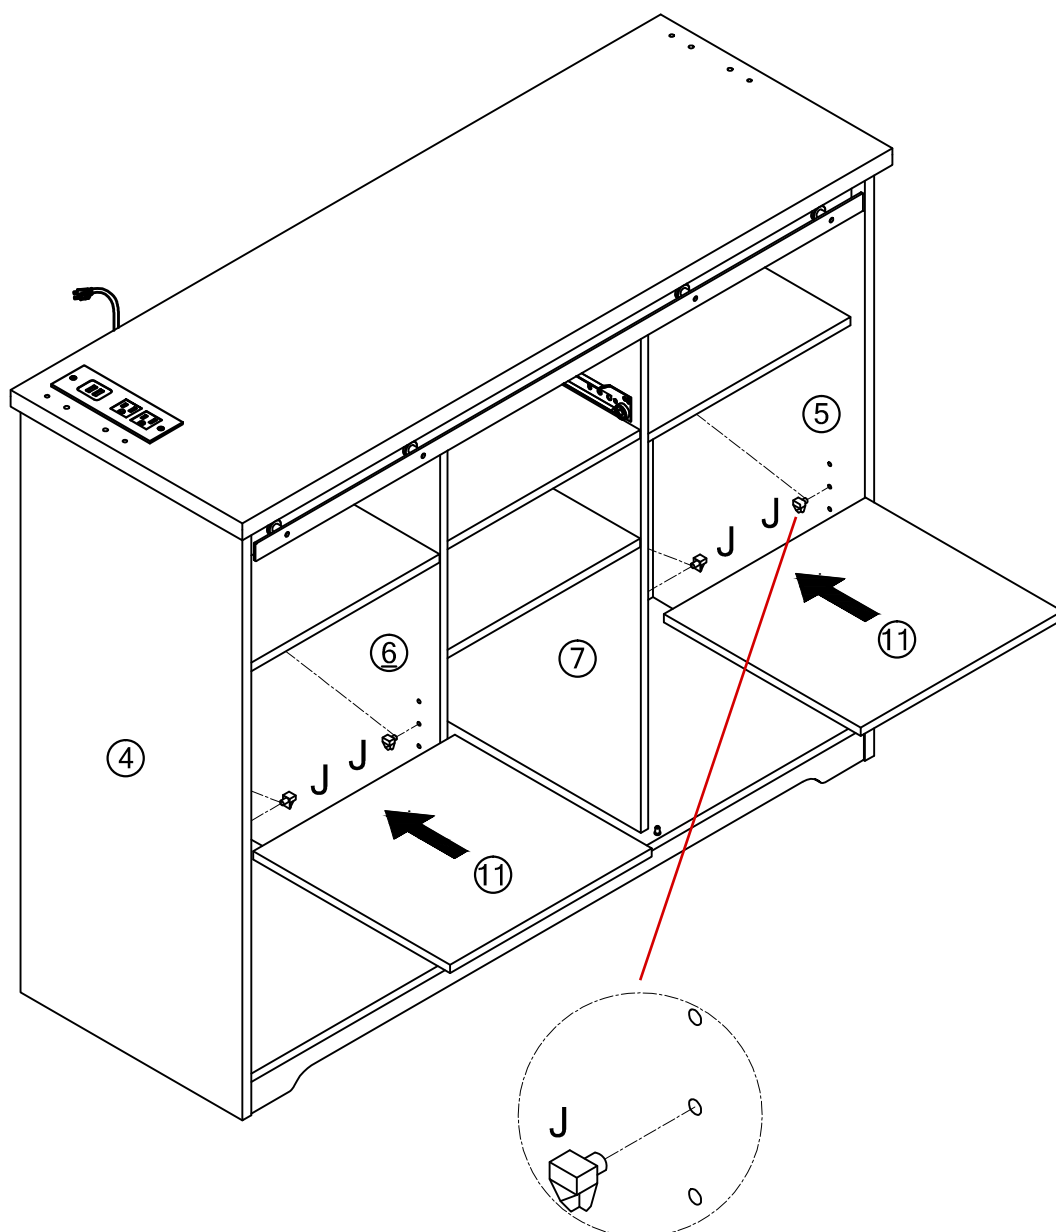


If Parts(#J) cannot be pressed in, you could use a tool to tap it.






J x 8 PCS

Step 14

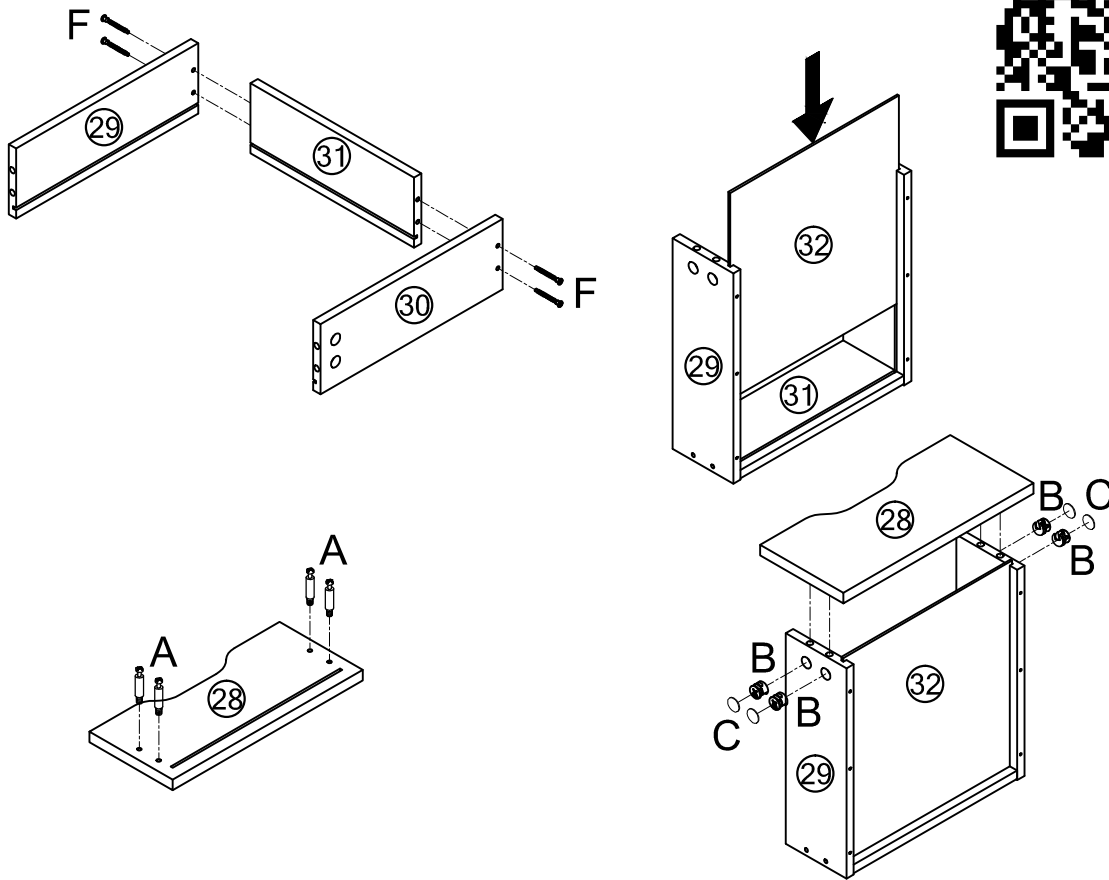


Part(#DR) needs to be placed on the edge of panel (#30), and then screwed in.




Part(#DL) needs to be placed on the edge of panel (#29), and then screwed in.

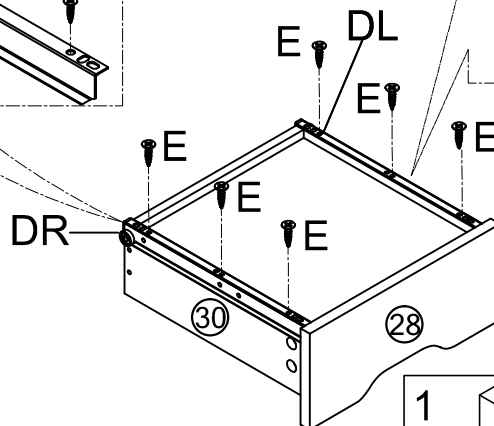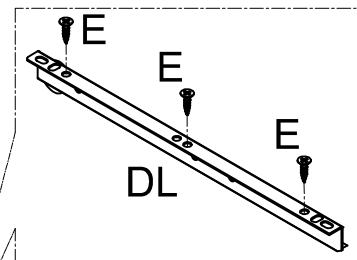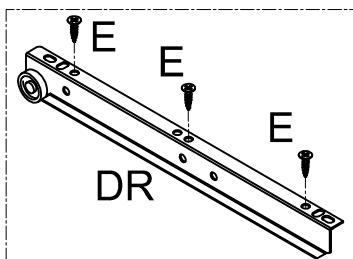


	A x 4PCS
	B x 4PCS
	C x 4PCS
	E x 6PCS
	F x 4PCS
	DLx1PC
	DRx1PC

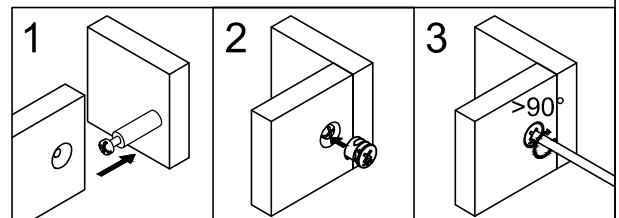


Step 15

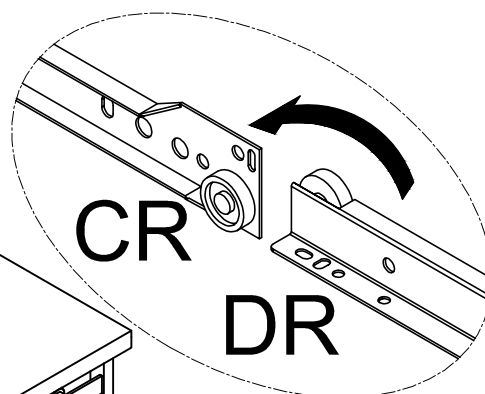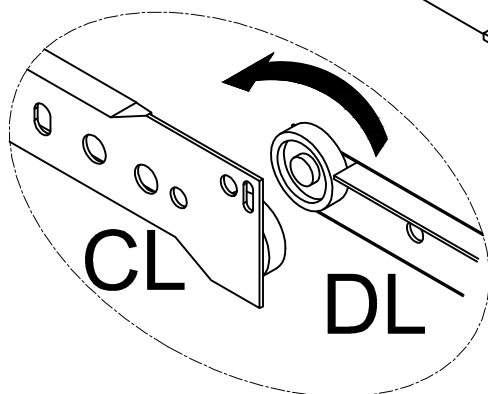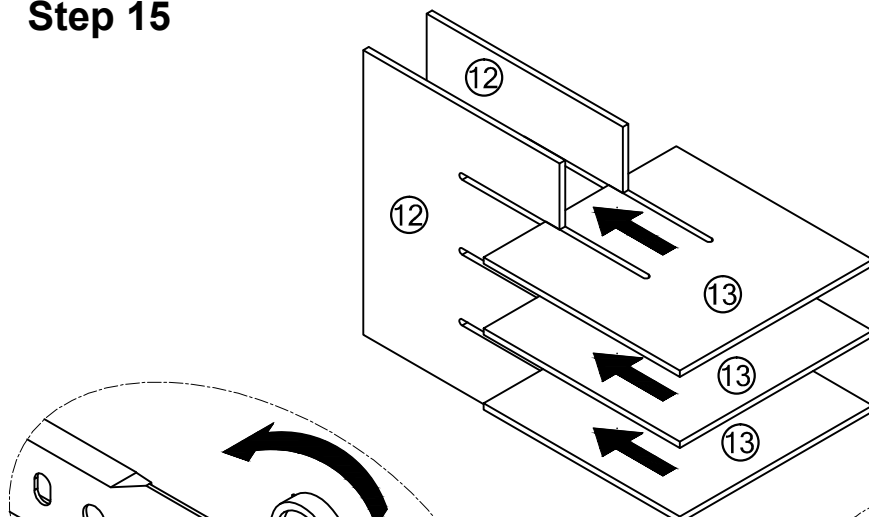

Place the parts (#DL & #DR)
inside the parts (#CL & #CR)
to complete the sliding
installation

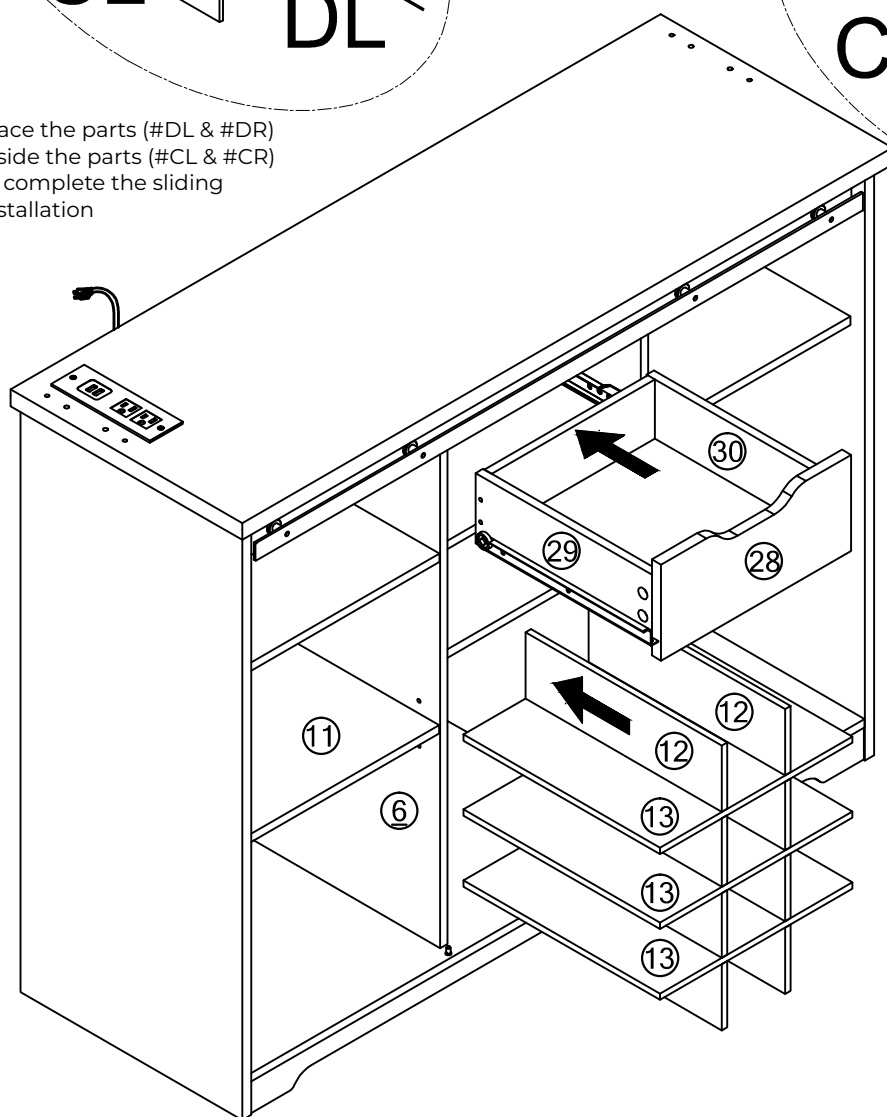

Step 16

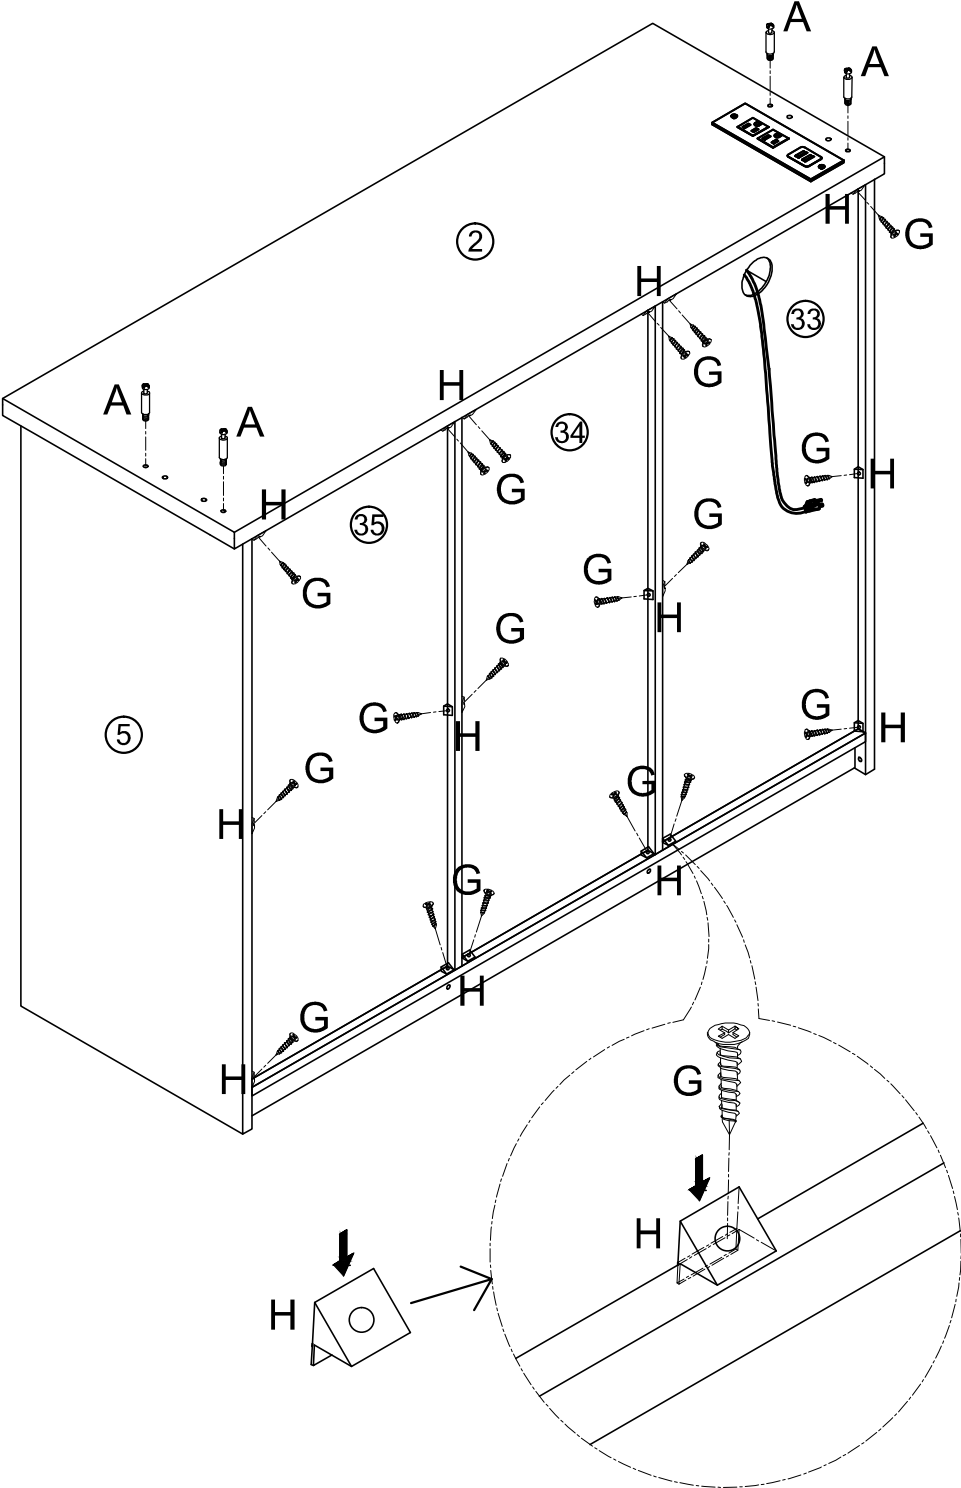

It is recommended to use an electric drill to assist installation


	A x 4PCS
	Gx18PCS
	Hx18PCS

Step 17



Remove the cover film after assembly.


Remove the cover film after assembly.

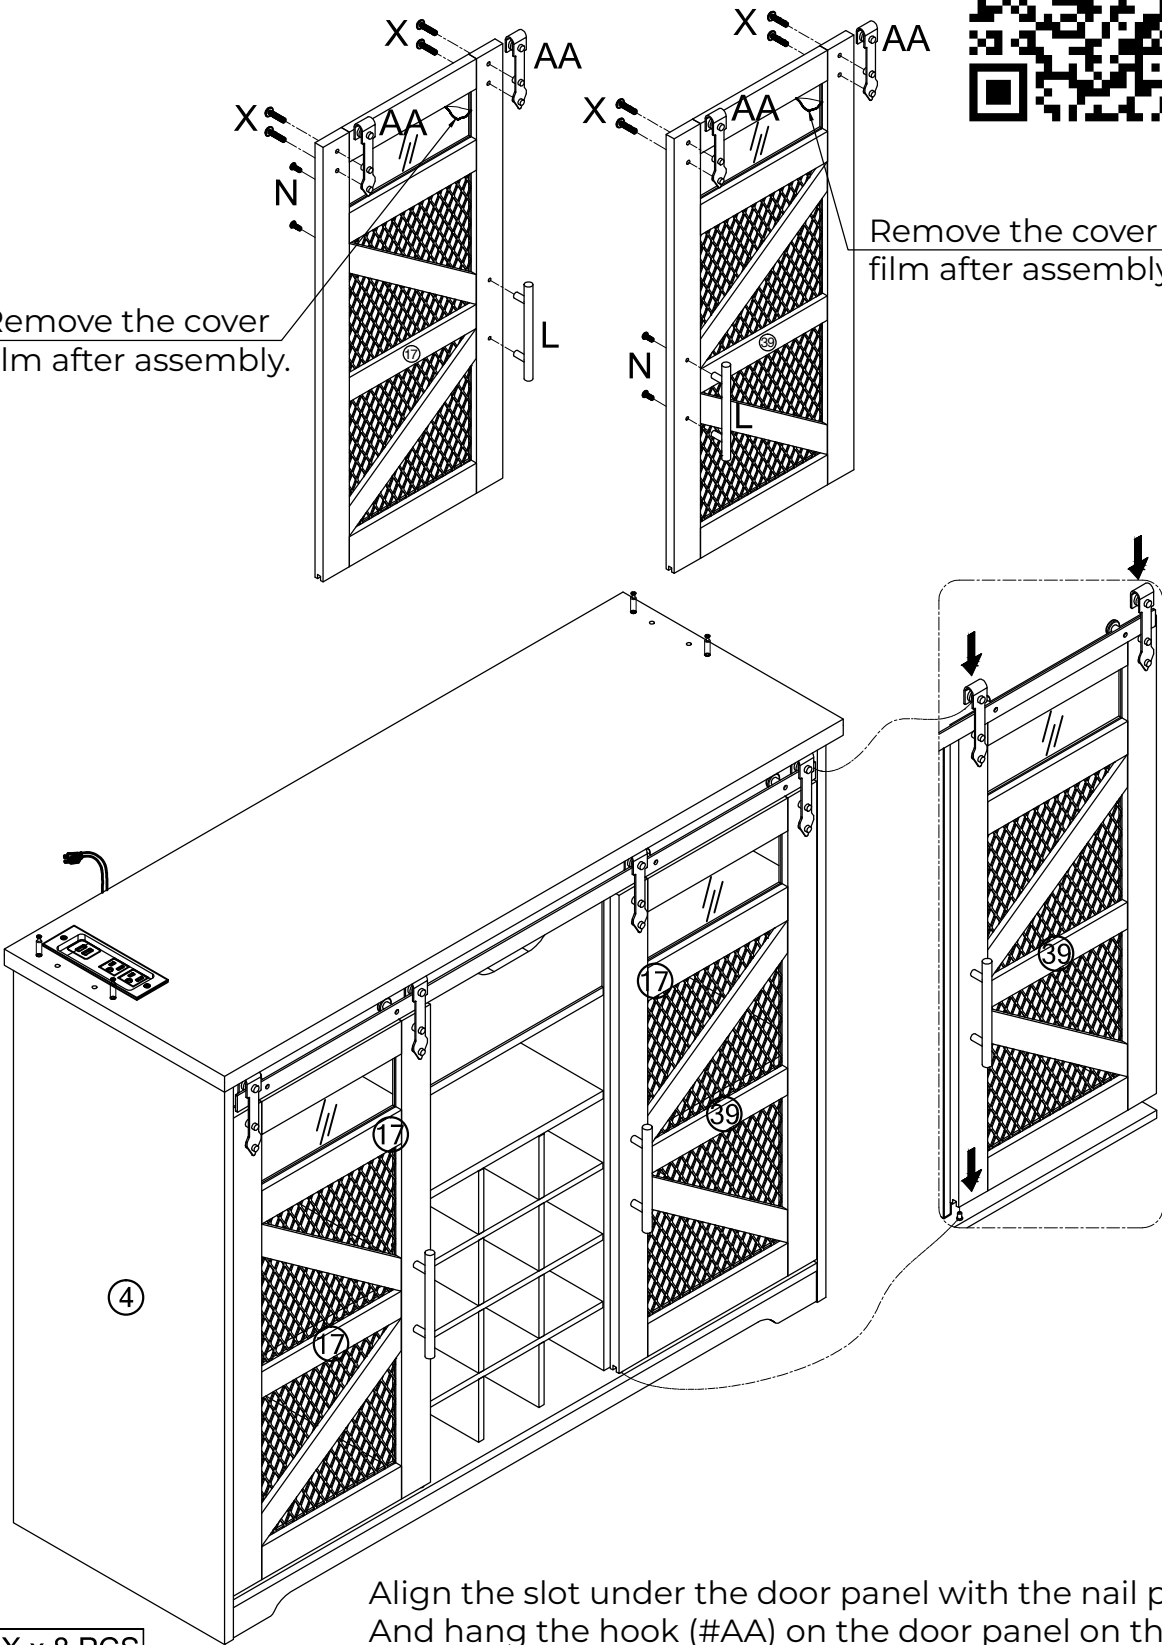


Align the slot under the door panel with the nail pin. And hang the hook (#AA) on the door panel on the metal strip (#CC).

	X x 8 PCS
	L x 2 PCS
	N x 4 PCS
	AAx4 PCS

Step 18

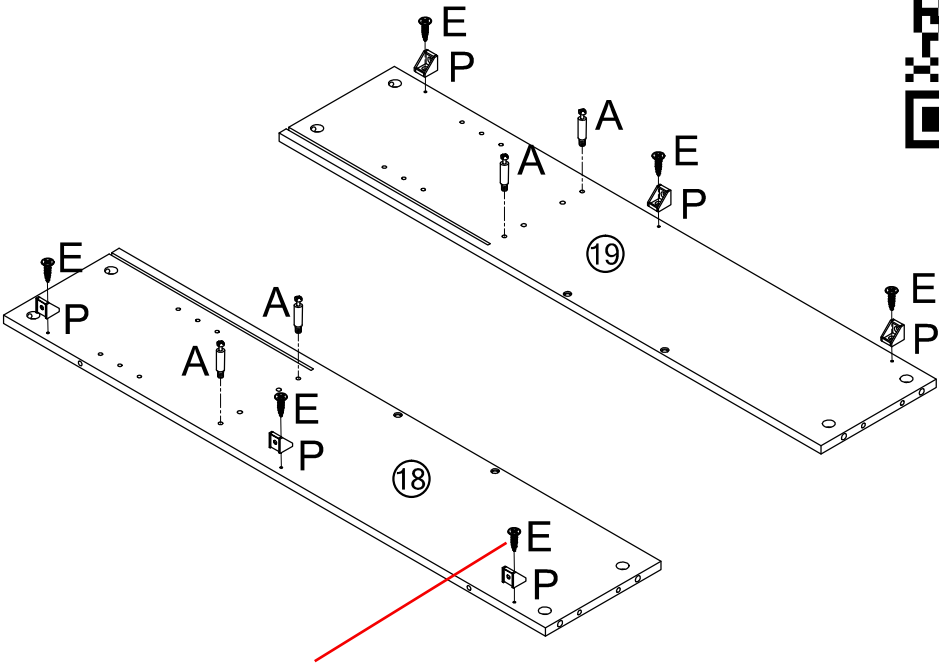


It is recommended to use an electric drill to assist installation.

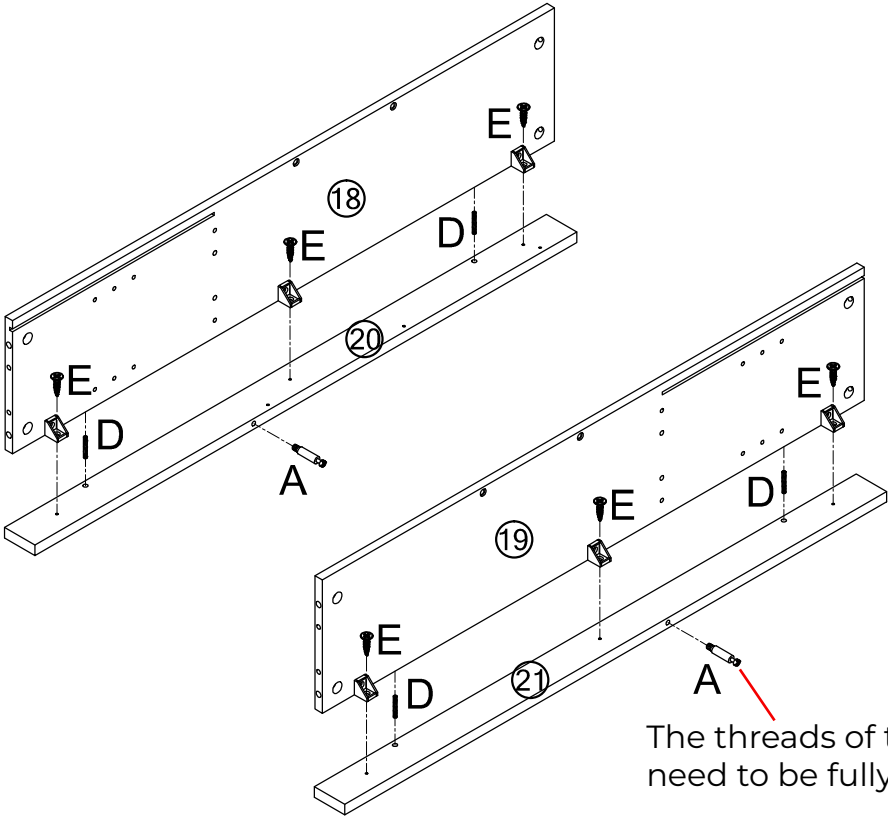


The threads of the Cam bolt need to be fully screwed in.

	A x 6 PCS
	D x 4 PCS
	E x 12 PCS
	P x 6 PCS

Step 19

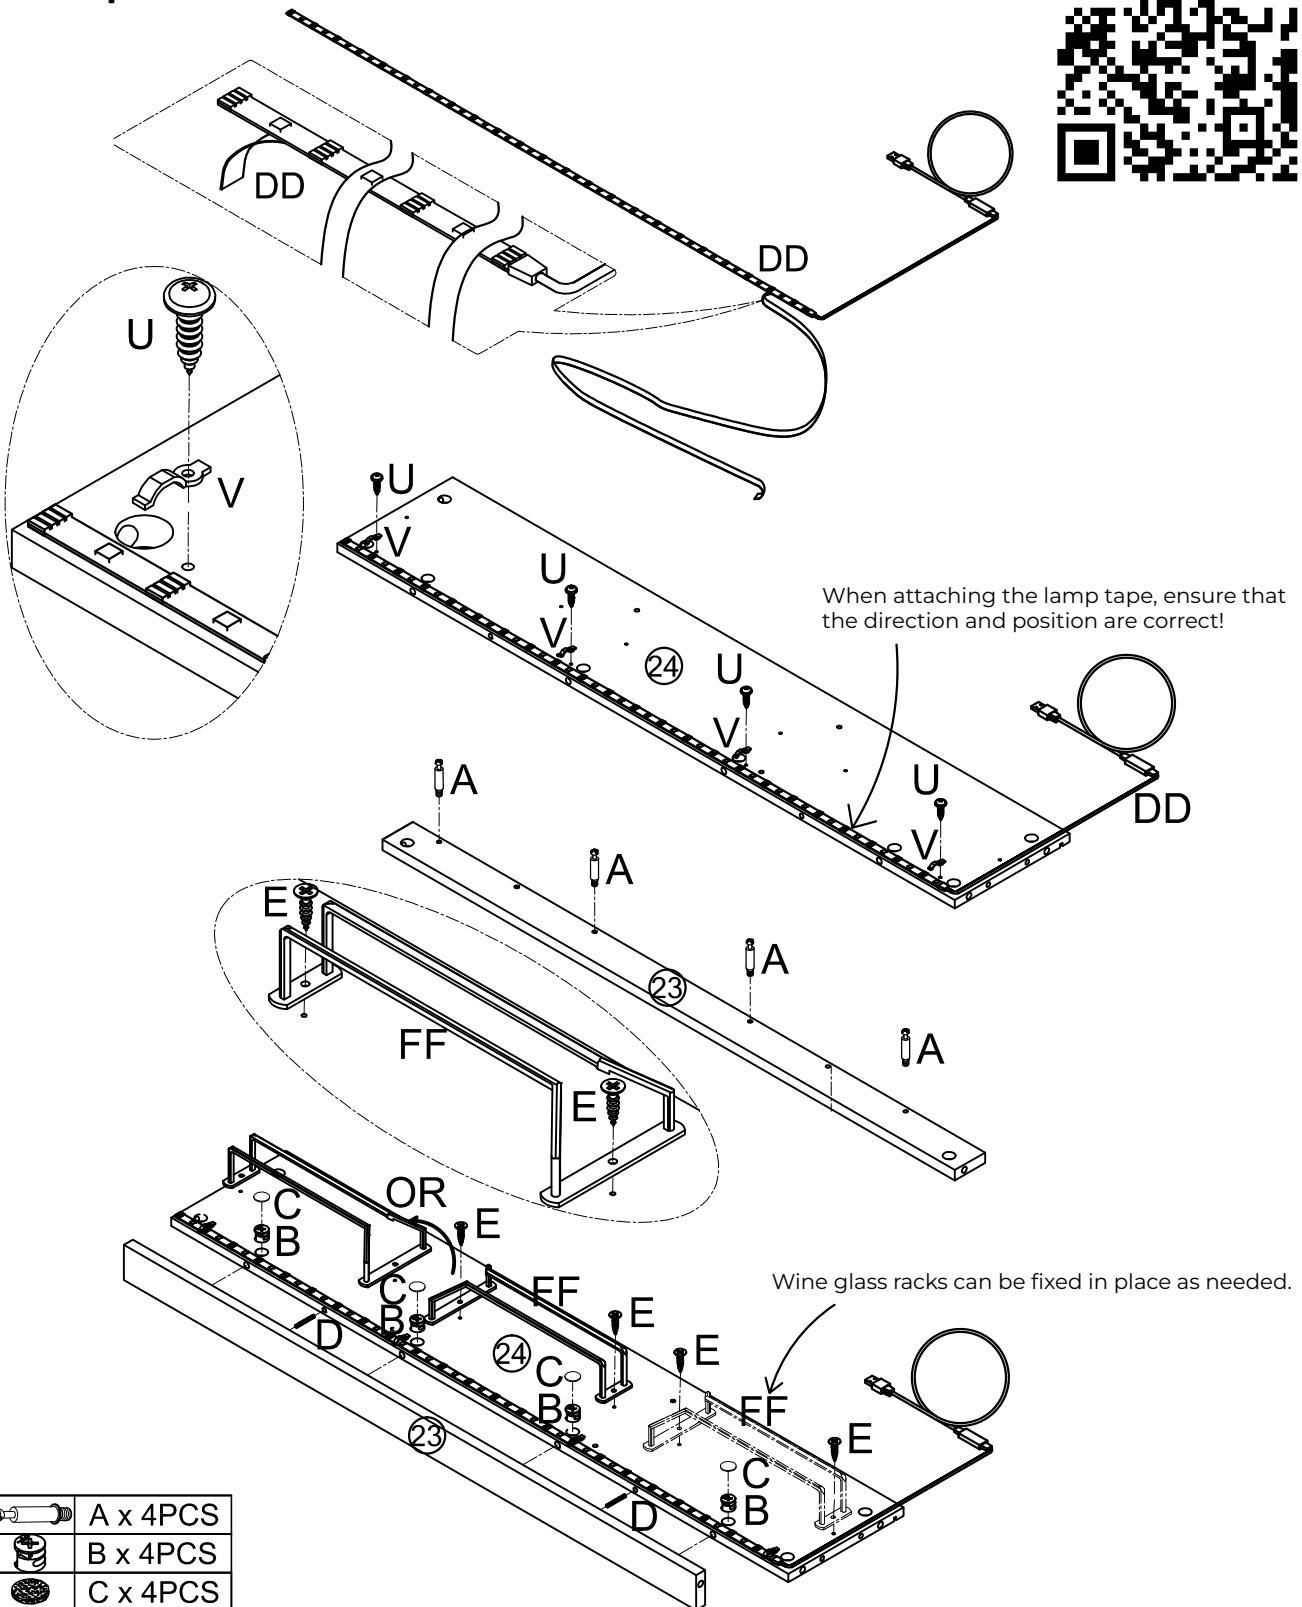


	A x 4PCS
	B x 4PCS
	C x 4PCS
	D x 2PCS
	U x 4PCS
	V x 4PCS
	E x 4PCS
	DDx 1PC
	FFx2PCS

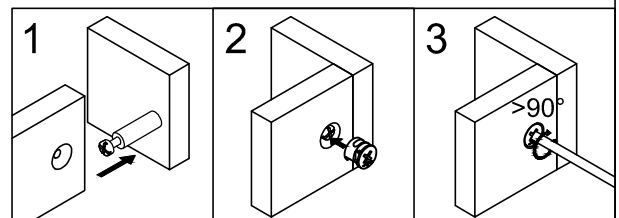




	D x 4PCS
	F x 4PCS

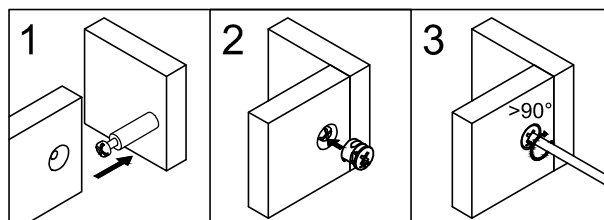


	B x 3PCS
	C x 3PCS
	D x 2PCS


Step 22

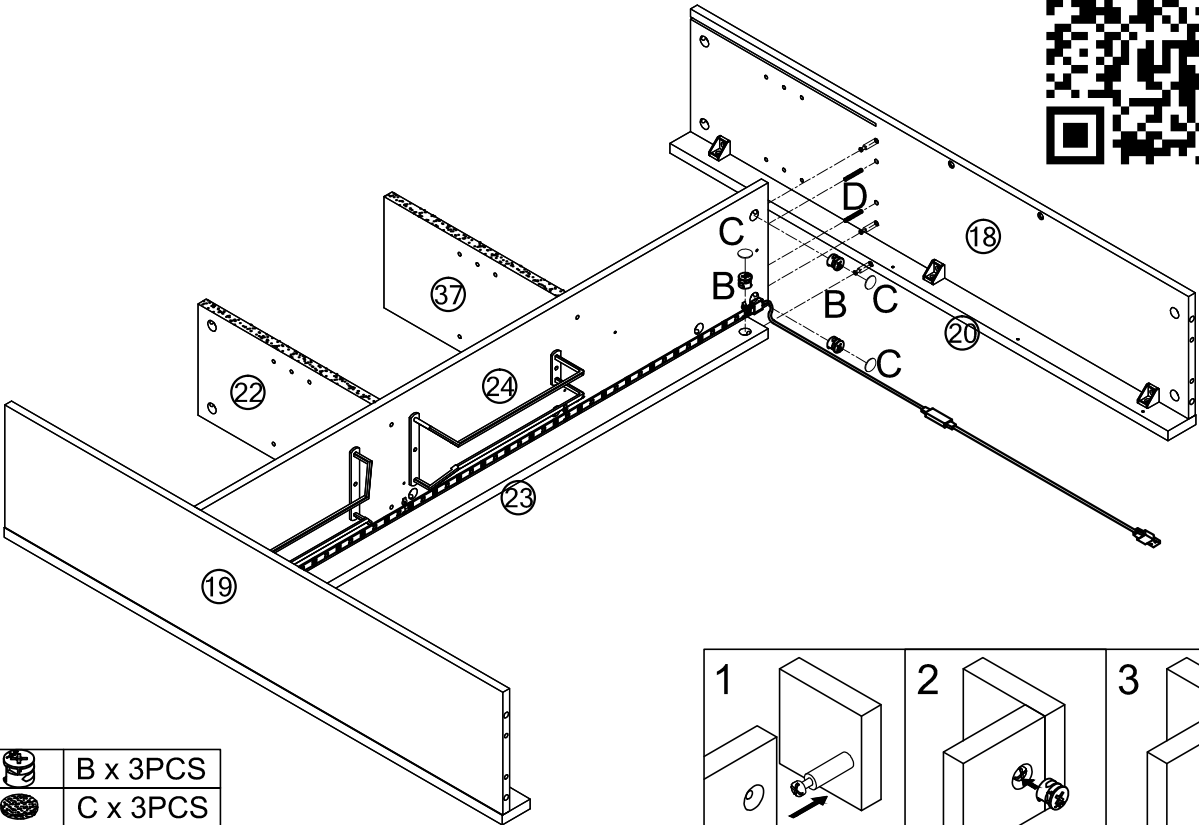

	B x 3PCS
	C x 3PCS
	D x 2PCS


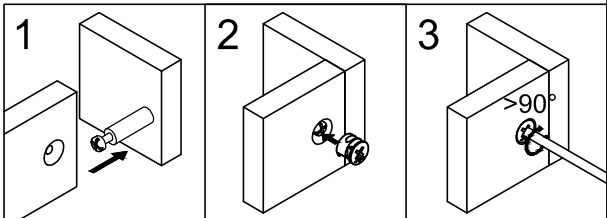


Step 23

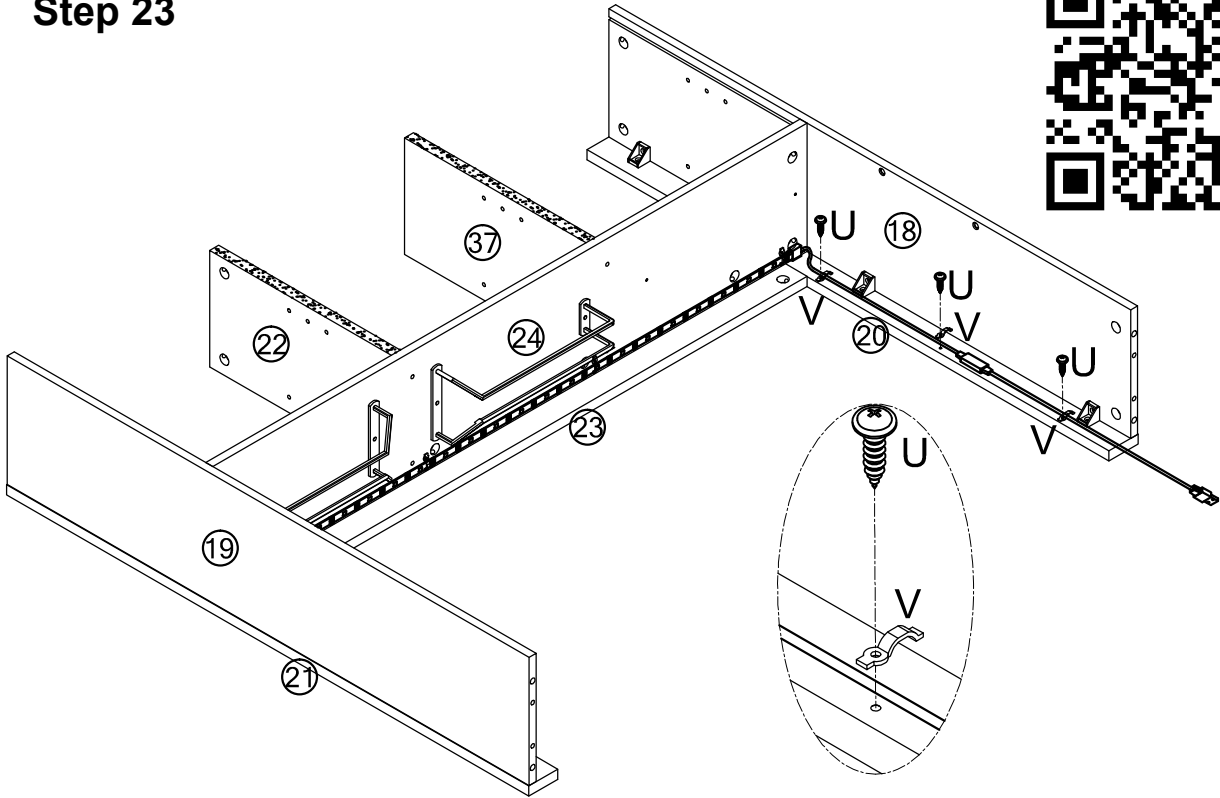


	U x 3PCS
	V x 3PCS

Step 24

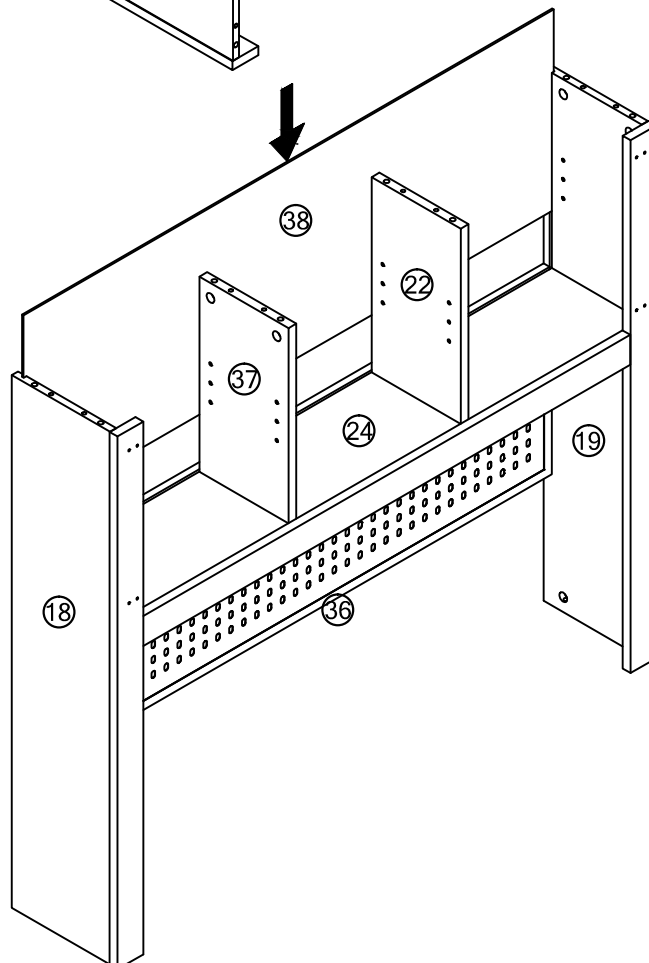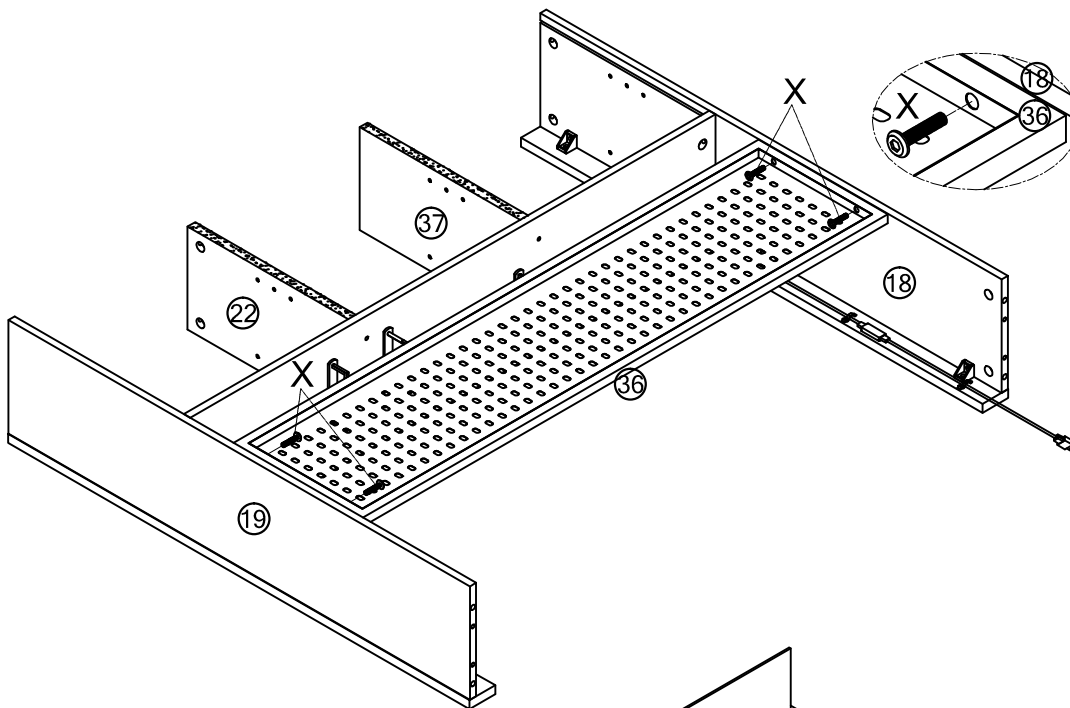


 X x4 PCS


Step 25

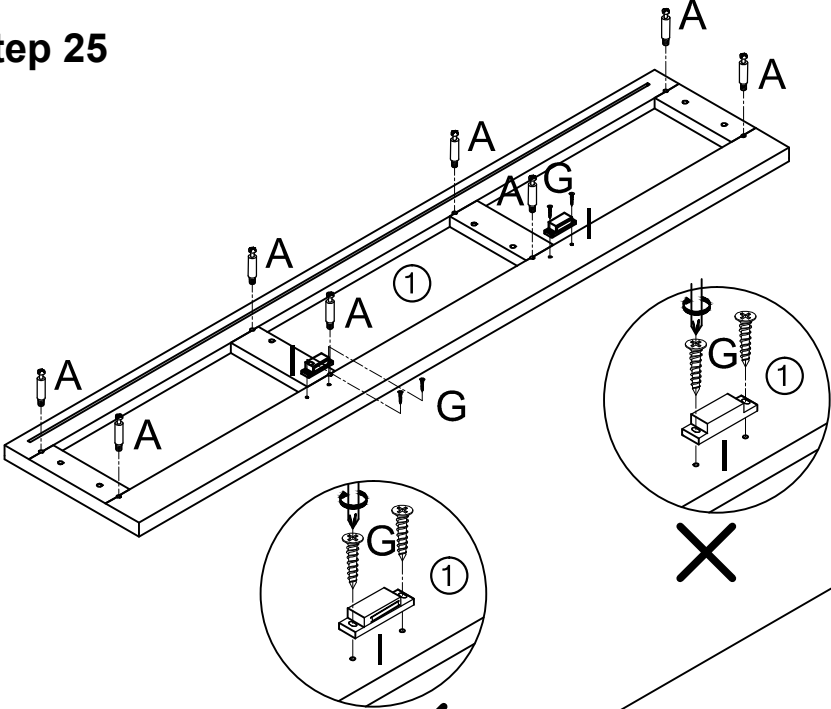



Note: Magnet facing outside!

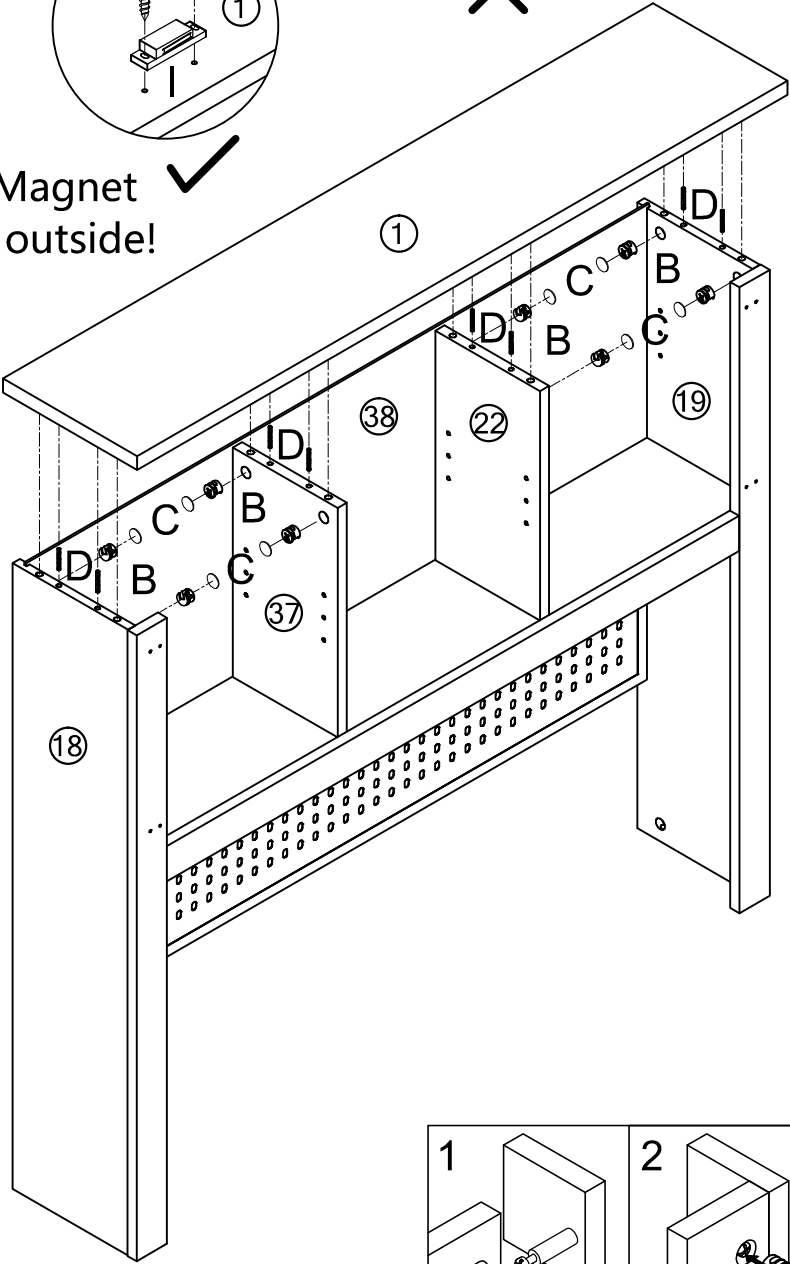


	A x 8PCS
	B x 8PCS
	C x 8PCS
	D x 8PCS
	Gx 4 PCS
	I x 2 PCS

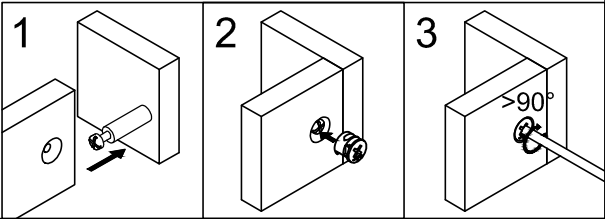


Step 26

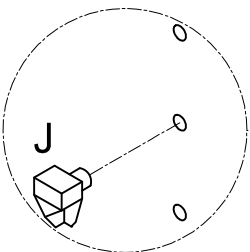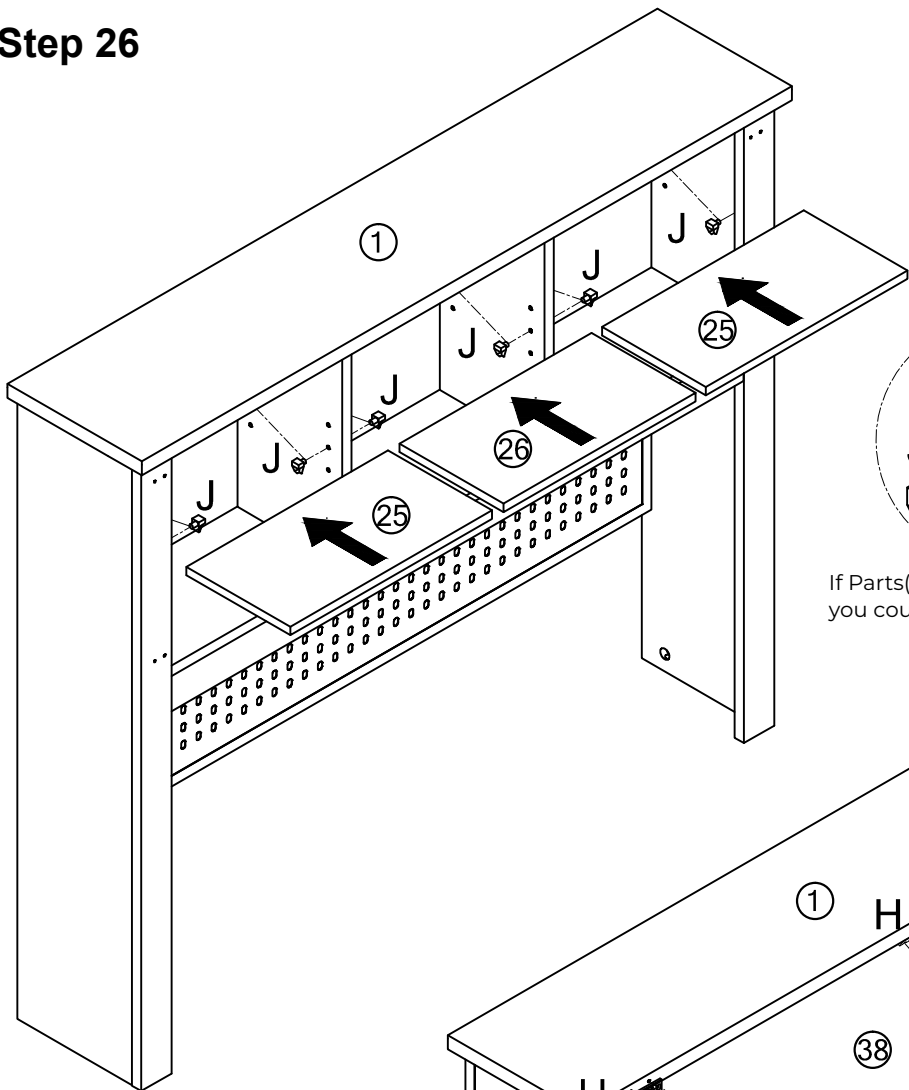

If Parts(#J) cannot be pressed in, you could use a tool to tap it.

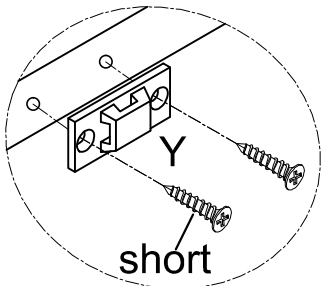


Please use short screws (#Y)

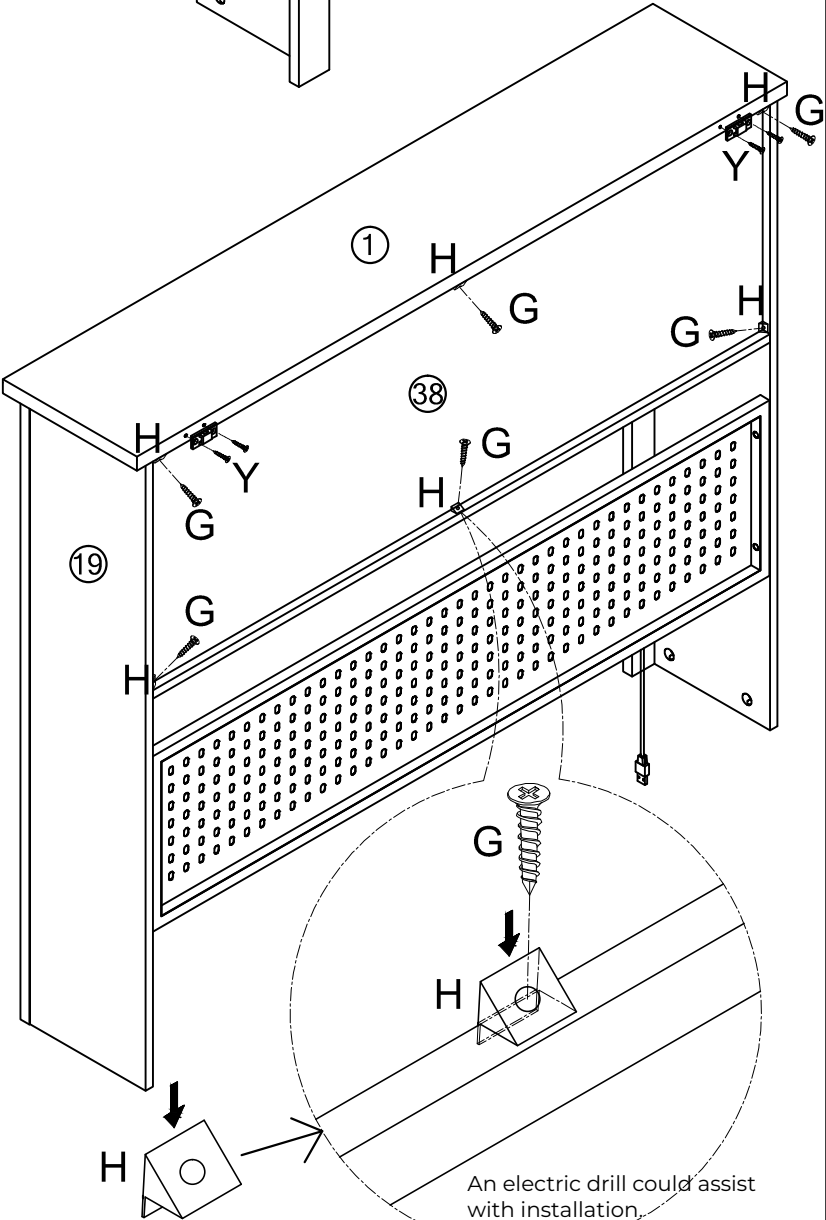


An electric drill could assist with installation.

	Gx 6 PCS
	Hx 6 PCS
	Jx 12PCS
	Yx2SETS

Step 27

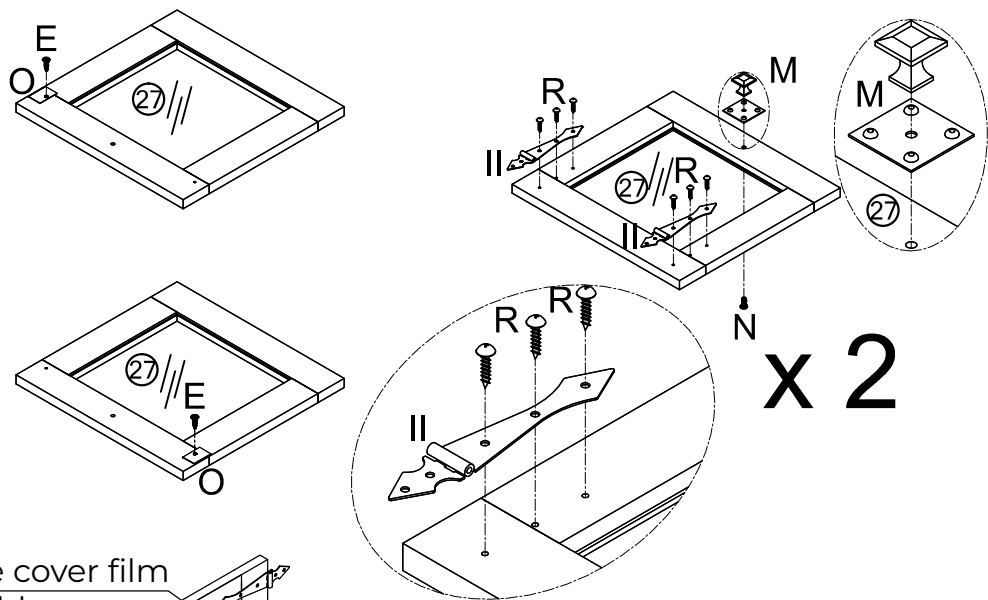


Remove the cover film
after assembly.

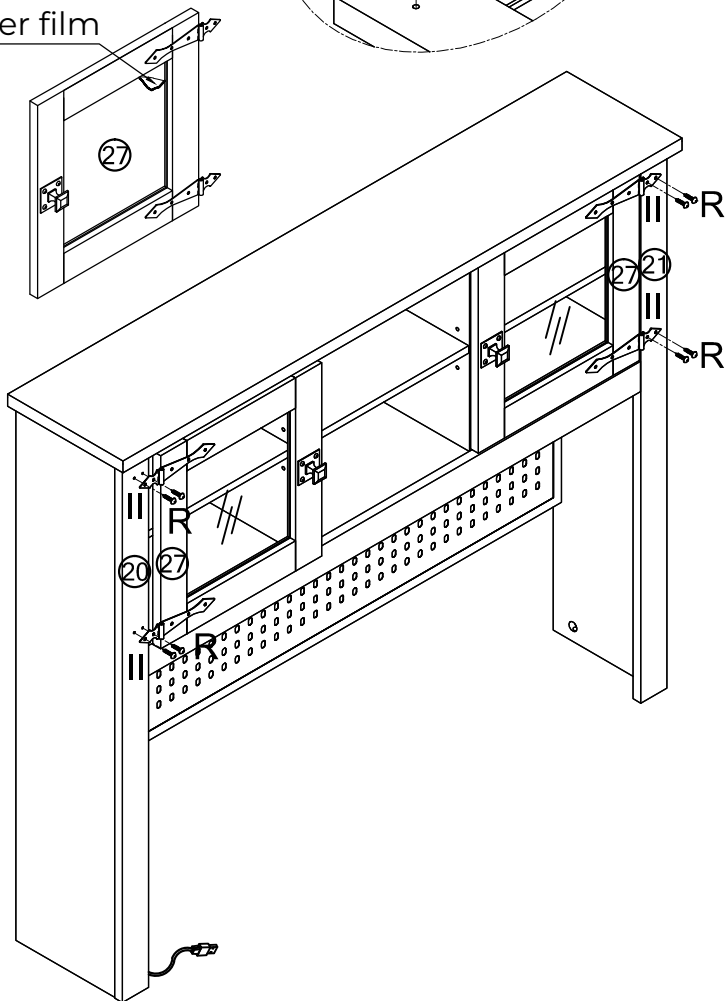


	E x 2 PCS
	M x2 PCS
	N x2 PCS
	O x 2 PCS
	II x 4 PCS
	R x20PCS




Step 28

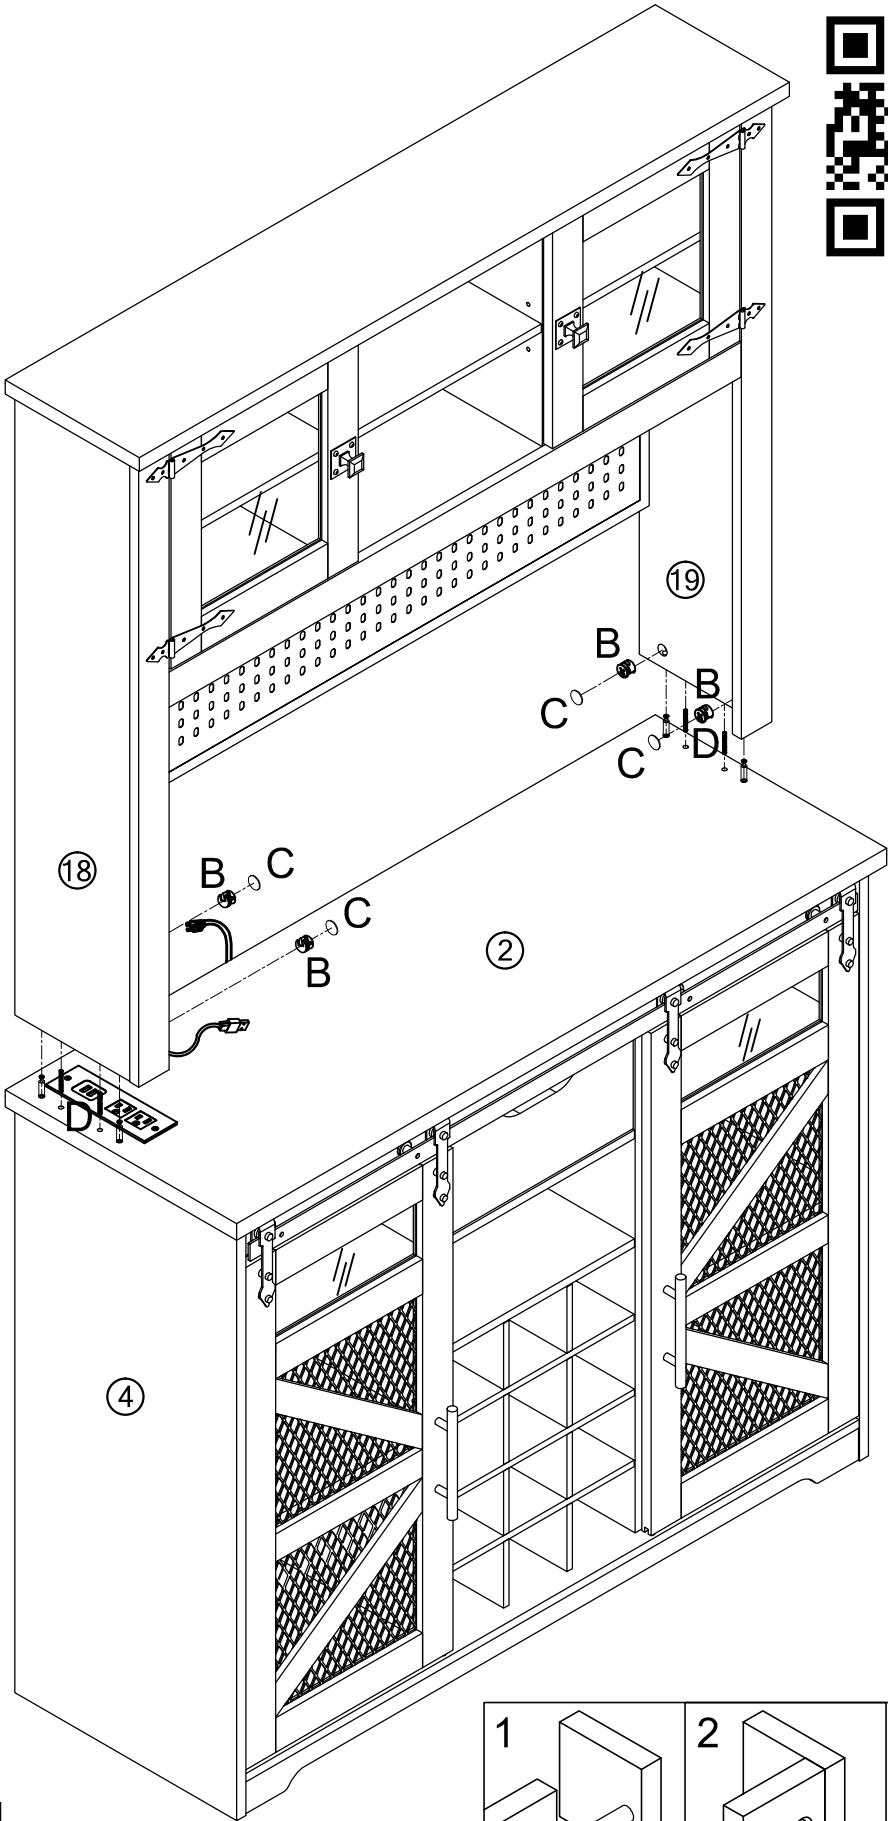

	B x 4PCS
	C x 4PCS
	D x 4PCS

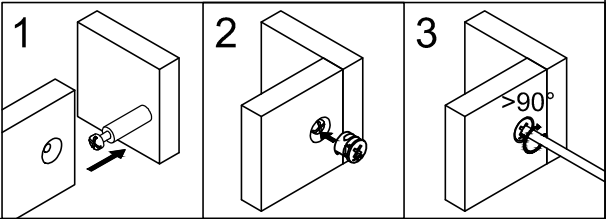


Step 29

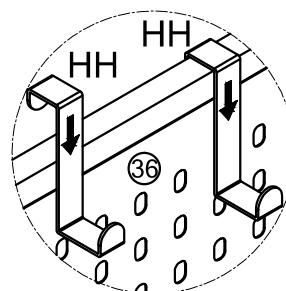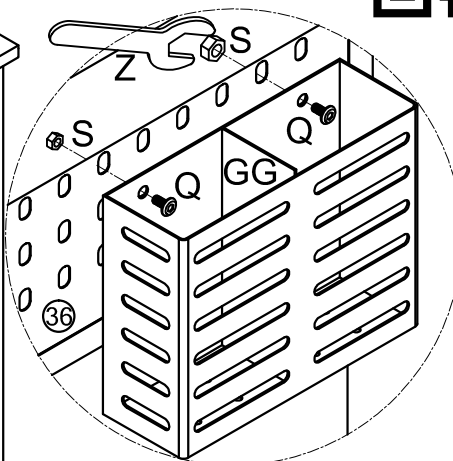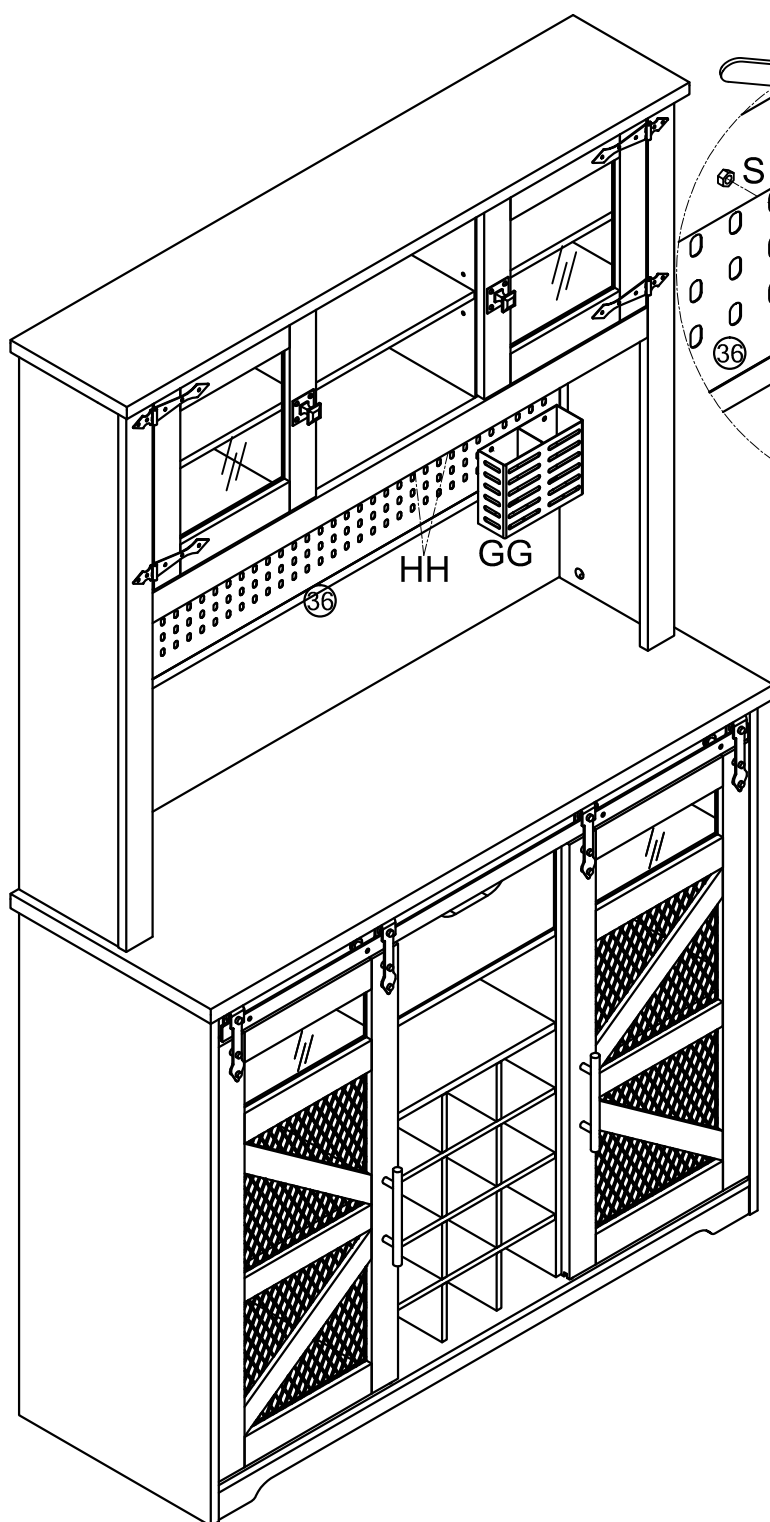


	Q x 2PCS
	S x 2PCS
	GGx 1PC
	HHx2PCS


Step 30

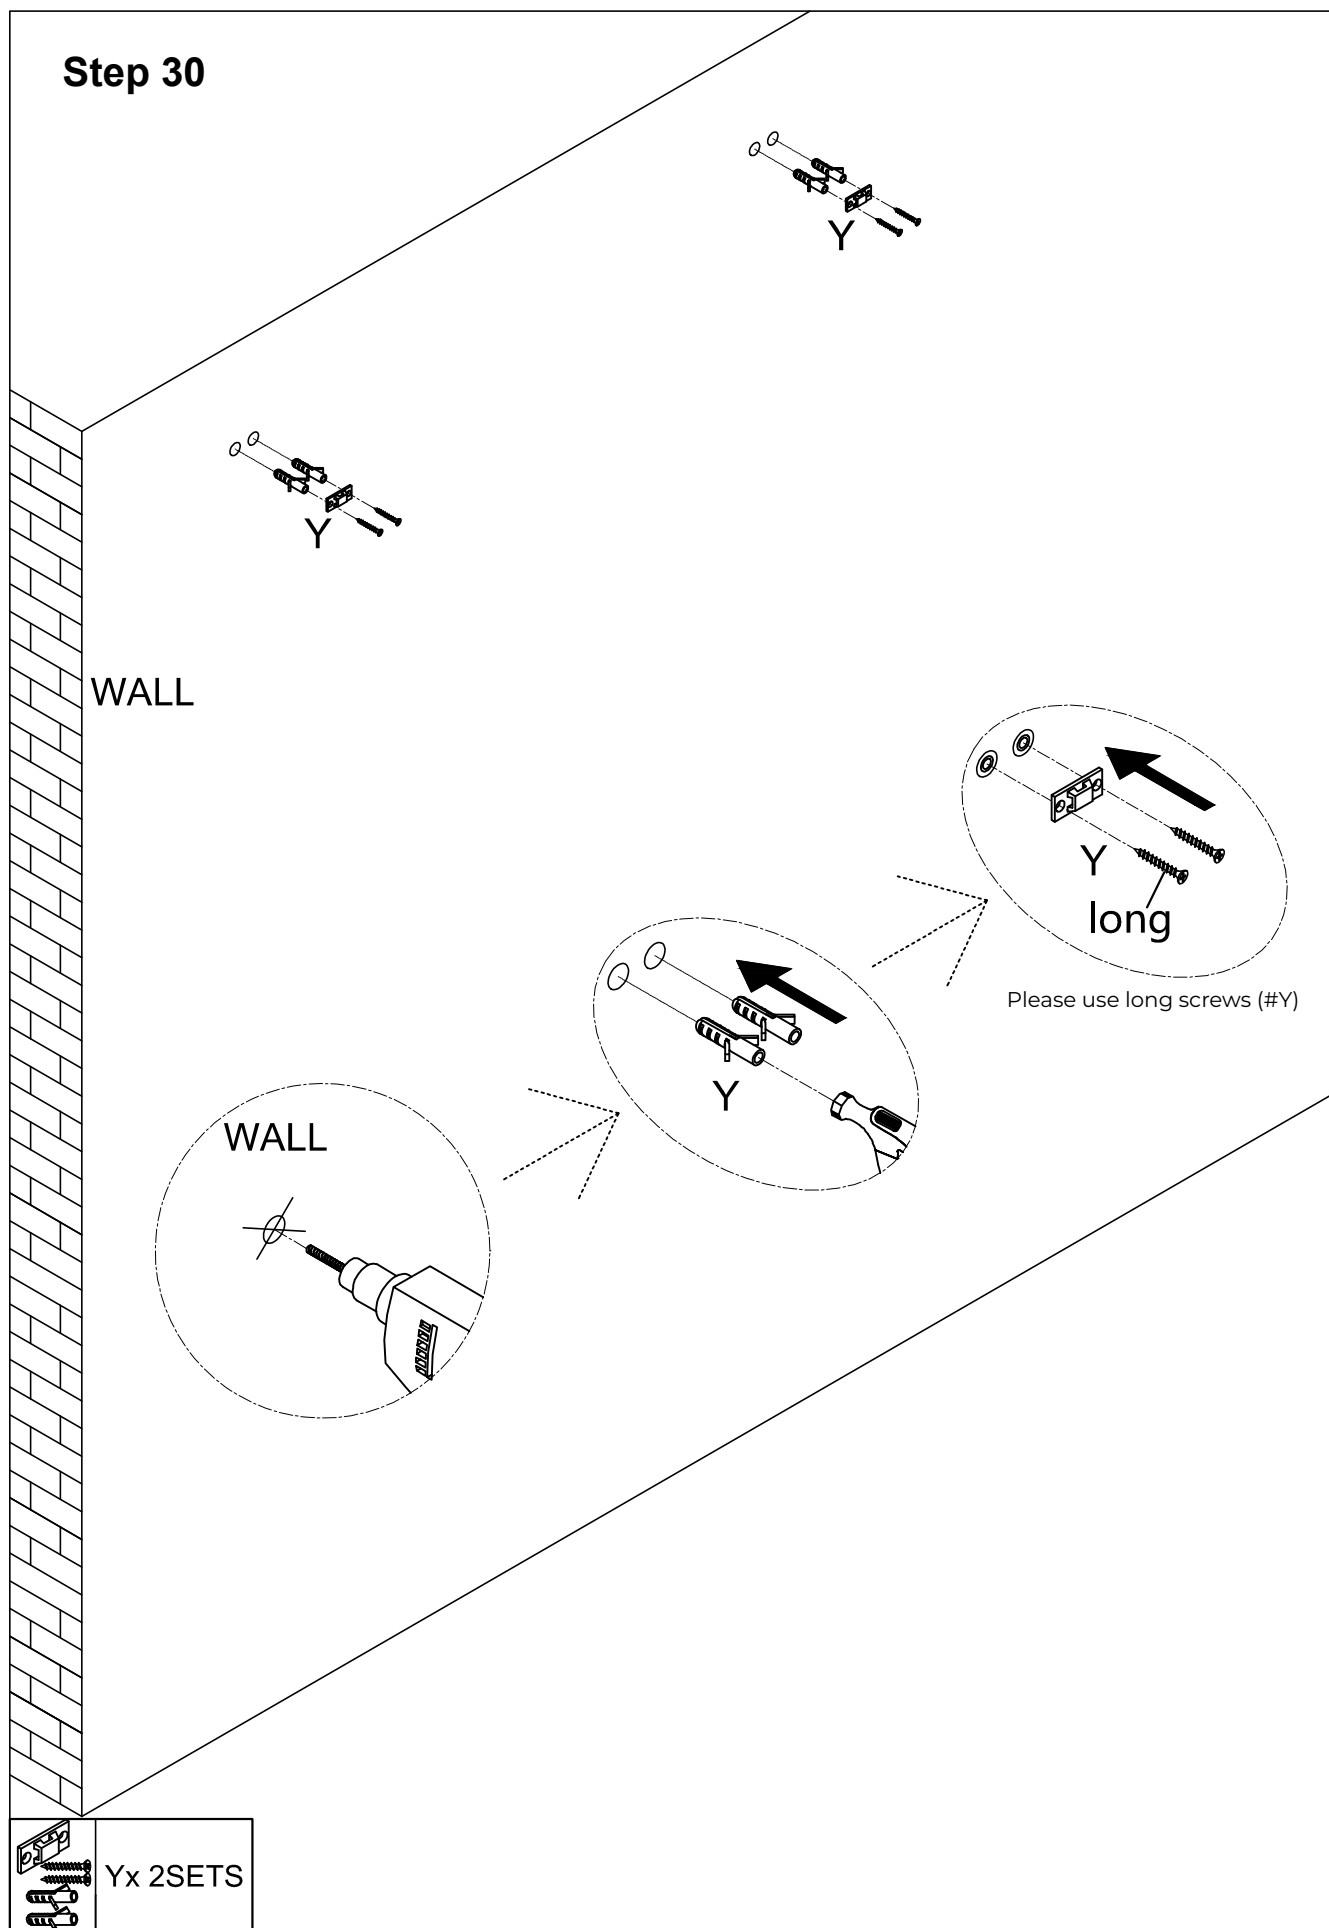

Step 31

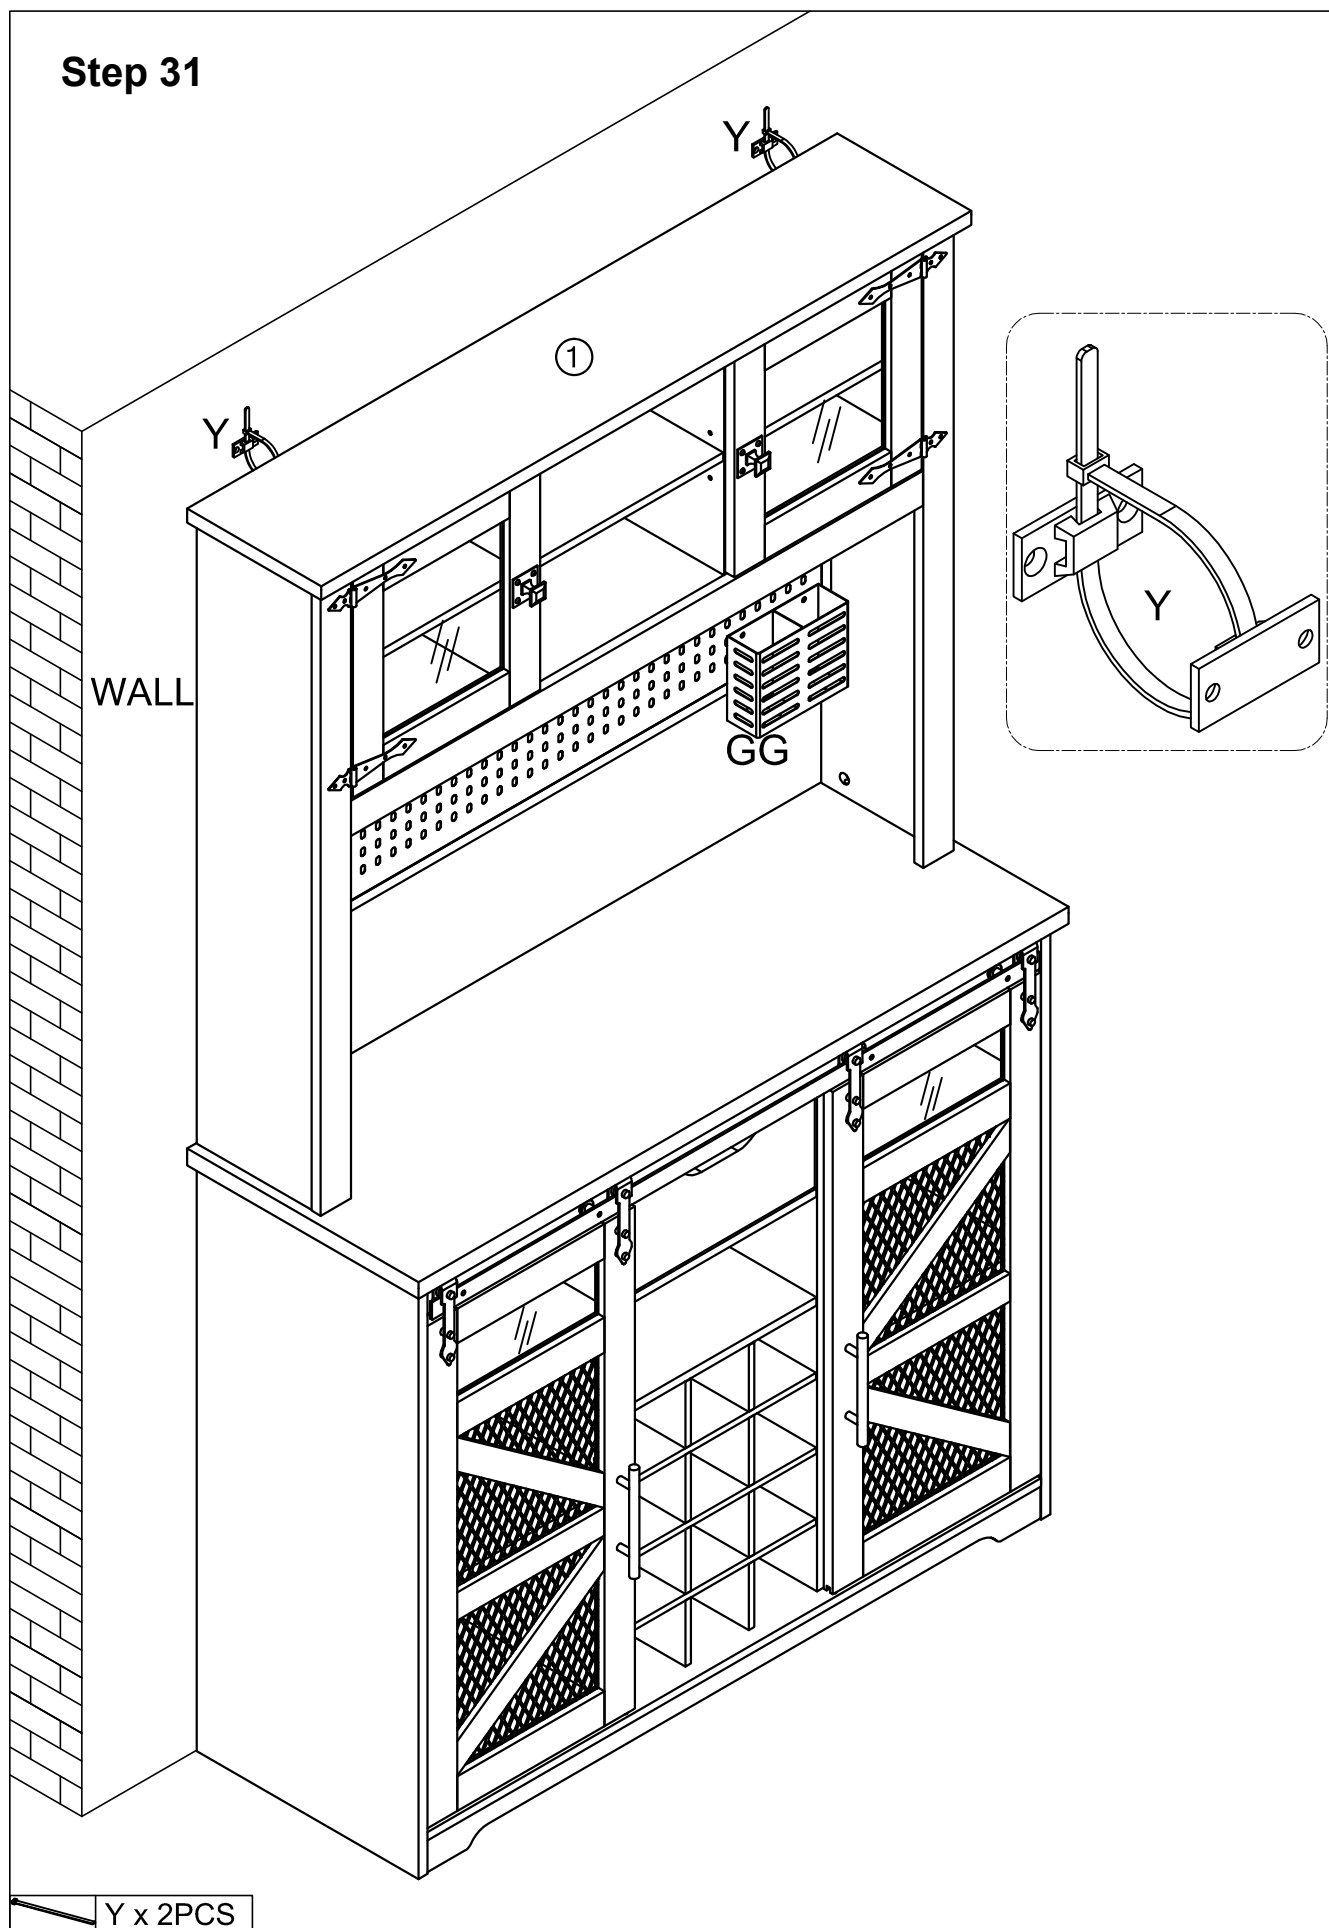

Step 32

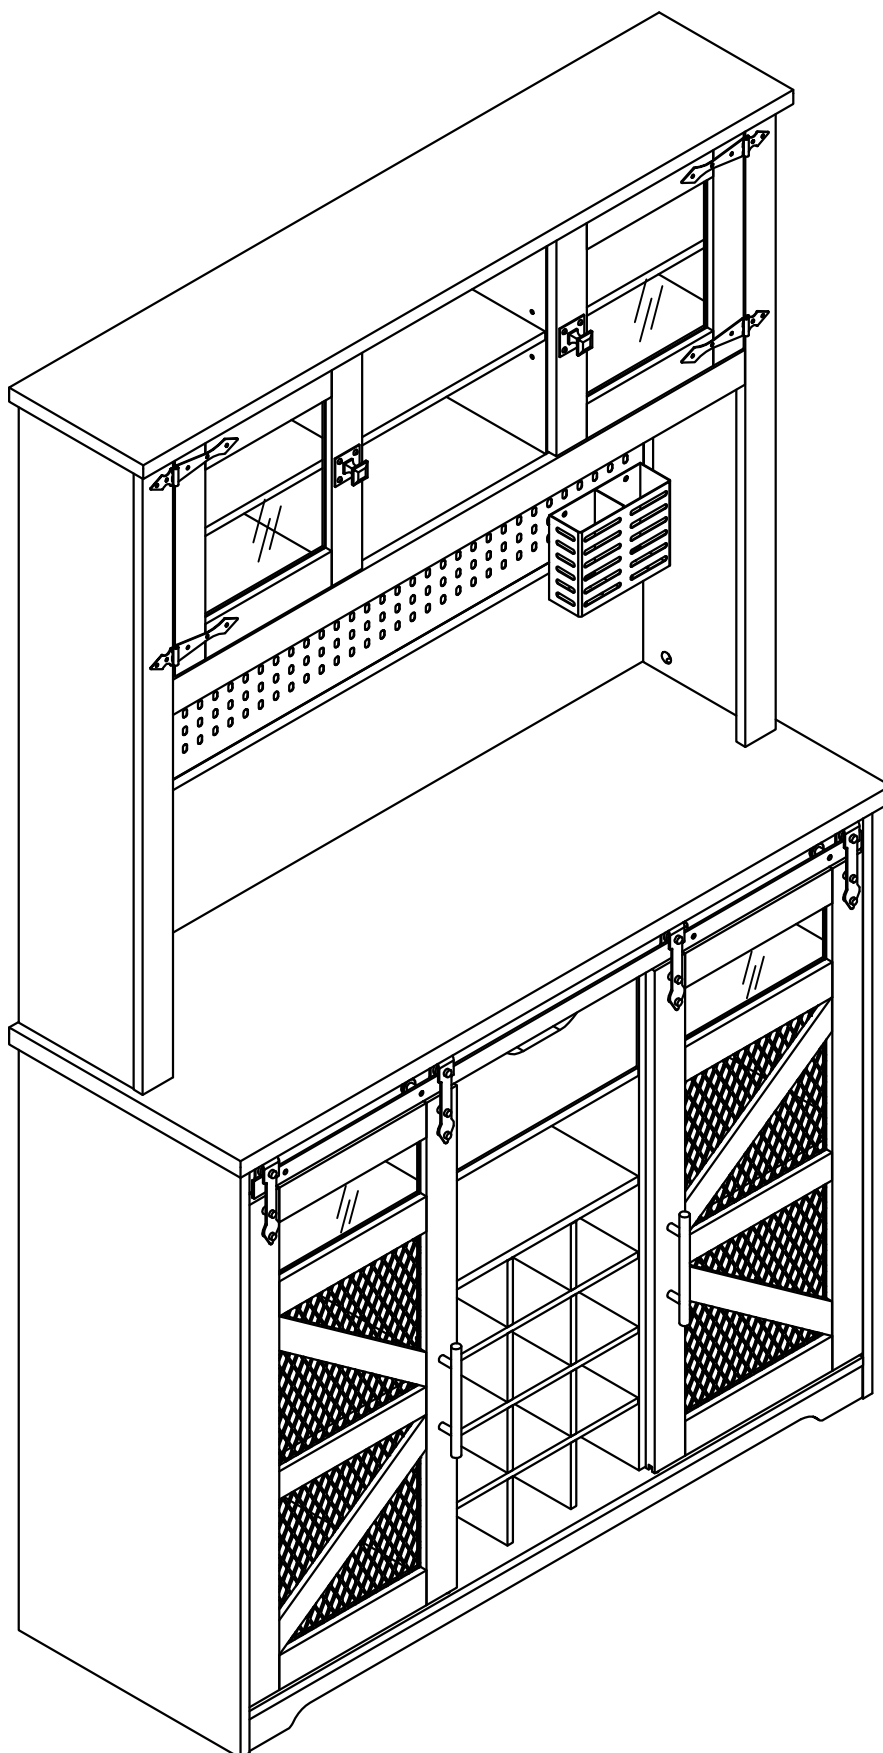

Finish

WARRANTY

Thank you for purchasing a DOMICON Brand Product. We promise to repair or replace any product or component that may have defects in material or workmanship for as long as you, the original purchaser, own it.

There are no other warranties except as expressly set forth below, either expressed or implied, including any warranty of merchant ability for any particular purpose.

The word "defects" in this warranty is defined as imperfections that impair the service, function, or effectiveness of the product.

Warranty Limitations:

This warranty is exclusive and covers only defects as defined by impairments to the product's service, function, or effectiveness.

Natural variations in wood or other materials are not considered defects.

Color fastness or matching of colors, grains, textures, or other materials is not warranted, nor are customer-selected materials.

Exclusions:

This warranty does not cover:

Damage caused by carriers.

Modifications or attachments not approved by DOMICON.

Non-standard user-selected materials.

Improper installation, use, or maintenance.

DOMICON is not liable for incidental or consequential damages, except where prohibited by law.

Legal Rights:

This warranty gives you specific legal rights, and you may have other rights which vary by jurisdiction. This warranty applies to products sold in the United States of America and the Commonwealth of Canada.

For warranty service, please contact DOMICON Customer Service.

WARRANTY

TO OBTAIN SERVICE FROM THIS WARRANTY:

A) Please contact us within 30 days (unless otherwise noted by the Dealer) of discovery of the defect. Prepare to confirm that you are the original purchaser of the product and provide necessary product information, such as the order number.

B) DOMICON will gather all the pertinent information required regarding your claim(s), inspect the product, and then contact a DOMICON Customer Service Representative.

C) If DOMICON confirms that the product under review is eligible under the warranty conditions as stated above, the Customer Service Representative or another representative of the Company will determine whether to provide replacement parts or authorize other arrangements at the sole discretion of the vendor, DOMICON. No assembly/labor is included in this warranty.



TO CONTACT CUSTOMER SERVICE

domiconcsc@gmail.com

domiconservices@gmail.com

Our knowledgeable Service Representatives are ready to assist you in the event this warranty applies to you. Please be prepared to explain the defect in detail, provide the model/style number, date and location of purchase, as well as your name.