



ASSEMBLY INSTRUCTION

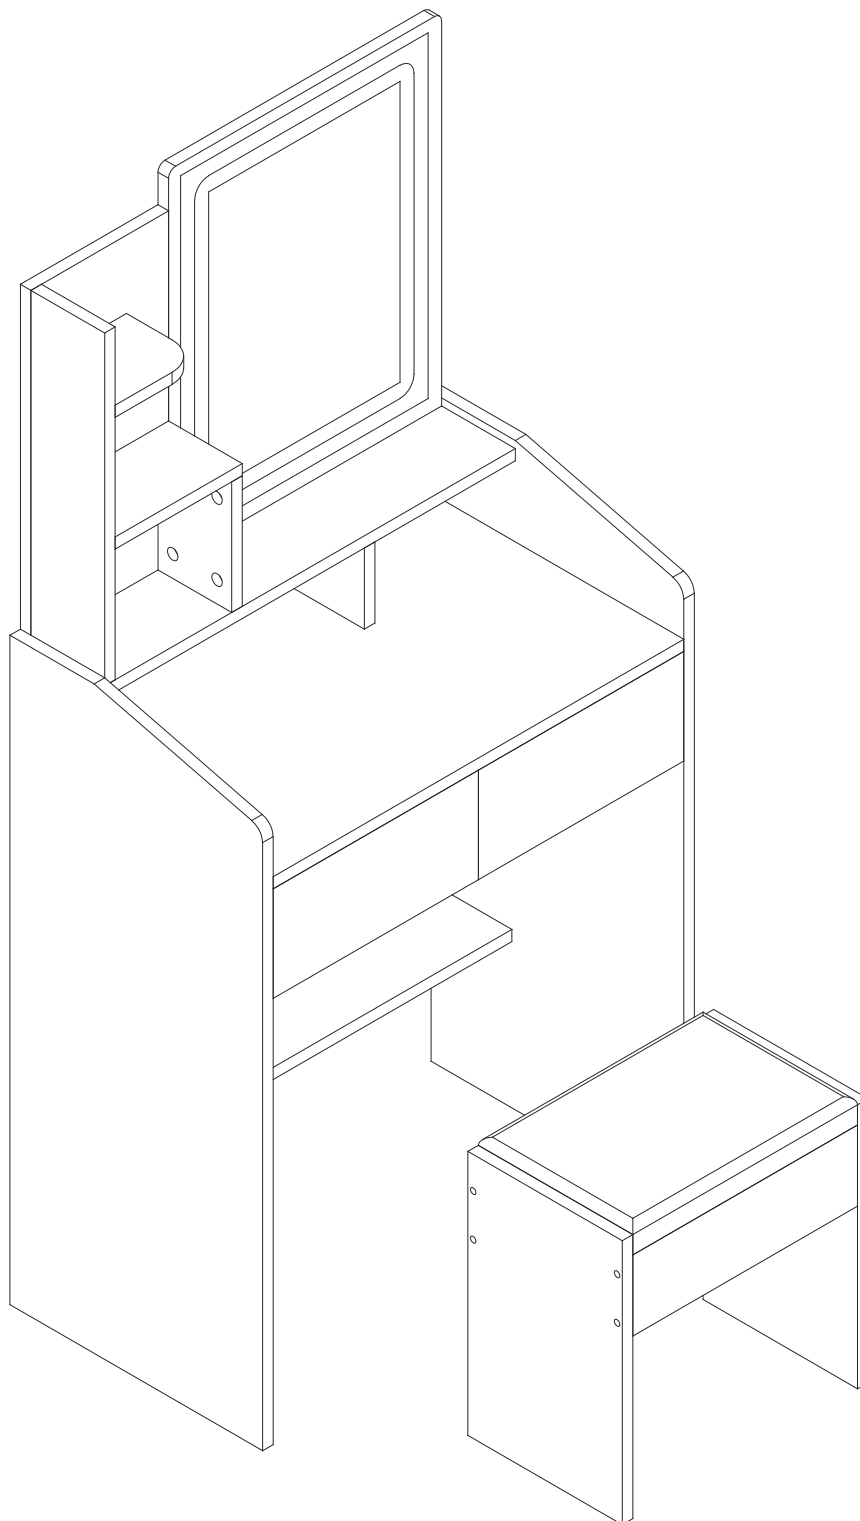


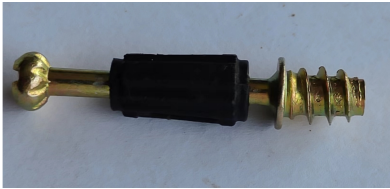


Ax58



Bx58

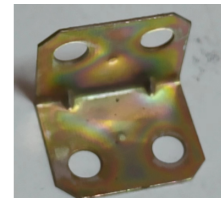

Cx2

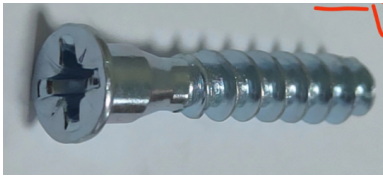

Dx13



Ex14



Fx1



Gx4




Hx1



Jx1


1. Screw installation method

When the screw is installed, please keep it in line with the board, and do not tighten it too tightly

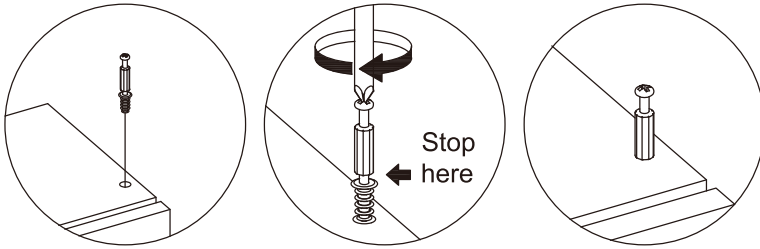


2. Check the Nut direction




This direction of the marked nut is consistent with the direction in which the screw is inserted

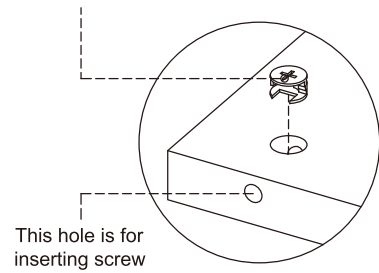


3. Installation on the board with fixing screws

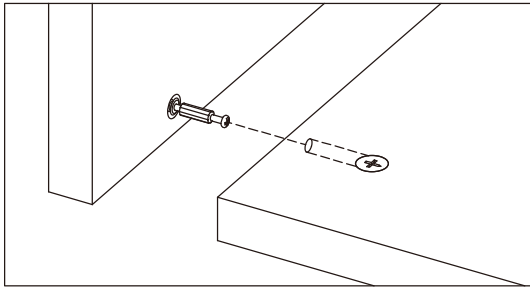


3. Rotate slowly until it stops

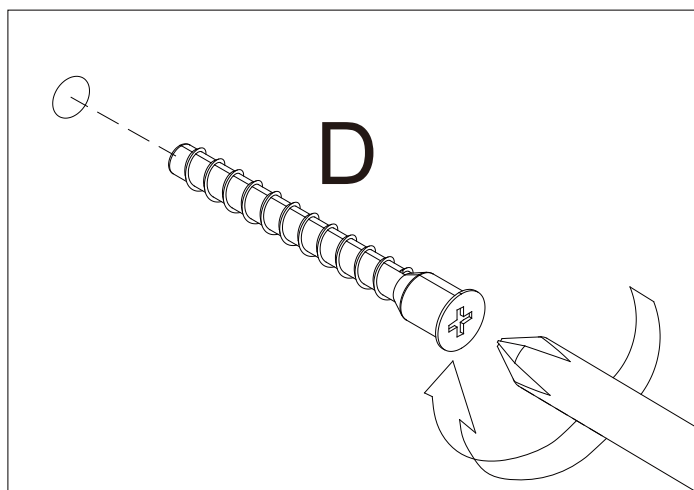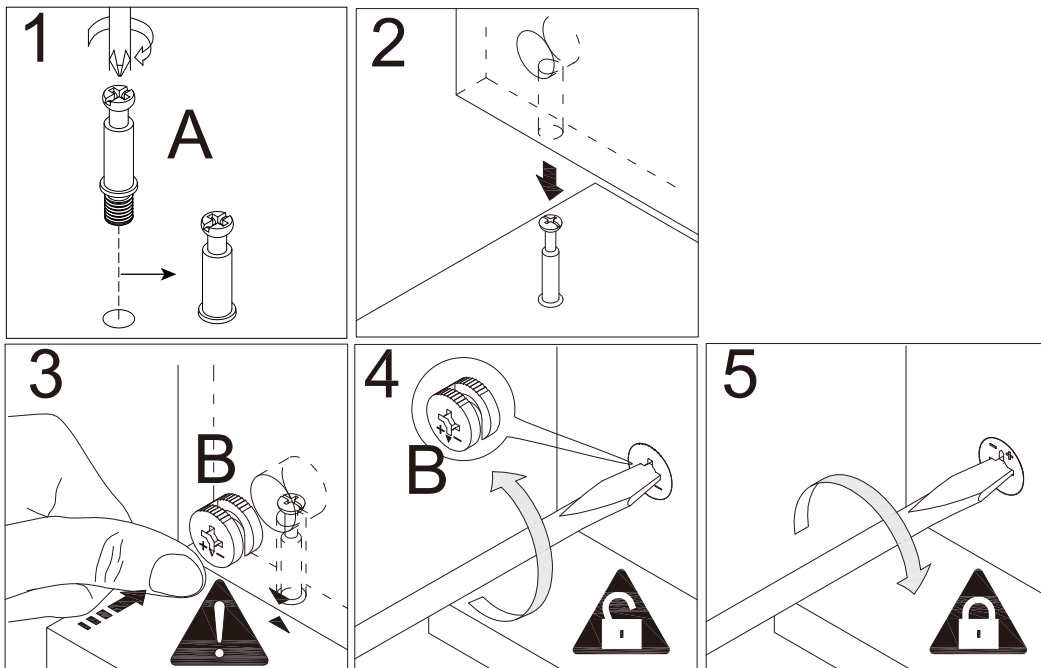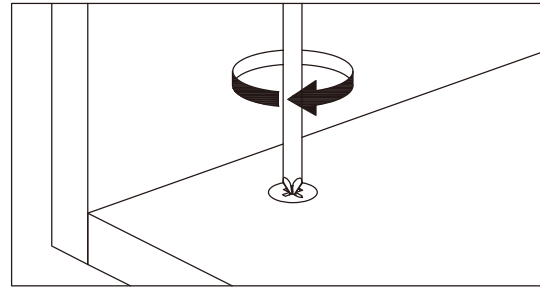


STEP 1

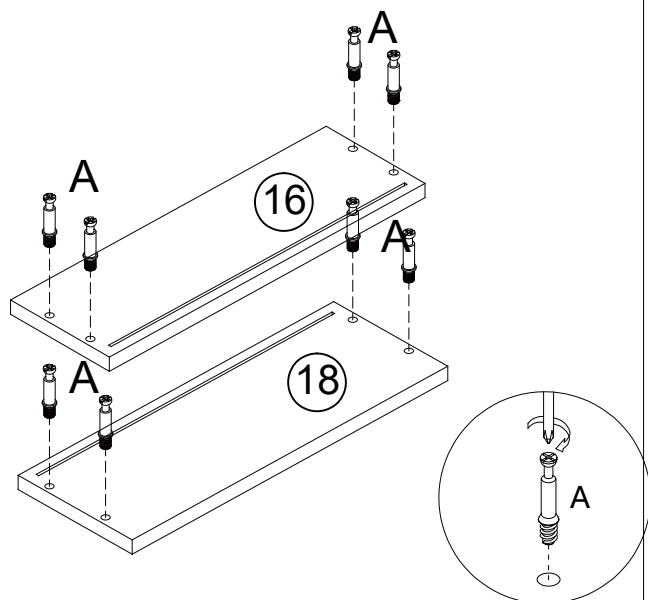


STEP 2

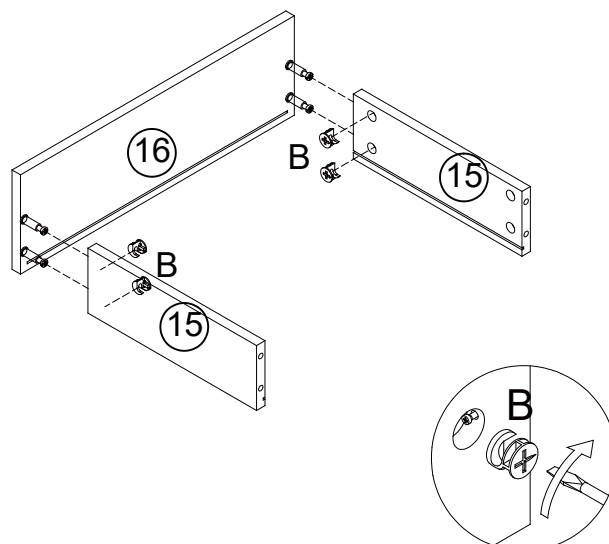

STEP 3

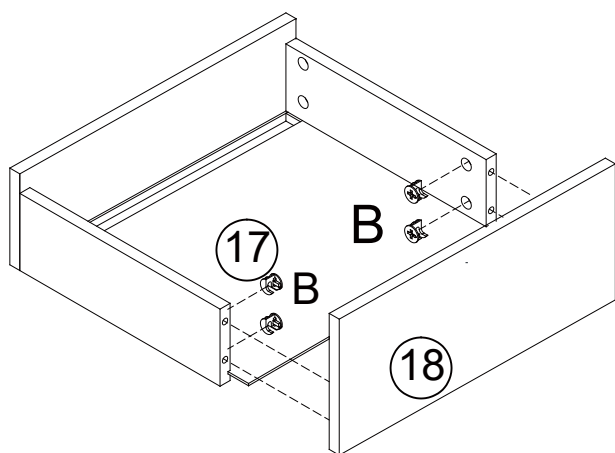


STEP 4

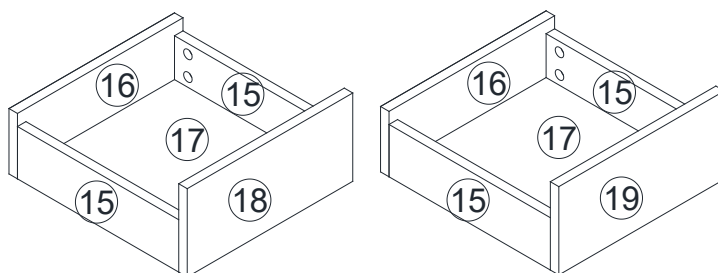


Two drawers are installed in the same way


STEP 5

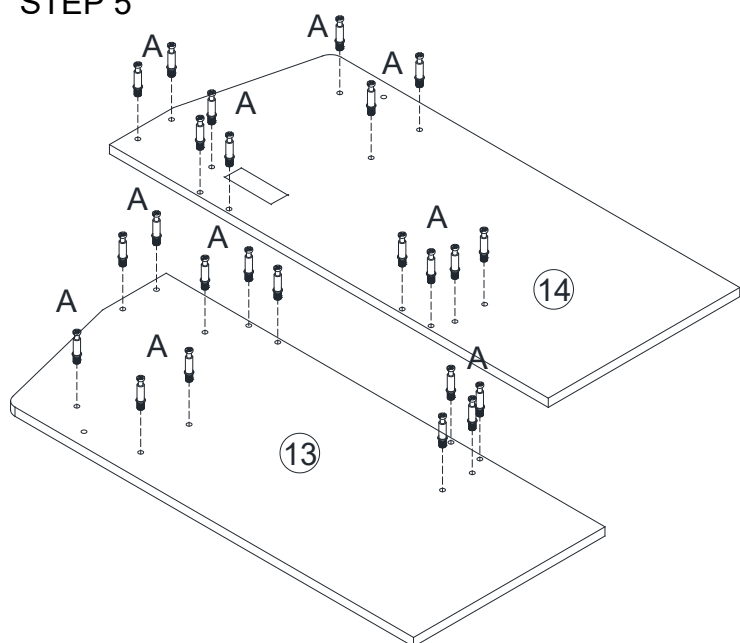


STEP 6

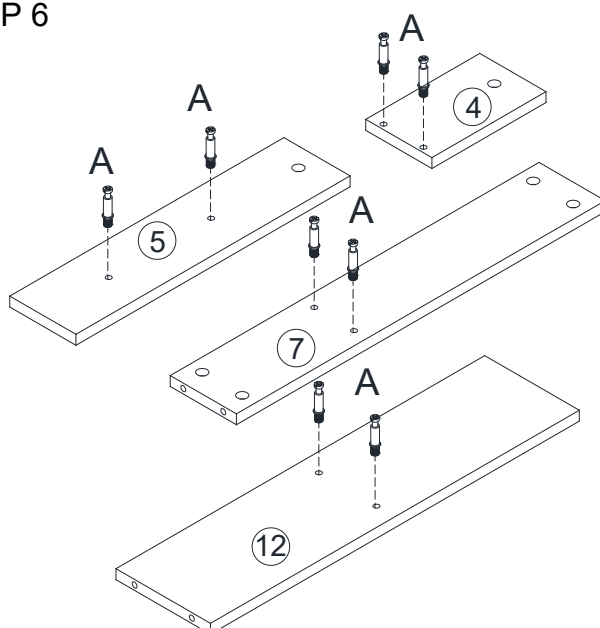


STEP 7

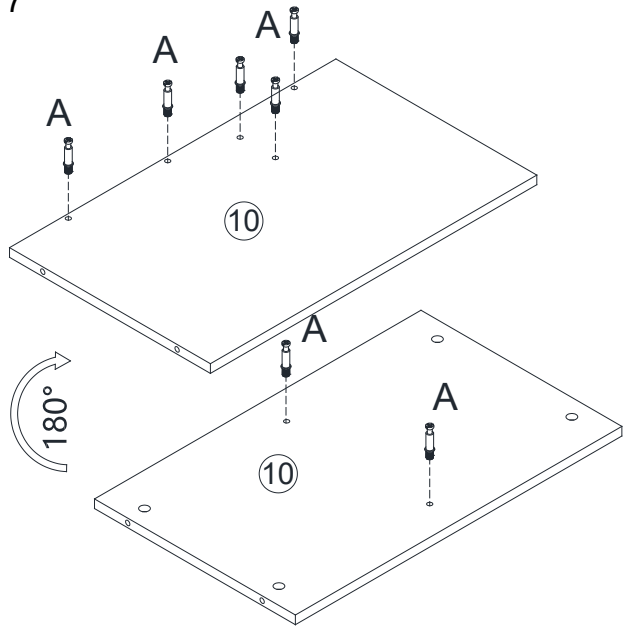


STEP 8

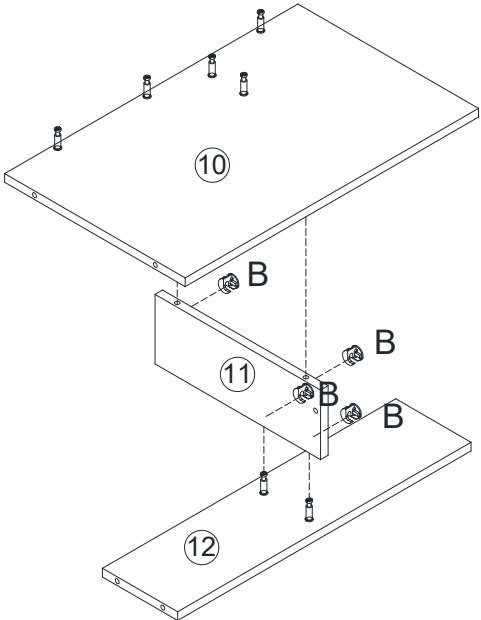


STEP 9

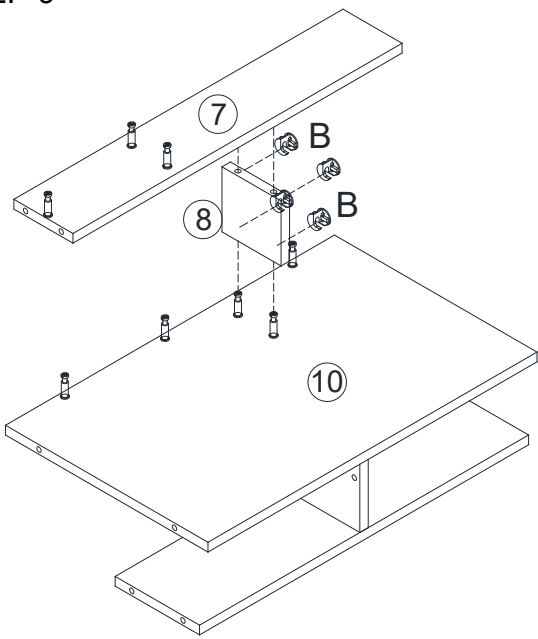


STEP 10

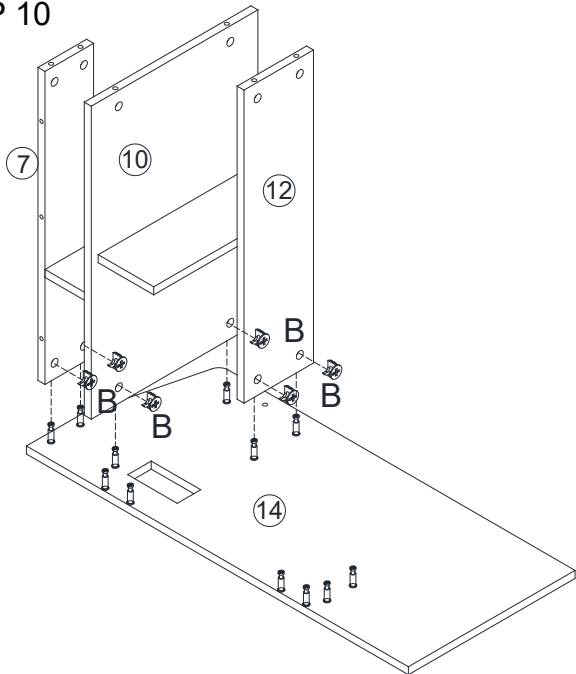


STEP 11

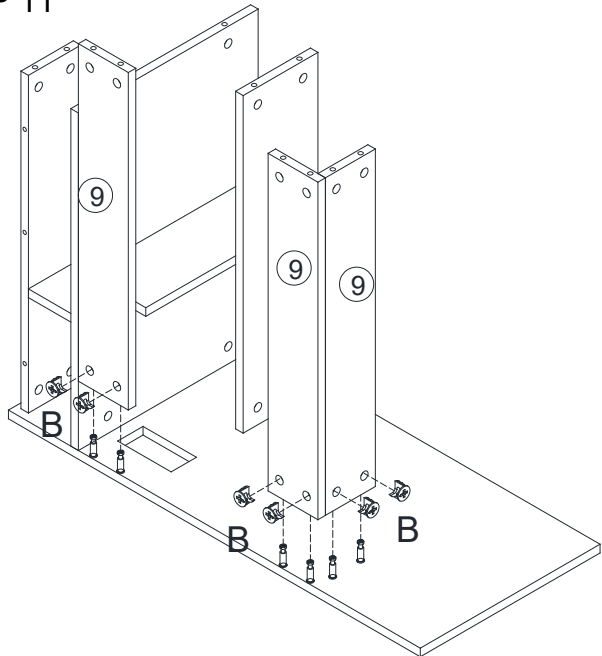


STEP 12

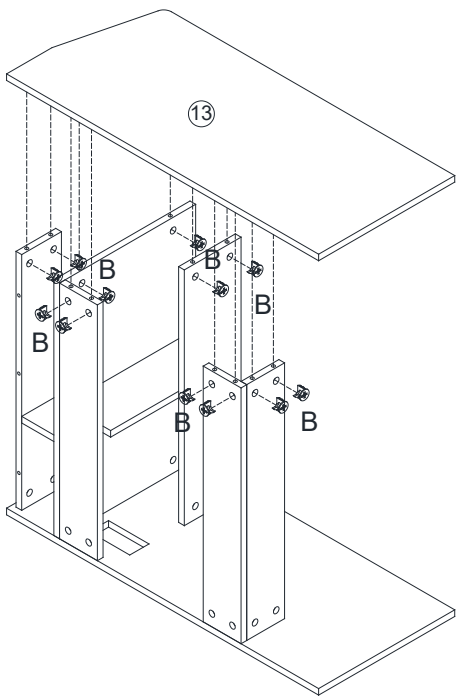


STEP 13

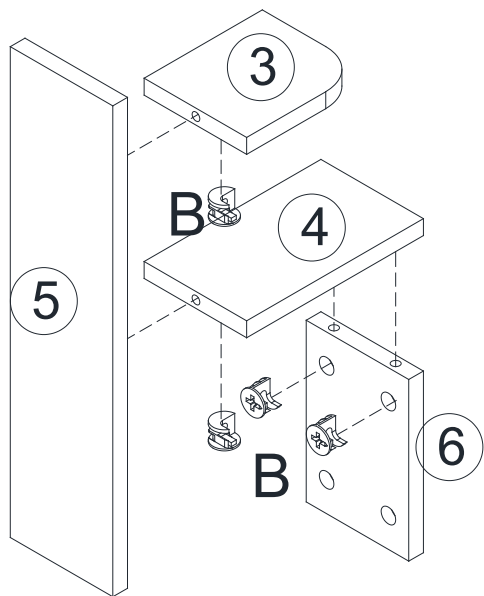



STEP 14

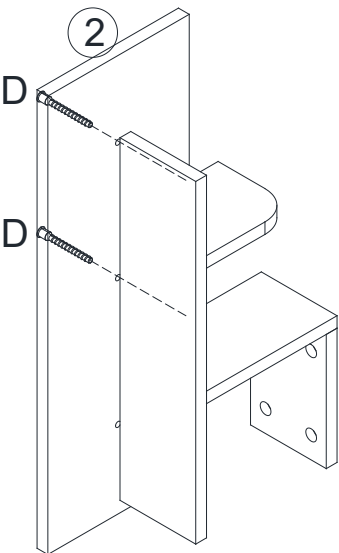


STEP 15

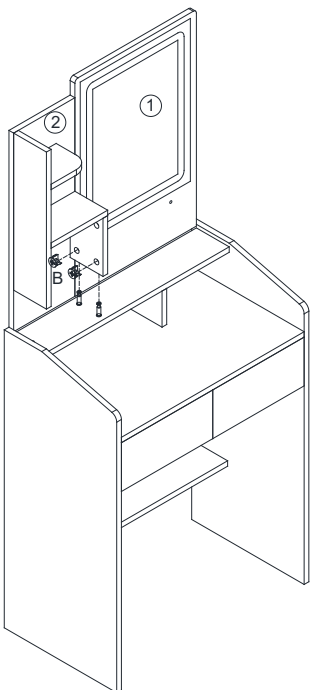



STEP 16

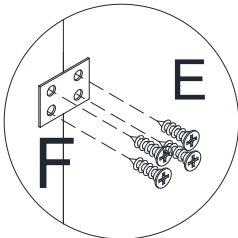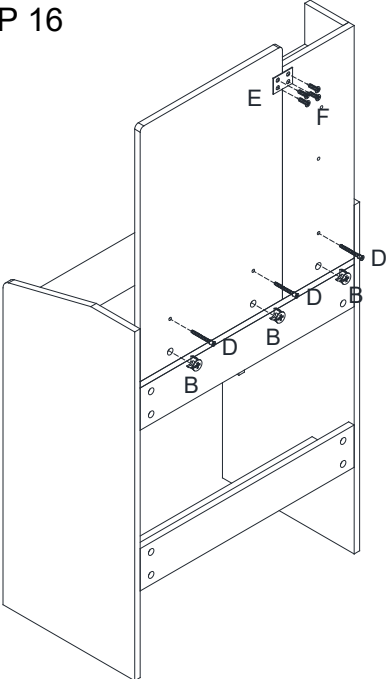


STEP 17

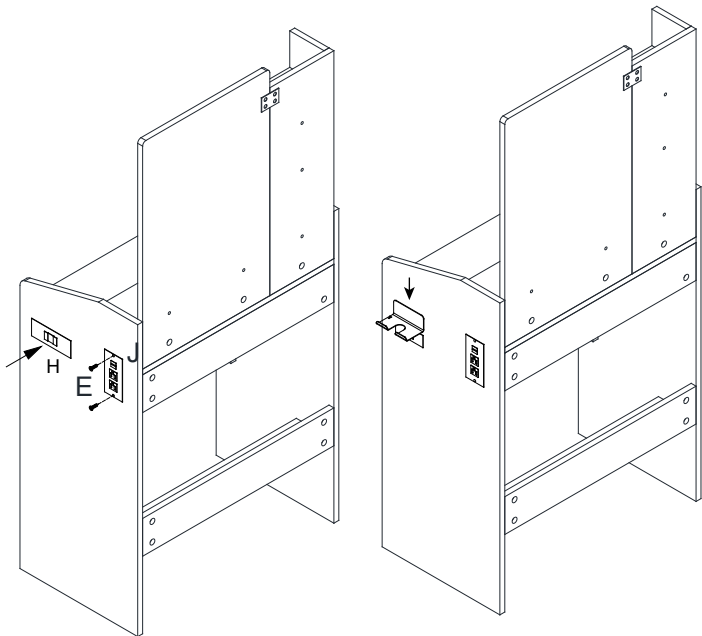


STEP 18

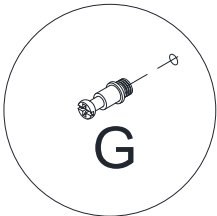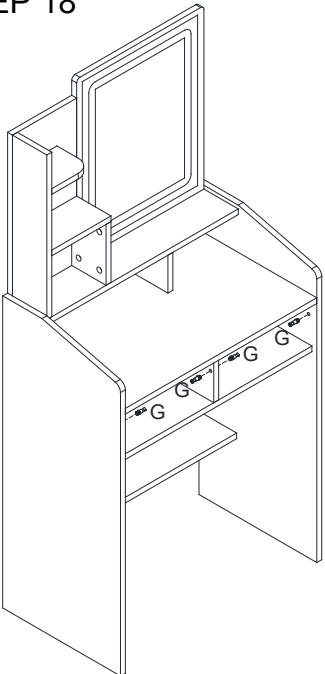


STEP 19

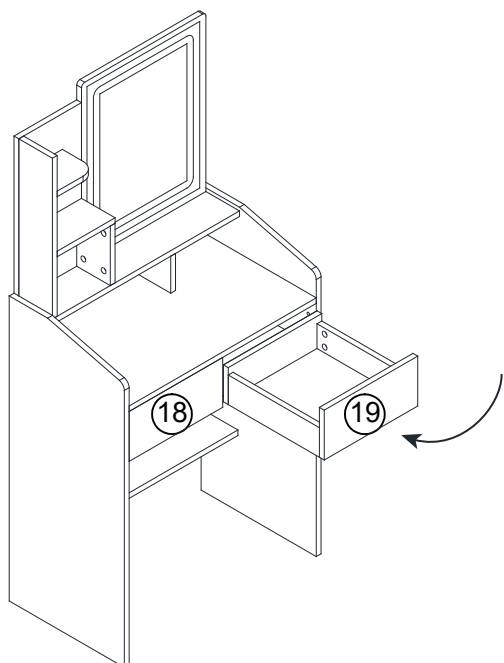

STEP 20

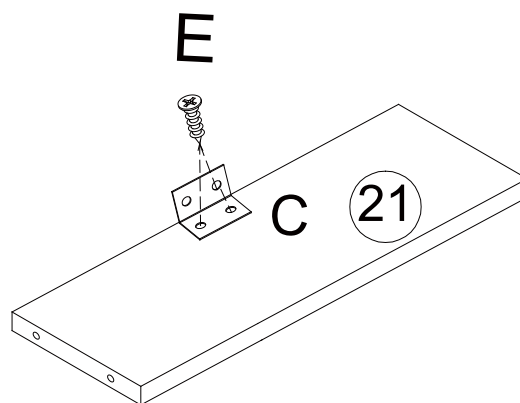

STEP 21

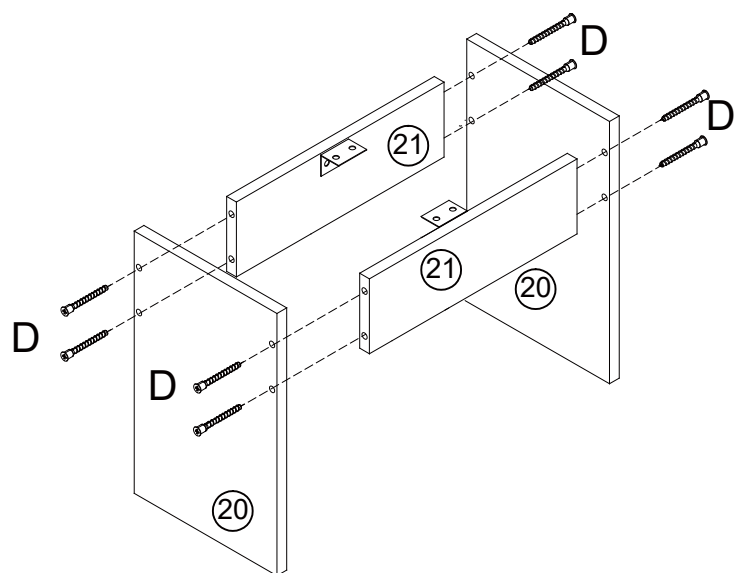

STEP 22

