


HW-AM557713




CUSTOMER MANUAL

-V2.0

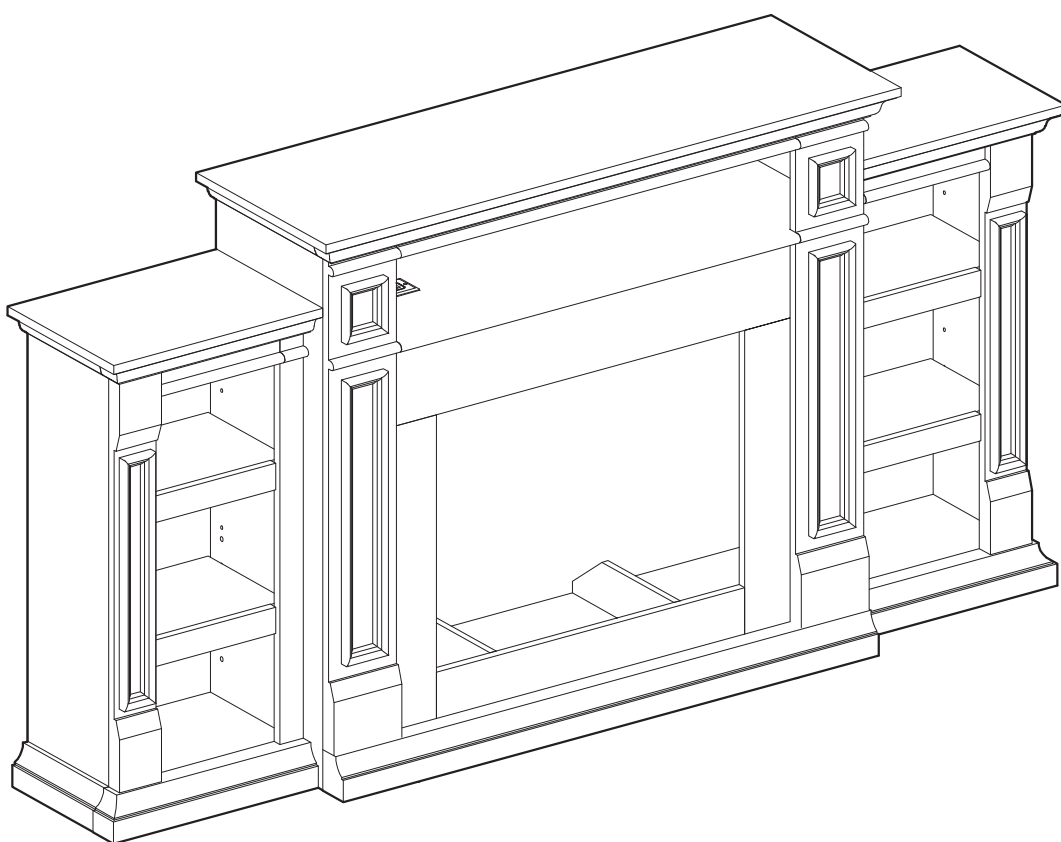


Contact us: Support@lghm.vip

ASSEMBLY STRUCTURE REFERENCE DIAGRAM

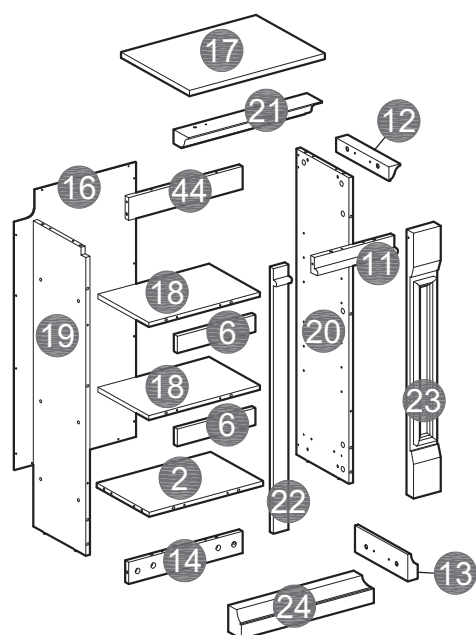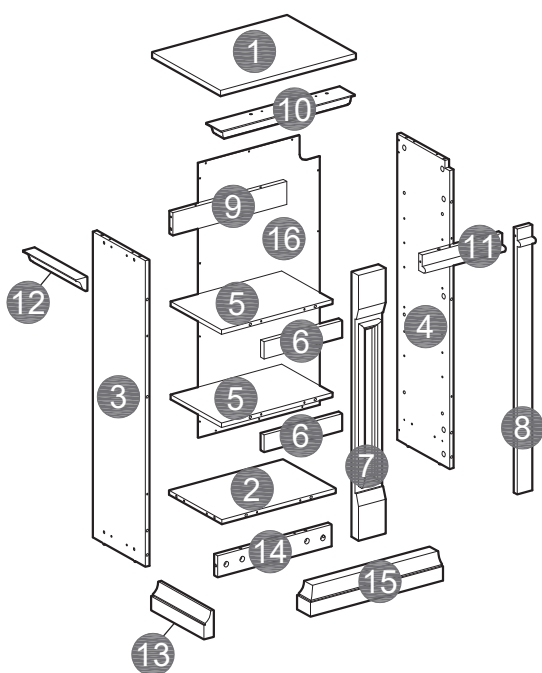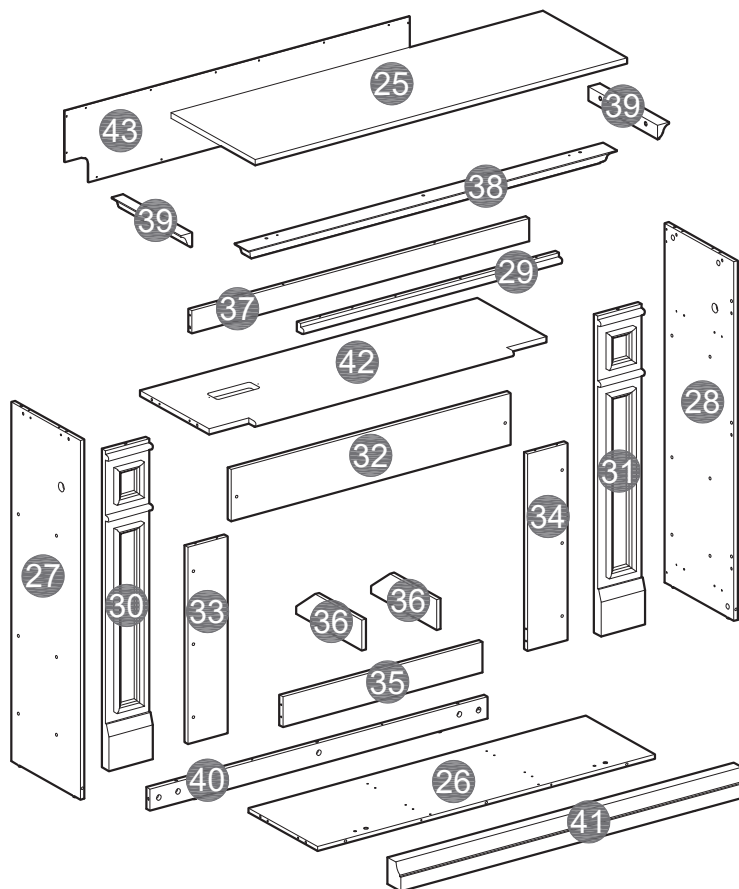


PARTS

A

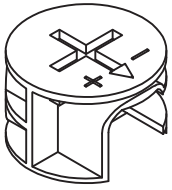

× 95+2

B



× 95+2

C



ø6×30mm
× 102+2

D



ø3×12×6mm
× 27+2

E




× 8

F




ø3×14mm
× 43+2

G




M6×12mm
× 22+2

H

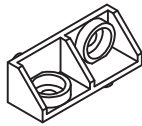

× 11

I




M6×25mm
× 20+2

J




M6×20mm
× 12+1

K




× 12+1

L

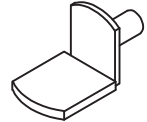

× 16+2

M



M6×40mm
× 7

N



ø6×20mm
× 8+1

O



× 2

P



× 2

Q



ø4×35mm
× 6


R



M4

× 1

S




× 1

T



ø3×12×6mm
× 2


U

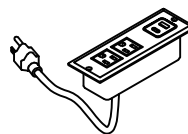



× 1

PARTS


Y

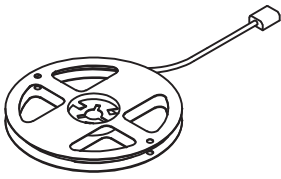



Y1

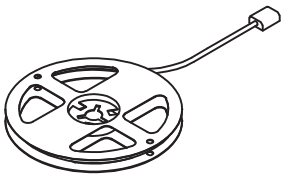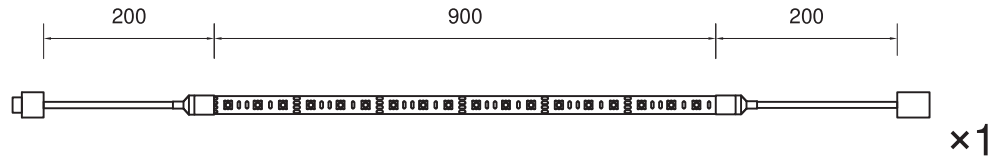


Y2

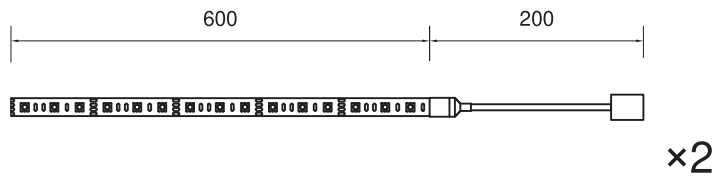

Y3




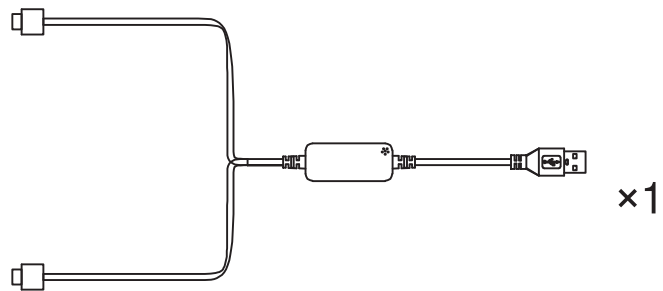


Y4
× 11+1

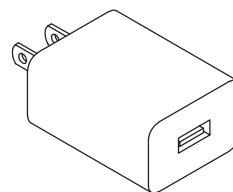


Y5
× 1

The hardware quantities listed above are required for proper assembly. Some extra hardware may also have been included.

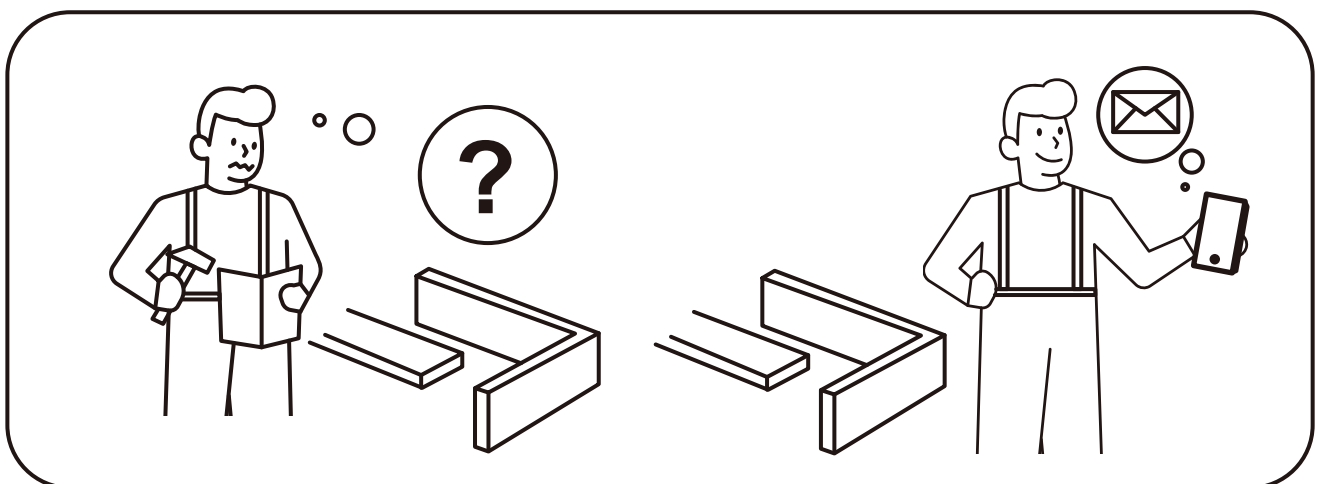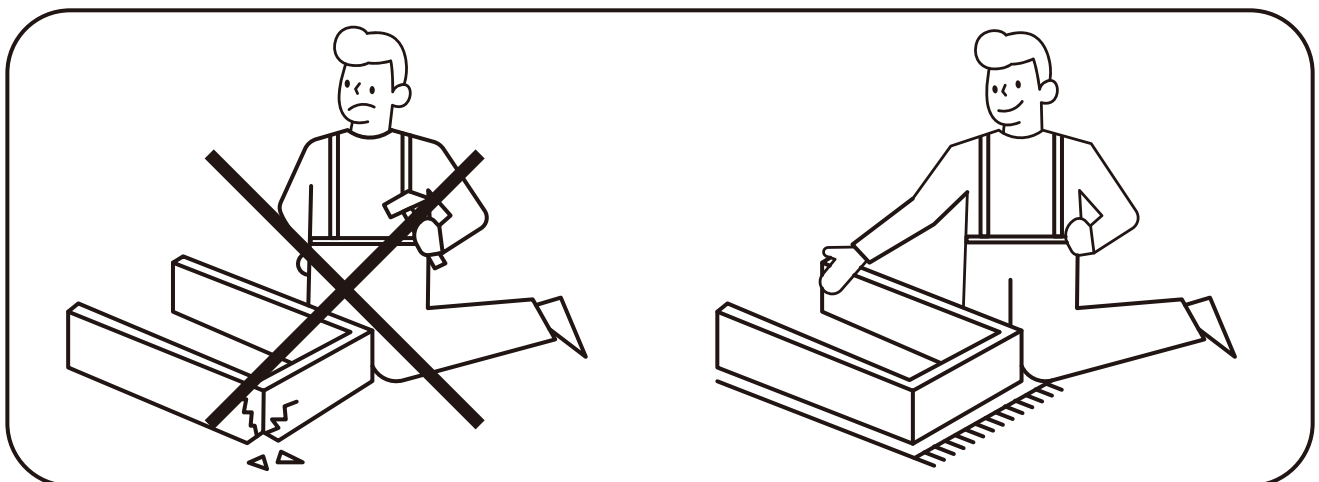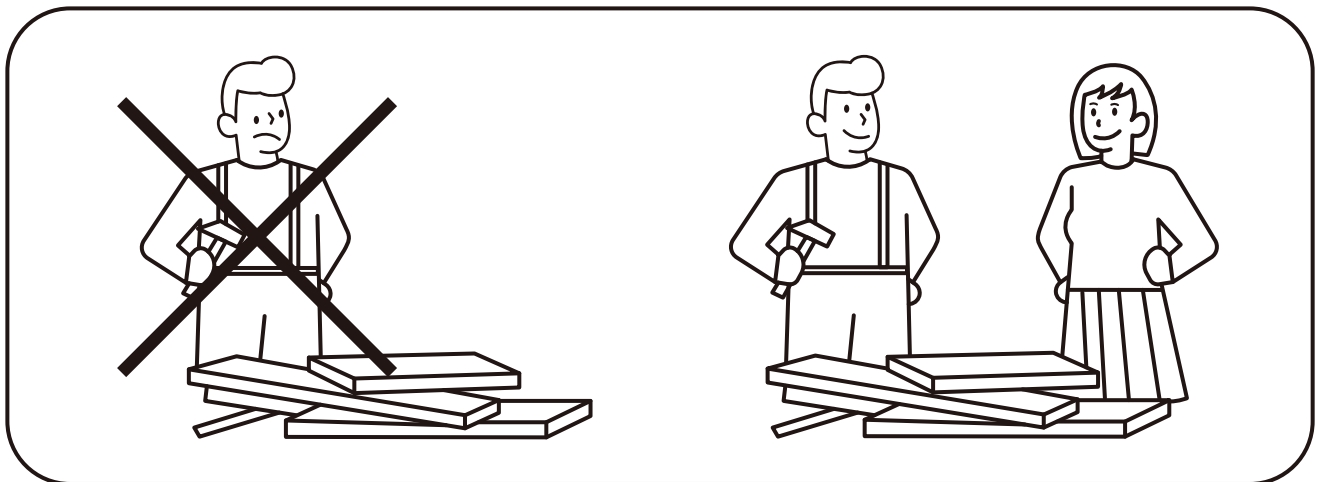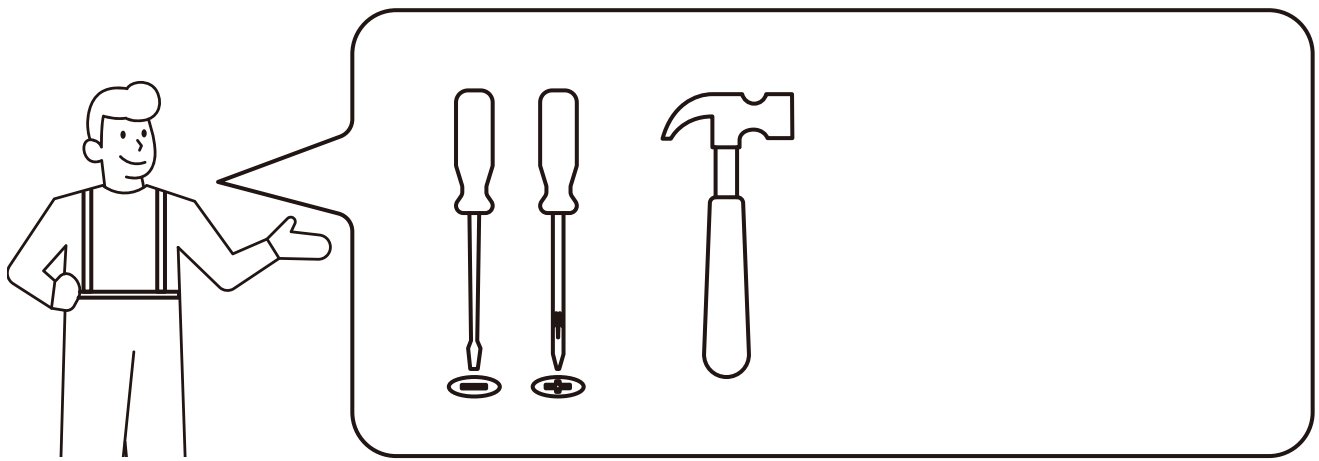


How to work the Knock Down (kd) assembly system

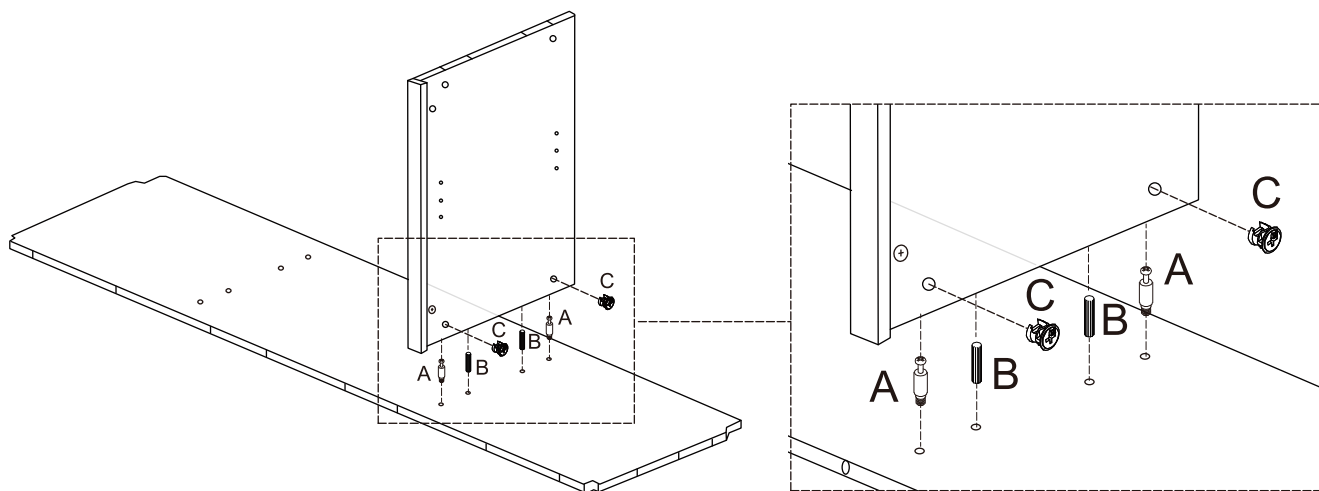


How to install Wood Dowel


Insert the wood dowel [B] at least half way by tapping lightly with a rubber mallet, IF NECESSARY.

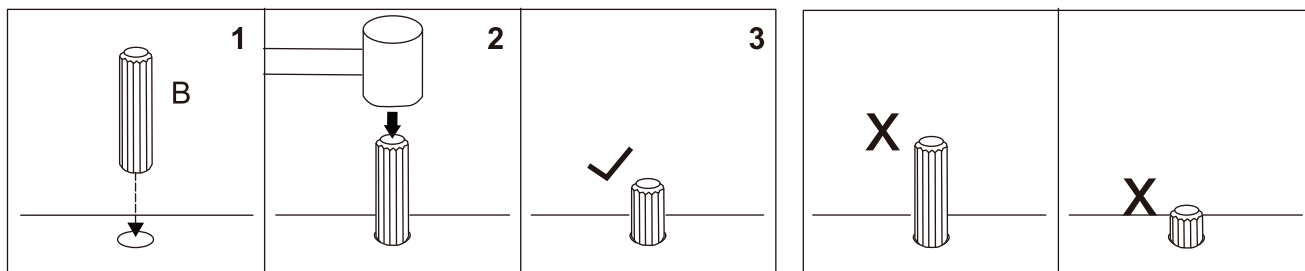

How to use the Cam Lock system

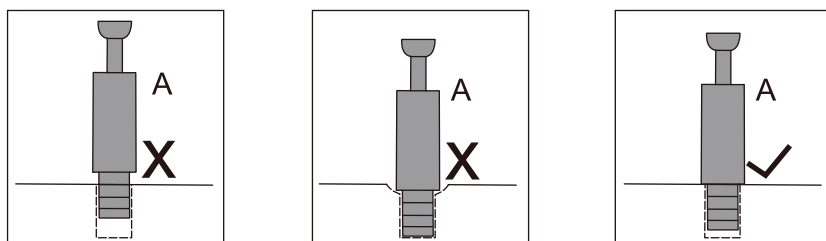



1. Screw the cam bolt [A] into the threaded insert on the panel.
2. Connect both panels together making sure cam bolt [A] goes into the pre-drilled large hole on the end of panel for cam lock [C].
3. Insert the cam lock [C] into the pre-drilled large hole on the panel. **Make sure the cross slot of cam lock [C] faces out.**
4. Rotate the cam lock [C] **clockwise** with a self-supplied philips screwdriver to lock the cam bolt [A] in place.

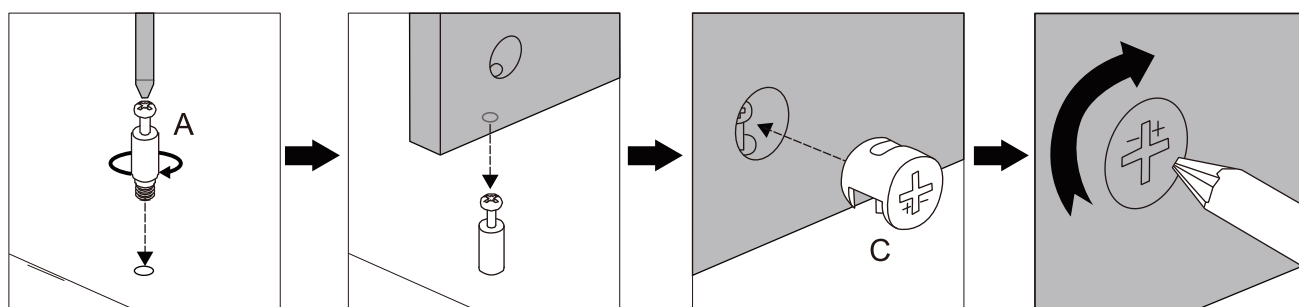

Now you are ready to assemble the electric fireplace mantel


It divided in to three parts in total:

- 1. Install the center part**
- 2. Install the left part**
- 3. Install the right part**

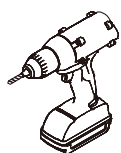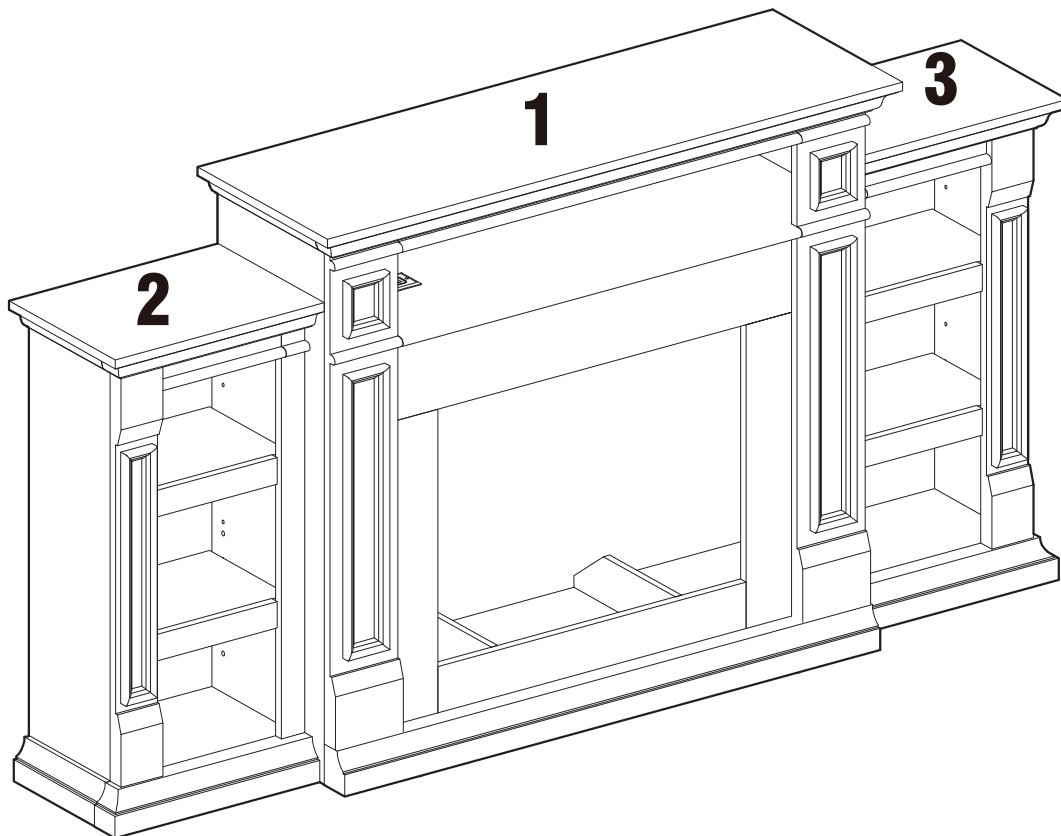


We recommend using a power drill to assemble.


Step 1

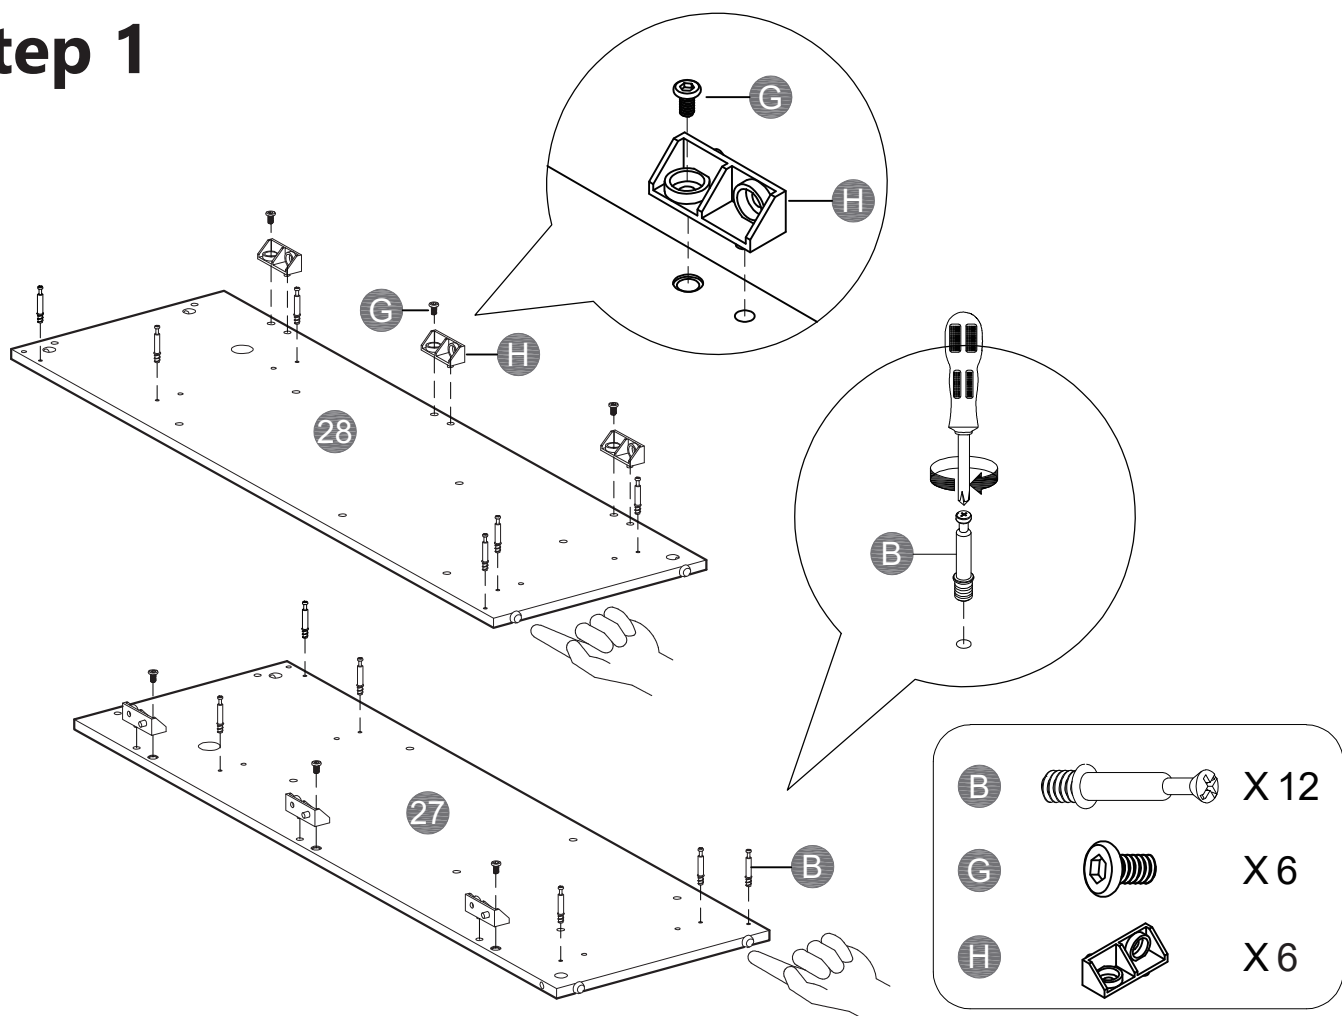

Step 2

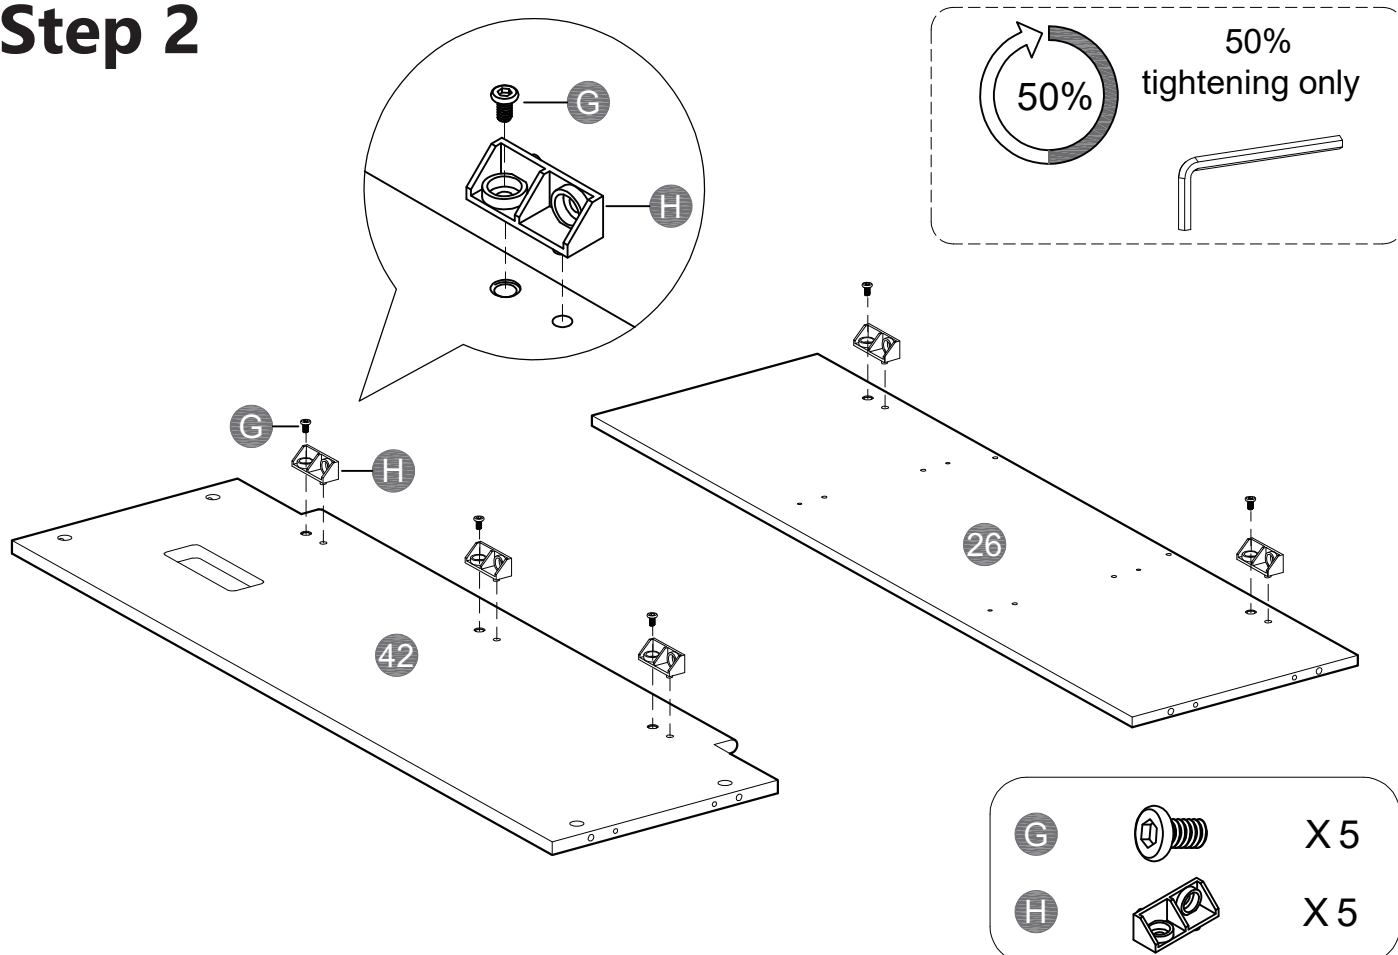


Step 3

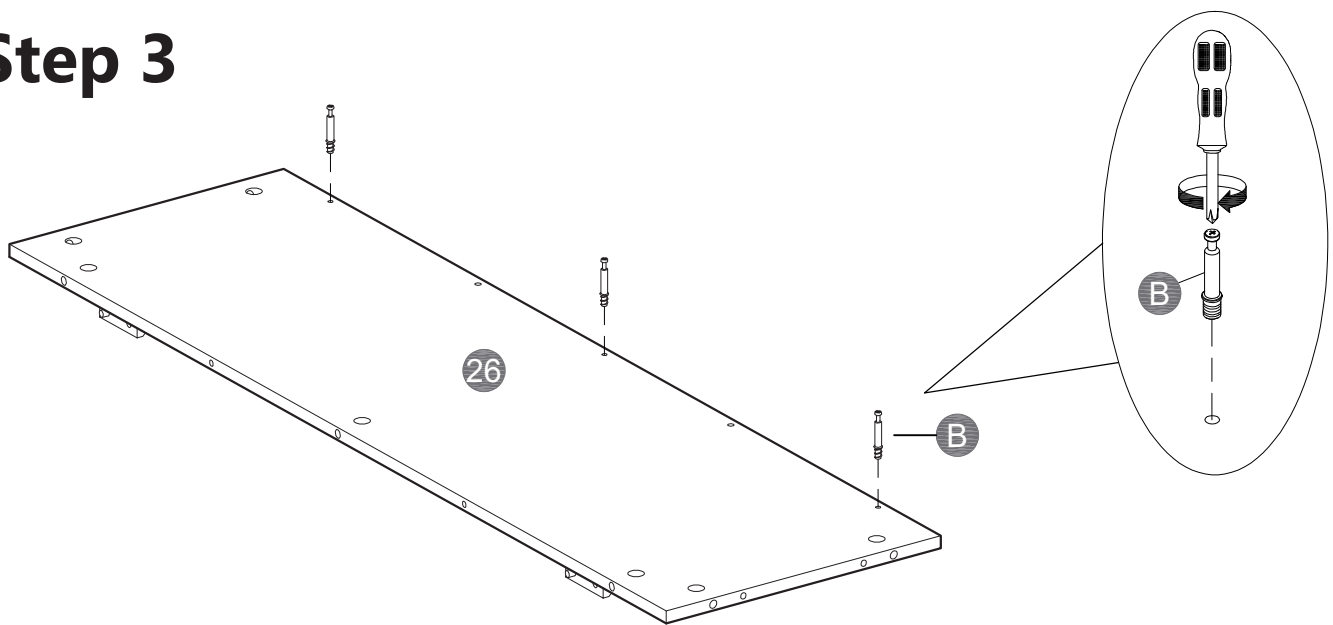


B  X 3

Step 4


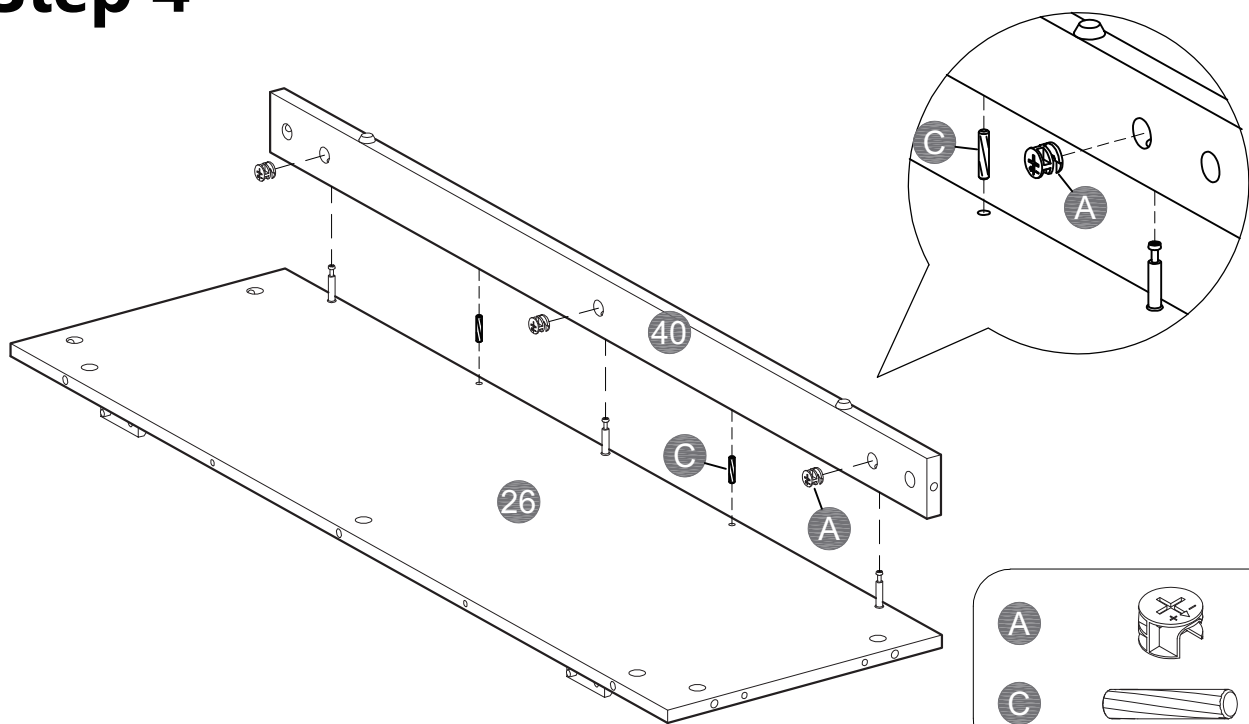


A  X 3


C  X 2

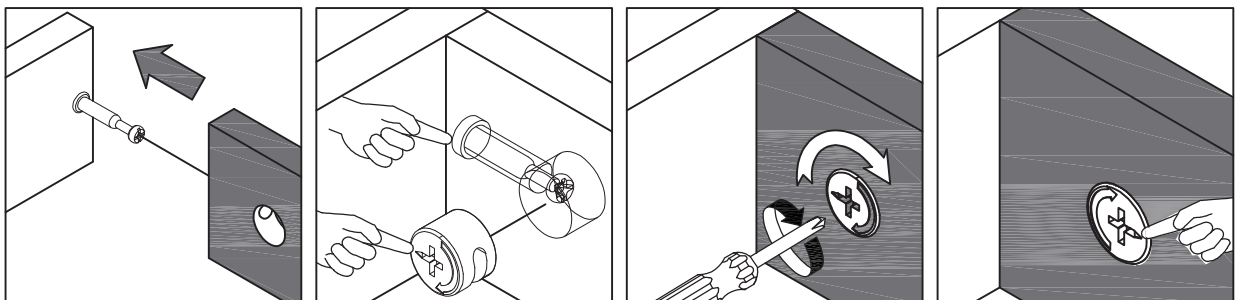


Step 5

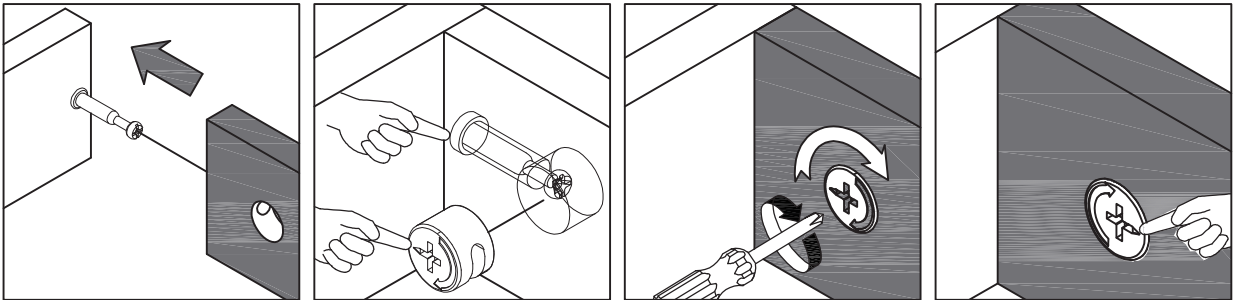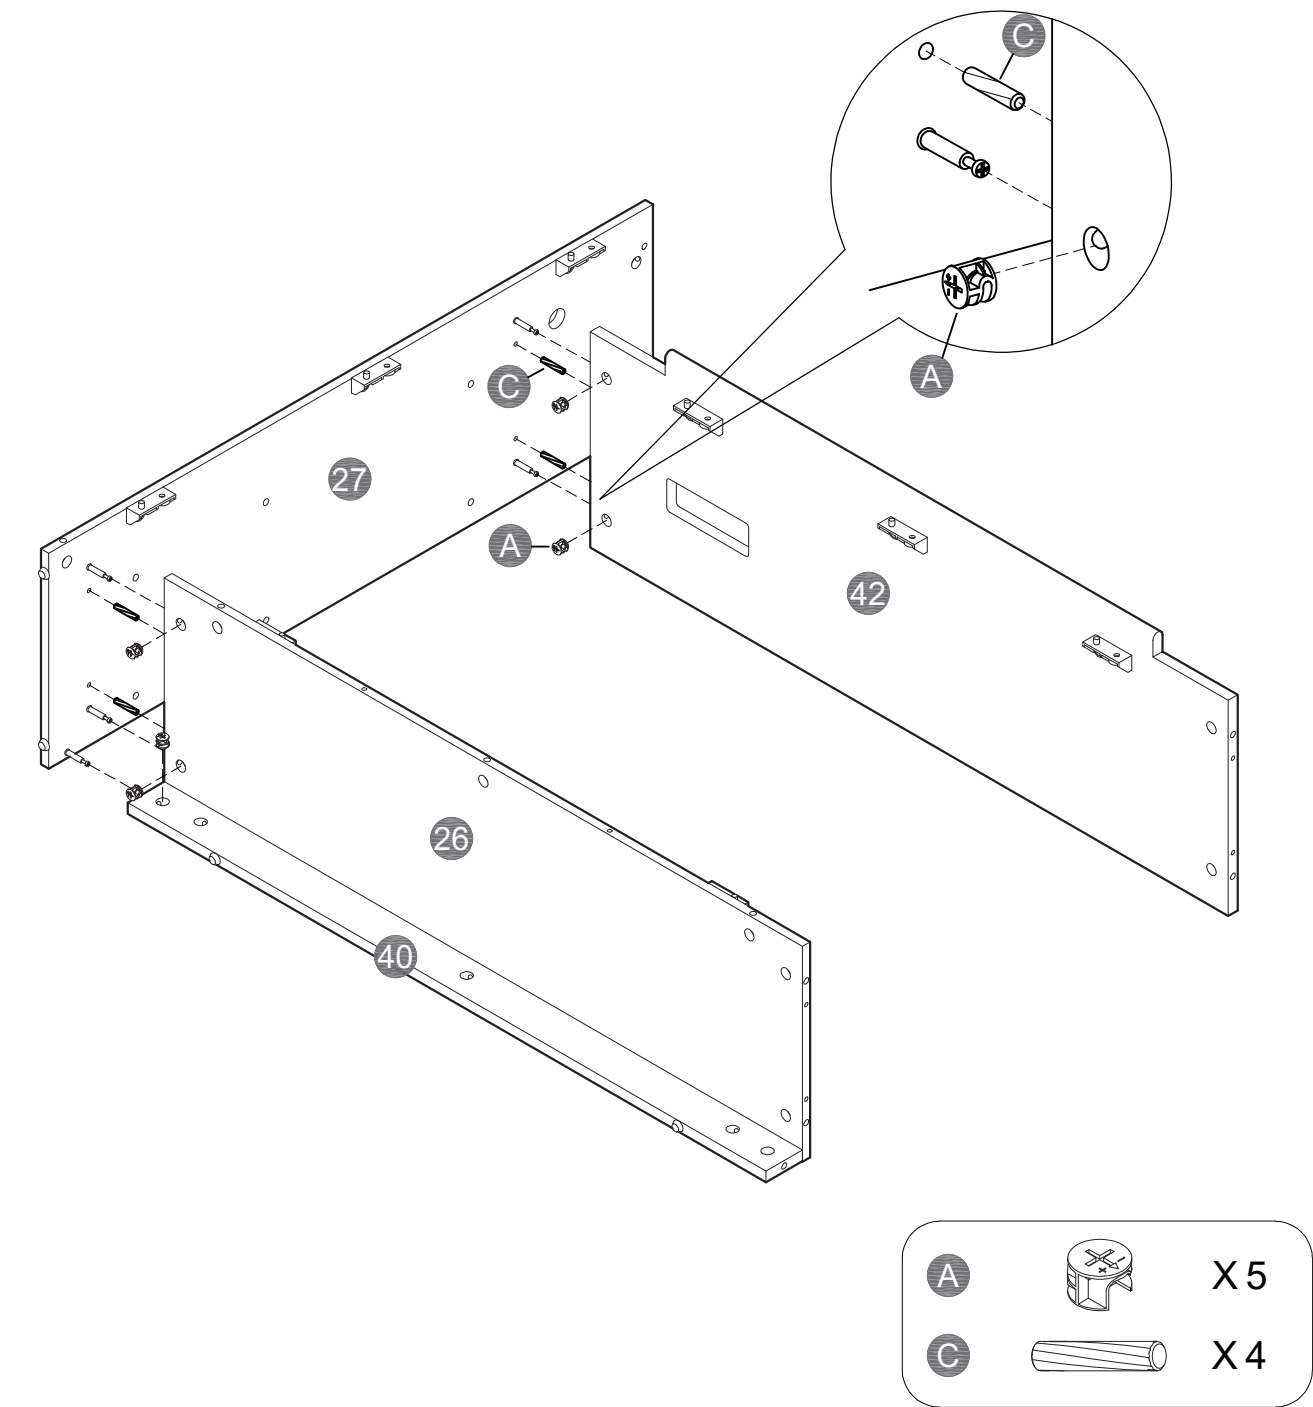


Step 6

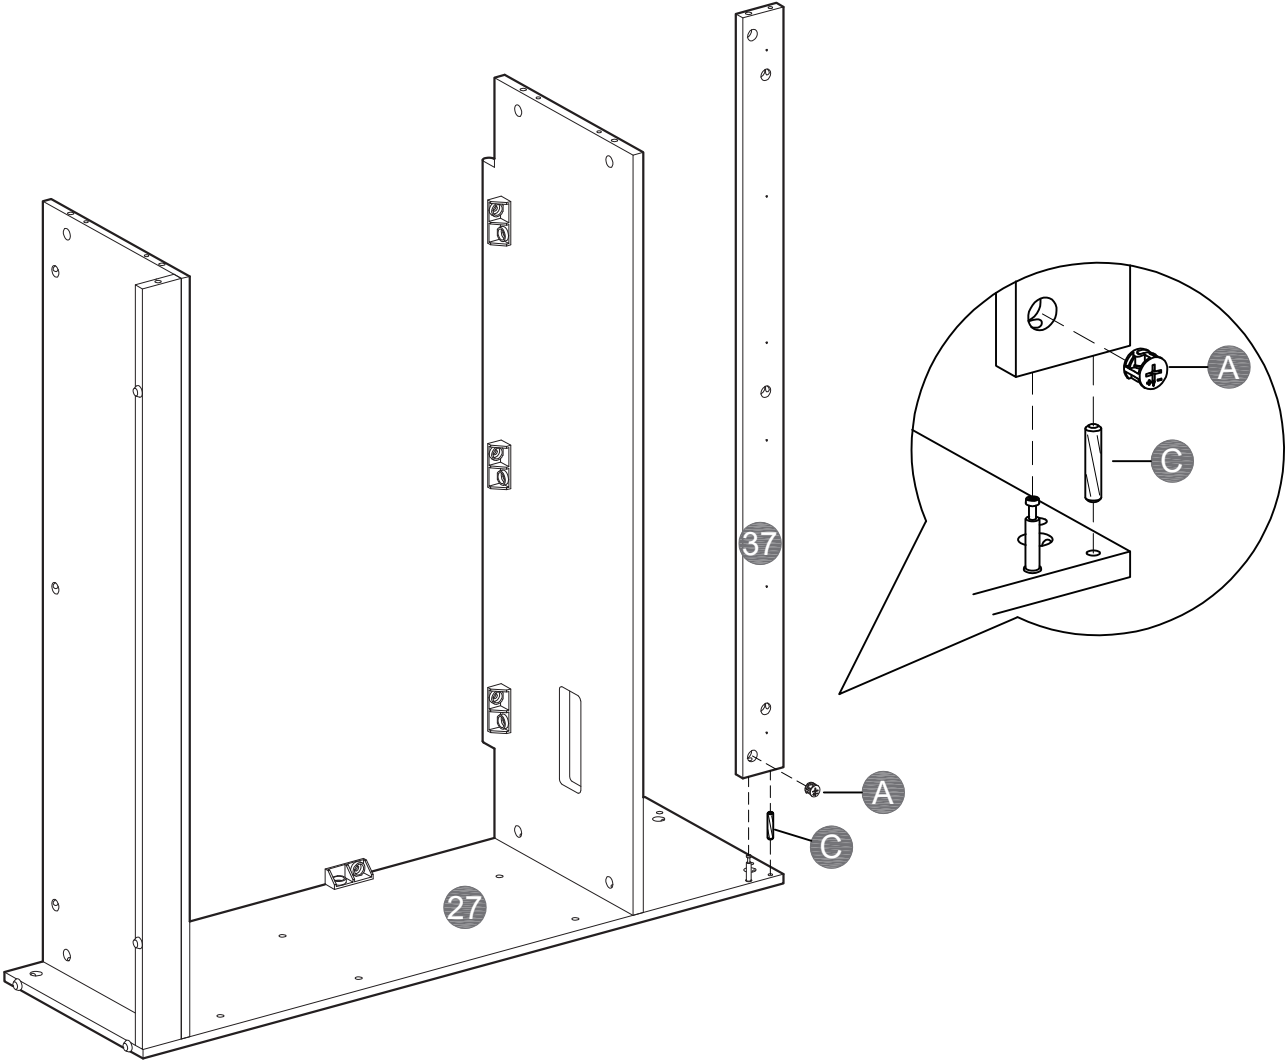


A		X 1
C		X 1

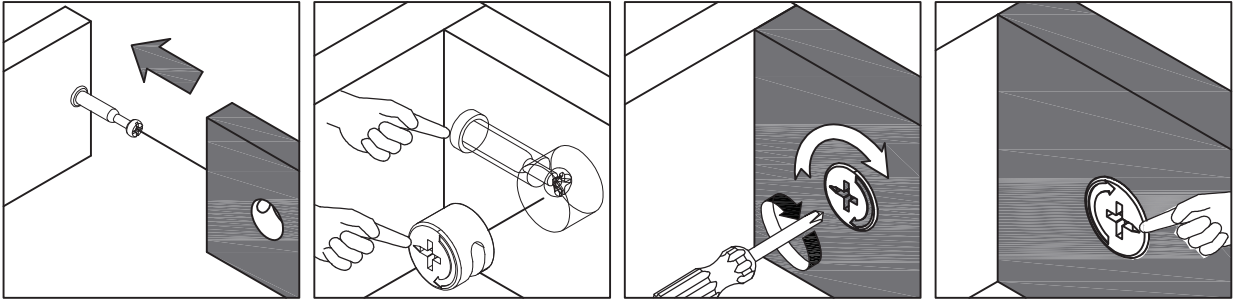


Step 7

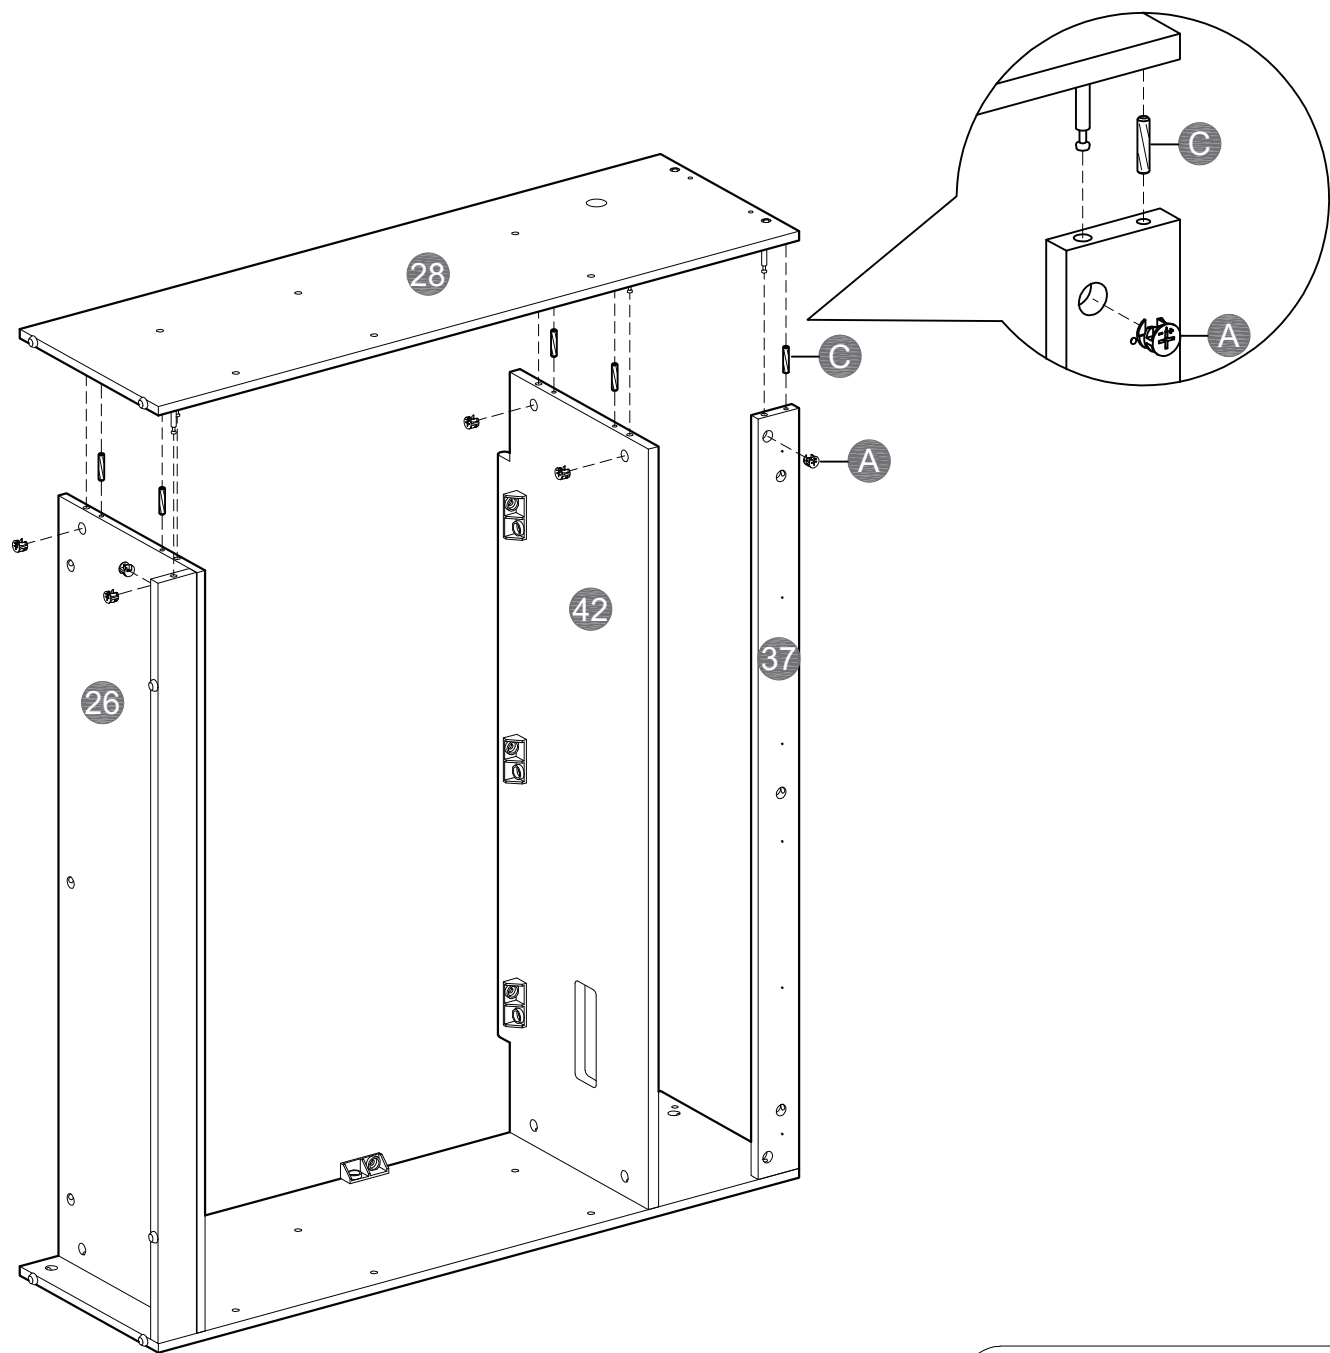

- | | | |
|---|---|----|
| A |  | X6 |
| C |  | X5 |

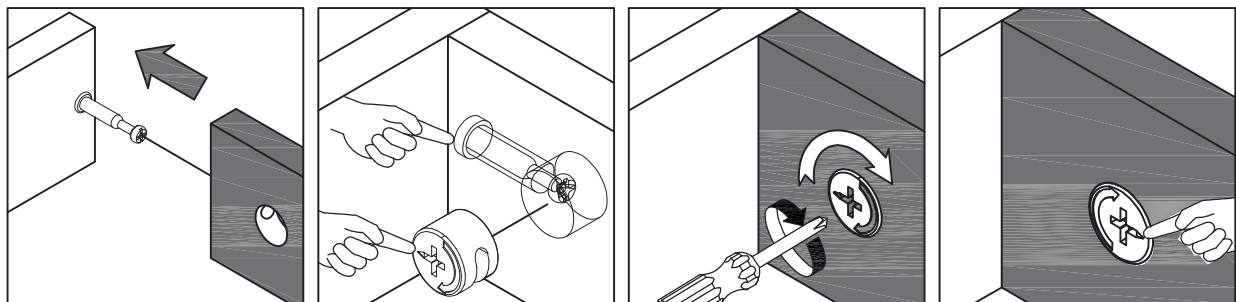


Step 8

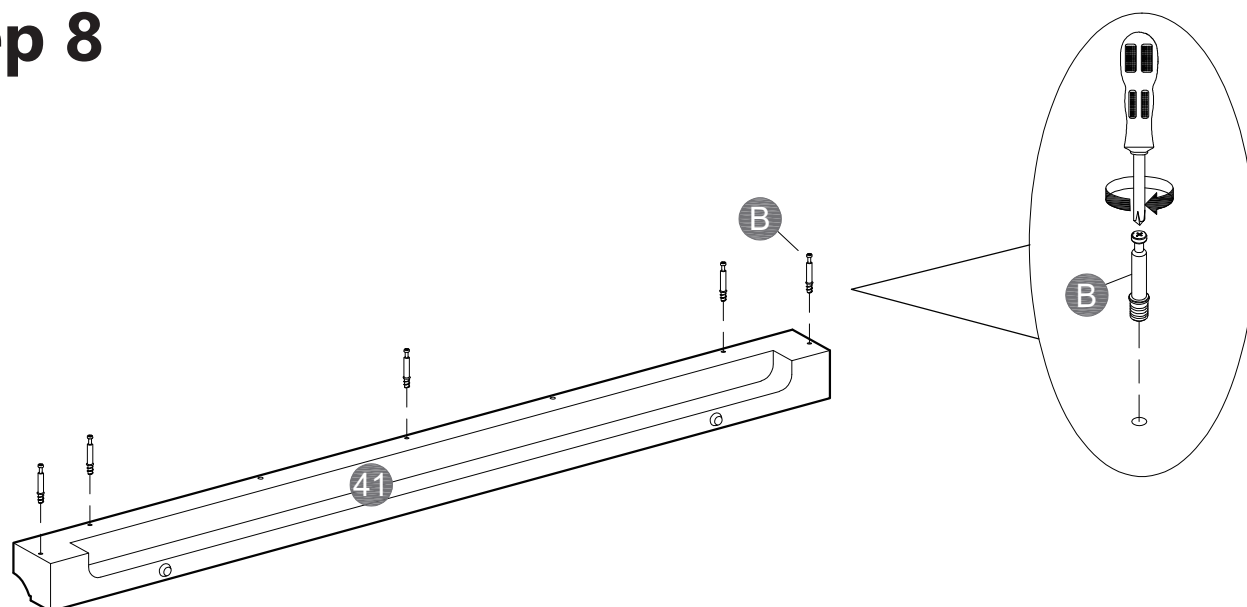





B  X5

Step 9

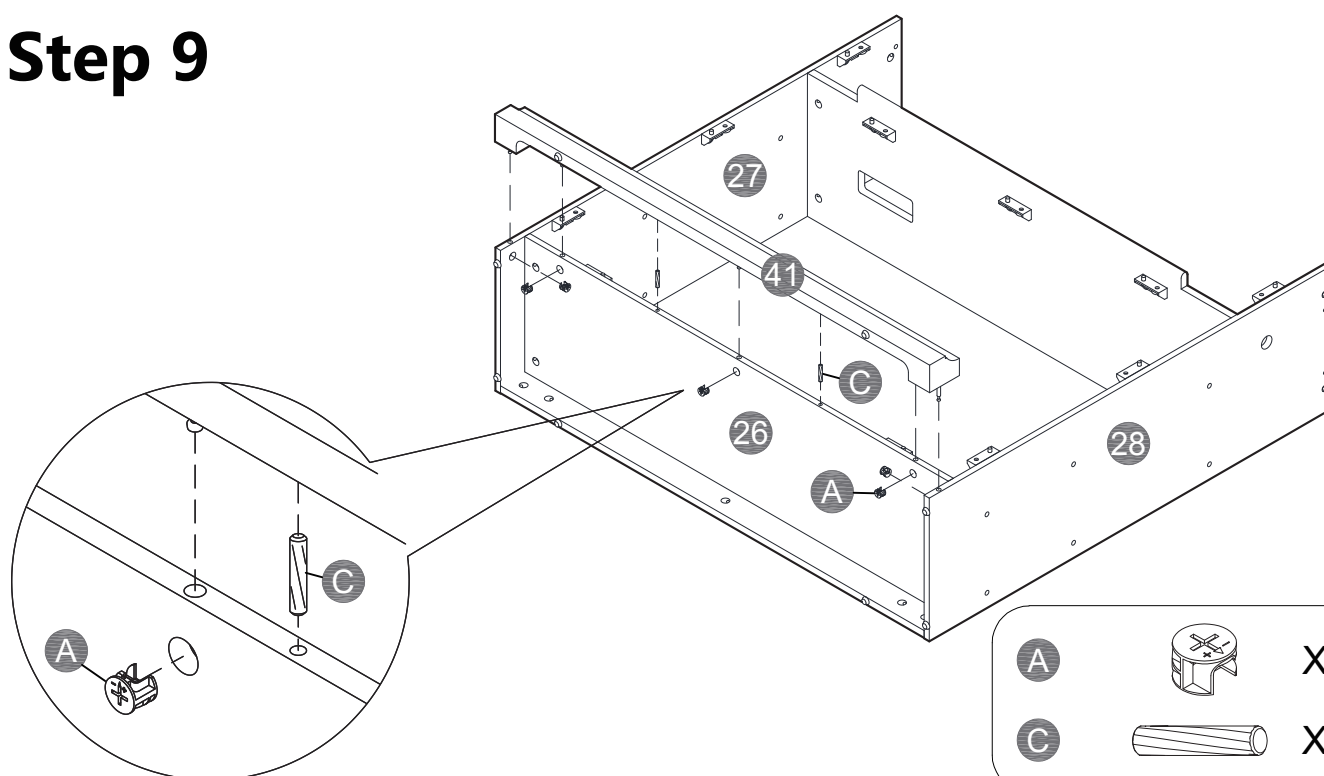


A  X5


C  X2

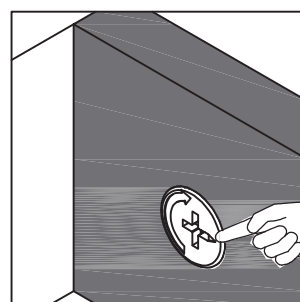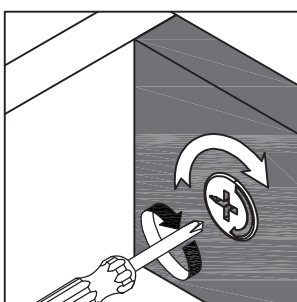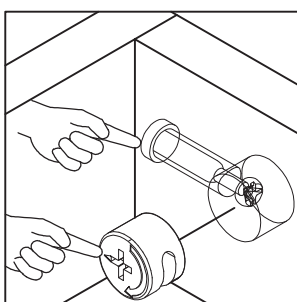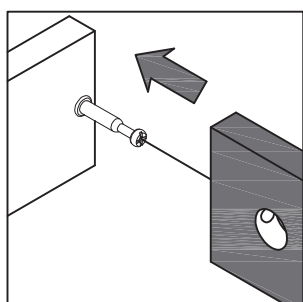


Step 10

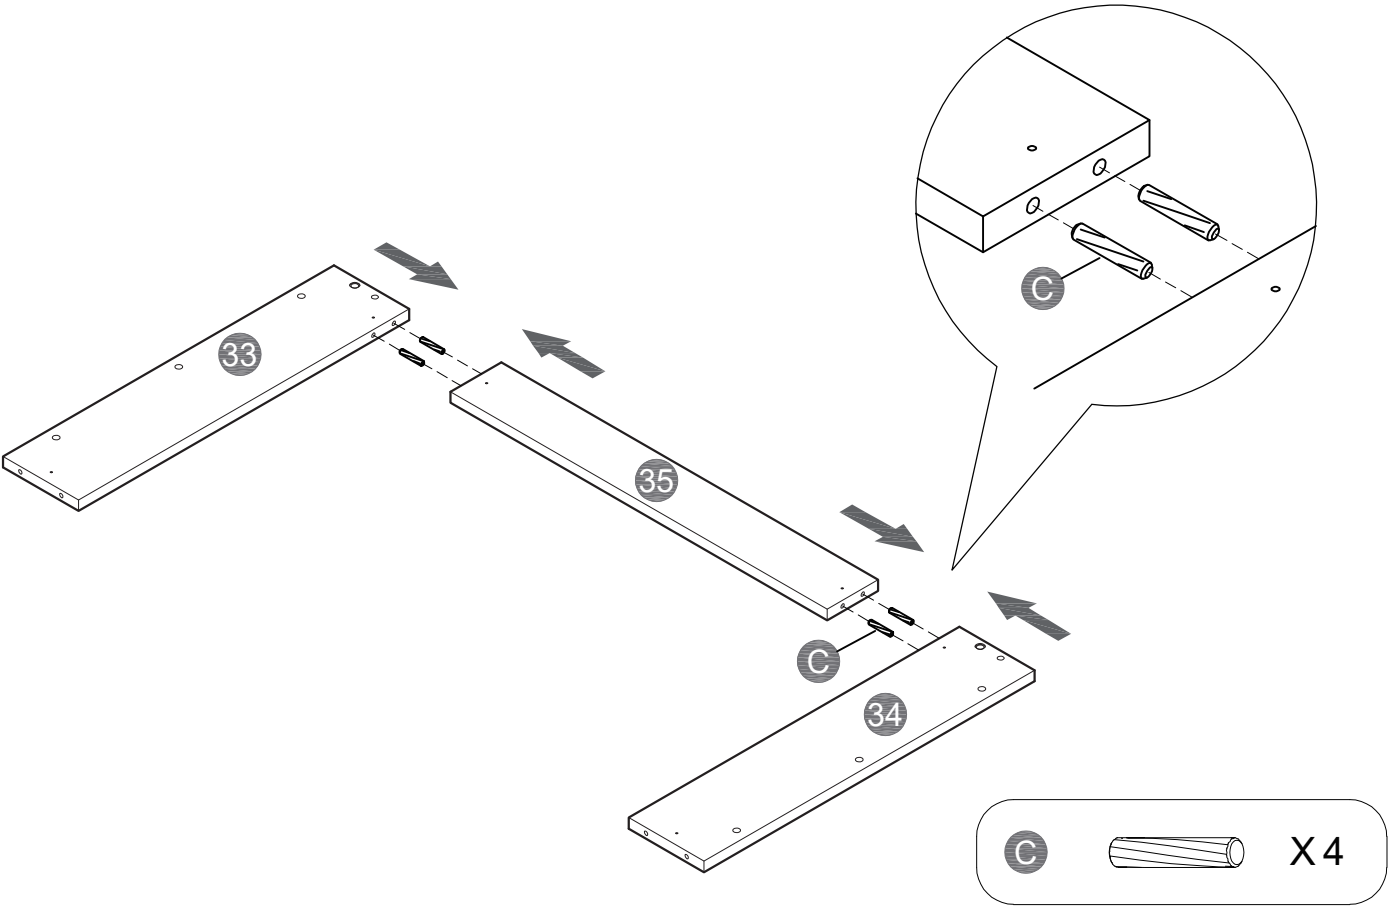


Step 11

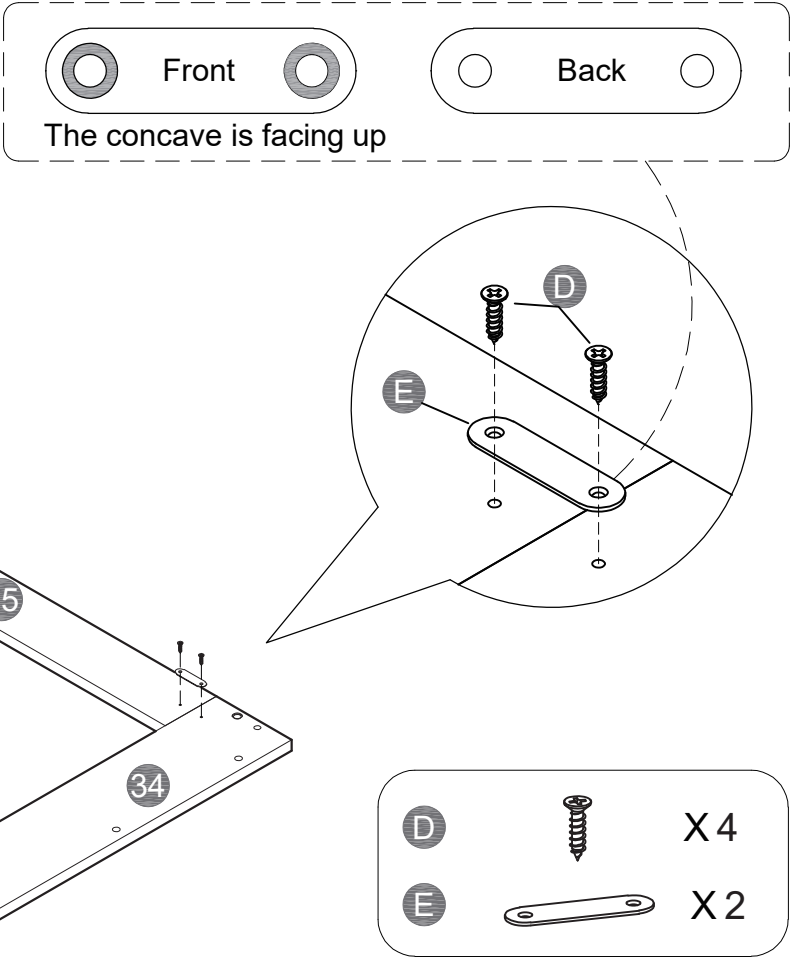


Step 12

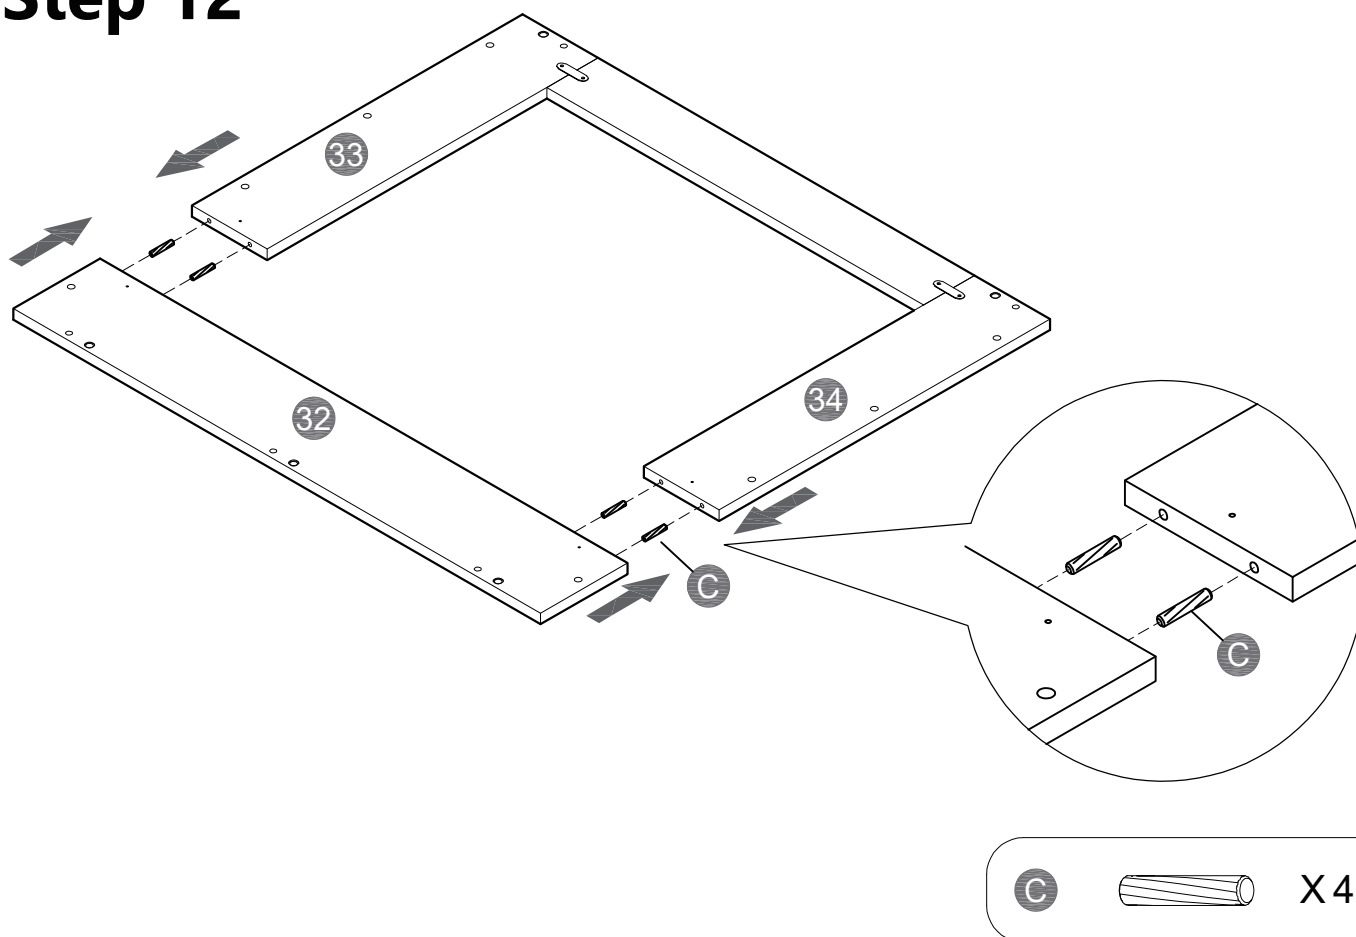


Step 13

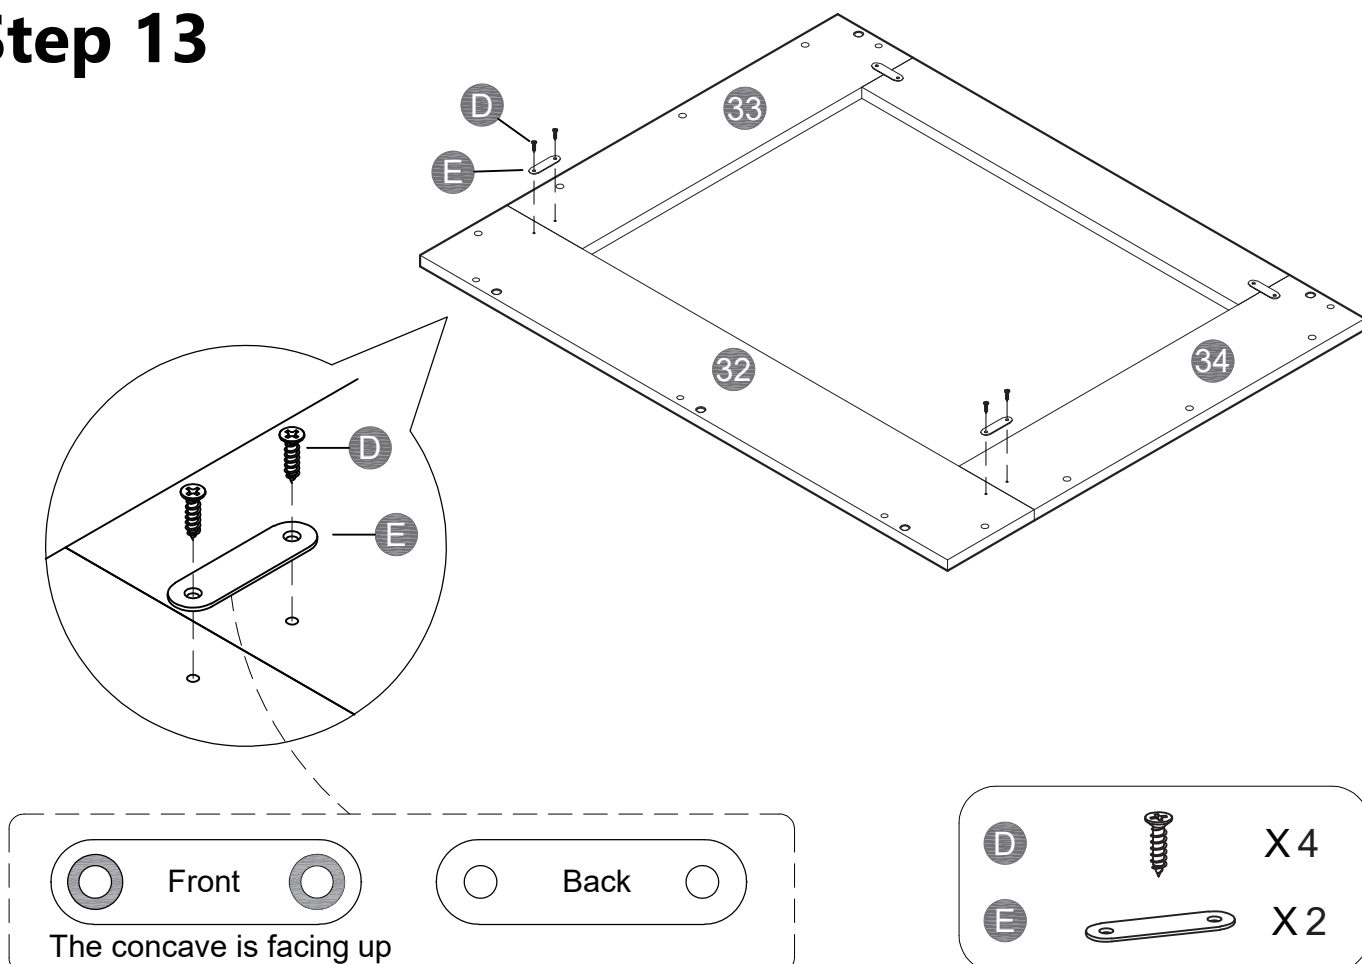





Step 14

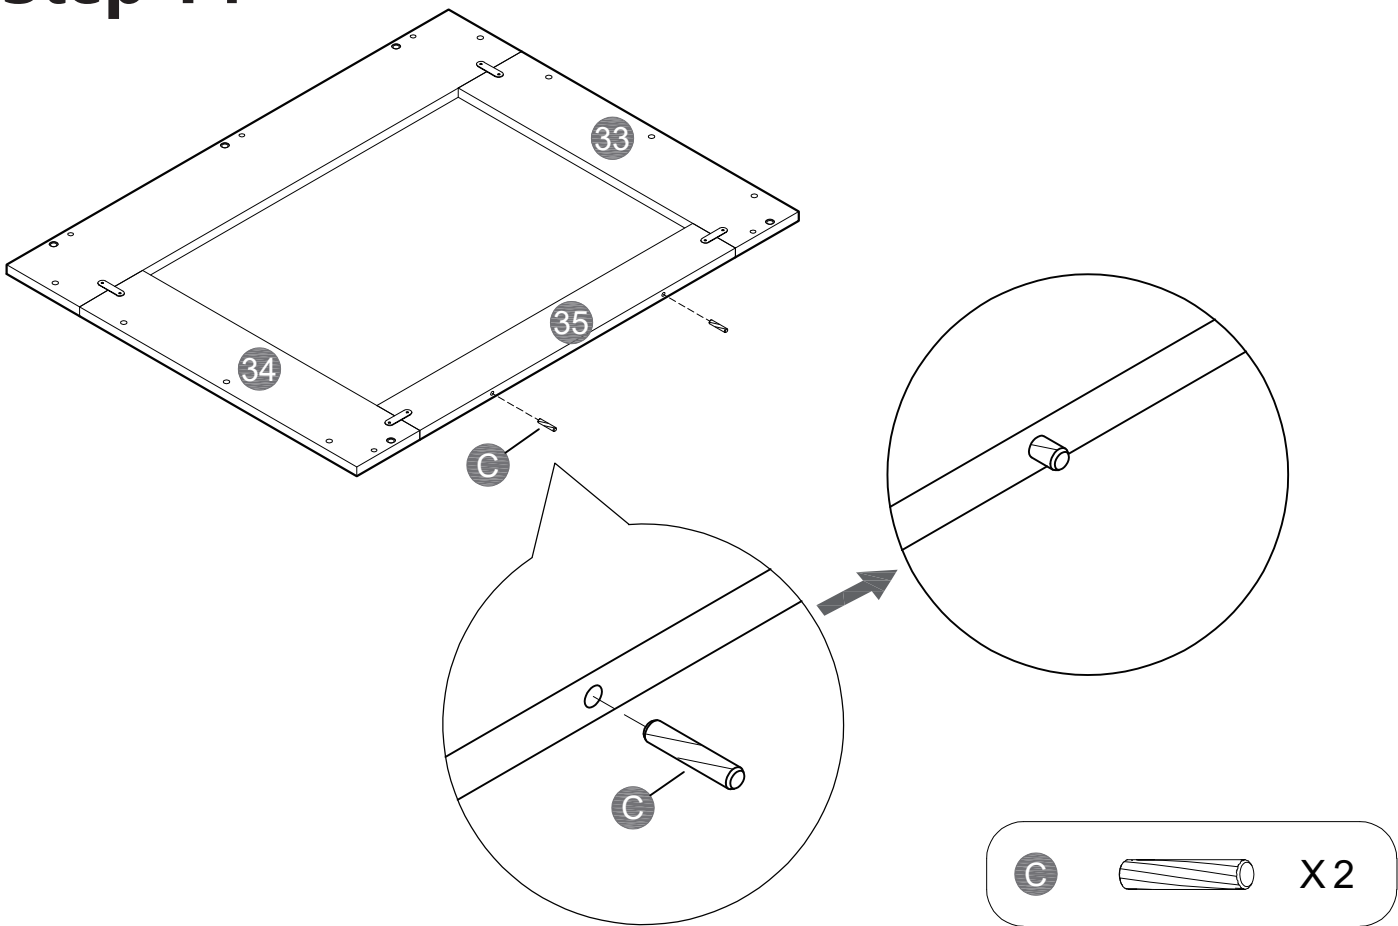





Step 15

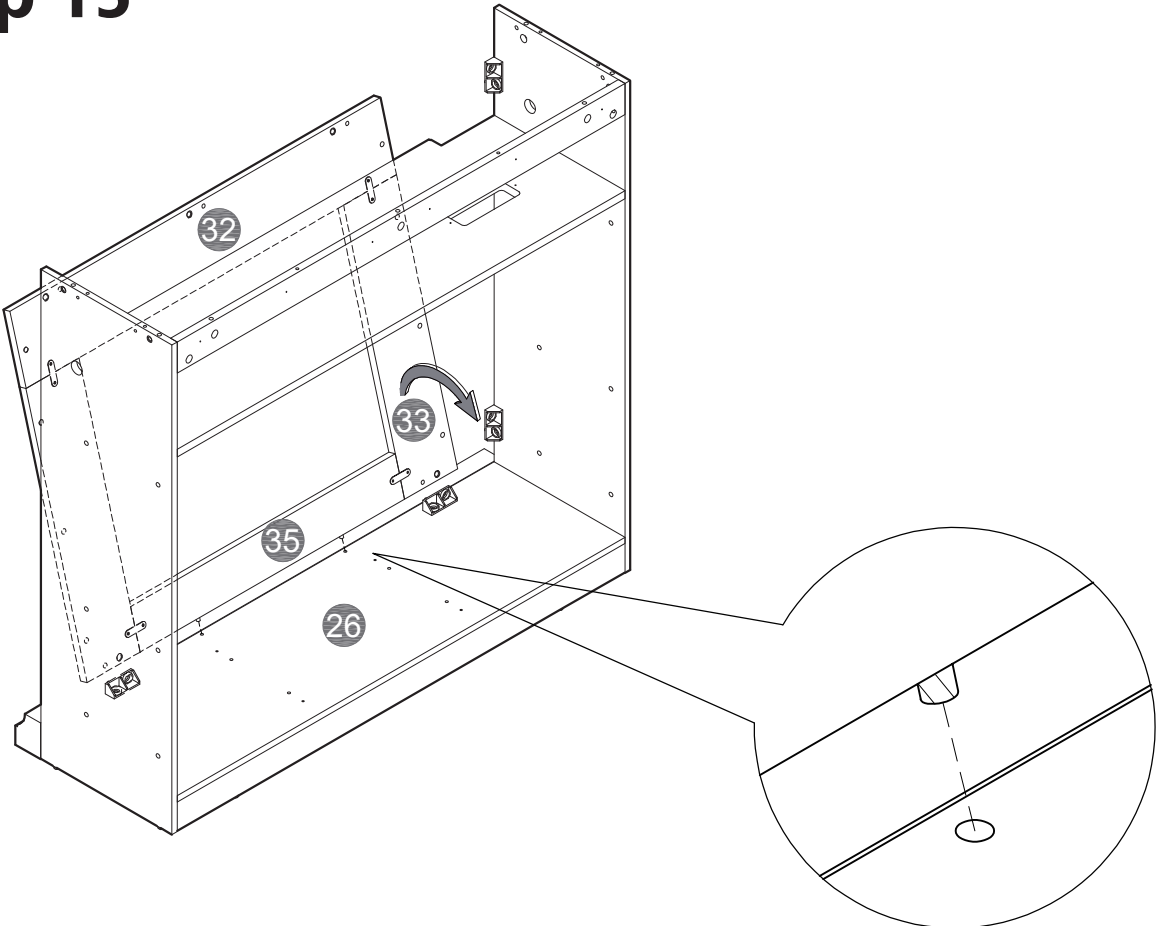


Step 16

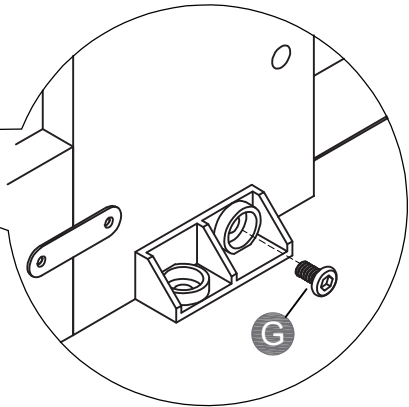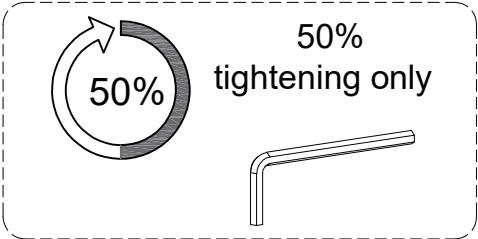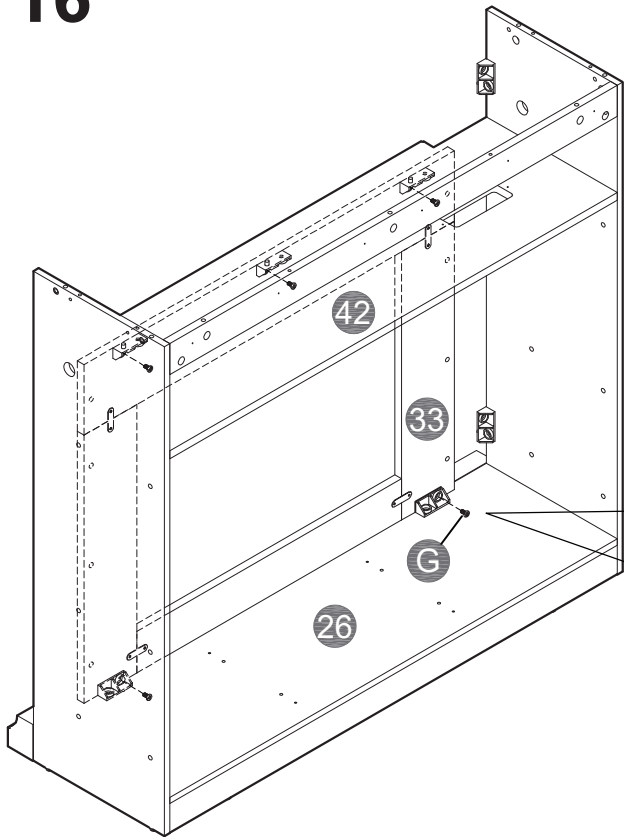


Step 17

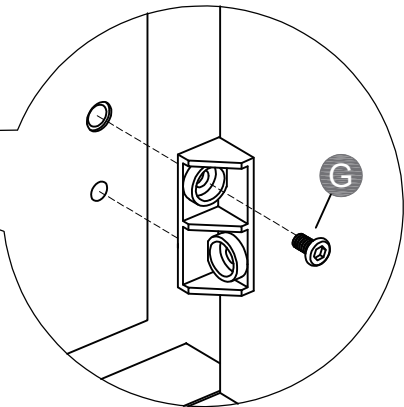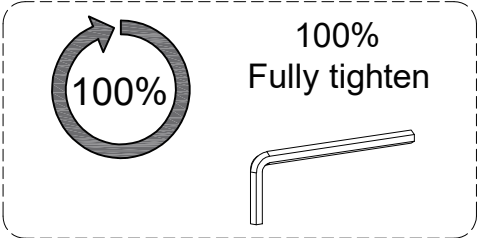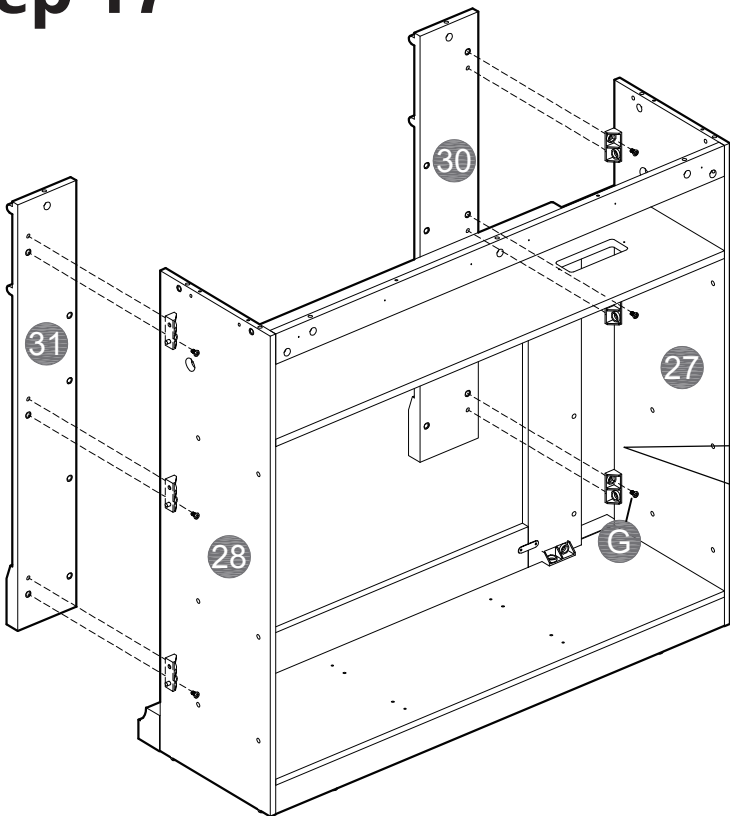








Step 18

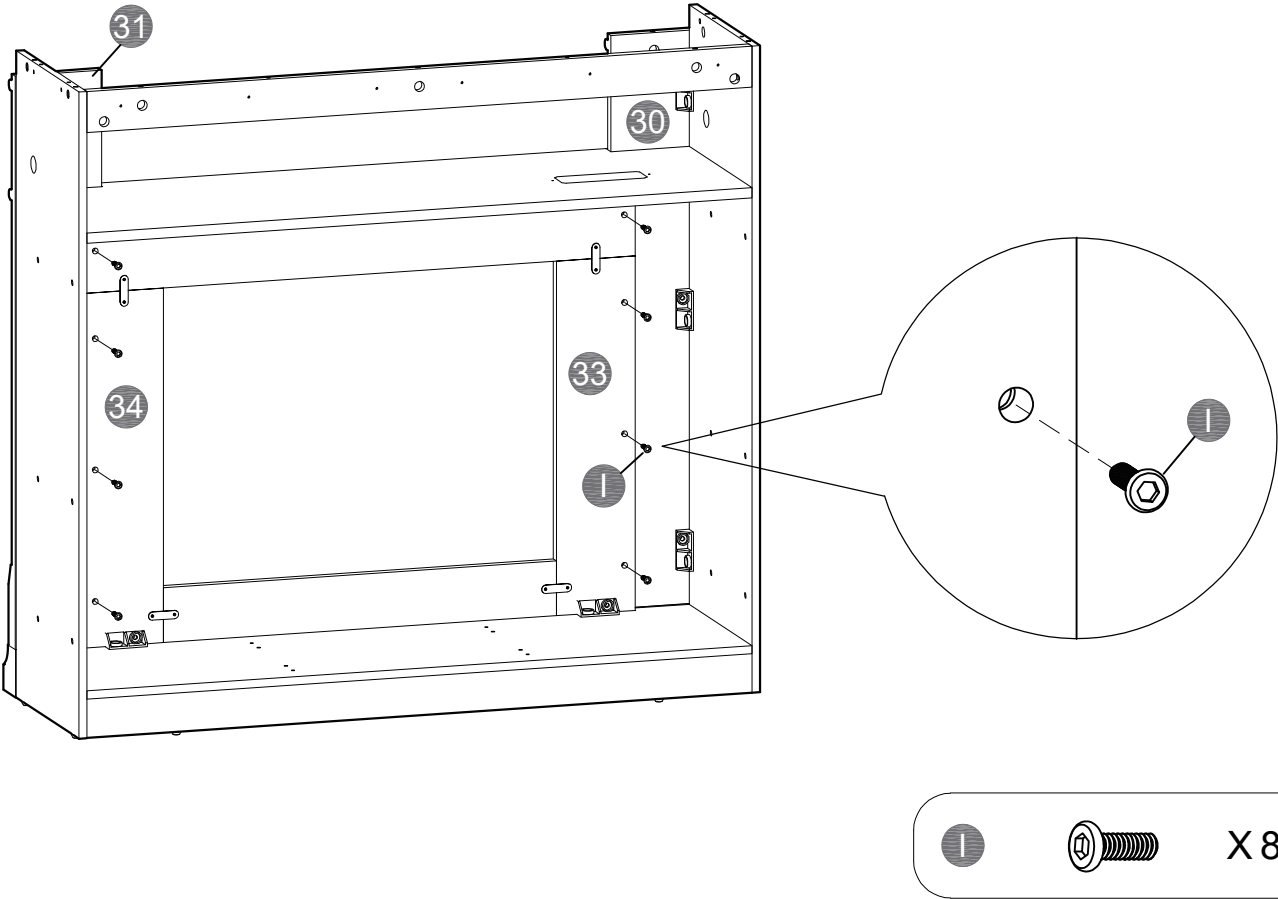




Step 19

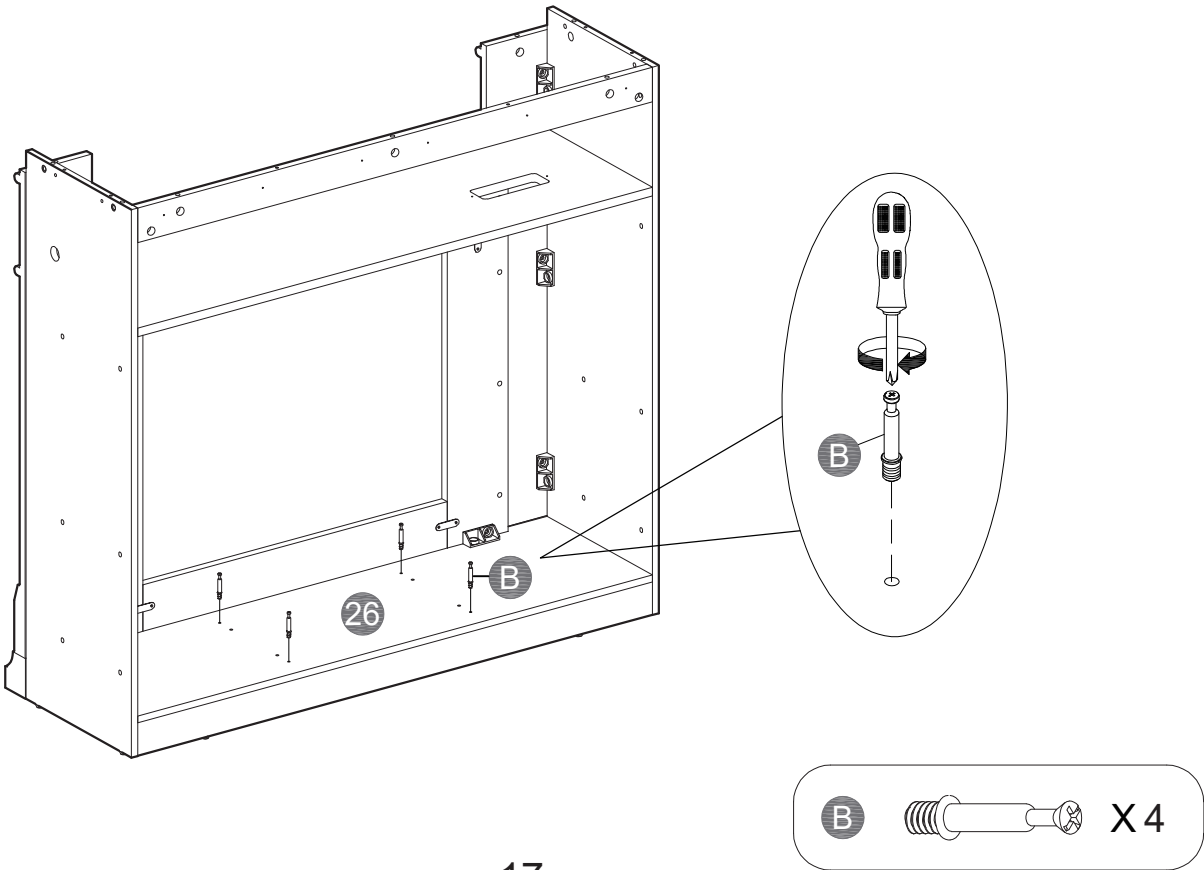


Step 20

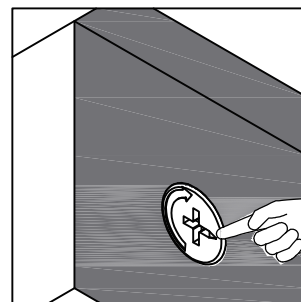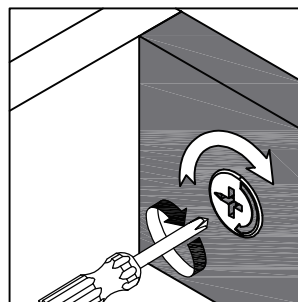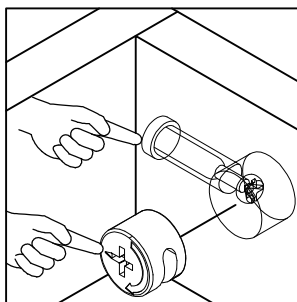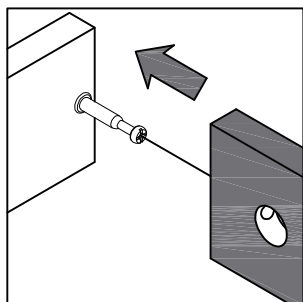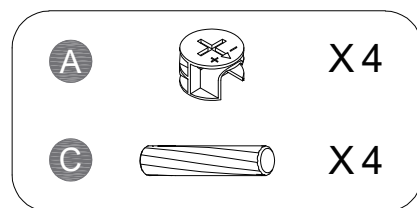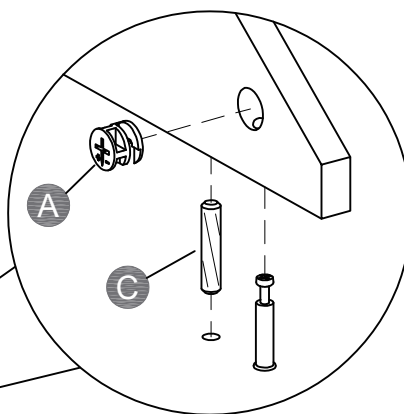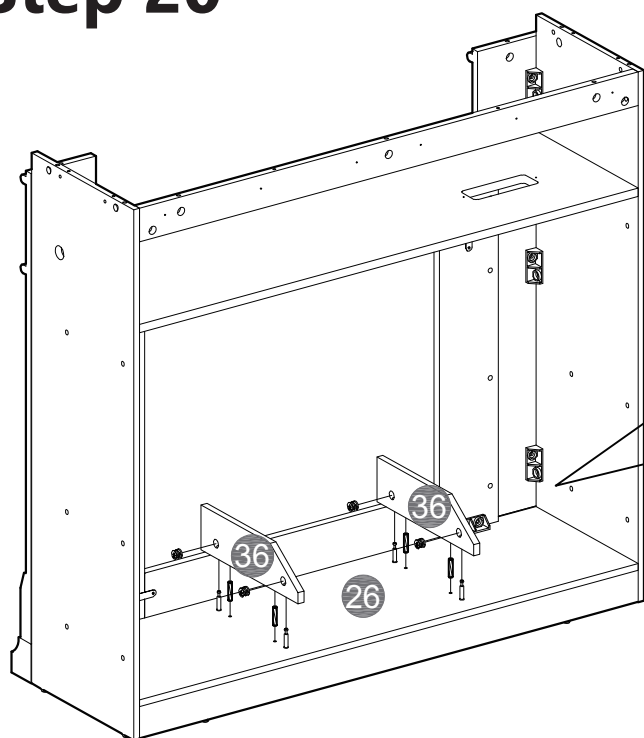


Step 21

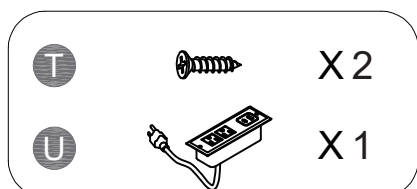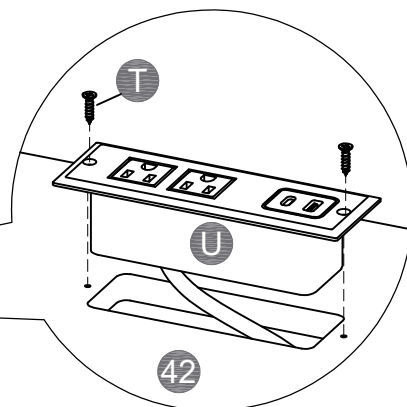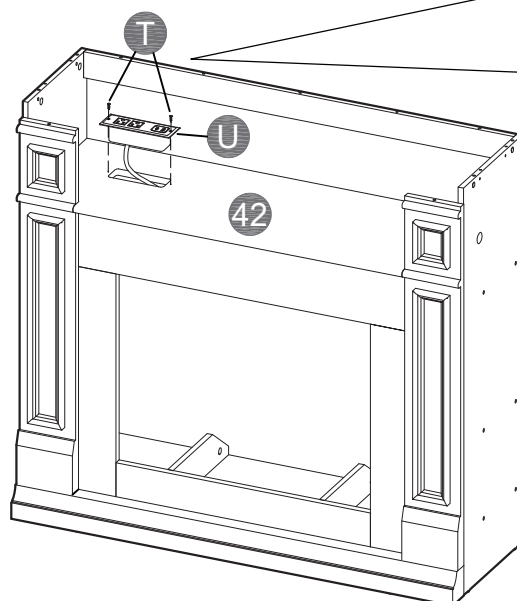


Step 22

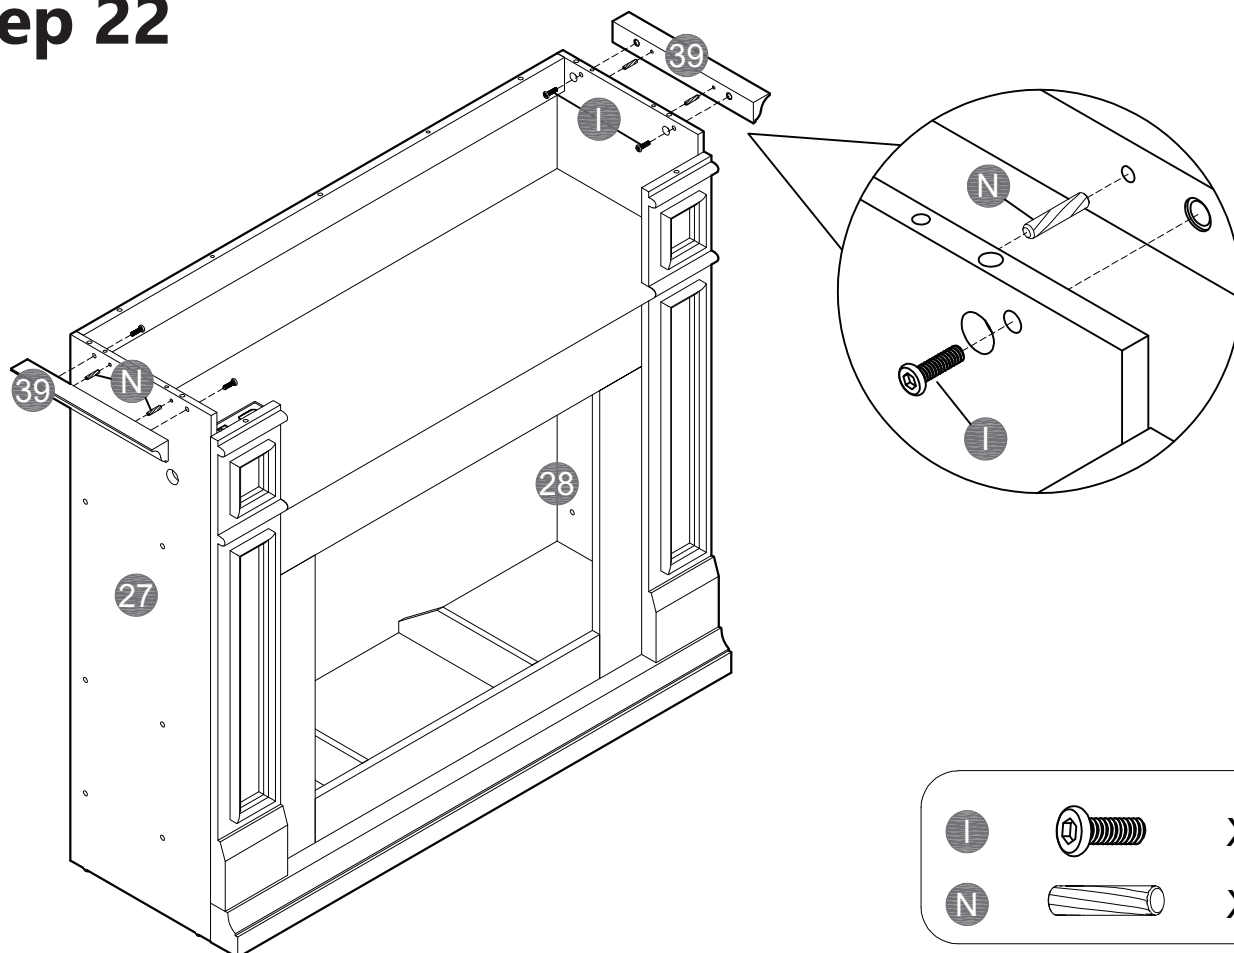


Step 23

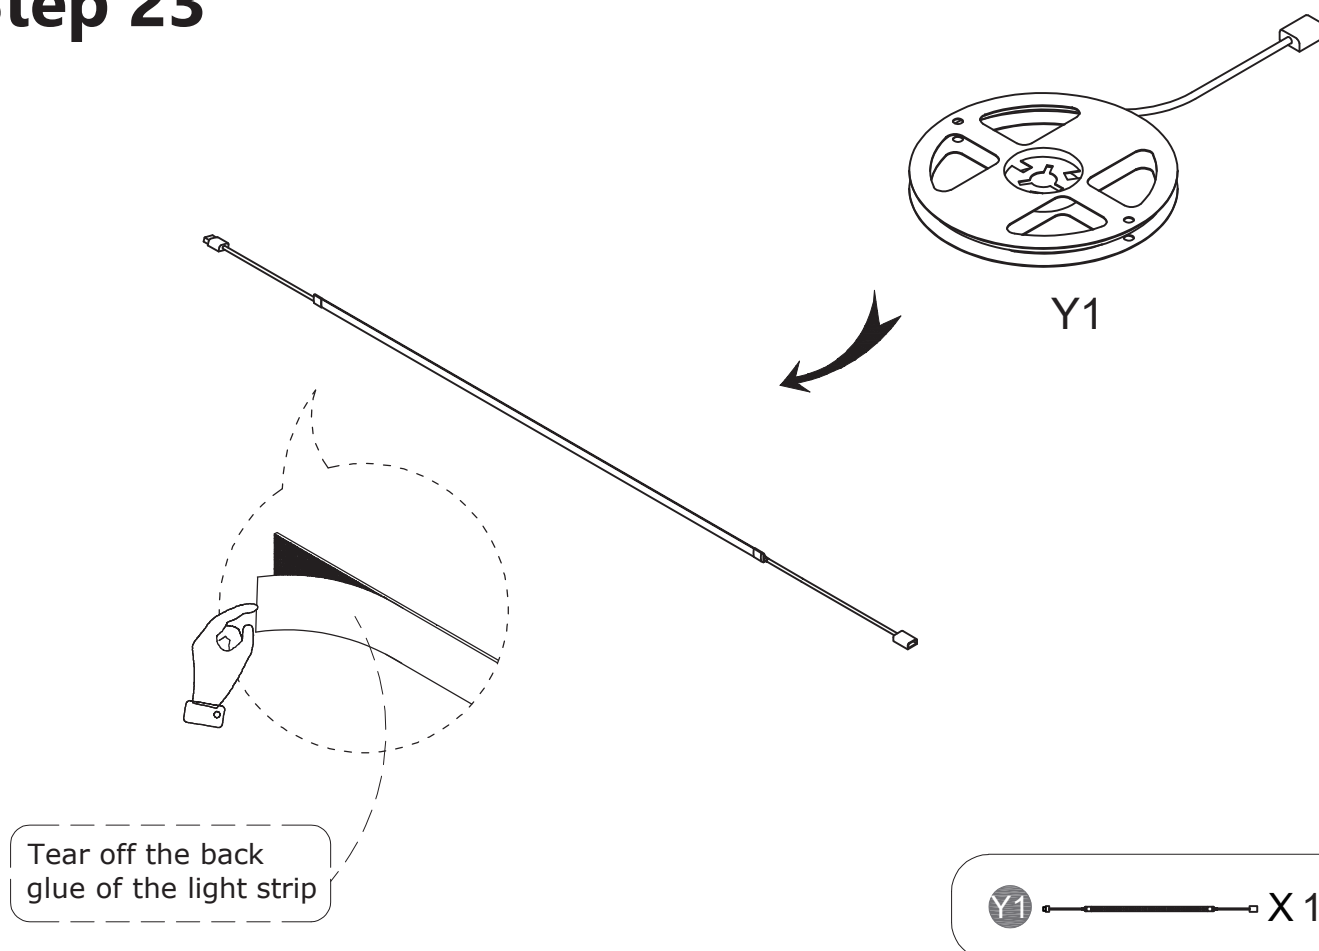


Step 24

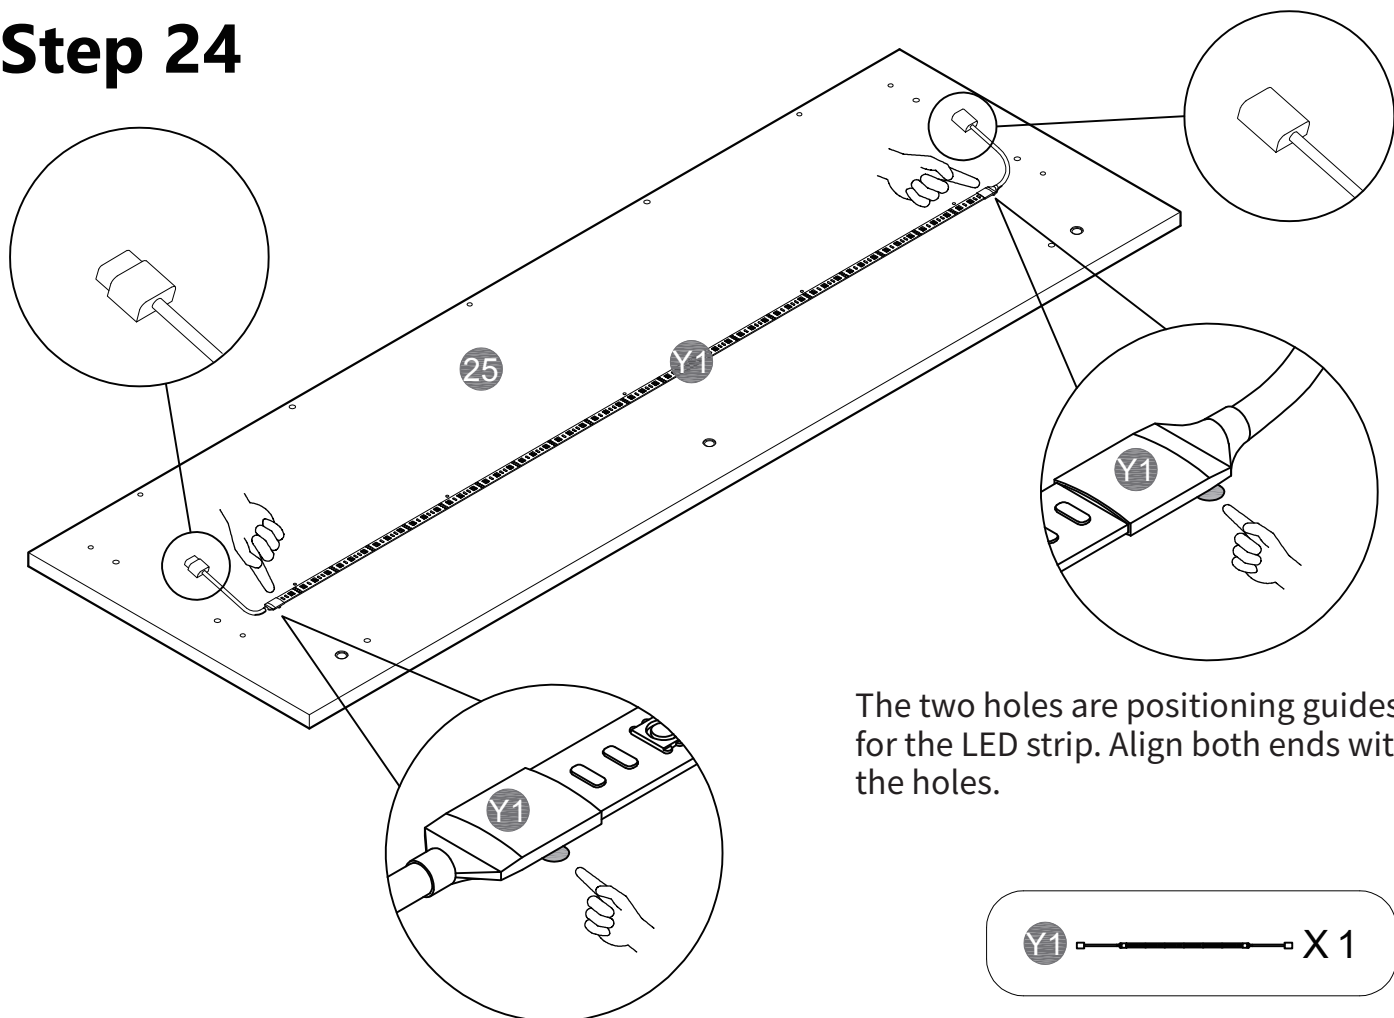


Step 25

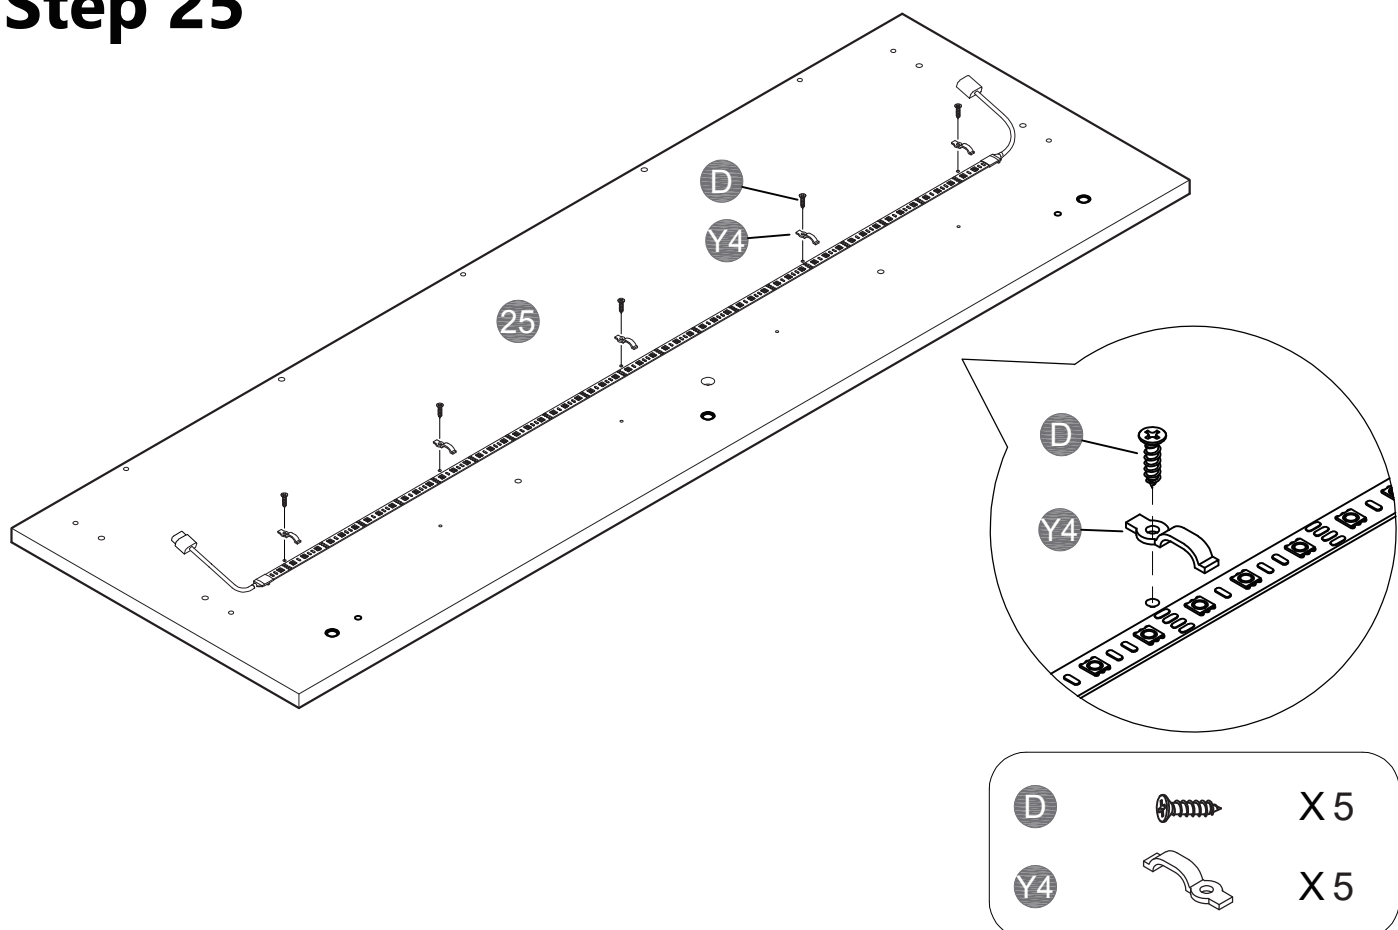


Step 26

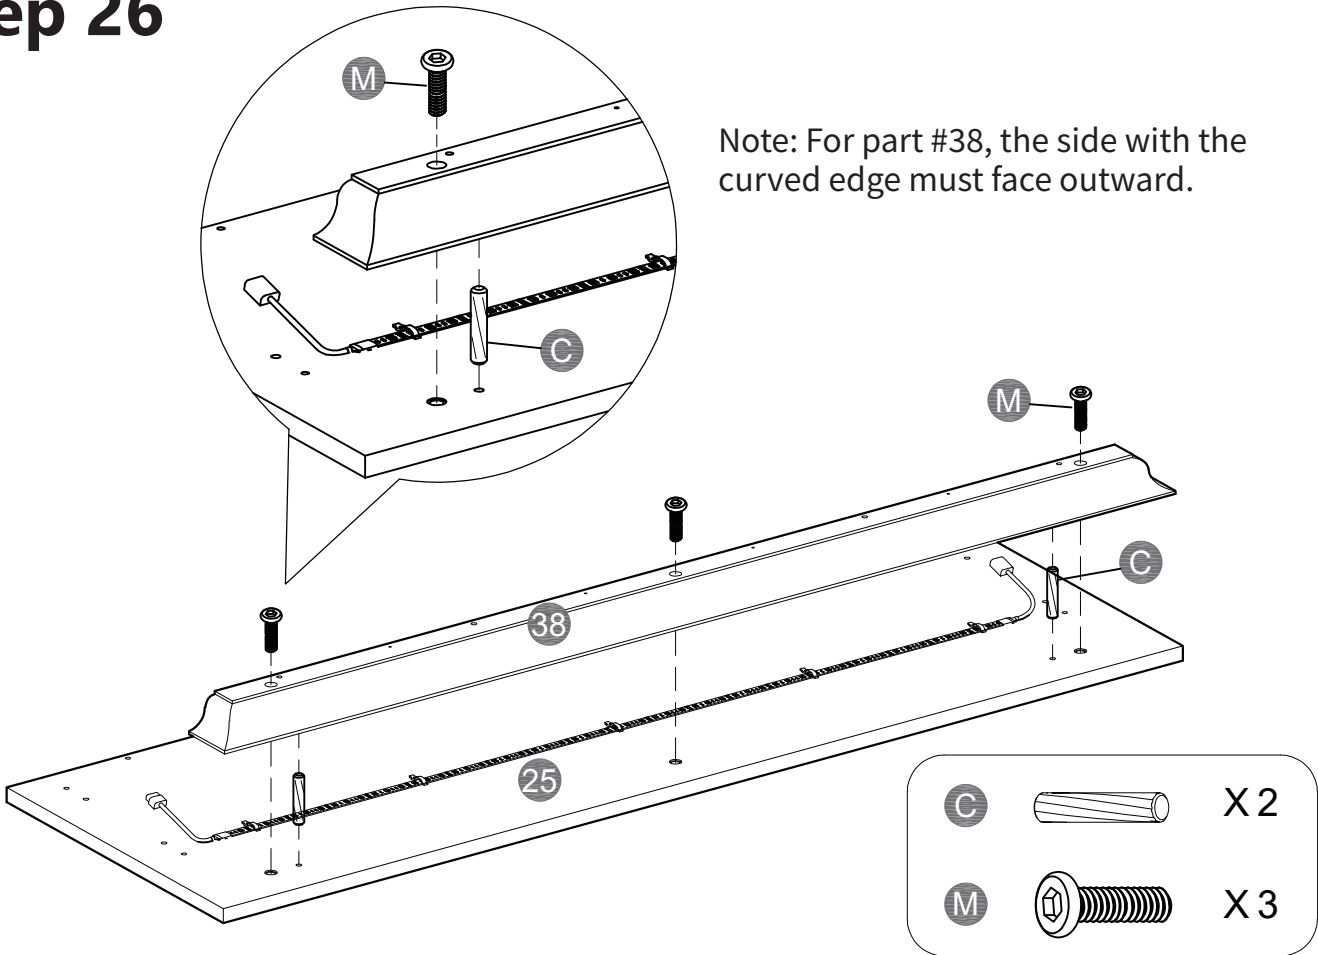



Step 27

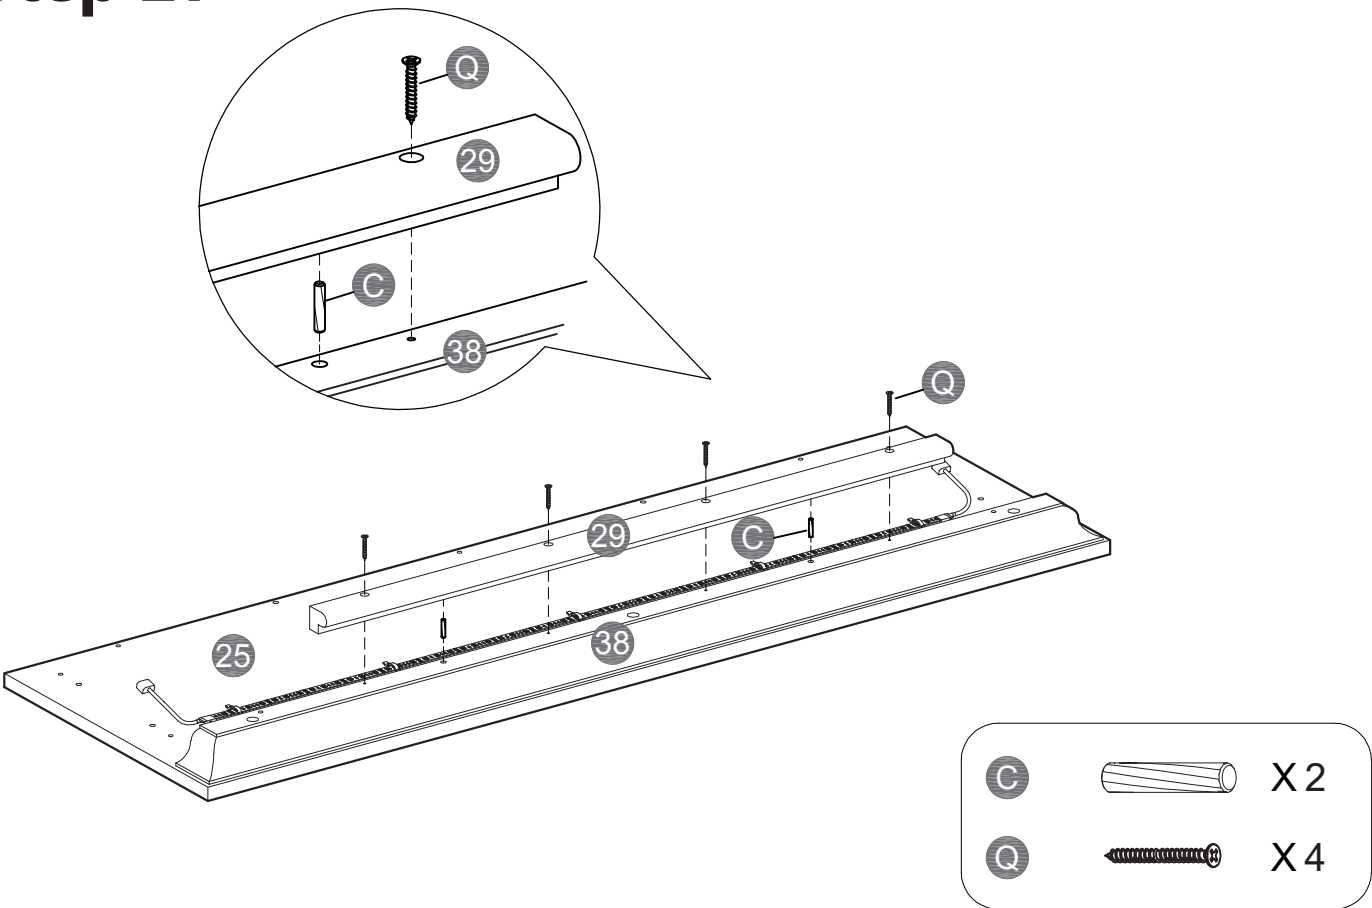


Step 28

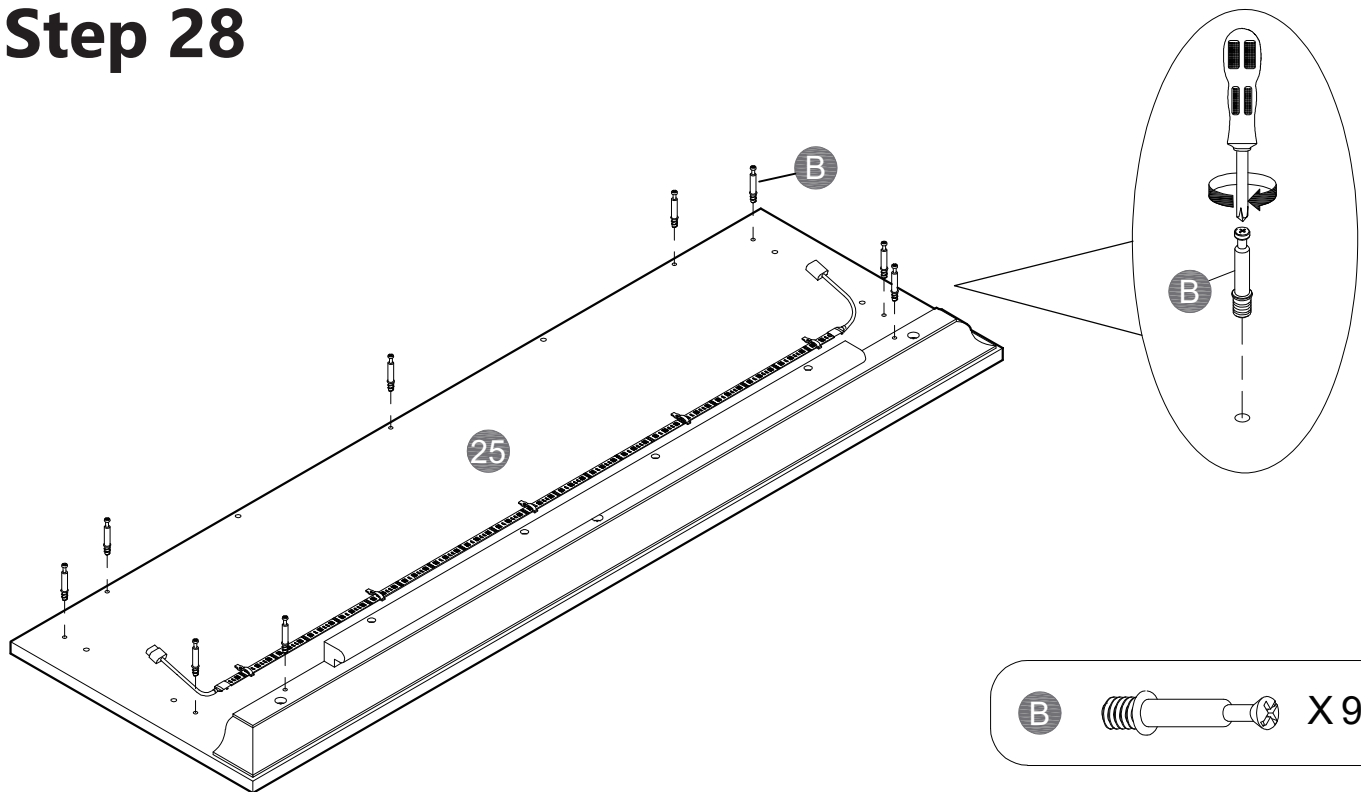



Step 29

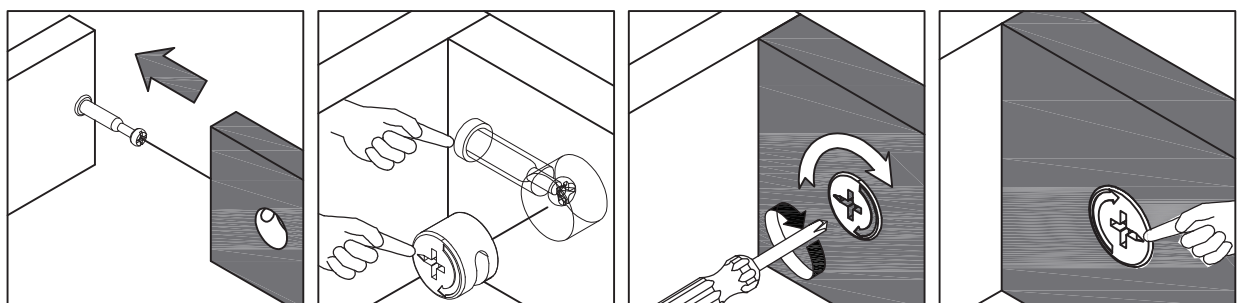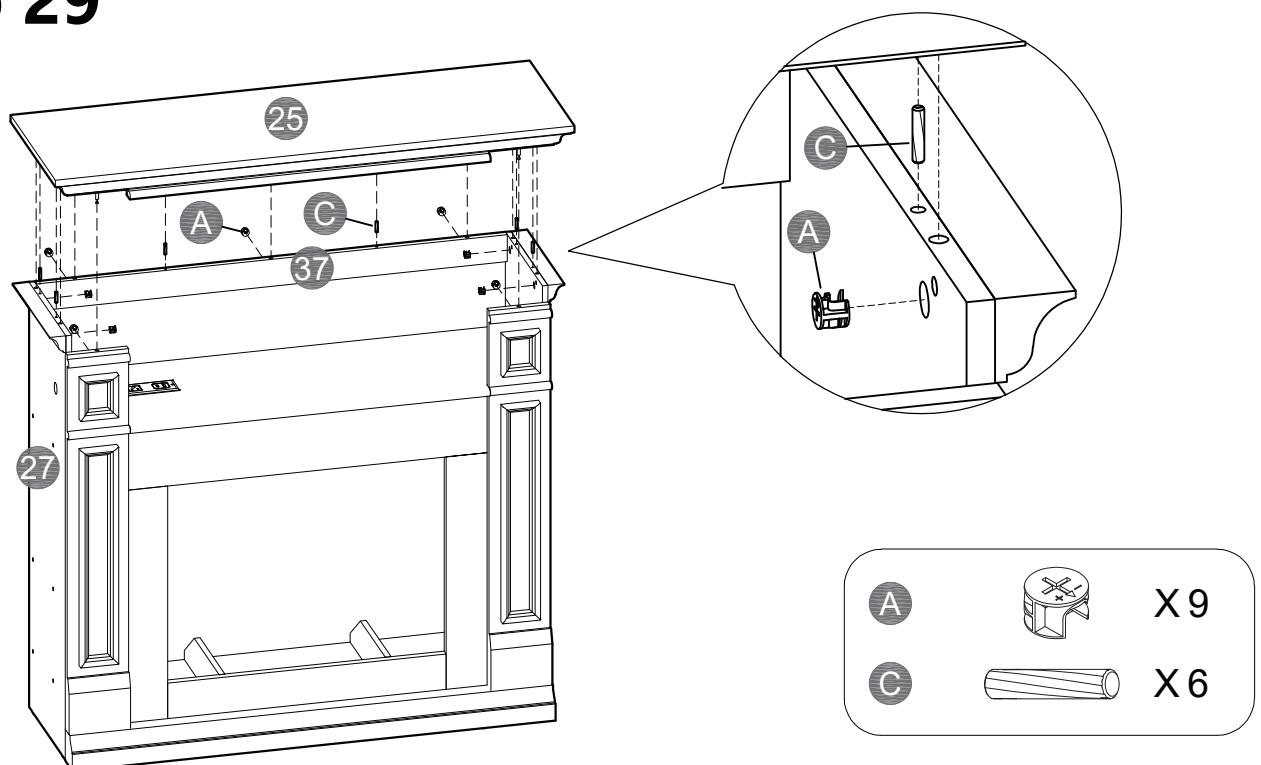


Step 30

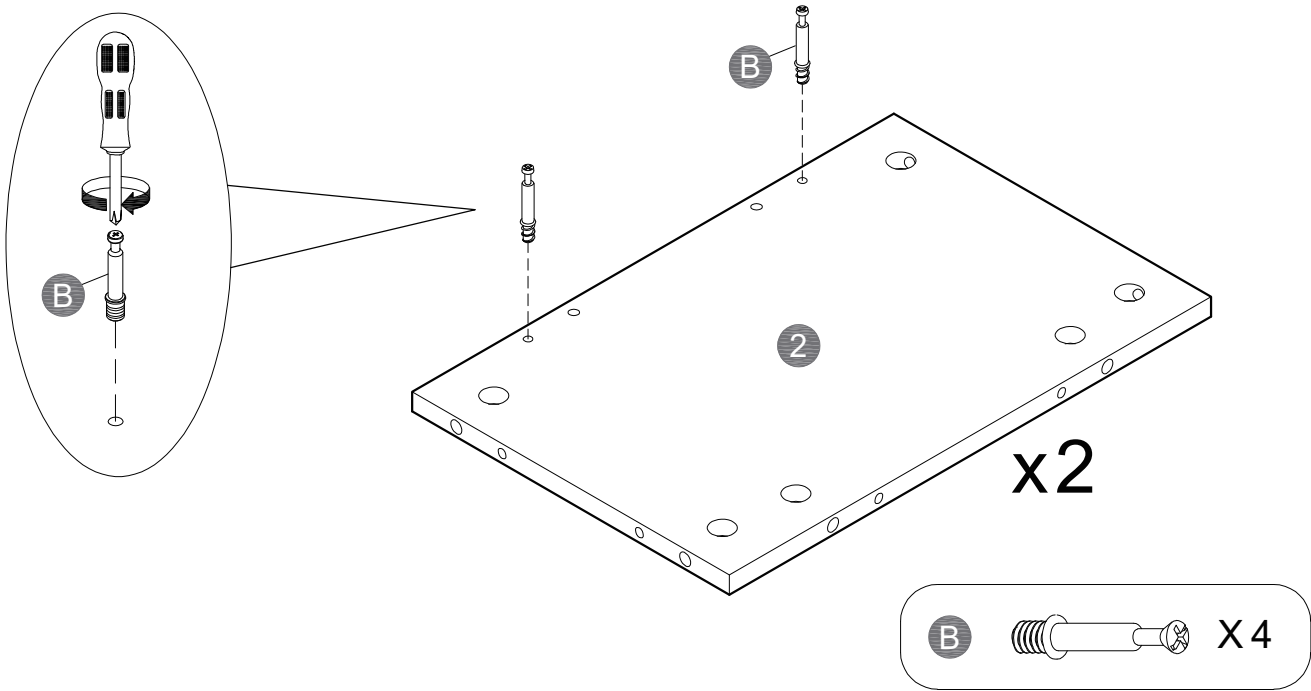



Step 31

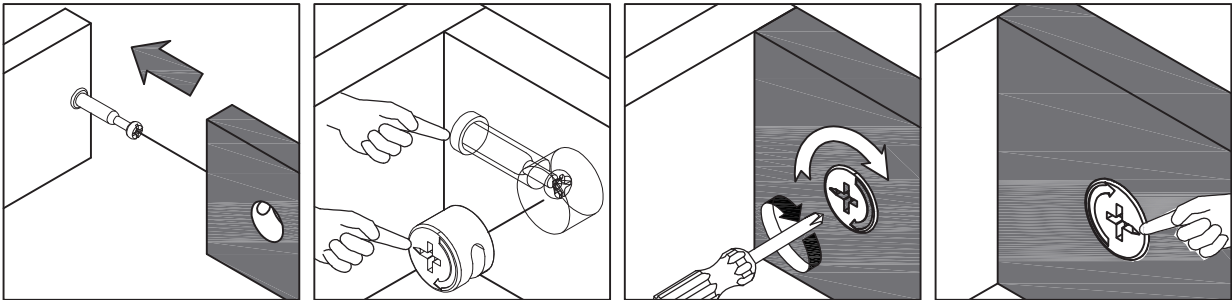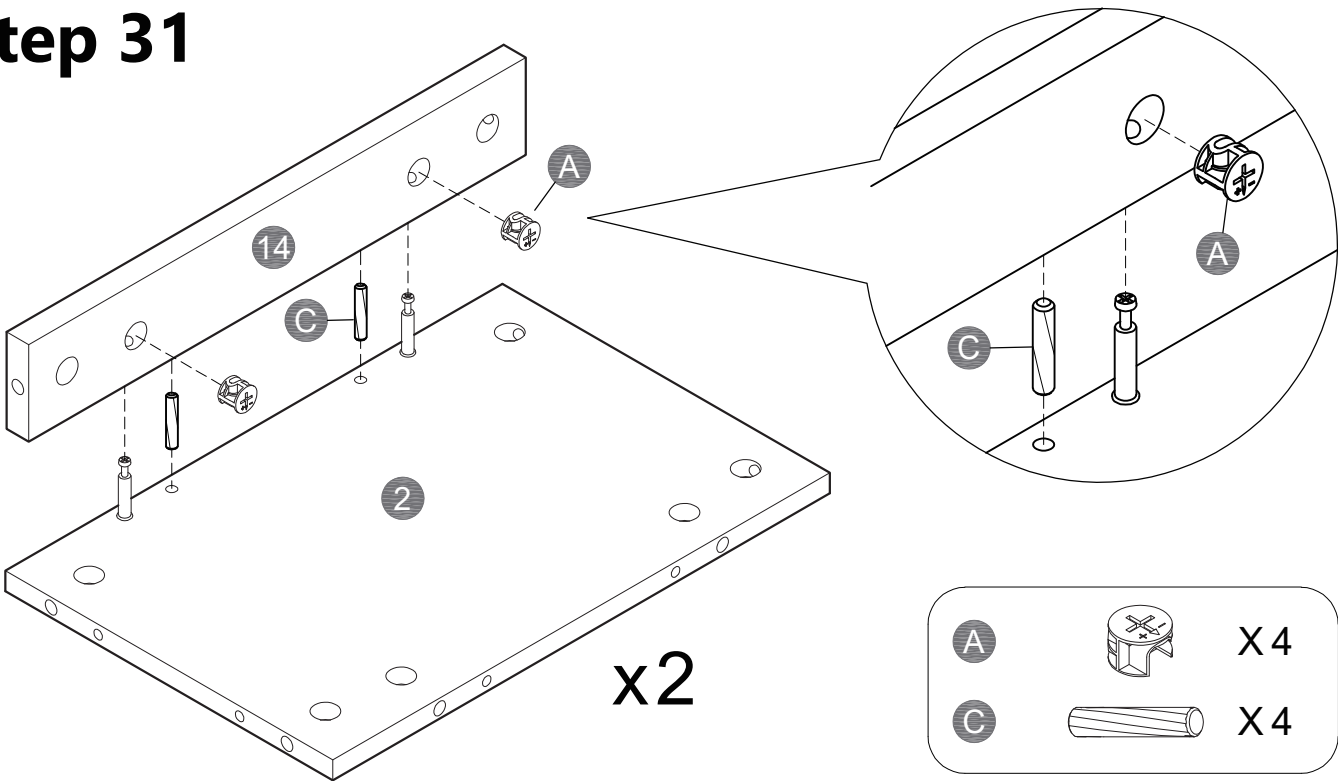


Step 32

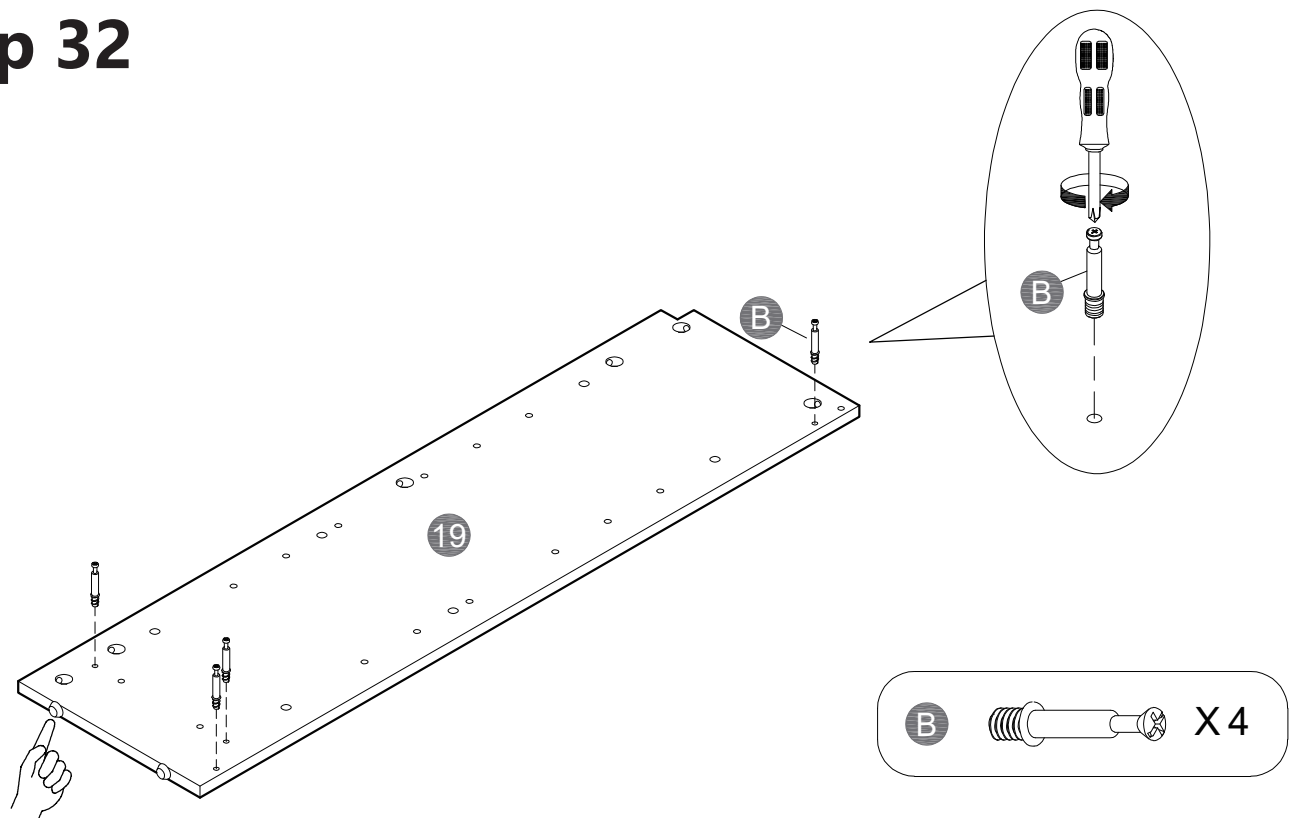



Step 33

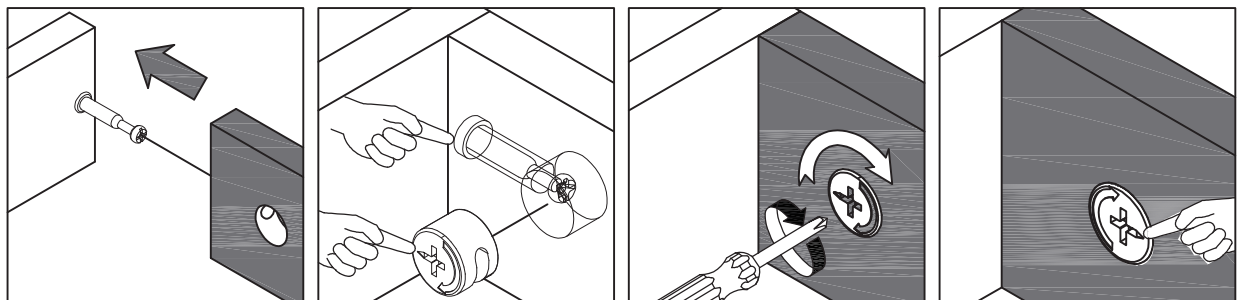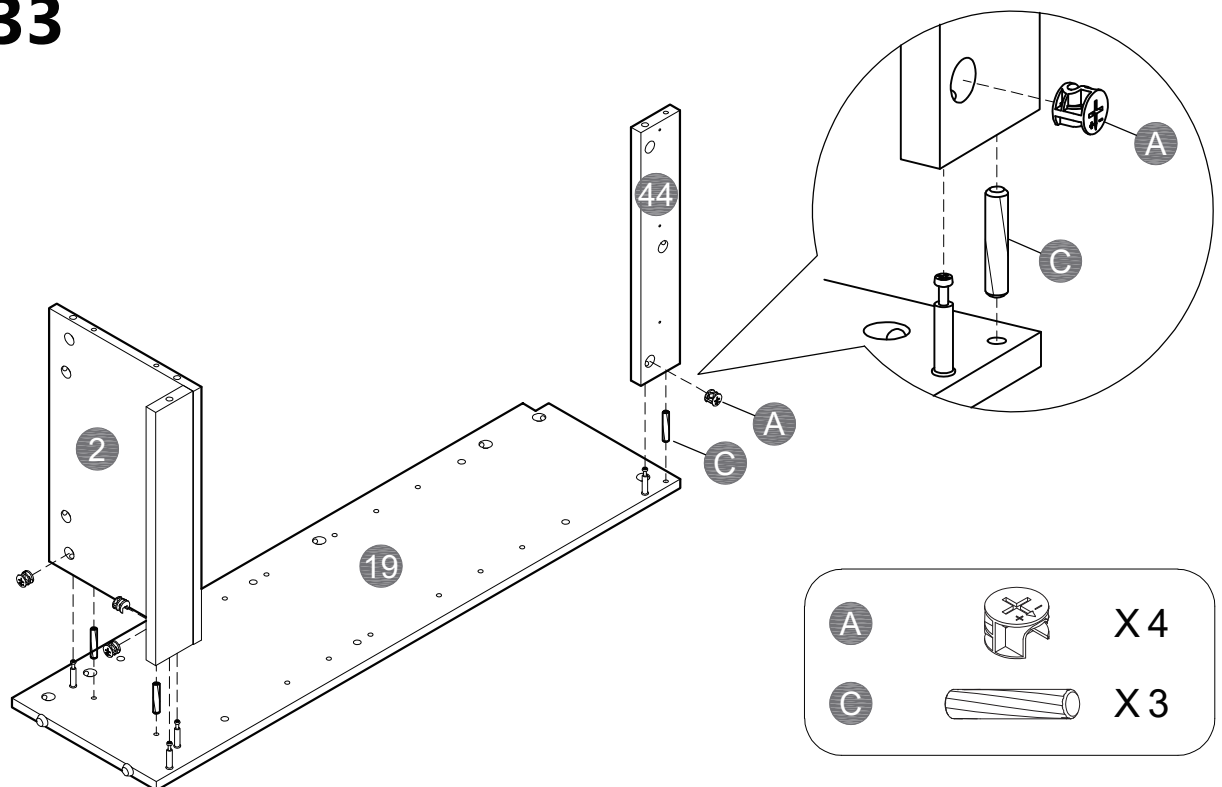


Step 34

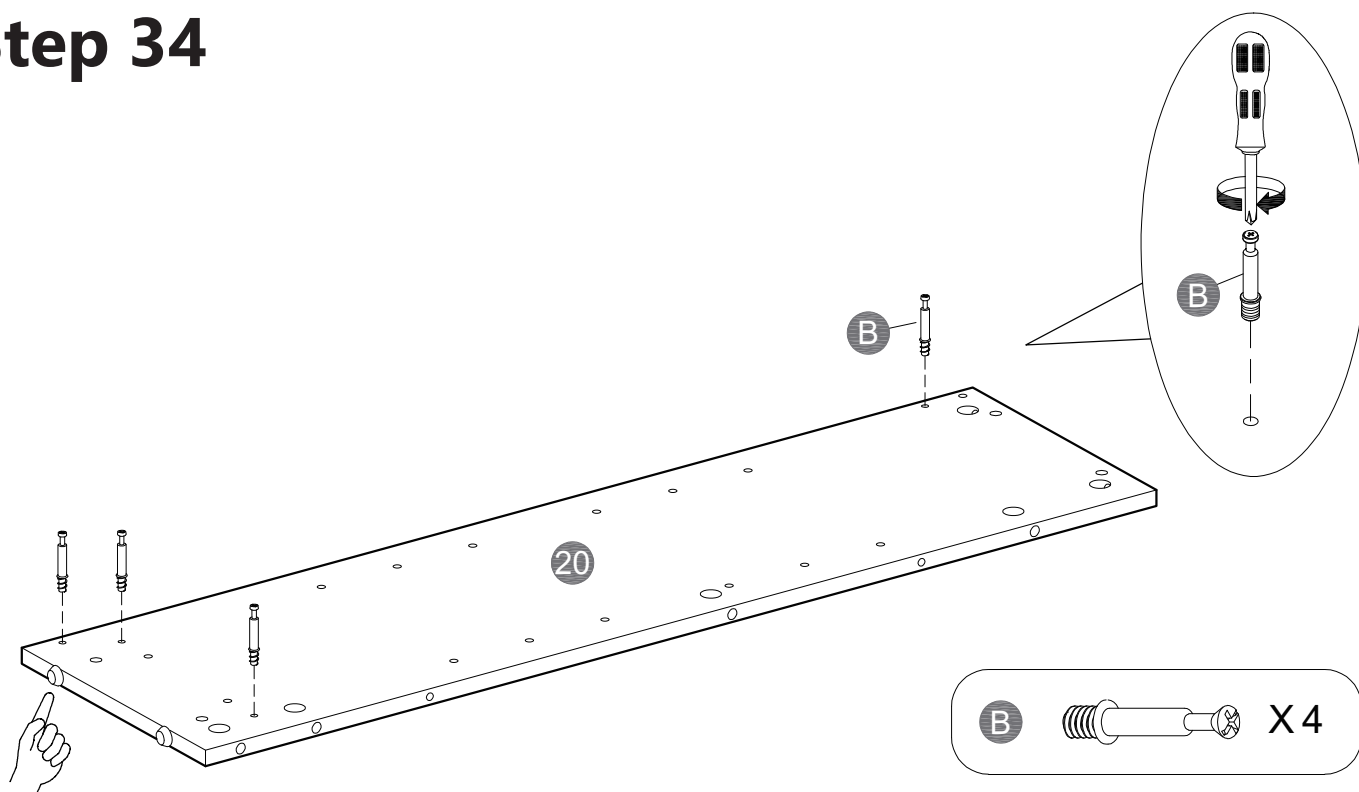



Step 35

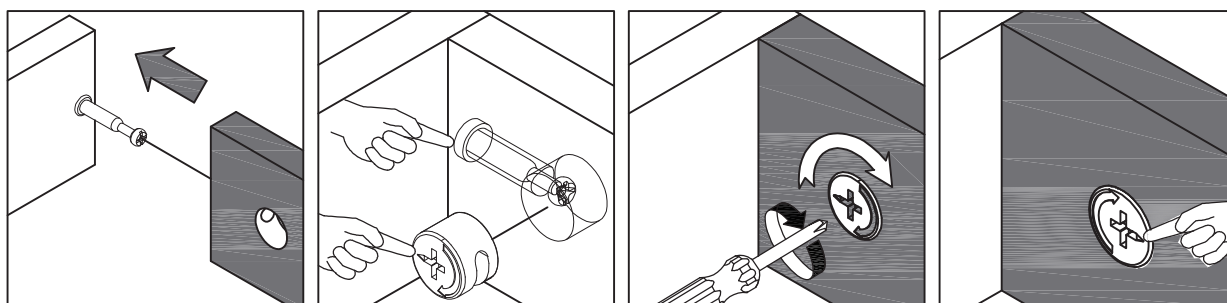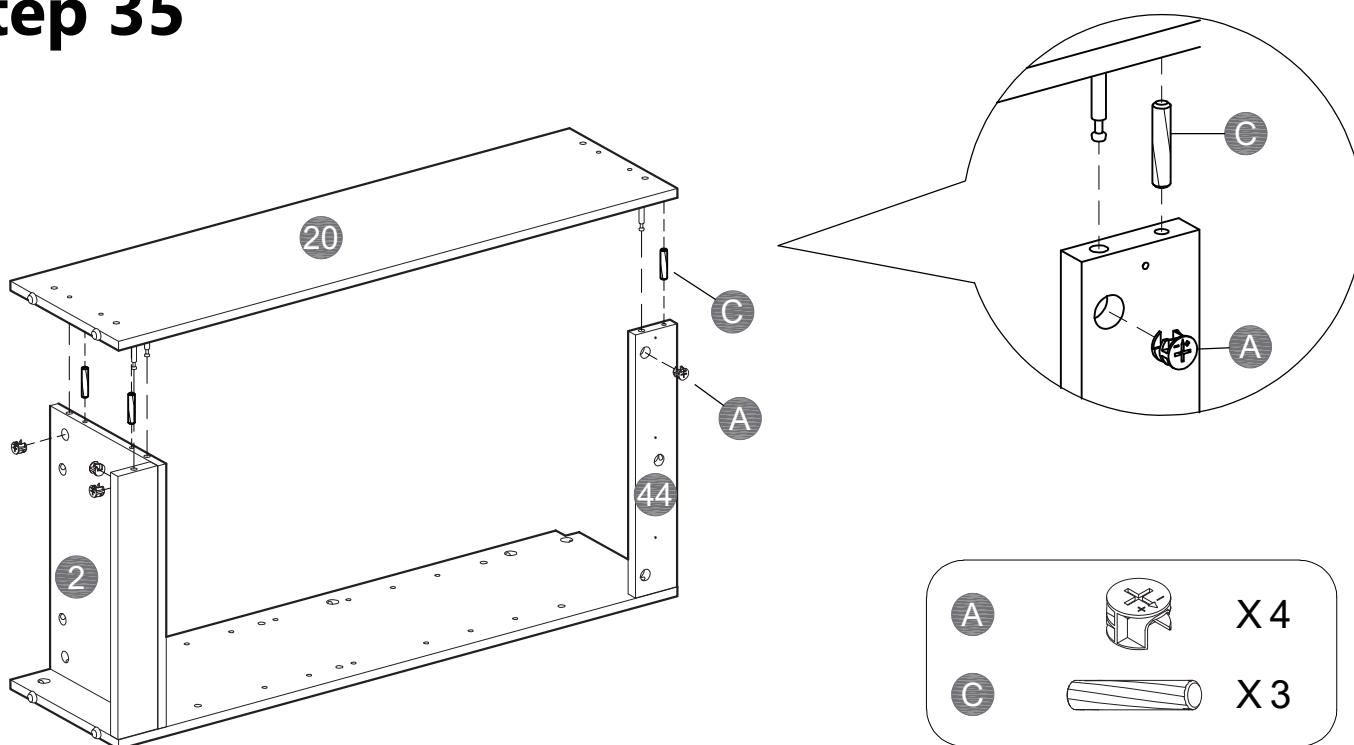


Step 36

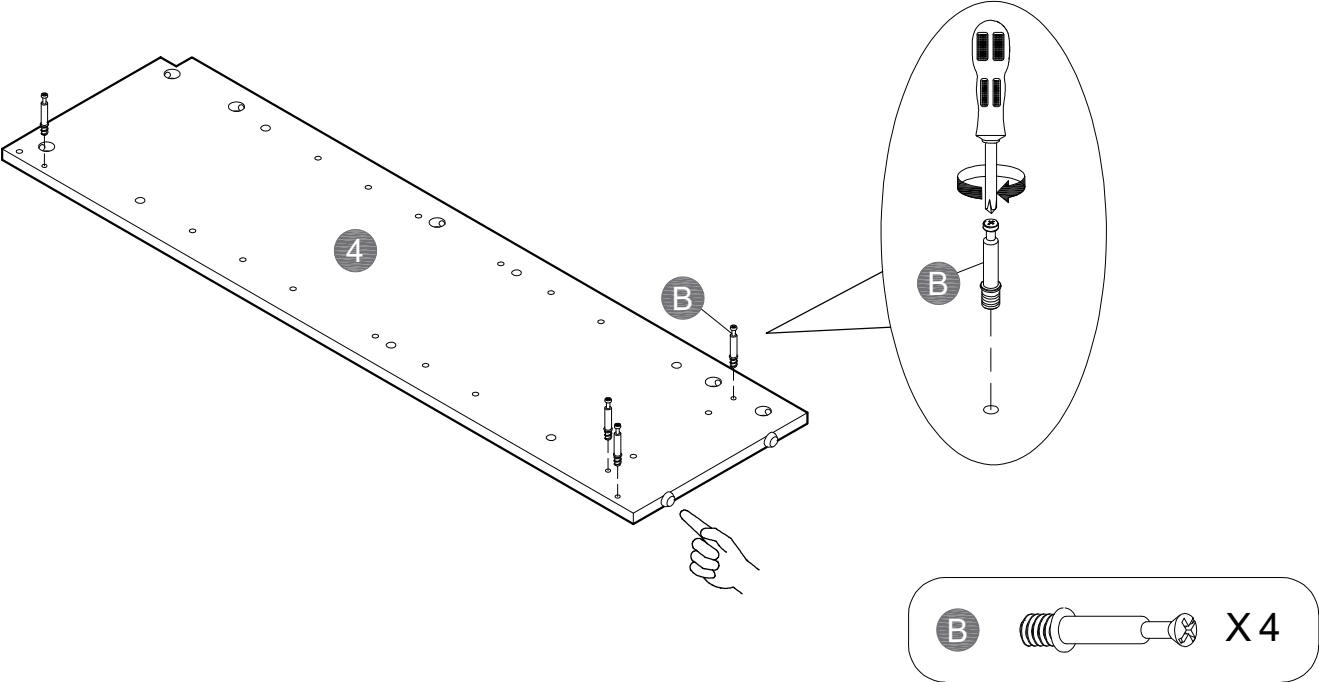



Step 37

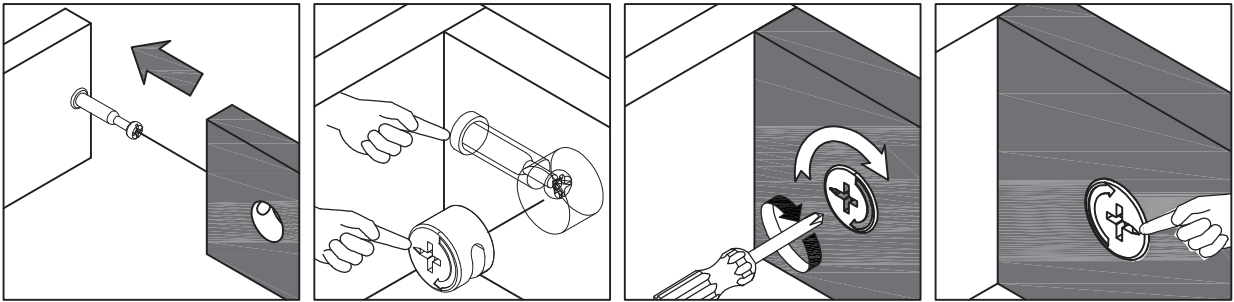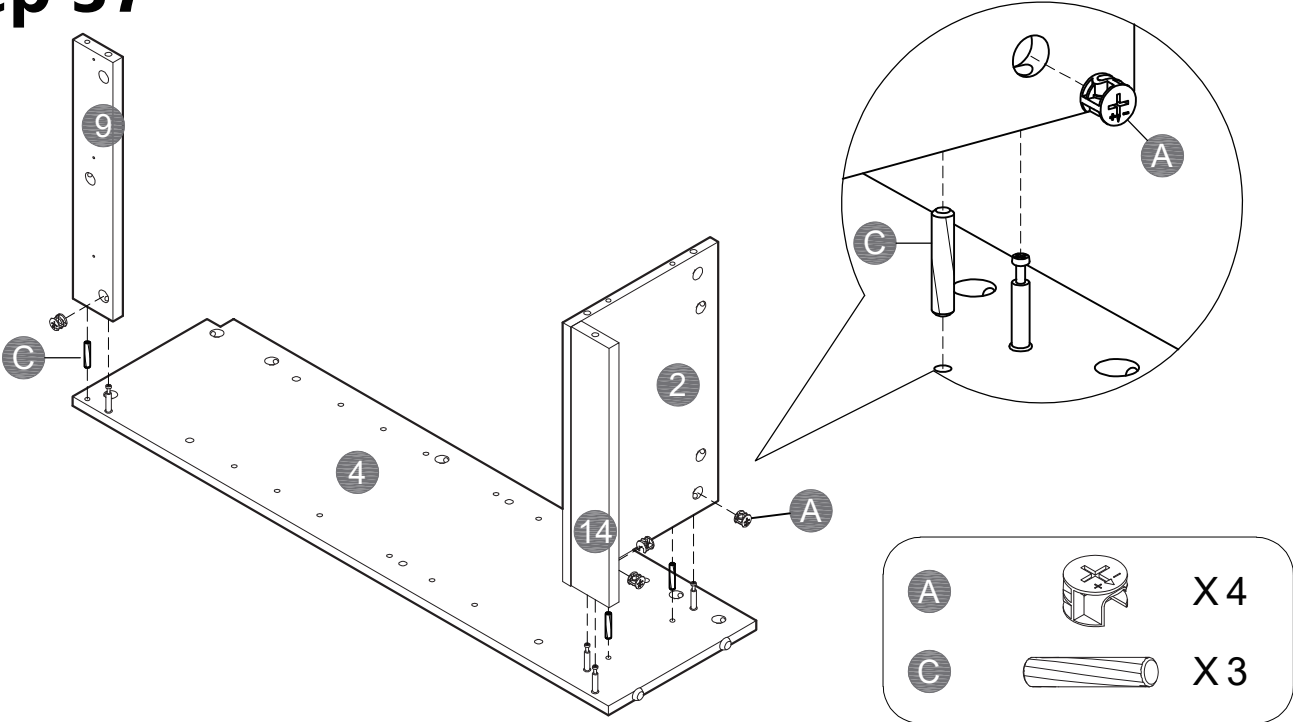


Step 38

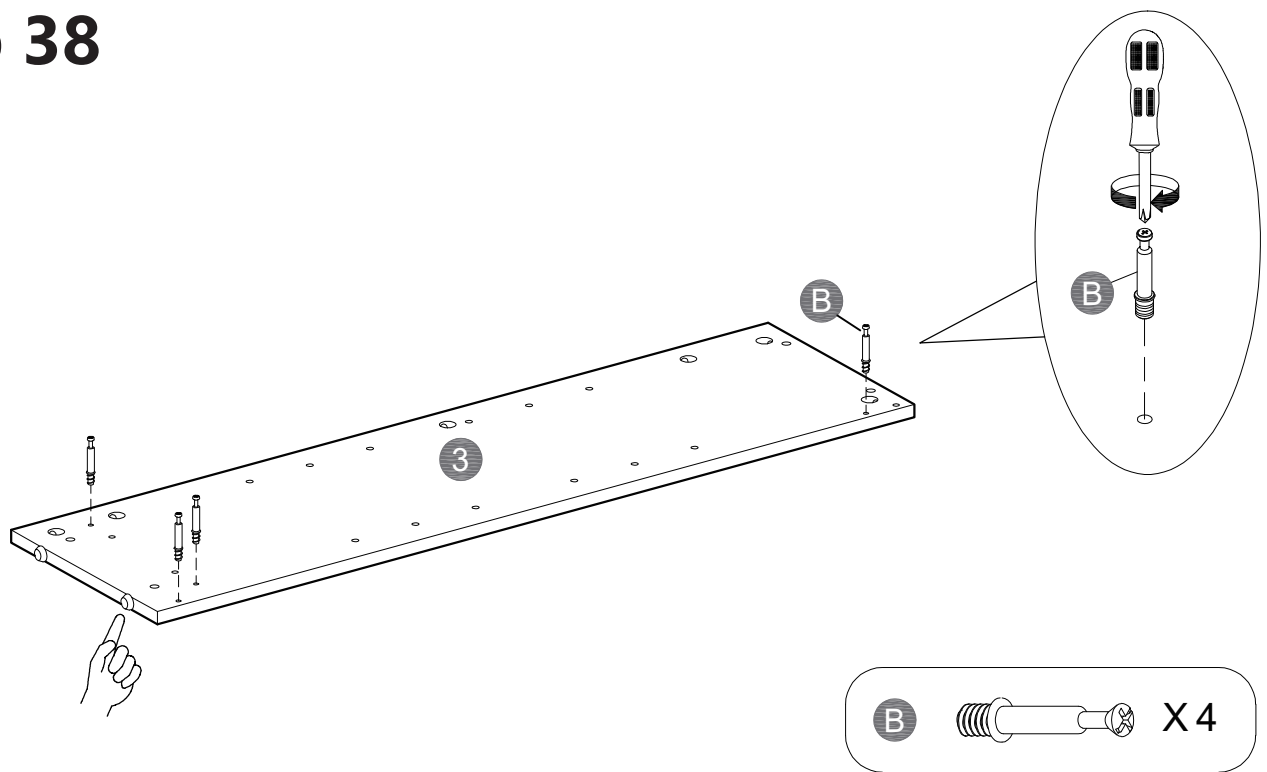


Step 39

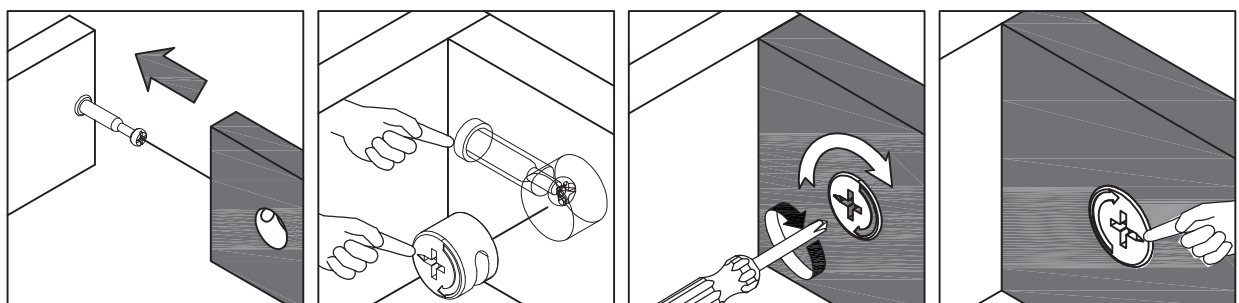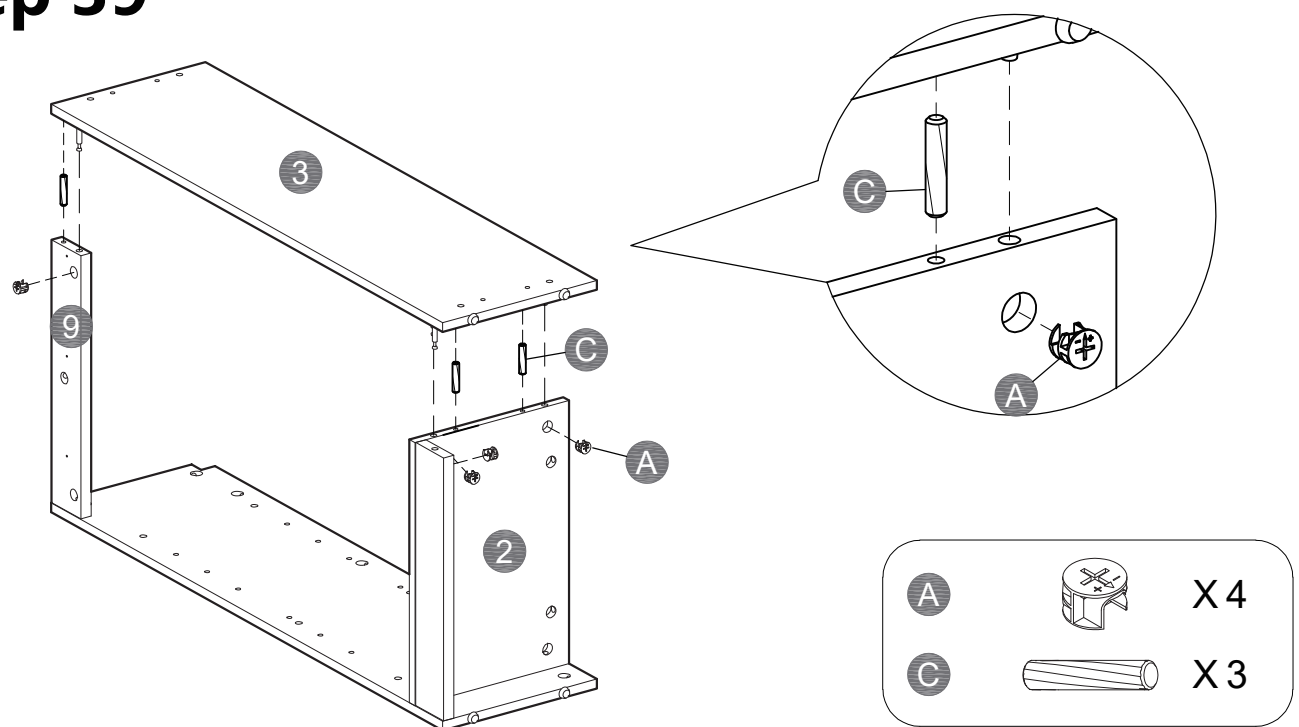


Step 40

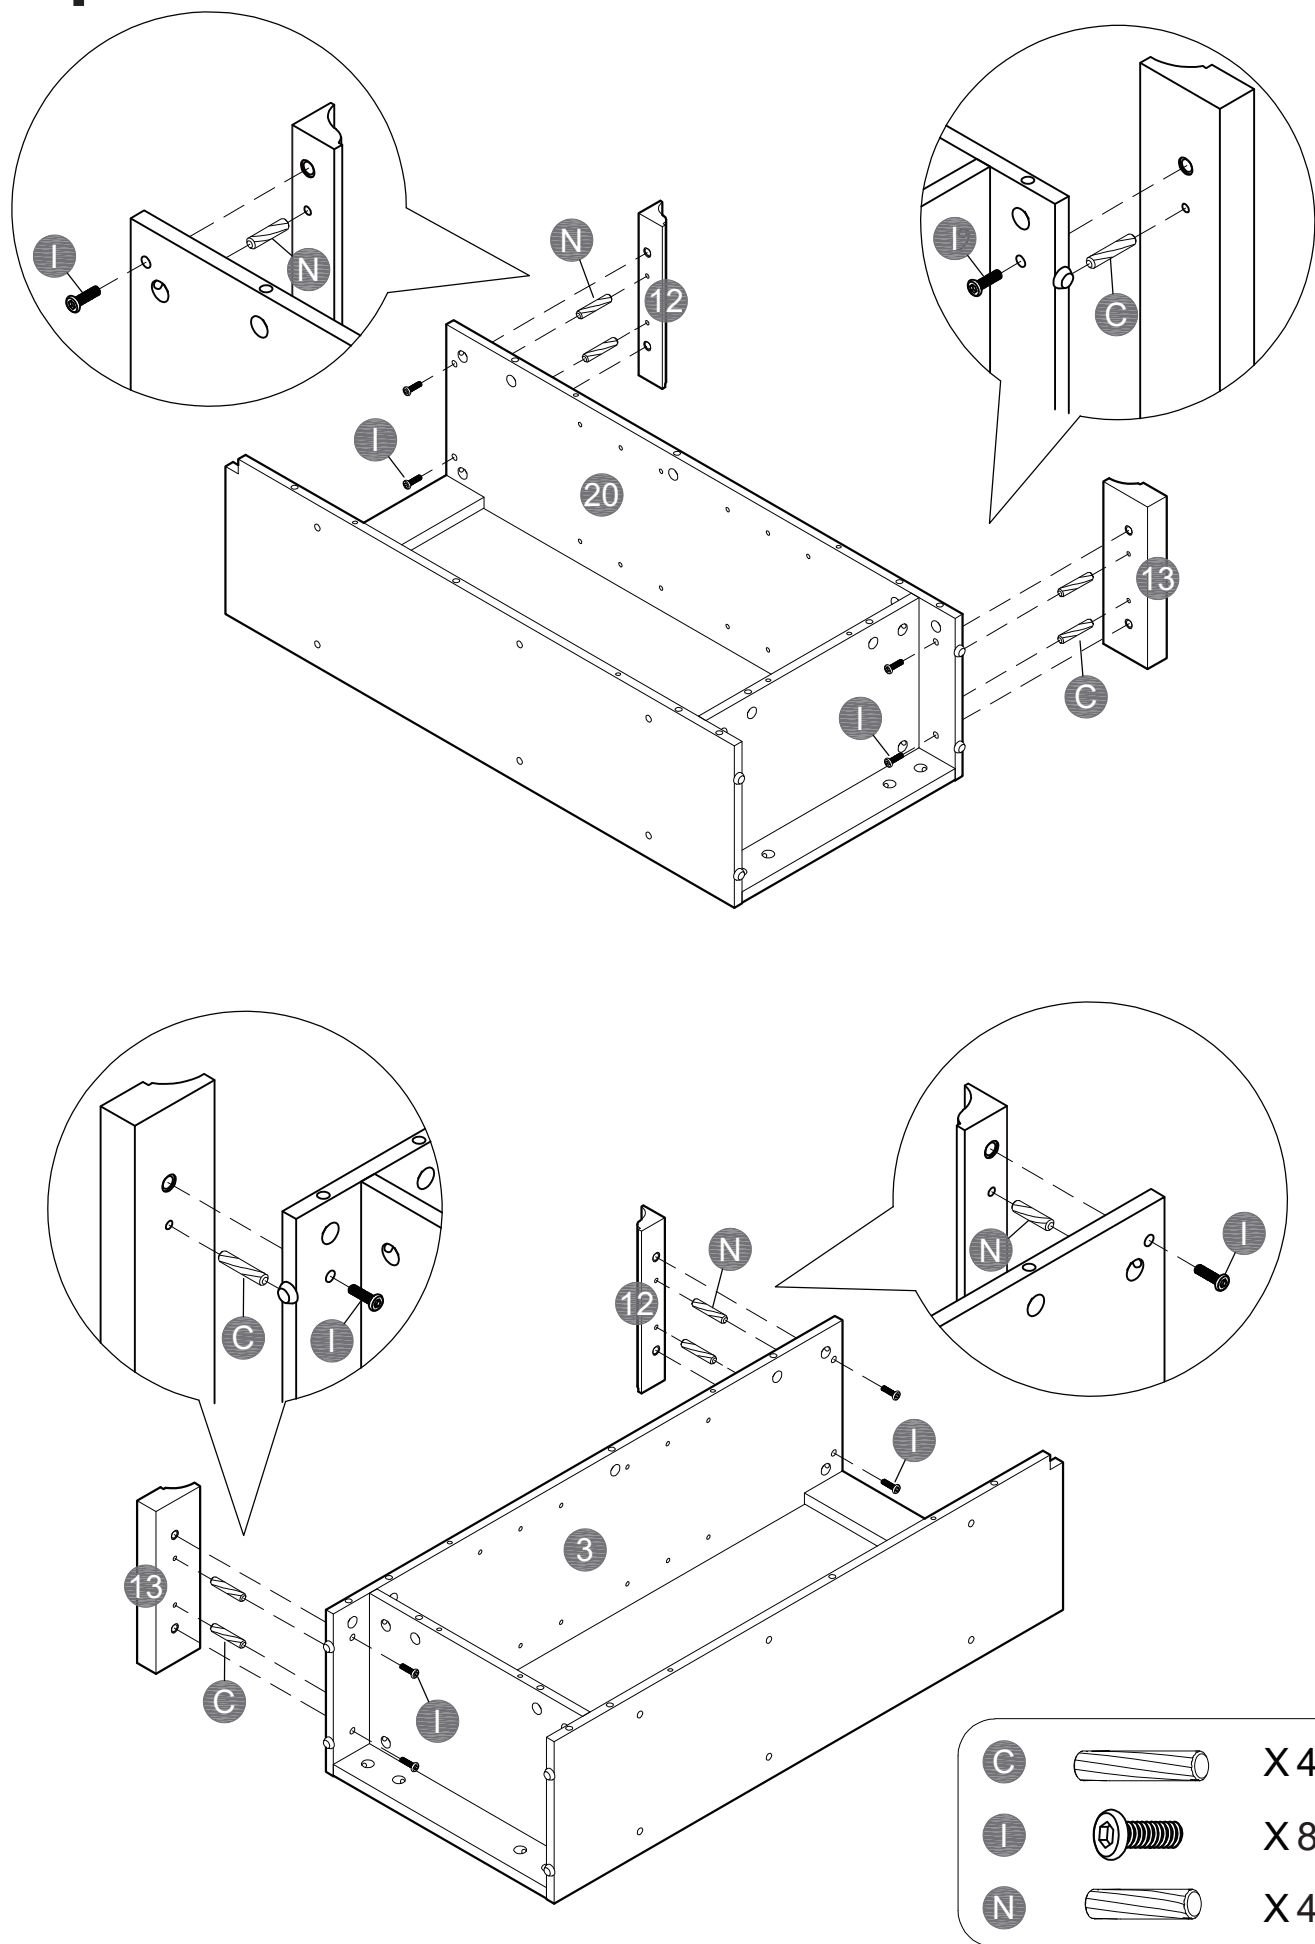


Step 41

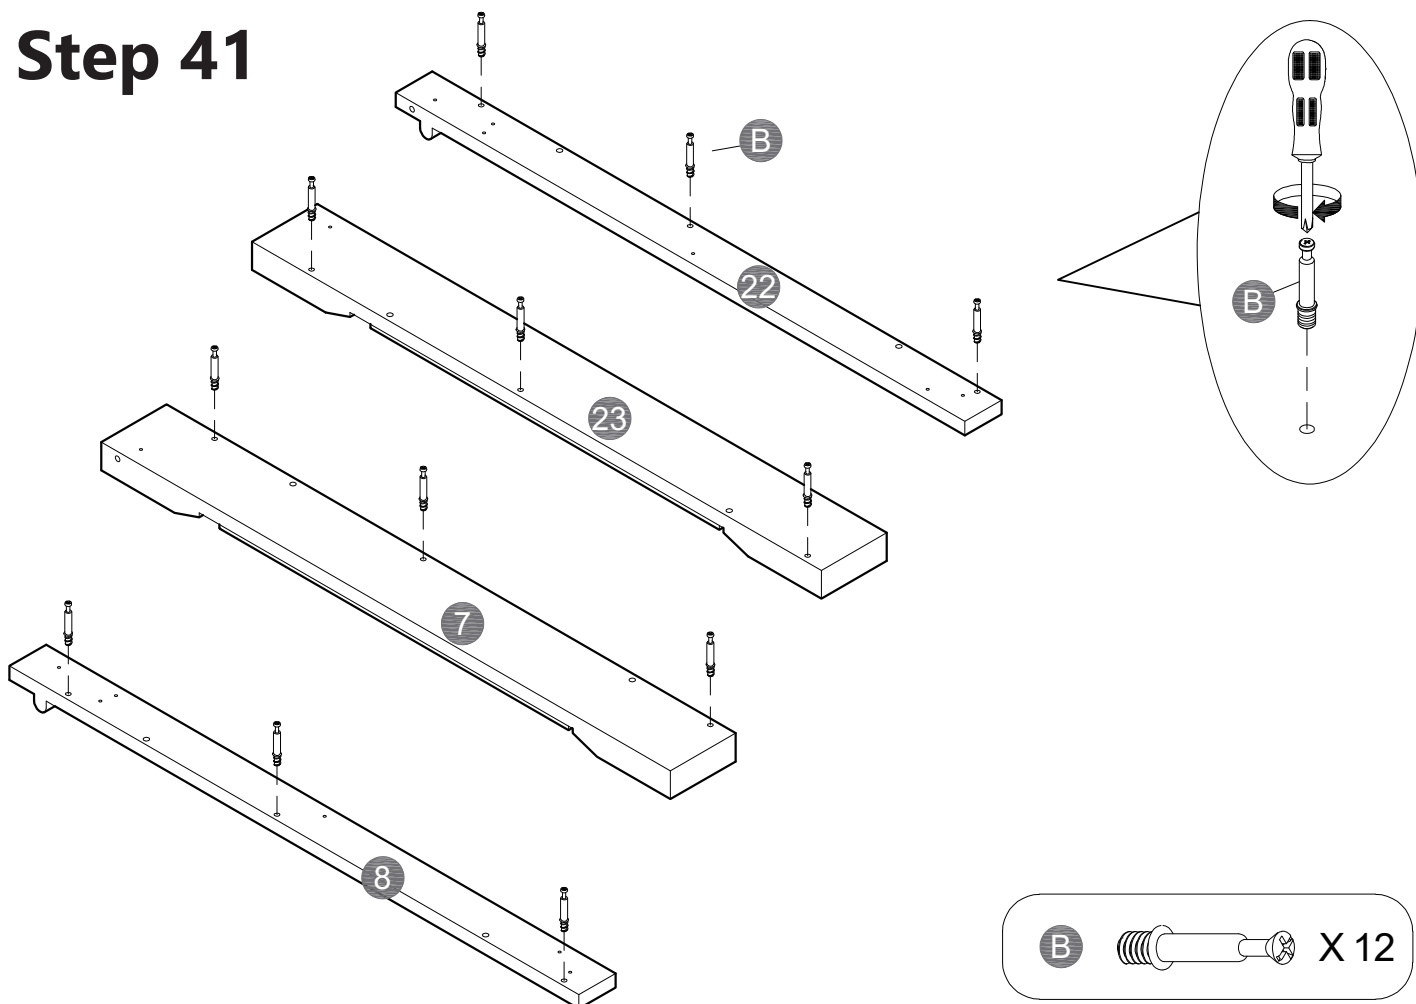


Step 42

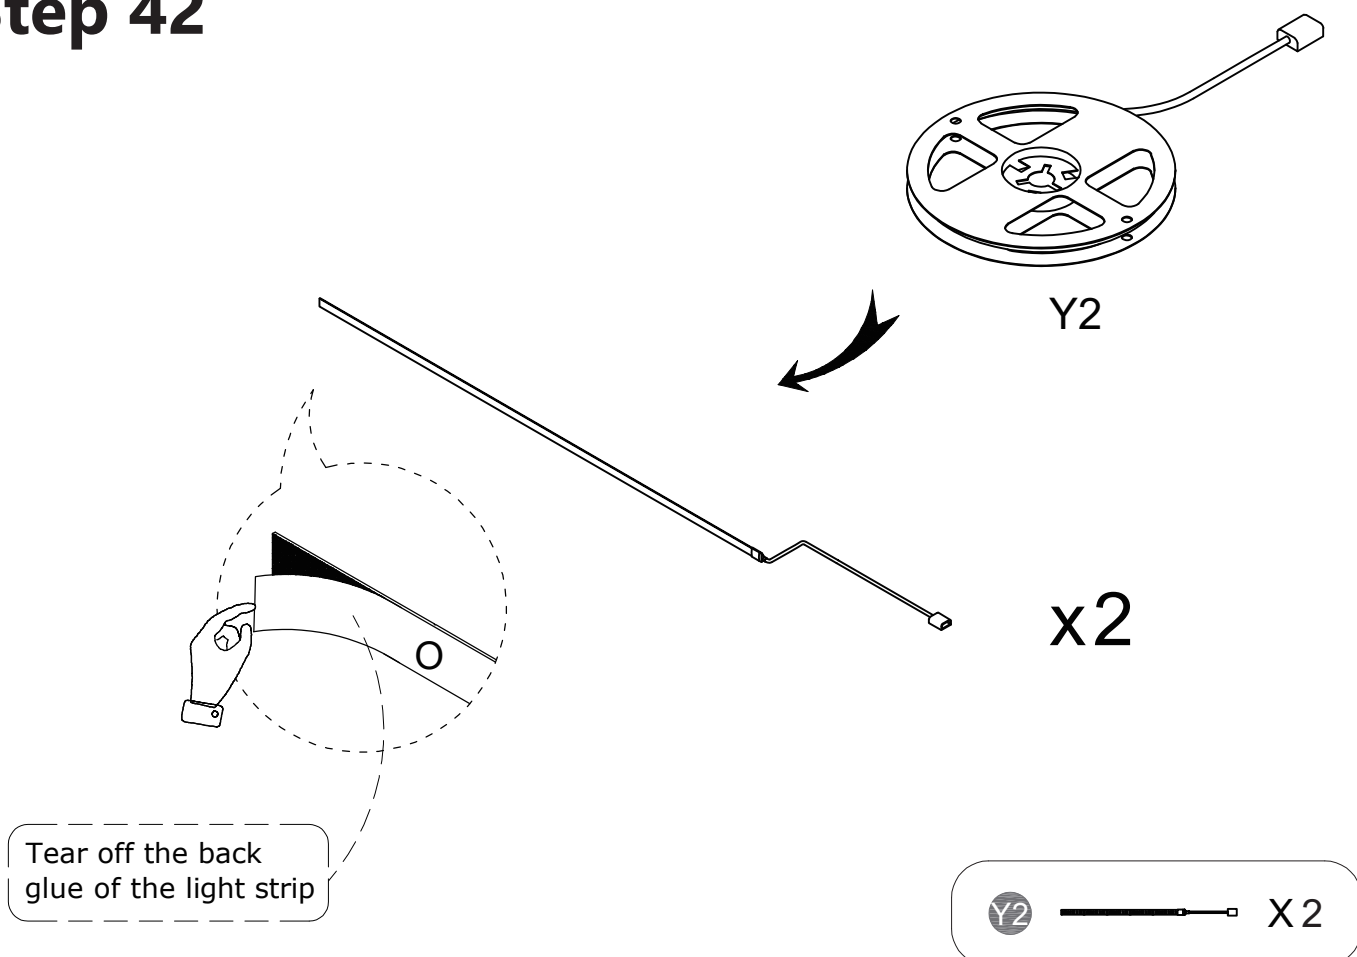


Step 43

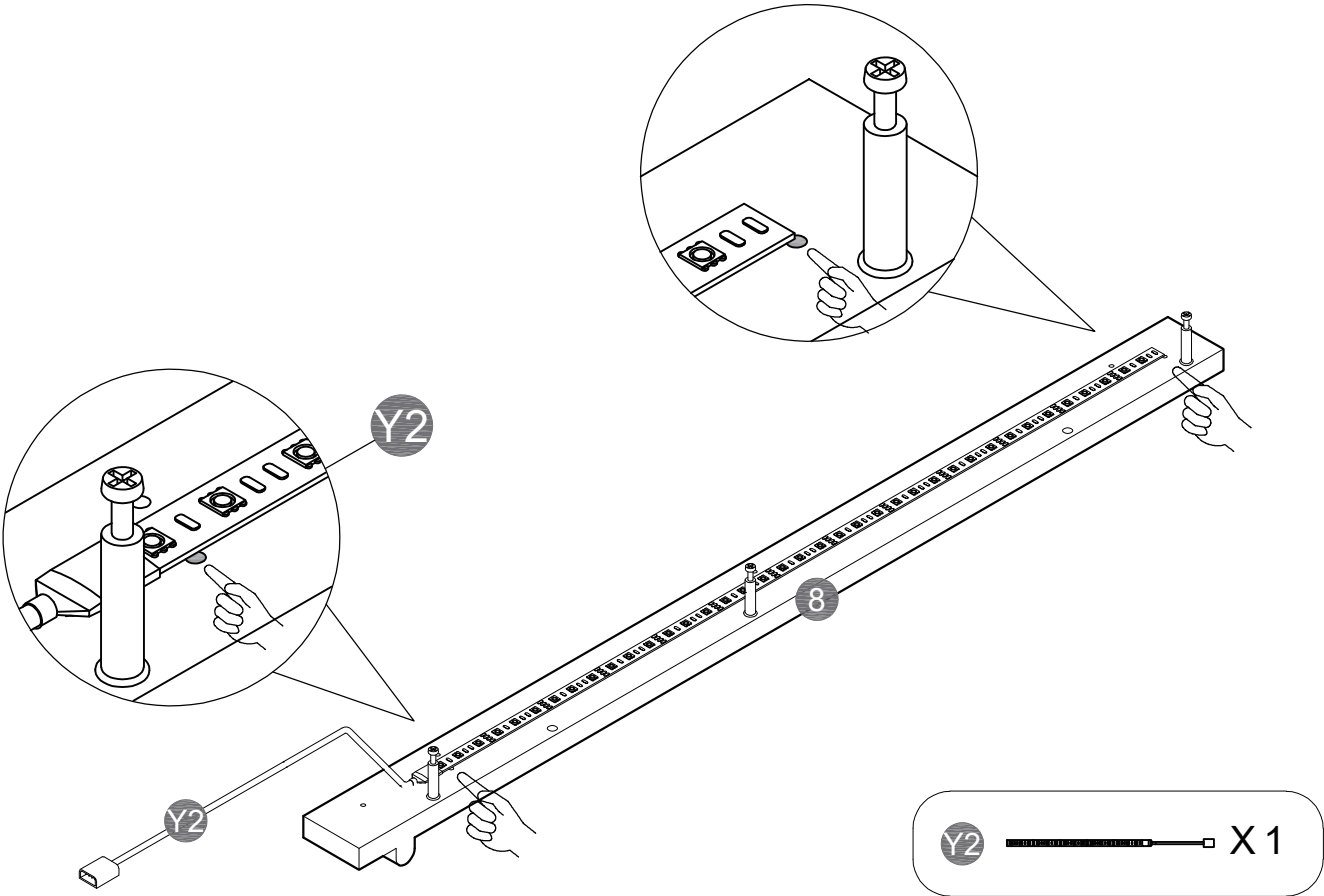


Step 44

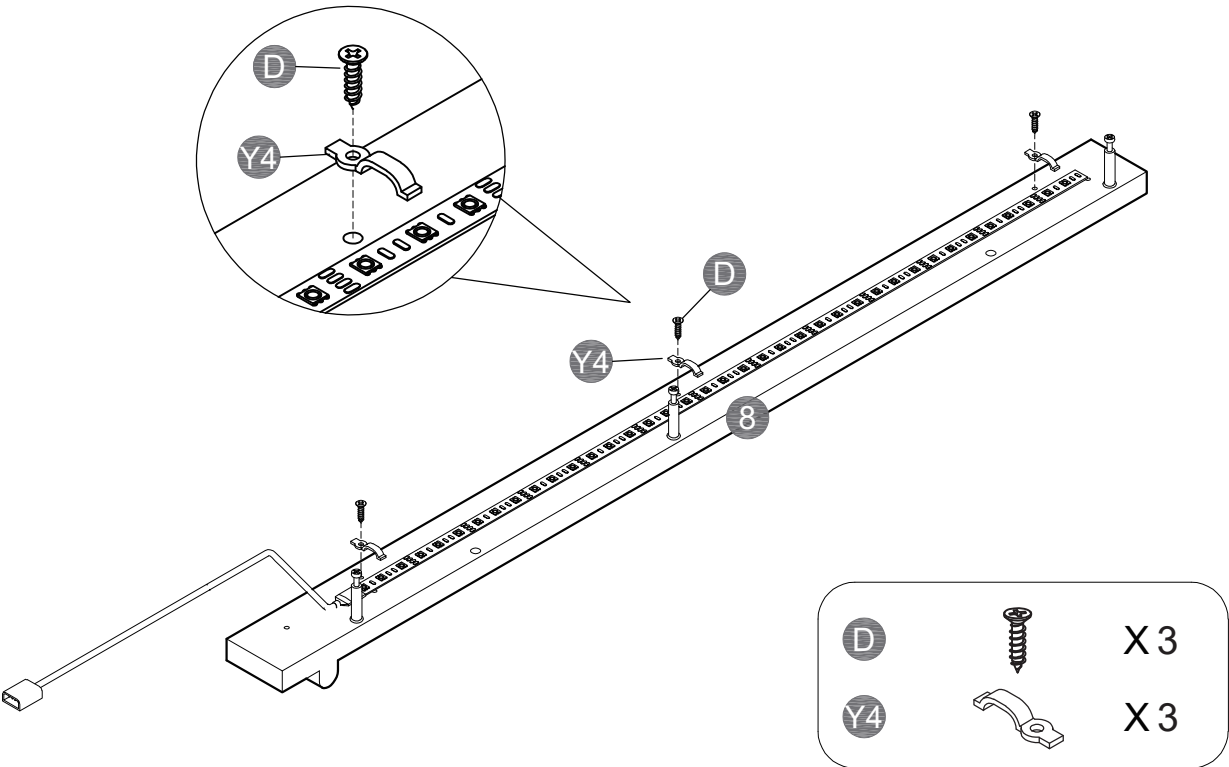


Step 45

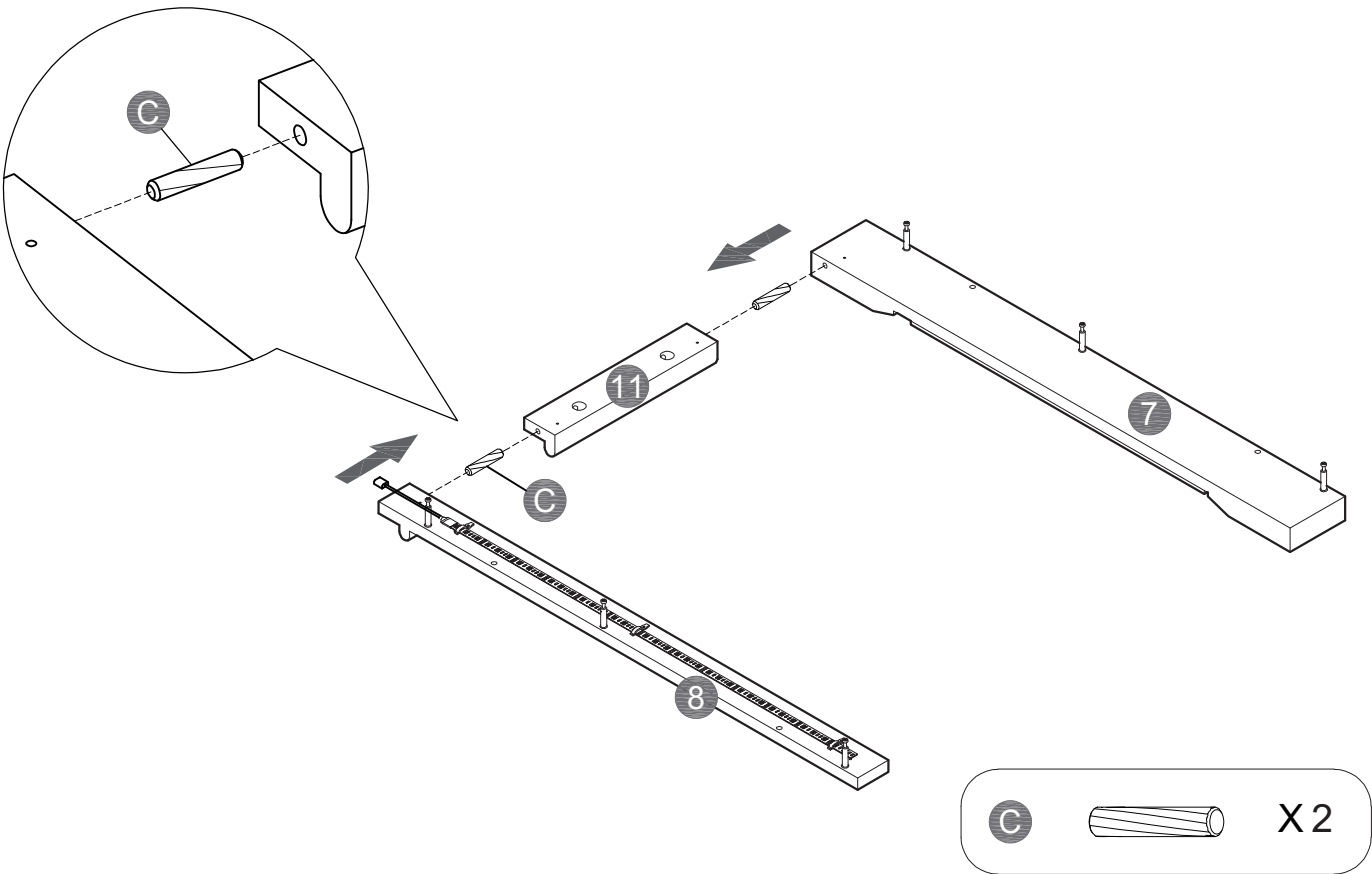


Step 46

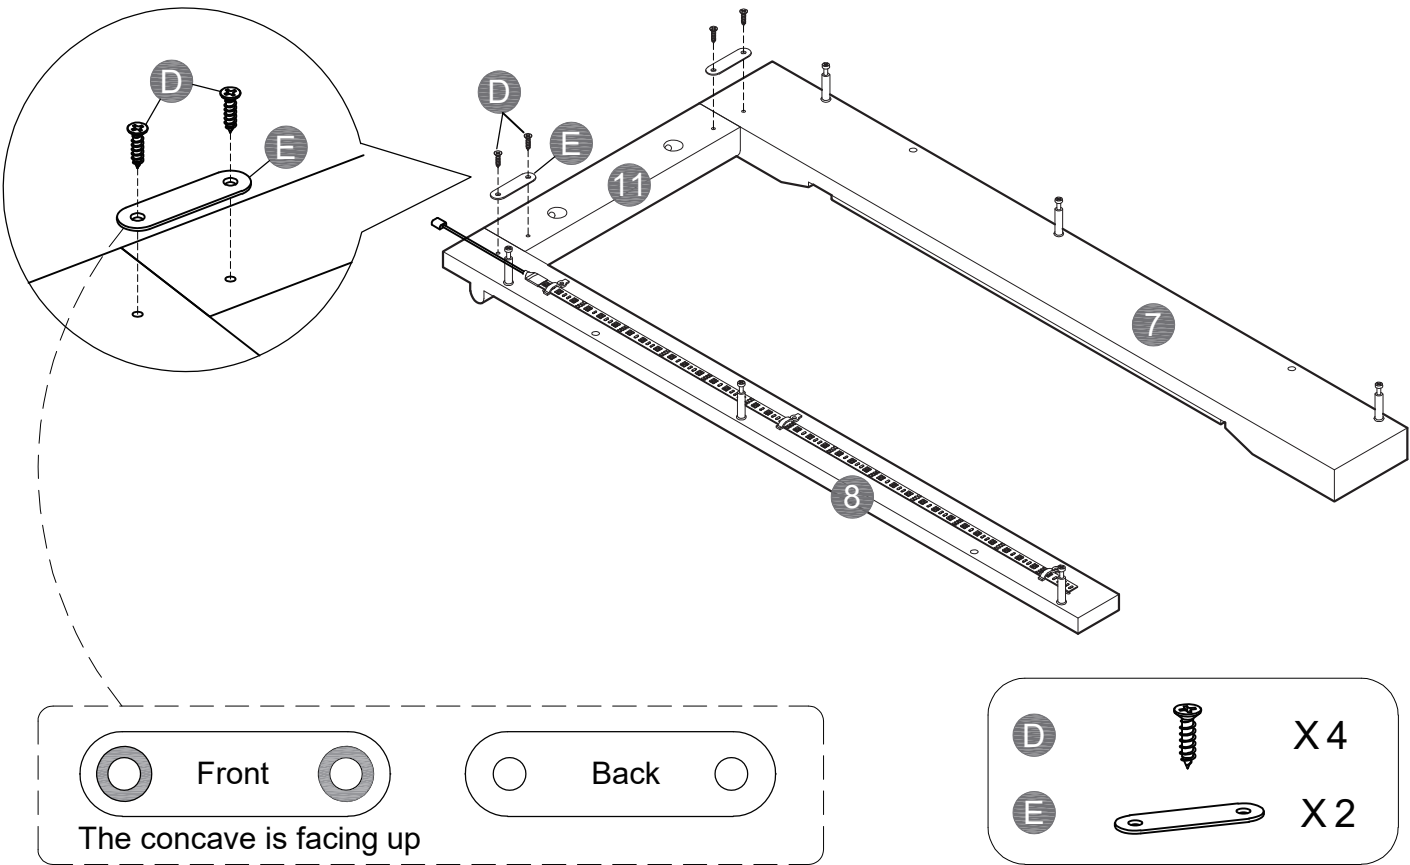


Step 47

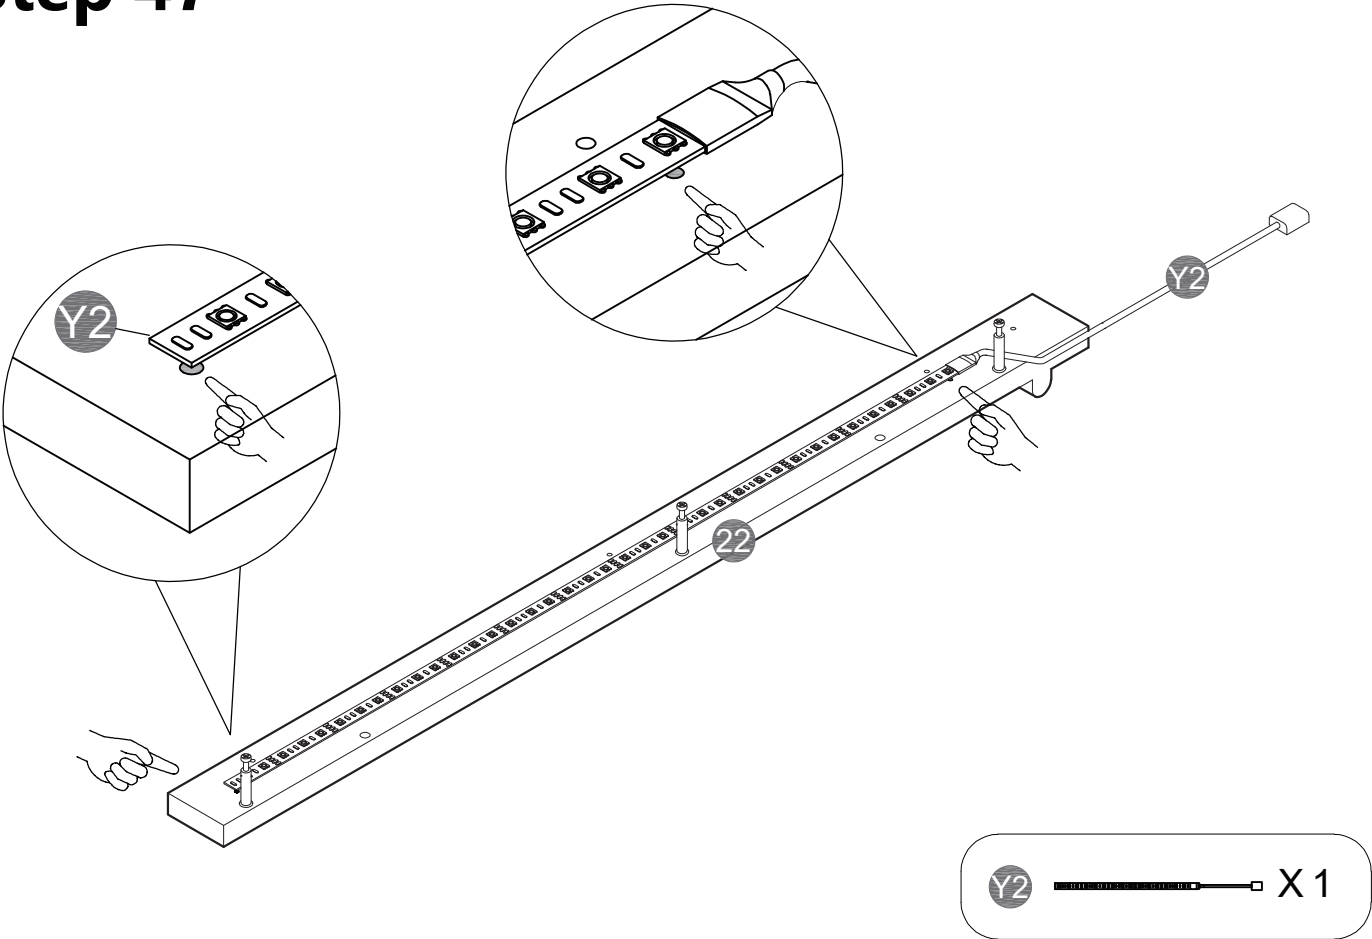


Step 48

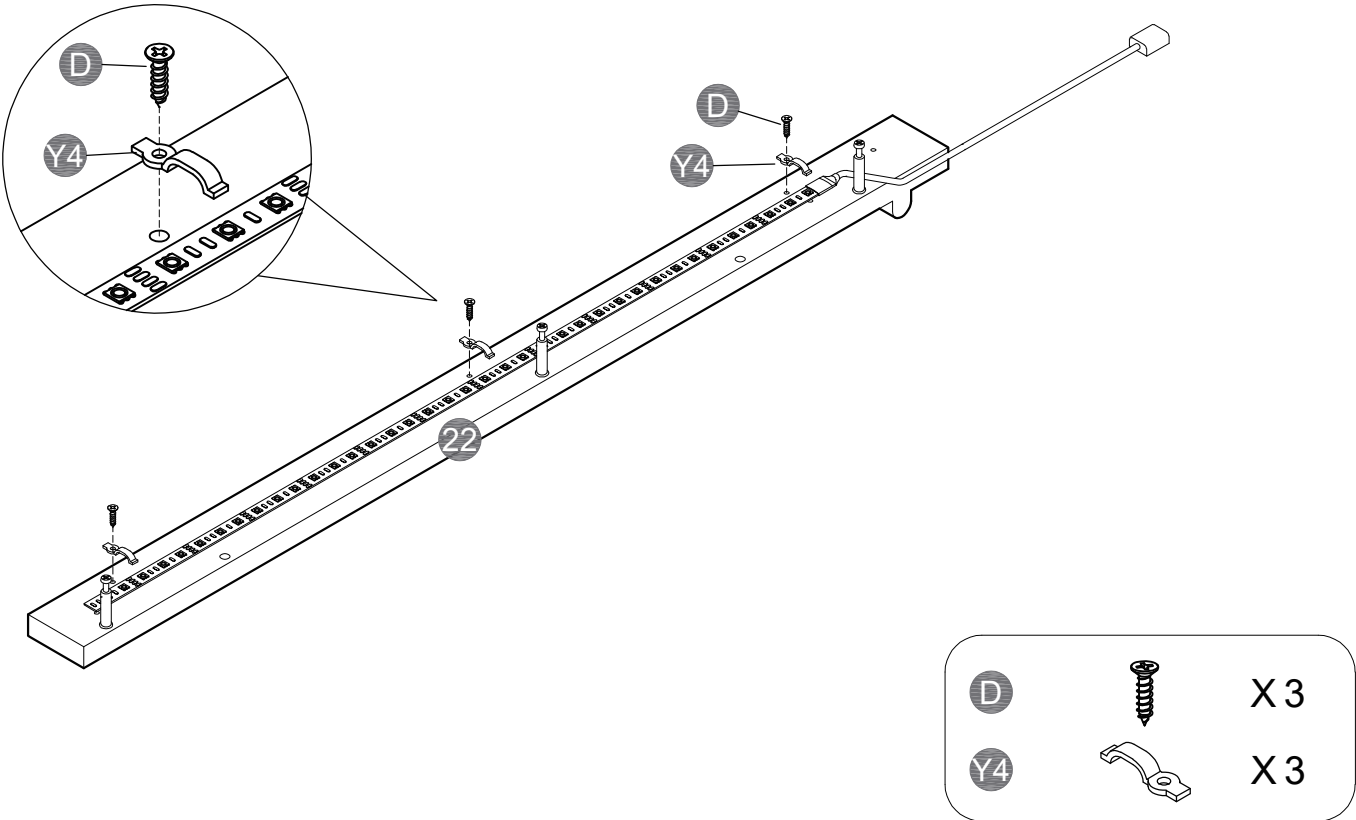



Step 49

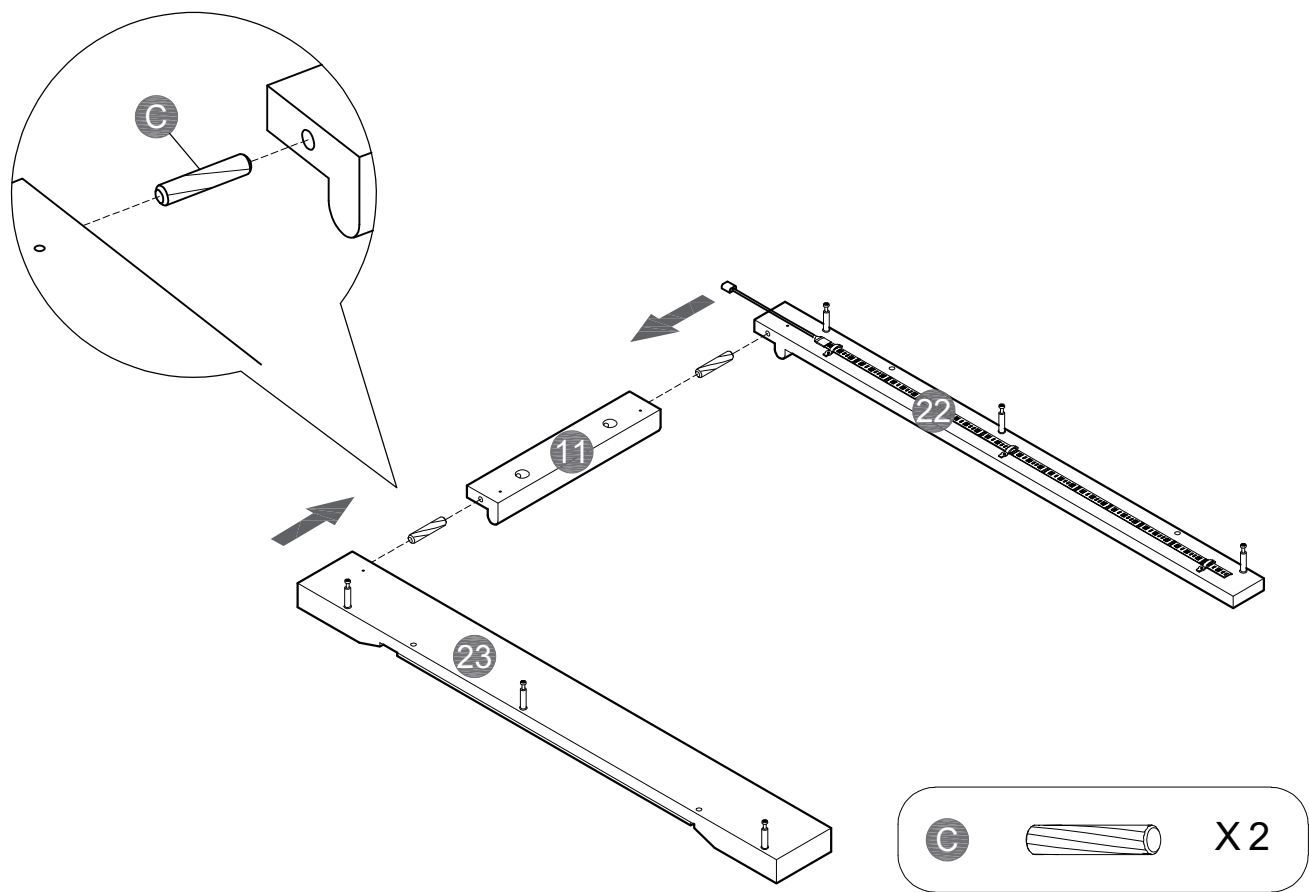





Step 50

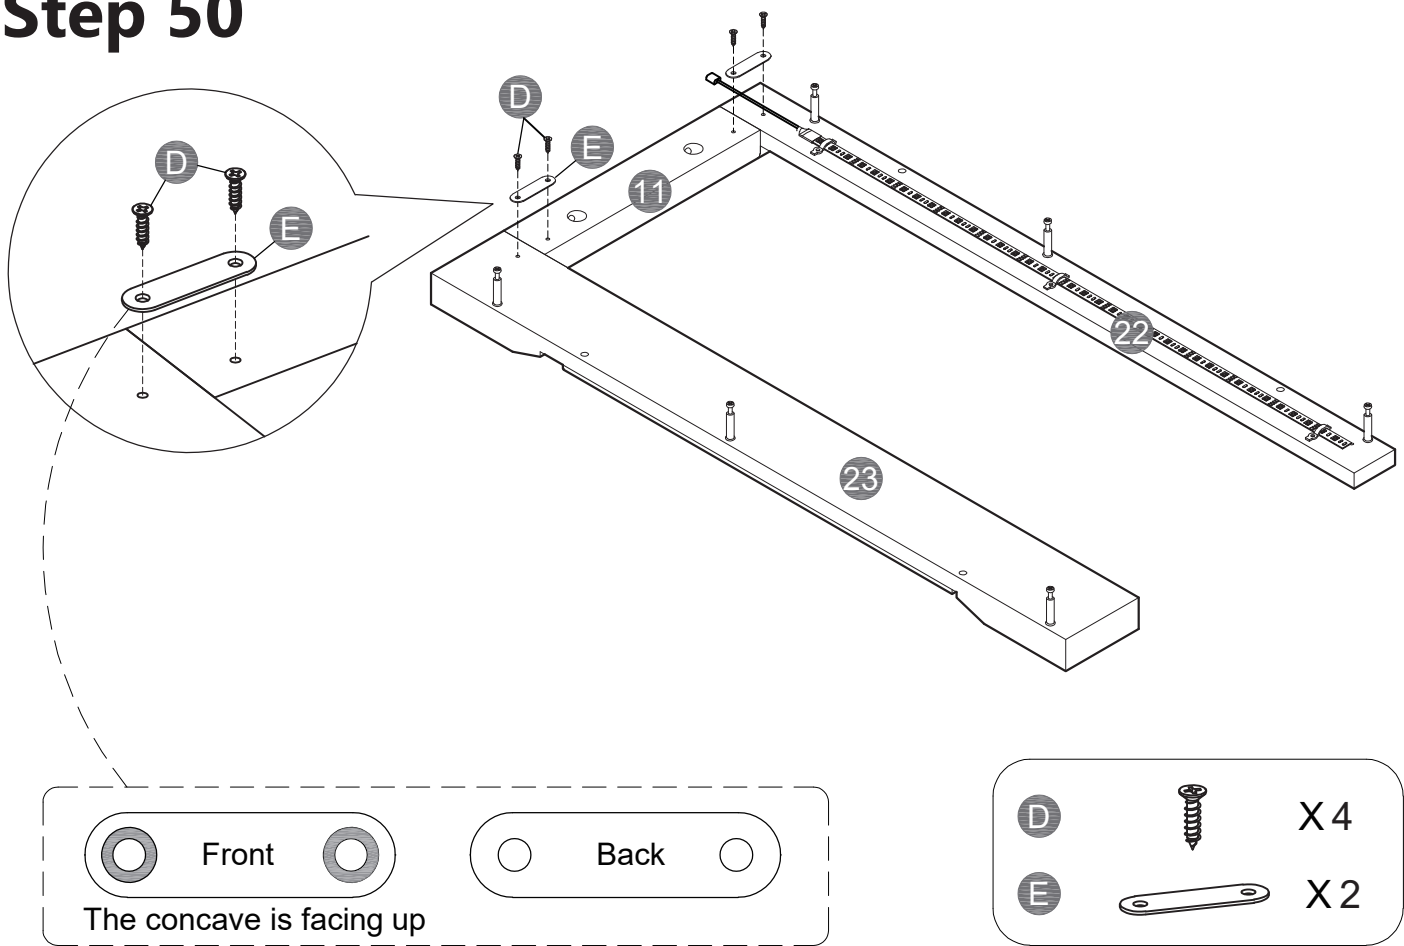


Step 51

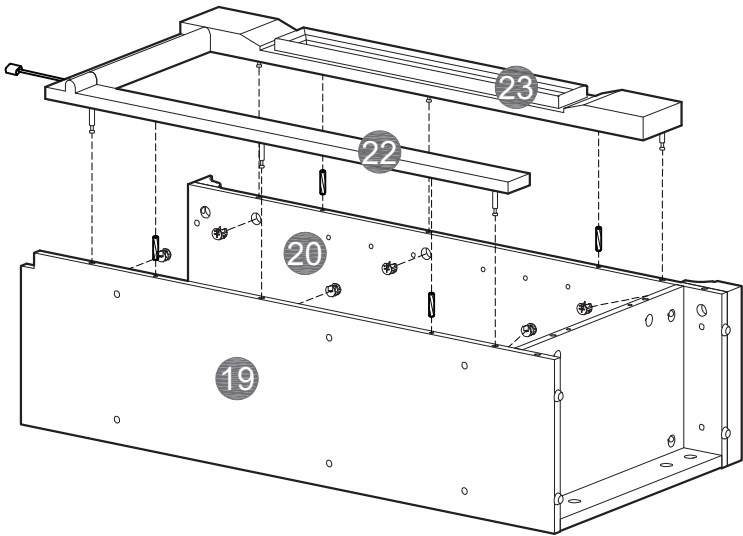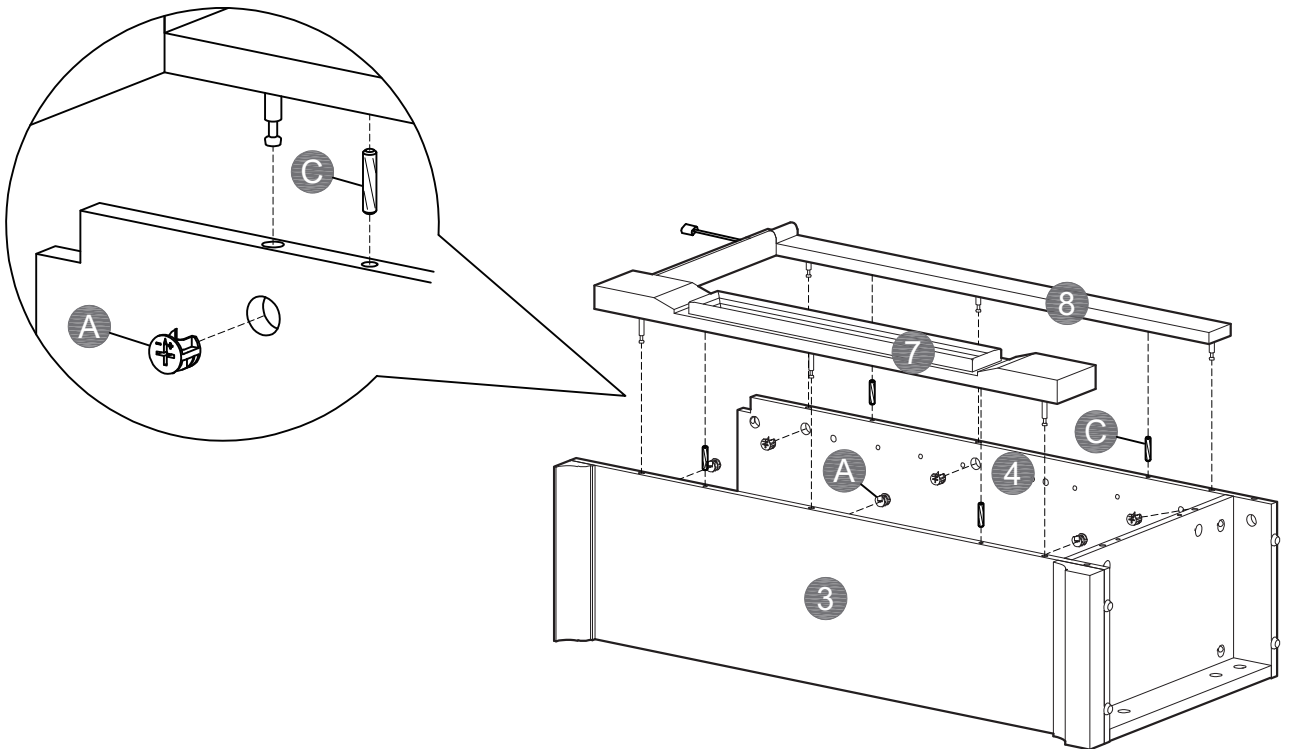



A		X 12
C		X 8

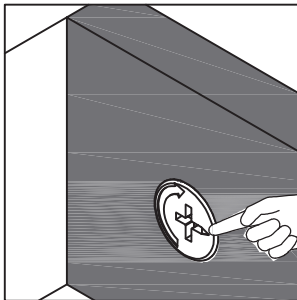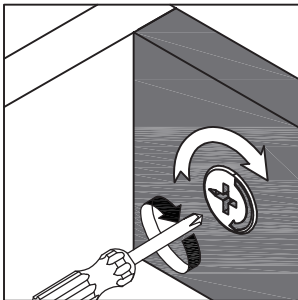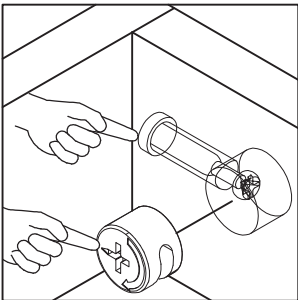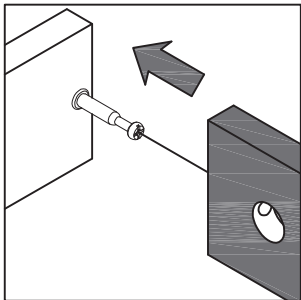


Step 52

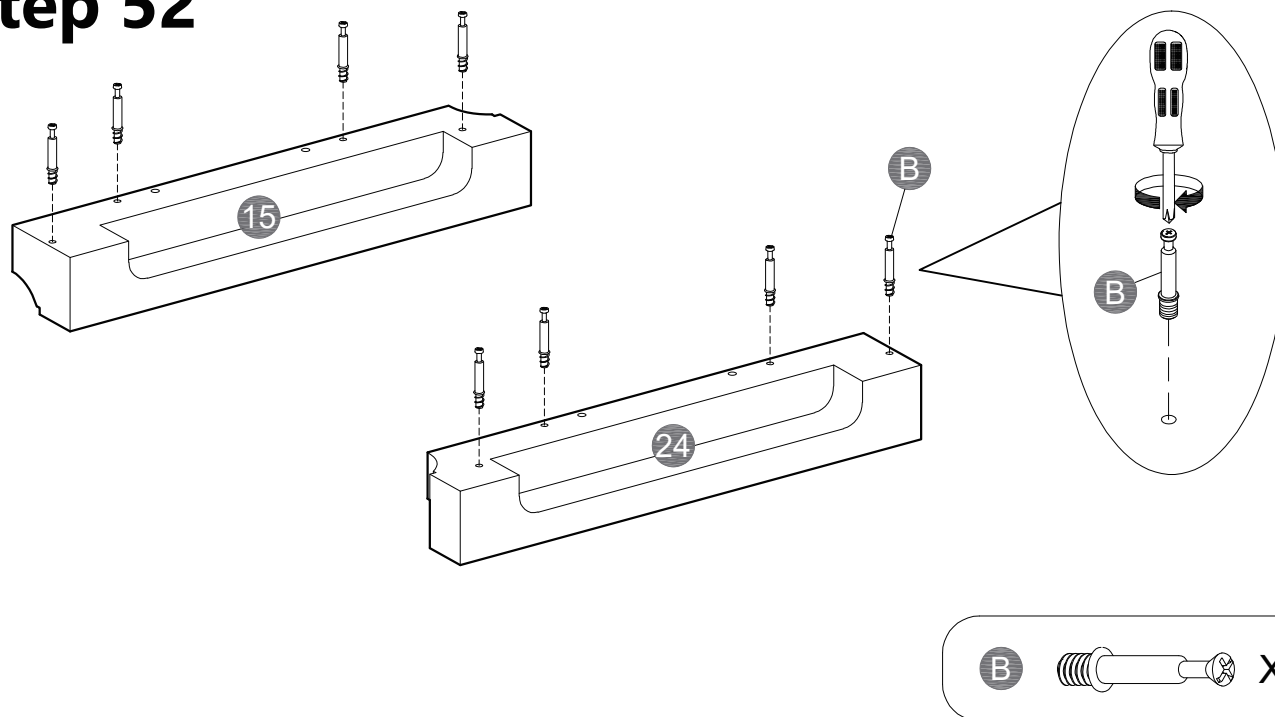


Step 53

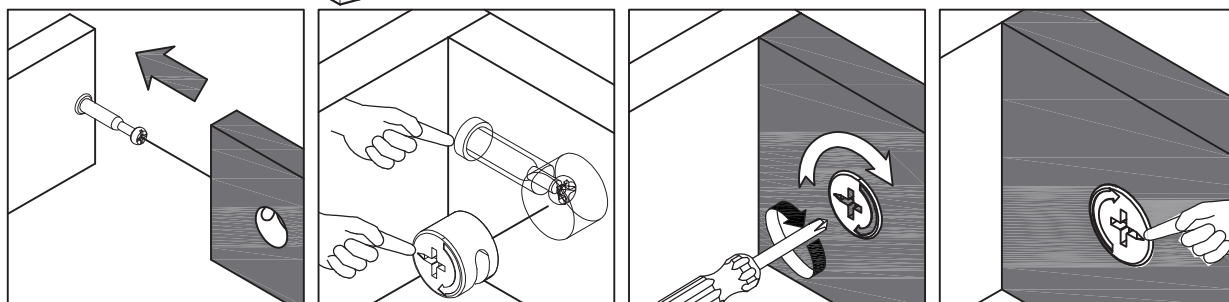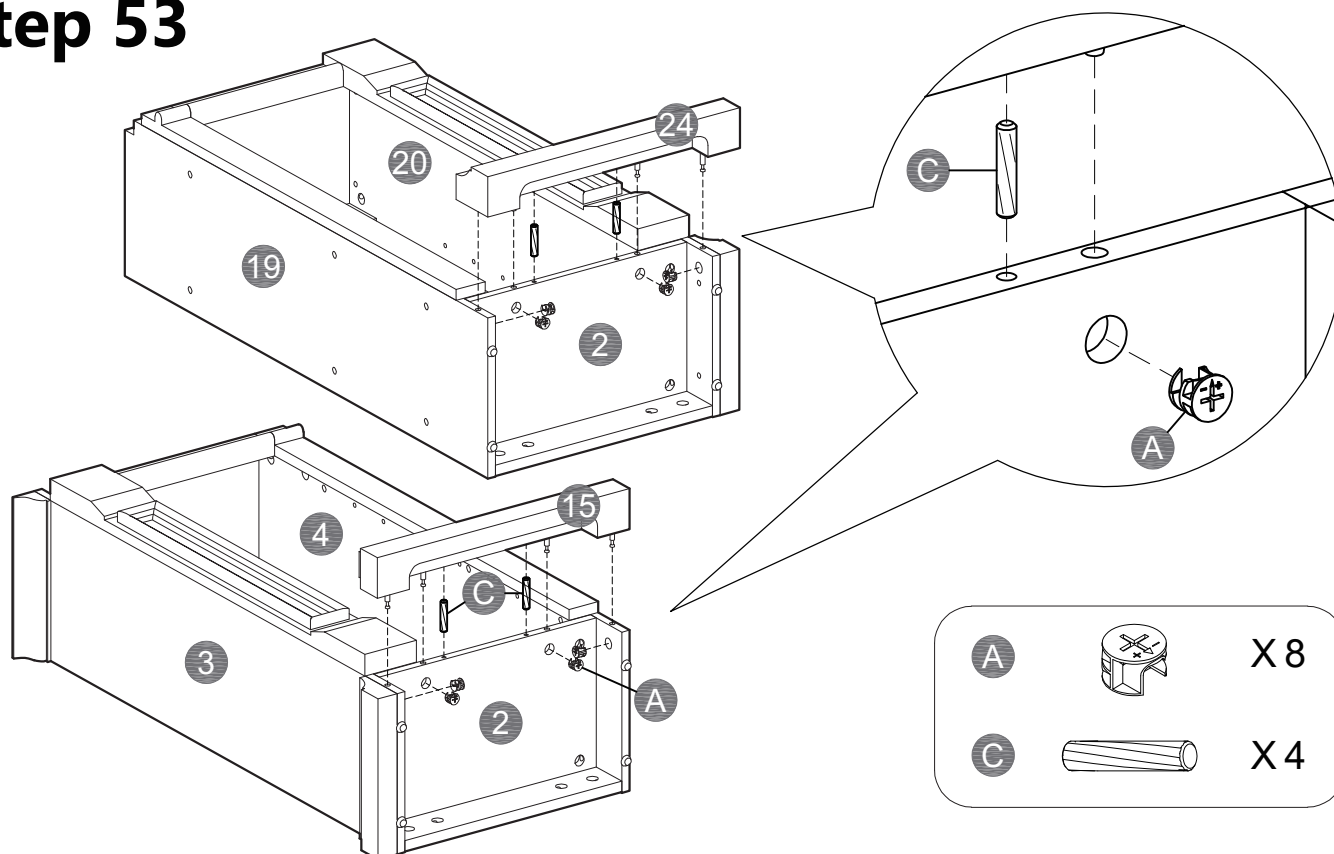


Step 54

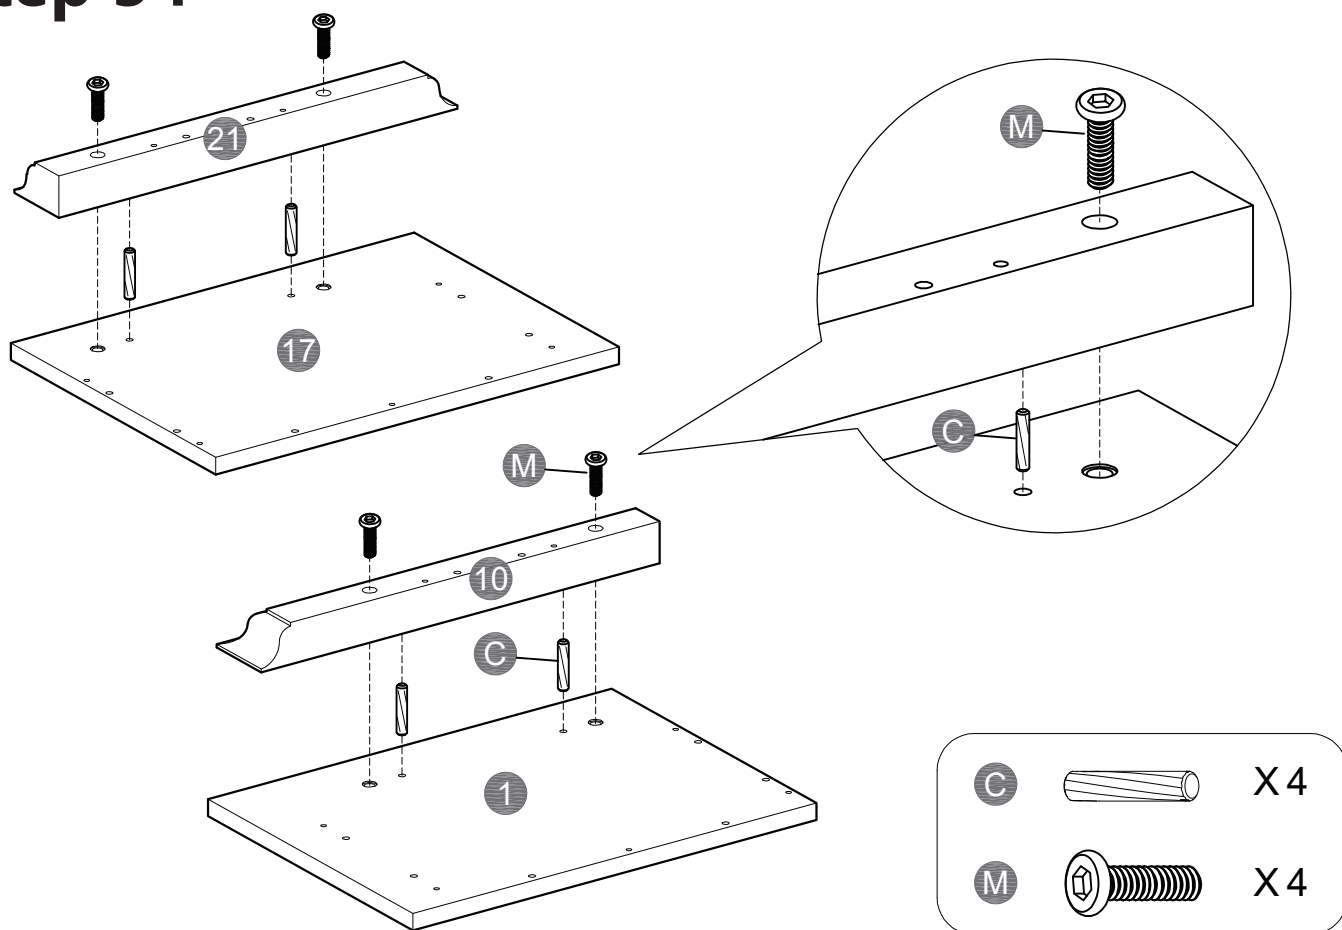


Step 55

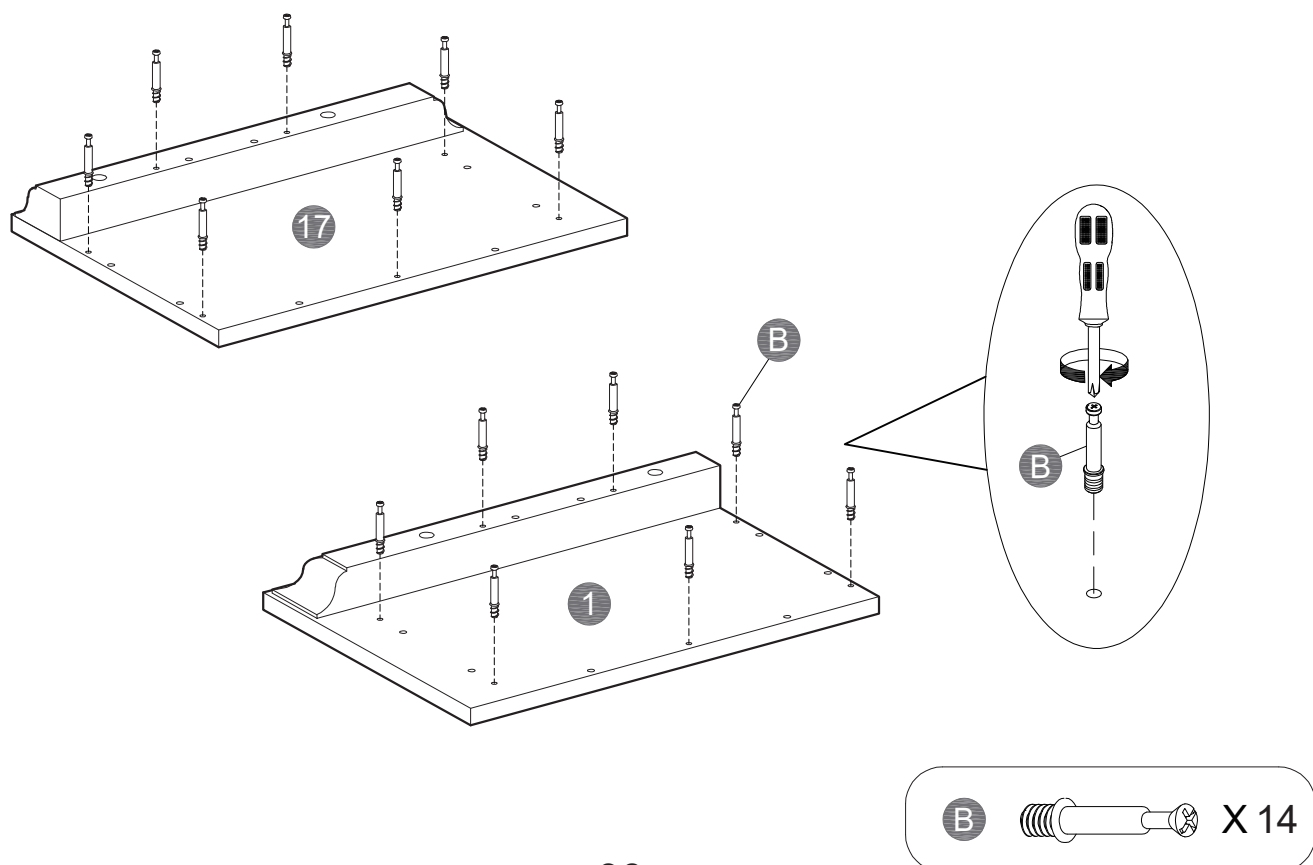


Step 56

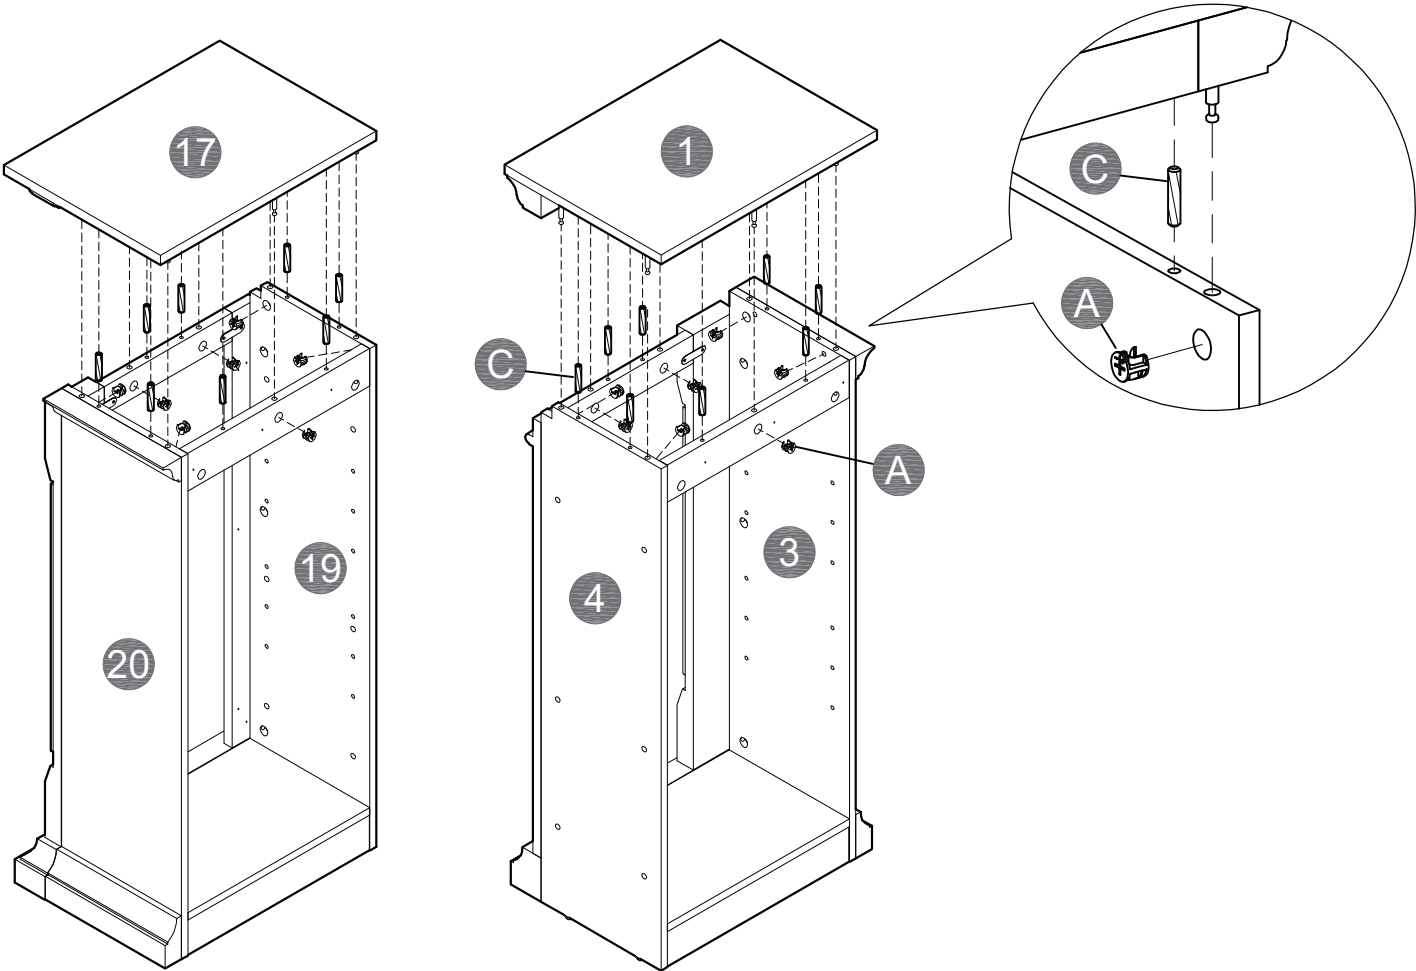


- | | | |
|---|--|------|
| A | | X 14 |
| C | | X 16 |

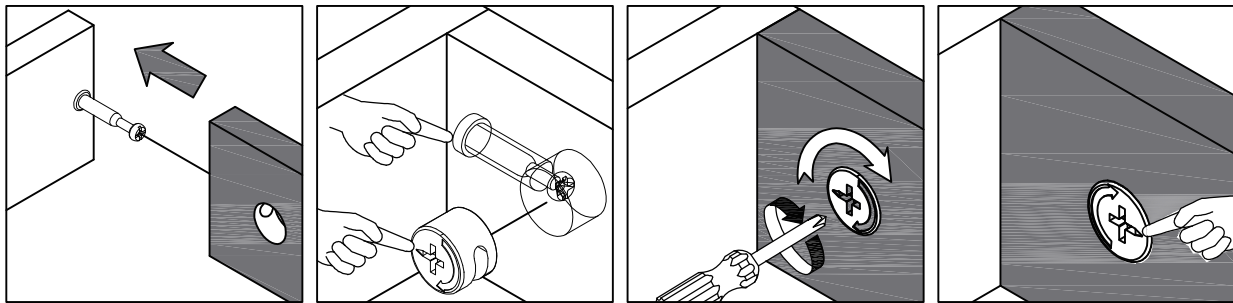


Step 57


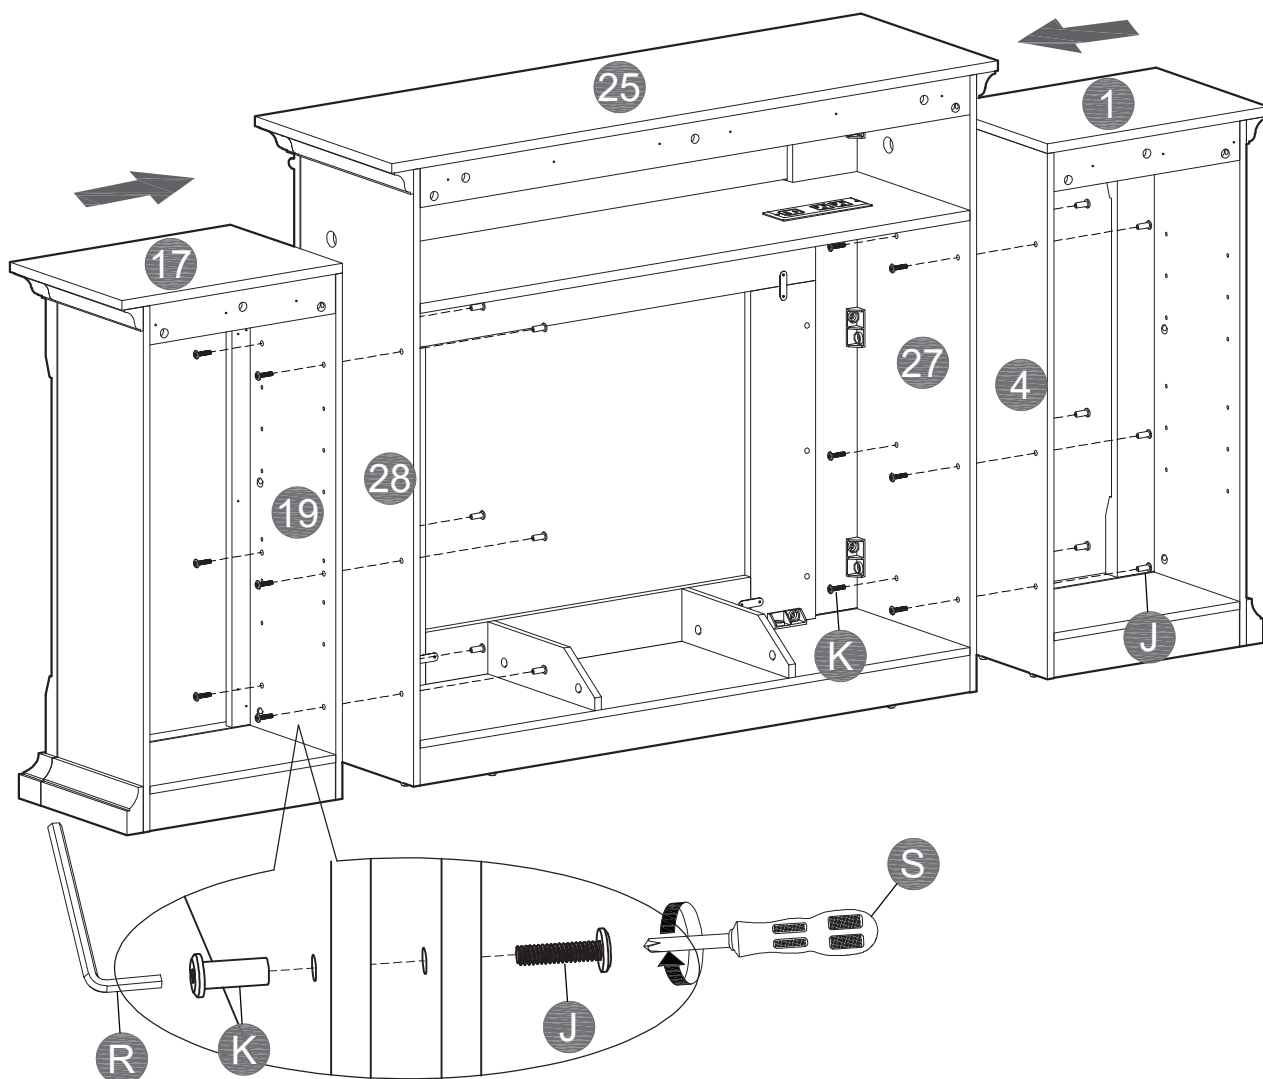


J		X 12
K		X 12


Step 58

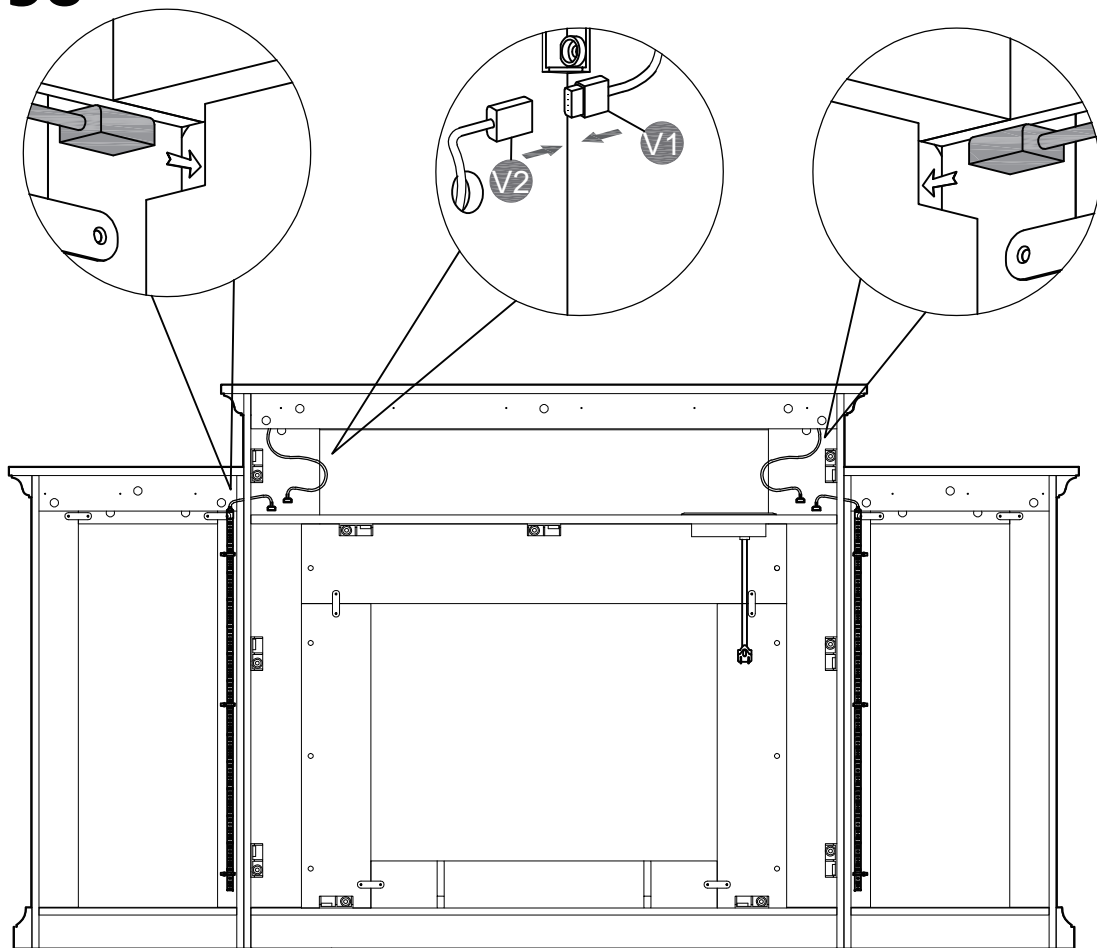



Step 59

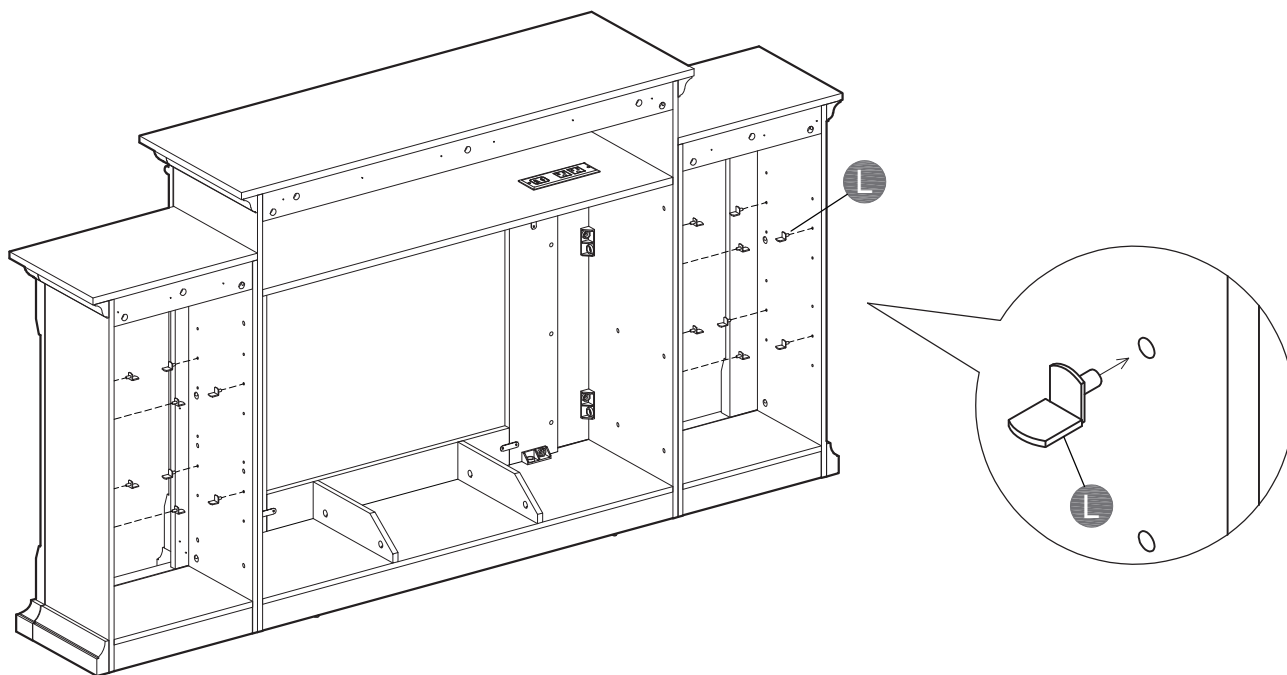


Step 60

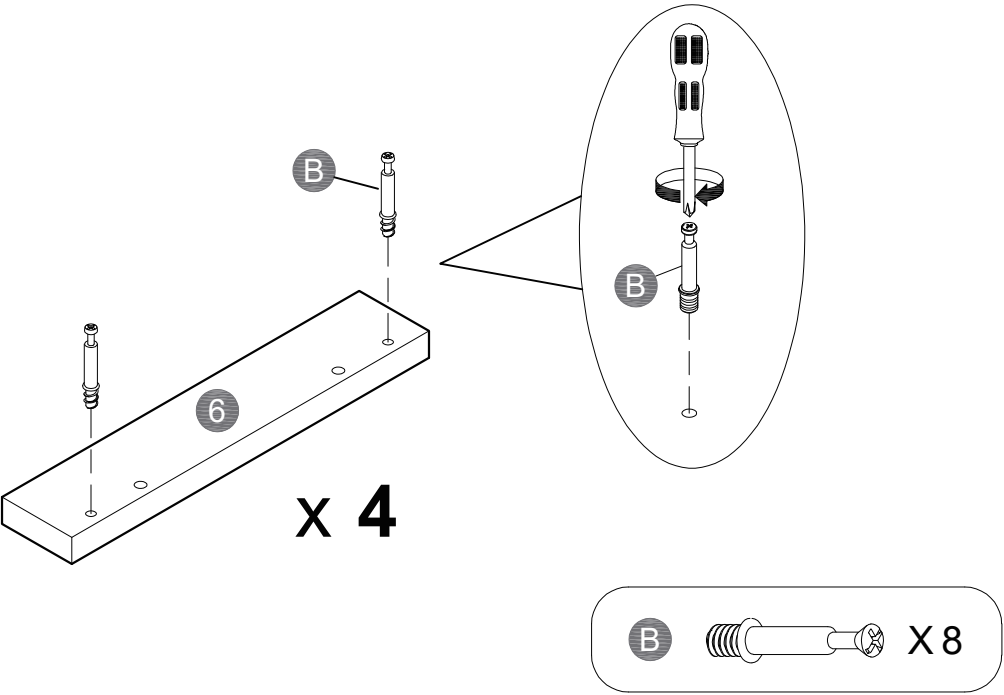


Step 61

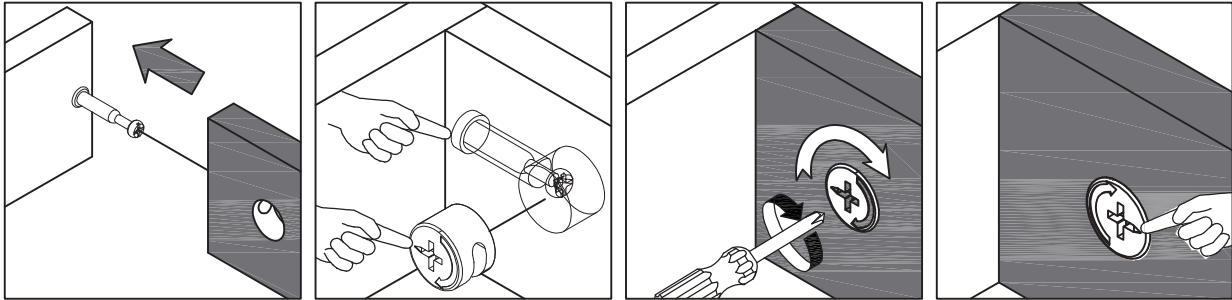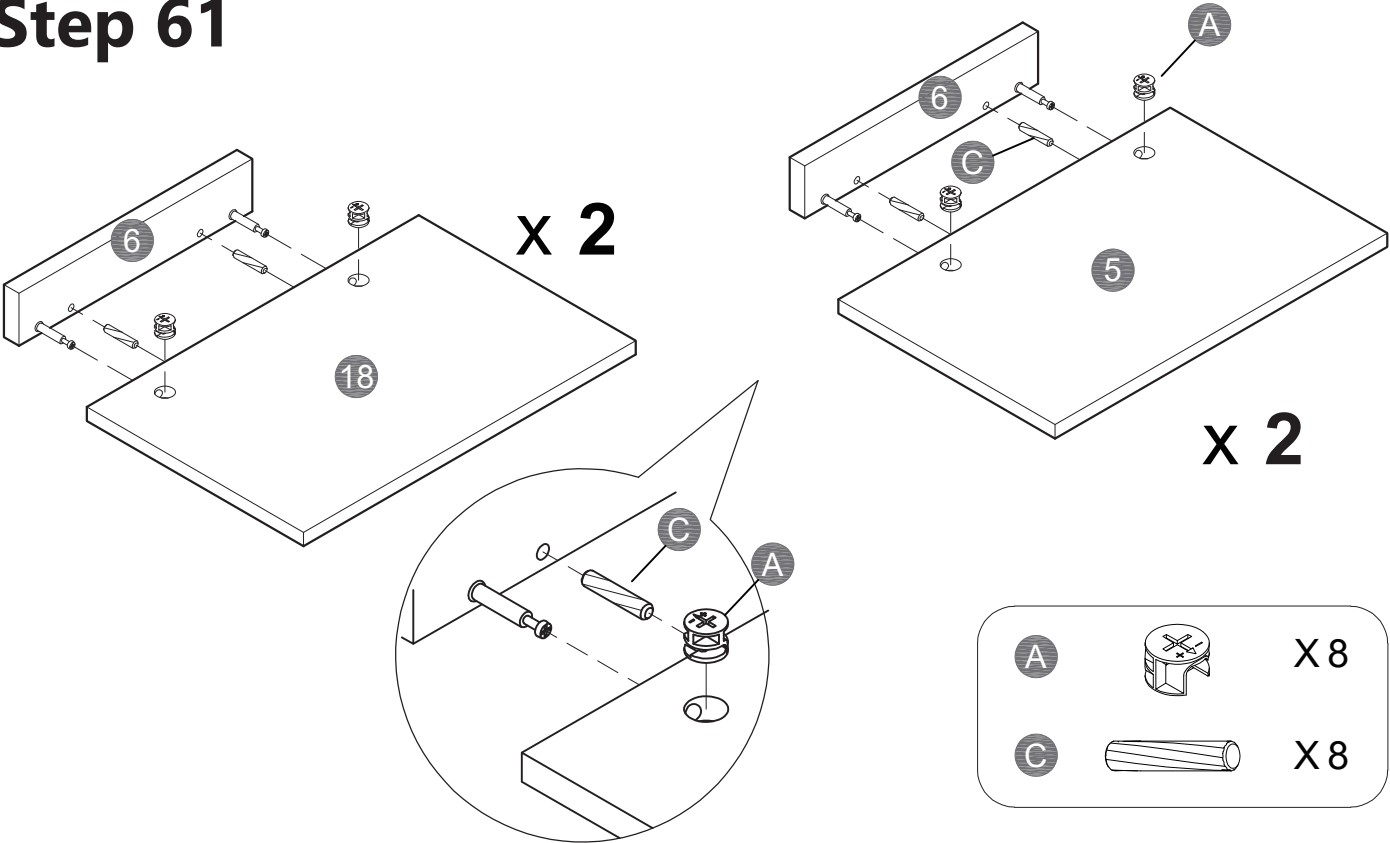



Step 62

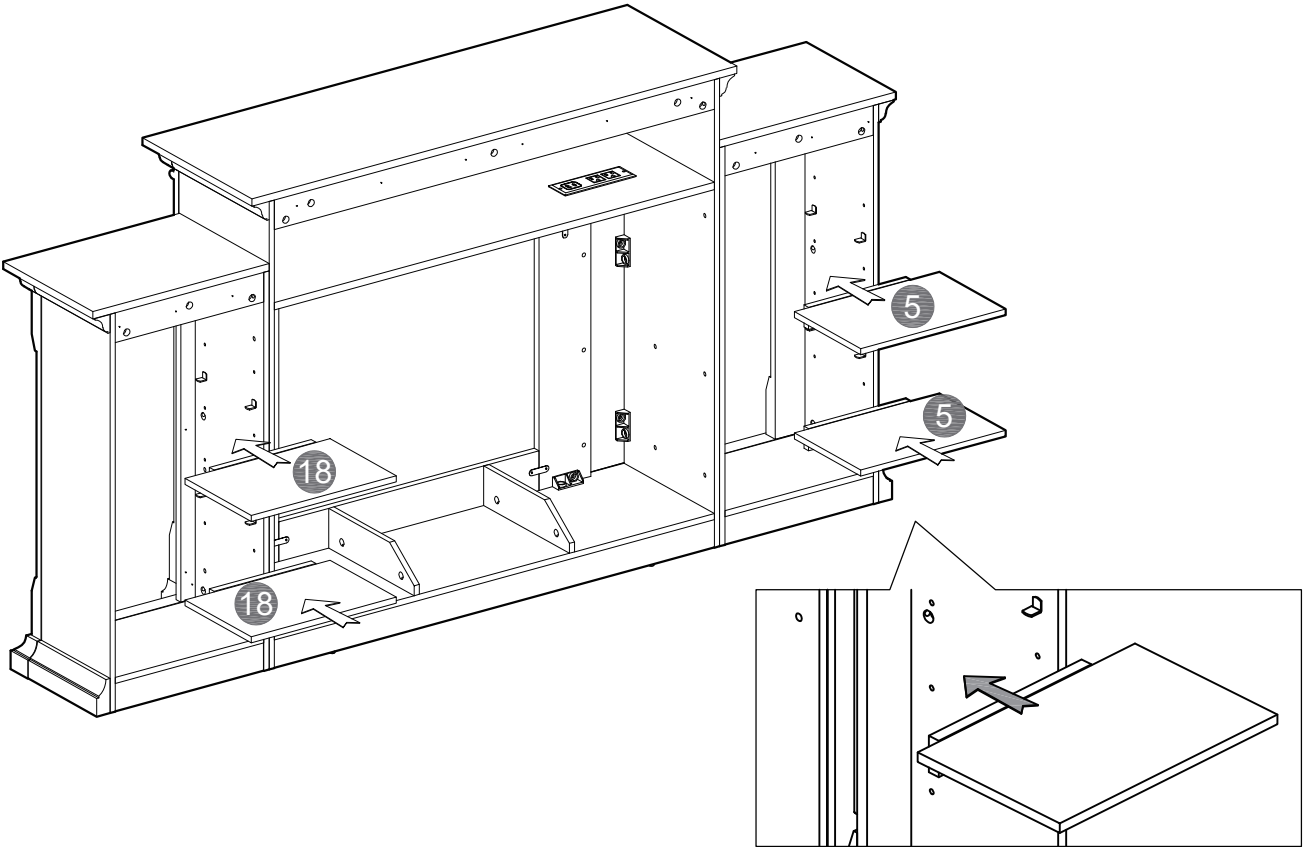

Step 63

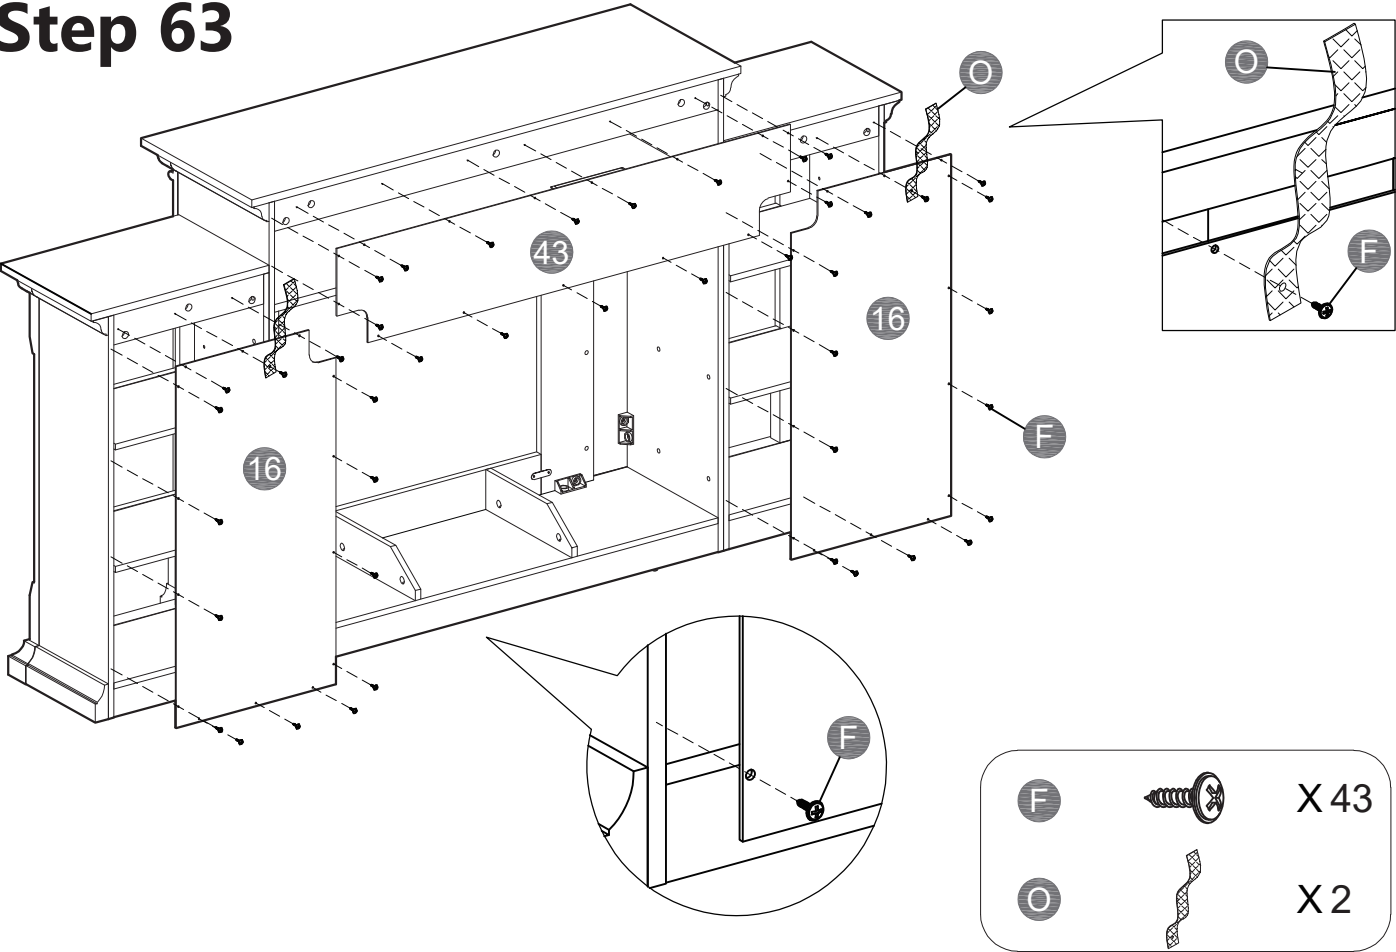


Step 64

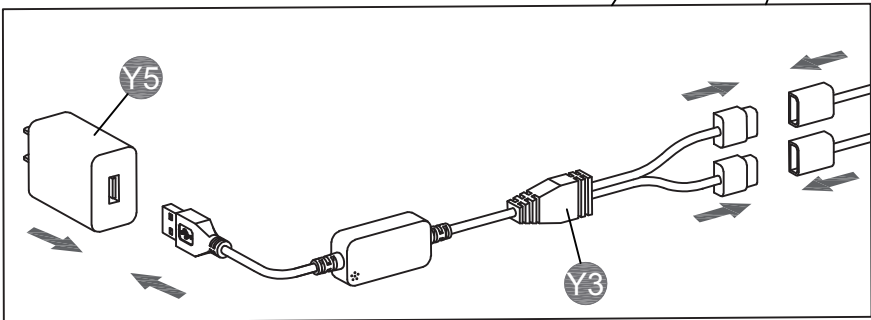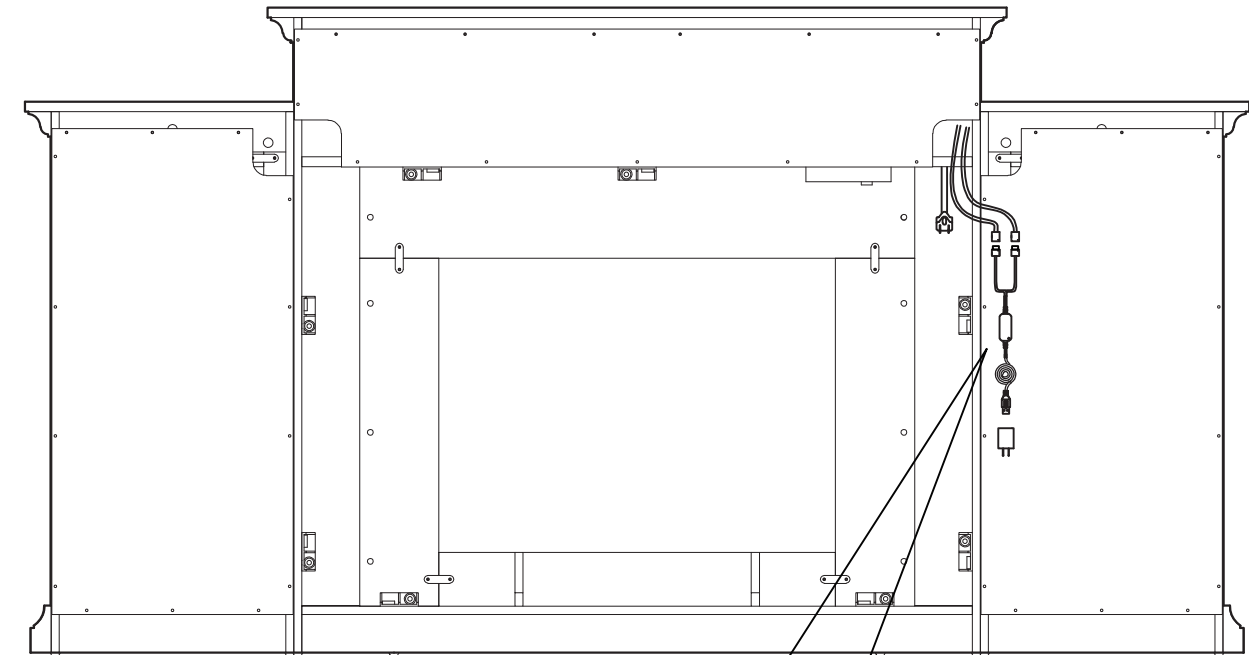

- | | | |
|----|--|-----|
| Y3 | | X 1 |
| Y5 | | X 1 |

Step 65

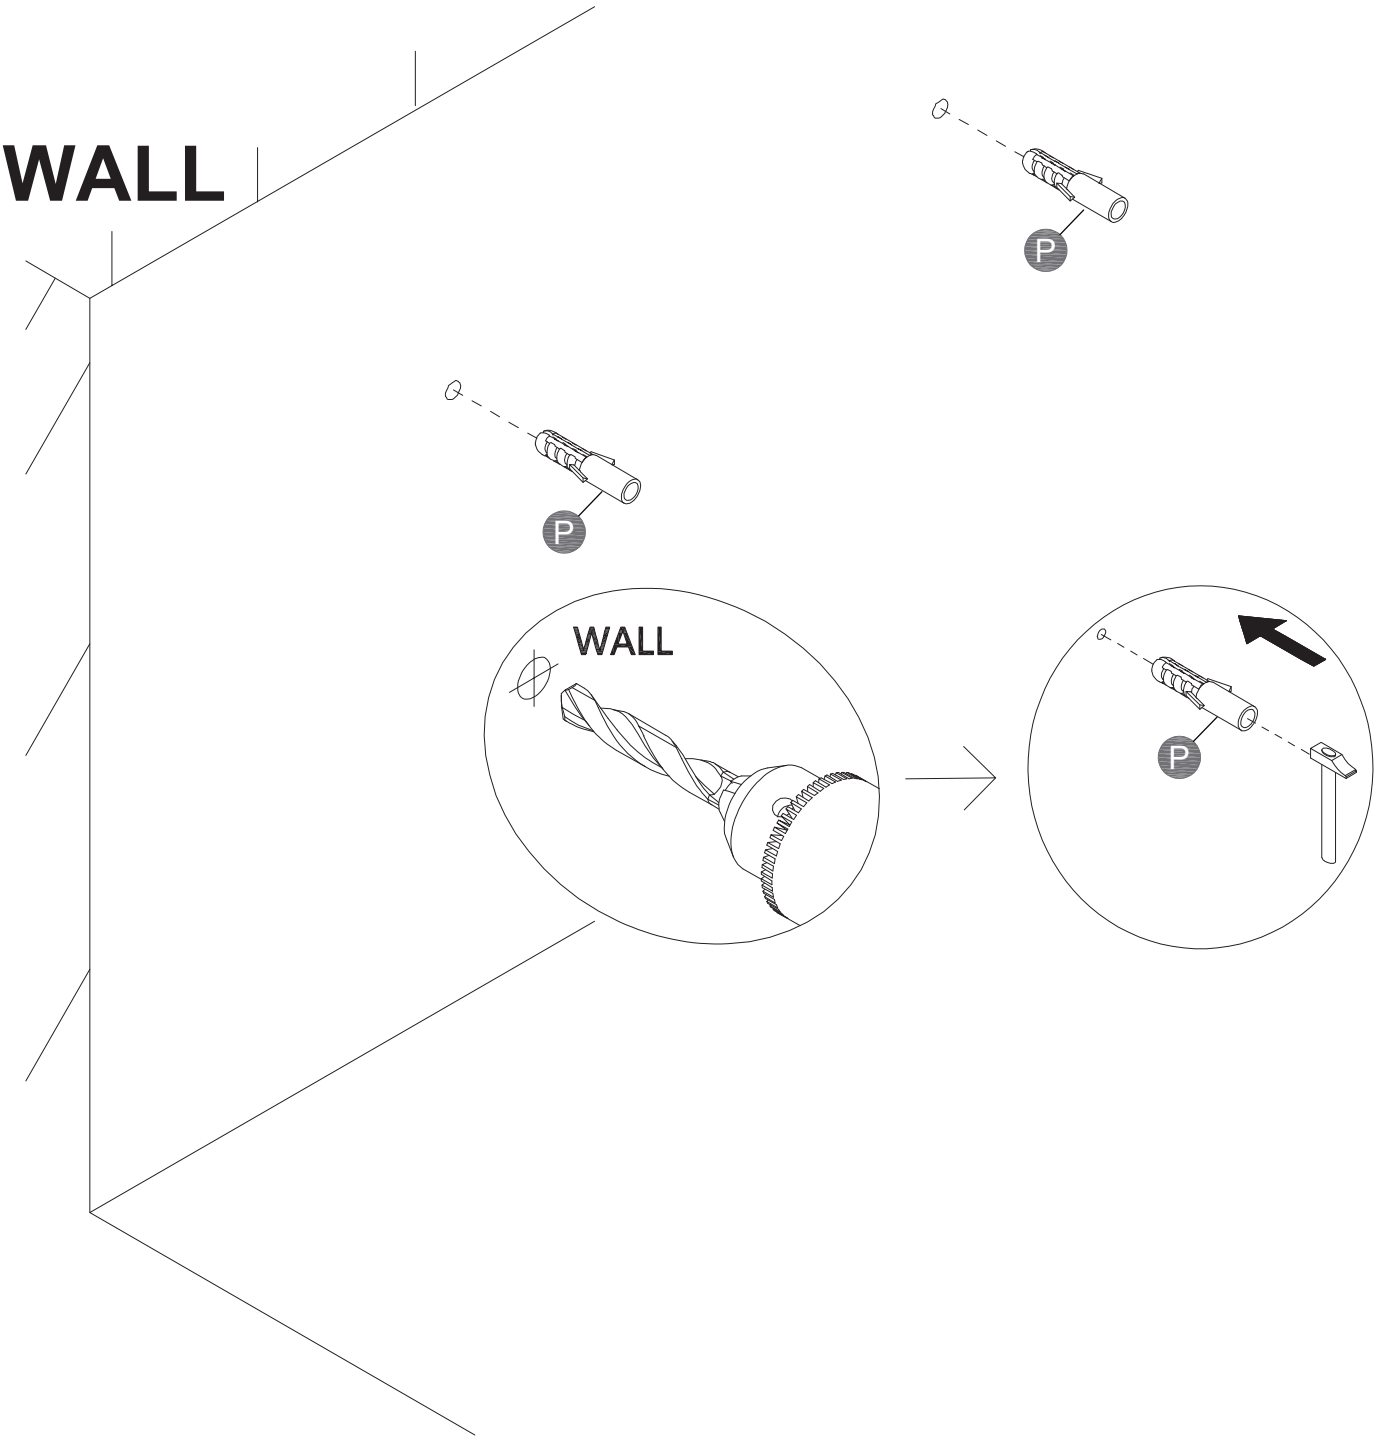




**P**



X 2

Step 66

WALL

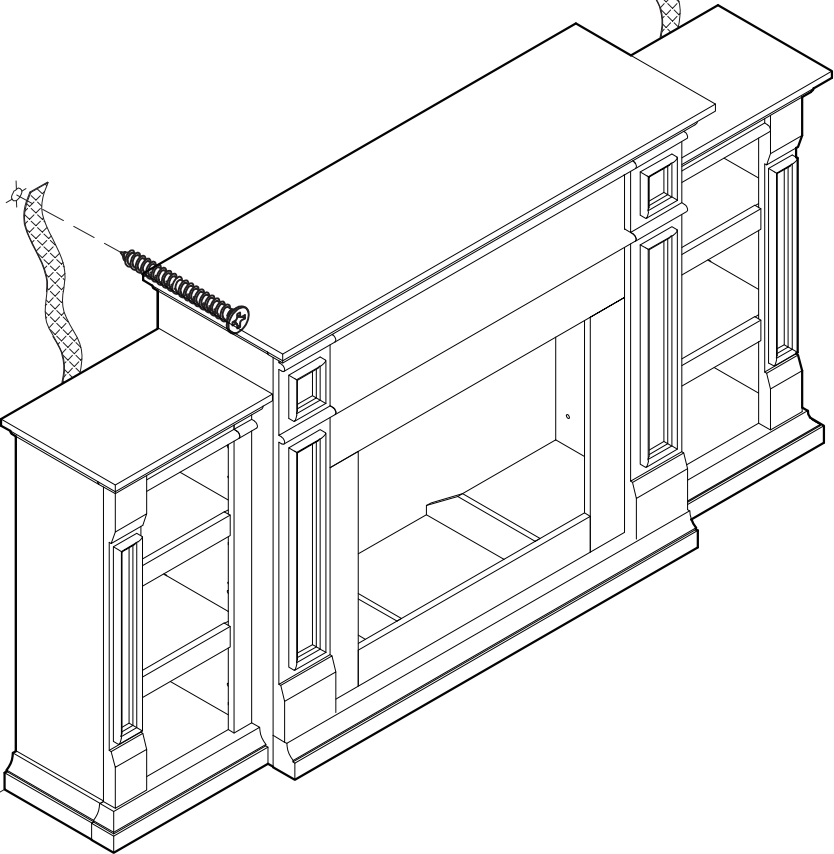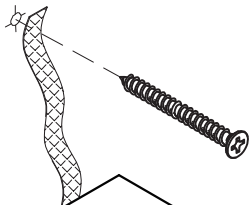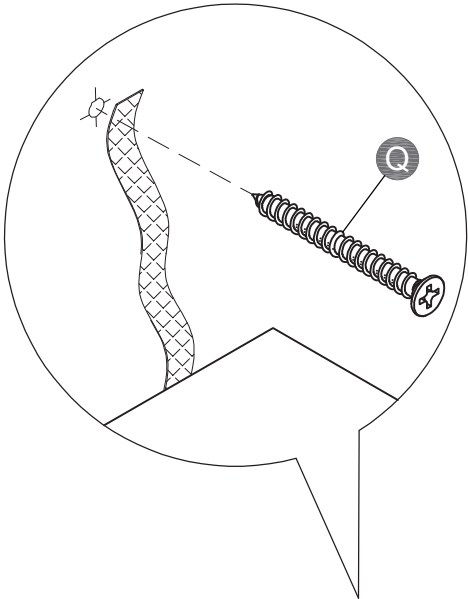



X 2