












PRODUCT ASSEMBLY INSTRUCTIONS

[Product Model: FS167-1220]

List :


					
Solid Surface Bathroom Sink x1	Fastener x4	Gaskets x4	Nut x4	Expansion sleeve x4	

Tools Required :

						
Hammer	Pencil	Wrench	Electrodrill	Gradienter	Steel tape	

Installation steps : 1


Measure the distance of the mounting holes, and the height you want, mark with the pencil.
(33"-36" is preferred for countertop height).

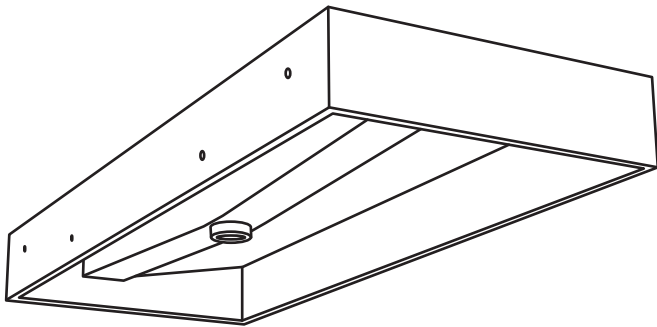

[The back of the product]


Installation steps : 2

Drill the hole at the mark with electric drill.

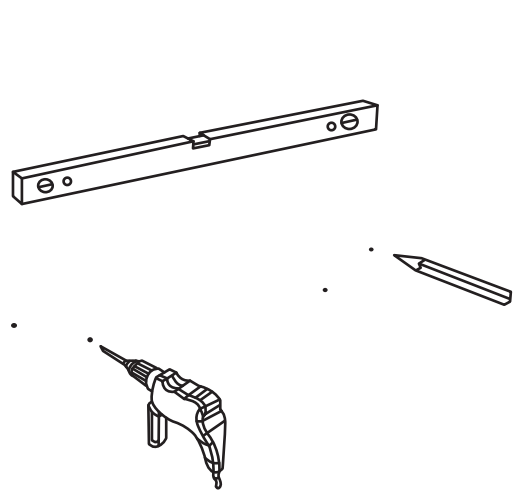

Installation steps : 3

Install the expansion sleeve first, then the screws.
⚠ Make sure the screws are securely installed.

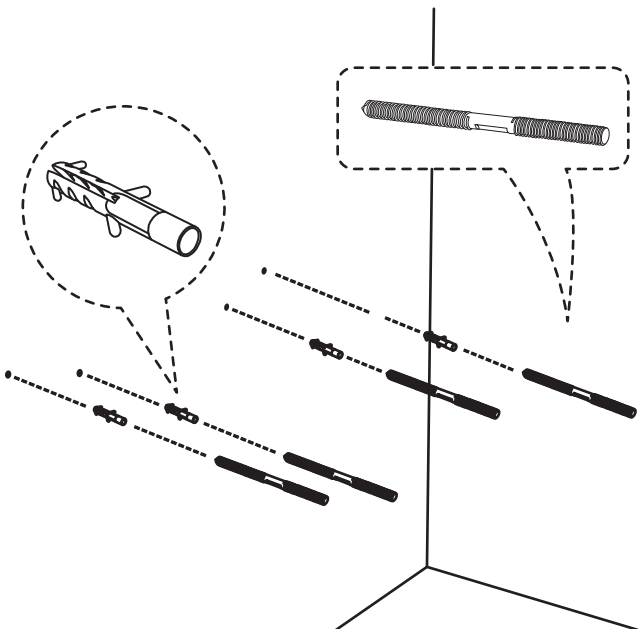

Installation steps : 4

Hold the basin and use a spanner to lock the basin to the wall.

