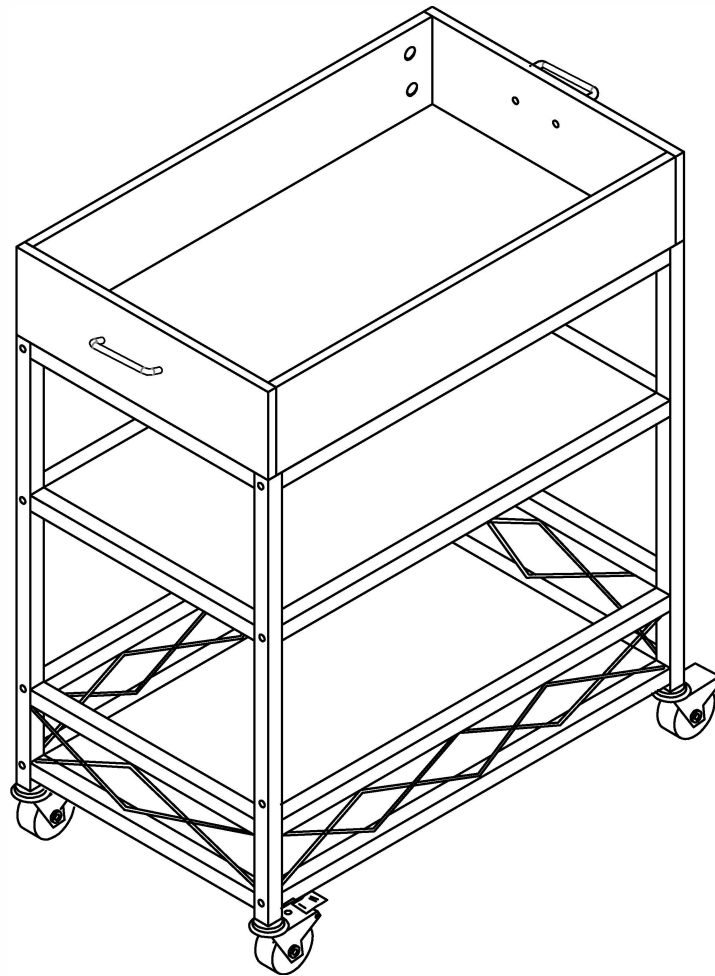


ASSEMBLY INSTRUCTIONS

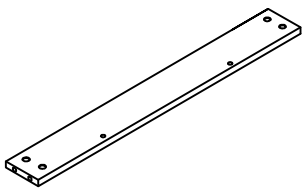
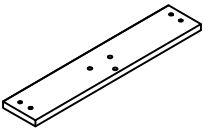
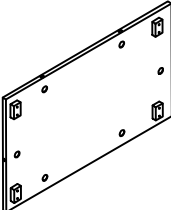
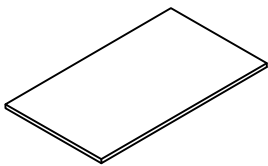
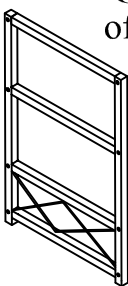
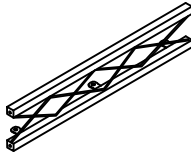
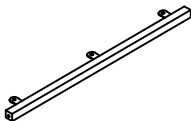
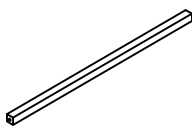
Serving Cart








NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Please never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.


Part List

A1. Quantity of 2  Apron	A2. Quantity of 2  Apron	A3. Quantity of 1  Bottom Panel	A4. Quantity of 2  Shelf
A5. Quantity of 2  Side Frame	A6. Quantity of 2  Connecting Frame	A7. Quantity of 2  Connecting Bar	A8. Quantity of 2  Connecting Bar
A9. Quantity of 2  Handle	A10. Quantity of 2  Caster	A11. Quantity of 2  Caster with brake	

Hardware List


B1. Quantity of 14  Cam-bolt	B2. Quantity of 14  Cam-Lock	B3. Quantity of 16  Bolt
B4. Quantity of 12  Screw	B5. Quantity of 4  Bolt	 Allen Wrench

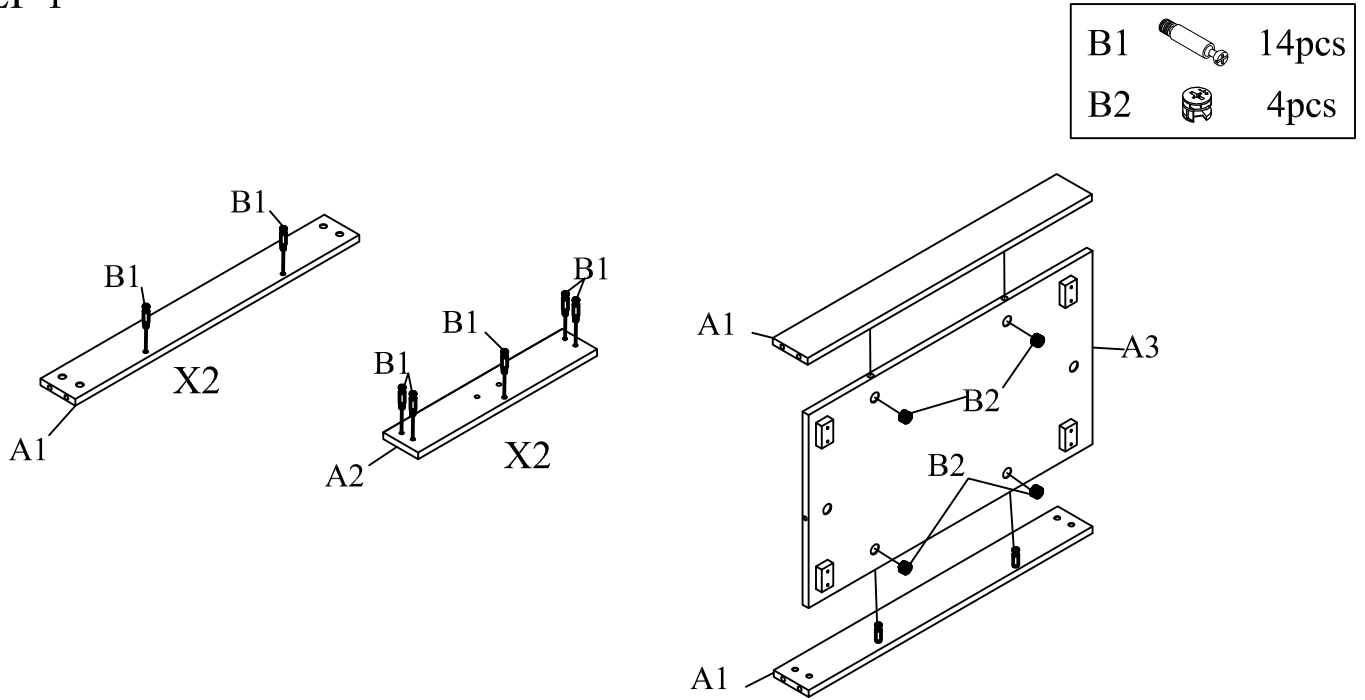STEP 1




- 1). Tighten Cam-bolts B1 to Aprons A1 & A2 as shown above.
- 2). Assemble Aprons A1 to Bottom Panel A3 using Cam-Locks B2.

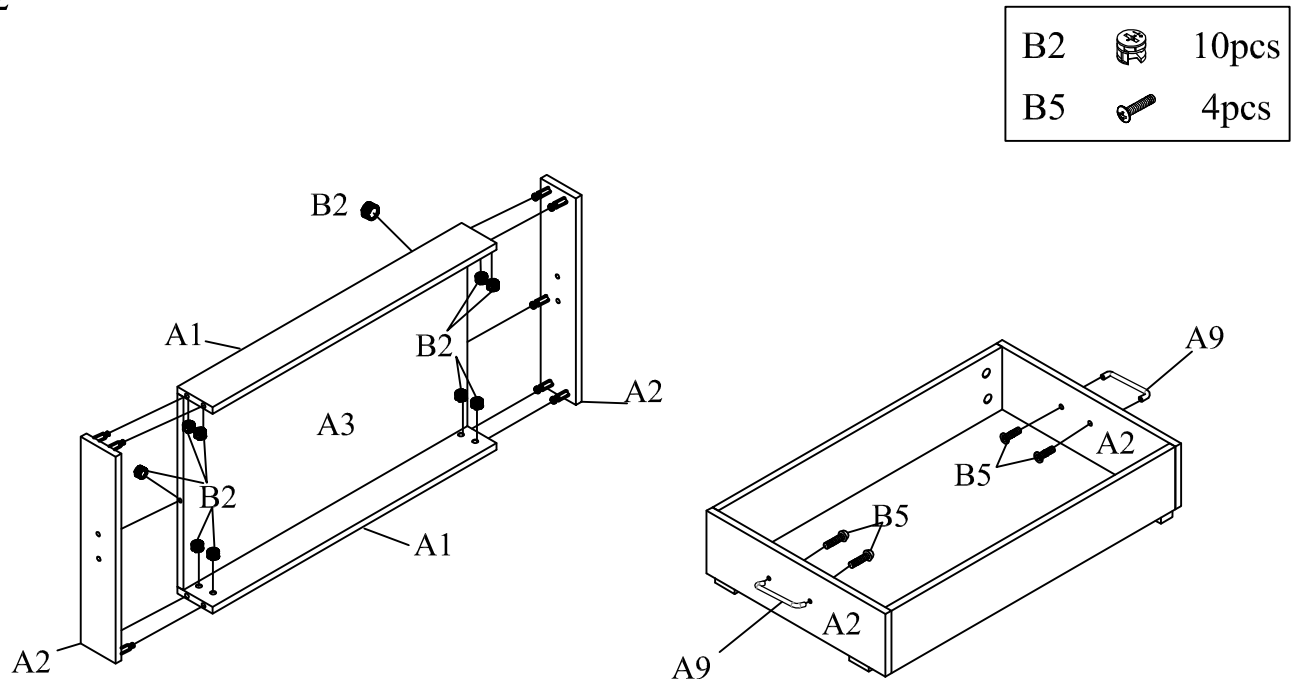STEP 2




- 1). Assemble Aprons A2 to Aprons A1 and Bottom Panel A3 using Cam-Locks B2.
- 2). Attach Handles A9 to Aprons A2 using Bolts B5.

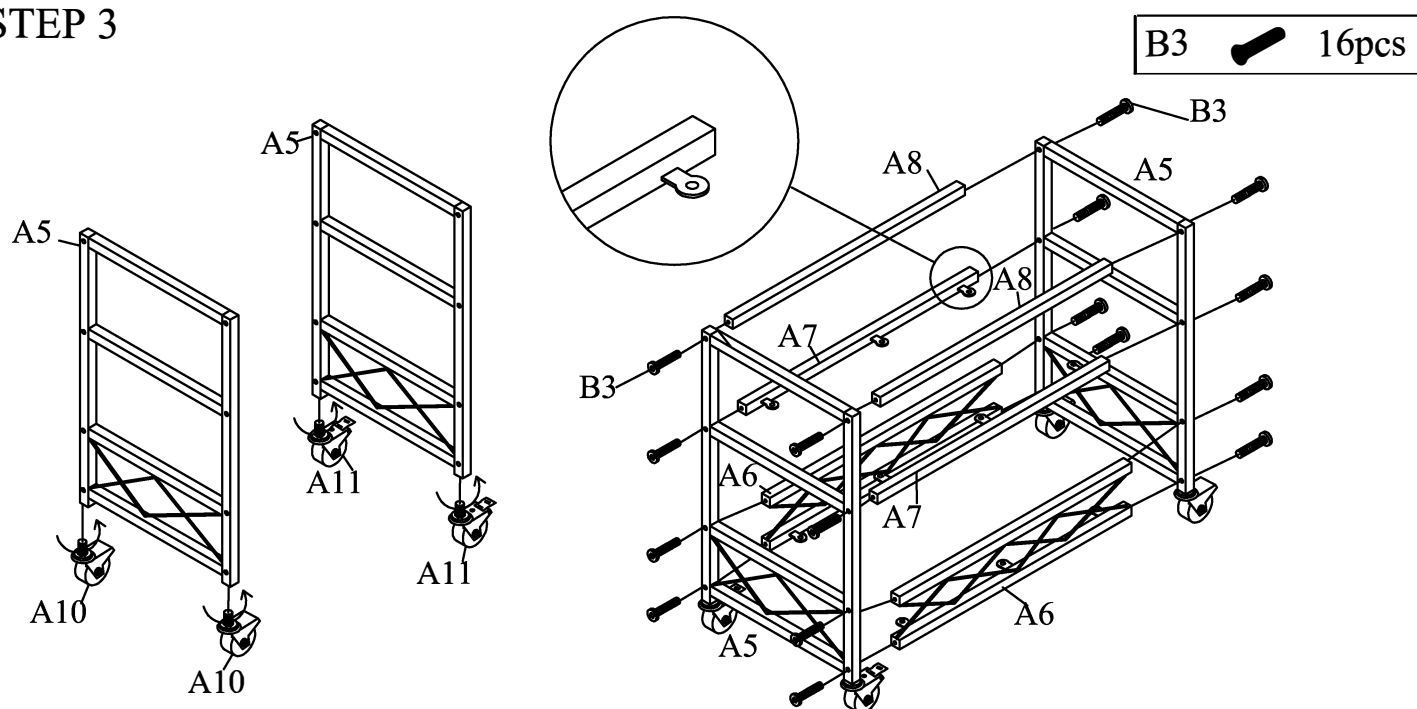STEP 3



- 1). Tighten Casters A10&A11 to the bottom of Side Frames A5 as shown above.
 - 2). Assemble Side Frames A5 to Connecting Frames A6 and Connecting Bars A7&A8 using Bolts B3.
- Note: Please do not tighten Bolts B3 until Step 4.

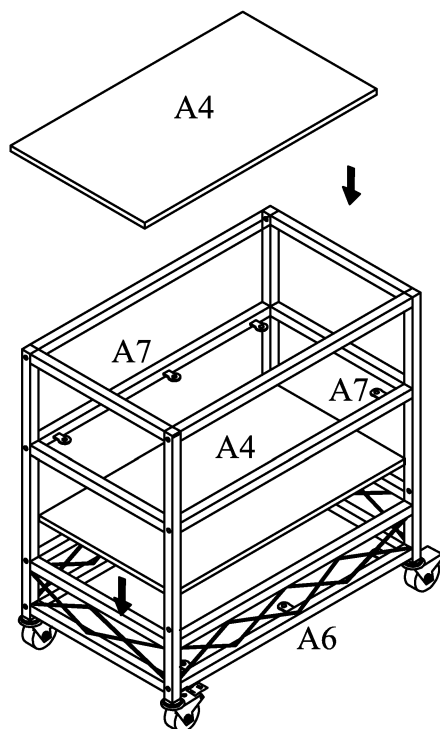
STEP 4



Place Shelves A4 onto Connecting Frames A6 and Connecting Bars A 7 as shown above. Then tighten all B3 bolts.


STEP 5

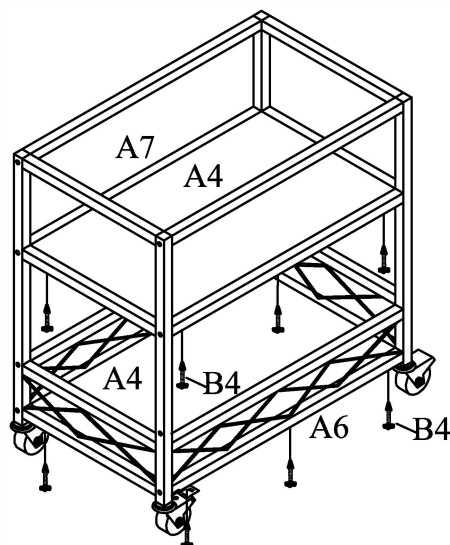B4  12pcs



Assemble Shelves A4 to Connecting Frames A6 and Connecting Bars A7 using Screws B4.

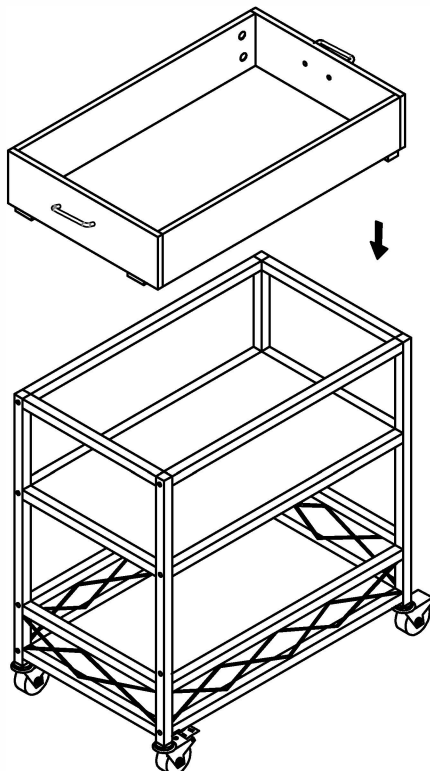STEP 6



Place the serving drawer onto the unit as shown above.