


- **6**26 679 3588
- support@trendytotesinc.com
- 162 Atlantic St, Pomona, CA 91768

ASSEMBLY INSTRUCTIONS BATHROOM VANITY TOP

- support@trendytotesinc.com
- **6** 626 679 3588




MODEL NBT-FA72W

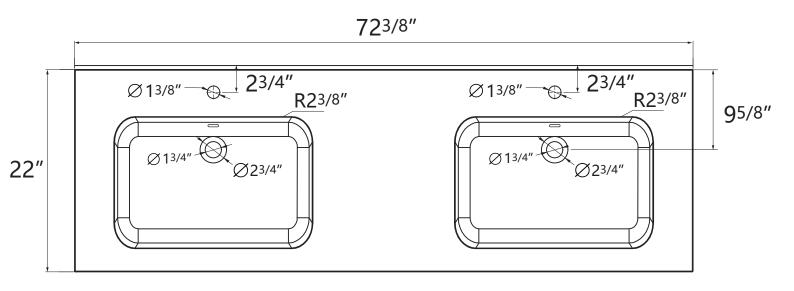




INSTALLATION STEPS

- 1.Prepare the Vanity: Make sure the vanity is in place and securely attached to the wall.
- 2.Seal the Edges: To prevent water damage and ensure a clean finish, apply a bead of silicone caulk along the edges where the countertop meets the vanity.

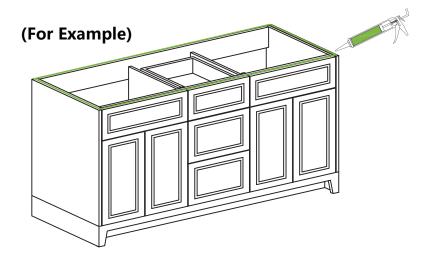

3.Attach the Countertop: Secure the solid surface countertop on the vanity.

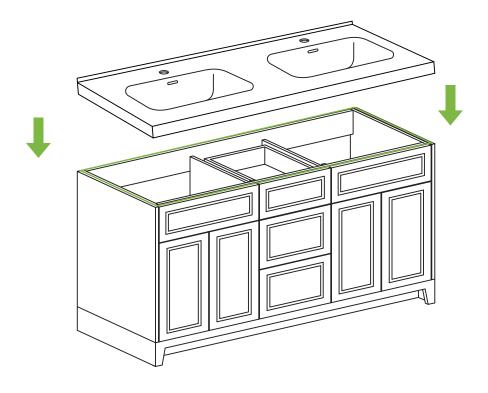



HOME SERVICES



INSTALLATION VIDEO

Missing Part or Defective?

Please Contact the Customer Service Team

