



INSTRUCTION

WF322620 / N719P400685F

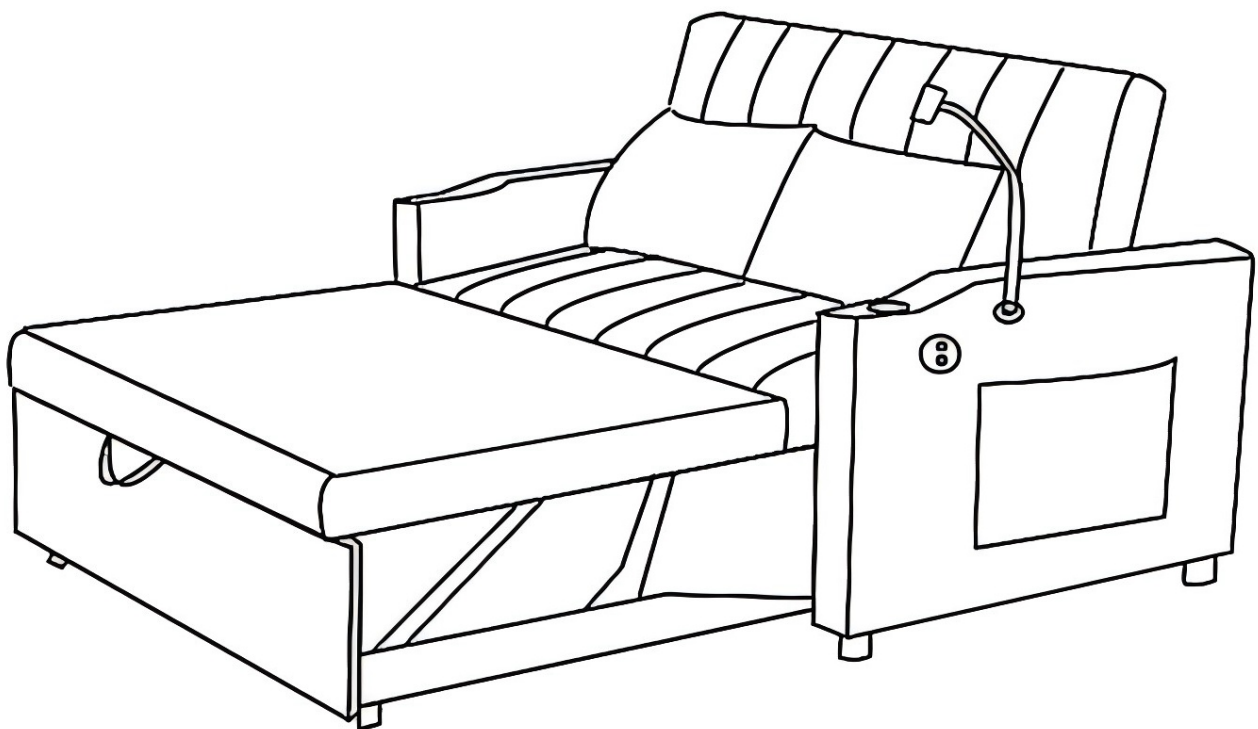


TEAM
ASSEMBLY
RECOMMENDED


SOFA BED









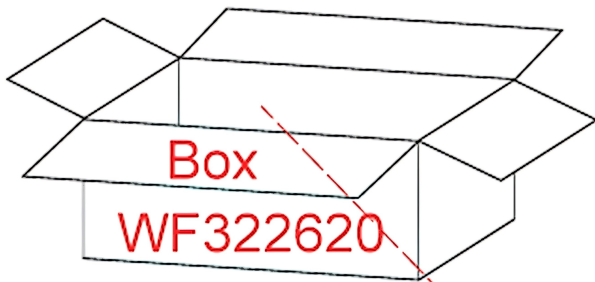


STEP 1

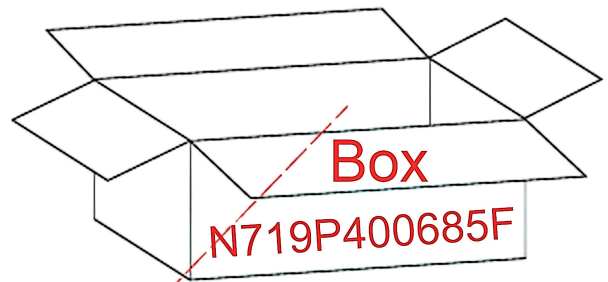Ship by 1 box




OR




| NO | PART | DECS | QTY |
|-----|---|---------------------|------|
| (A) |  | SEAT CUSHION | 1pc |
| (B) |  | TRUNDLE BED | 1pc |
| (C) |  | LEFT ARM | 1pc |
| (D) |  | RIGHT ARM | 1pc |
| (E) |  | PILLOW | 2pc |
| (F) |  | LEGS | 4pc |
| (G) |  | LEGS | 4pc |
| (H) |  | SHORT SCREW | 17pc |
| (I) |  | SCREWS NUTS | 1pc |
| (J) |  | Mobile phone holder | 1pc |
| (K) |  | USB POWER | 1pc |

Step 1: Install 4 plastic legs at the bottom of the armrest.

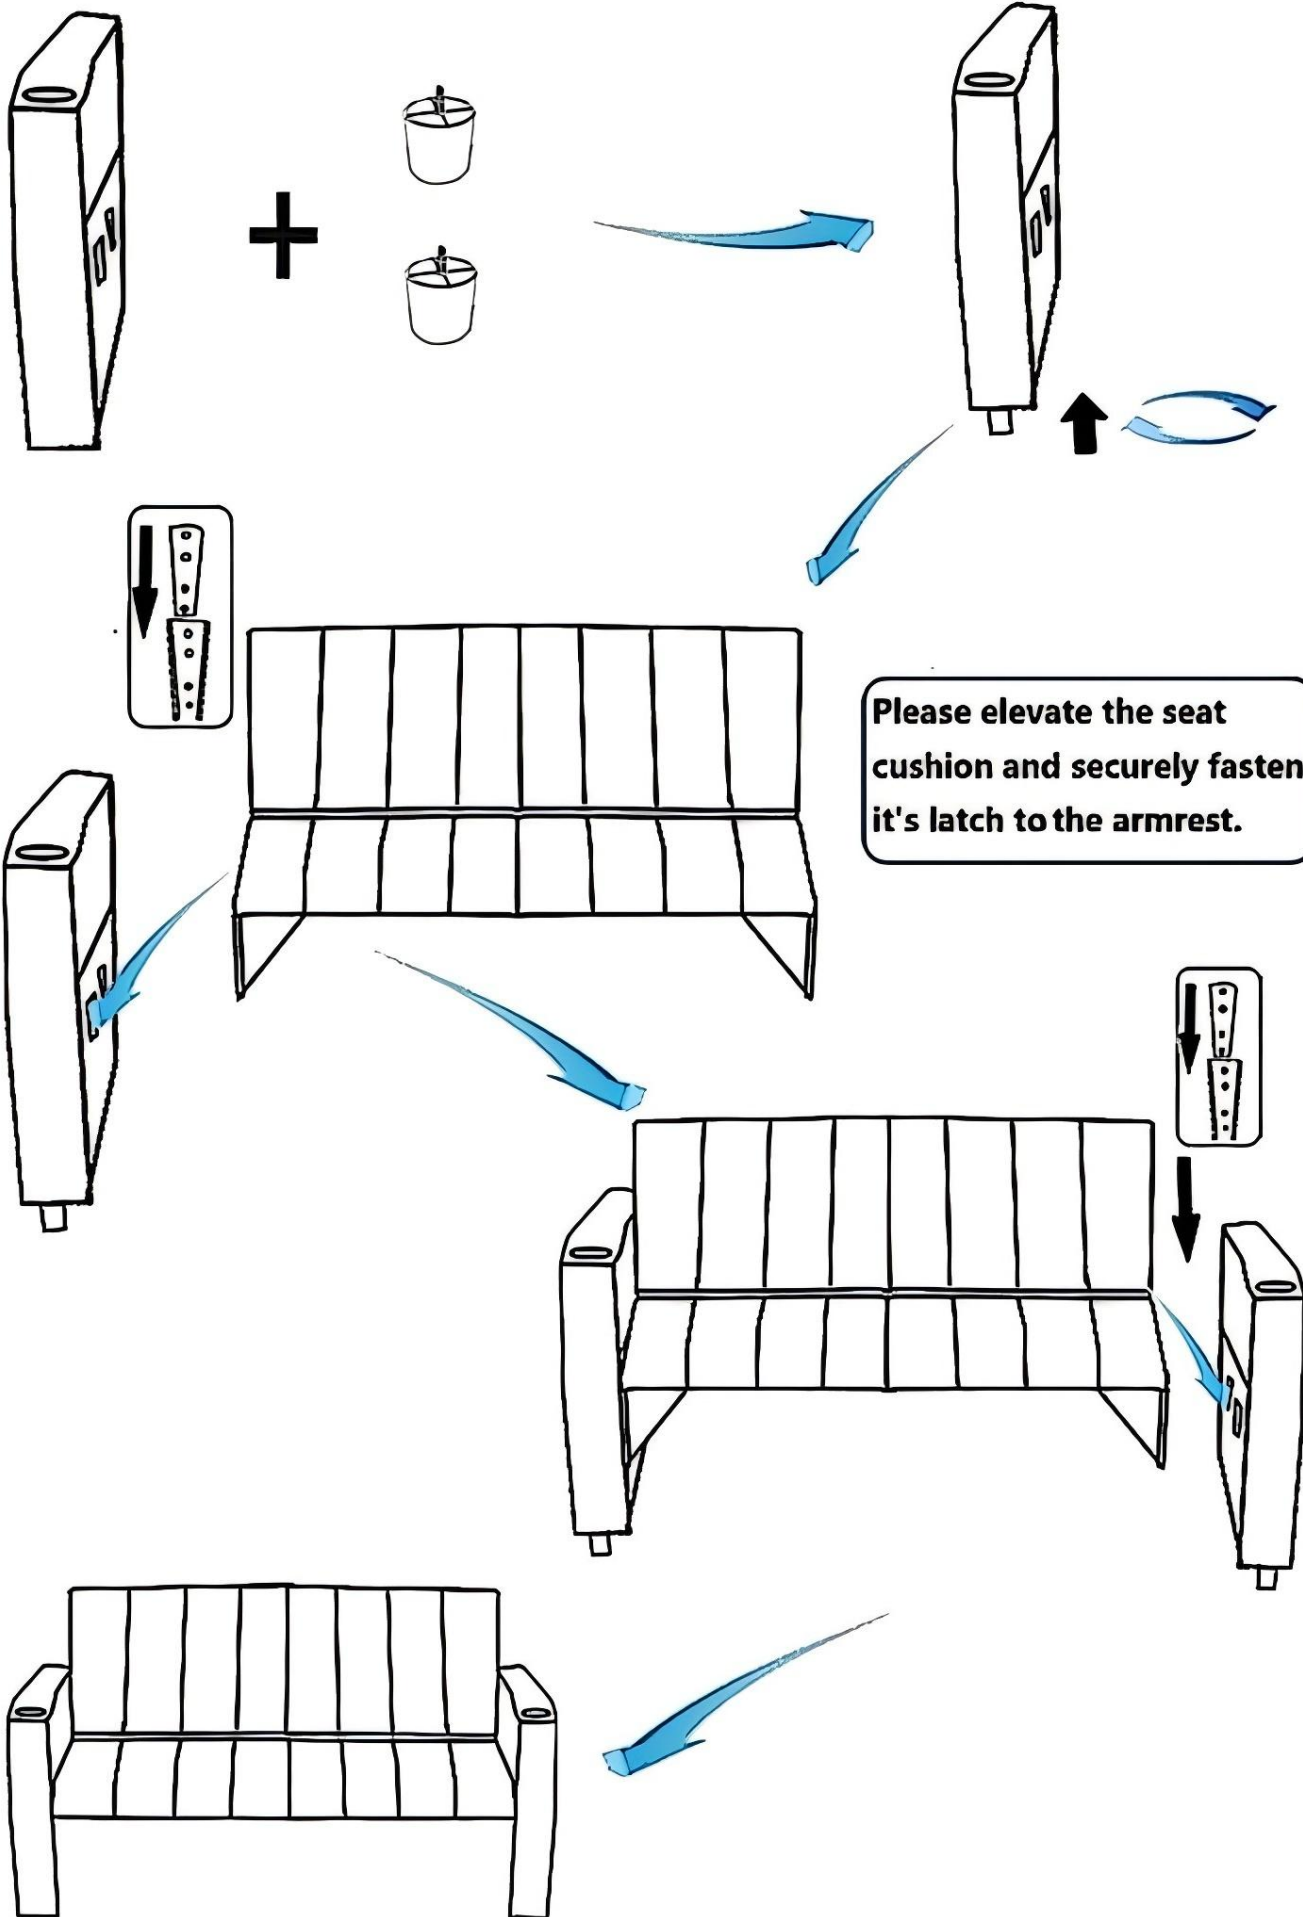

Step 2: Install 4 wheels on bottom of trundle bed, please use tools to set screws.

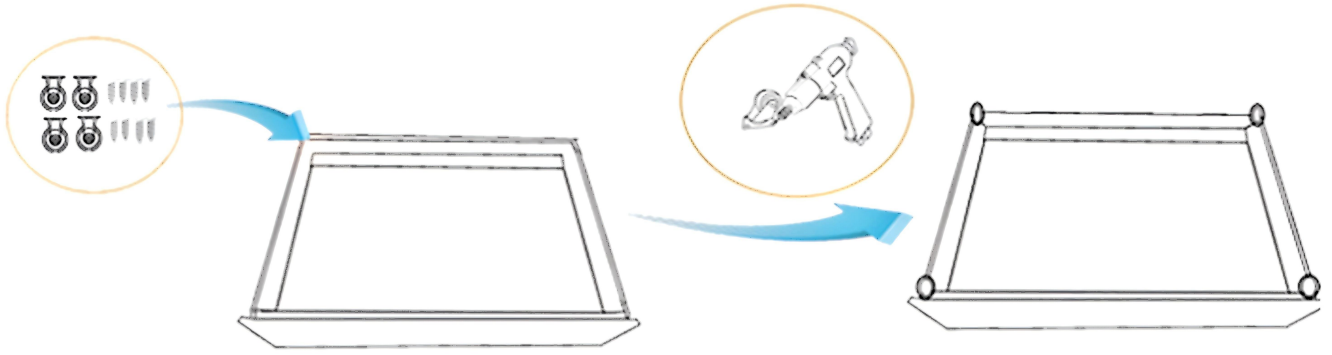

Step 3: Place the trundle bed under the seat cushion. Please meticulously avoid the positioning components in the armrests, and install the mobile phone holder.

