




How to adjust kitchen
cabinet doors that
won't align or close ?
just SCAN the QR cod

Instruction Book

For specification: 140cm(L)x50cm(W)x183cm(H)

WC-9140 instruction manual

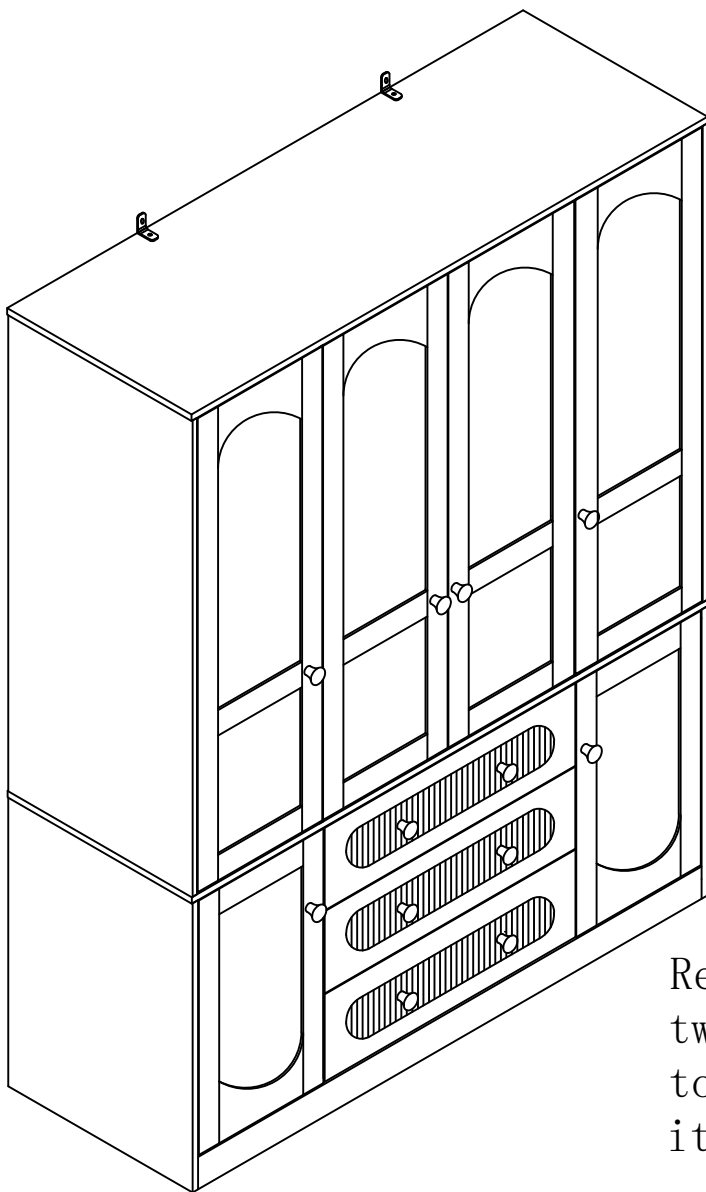

Recommend
two people
to install
it together

Please don't tighten the screws completely and go back later for a final tightening of all the screws after pieces are aligned with each other. If you have any question, please feel free to contact us by Amazon email

Foreword:

Thank you for choosing our product! We hope you have a good shopping experience! We aim to provide a 100% satisfaction product and customer service. If the received product has missing parts or components, arrived damaged, dissatisfaction with the order, or has questions about the assemble, please do not hesitate to contact us. Our customer service will reply within 12 hours.

Specifications:

Product name: Freestanding Armoire Wardrobe Closet

Model: WC-9140

Package Dimension:

A; 58.6*22.6*8.3in/149*57.5*21cm

Weight; 143b/65kg


B; 47.6*16.5*5.5in/121*42*14cm

Weight; 48.6b/22kg



Product Size: 55.1x19.7x72in/140*50*183cm

WC-9140 Left cabinet


A, B, G, H, C, D installation guide

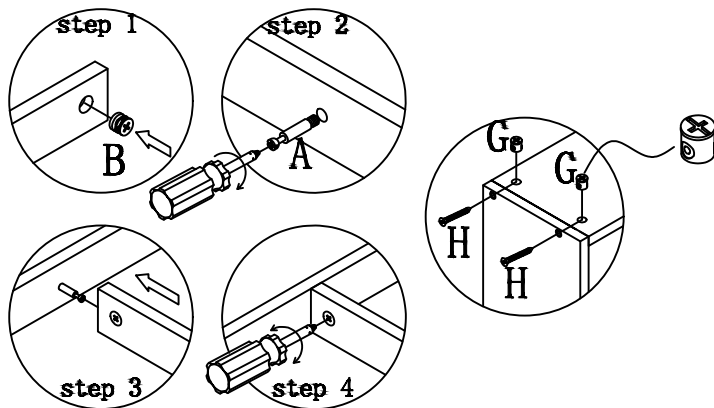

Accessories

 Three-in-one screw A*104	 Three-in-one nut B*104	 drawer Track CR*3	 drawer Track DR*3	 drawer Track CL*3	 drawer Track DL*3
 Small Screw D*140	 Handle E*12	 Handle Screw F*12	 Small Screw X*12	 Laminate support Y*8	 Stool foot nail M*12
 Magnetic collision T*2	 Clothes hook U*6	 Setscrew O*2	 Small Screw Q*2	 Clothes rail I*3	 Anti dumping device L*2
 Door hinges K*16	 screwdriver Z*1				

WC-9140

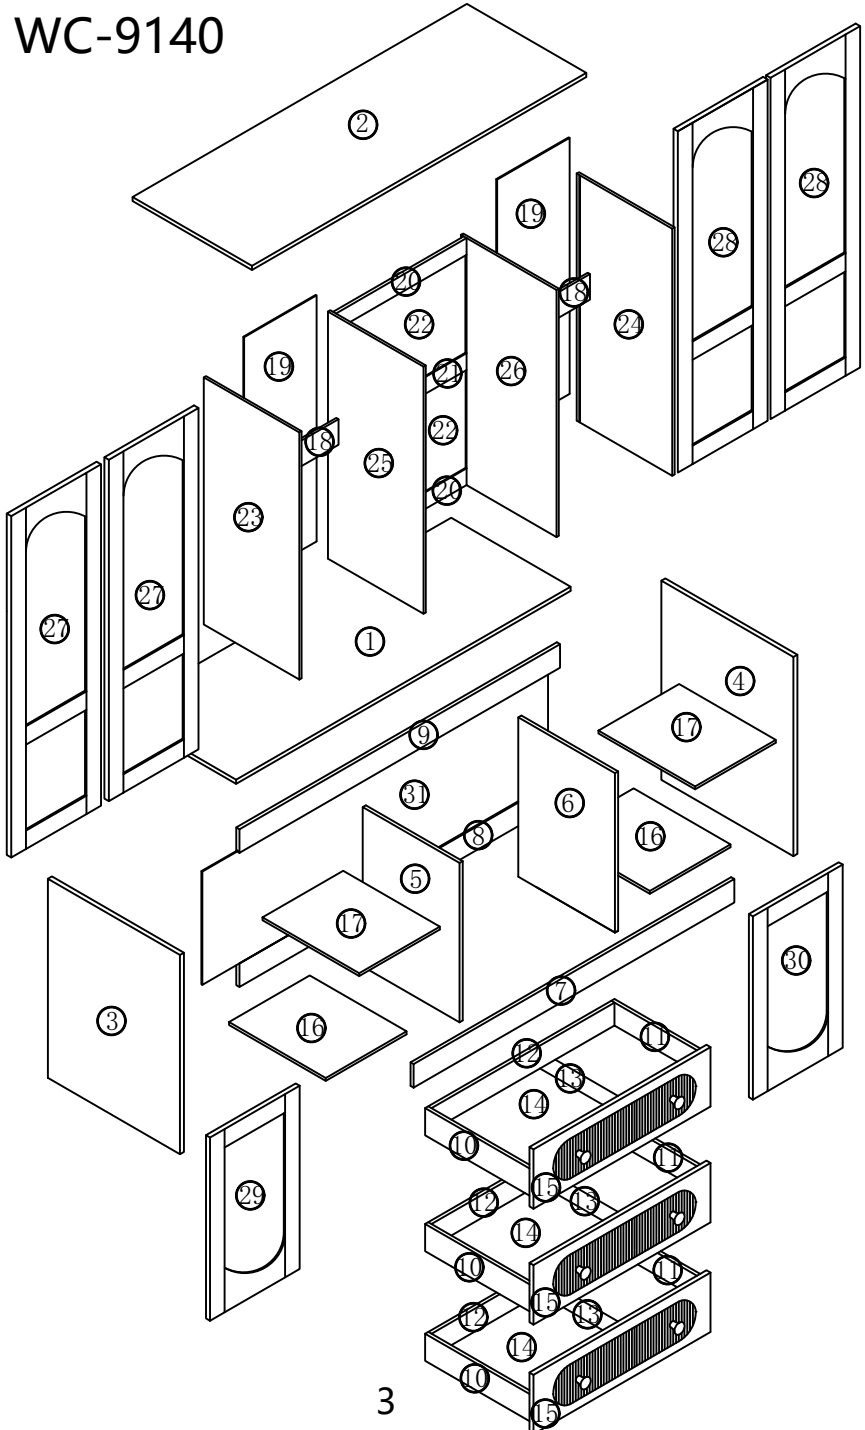



Guidelines for the use of 3-in-1 connecting rods:

The blue screw cap at the bottom of the 3-in-1 connecting rod is twist-able, and it can be twisted clockwise or counterclockwise to fit the size of the reserved holes in the wooden board.




When you use this 3-in-1 connecting rod, if you find that it can't be inserted into the reserved holes on the wooden board, just loosen the blue screw cap a bit until it fits into the holes of the board. Then use a screwdriver to tighten the screws. Note: If the bottom blue screw cap is not stretched apart by the three-in-one connecting rod in the reserved hole, the connected part will appear unstable .

STEP 1

Put it into the reserved holes and tighten the screw

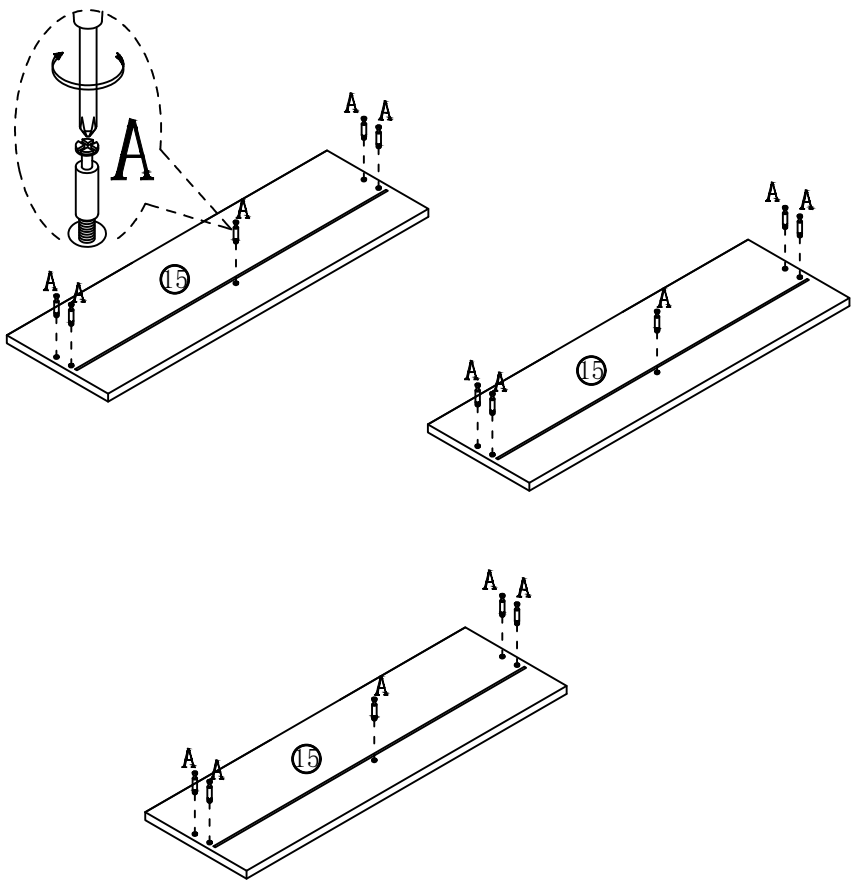


STEP 2

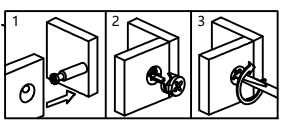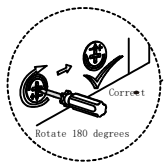
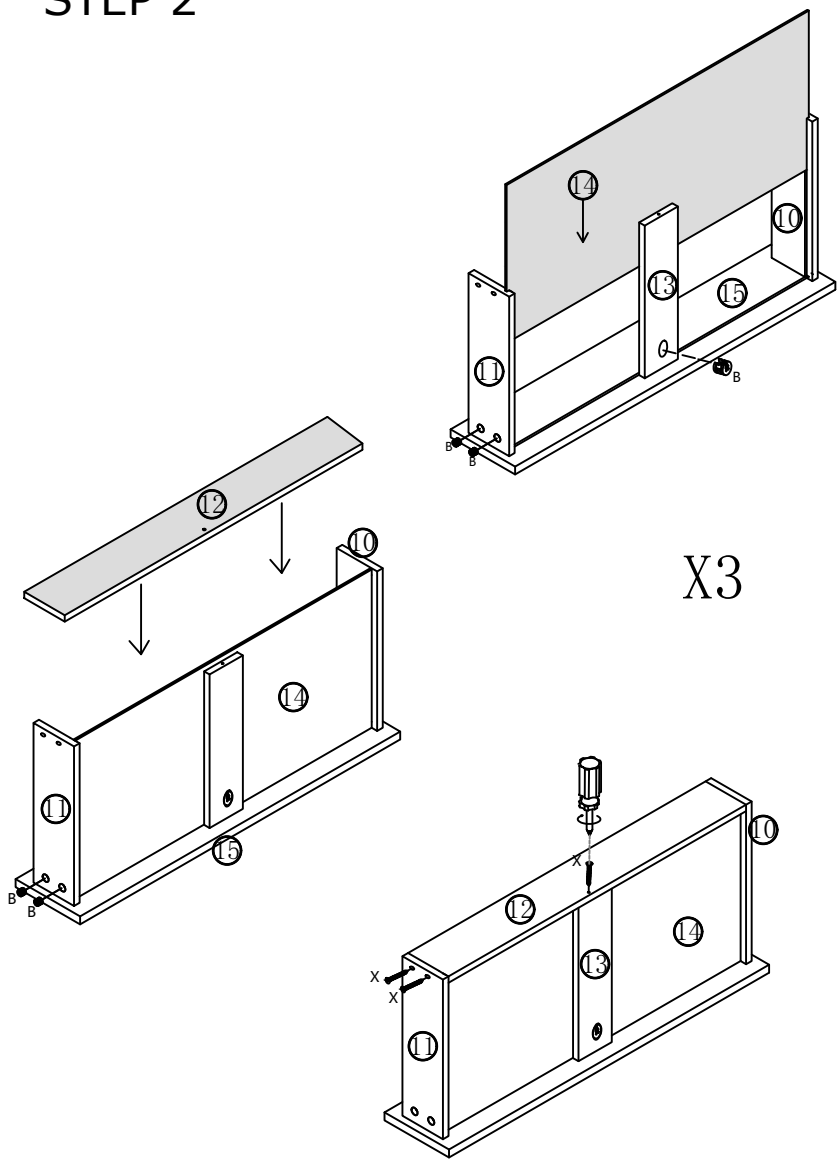


X	B
	
x15	x15

STEP 3

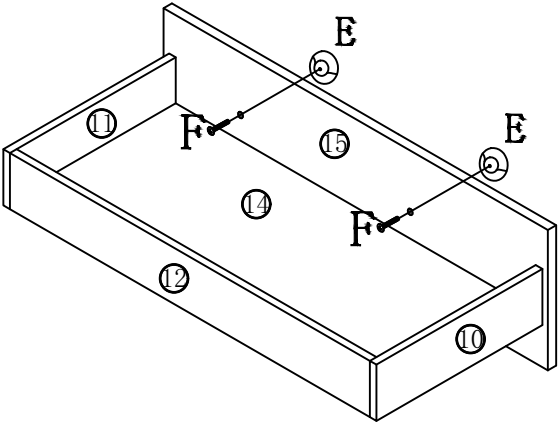


X3

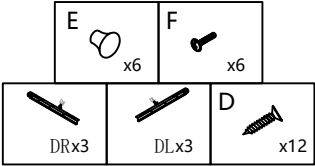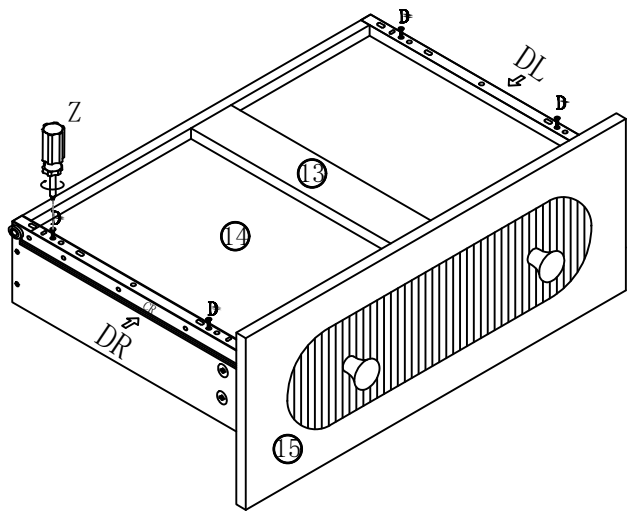


STEP 4

Put it into the reserved holes and tighten the screw





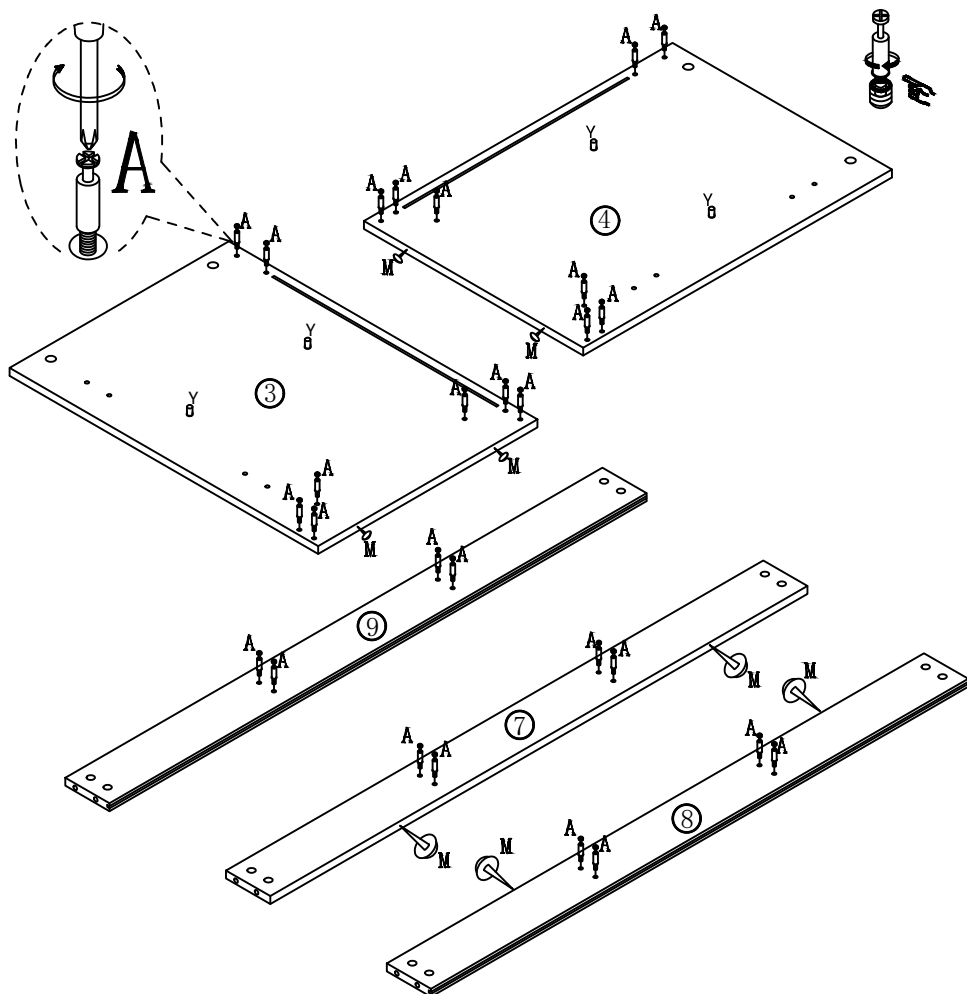


Y x4	A x28
M x8	





STEP 5

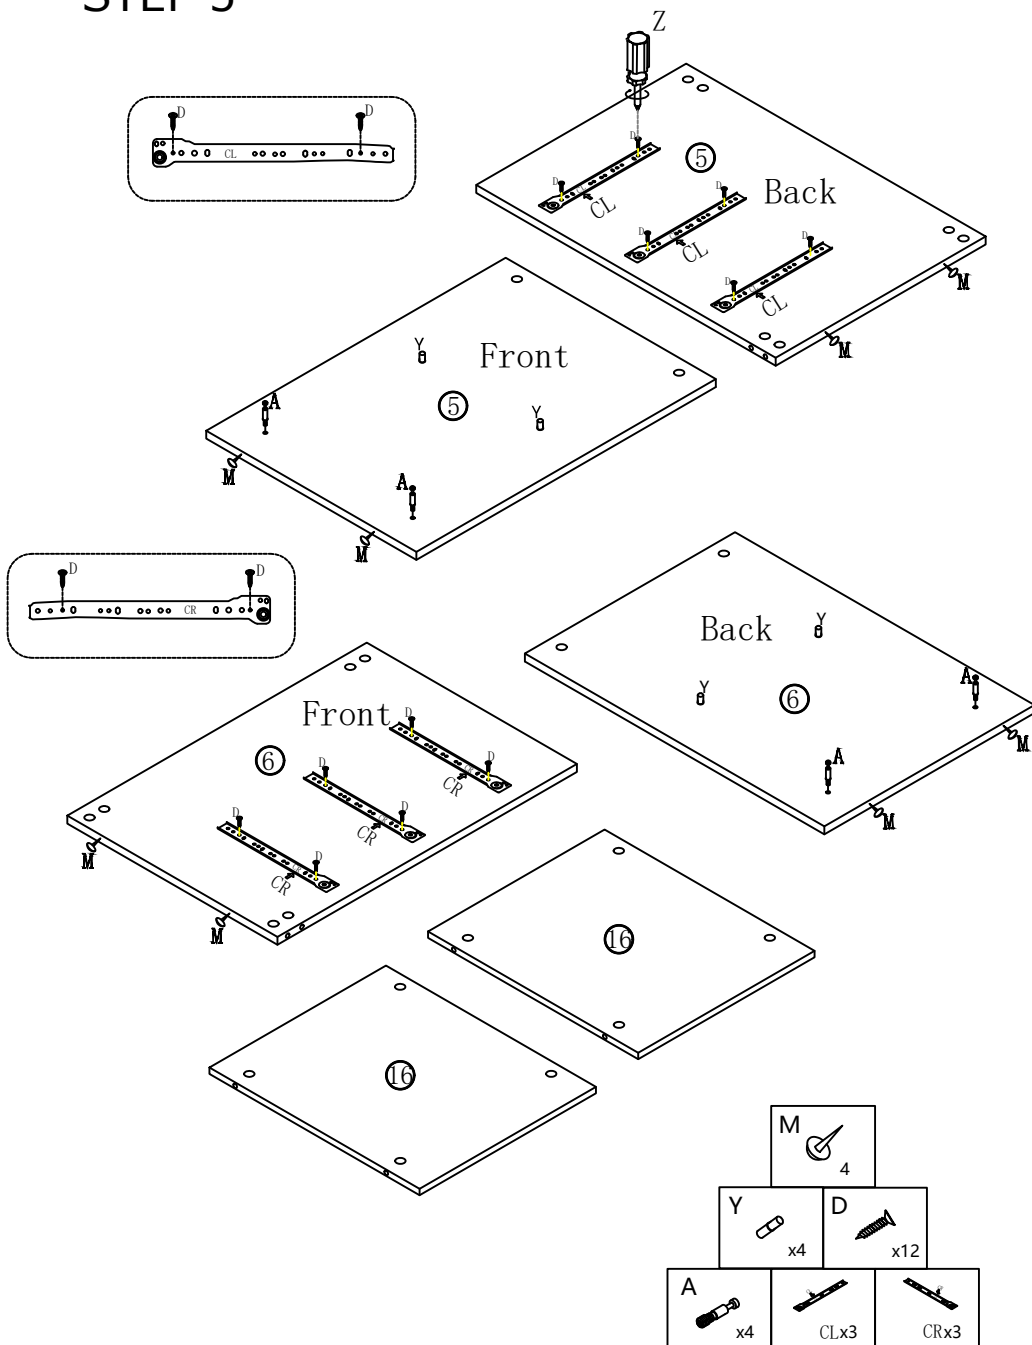


STEP 6

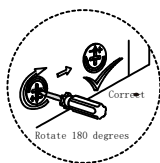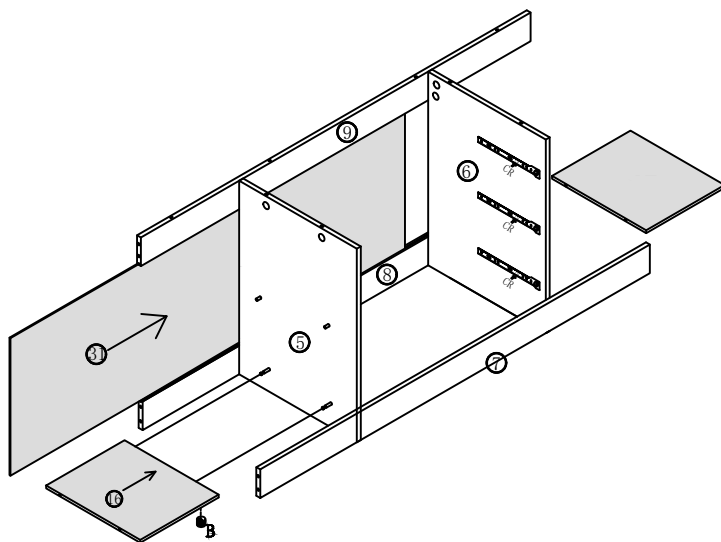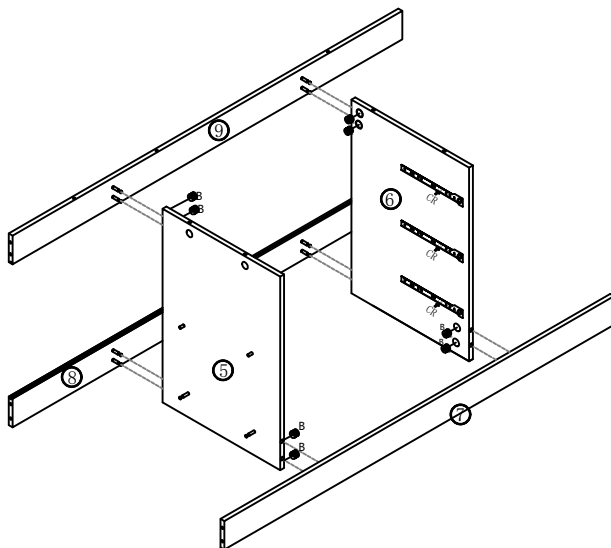



STEP 7

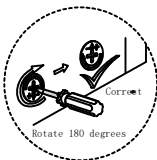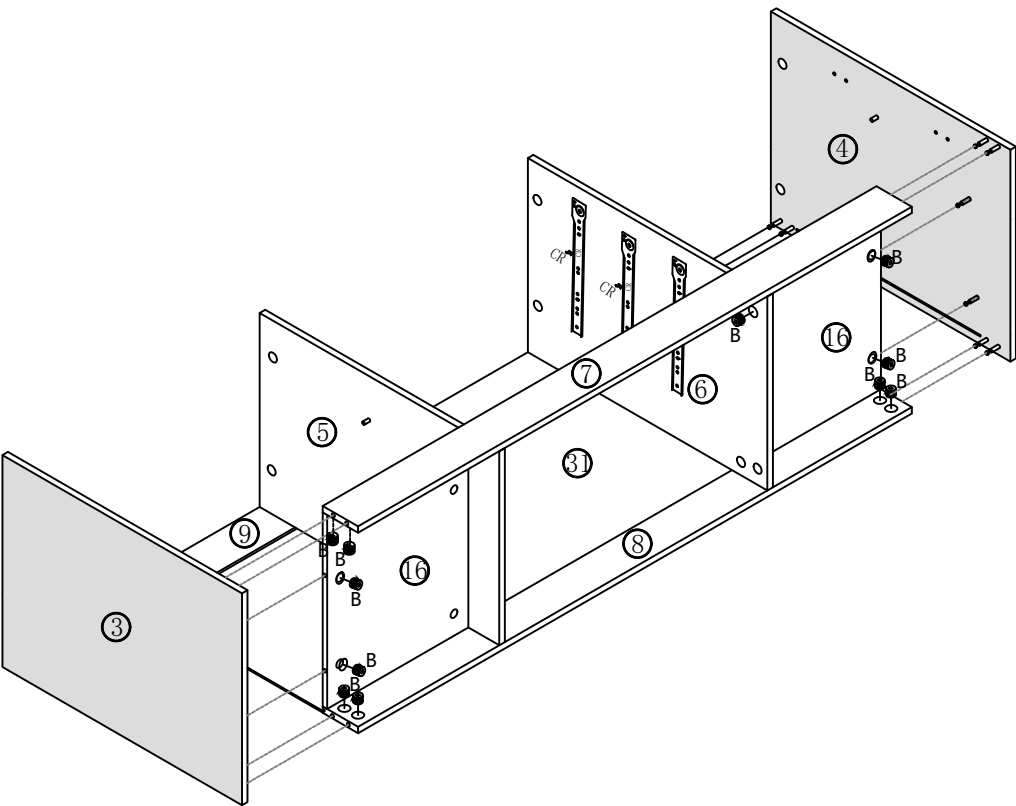





STEP 8

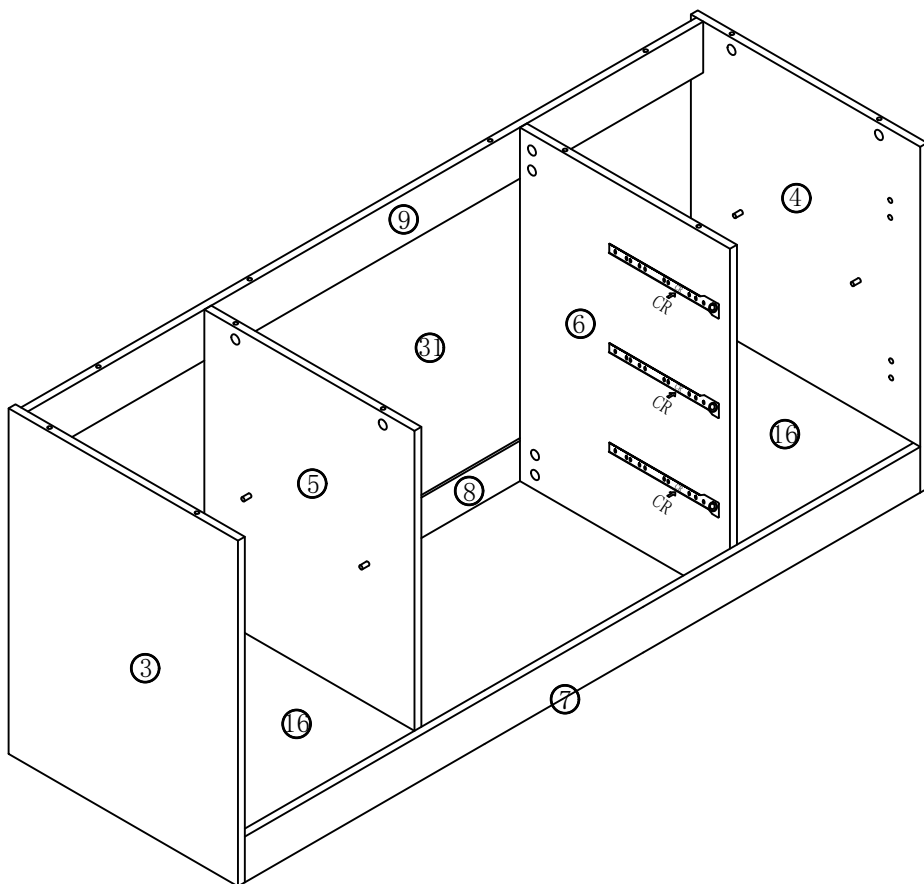



STEP 9

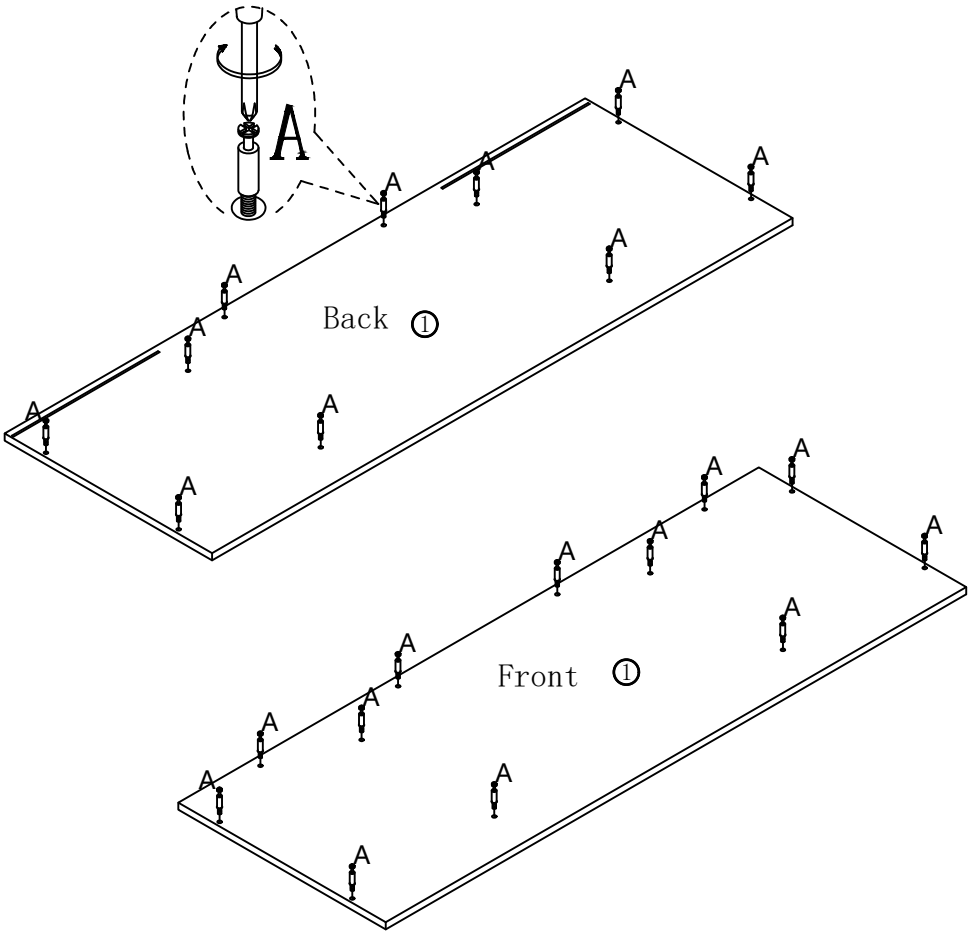


STEP 10

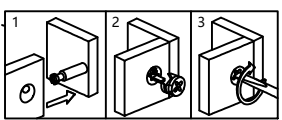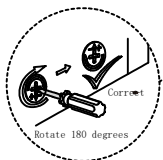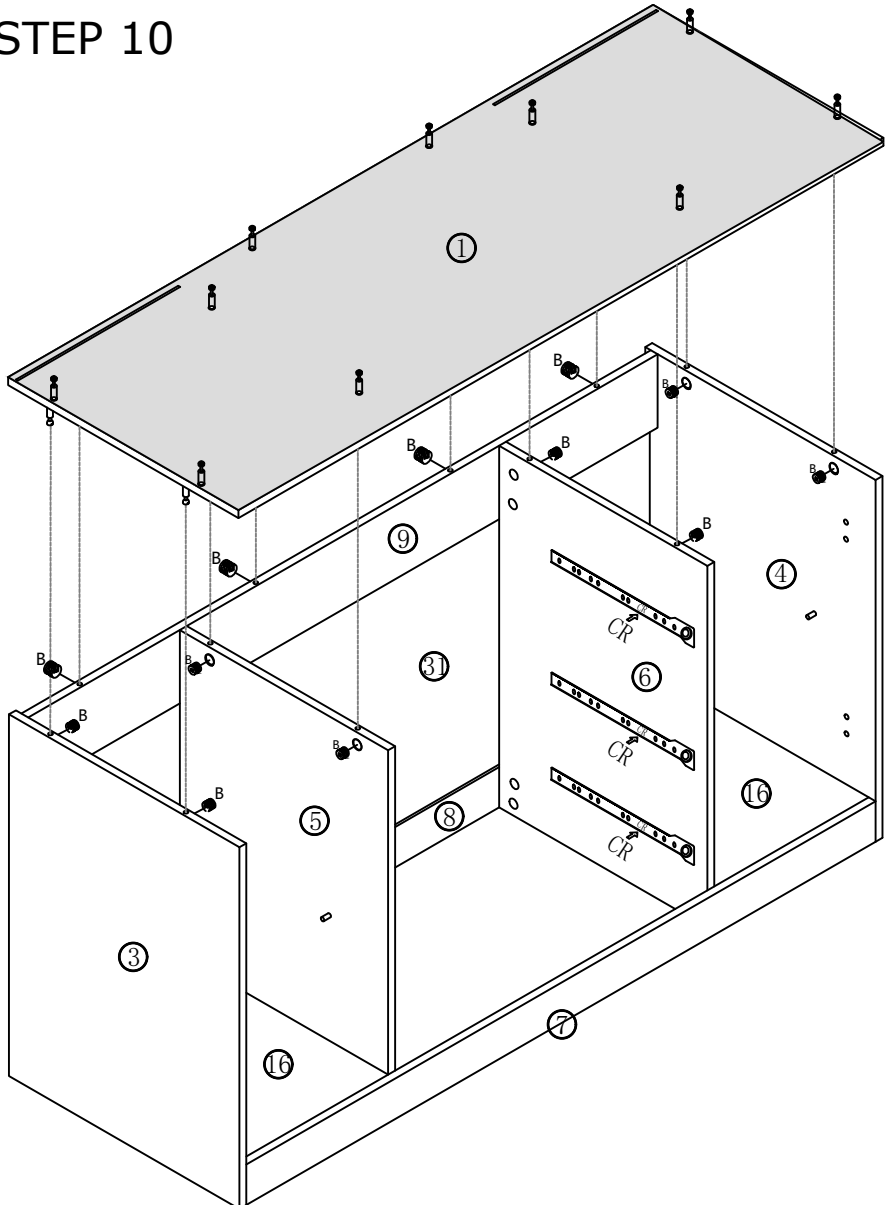





STEP 11

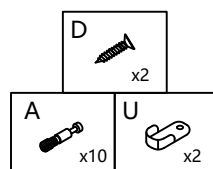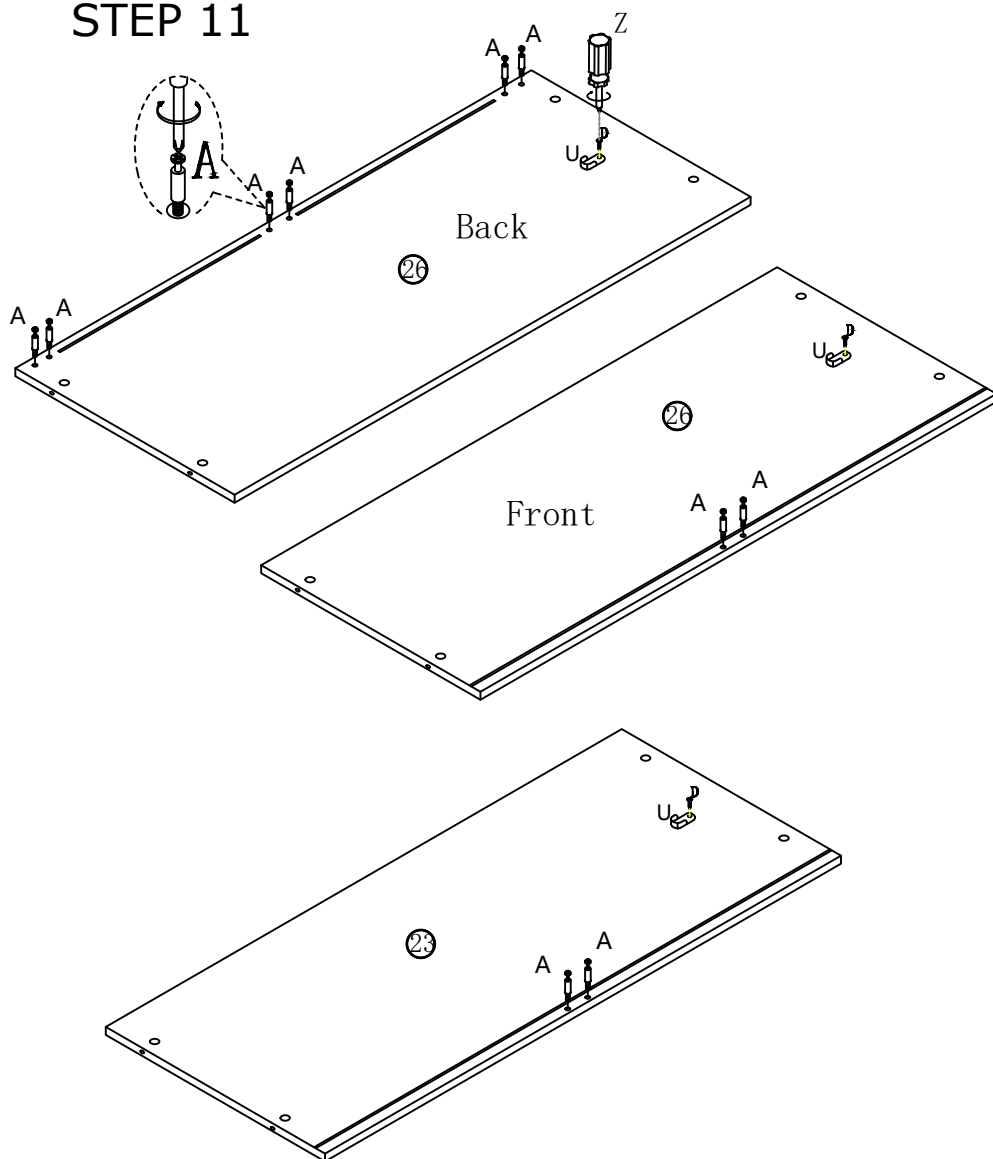





STEP 12

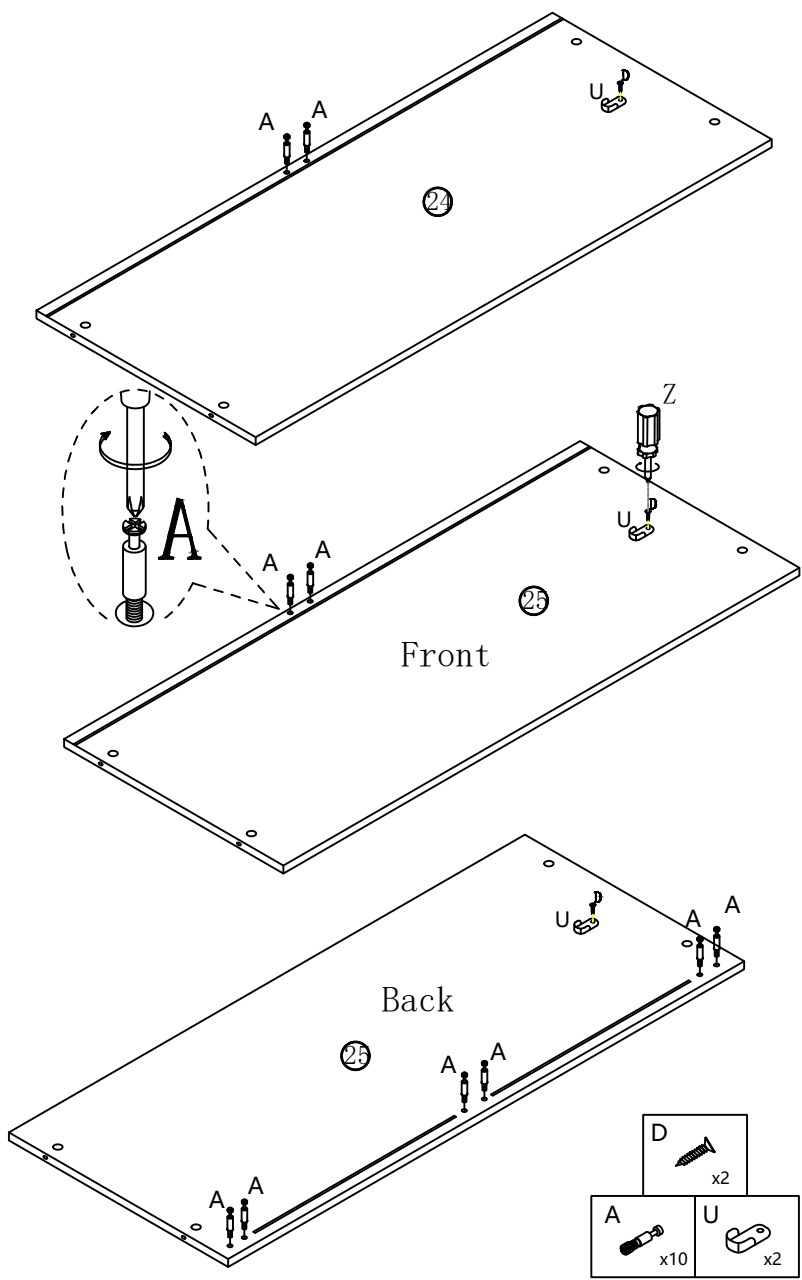




STEP 13

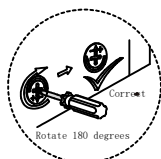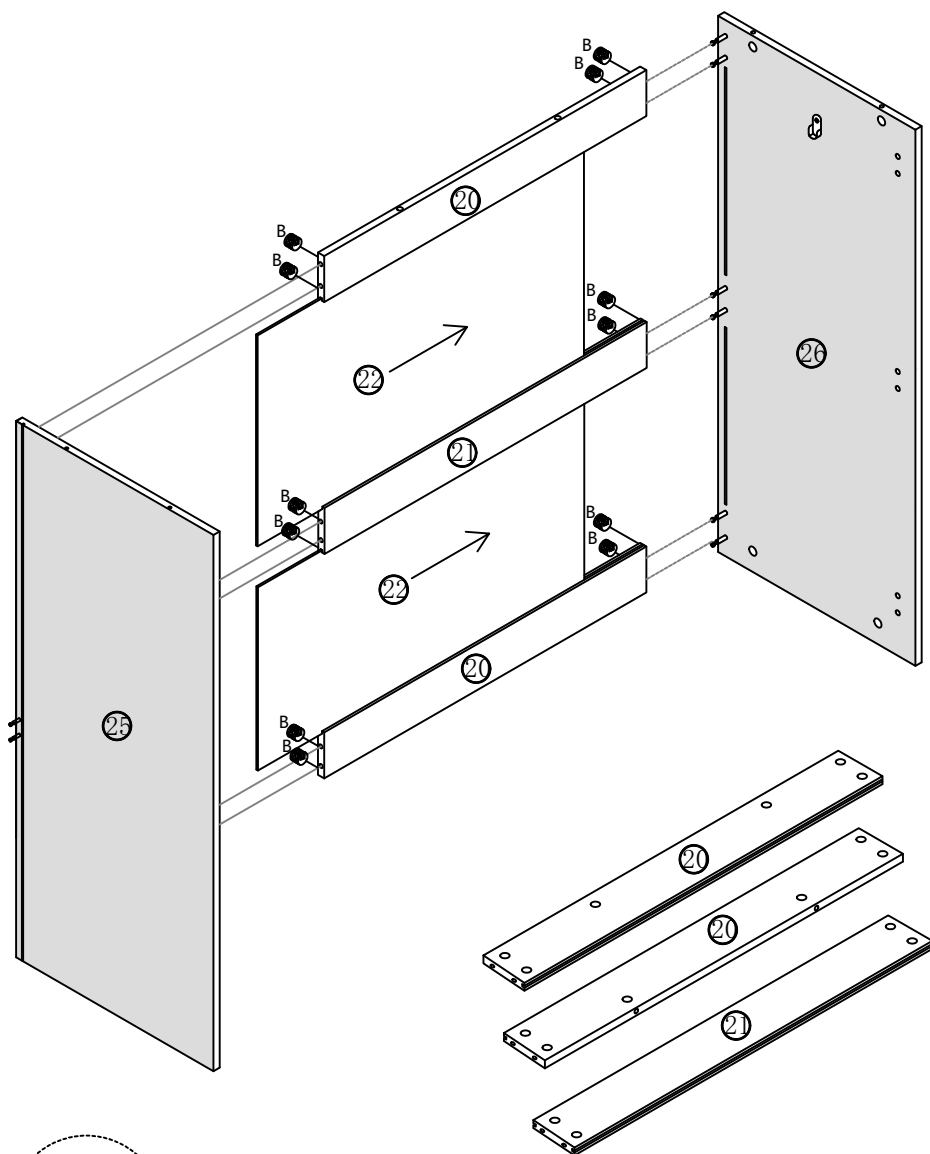


STEP 14

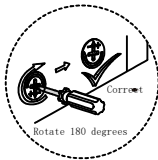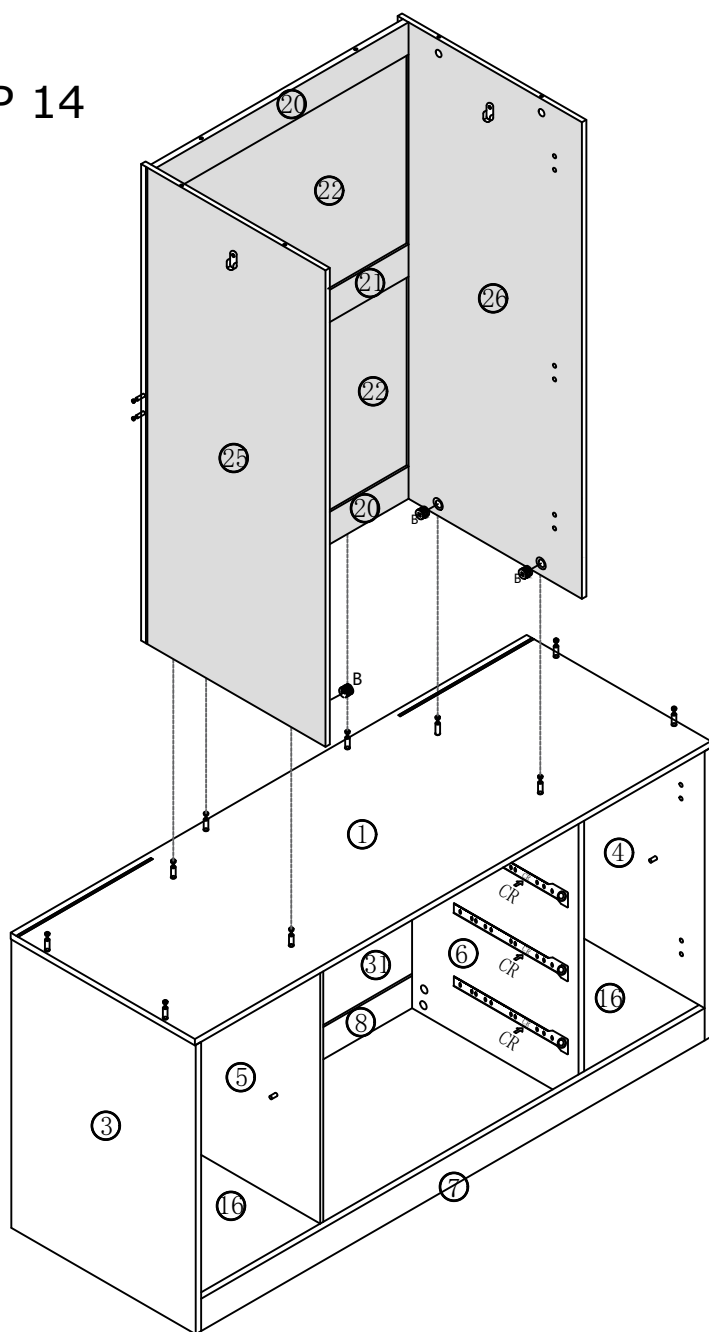


STEP 15

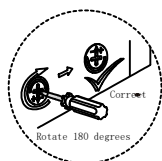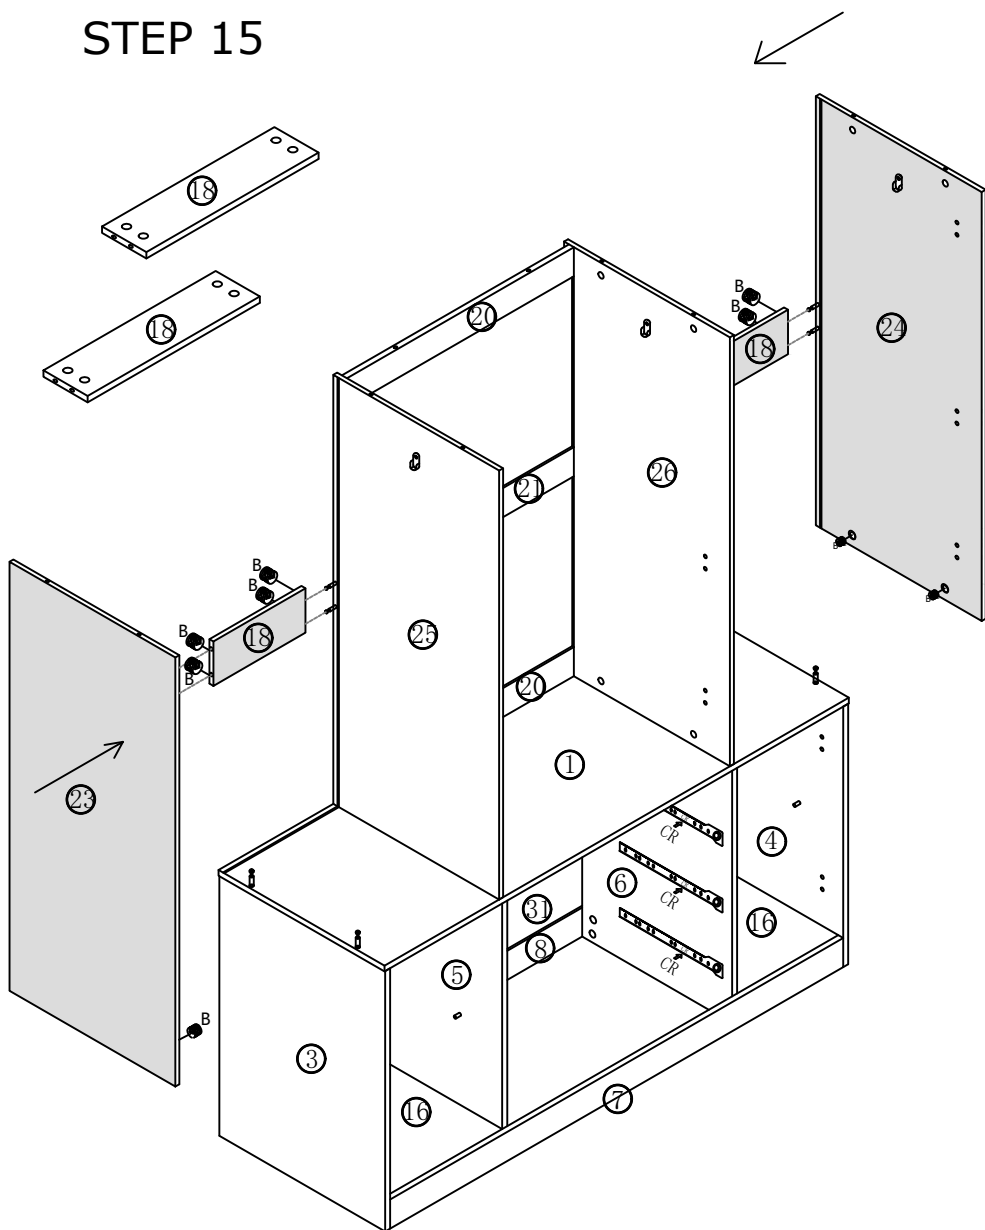

STEP 16



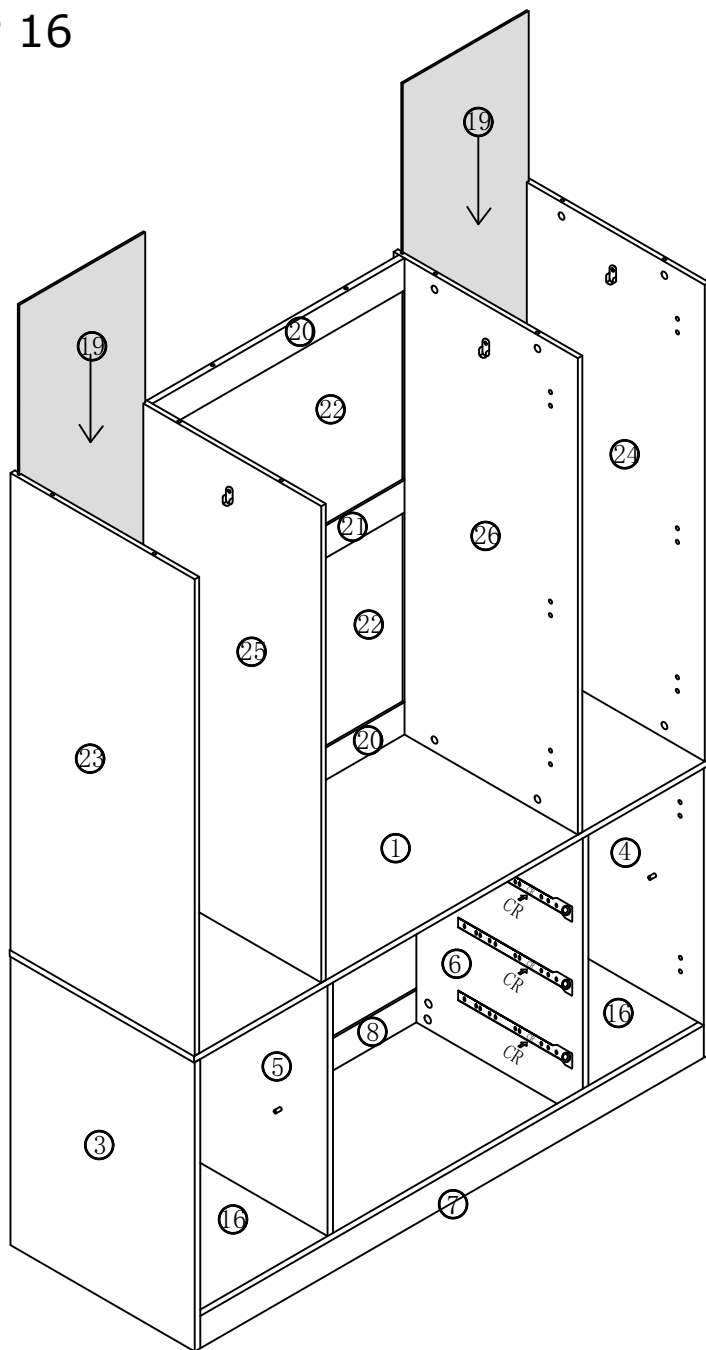


STEP 17

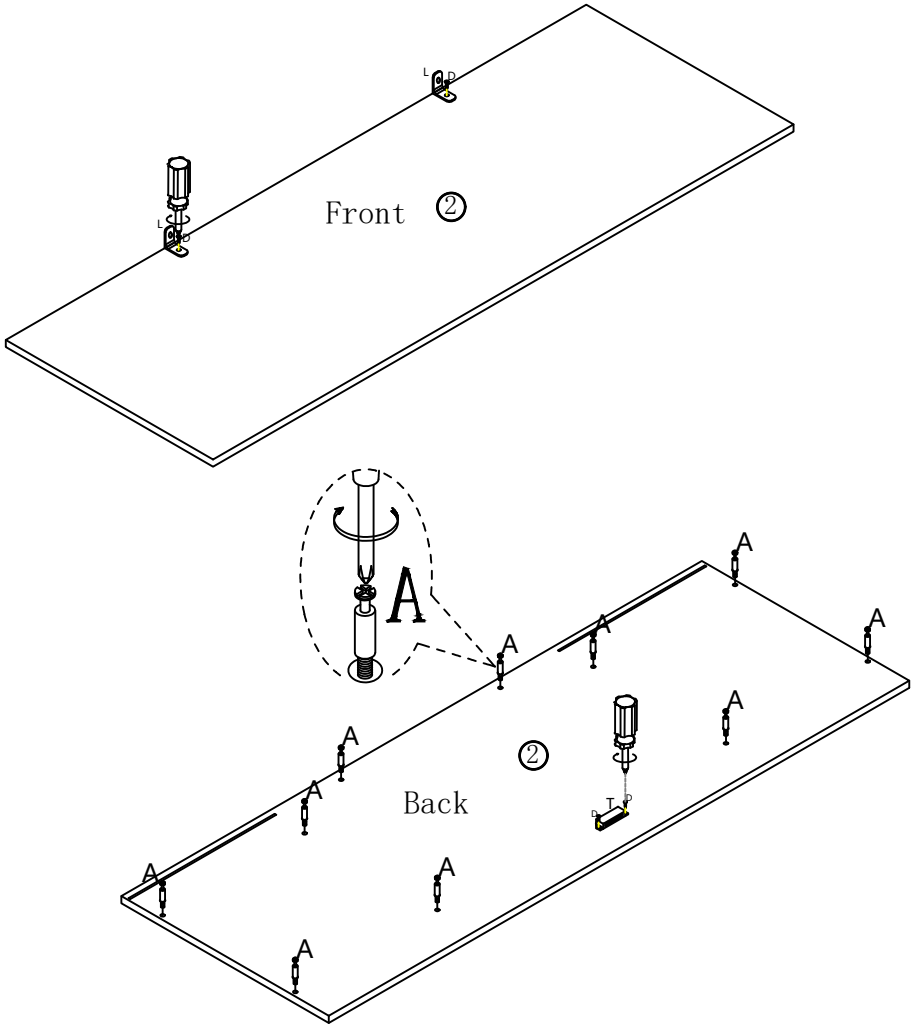

T x1	D x6
L x2	A x10


STEP 18

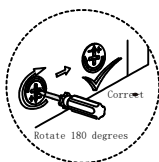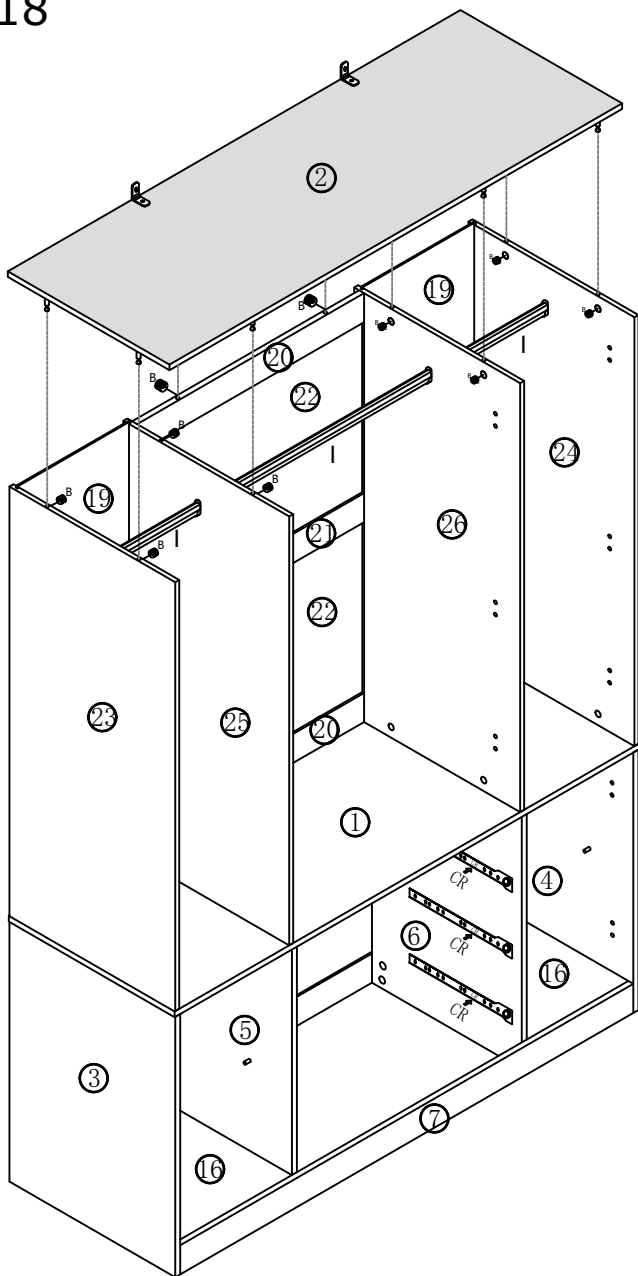

22



I	B
x3	x10

STEP 19

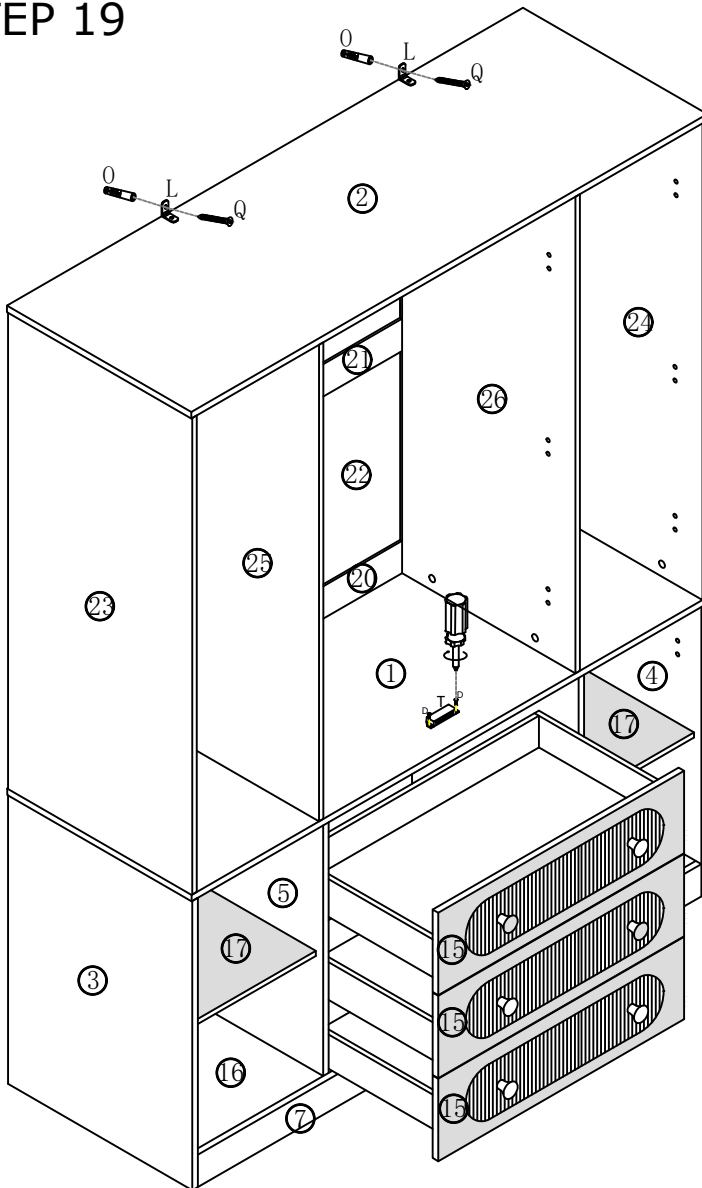


 O x2	 Q x2
 T x1	 D x2

STEP 20

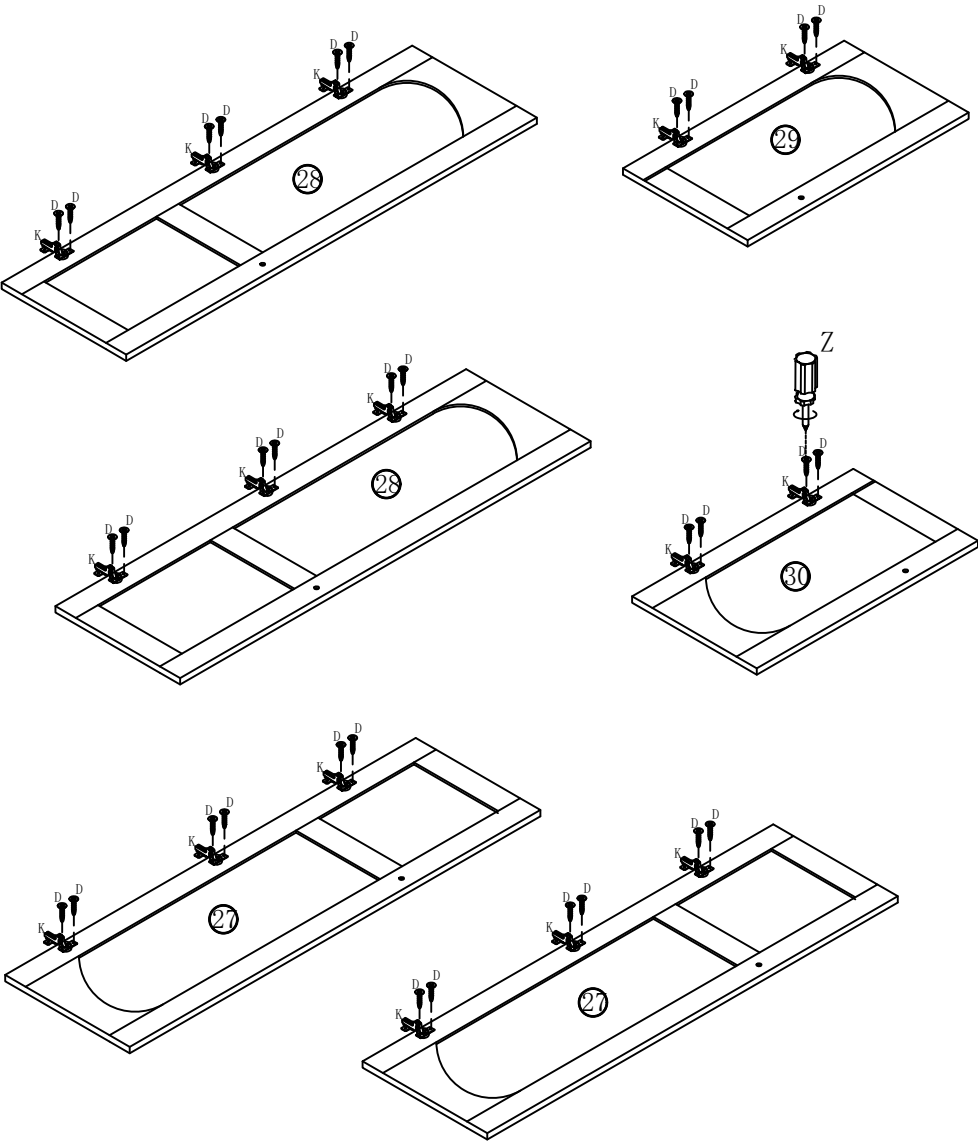

STEP 21

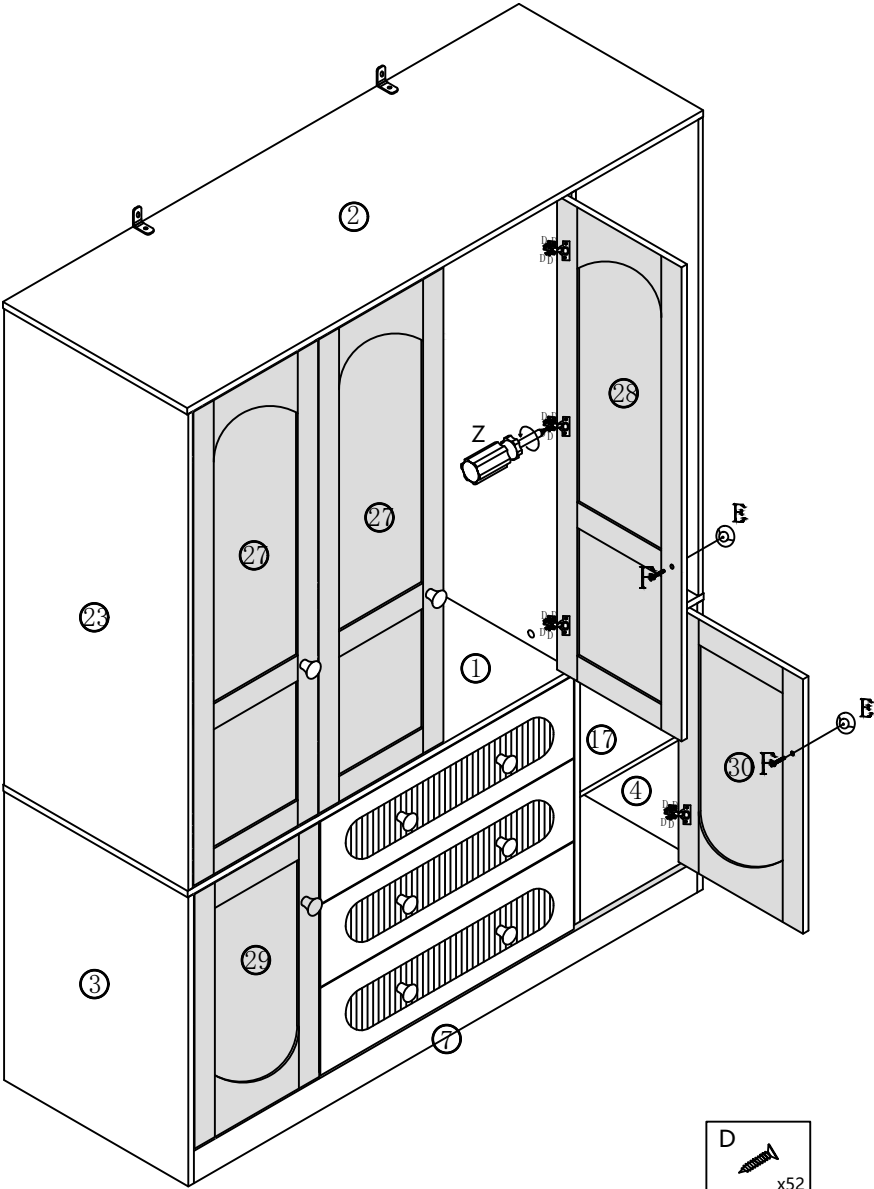

STEP 22

