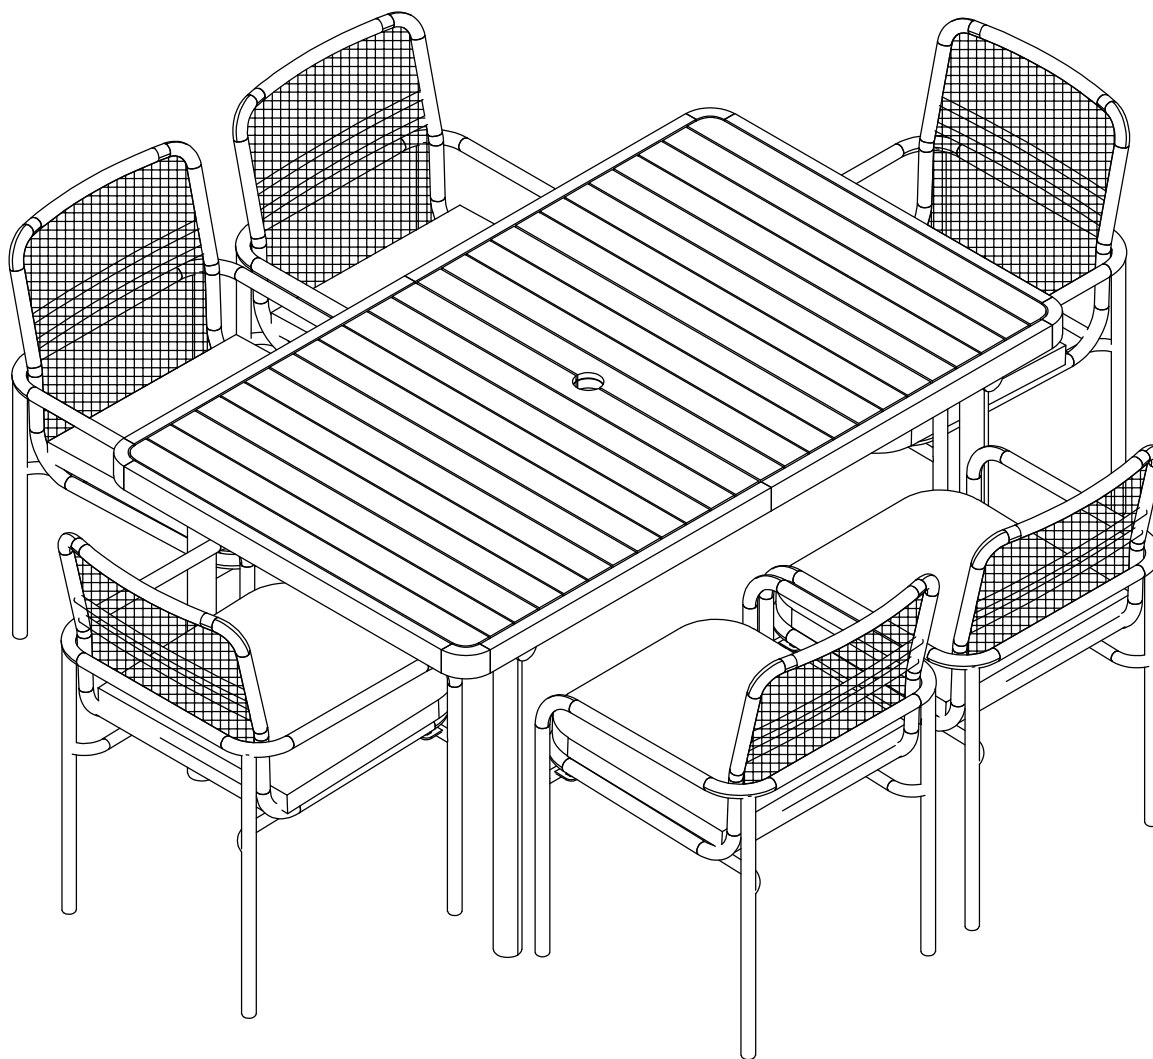



ASSEMBLY INSTRUCTION

DINNING SET




Notice:

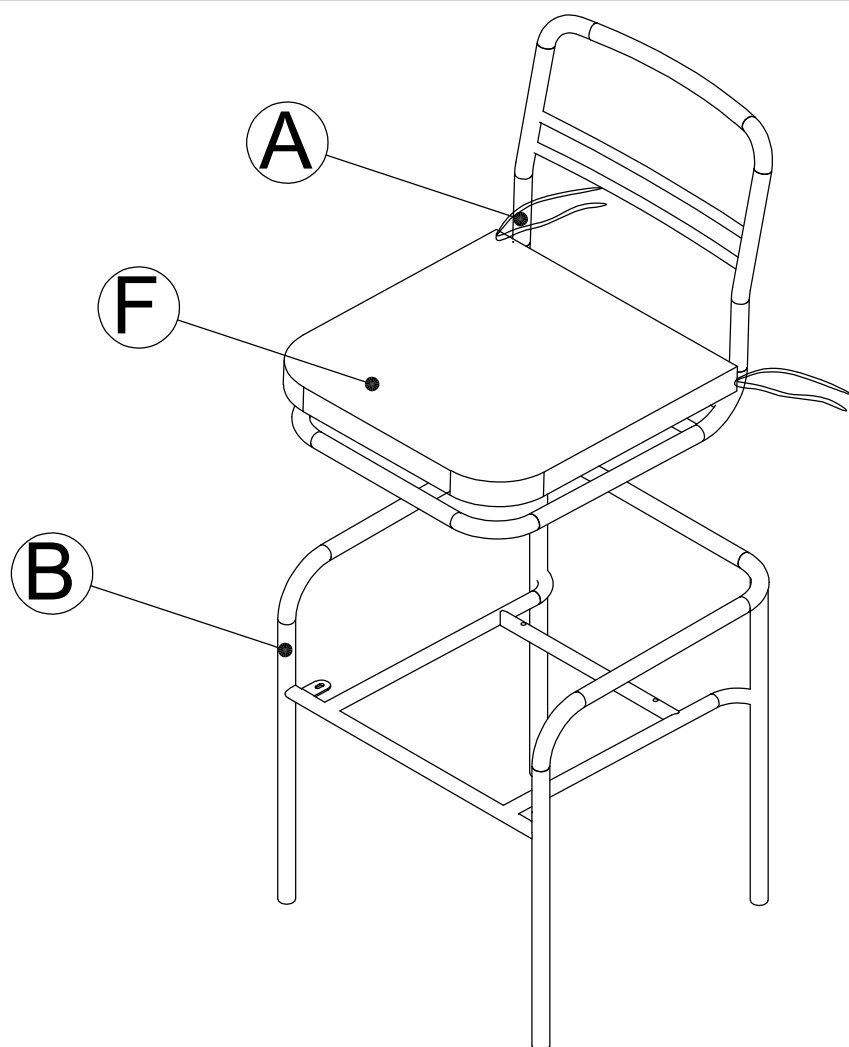1. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.
2. Place the item on a flat ground to adjust and make sure it remains stable.
3. Tighten up all screws with tools gradually.
4. If the screws are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.
5. If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up all screws again.
6. Note : If one or some screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.









x6









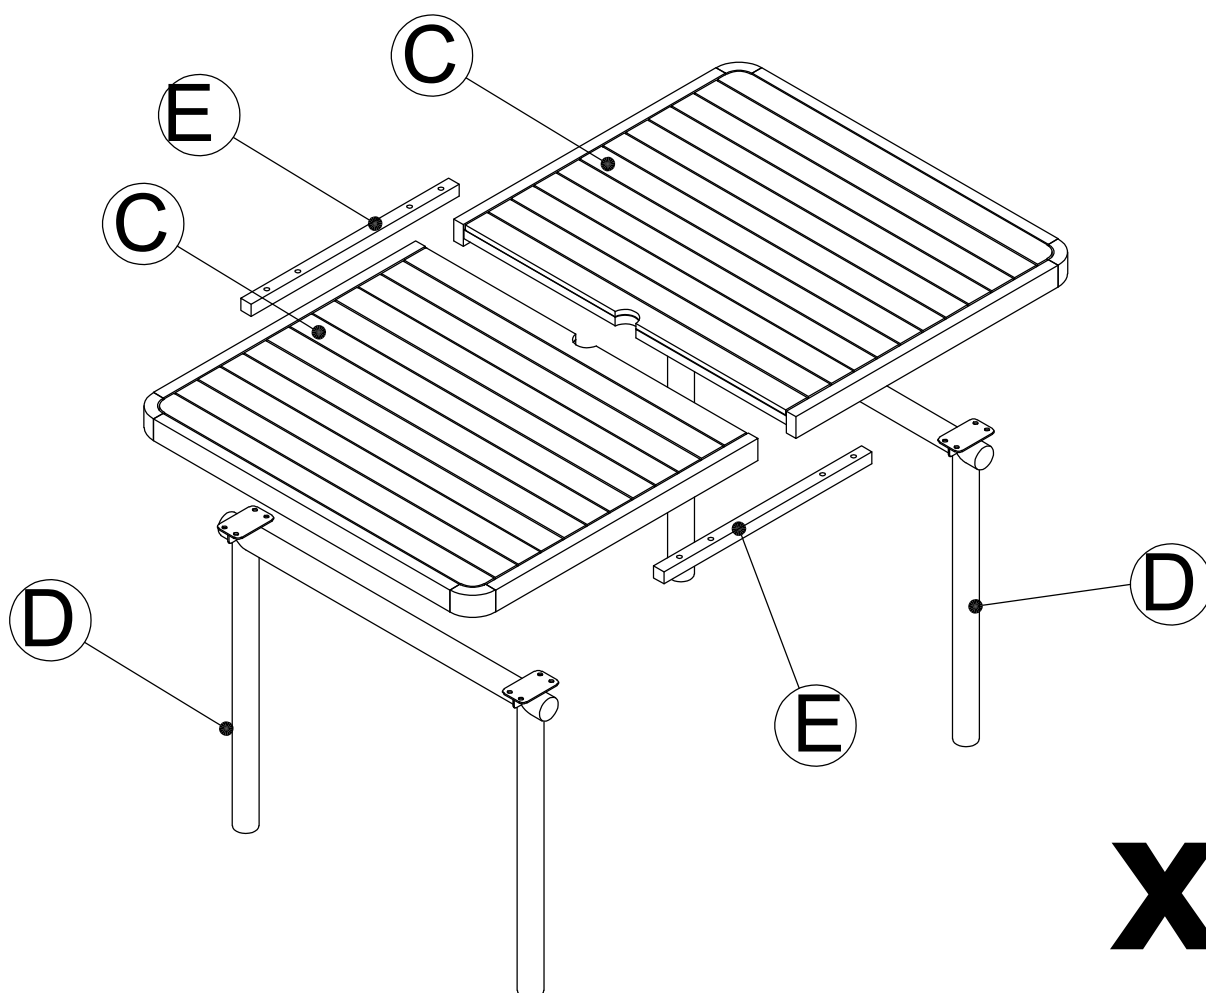


x1

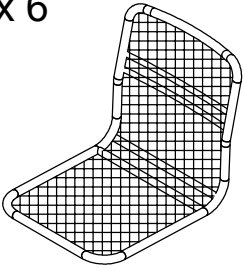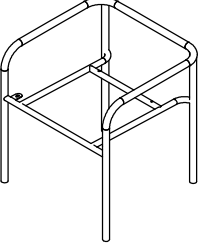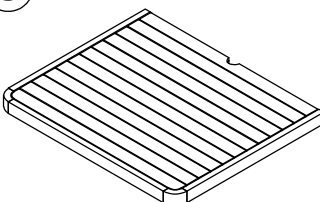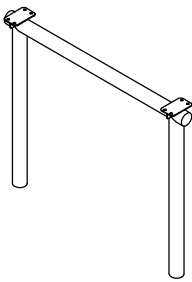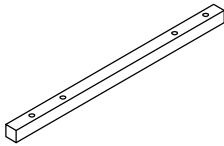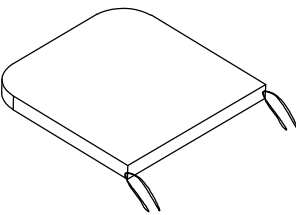Part List:


A x 6  Back Chair Frame (6 pcs)	B x 6  Chair Frame (6 pcs)	C x 2  Top Table (2 pcs)	D x 2  Leg Table (2 pcs)
E x 2  Connector (2 pcs)	F x 6  Seat Cushion (6 pcs)		

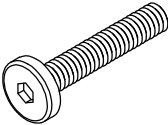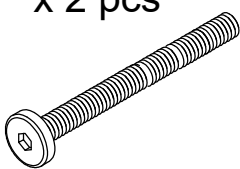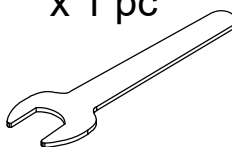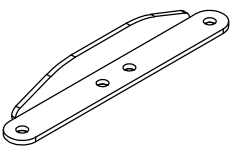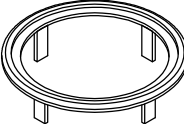Hardware List:


1 x 40 pcs  Extra 2 pcs BOLT M6 x 20MM	2 x 64 pcs  Extra 2 pcs FLAT WASHER M6	3 x 12 pcs  Extra 2 pcs BOLT M6 x 40MM	4 x 8 pcs  Extra 2 pcs BOLT M6 x 30MM
5 x 2 pcs  Extra 1 pcs BOLT M6 x 100MM	6 x 2 pcs  Extra 1 pc ERU M6	7 x 1 pc  KEY	8 x 2 pcs  MIDLE CONNECTOR
9 x 2 pcs  SIDE CONNECTOR	10 x 2 pcs  ALLEN WRENCH	11 x 1 pc  COVER CAP	

CARTON CONTENT:


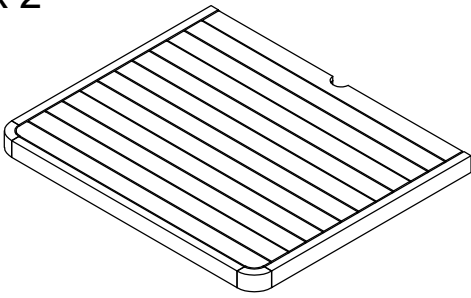
Ⓒ x 2



Ⓓ x 2

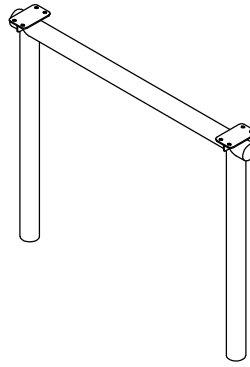


Ⓔ x 2

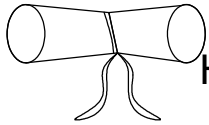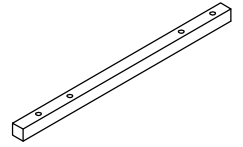


Hardware


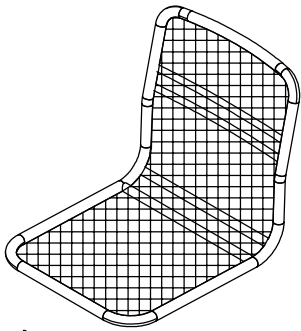
Ⓐ x 3



Ⓑ x 3

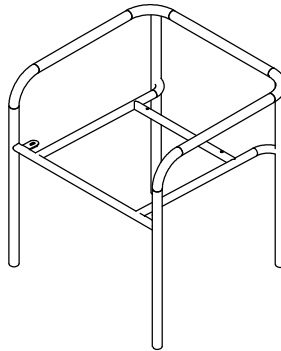


Ⓕ x 3

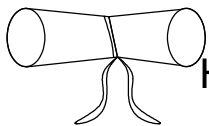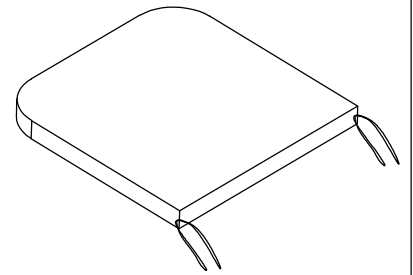


Hardware


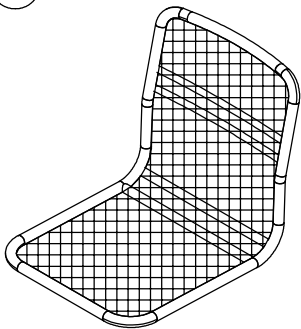
Ⓐ x 3












Ⓑ x 3



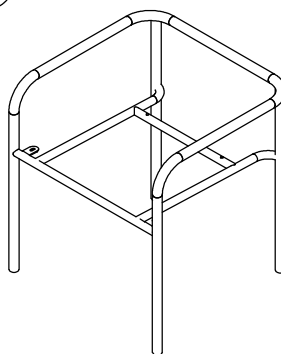





Ⓕ x 3

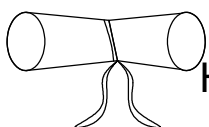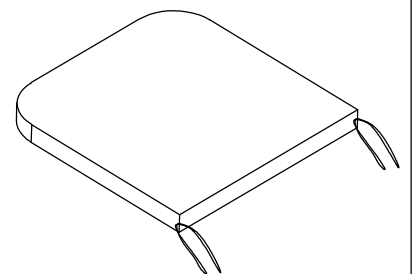

Hardware

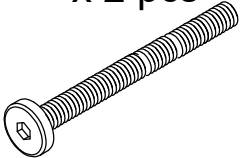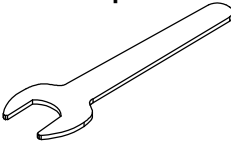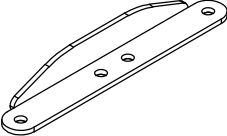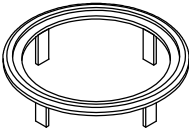1	x 28 pcs		2	x 40 pcs		4	x 8 pcs		5	x 2 pcs	
	BOLT M6 x 20MM			FLAT WASHER M6			BOLT M6 x 30MM			BOLT M6 x 100MM	
6	x 2 pcs		7	x 1 pc		8	x 2 pcs		9	x 2 pcs	
	ERU M6			KEY			MIDLE CONNECTOR			SIDE CONNECTOR	
10	x 1 pcs		11	x 1 pc							
	ALLEN WRENCH			COVER CAP							

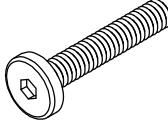1	x 6 pcs		2	x 12 pcs		3	x 6 pcs		10	x 1 pcs	
	BOLT M6 x 20MM			FLAT WASHER M6			BOLT M6 x 40MM			ALLEN WRENCH	

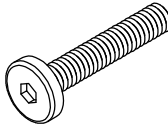1	x 6 pcs		2	x 12 pcs		3	x 6 pcs		10	x 1 pcs	
	BOLT M6 x 20MM			FLAT WASHER M6			BOLT M6 x 40MM			ALLEN WRENCH	

STEP 1

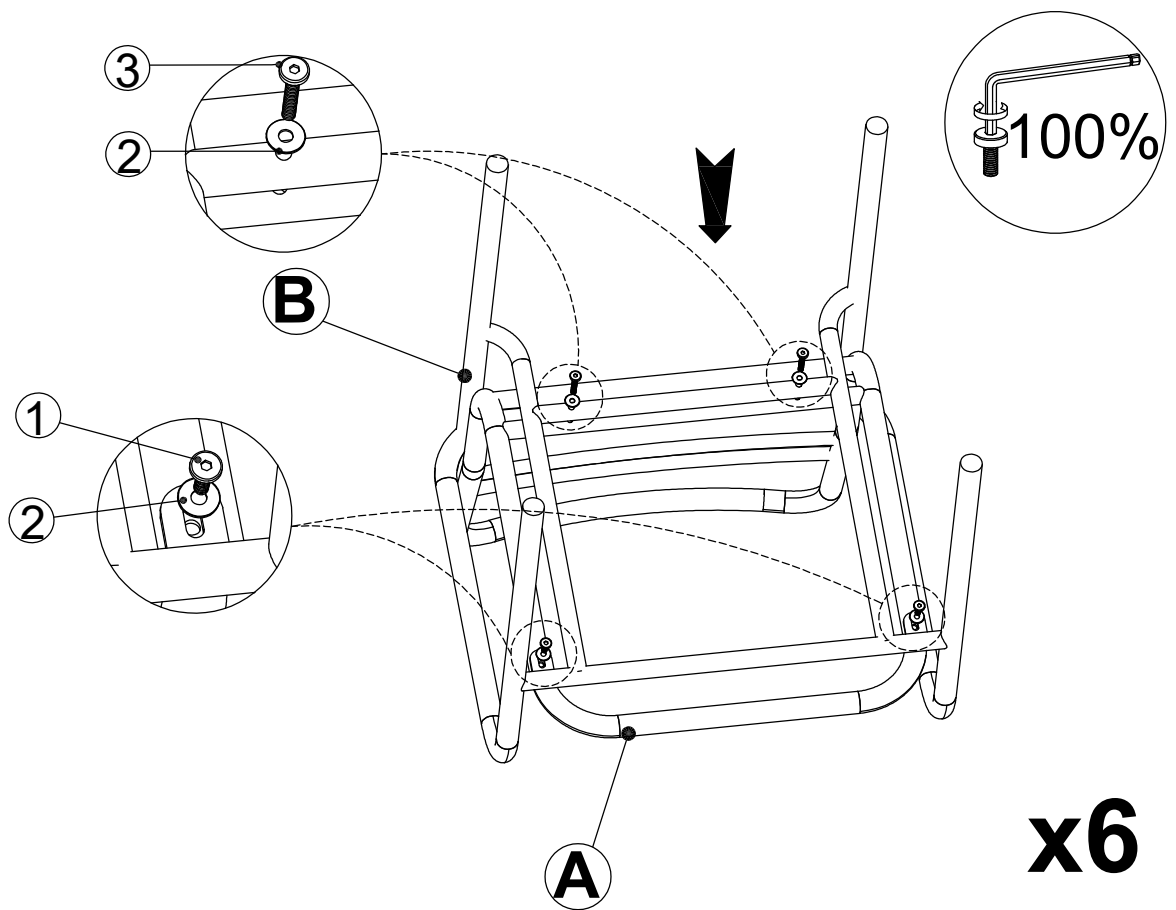
A x1

B x1

1 x2

2 x4


3 x2



Connect Seat Chair (B) & Back Chair (A), Tighten Bolt (1), (3) & Flat Washer (2) with Allen Wrench (10).



STEP 2

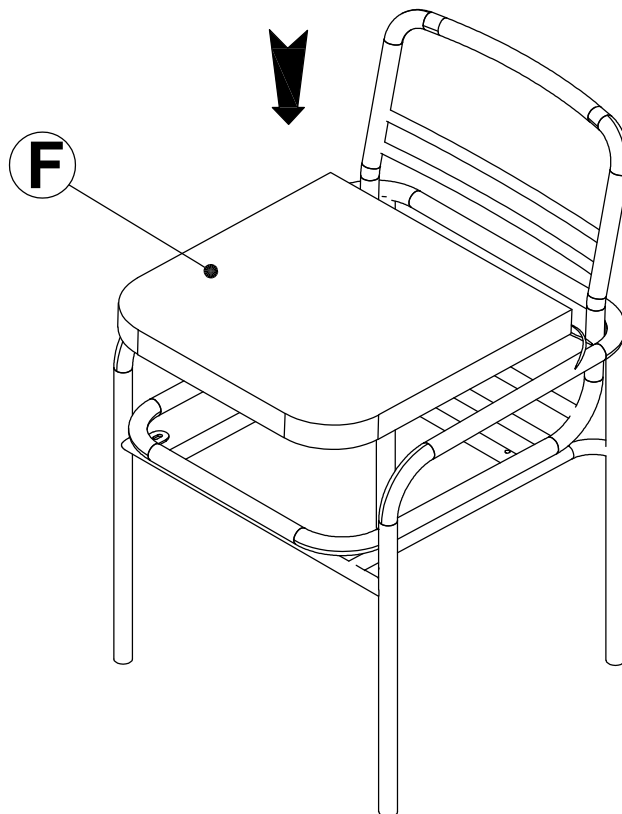F x1



Open all the bags, adjust the cushions, Set up the Seat Cushions (F).

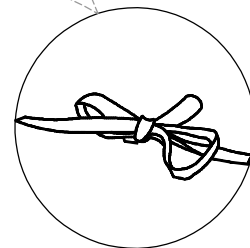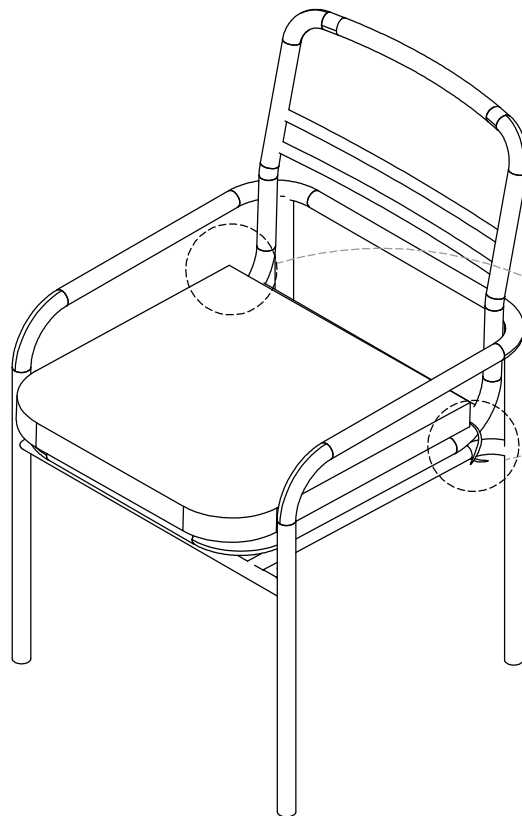STEP 3



x6

Finish Chair.

STEP 4



C	x 2
----------	------------

2	x 4
----------	------------

5	x 2
----------	------------

6	x 2
----------	------------

7	x 1
----------	------------

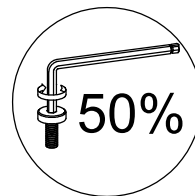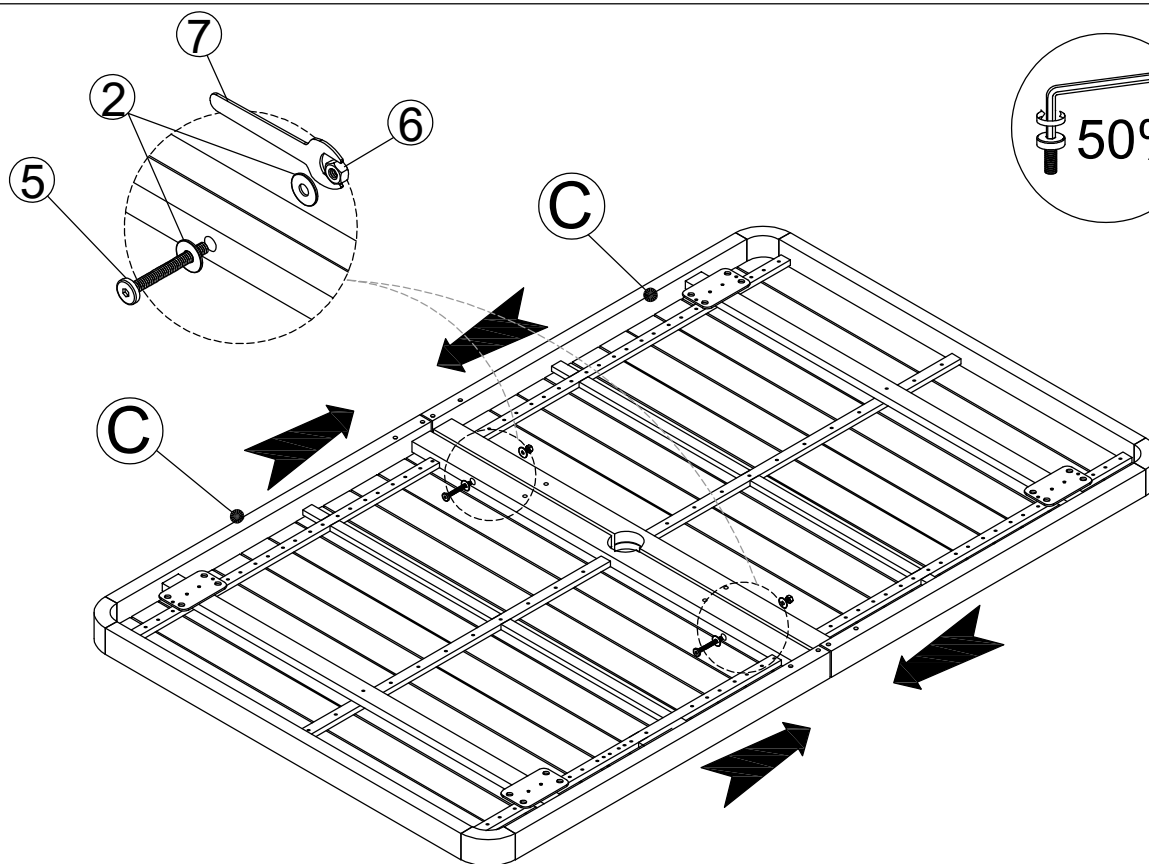

Connect Top Table (C) Tighten Bolt (5) & Flat Washer (2) & Nut (6), Key (7) & with Allen Wrench (10) .

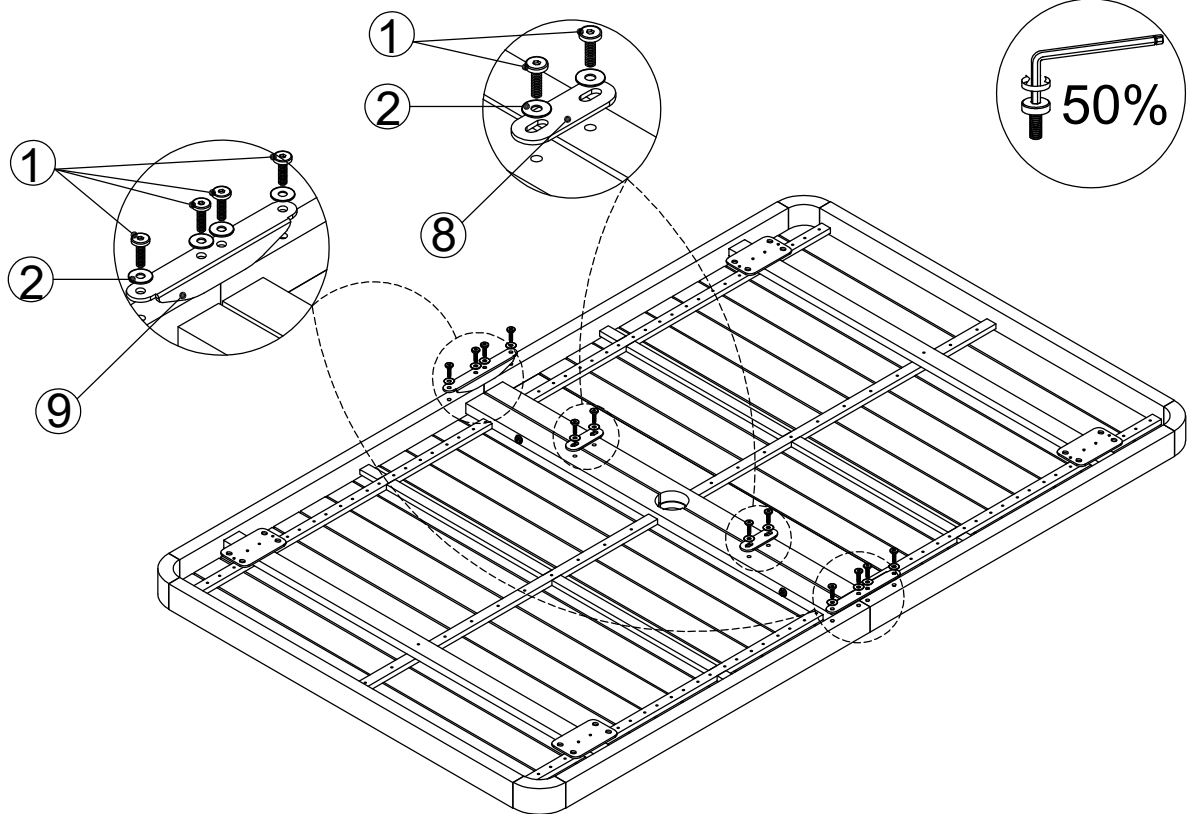
STEP 5

① x12

② x12

⑧ x2

⑨ x2




Connect the part from step 4, with Middle Connector (8), Side Connector (9), Tighten Bolt (1) & Flat Washer (2) with Allen Wrench (10).

STEP 6

E x2

② x8

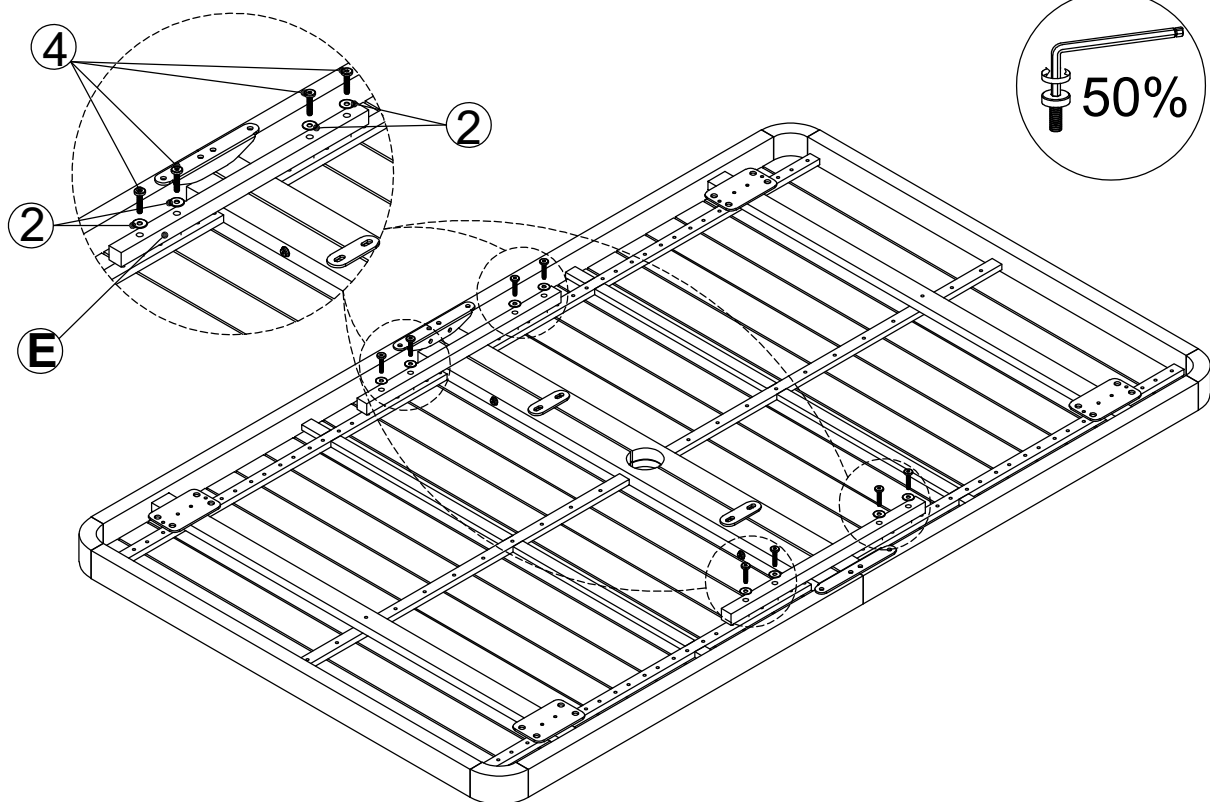④ x8




Connect the part from step 5, with Connector (E), Tighten Bolt (4) & Flat Washer (2) with Allen Wrench (10).

STEP 7

D x2

1 x16

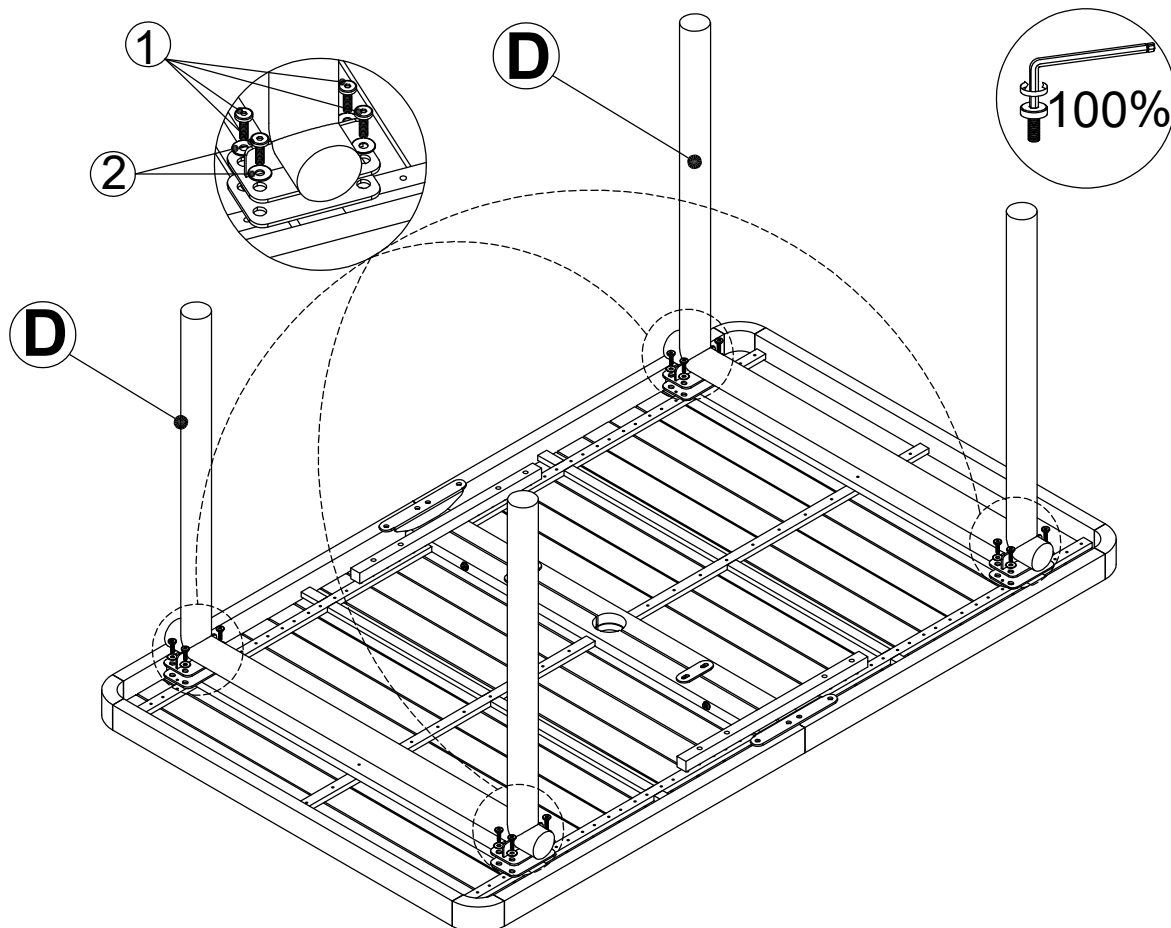
2 x16



Connect the part from step 6, Table Leg (D), Tighten Bolt (1) & Flat Washer (2) with Allen Wrench (10).

STEP 8

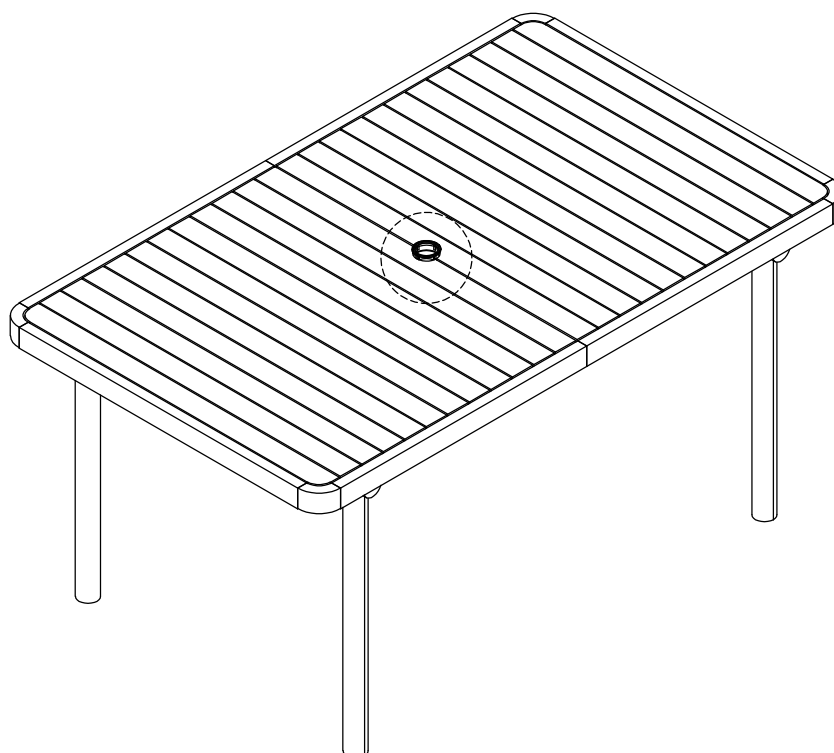11 x1



Finish Table.