





SOFT, DRY CLOTH



CHEMICAL



HEAT



KEEP DRY



HANDLE WITH CARE



DO NOT USE KNIFE


ASSEMBLY INSTRUCTION

DESCRIPTION : 2 DOOR SHOE CABINET


HARDWARE

A
16MM
CB SCREW
M3.5X16MM
1X20**B**
38MM
CB SCREW
M4X38MM
1X4**C**
NAIL 5/8
1X16**D**
D1 D2 D3
3.5 KG MAGNET (1 HOLE)
2 SETS**E**
PVC SHELF
SUPPORT
M3X12MM
1X8**F**
DOOR
SUPPORT
SPRING
1X2**G**
G1 G2
MAS R4
1X1**G**
G1 G2
MAS L4
1X1**H**
ROUND
PLASTIC
LEG (PVC)
1X4**I**
I1 I2
MINIFIX 5654+5546
4 SETS**J**
L-KEY
1X1**K**
QUICKFIT
CAP
1X4


PART LIST

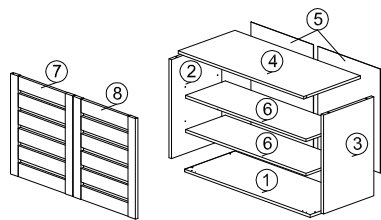


STEP 1

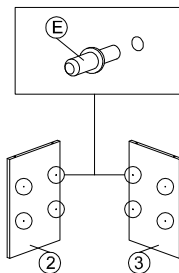


STEP 2

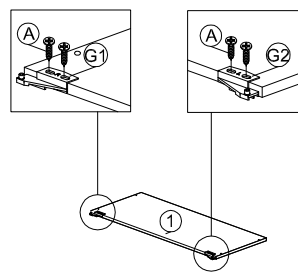


STEP 3

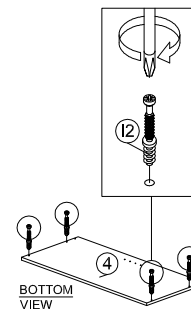


STEP 4

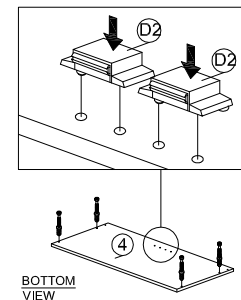


STEP 5

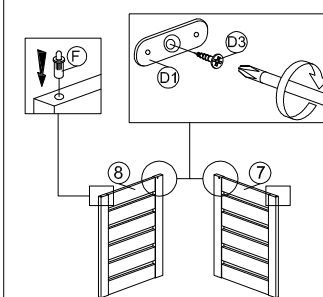


STEP 6

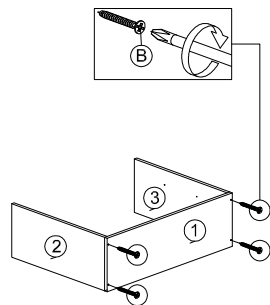


STEP 7

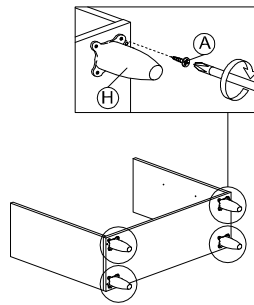


STEP 8

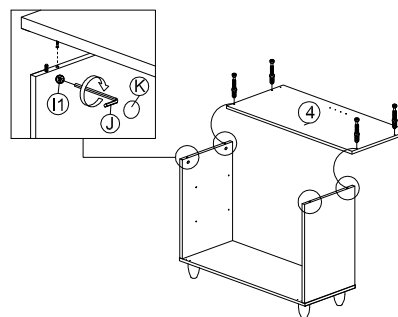

STEP 9

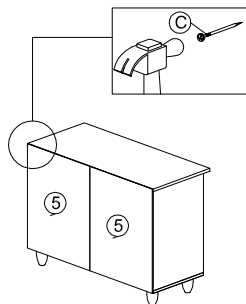

STEP 10

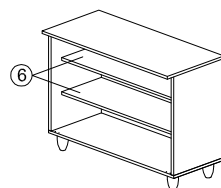

STEP 11

