

Assembly Instructions

Caution: You must read this before you proceed

Care & Maintenance


-   • Not for commercial use. For residential use only.
-  • Furniture may scratch floors. We recommend using furniture pads to protect your floors.
-   • Do not put hot items directly on furniture surface.
-   • Do not clean furniture with harsh cleansers or polish.
-   • Do not place furniture under direct sunlight.
-   • Do not place furniture near heating or cooling vents.
-   • Do not write on furniture without a padded barrier to protect the surface.
-   • Do not place furniture outside . For indoor use only.
-   • Stains may be removed with mild soap solution and damp cloth.
-   • Children should not climb or jump on the furniture.

-  • Dust and pick-up spills using a clean, non-colored, lint-free cloth.












Please look in the magic tape pouch for hardware packs and legs.

Sets often ship in multiple boxes and may arrive a day or two apart.




SOFA

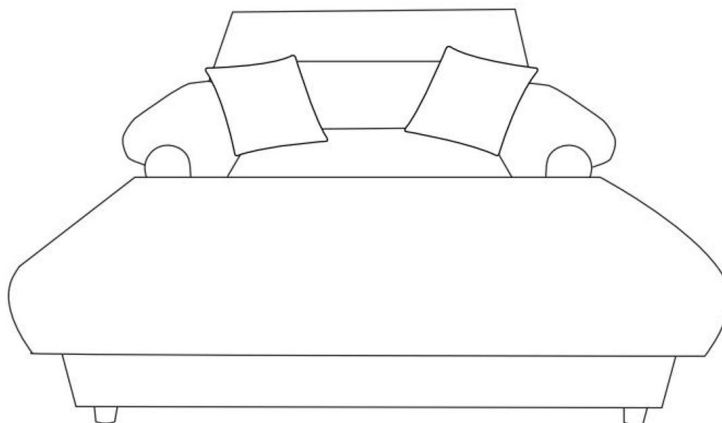

PART LIST : N719P474891

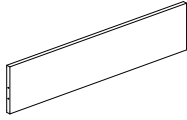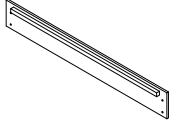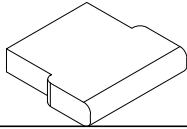
LABEL	PICTURE	DESCRIPTION	QTY
A		BACKREST	1
D		FRONT RAIL	1
E		LEFT RAIL	1
F		RIGHT RAIL	1
G		MIDDLE LEG CONNECTING WOODEN BATTE	1
I		BACK MIDDLE LEG CONNECTING WOODEN BATTE	1
M		RIGHT SIDE BED SLAT	1
M1		LEFT SIDE BED SLAT	1
N		RIGHT ARMREST BAG	1
K1		SEAT CUSHION	1
K2		BACK CUSHION AFTER	1
O		MIDDLE LEG	2
Q		LEG	6
L		PILLOW	1

PART LIST : N719P474892

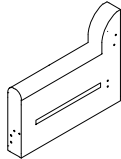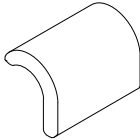LABEL	PICTURE	DESCRIPTION	QTY
B		LEFT ARMREST	1
C		RIGHT ARMREST	1
L		PILLOW	1
M		LEFT ARMREST BAG	1


Hardware (PACKED IN A BOX N719P474892)

Label	Picture	DESCRIPTION	QTY
①		BOLT (1/4 X 50MM)	10
②		BOLT (5/16 X 30MM)	4
③		BOLT (1/4 X 15MM)	22
④		SCREW (M4X 30MM)	20
⑤		SCREW (M4X 15MM)	8

LABEL	PICTURE	DESCRIPTION	QTY
6		FLAT WASHER (5/16)	4
7		LOCK WASHER(5/16)	4
8		FLAT WASHER (1/4)	26
9		LOCK WASHER (1/4)	26
10		RIGHT LINK	1
11		LEFT LINK	1
12		ALLEN WRENCH	1
13		RIGHT STEEL CONNECTING PLATE	1
14		LEFT STEEL CONNECTING PLATE	1
15		IRON CONNECTING PLATE	2
16		TAPERED CONNECTORS ON THE BACKREST	2
17		TAPERED CONNECTORS ON THE ARMREST	2


Assembly Steps:

OVERVIEW

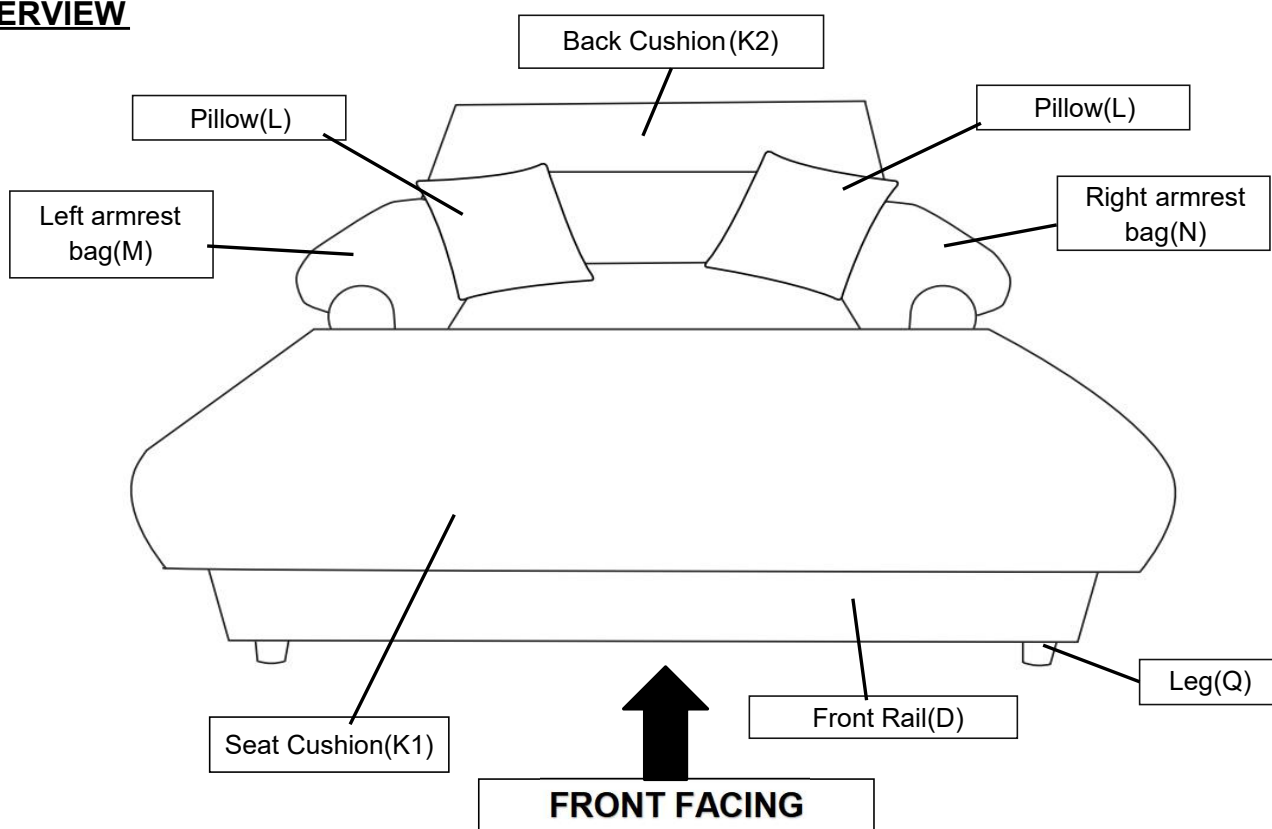

This Sofa has multiple parts and may require up to 60 minutes to assemble. To give you an overview of the Sofa parts, the above picture is to help you put the various Sofa parts into perspective. Please read through the instructions to familiarise yourself with the parts and steps before assembly.


Step 1

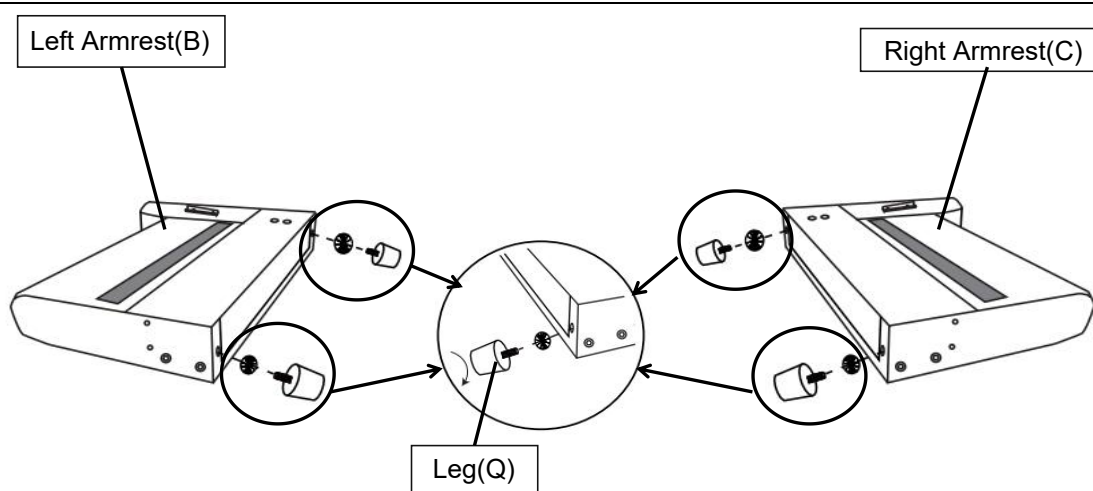

Install the Leg(Q) at the bottom of Left Armrest(B) and Right Armrest(C) by placing Plastic Washer on the threaded stem. Tighten by turning the Leg clockwise.

STEP 2


③ x 2 	⑩ x 1 	⑪ x 1 	⑤ x 8 
--	--	--	---

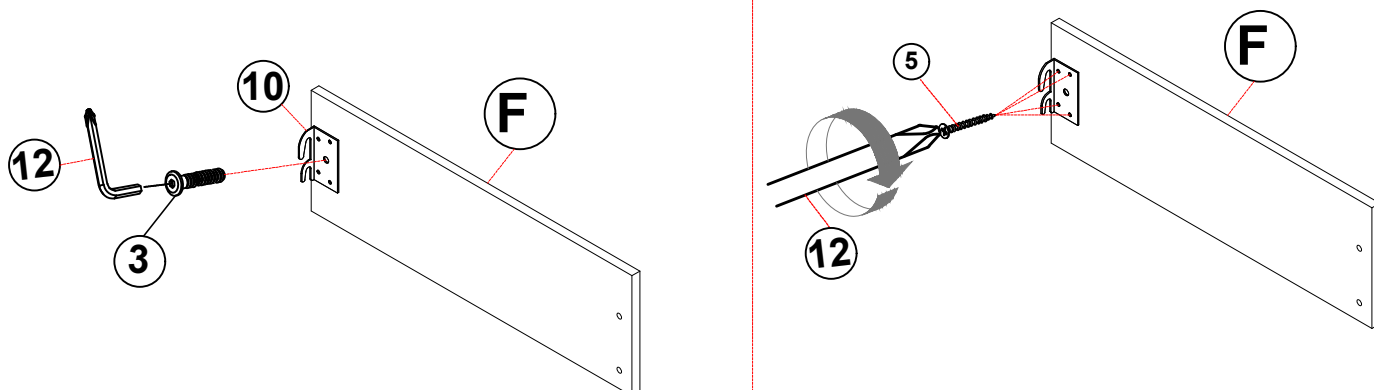

Position component (10) correctly on part (F). Secure it using bolt (3) together with lock (12), tightening firmly. Then, use screw (5) to further fasten and reinforce component (10) as illustrated. Repeat the same procedure for component (11) on part (E).



STEP 3

③ x 4 	⑧ x 4 	⑨ x 4 	⑬ x 2 
--	--	--	---

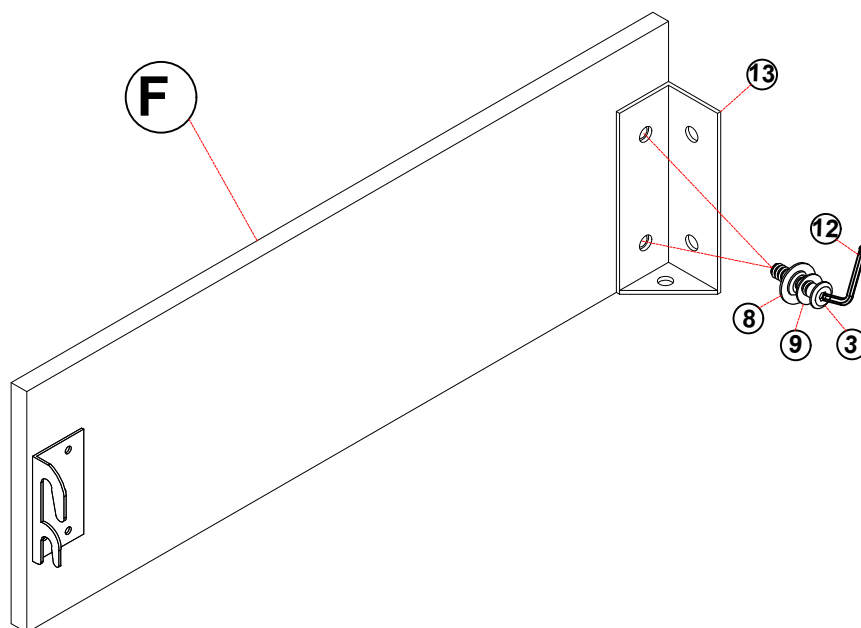


Attach part (13) to part (F). Secure it with bolt (3), together with washers (8) and (9), and fasten with lock (12). Tighten as shown in the illustration. Repeat the same procedure to attach part (13) to part (E).

STEP 4

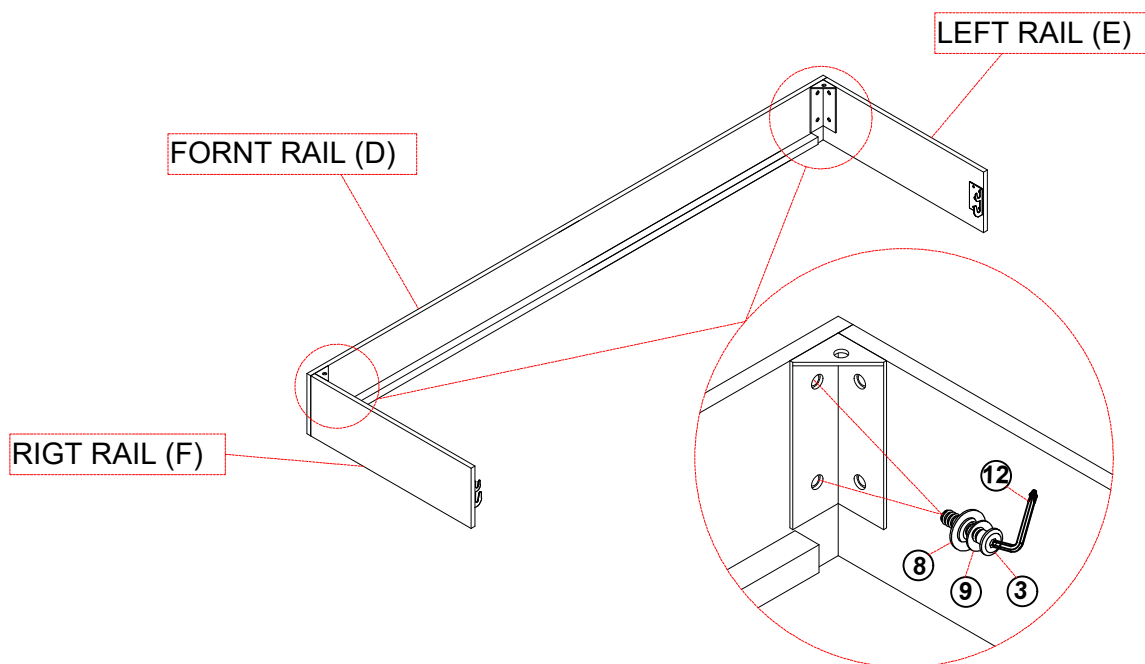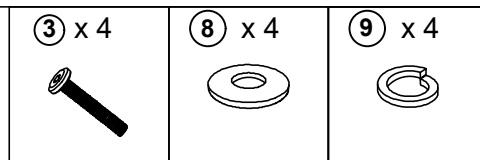

Attach the left rail (E) to the front rail (D1) using bolts (3), spring washers (9), and flat washers (8). Tighten with the hex wrench (12) by turning clockwise until secure. Repeat the same procedure to attach the right rail (F) to rail (D2). Tighten the bolts in sequence, as illustrated.


STEP 5

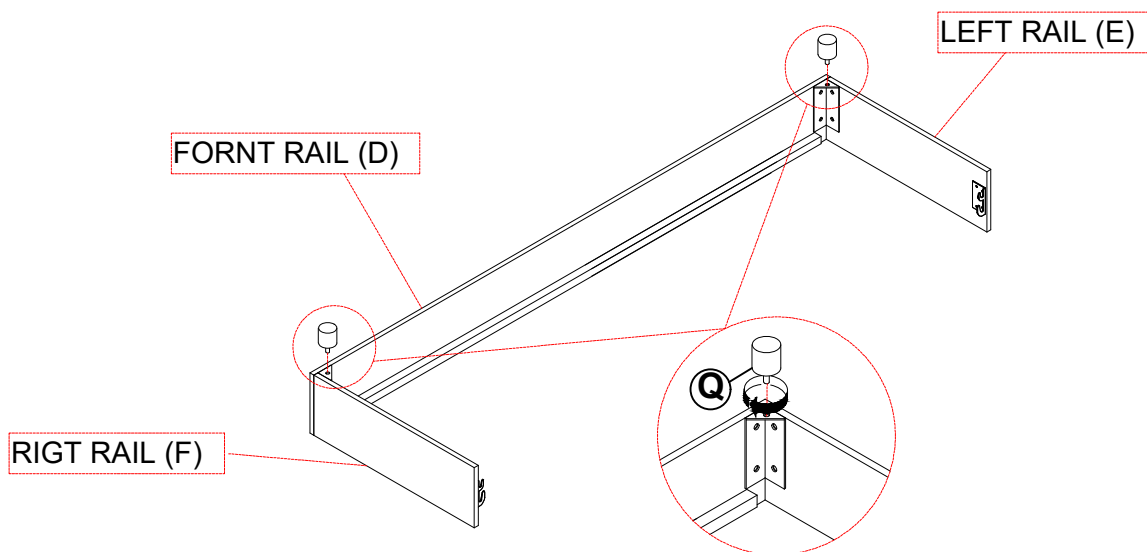

Attach leg (Q) to the front rail (D). Tighten by turning the base clockwise. As illustrated.

STEP 6


③ x 8 	⑧ x 8 	⑨ x 8 	⑬ x 1 	⑭ x 1 	⑰ x 2 
--	--	--	---	--	--

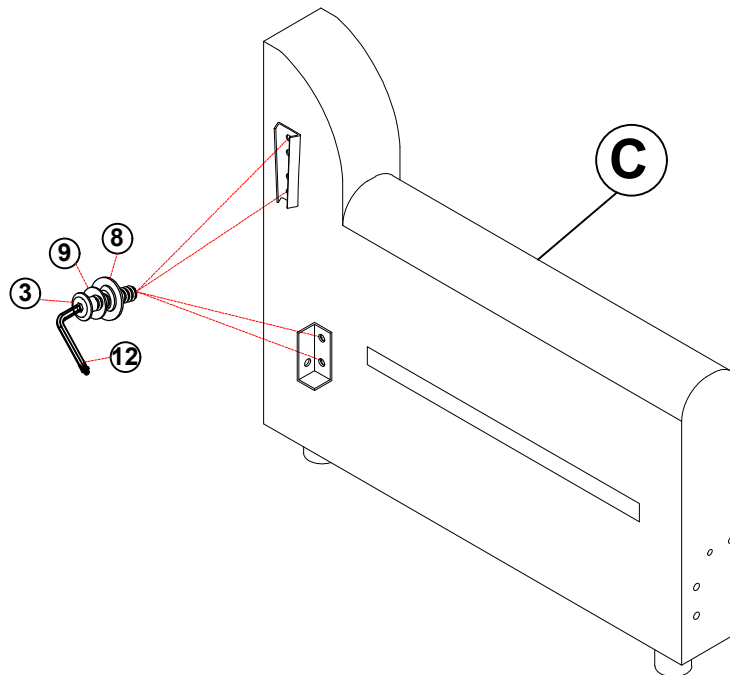

Place accessories (13) and (17) in the correct position on the handrail (C) as shown in the illustration. Tighten with bolt (3) using wrench (12). Assemble the remaining parts in the same way for handrail (B) with accessory (14).

STEP 7

② x 4 	⑥ x 4 	⑦ x 4 
--	--	--

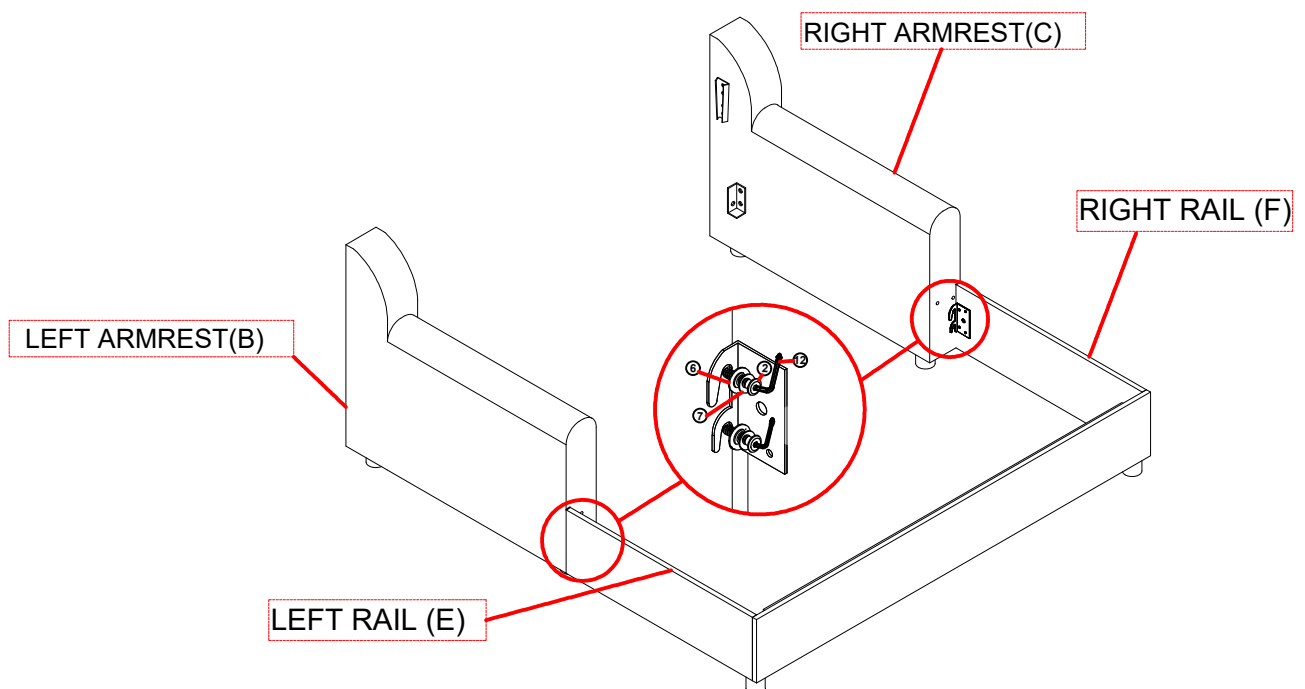

Align parts (E) and (F) into the correct positions on armrests (B) and (C). Use bolts (3), flat washers (6), and spring washers (7), then tighten securely with wrench (12), as shown in the illustration.

STEP 8

① x 4



⑧ x 4




⑨ x 4



MIDDLE LEG CONNECTING
WOODEN BATTE (G)

BACK MIDDLE LEG
CONNECTING WOODEN
BATTE (I)

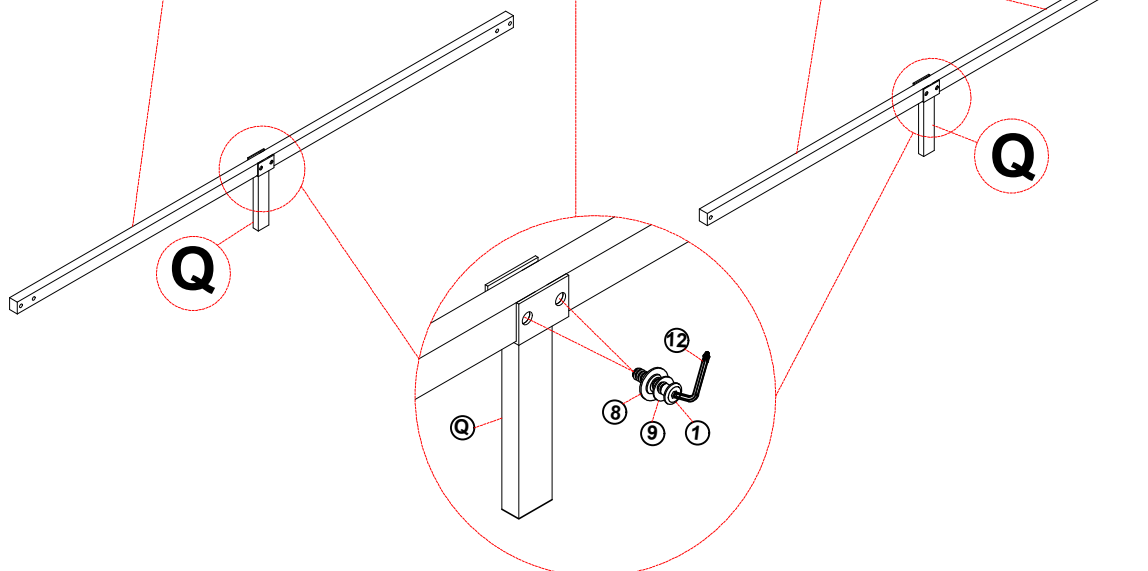


Attach the center leg (Q) to parts (G) and (I). Using bolts (1), flat washers (8) and (9), and Allen key (12), tighten clockwise until secure, as shown in the illustration.

STEP 9

③ x 4





⑩⑥ x 2

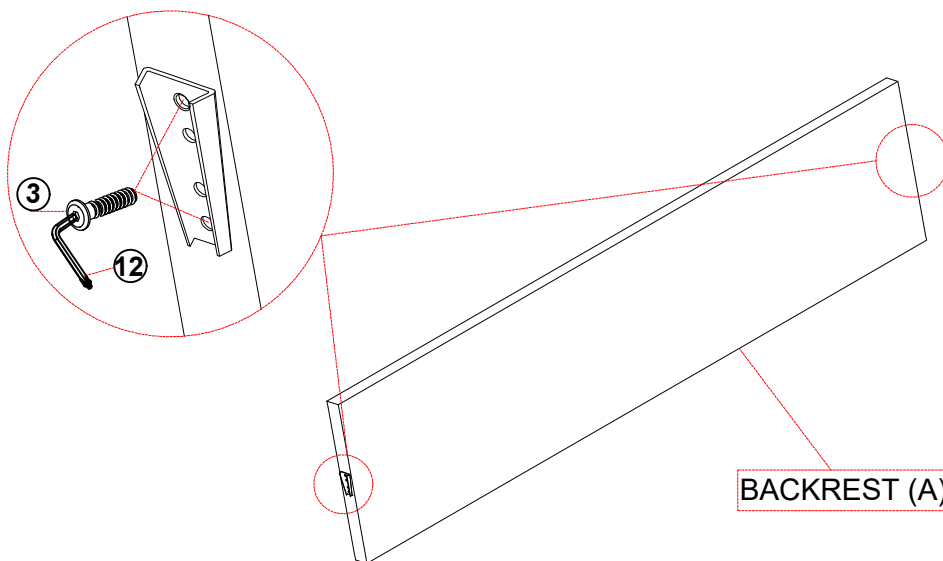

Place the fittings (16) into the correct positions as shown in the illustration. Secure them using bolts (3) then tighten firmly with wrench (12).



Assemble the remaining parts in the same manner on the opposite side.

STEP 10

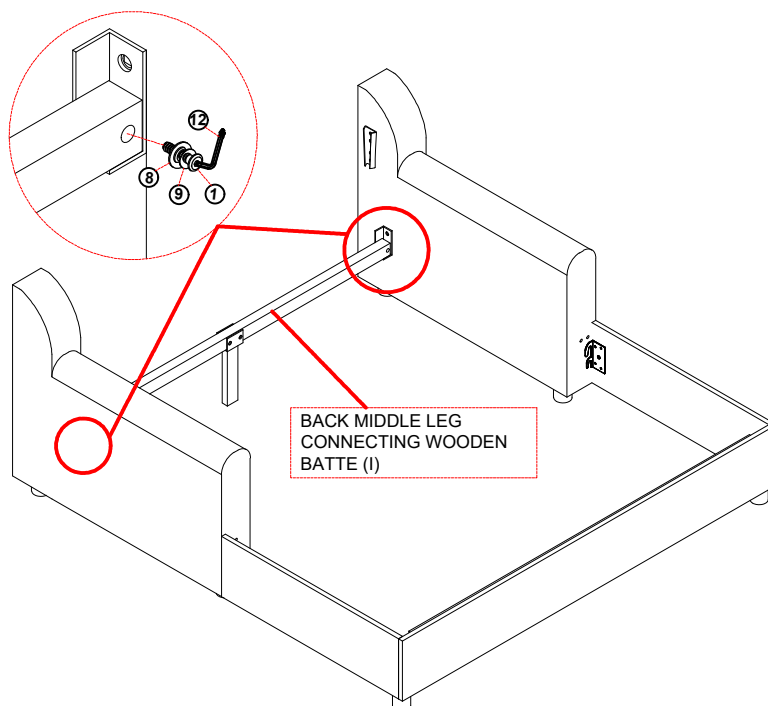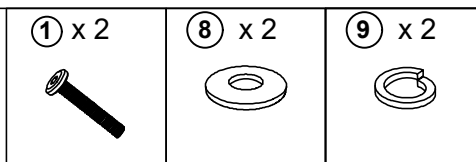


Attach the rear middle leg connecting bar (G) to parts (13) and (14) using bolts (2), spring washers (8) and flat washers (9). Tighten clockwise with a hex wrench (12) until secure, as illustrated.

STEP 11

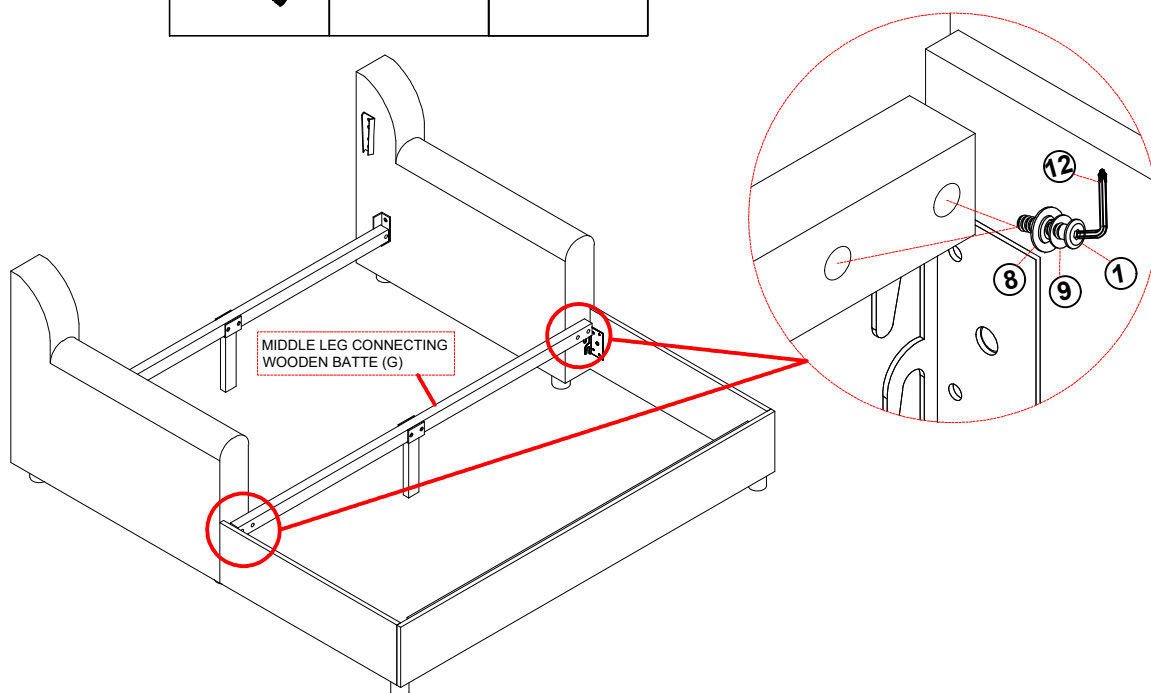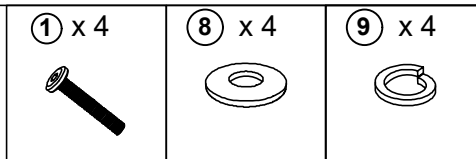

Attach the front center leg connector (G) to the left armrest (B) and right armrest (C) using bolts (1), spring washers (8), flat washers (9), and Allen key (12). Tighten clockwise until secure.

STEP 12

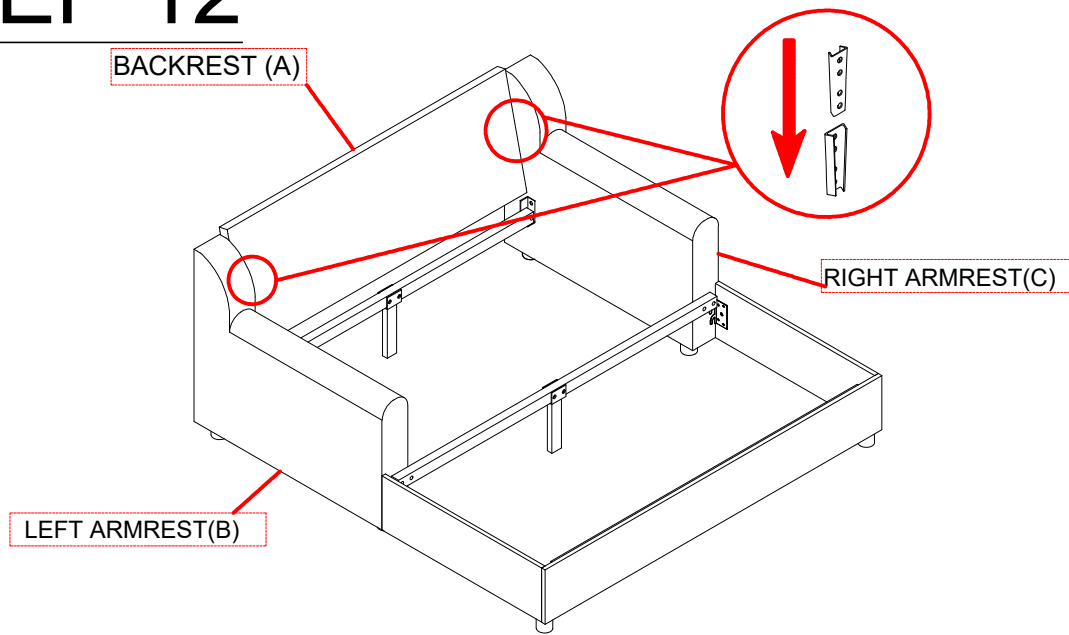



Slide the Tapered Connectors on the Backrest(A) into the Tapered Connectors on the Left Armrest(B) as shown in the picture. Repeat the same steps with the Right Armrest(C).

Note: Make sure the Tapered Connectors on Backrest(A) lock into the Tapered Connectors on the Left Armrest(B) and Right Armrest(C). Assistance from an adult partner is necessary for this assembly process. During this assembly process - do exercise caution. You may need to use your hand to press down or pave away the padded surface to facilitate the 'slip and slide' assembly.

Caution: Ensure that your fingers do not get caught or pinched in the assembly process.


STEP 13

④ x 20

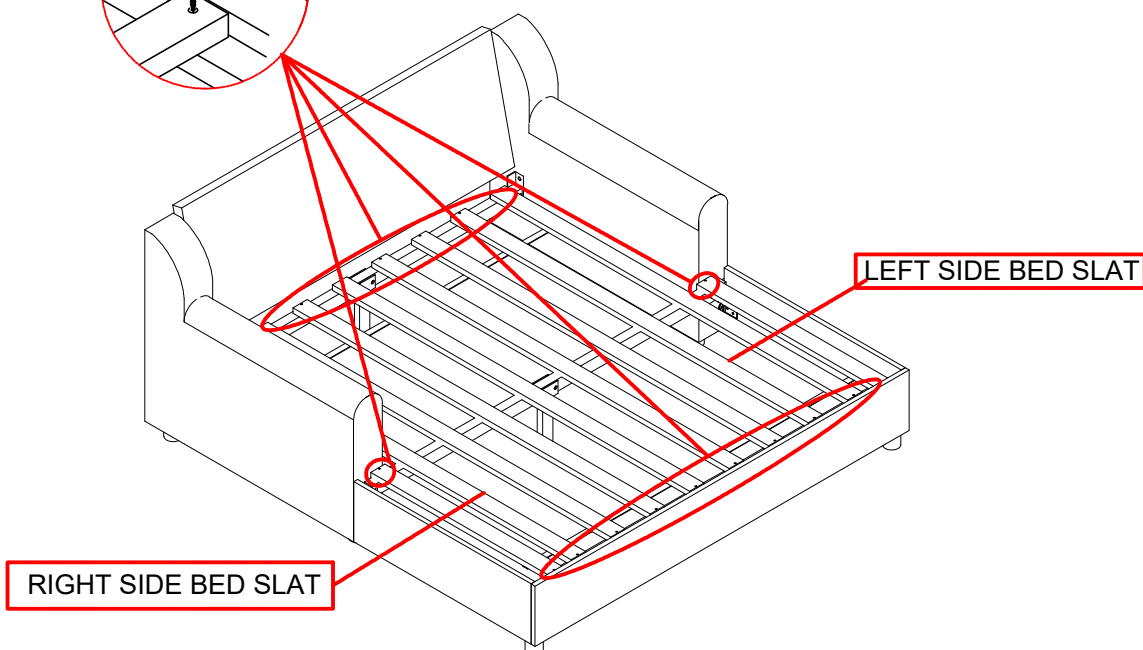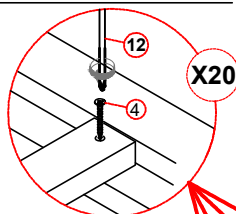


Place the bed rail (J) on the sofa. Use a screwdriver (12) to secure the screw (4) and bed rail (J) to the bed rail. A total of 20 screws are needed.

Step 14

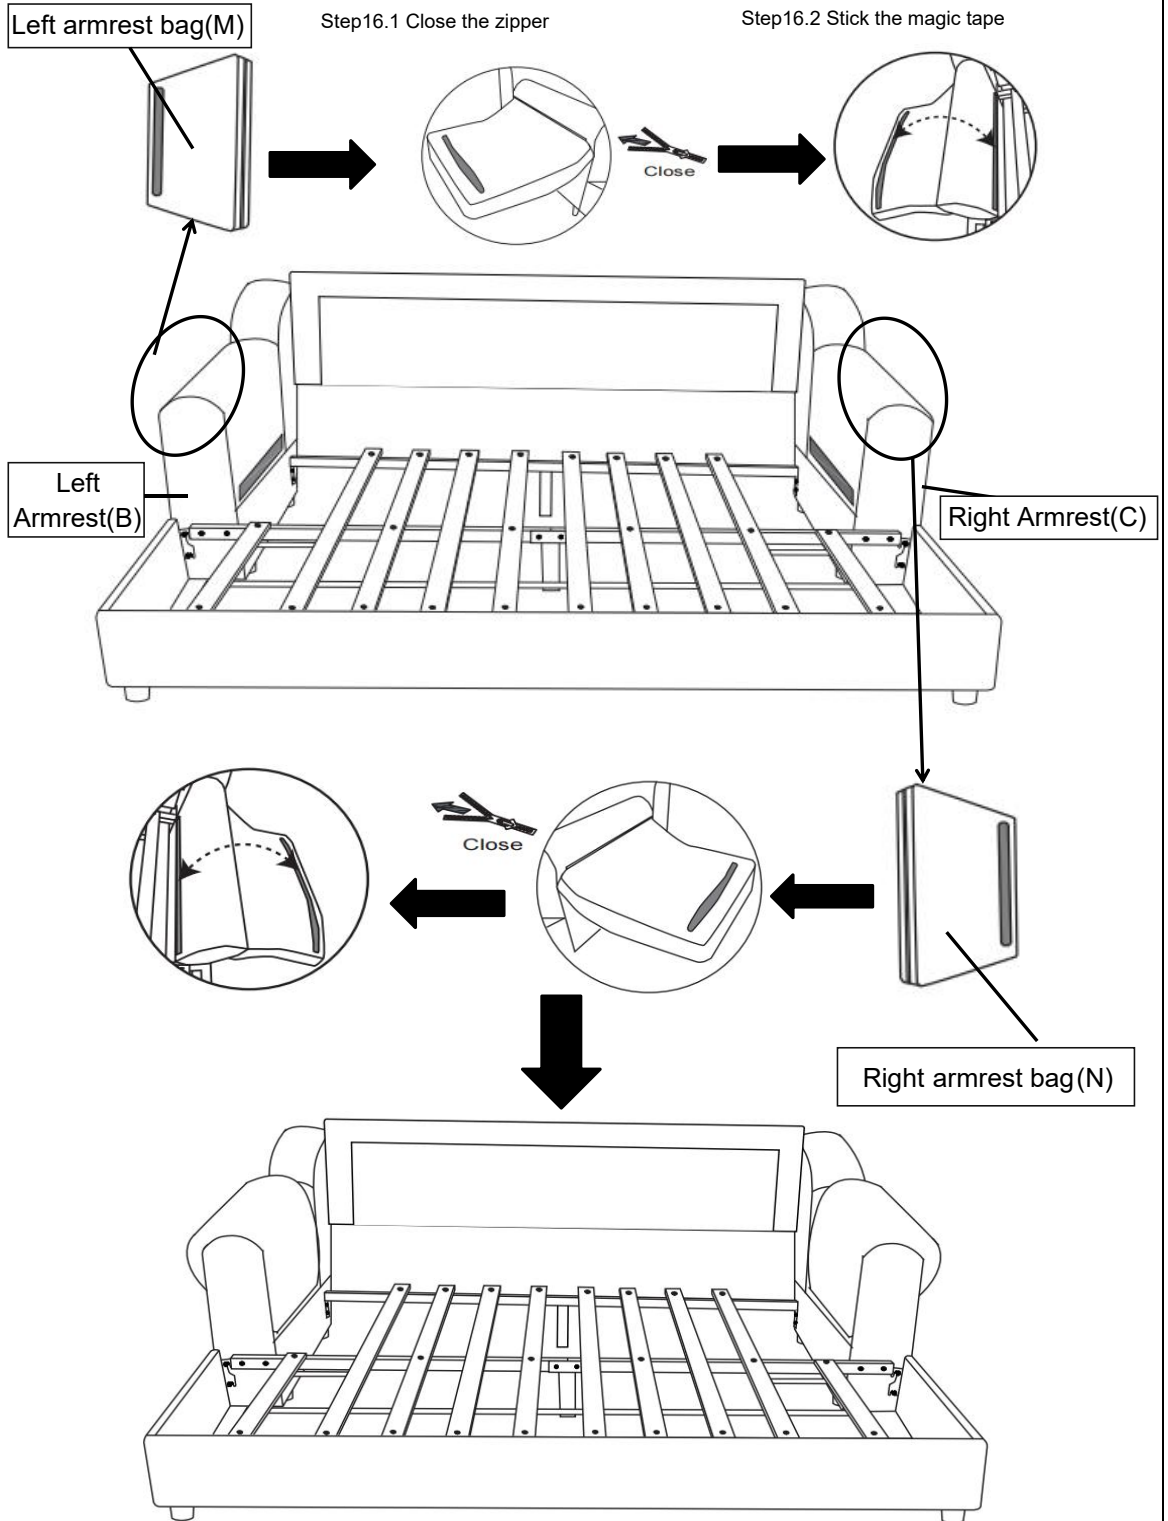


Install the Left armrest bag(M) and the Right armrest bag(N) to the Left Armrest(B) and Right Armrest(C) as shown above.

Step 15

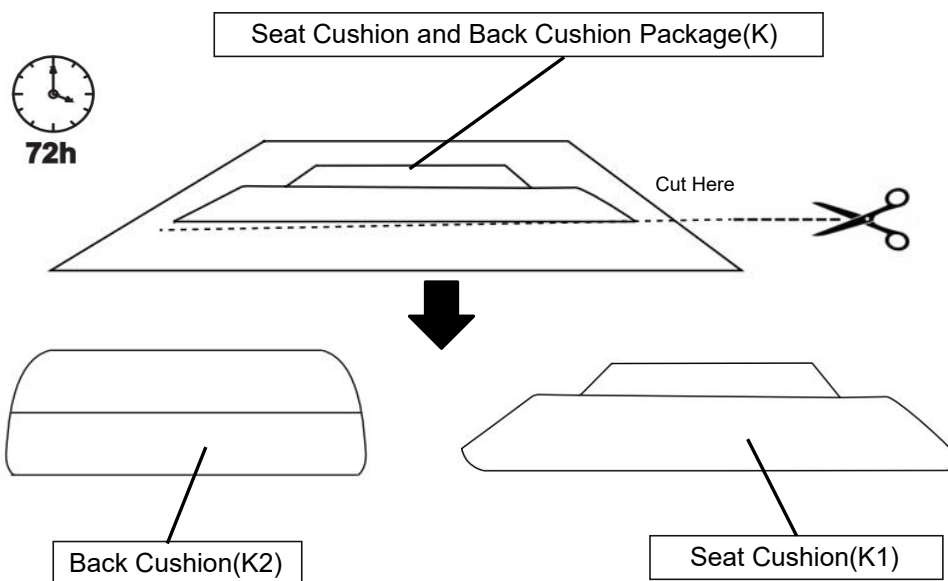


Cut the Seat Cushion and the Back Cushion Package(K), then take out the Back Cushion (K2) and the Seat Cushion (K1). Full decompression may take up to 72 hours.

Step 16

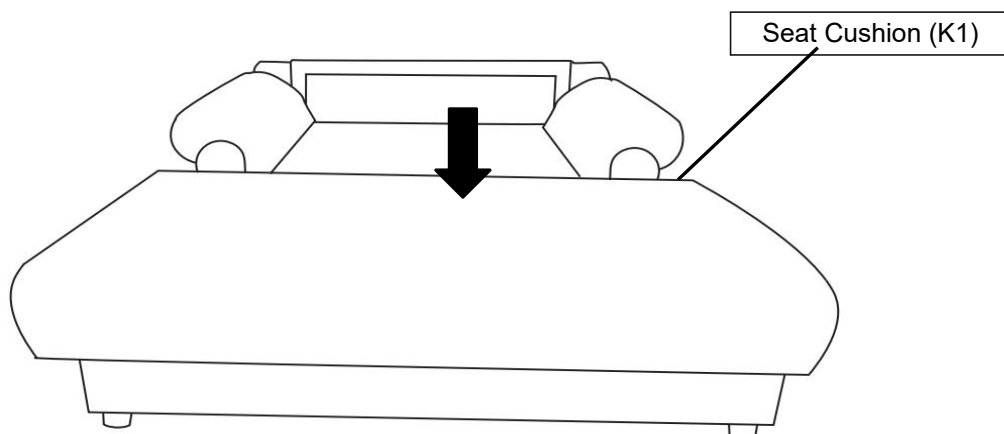


Put the Seat Cushion(K1) on the SOFA.

Step 17

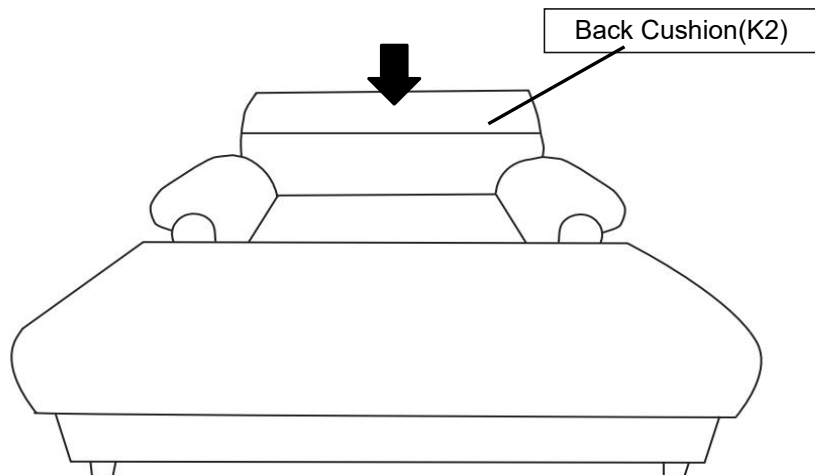


Put the Back Cushion(K2) on the SOFA.

Step18

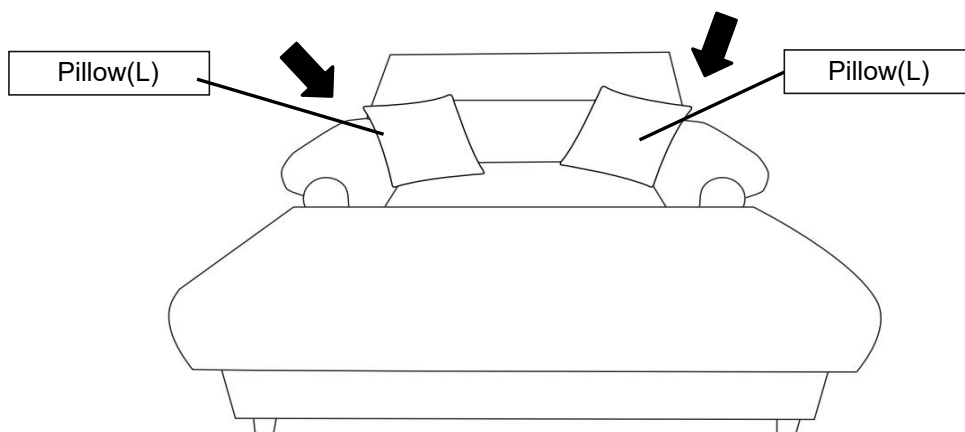

Put the Pillow(L) on the SOFA.

Step 19

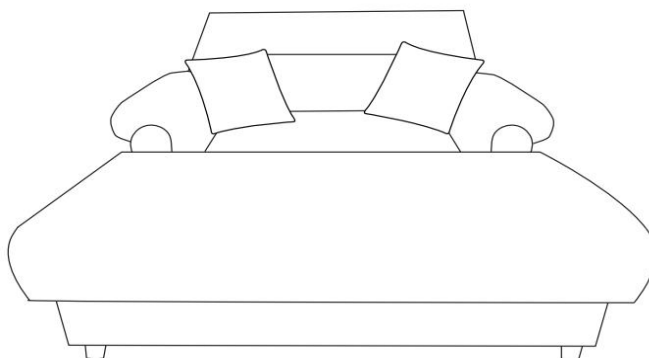

Your SOFA is ready to use.
This SOFA can only be used on a flat, level surface.