


As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

Our professional after-sales team will serve you online all day.

Before You Start

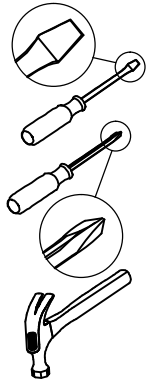

- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw.


Helpful Hints

PEOPLE NEEDED FOR ASSEMBLY: 2


- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.




Part List

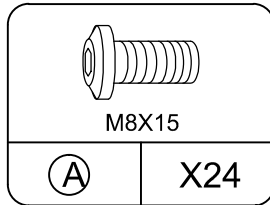


BOLT
spare:2

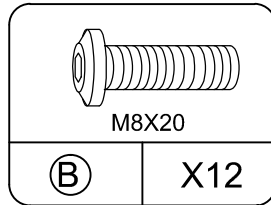


BOLT
spare:2

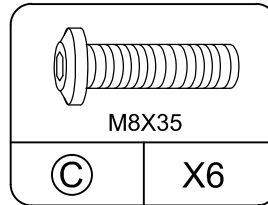


BOLT
spare:2

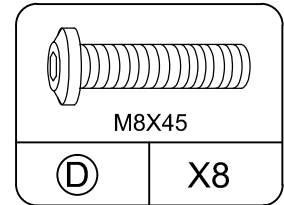



BOLT
spare:1

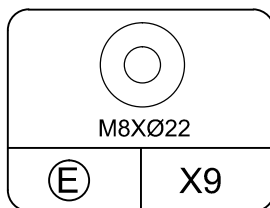


GASKET
spare:1

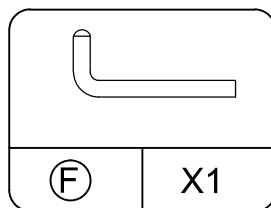

SPANNER

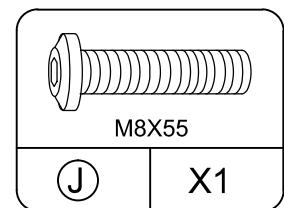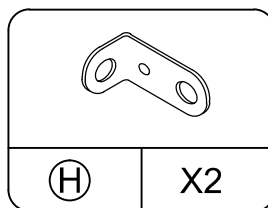


BOLT
spare:1

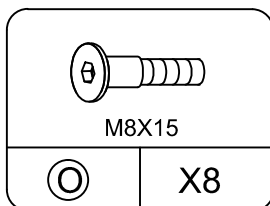


BOLT
spare:2

Product explosion diagram

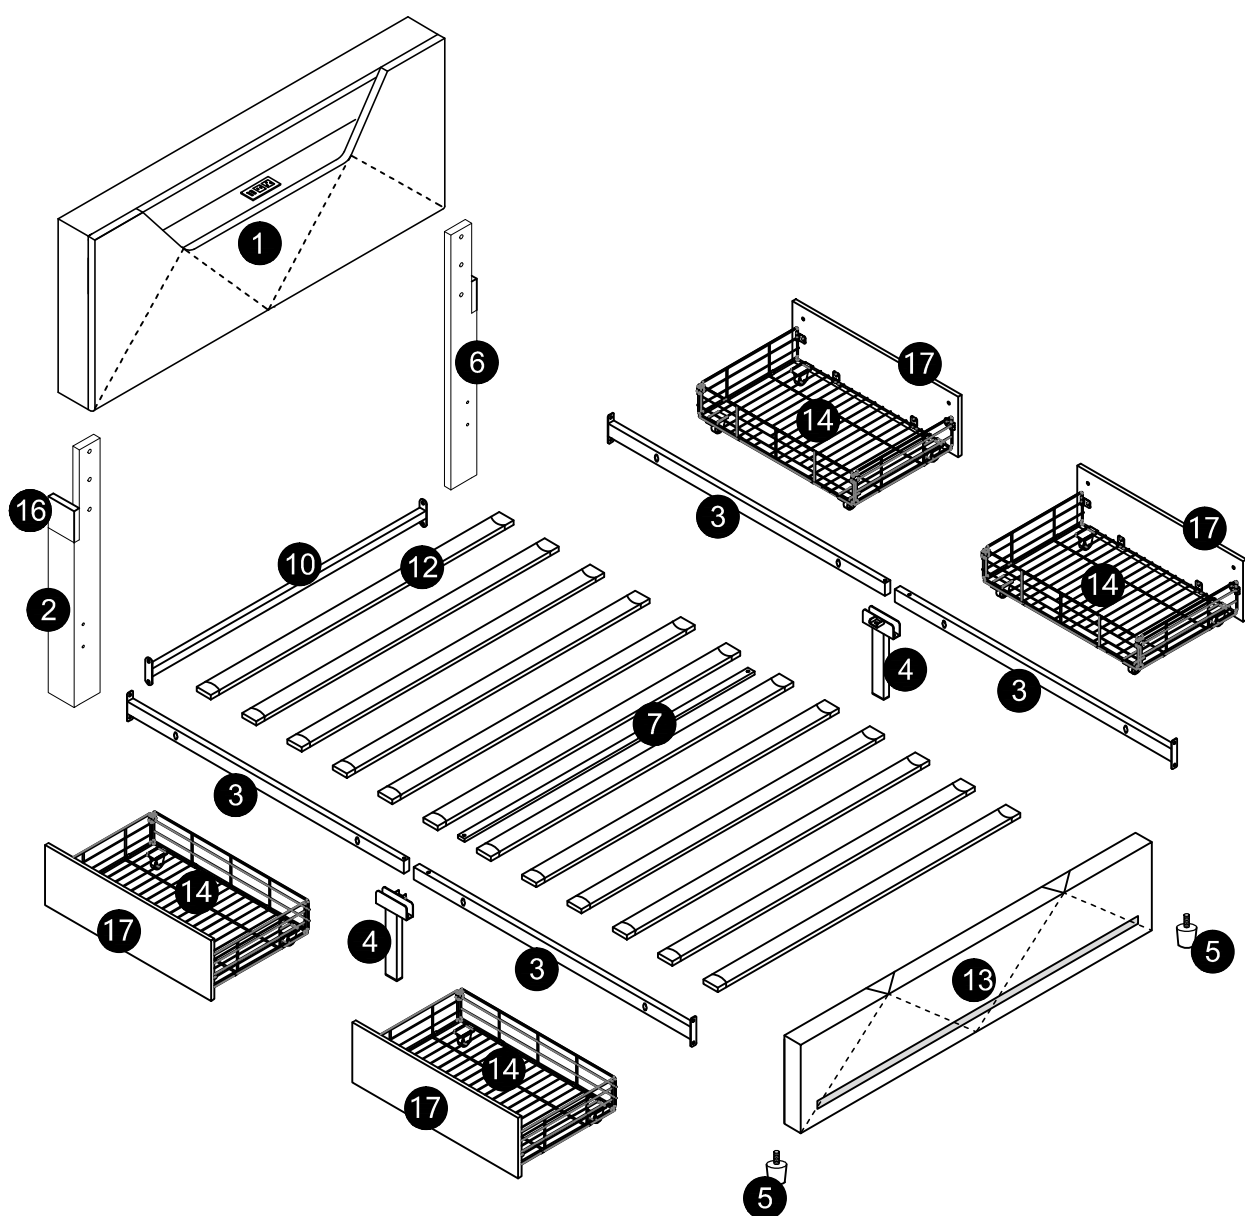

Part List

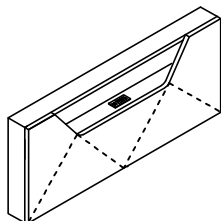


Headboard

1 1PC



Headboard leg

2 1PC

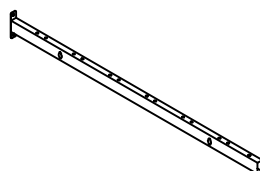

Side tube

3 4PCS



Side leg

4 2PCS




Foot

5 2PCS




Headboard leg

6 1PC

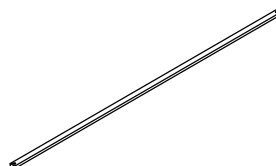


Mid-connecting tube

7 1PC

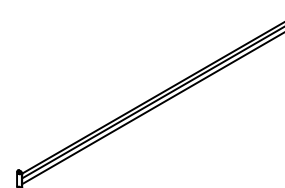


Headboard Leg connecting tube

10 1PC

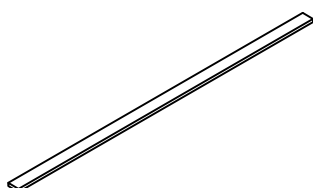


Sparerib strip

12 12PCS

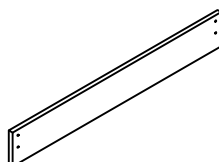


Foot panel

13 1PC

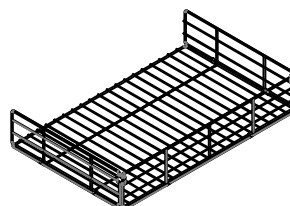


Wire basket

14 4PCS

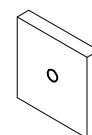


Wooden block

16 2PCS

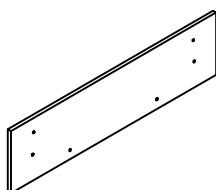

Drawer board

17 4PCS

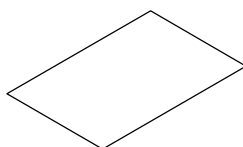

Drawer bottom panel

18 4PCS




Iron buckle

19 16PCS



Sparerib strip plug

21 26PCS

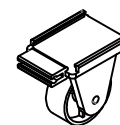

Pulley

22 16PCS




Plastic buckle

23 8PCS




Plastic buckle

24 8PCS

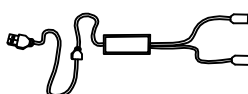

Power cord

28 1PC

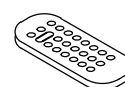

Remote control

29 1PC




Strap magic tape




30 8PCS

Board Identification

Not actual size



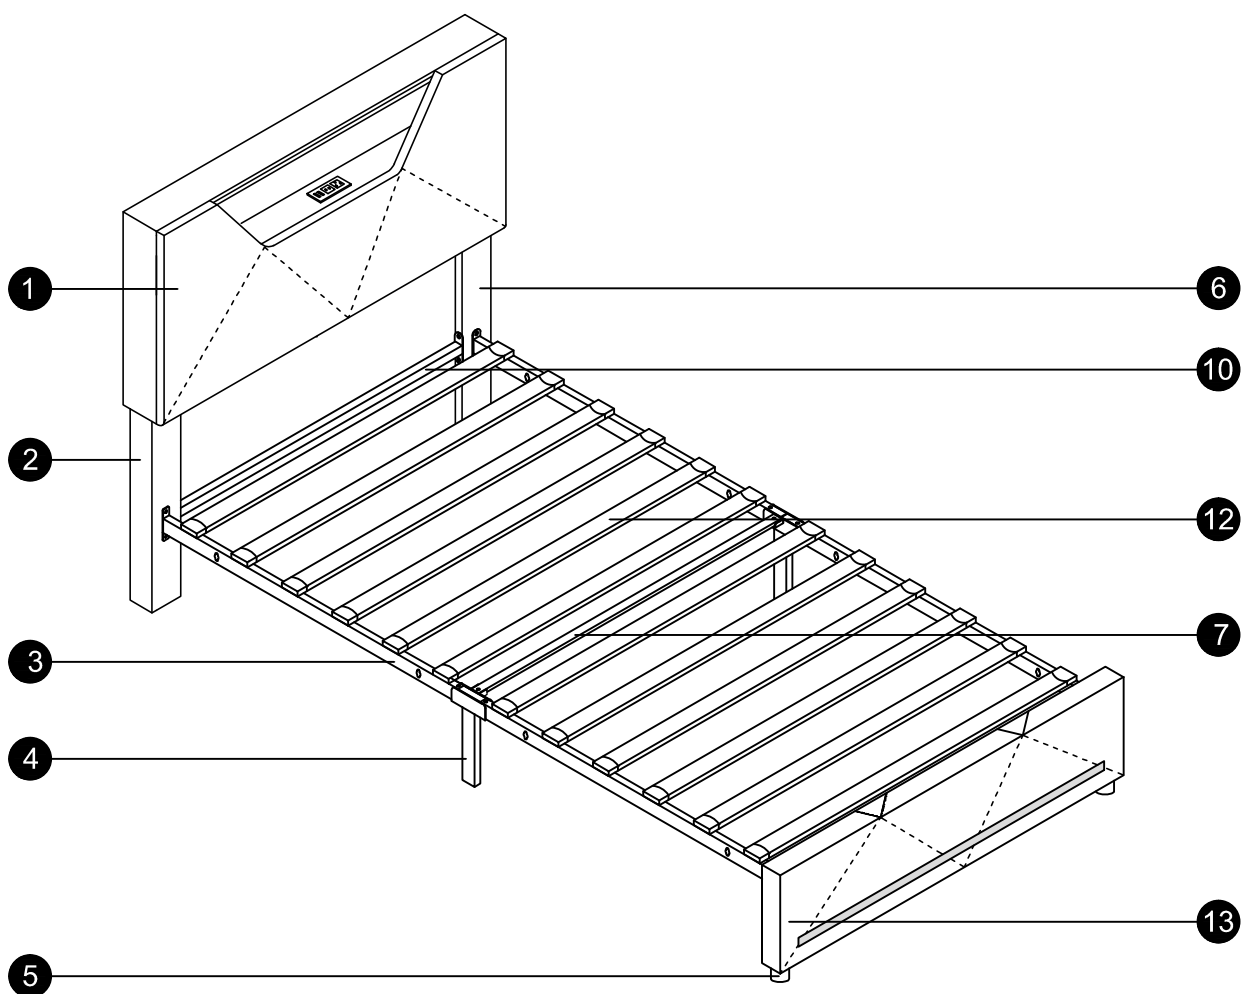


STEP1

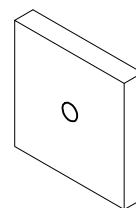
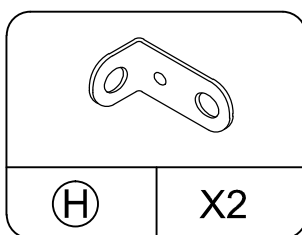
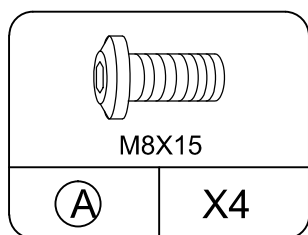


Wooden block




16 2PCS

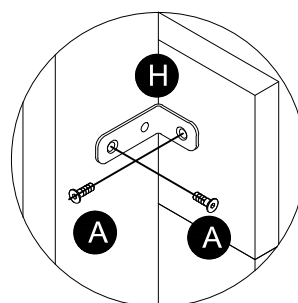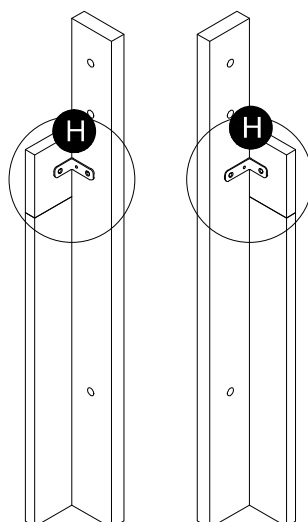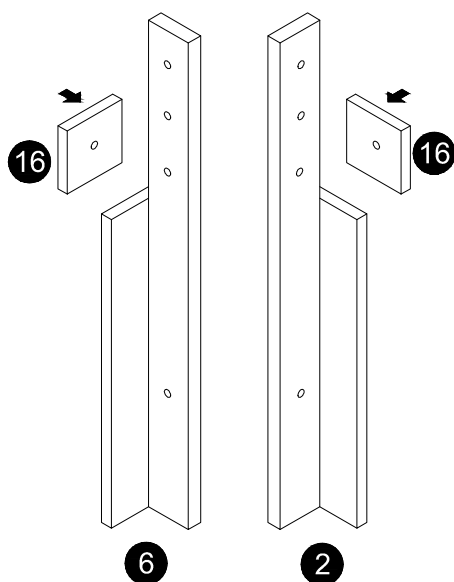

STEP2


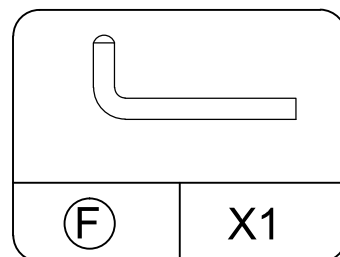
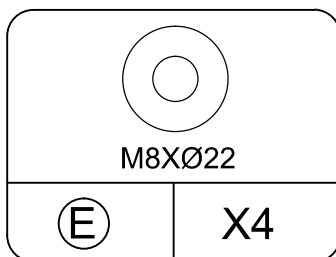
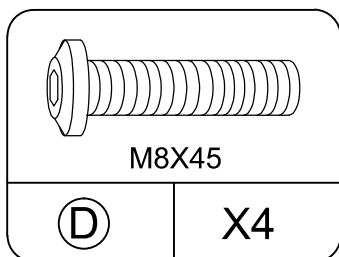


Due to the heavy head of the bed, two or more people must participate in the install ! ! !

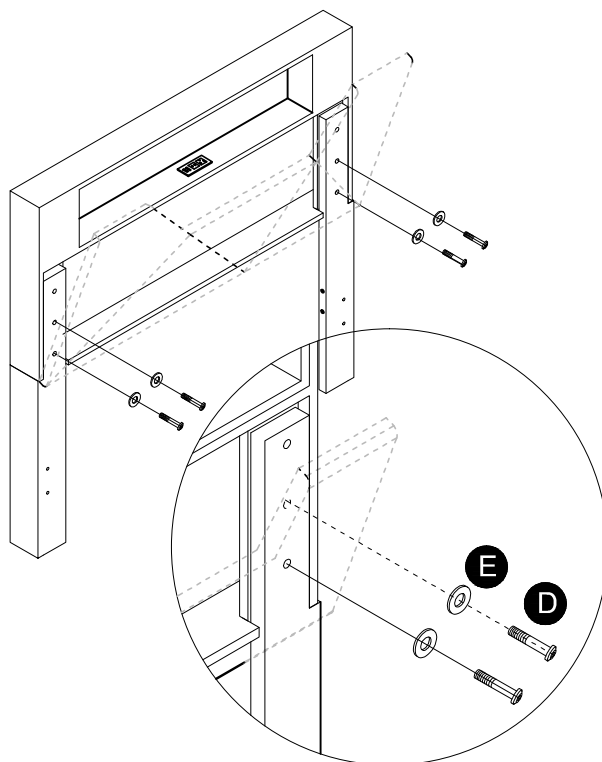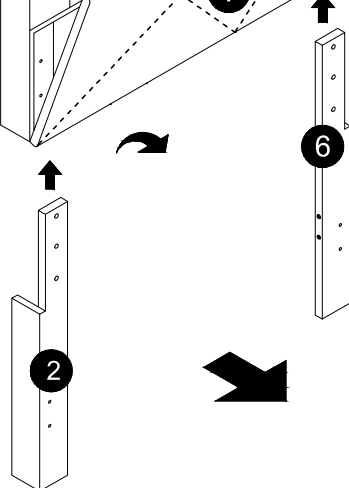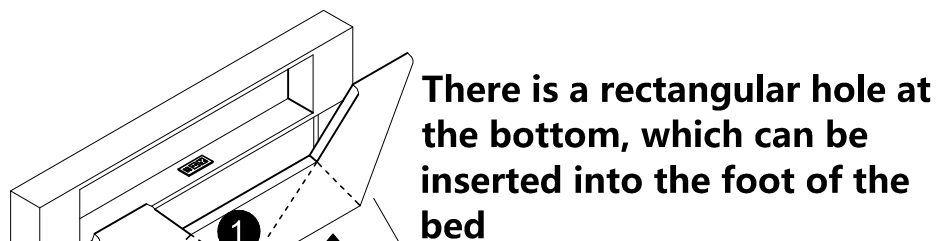


Please install the headboard (1) on the legs (2) (6) with bolt (D). (The height of the bed head is adjustable. If your mattress height is 11 inches or shorter, please align the 2 holes on the bed head with the second and third holes of the legs. If your mattress height is 12-14 inches, please align the two holes with the first and second holes on the legs).

STEP3

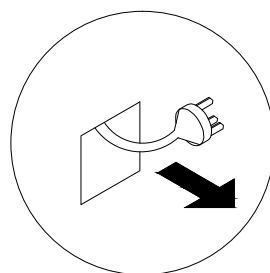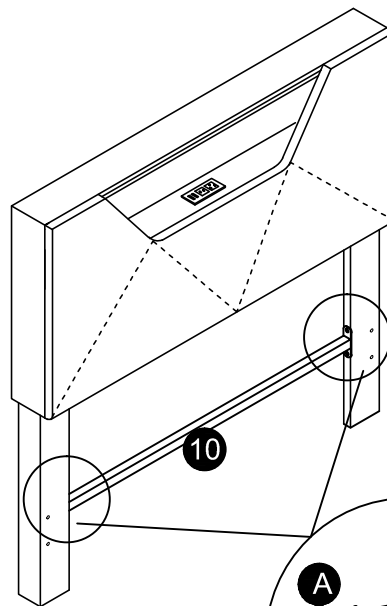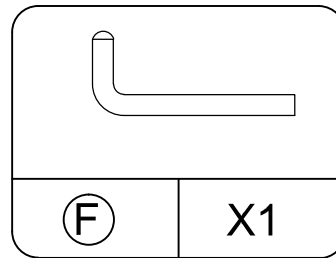
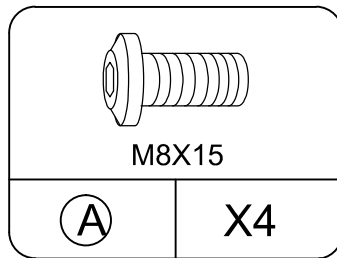


**Take the
plug out of
the plug
hole here**


Turn to the back

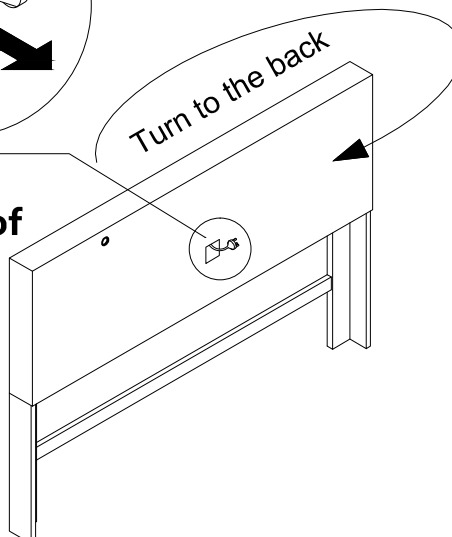





STEP4

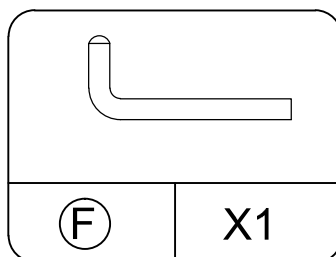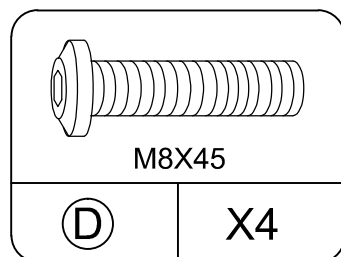





Four bed sides (3)
need to be installed, 2 sets in total

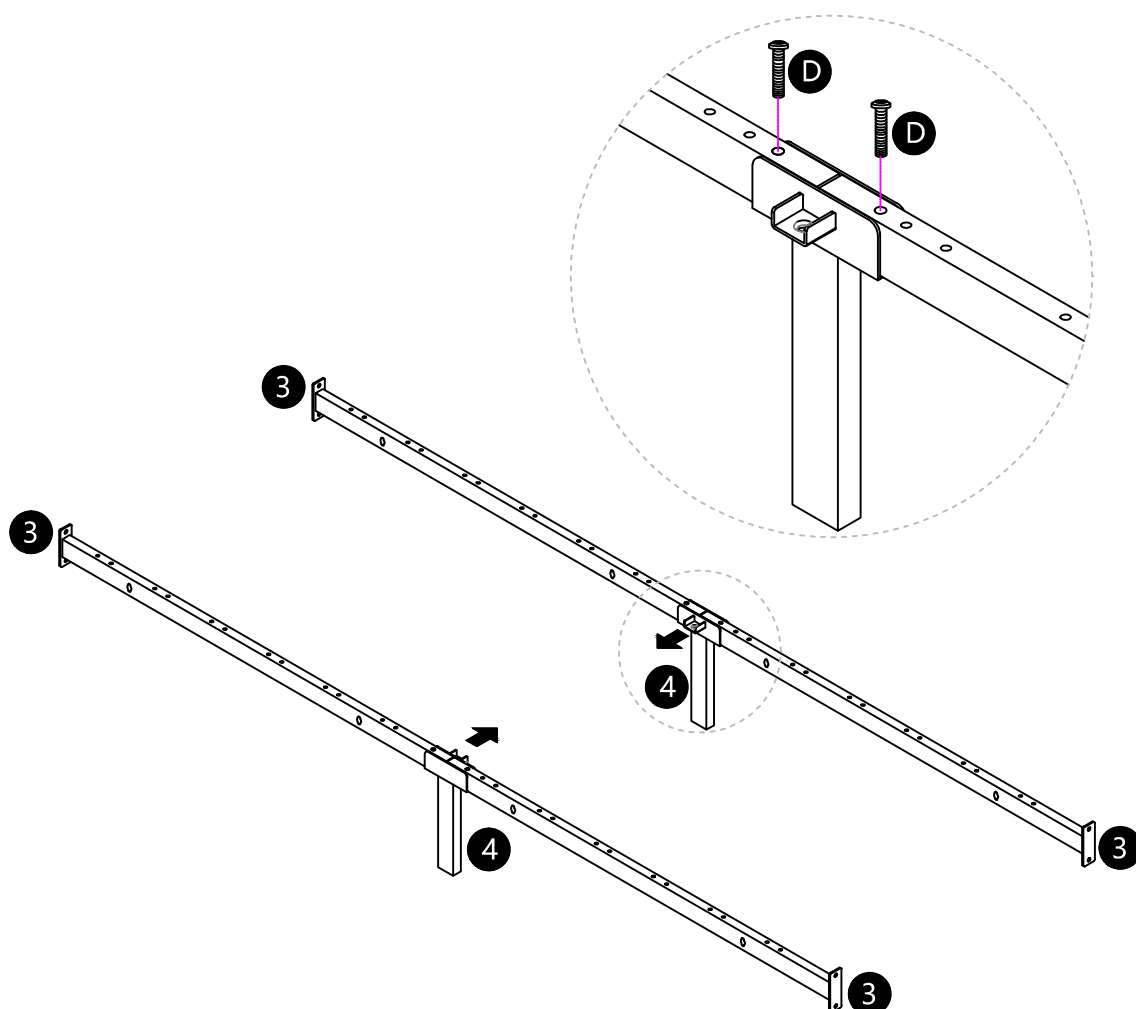



STEP5

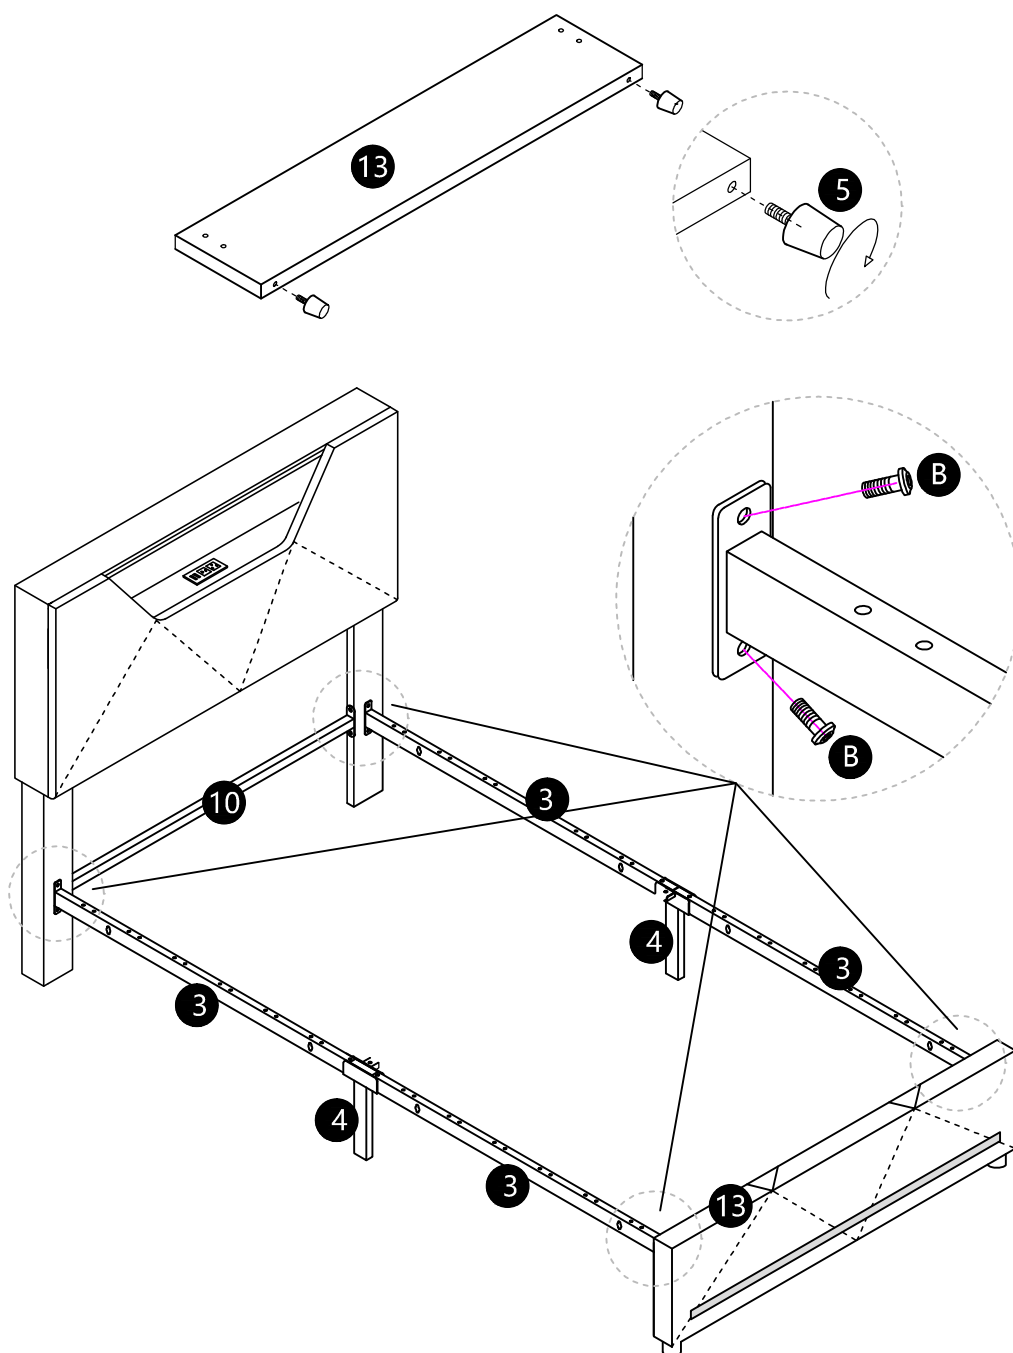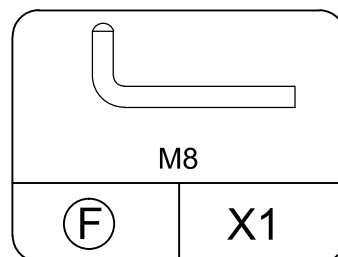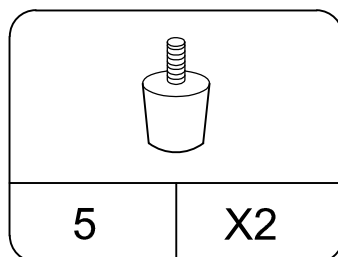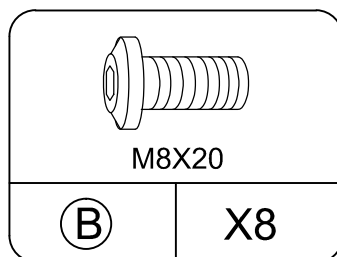




STEP6

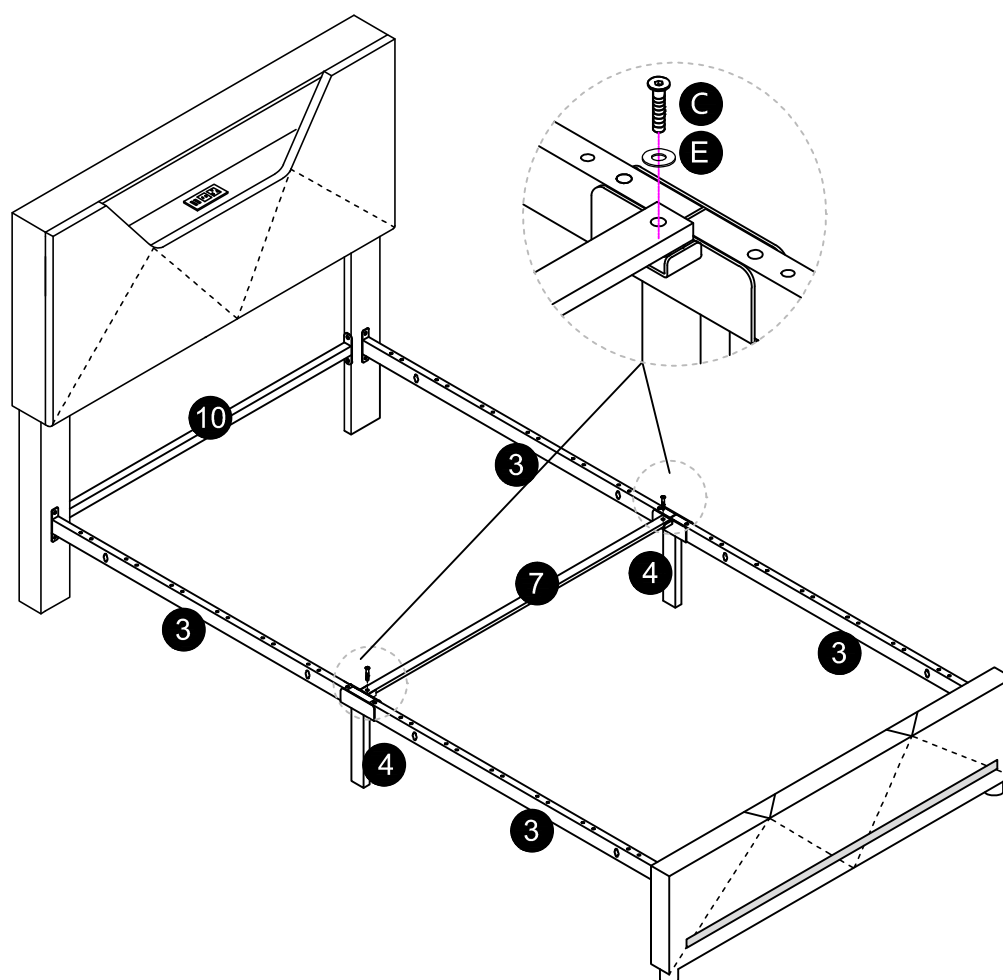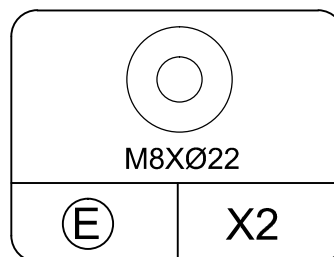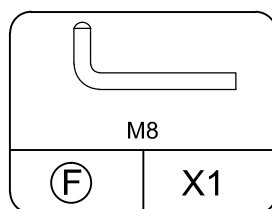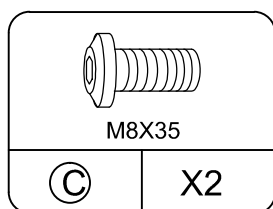

STEP7

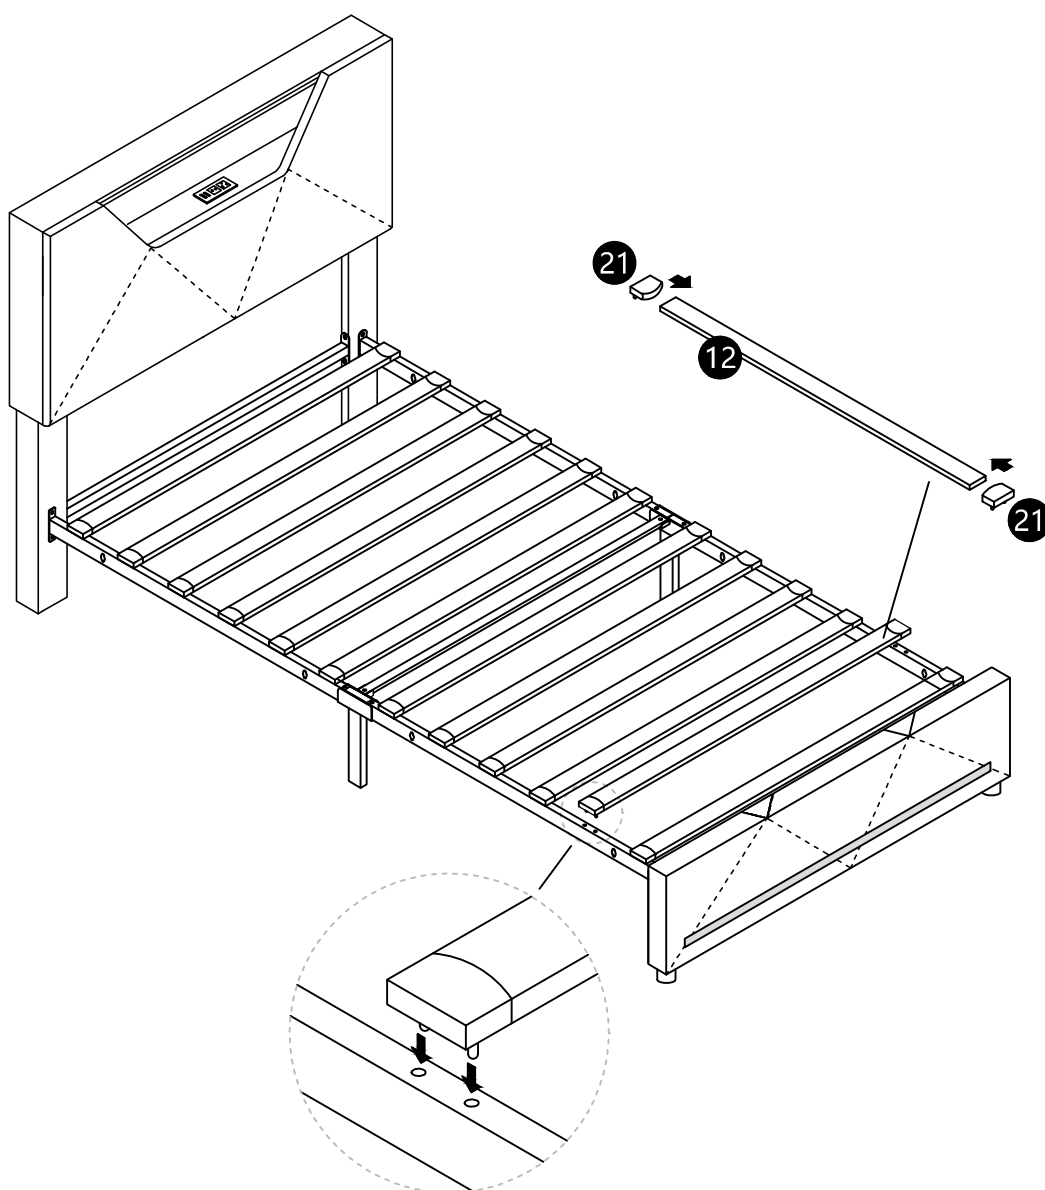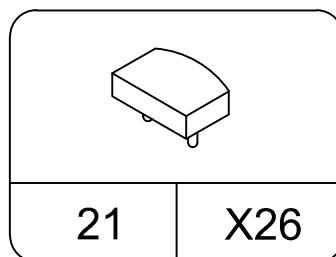



STEP8

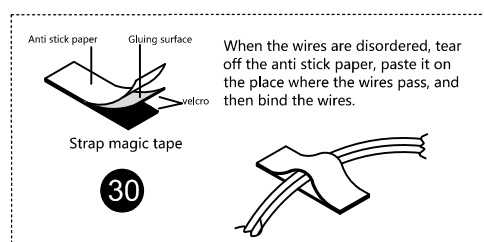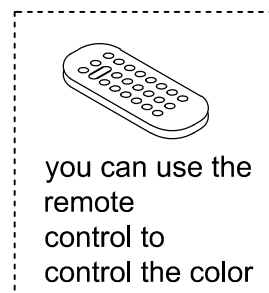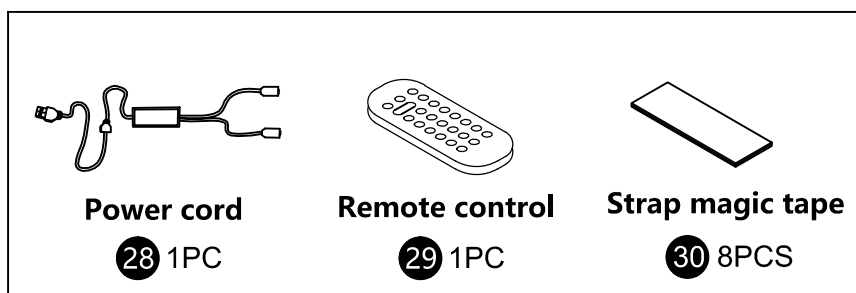


The LED lamp can only be used when it is powered on

There is glue on the back of the Strap magic tape, tear off the anti-stick strip, you can paste




Put the four meter long wire along the wire buckle and fix it

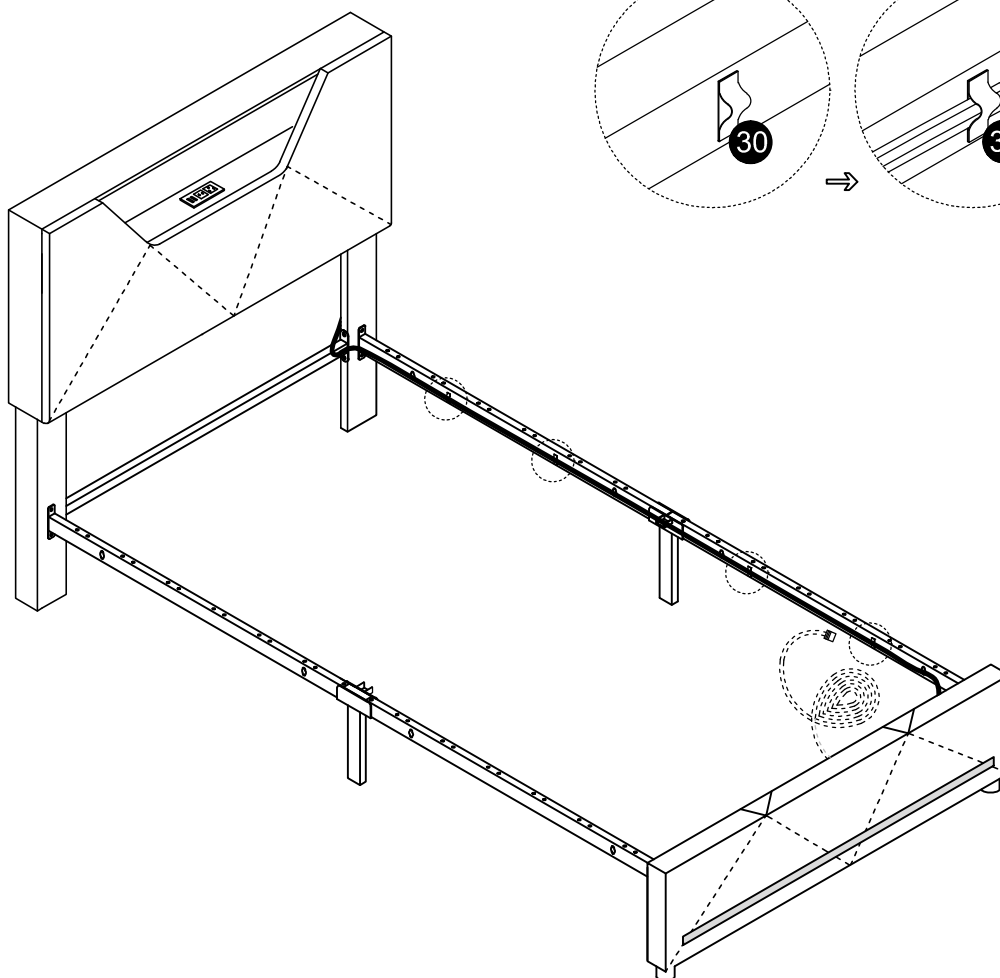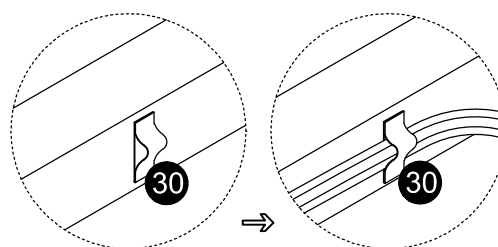

STEP9



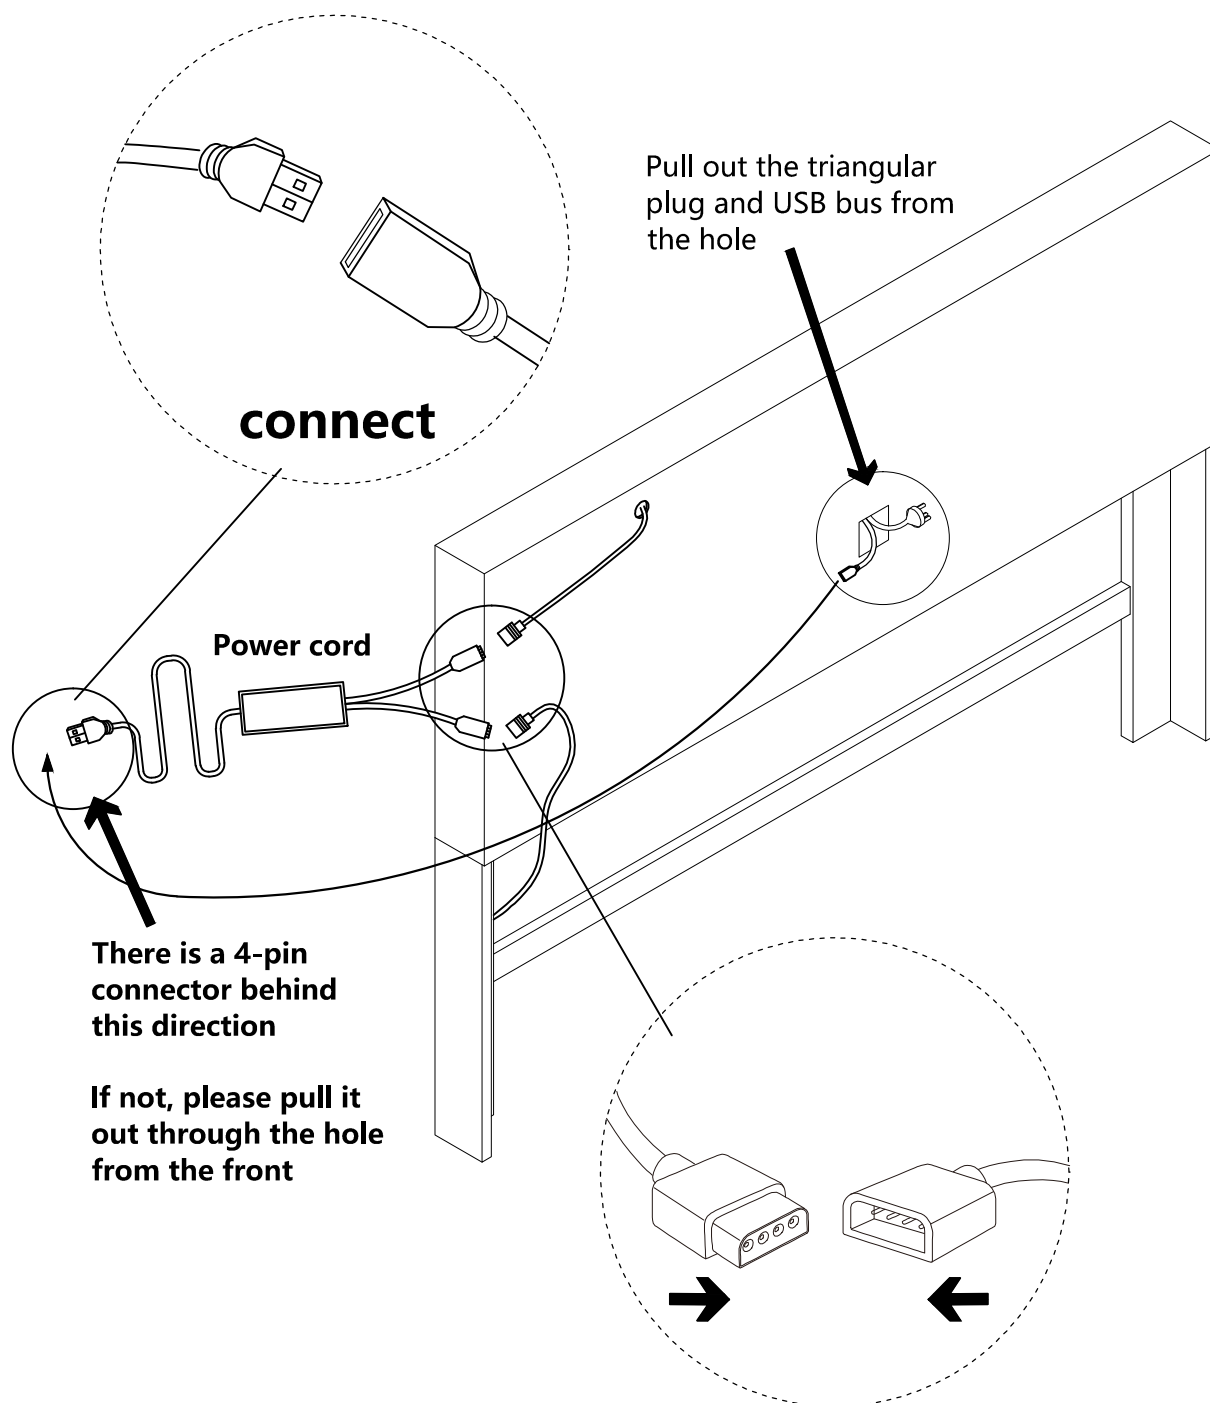


STEP10

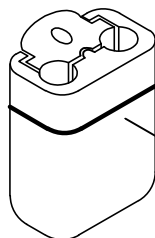
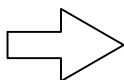
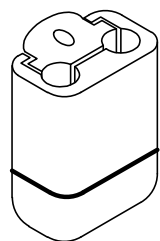


Remember this
convex coil




Reverse direction

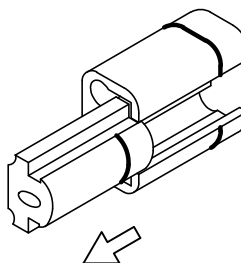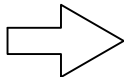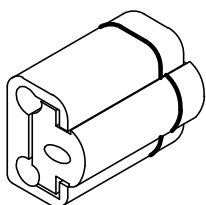

You can pull the buckle out by following
the direction indicated by the arrow

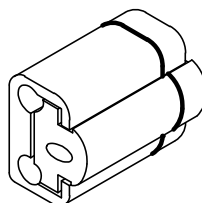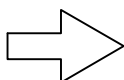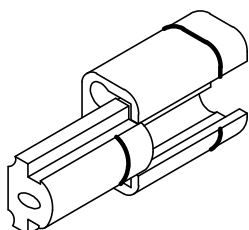

So This is the only direction that can be locked

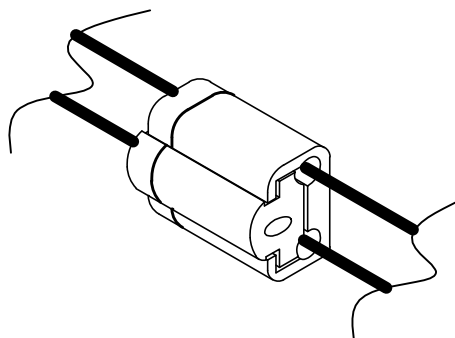
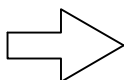
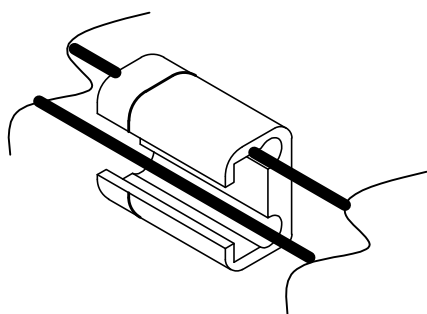


Place round iron tube as shown for better drawer assembly

STEP11



As shown in the figure Clip the pulley into position first

Then push the pulley to the side
At the same time, clamp the iron wire at the edge. It takes a little strength


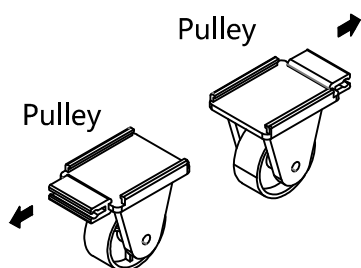
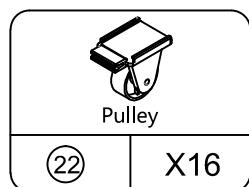
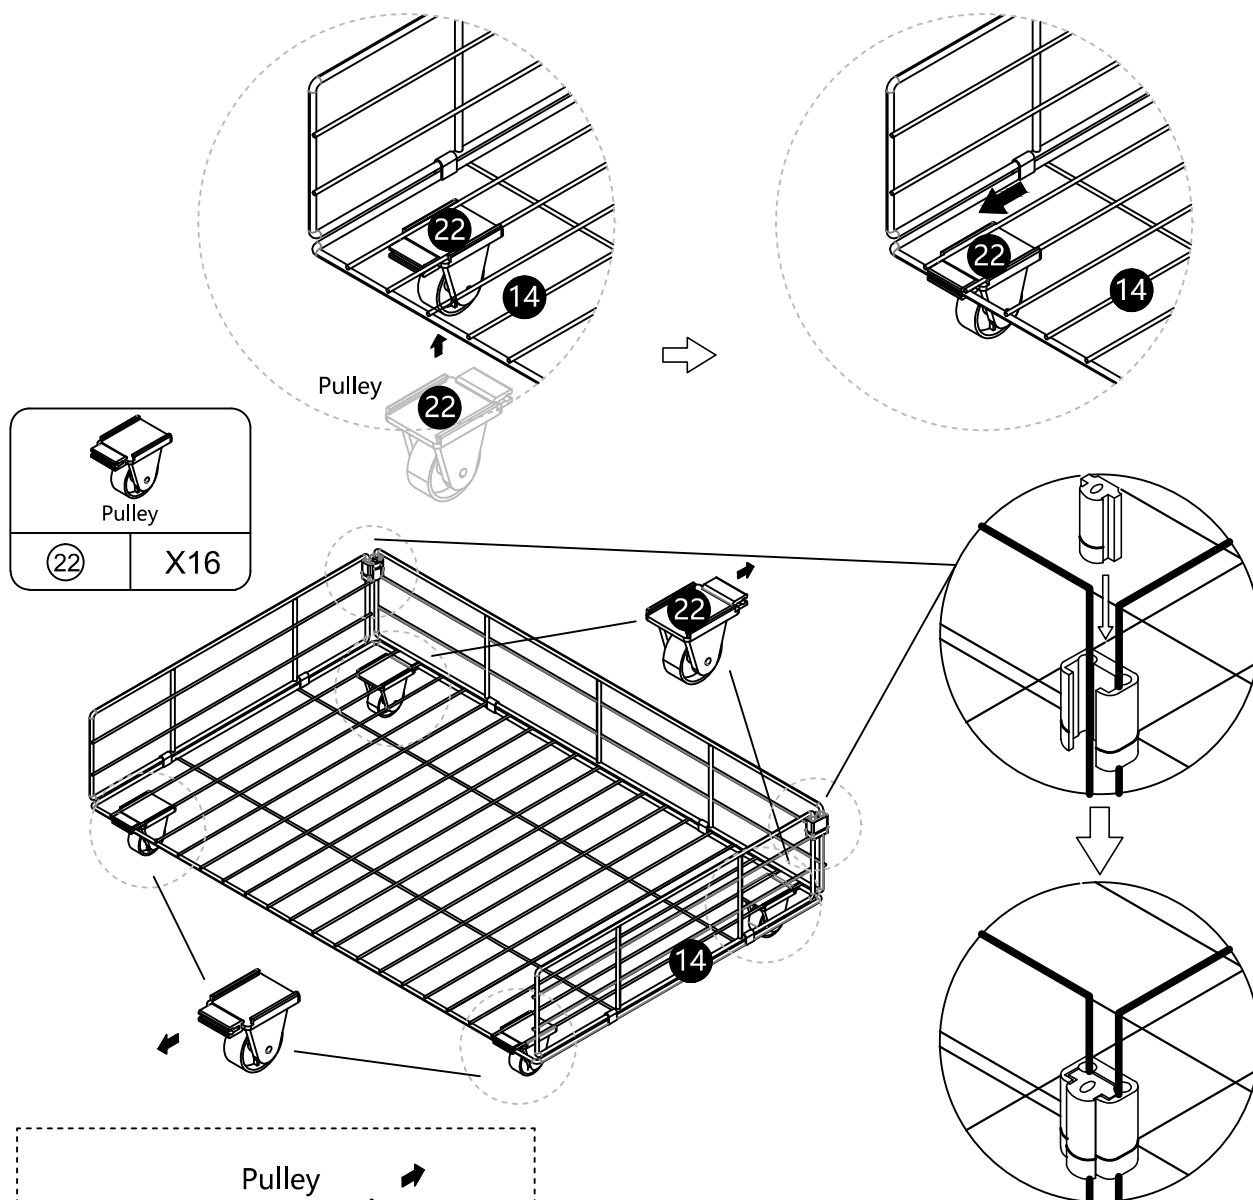


Pay attention to the orientation before clamping in

Please note that this drawer base (14) has front and back sides! Please see the instructions clearly before assembling!!!

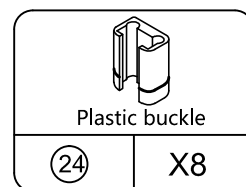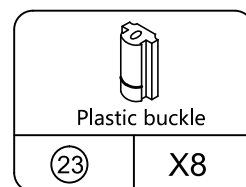

STEP12

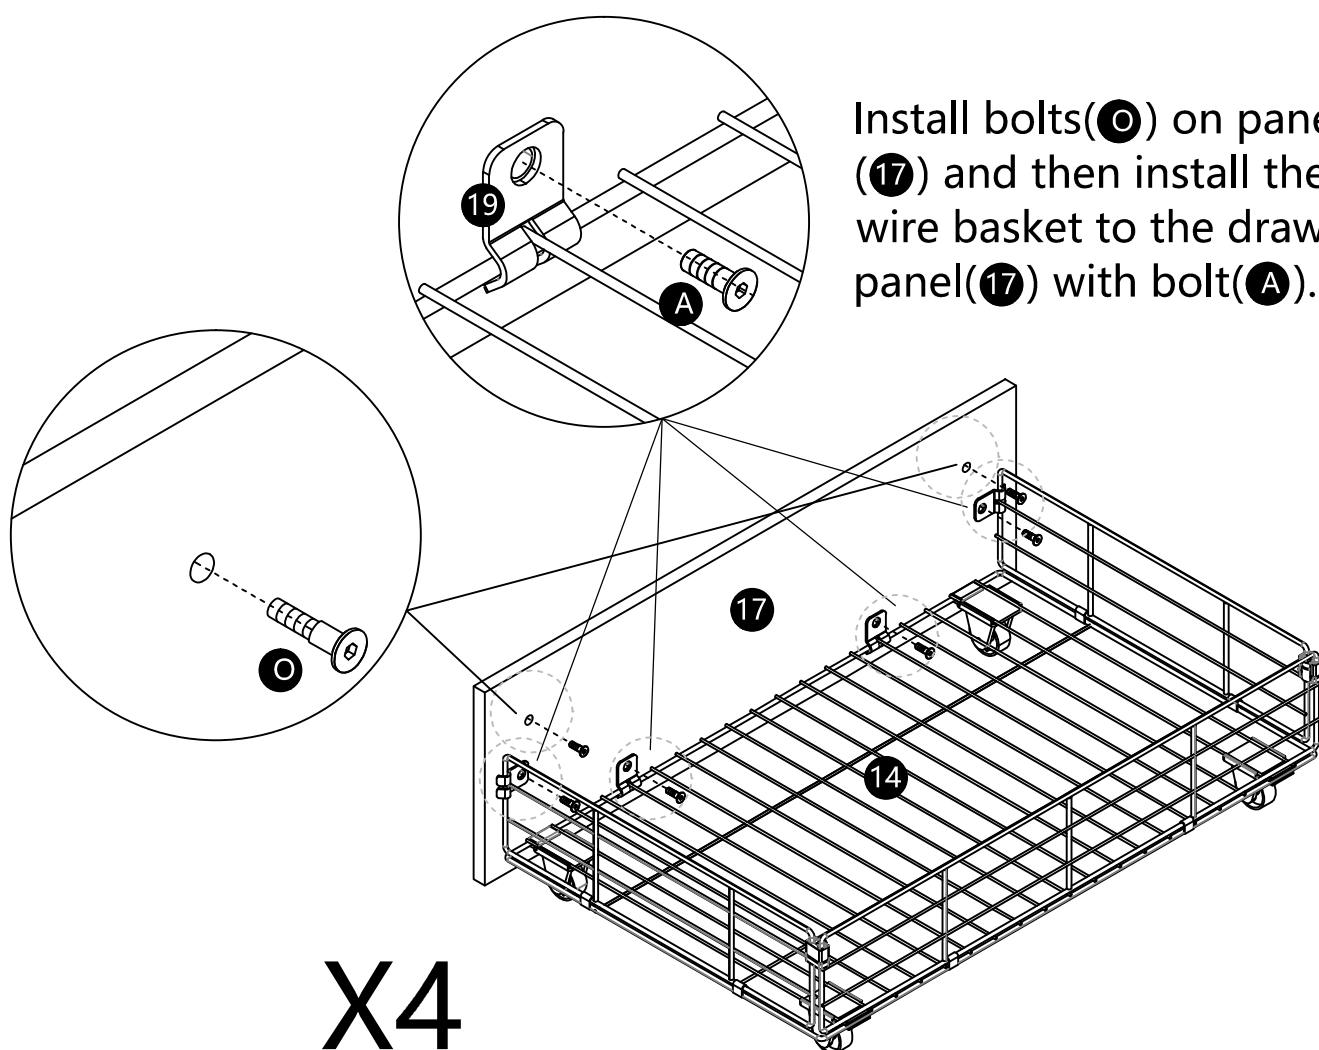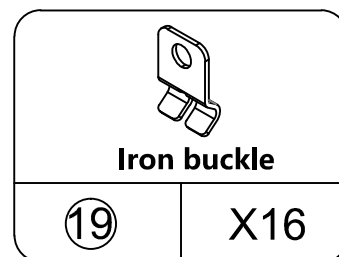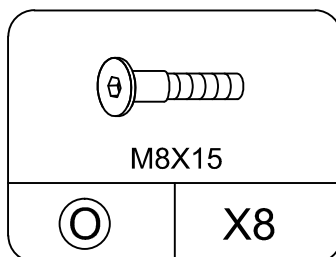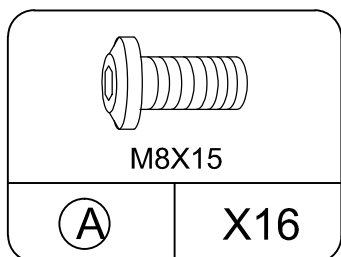


Install bolts (O) on panel (17) and then install the wire basket to the drawer panel (17) with bolt (A).

X4


Assemble the other three drawers in this way. 4 drawers in total.

STEP13

You must put the drawer pad (18) in the drawer

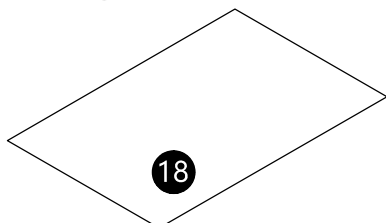

Put it in

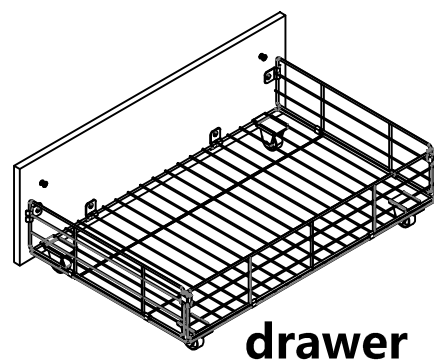

**When pushing into the drawer,
Lift the drawer gently,
Align the screw with the gourd
hole and push in
When pulling out the drawer, Lift
the drawer gently,
Align the screw with the gourd
hole, and then pull it out**

