


ASSEMBLY INSTRUCTIONS

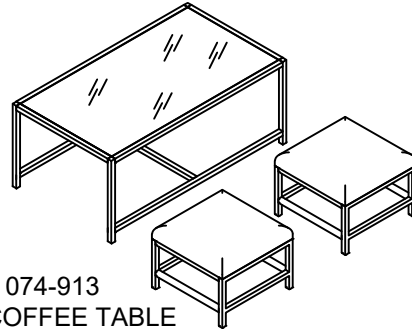

TOOLS REQUIRED:


Allen Wrench (Provided, Part A)
Phillips Screwdriver (Not provided)

BEFORE YOU START:


1. Check the hardwares against the hardware list to make sure all items are present.
2. Assemble your furniture on a soft, flat surface to avoid scratching the finish.
3. **CAUTION:** Do not over tighten screws, nuts or bolts during assembly.
4. Your furniture may require occasional tightening.

INSTRUCTIONS:


Step 1. Insert the center stretcher into the side stretchers and tighten Bolt by Allen Wrench (A) as shown in Figure 1.

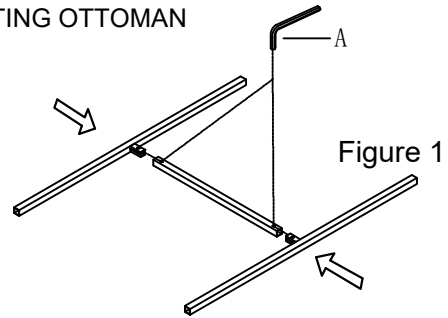




Step 2. Insert the top stretchers and bottom frame to side frames. Tighten Bolt by Allen Wrench (A) as shown in Figure 2.

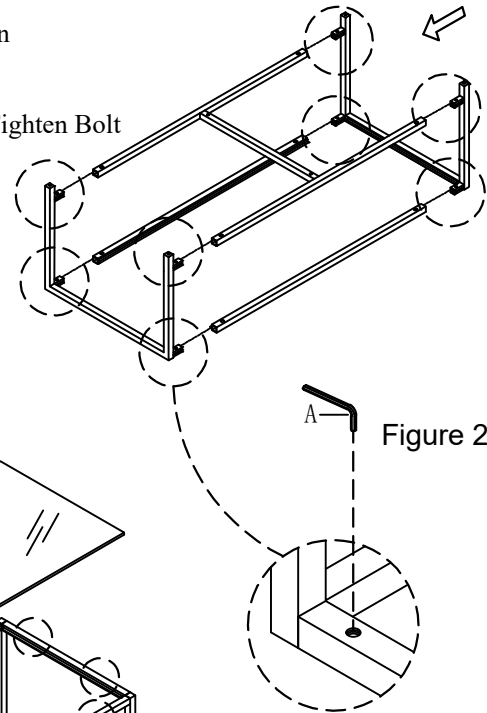

Step 3. Place glass on the top frame. Use the plastic pad (C) to install the glass as shown in Figure 3.

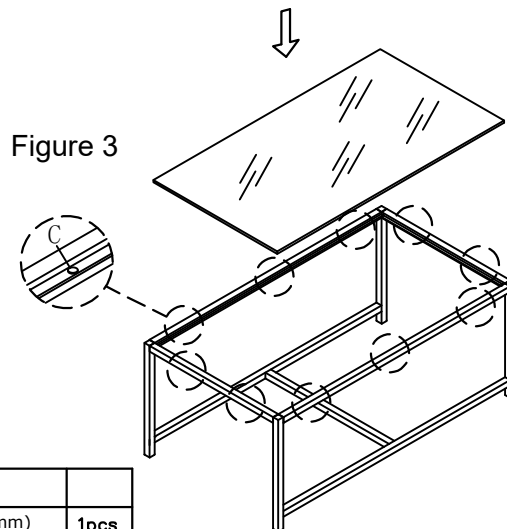


		HARDWARE LIST	
A		Allen Wrench (100*50*5mm)	1pcs
B		Screw (Φ8x5/8")	16pcs
C		Plastic Pad (Ø10*1mm)	10pcs

ASSEMBLY INSTRUCTIONS

TOOLS REQUIRED:

Allen Wrench (Provided, Part A)
Phillips Screwdriver (Not provided)

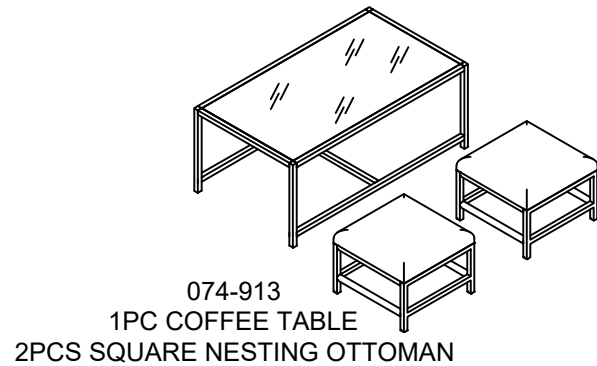

INSTRUCTIONS:

Step 4. Insert the stretchers to the side frame. Tighten Bolt by Allen Wrench (A) as shown in Figure 4.

Step 5. Turn the stool upside down as shown in Figure 5. Use screwdriver to screw to secure the cushion.

