TWIN XL

ASSEMBLY INSTRUCTIONS

Before assembling your bed, please read through these instructions carefully and familiarize yourself with the different parts.

ATTENTION! If you receive a damaged or defective item,

Phillips screwdriver

Customer supplied

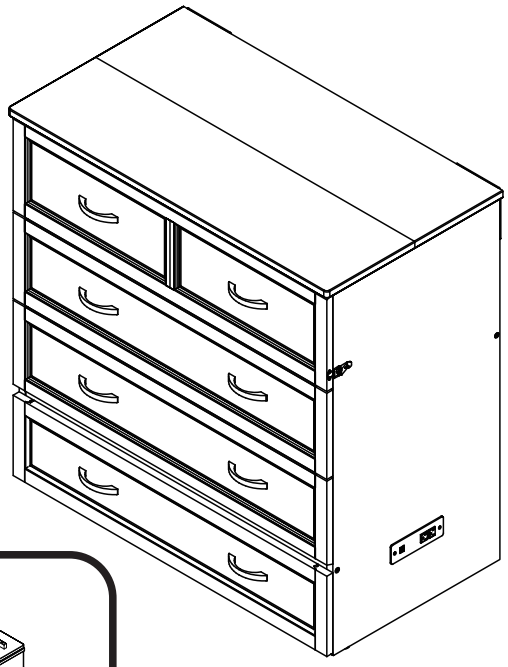

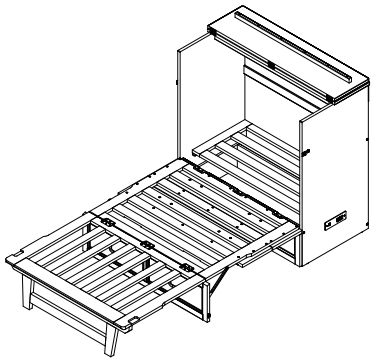

Adult assembly

HARDWARE

NOTE: WE INCLUDE SPARE HARDWARE IN CASE DAMAGE OCCURS DURING ASSEMBLY.

A 8 X 30mm Wood dowel - 26 pcs
Spare - 2 pcs

B JCB M6 X 25mm (1") - 10 pcs
Spare - 1 pc

C JCB M6 X 30mm (1 1/4") - 6 pcs
Spare - 1 pc

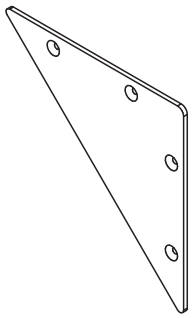

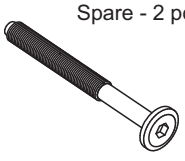

D JCB M6 X 60mm (2 3/8") - 8 pcs
Spare - 1 pc

E Barel Nut - 6 pcs
Spare - 1 pc

F Wood screw 1" - 17 pcs
Spare - 2 pcs

I Triangle Bracket - 2 pcs



G Wood screw 1 1/2" - 2 pcs
Spare - 1 pc

H Allen wrench - 1 pc
Spare - 1 pc

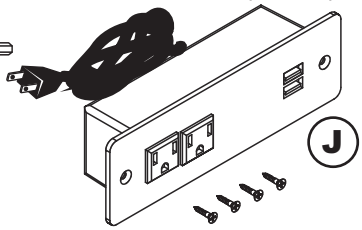

J USB Charger - 1 pc
Black wood screw 5/8" - 4 pcs
Set with screw and cable fastener

Cable fastener - 2 pcs

TWIN XL
PARTS LIST

- 01 HARDWARE
- 02 TOP PANEL
- 03 LEFT SIDE PANEL
- 04 RIGHT SIDE PANEL
- 05 FRONT RAIL
- 06 SHELF
- 07 MIDDLE BACK RAIL
- 08 BOTTOM BACK RAIL
- 09 BACK PANEL

C-5819X
1 BOX

- 10 DOOR PANEL
- 11 DRAWER FACE
- 12 DRAWER SIDE
- 13 DRAWER BACK
- 14 DRAWER PANEL
- 15 DRAWER PANEL SUPPORT
- 16 DRAWER SIDE BLOCK

C-5817X
1 BOX

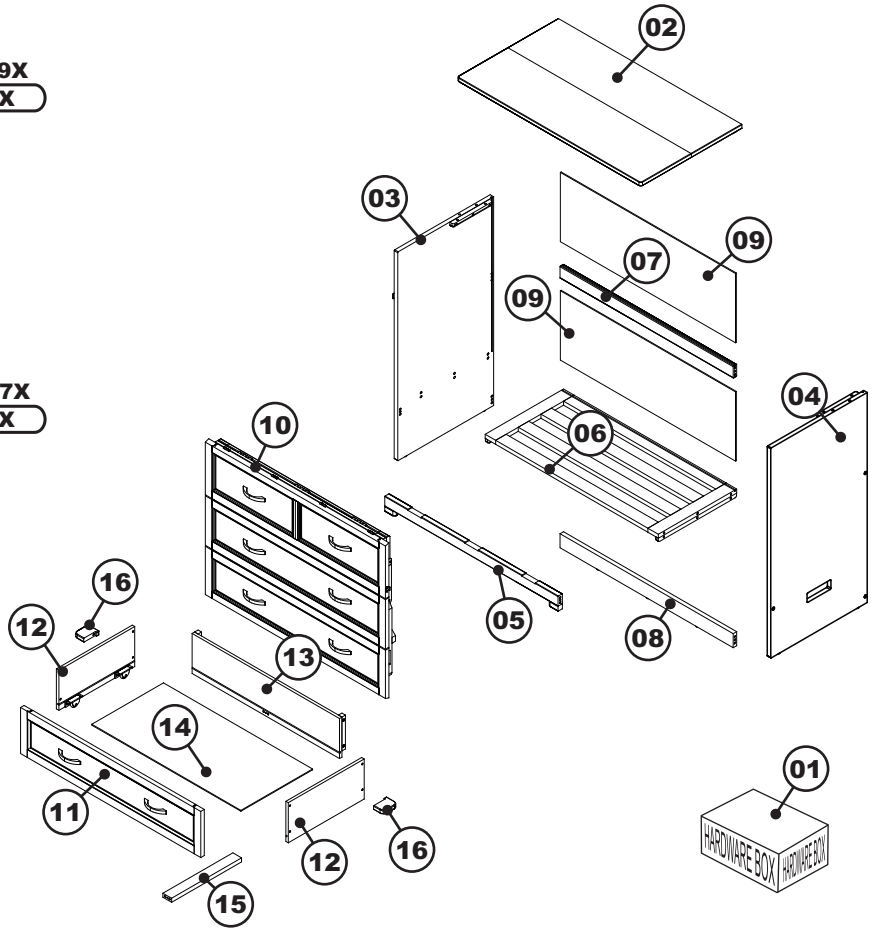

STEP 1 Insert all wooden dowels (A) into the locator holes on (03)(04)(05)(06)(07)(08) and (15). Install USB charger (J) as shown below. Using black wood screw and cable fastener tighten with phillips head screw driver. (Customer Supplied)

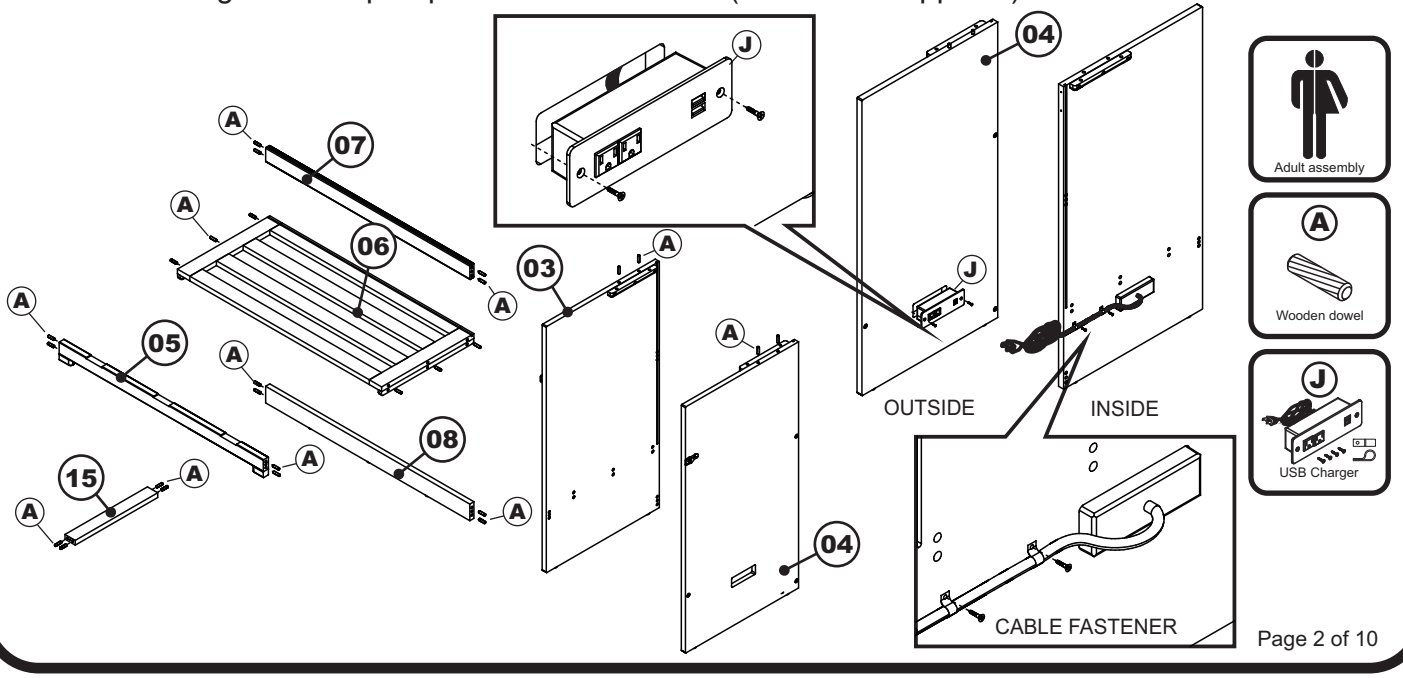

STEP 2 Attach left side panels (03) to the shelf (06), front rail (05), middle back rail (07) and bottom back rail (08) as shown below. Use JCB (B)(D) and barrel nut (E). Tighten with Allen wrench (H)

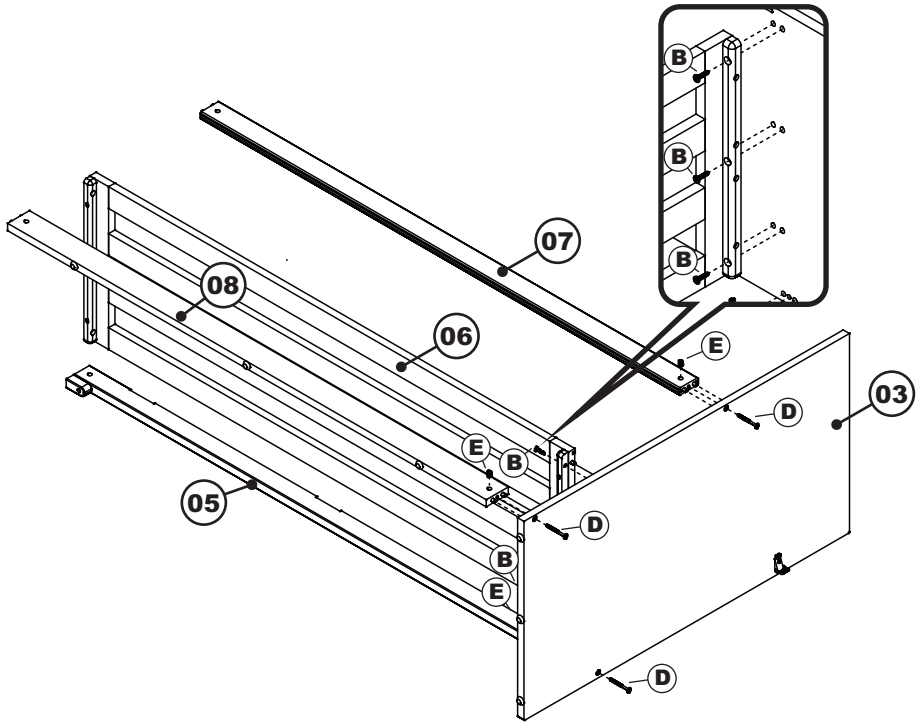

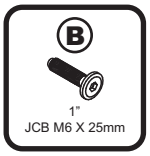

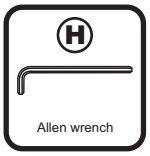

STEP 3 Guide the back panel (09) in carefully so that it won't jump out of its grooves. Be sure it fits fully into its groove at the bottom (in the side panel) before fitting the other side panel.

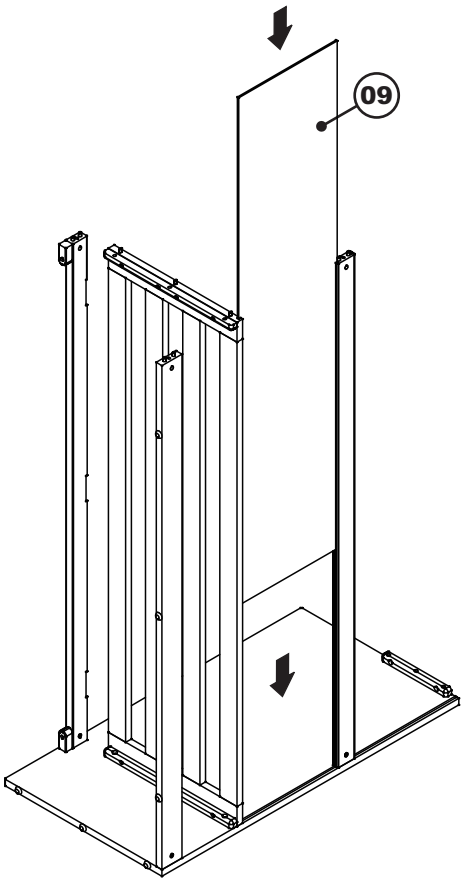

STEP 4

Adult assembly

Attach right side panels (04) to cabinet assembly as shown below. Use JCB (B)(D) and barrel nut (E).Tighten with Allen wrench (H)
Be sure it fits fully into its groove at the bottom
(in the side panel) before fitting the side panel.

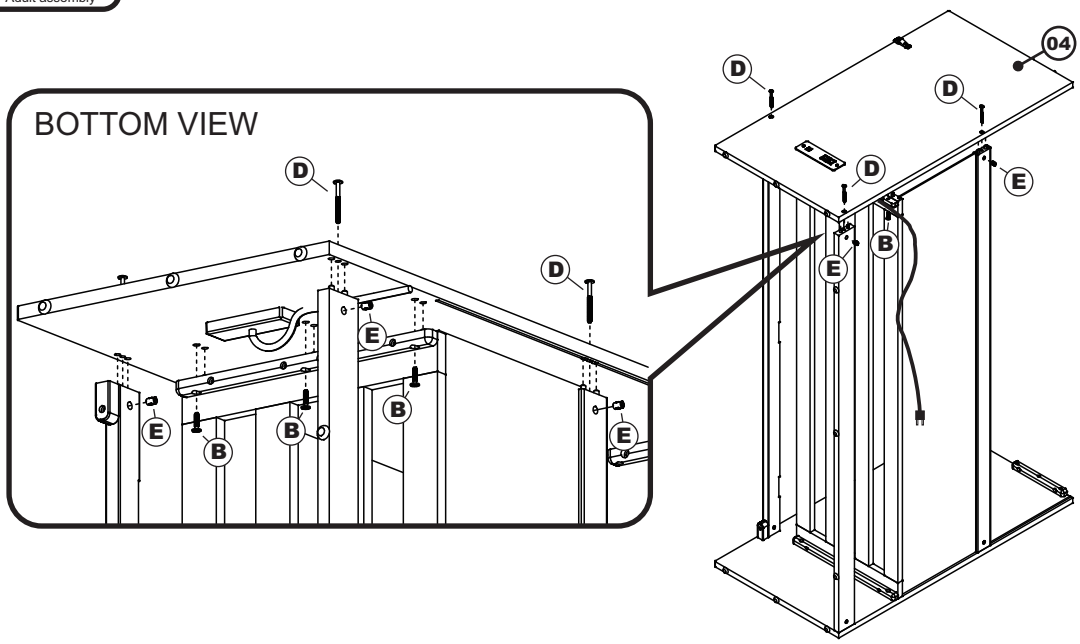

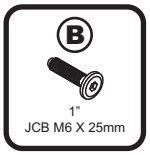

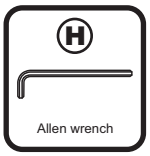

STEP 5

Guide the back panel (09) in carefully so that it won't jump out of its grooves. Be sure it fits fully into its groove at the middle rail before fitting the top panel.

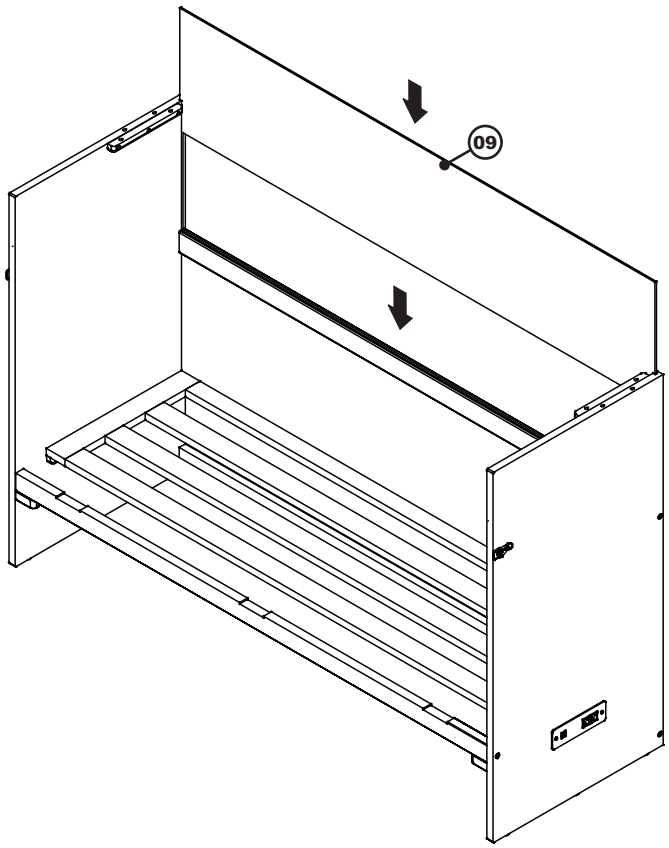

STEP 6 Attach top panel (02) to cabinet assembly as shown below. Use JCB (B). Tighten with Allen wrench (H)

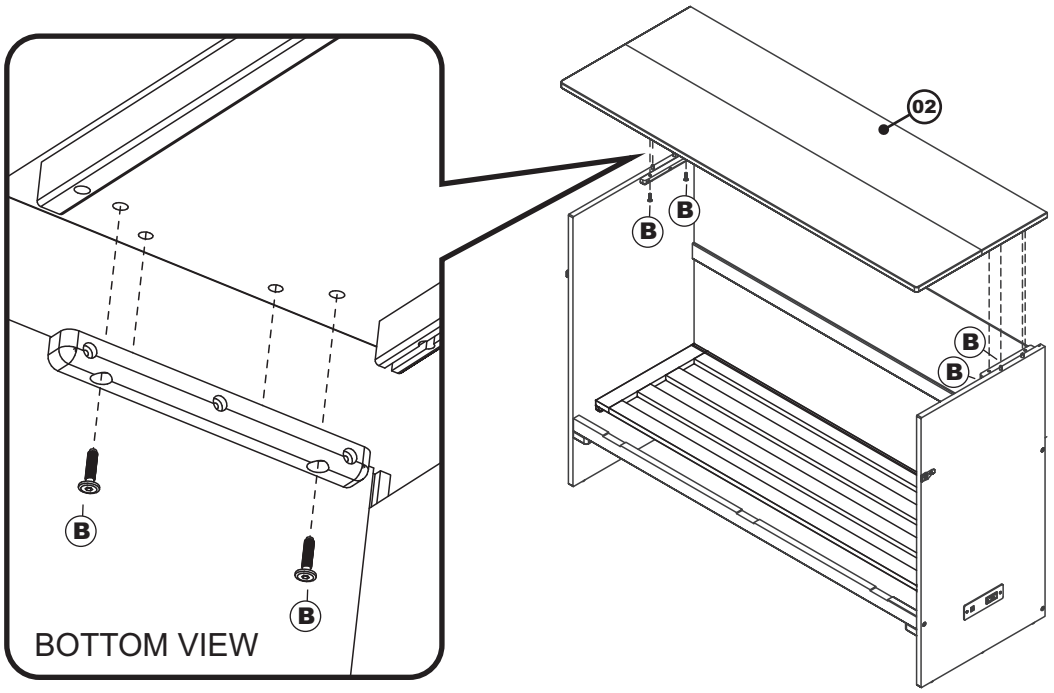

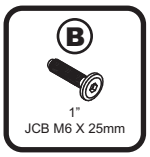

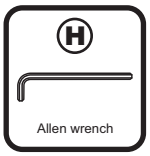

STEP 7 Open top drawer folding leg until lock of metal support as shown below.

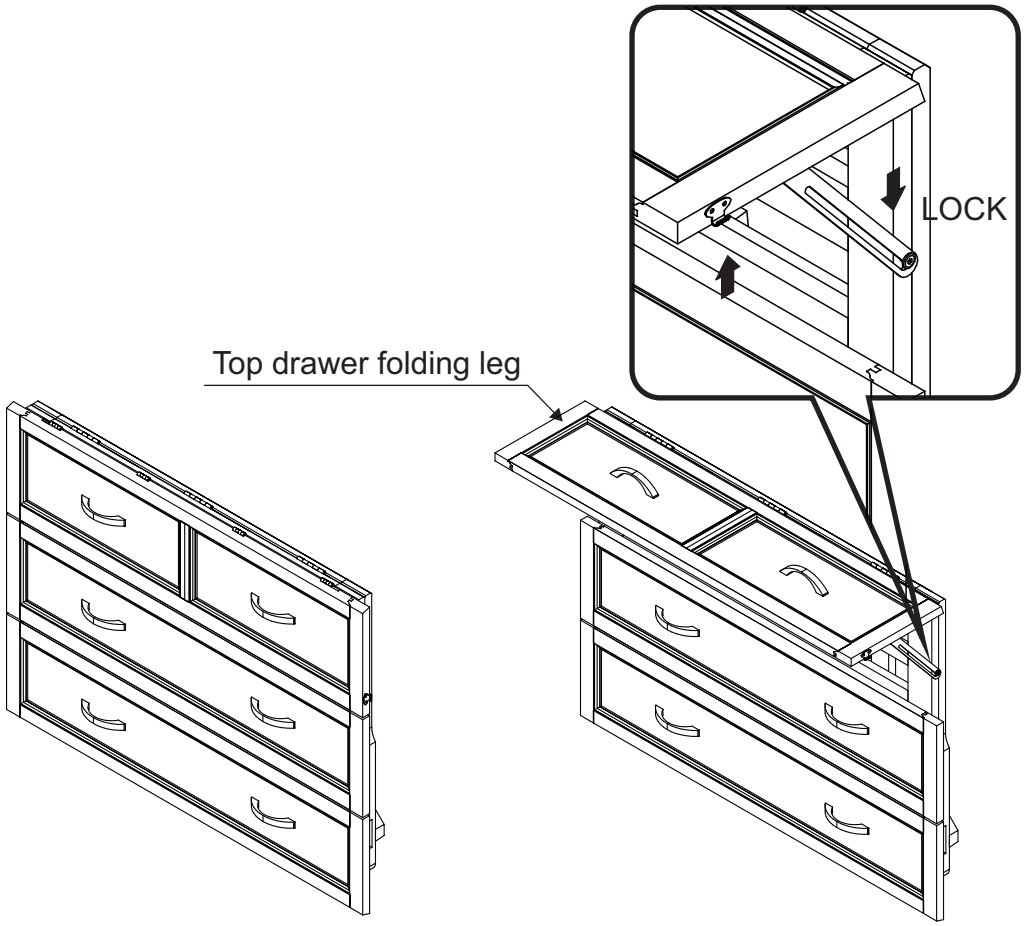

STEP 8 Attach door panel to cabinet assembly as shown below. Use wood screw (F) tighten with Phillips head screwdriver. (customer supplied).
Be sure to align with cabinet.

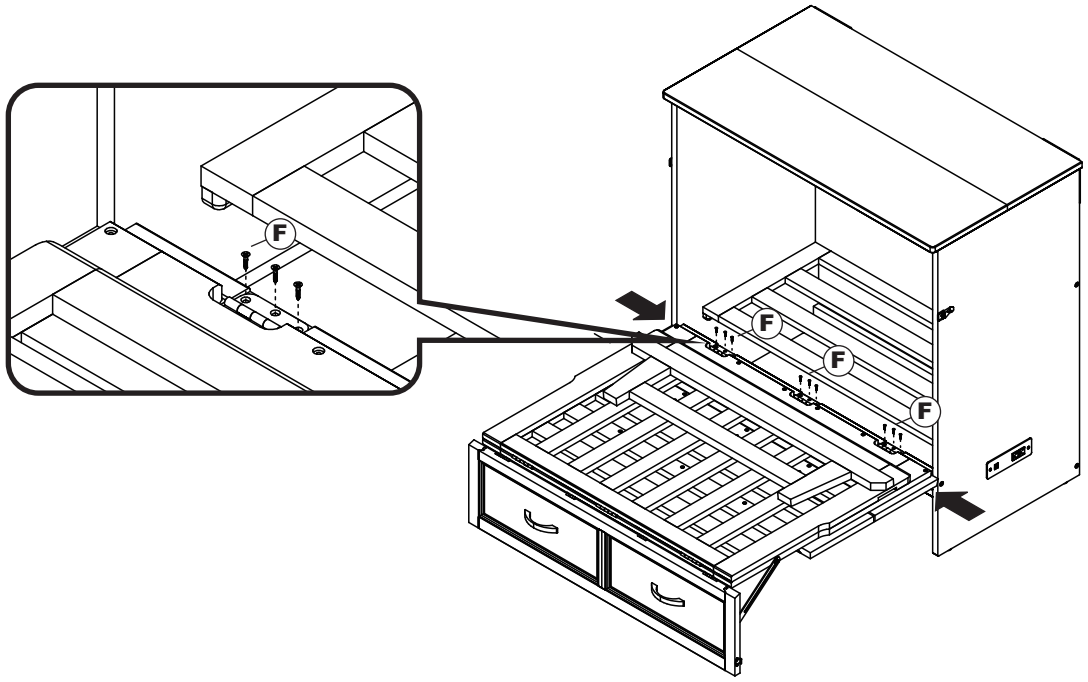

STEP 9 Lift the door and push the metal support. Push the door closed and latch both sides as shown below.

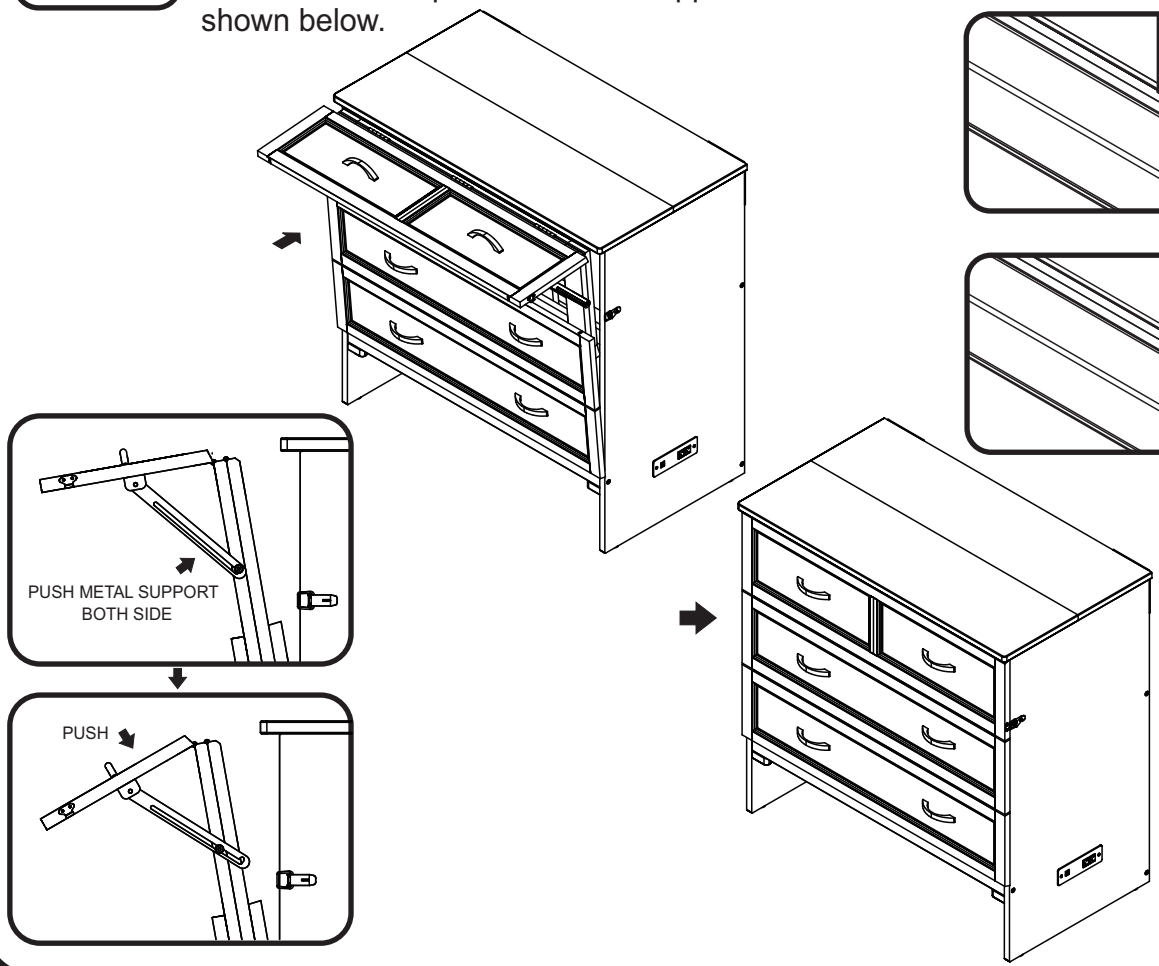

STEP 10 Attach triangle bracket (I) to the back of cabinet as shown below. Use wood screw (F) tighten with Phillips head screwdriver. (customer supplied).

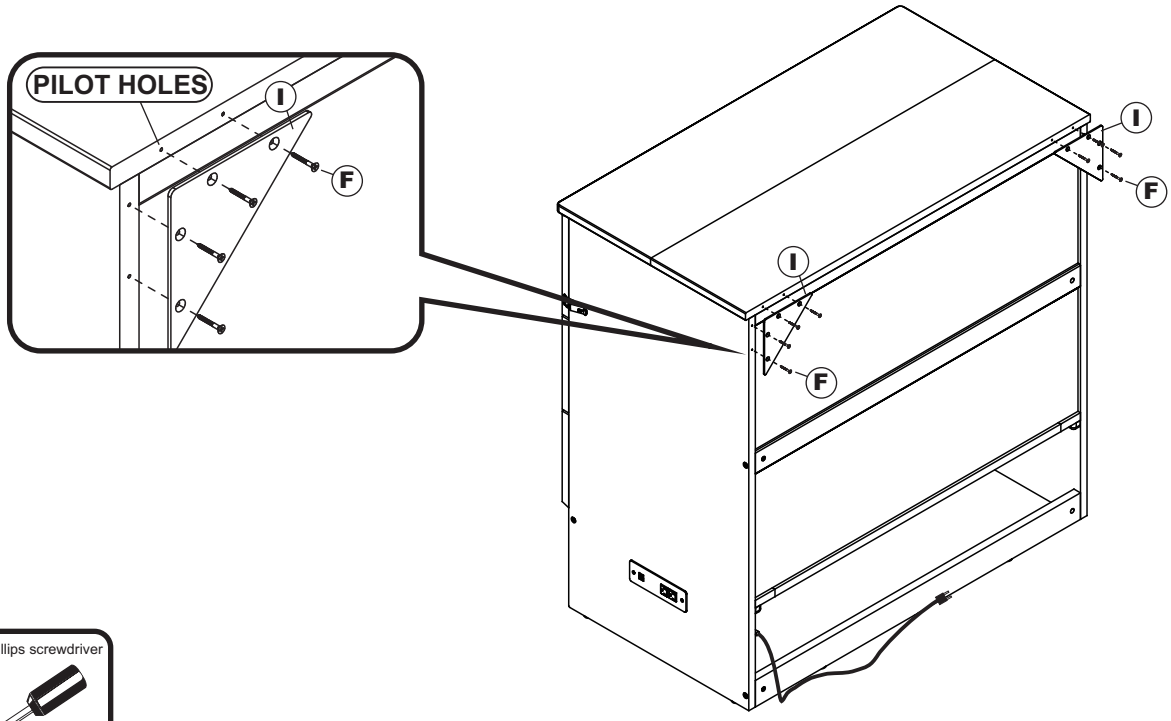

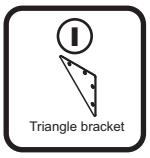

STEP 11 Lay the drawer face (11) on smooth, flat surface so the groove is facing upwards. Fit the drawer side (12) to drawer face (11), Use JCB (C), align groove inside panel with groove in drawer face. Tighten with Allen wrench (H).

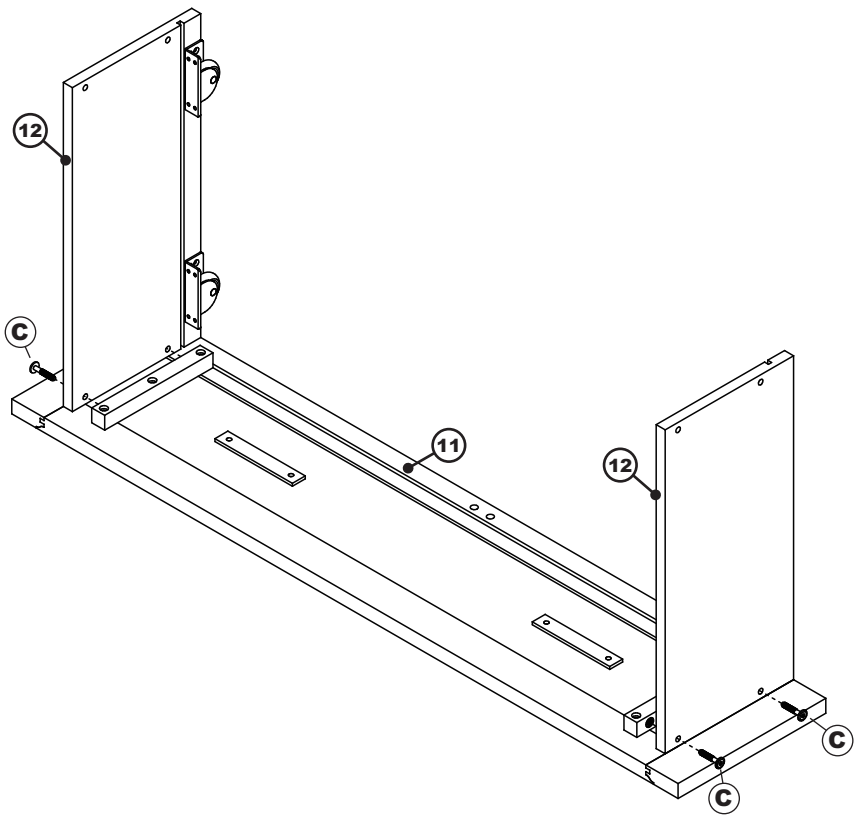

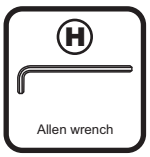

STEP 12 Guide the drawer panel (14) in carefully so that it won't jump out of its grooves. Be sure it fits fully into its groove at the bottom (in the drawer face) before fitting the drawer back. Attach drawer panel support (15) to the drawer face as shown below.

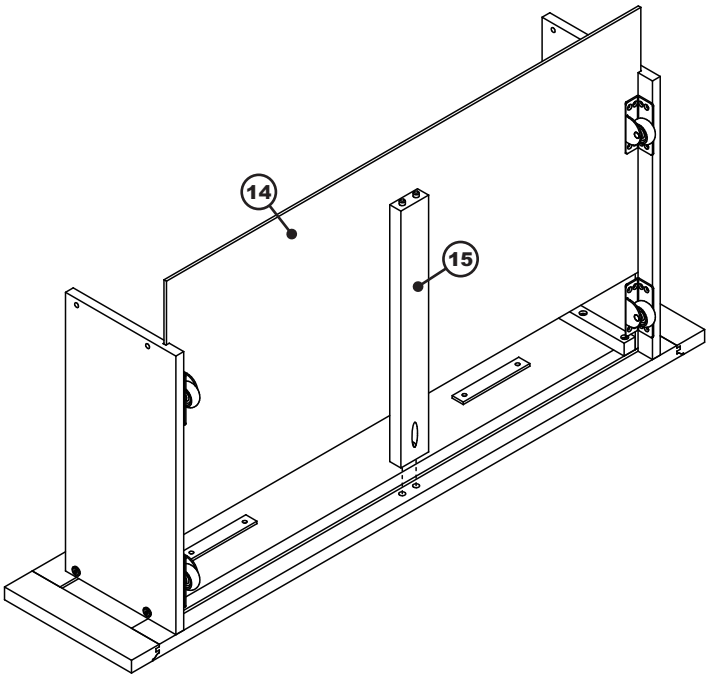

STEP 13 Attach drawer back (13) and drawer side block (16) to bed drawer assembly as shown below. Use JCB (C)(D). Tighten with Allen wrench (H). Use wood screw (G) tighten with Phillips head screwdriver. (customer supplied)

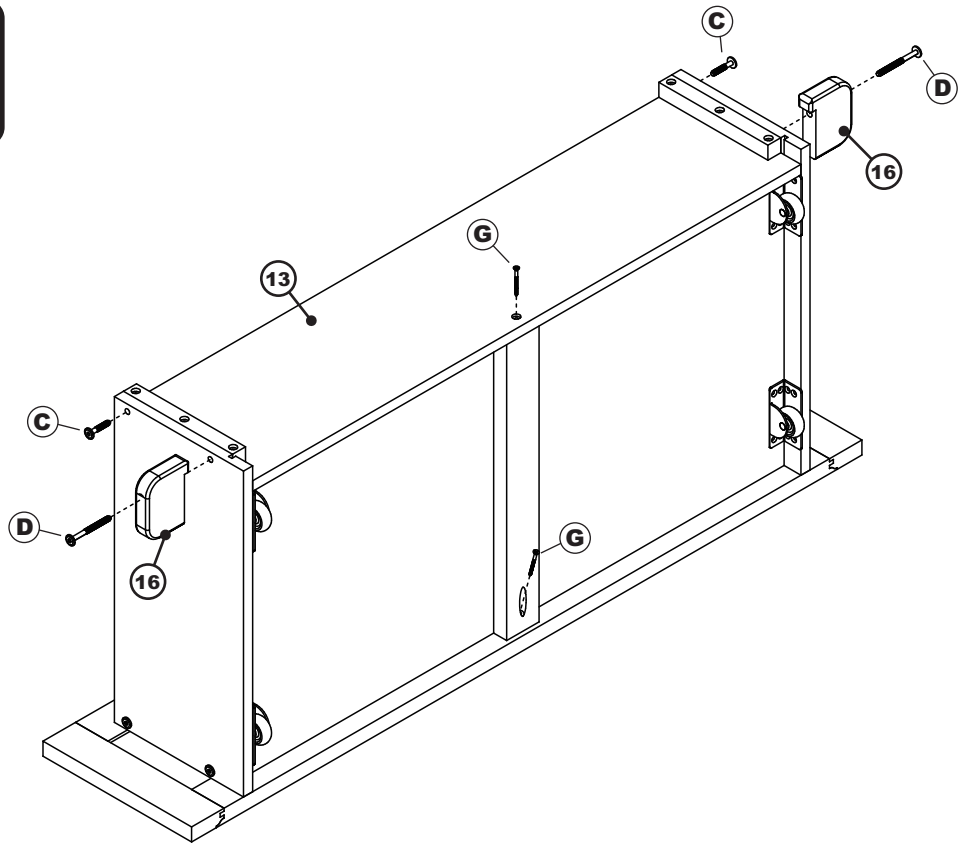

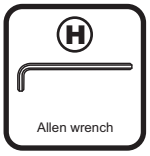

STEP 14 Move the murphy bed where you want to place them in the room.
Push drawer assembly in as shown below. Be sure to align with cabinet.

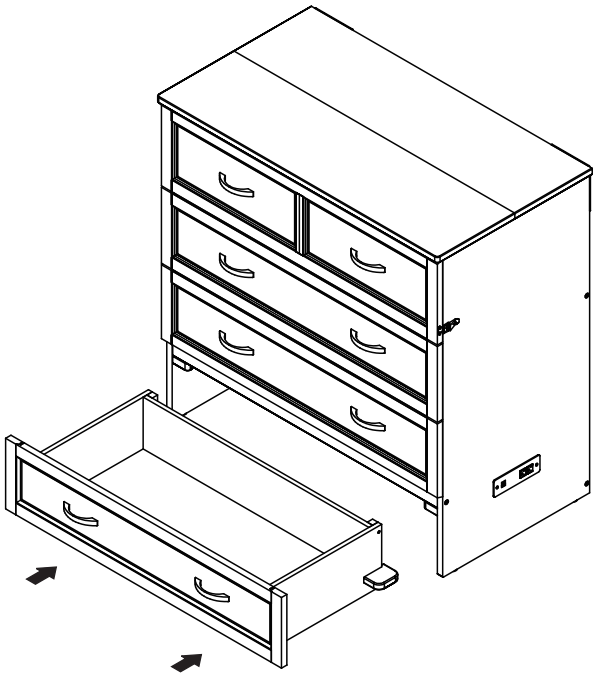

STEP 15 Unlatch the door and open top drawer folding leg until lock of metal support, folding down as shown.

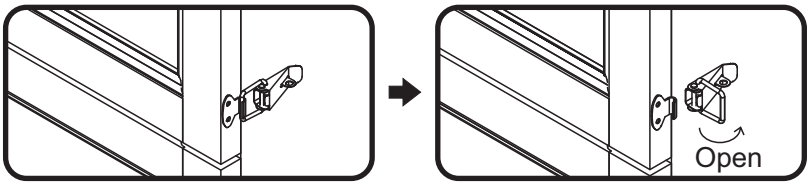

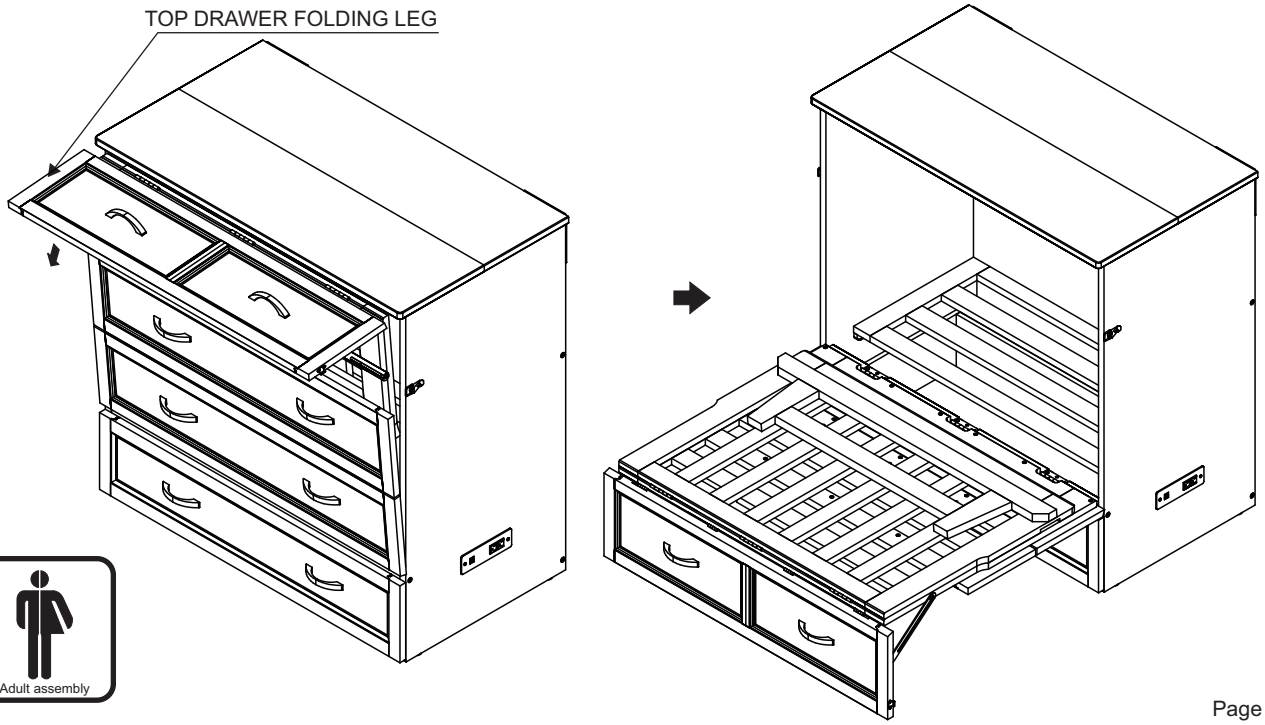

TWIN XL
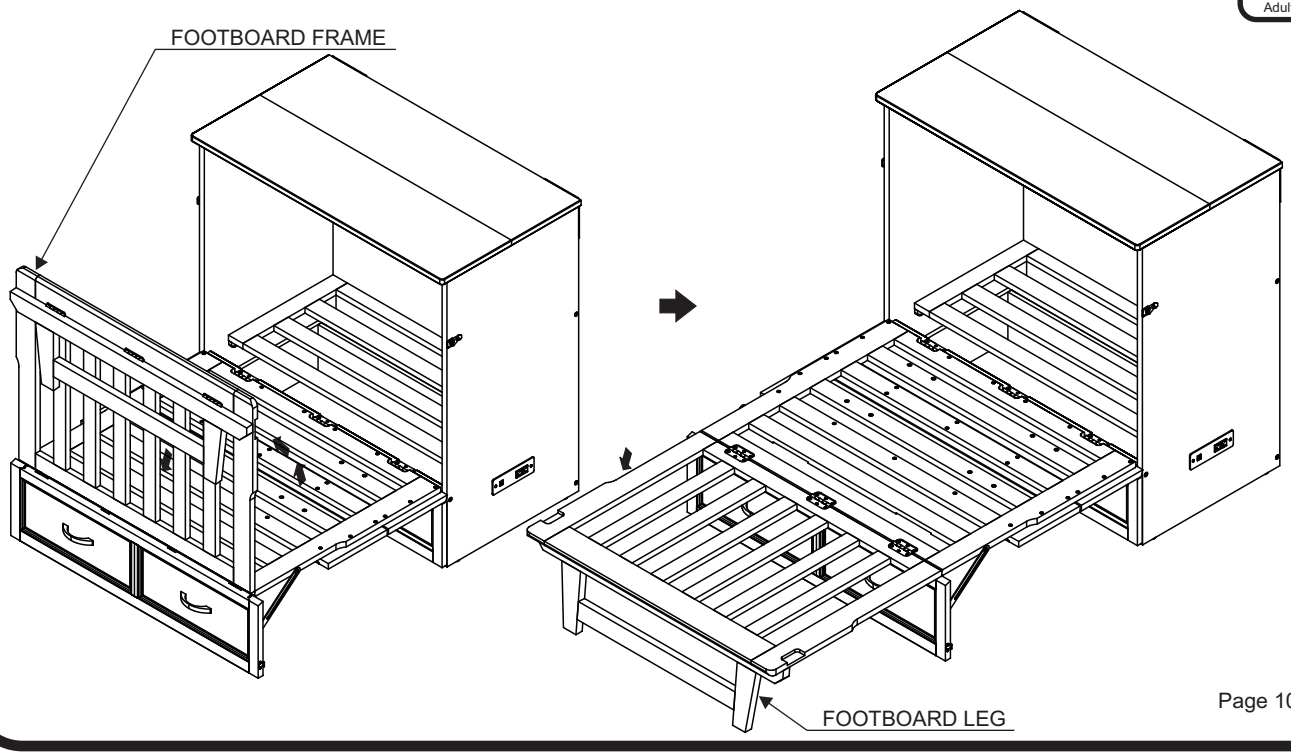
STEP 16 Open and pull footboard frame and open footboard leg as shown below.