


# ASSEMBLY INSTRUCTIONS

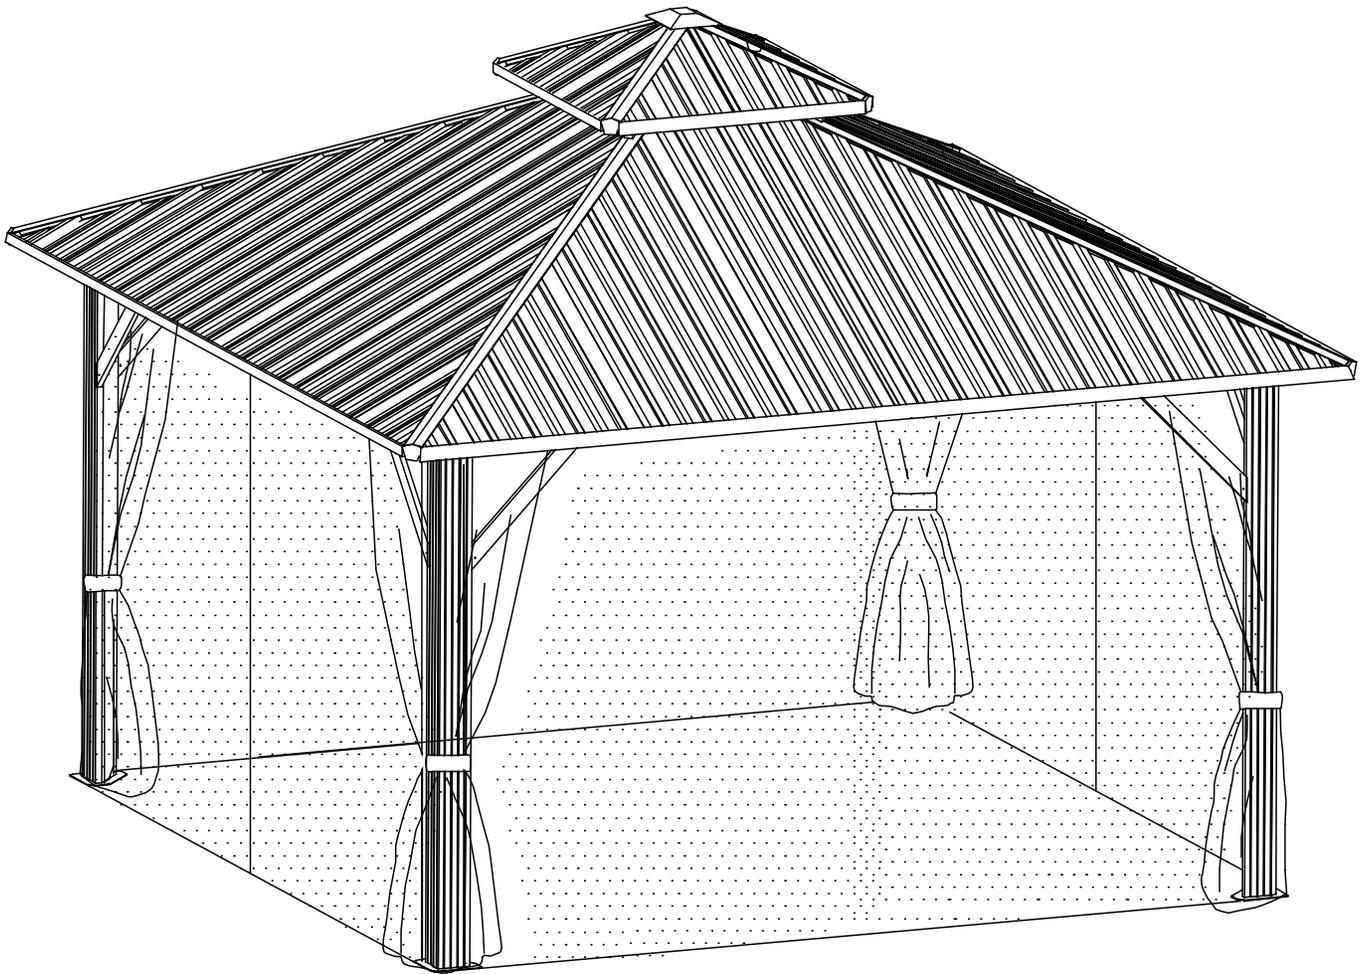


10X10 FT HARDTOP GAZEBO







1. Two or more people are required for assembly.
2. A ladder and electric drill may be necessary.
3. Do not erect the structure in heavy winds or inclement weather.
4. Do not leave up this unit for extended periods of time, as it is not a permanent structure or designed to withstand sustained wind or rain. It is a temporary, portable shelter that shields you from sunlight and rain. The screens also block flying insects.
5. Do not use candles, matches, or any open flames near the tent.
6. To better align the screws for practical situations, do not fully tighten screws initially.
7. Professional installation is highly recommended.

## BOX 1

Item no.	Reference Image	Qty.
A		X4
V1		X2
V2		X2
E		X4
E1		X4
F1		X8
G1		X4
G3		X4
G5		X4
G6		X4

# BOX 1

Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
<b>H</b>		X4	<b>Z</b>		X56
<b>H1</b>		X4	<b>Z1</b>		X24
<b>J</b>		X4	<b>Y</b>		X92
<b>K</b>		X4	<b>1</b>	 M6X16mm	X144
<b>K1</b>		X4	<b>2</b>	 M6X23mm	X56
<b>N</b>		X12	<b>3</b>	 M6X25mm	X9
<b>N1</b>		X4	<b>4</b>	 ST4.8X12mm	X24
<b>P</b>		X4	<b>5</b>	 M6X10mm	X8
<b>W</b>		X4	<b>6</b>	 M6X42mm	X4
<b>W1</b>		X4	<b>7</b>	 M6X47mm	X24
<b>W2</b>		X4	<b>8</b>	 M6X15mm	X16
<b>W3</b>		X4	<b>9</b>		X12
<b>U</b>		X96	<b>10</b>	 M5X12mm	X20






# BOX 1

# BOX 3

Item no.	Reference Image	Qty.
11	 S4	X1
12		X1
13	 S6	X1


Item no.	Reference Image	Qty.
S		X4
Sa		X4
Q1		X4
Q2		X4
Q3		X4
Q4		X4
Q5		X4
Q6		X4

# BOX 2

Item no.	Reference Image	Qty.
B		X4
B1		X4
T		X4
T1		X4
L		X1
M		X1

**1**



**X4**




Ⓐ 4pcs



Ⓙ 4pcs

① 12pcs

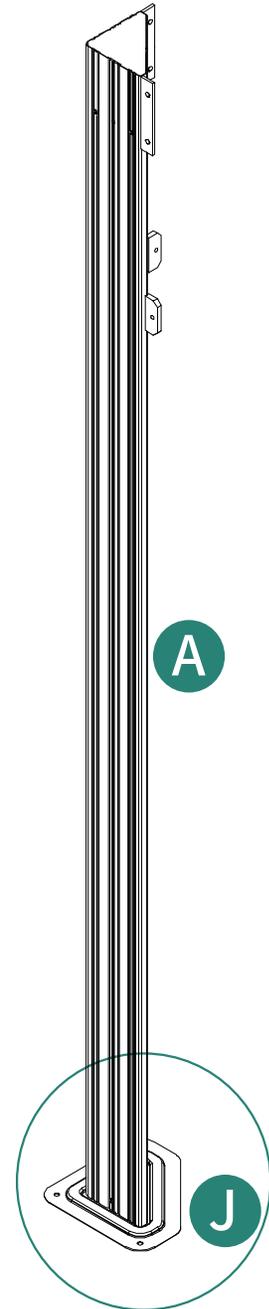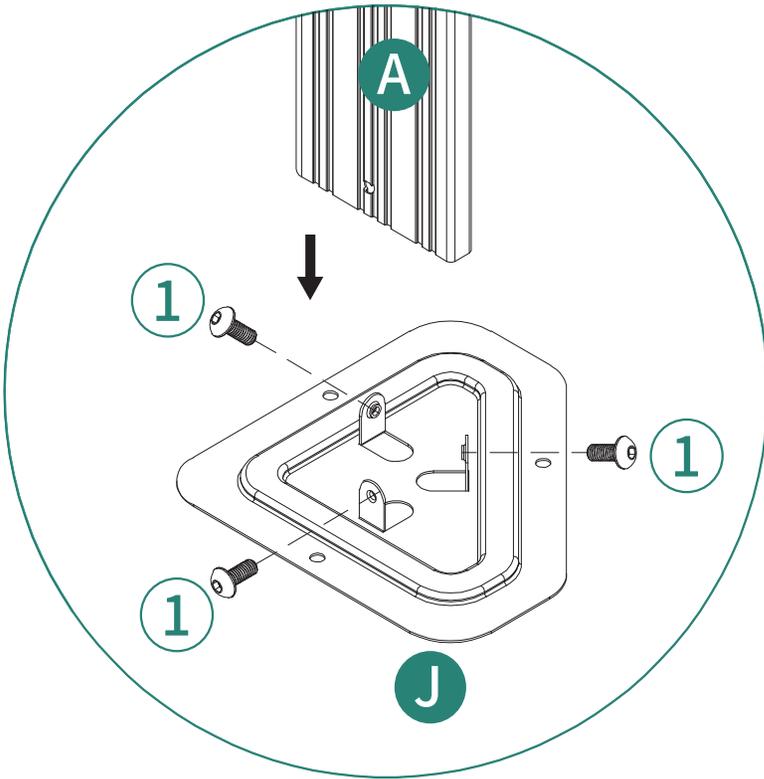

<h1 style="font-size: 2em; margin: 0;">2</h1>				
	<b>B</b> 4pcs	<b>B1</b> 4pcs	<b>P</b> 4pcs	<b>1</b> 32pcs



When connecting B and B1 via P, make sure that 1 holes on part P (as shown in the picture) should be facing upwards. Do not install it upside down.

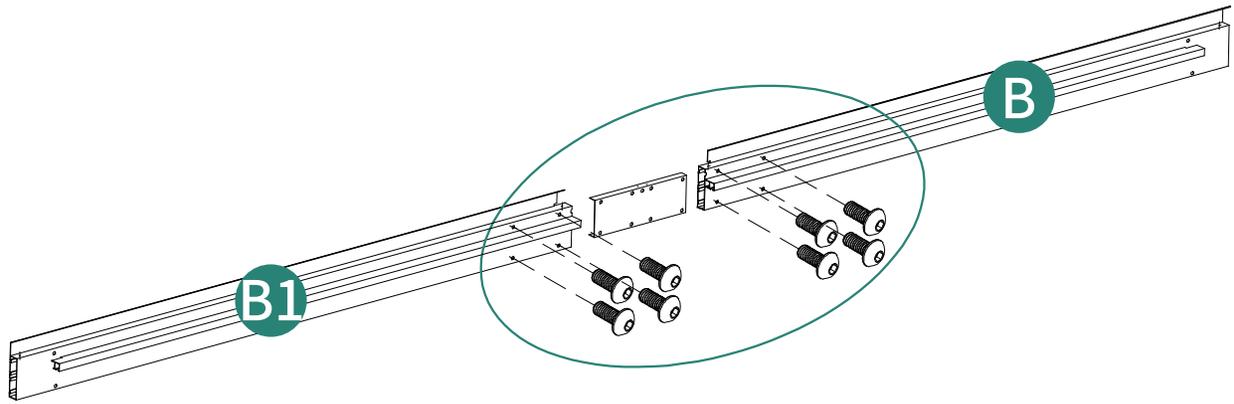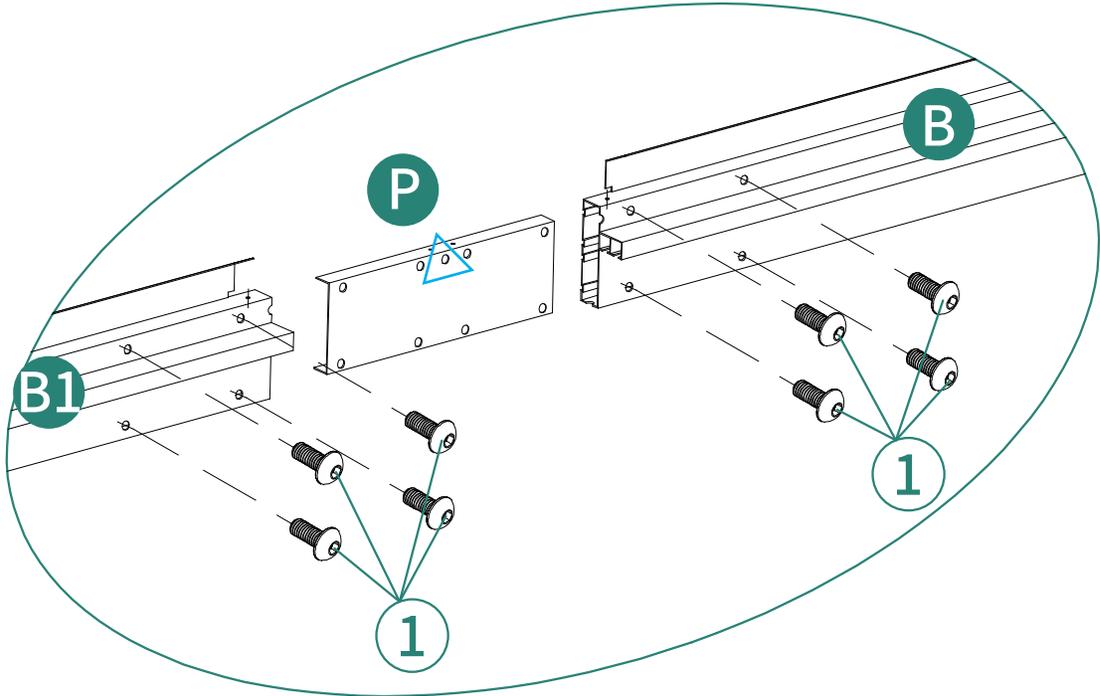

**3**



Ⓢ96pcs


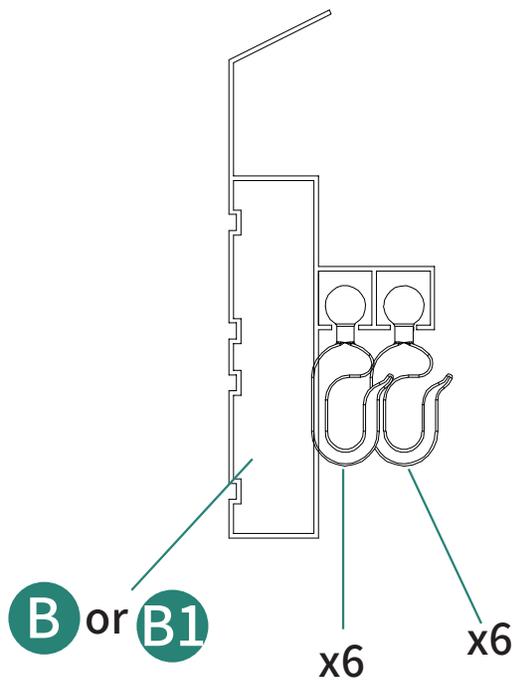
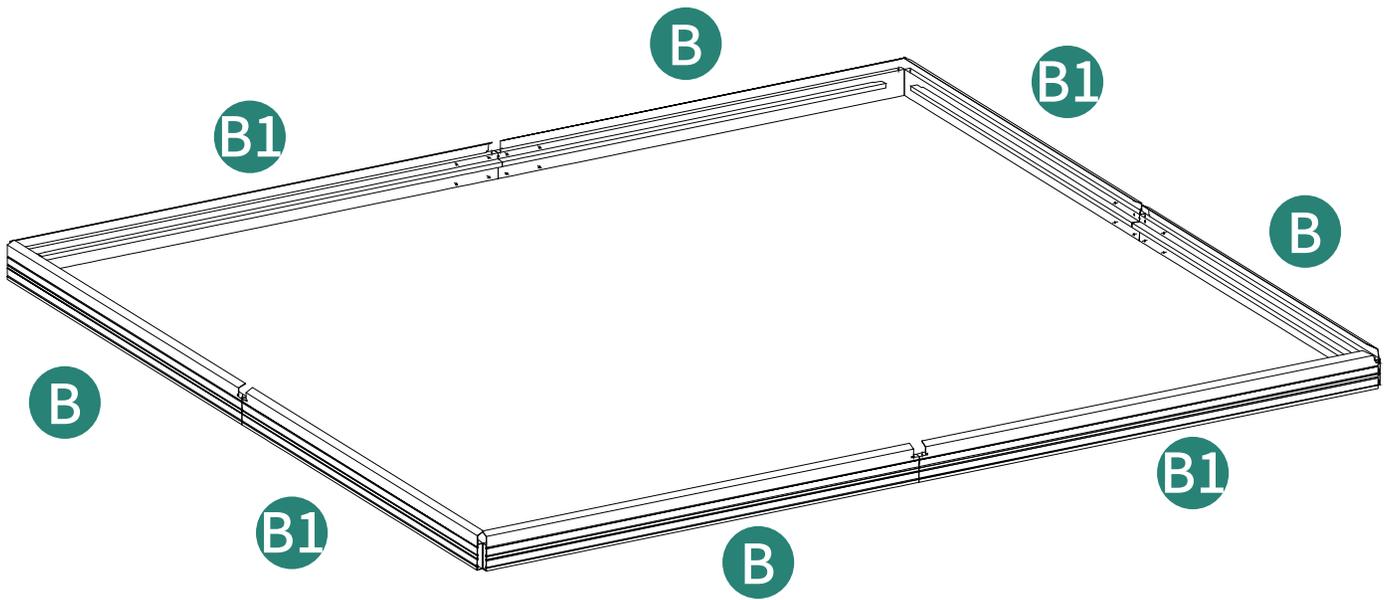


4




① 16pcs


⑧ 16pcs

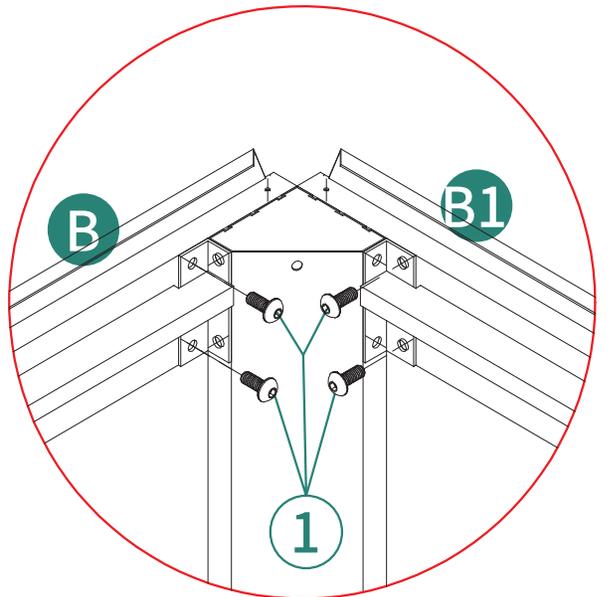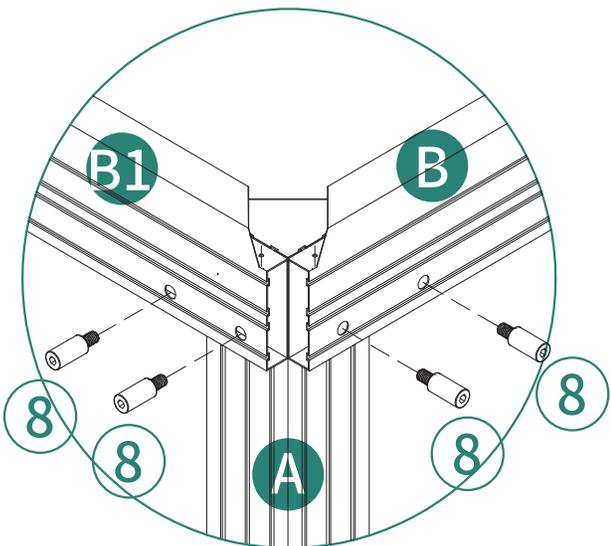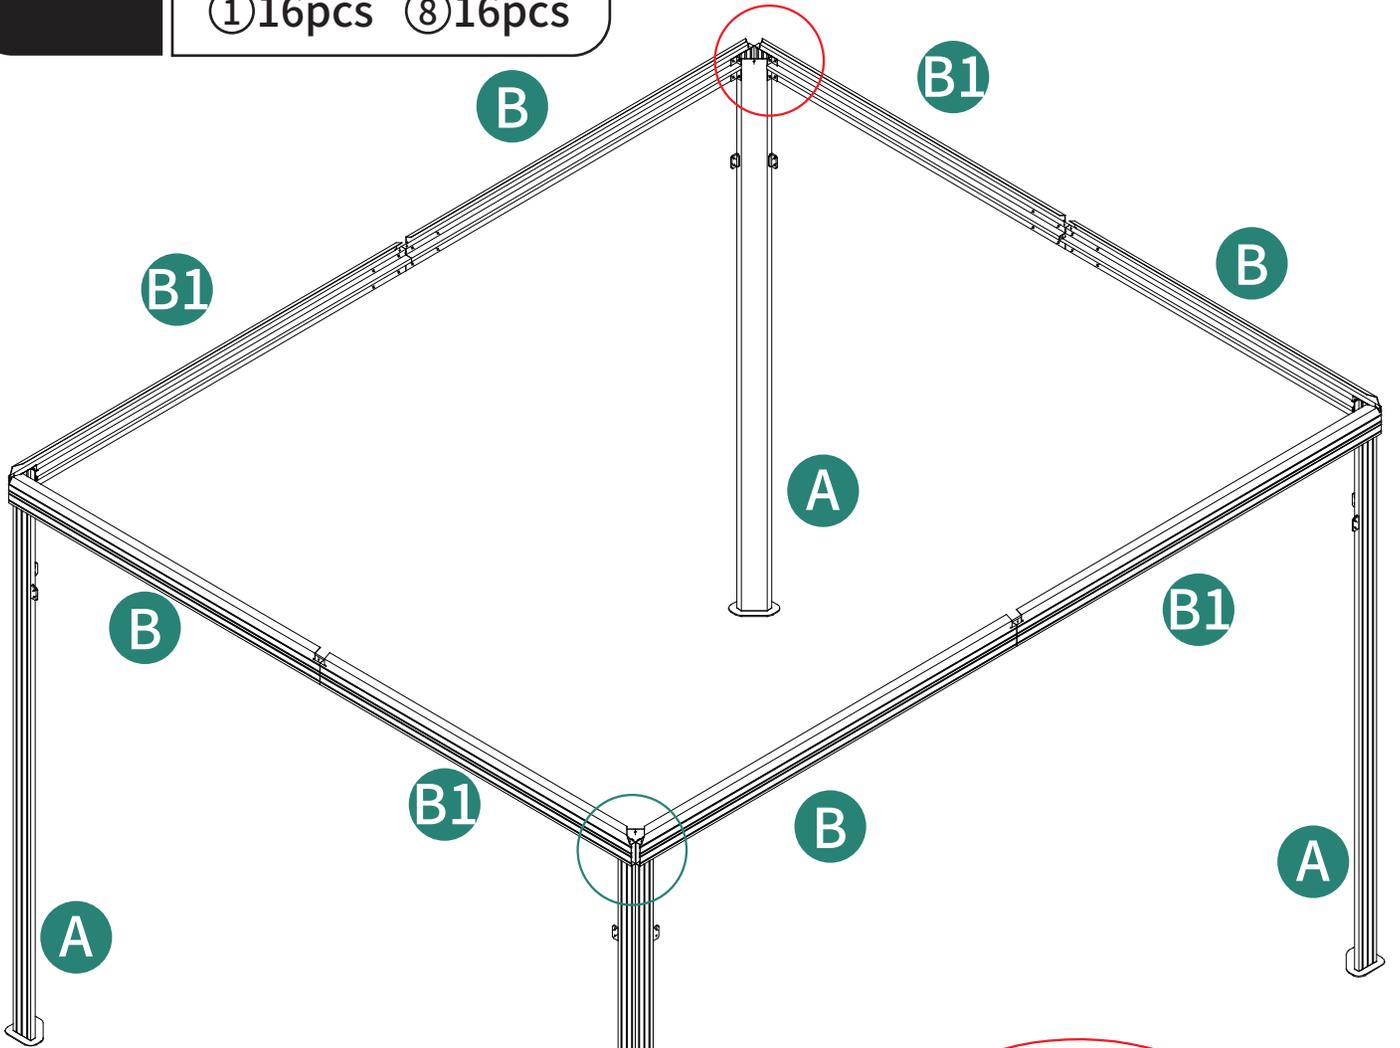

5

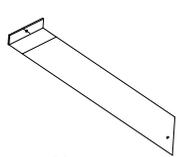



H 4pcs

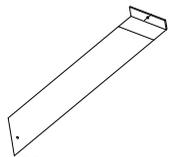

H1 4pcs



1 16pcs

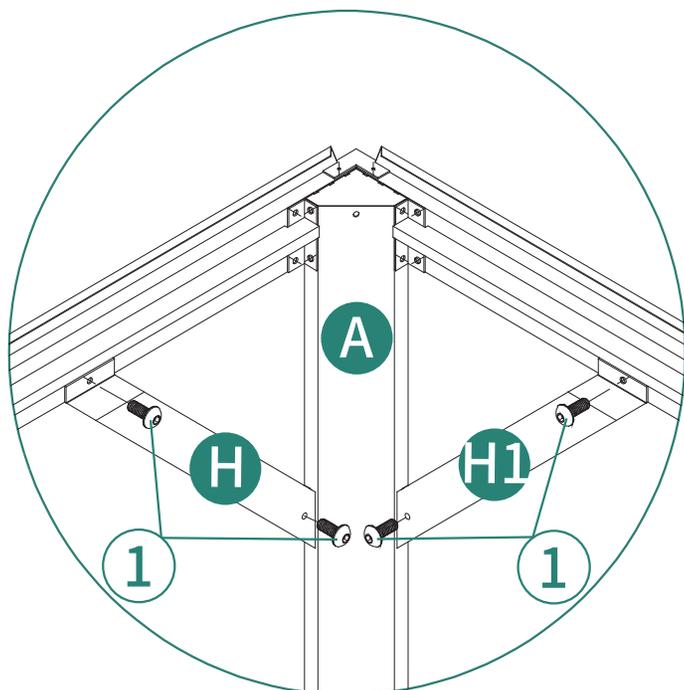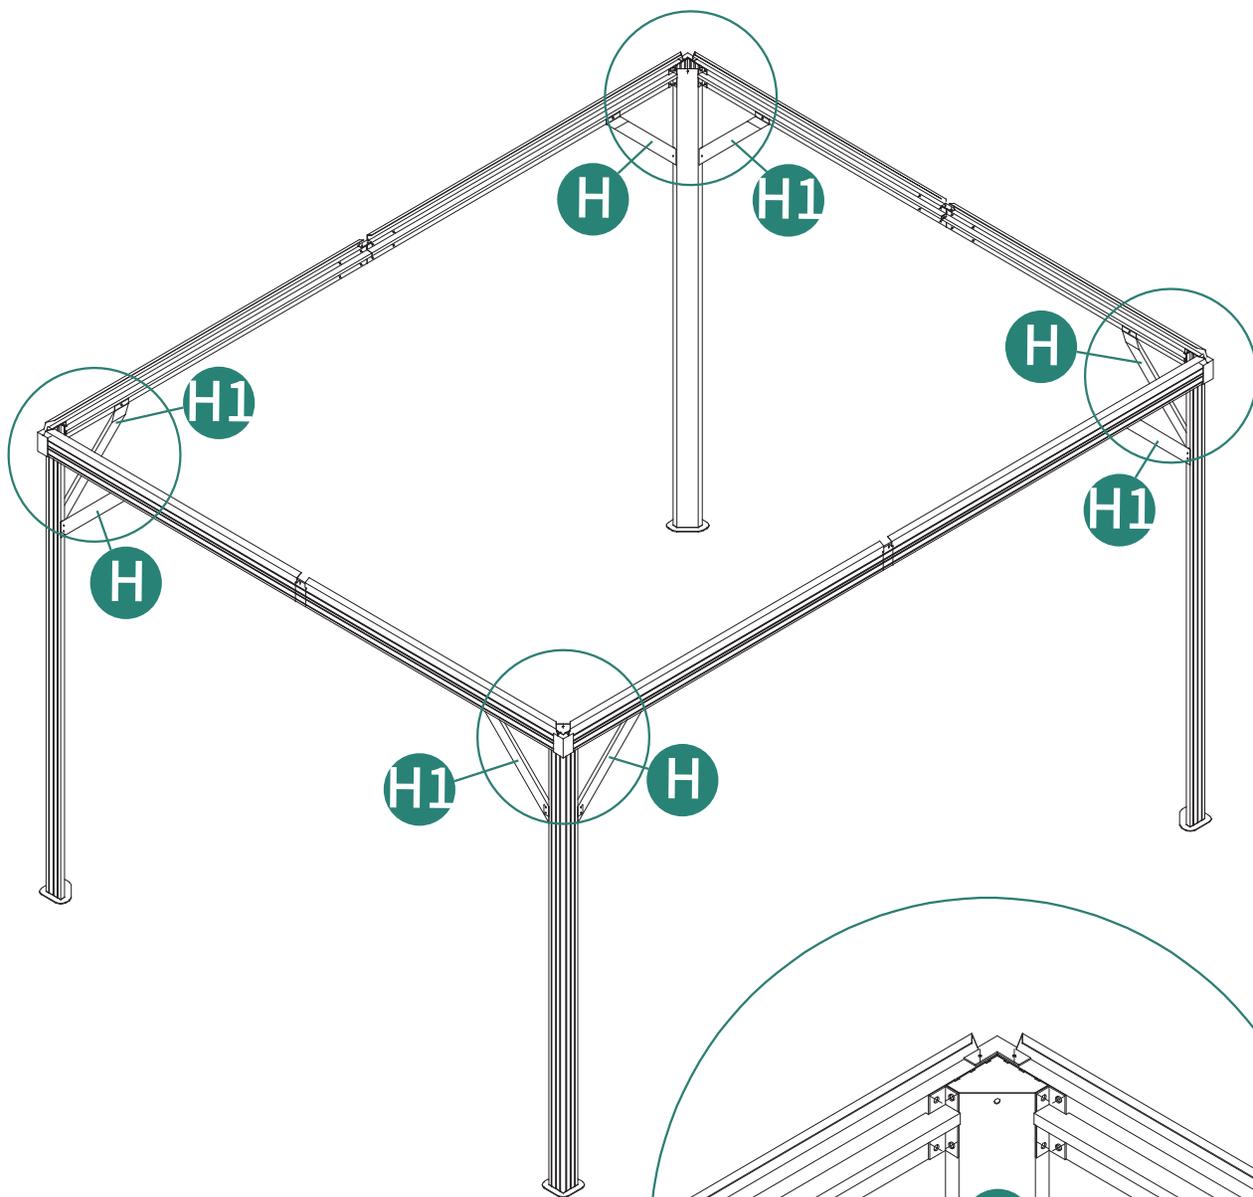

6



Ⓚ4pcs




Ⓚ14pcs




④24pcs




⑩4pcs

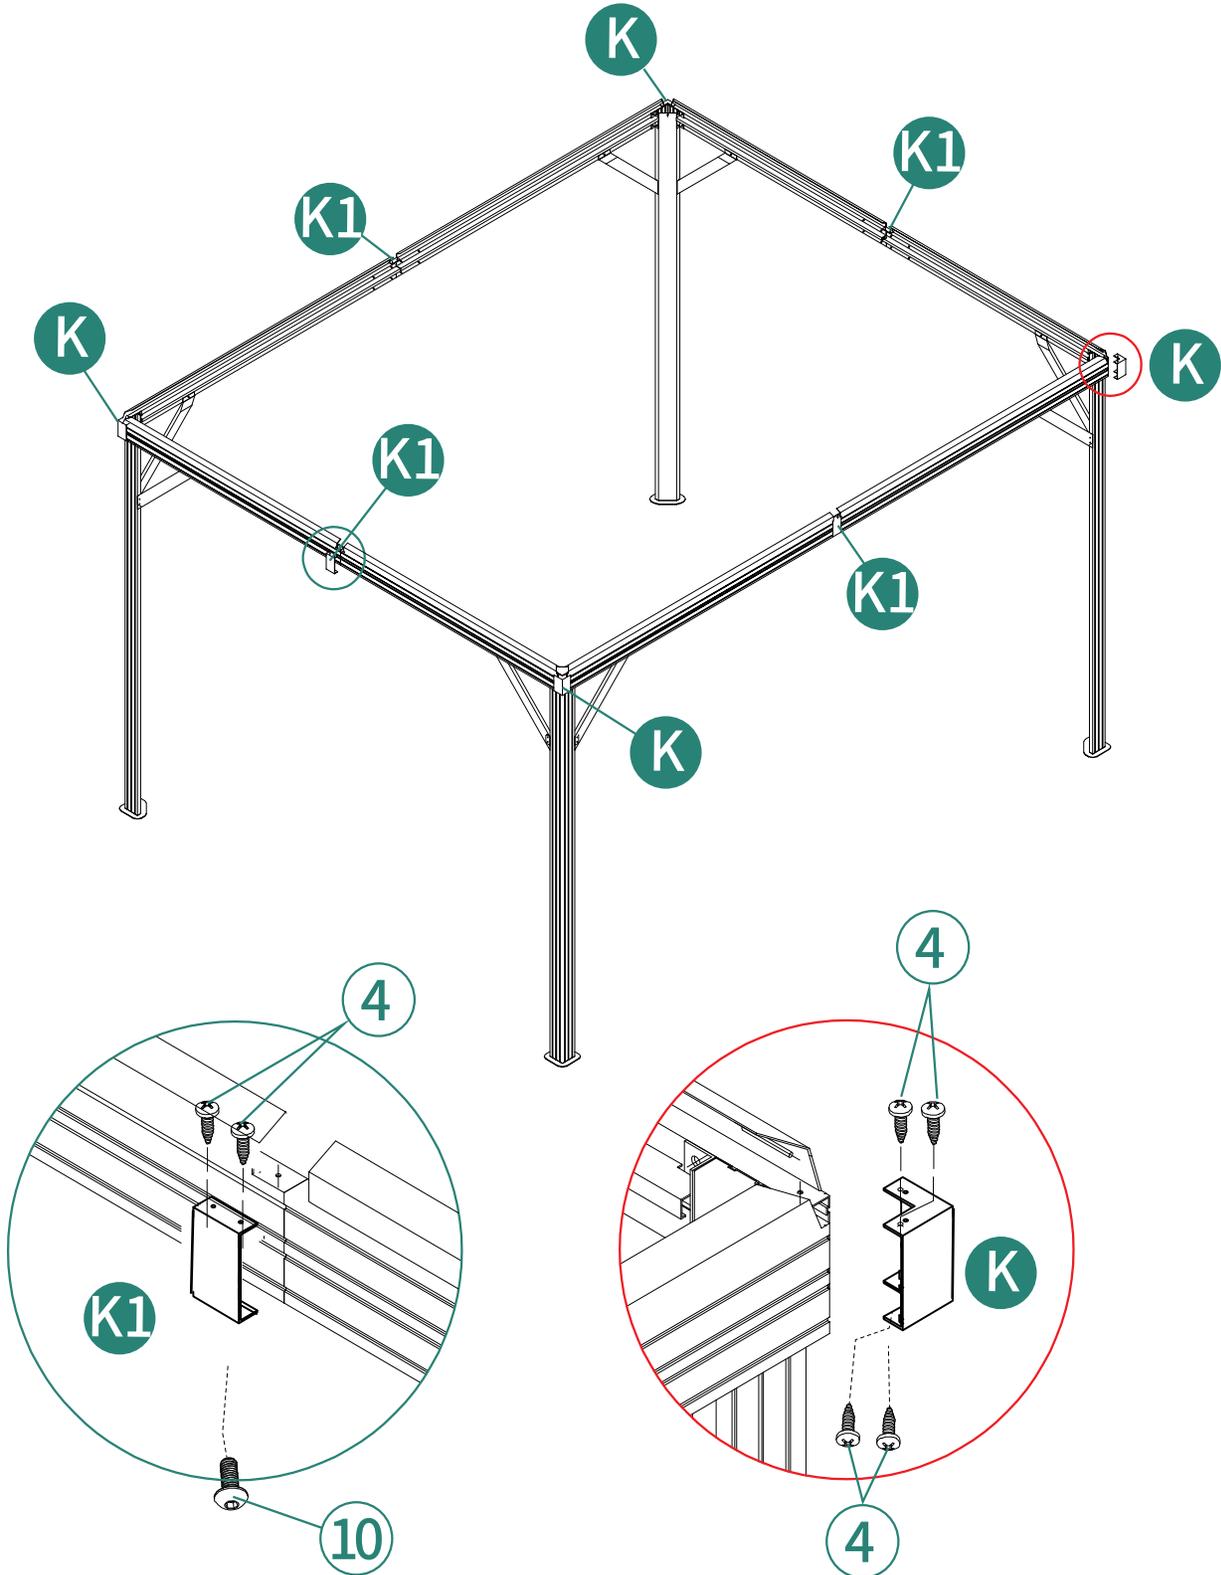


**7**  
**X4**

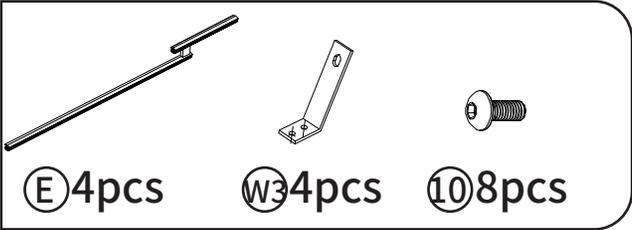

Ⓔ 4pcs    Ⓜ3 4pcs    10 8pcs

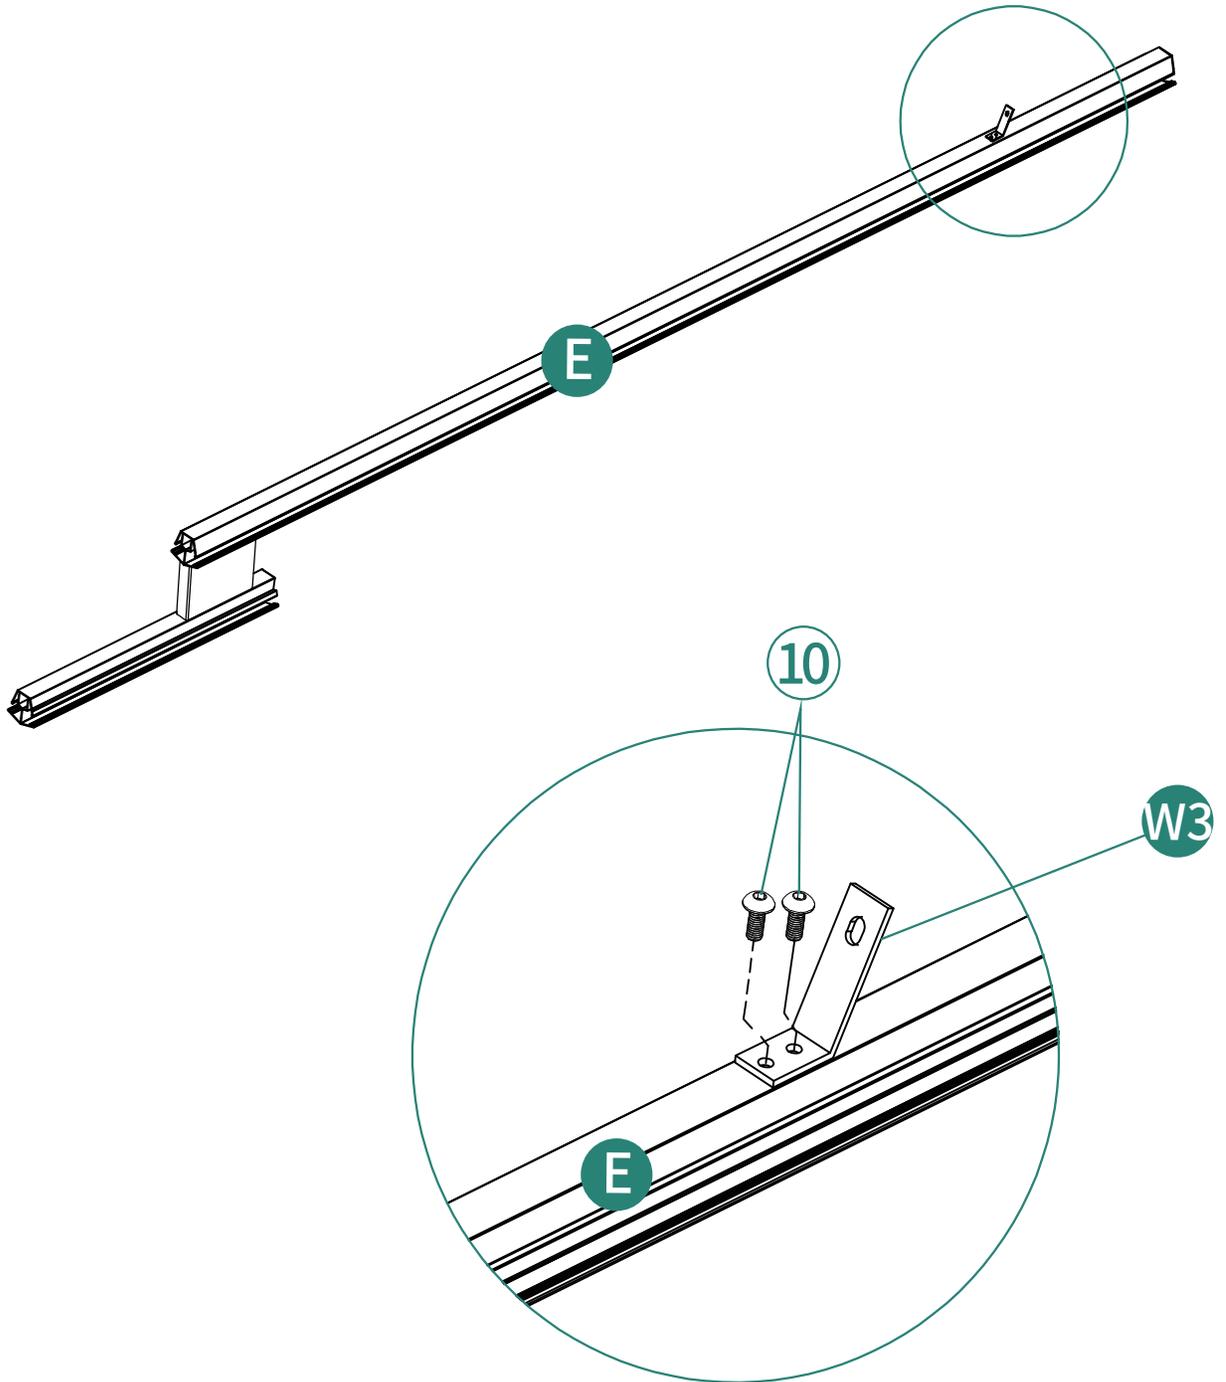



8



L 1pc




1 8pcs

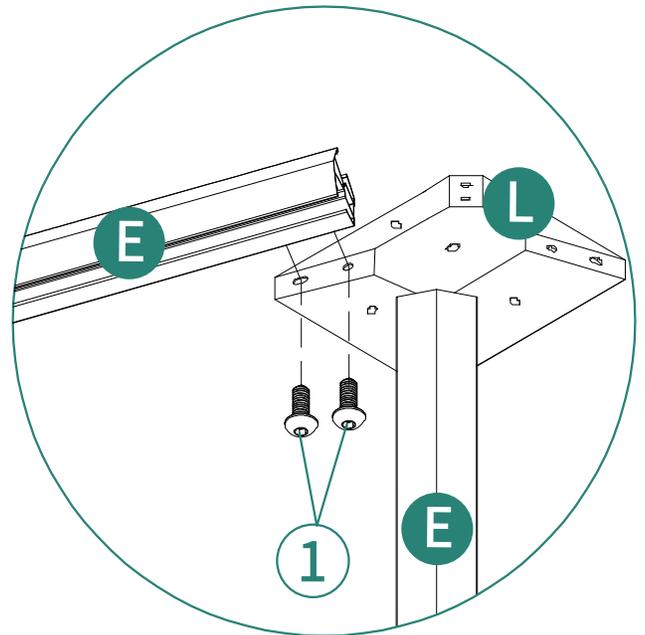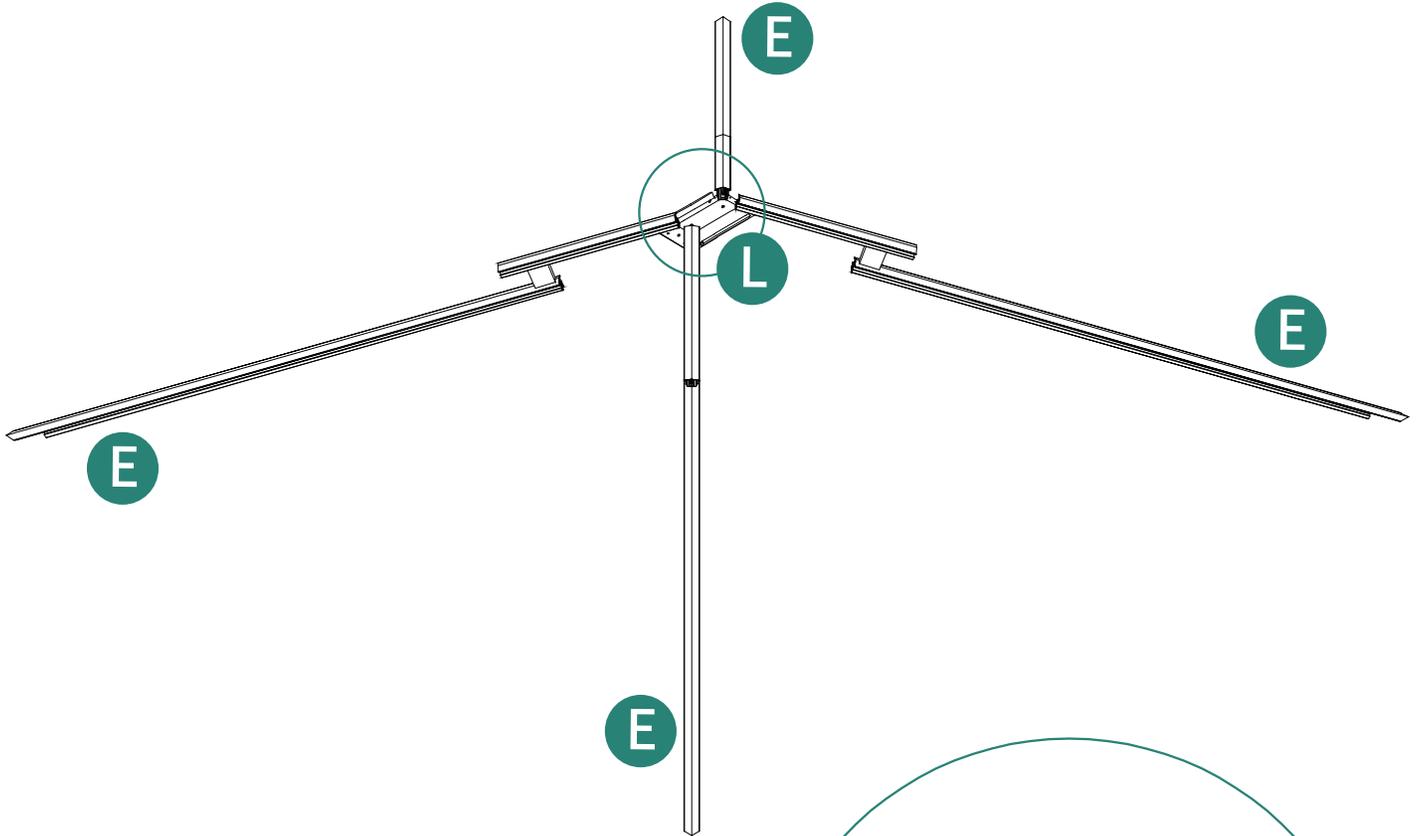


**9**




① 4pcs

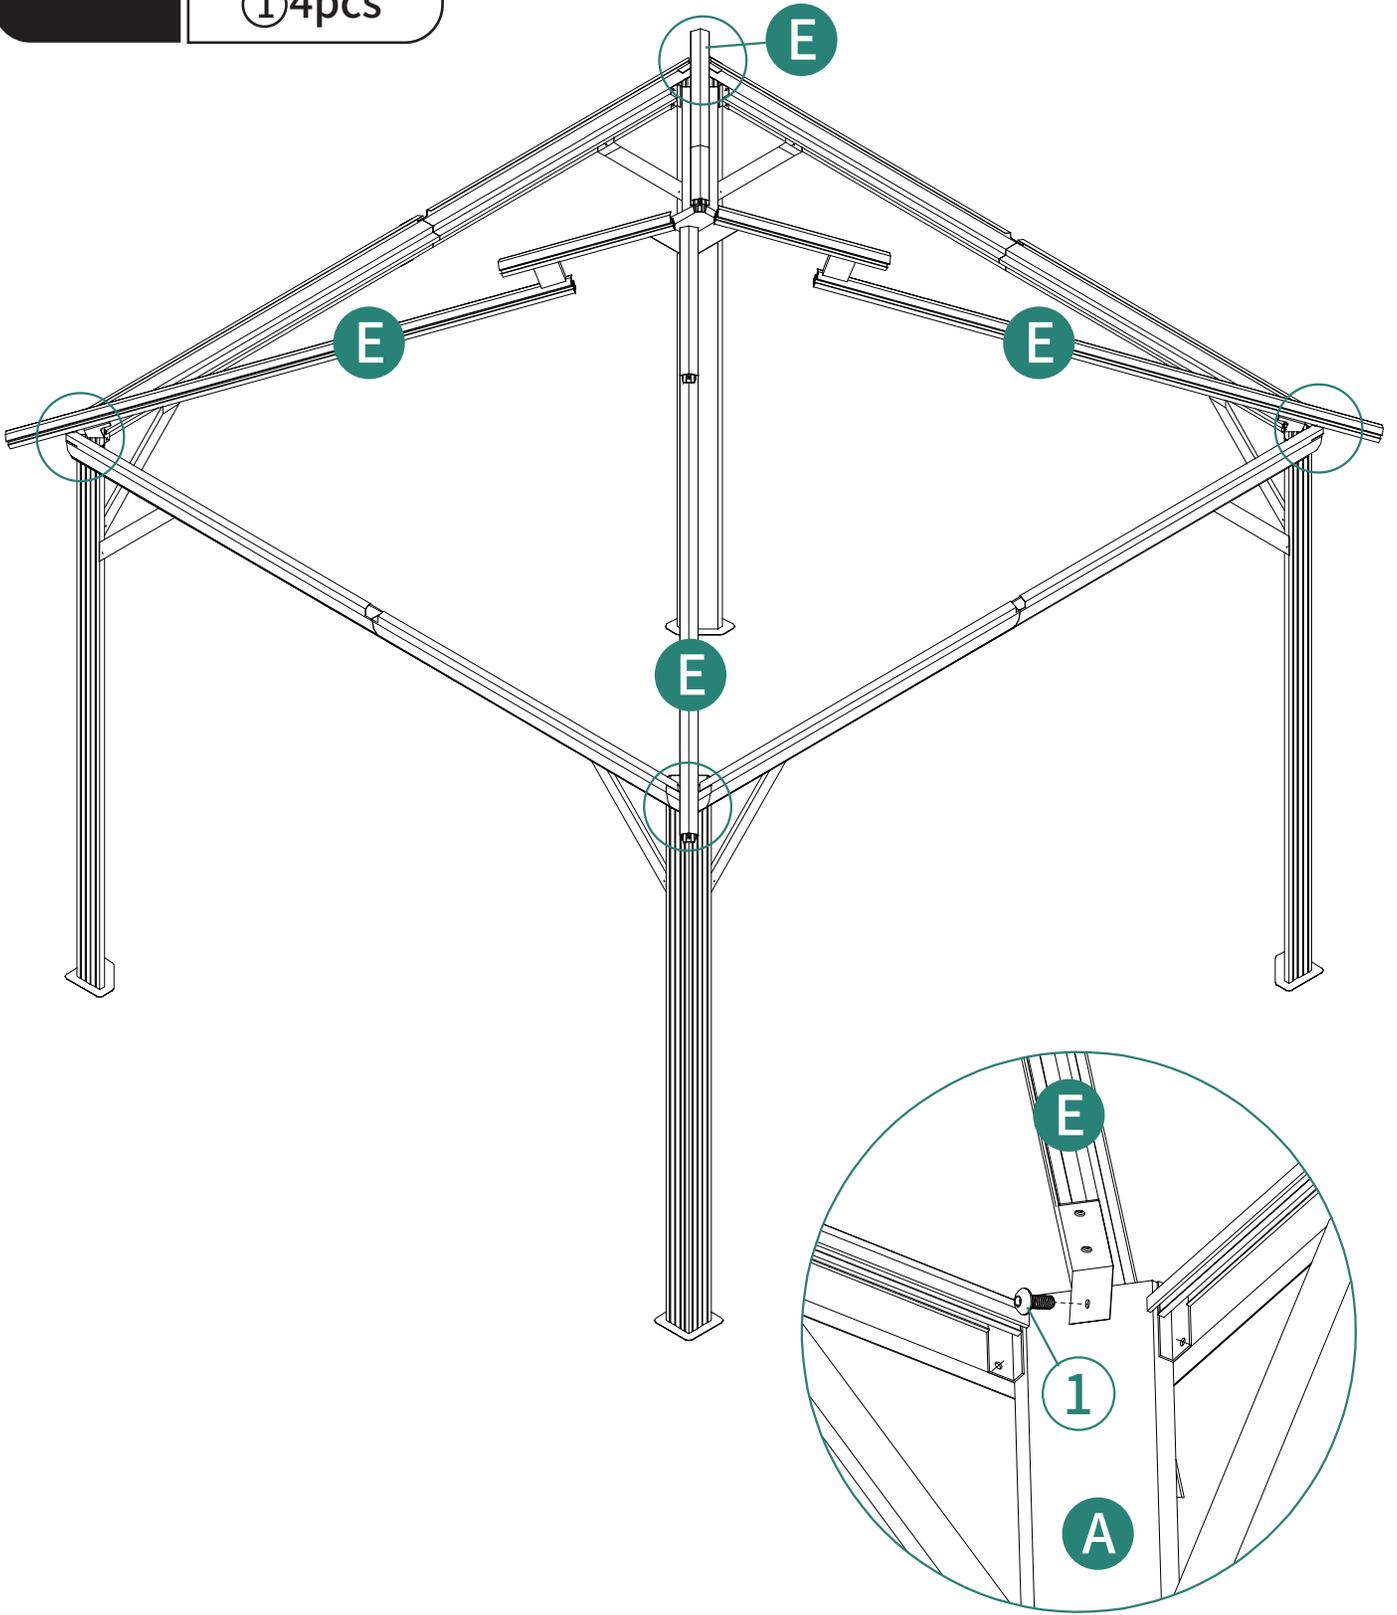

**10**  
**X4**

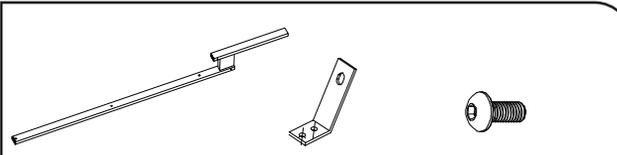



Ⓔ1 4pcs    Ⓜ2 4pcs    ⑩ 8pcs

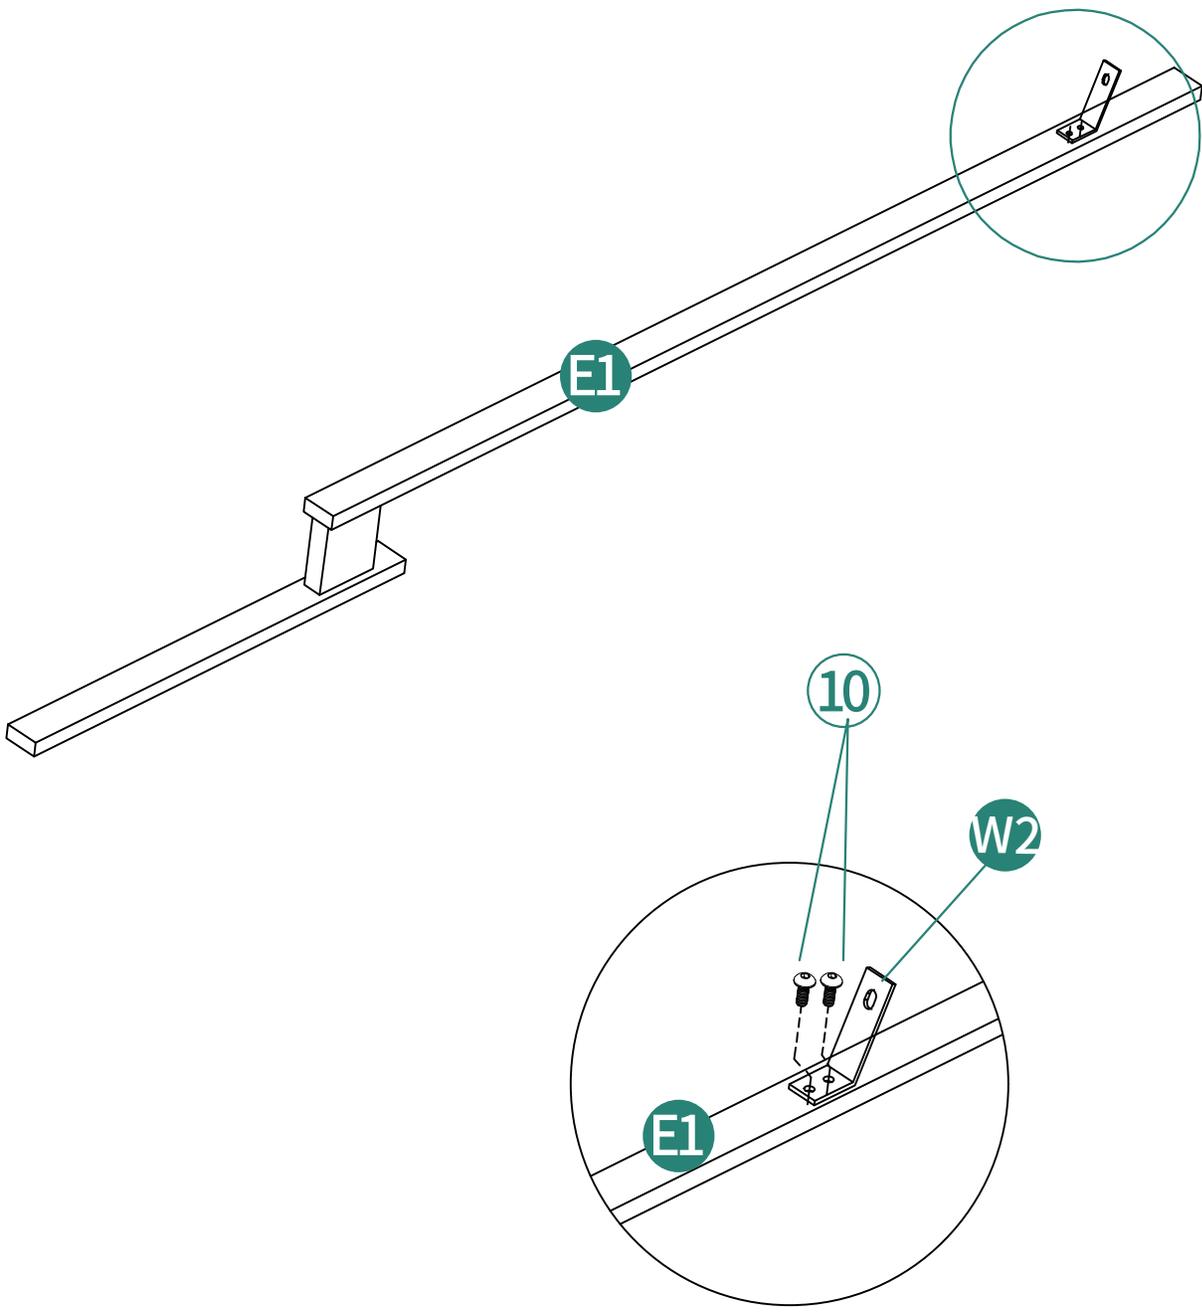


# 11




① 8pcs

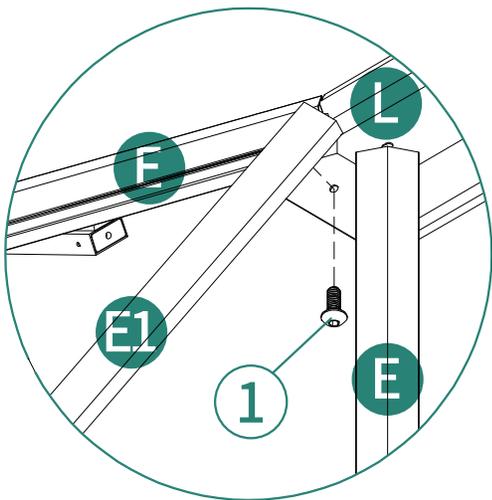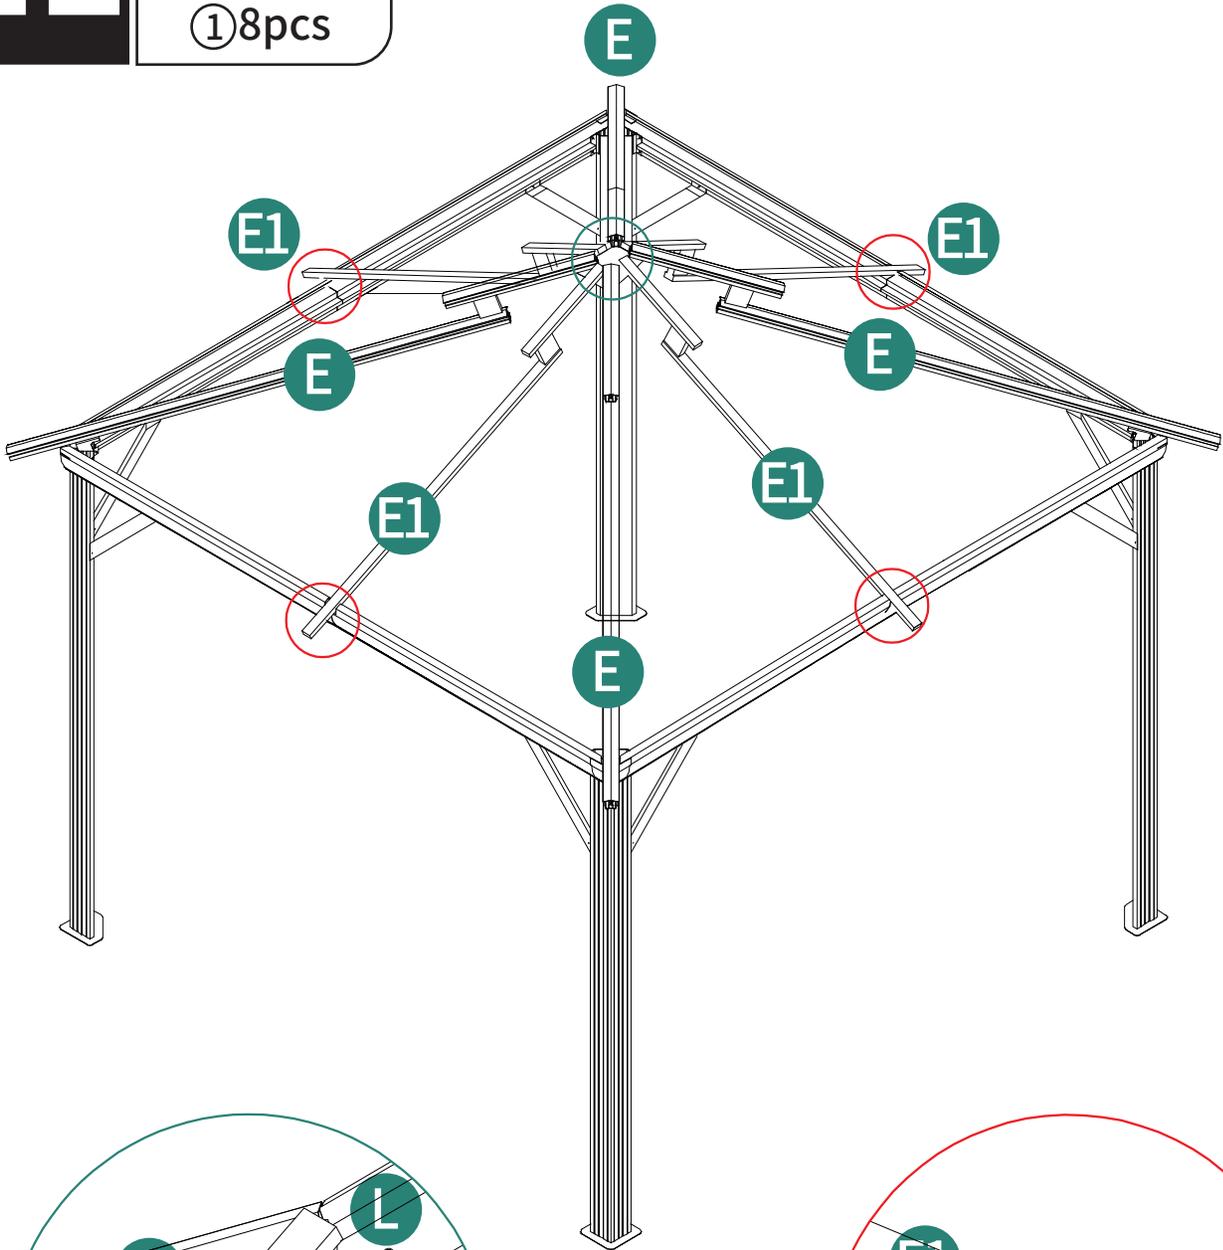

①

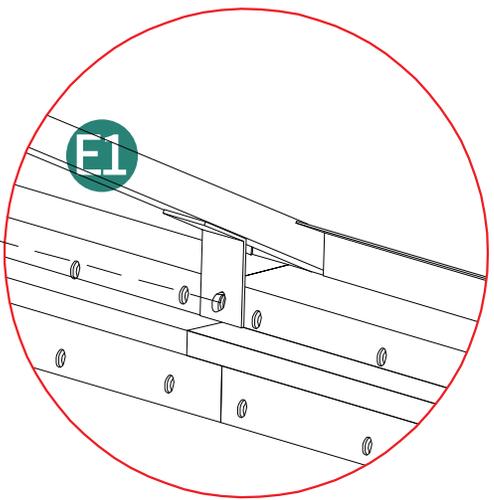



12



Ⓜ1pc




③1pc

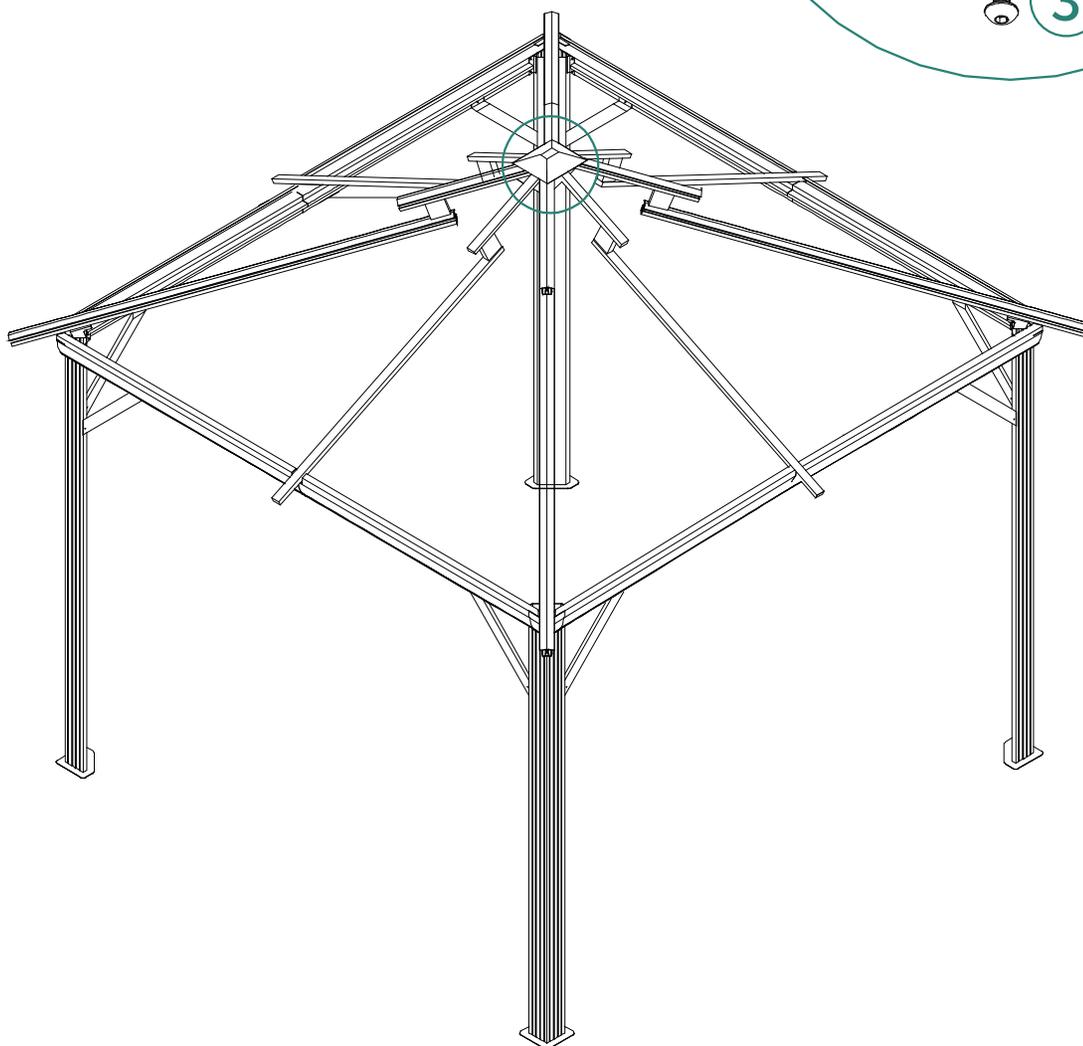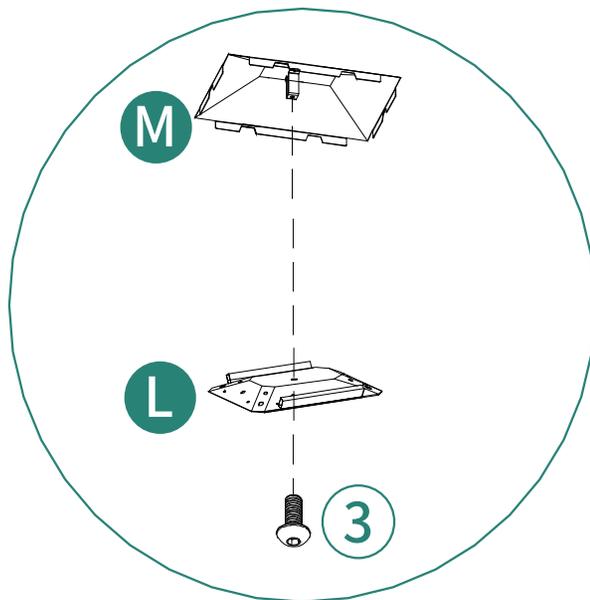


**13**



ⓂG3 4pcs   ⓂN 4pcs   Ⓜ1 8pcs


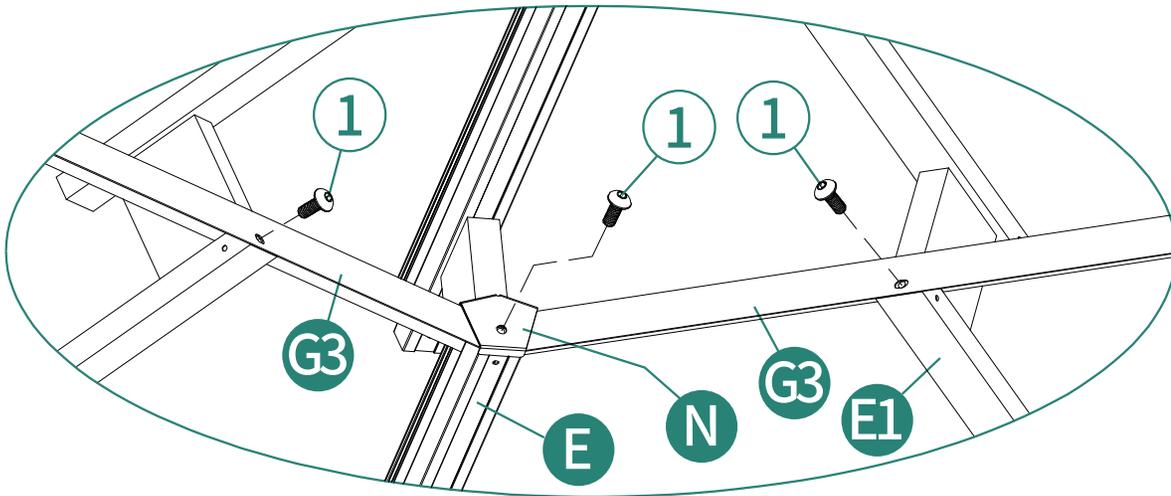



Do not tighten the screw 1 before completing step 18.  
It's view from the bottom inside gazebo.

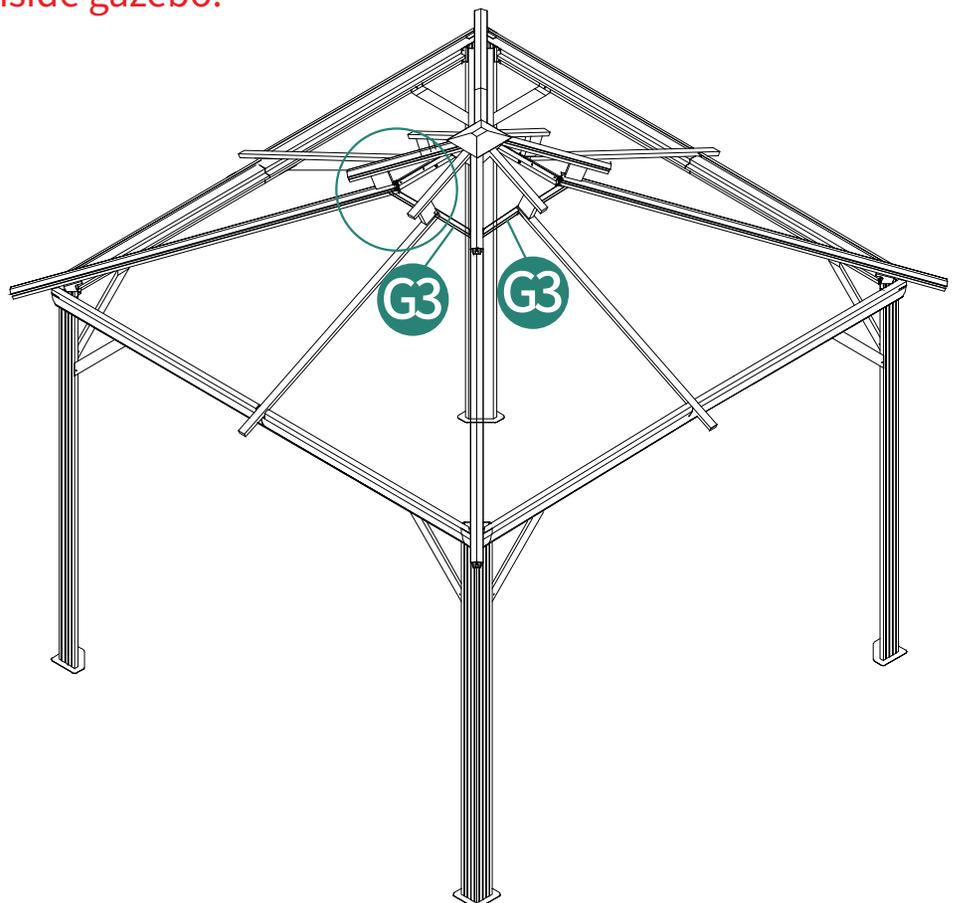


# 14

## X4


					
Q1 4pcs	Q2 4pcs	Q3 4pcs	Q4 4pcs	Q5 4pcs	Q6 4pcs
					
S 4pcs	Sa 4pcs	Z 56pcs	Z1 24pcs		

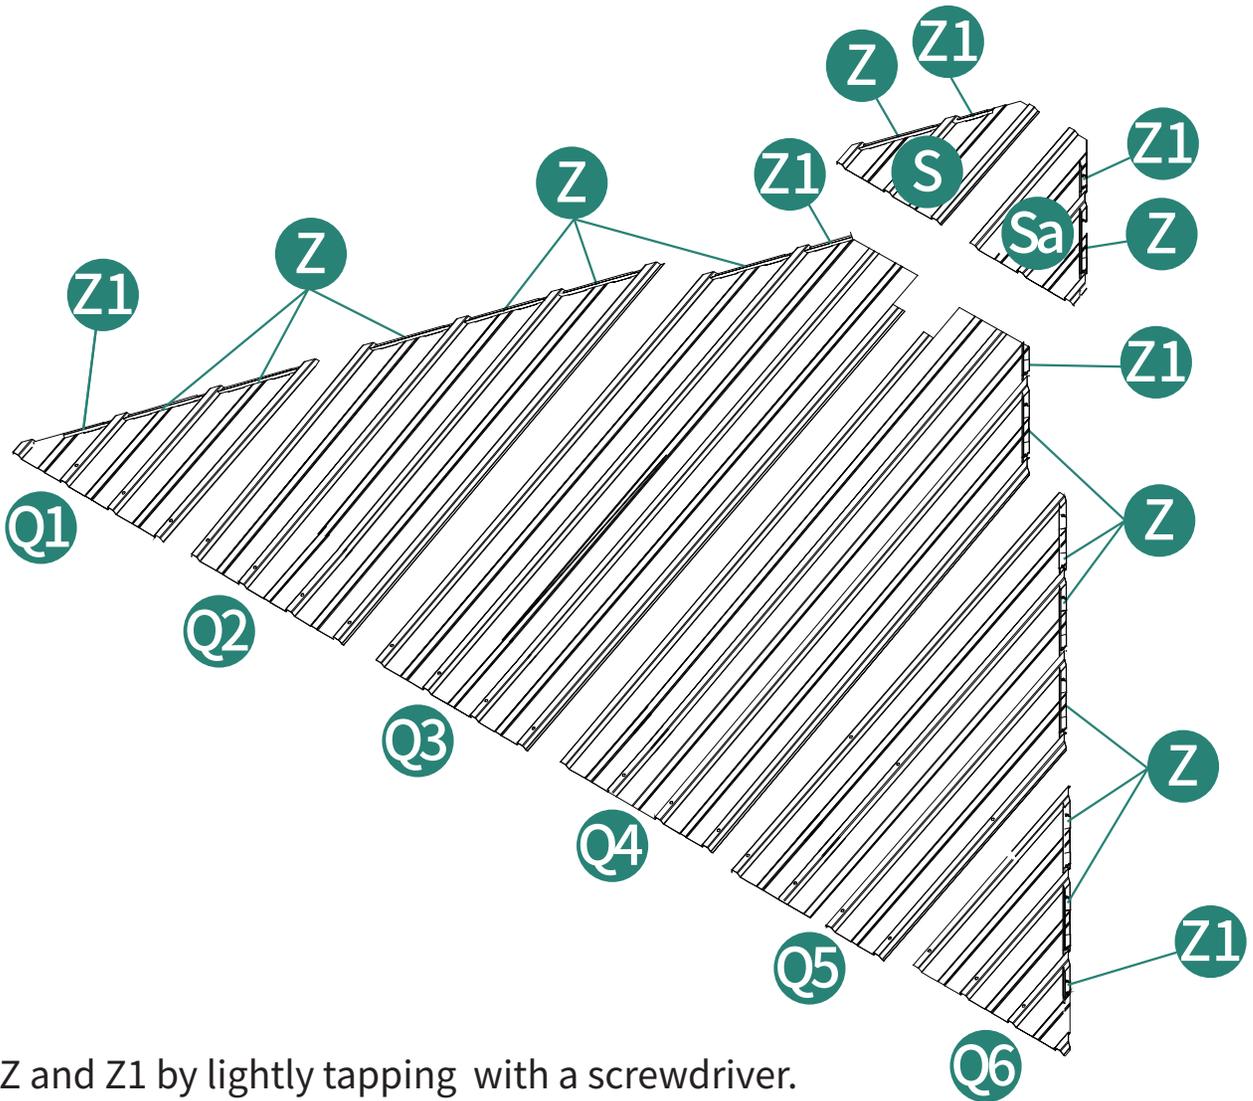

Attach Z and Z1 by lightly tapping with a screwdriver.

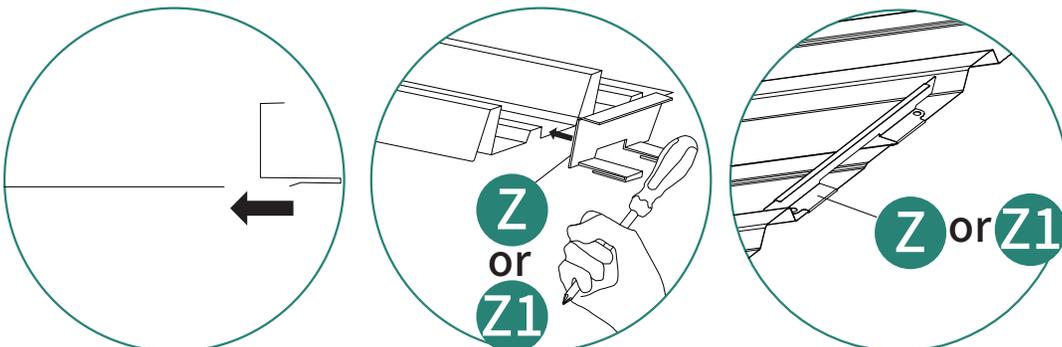

# 15

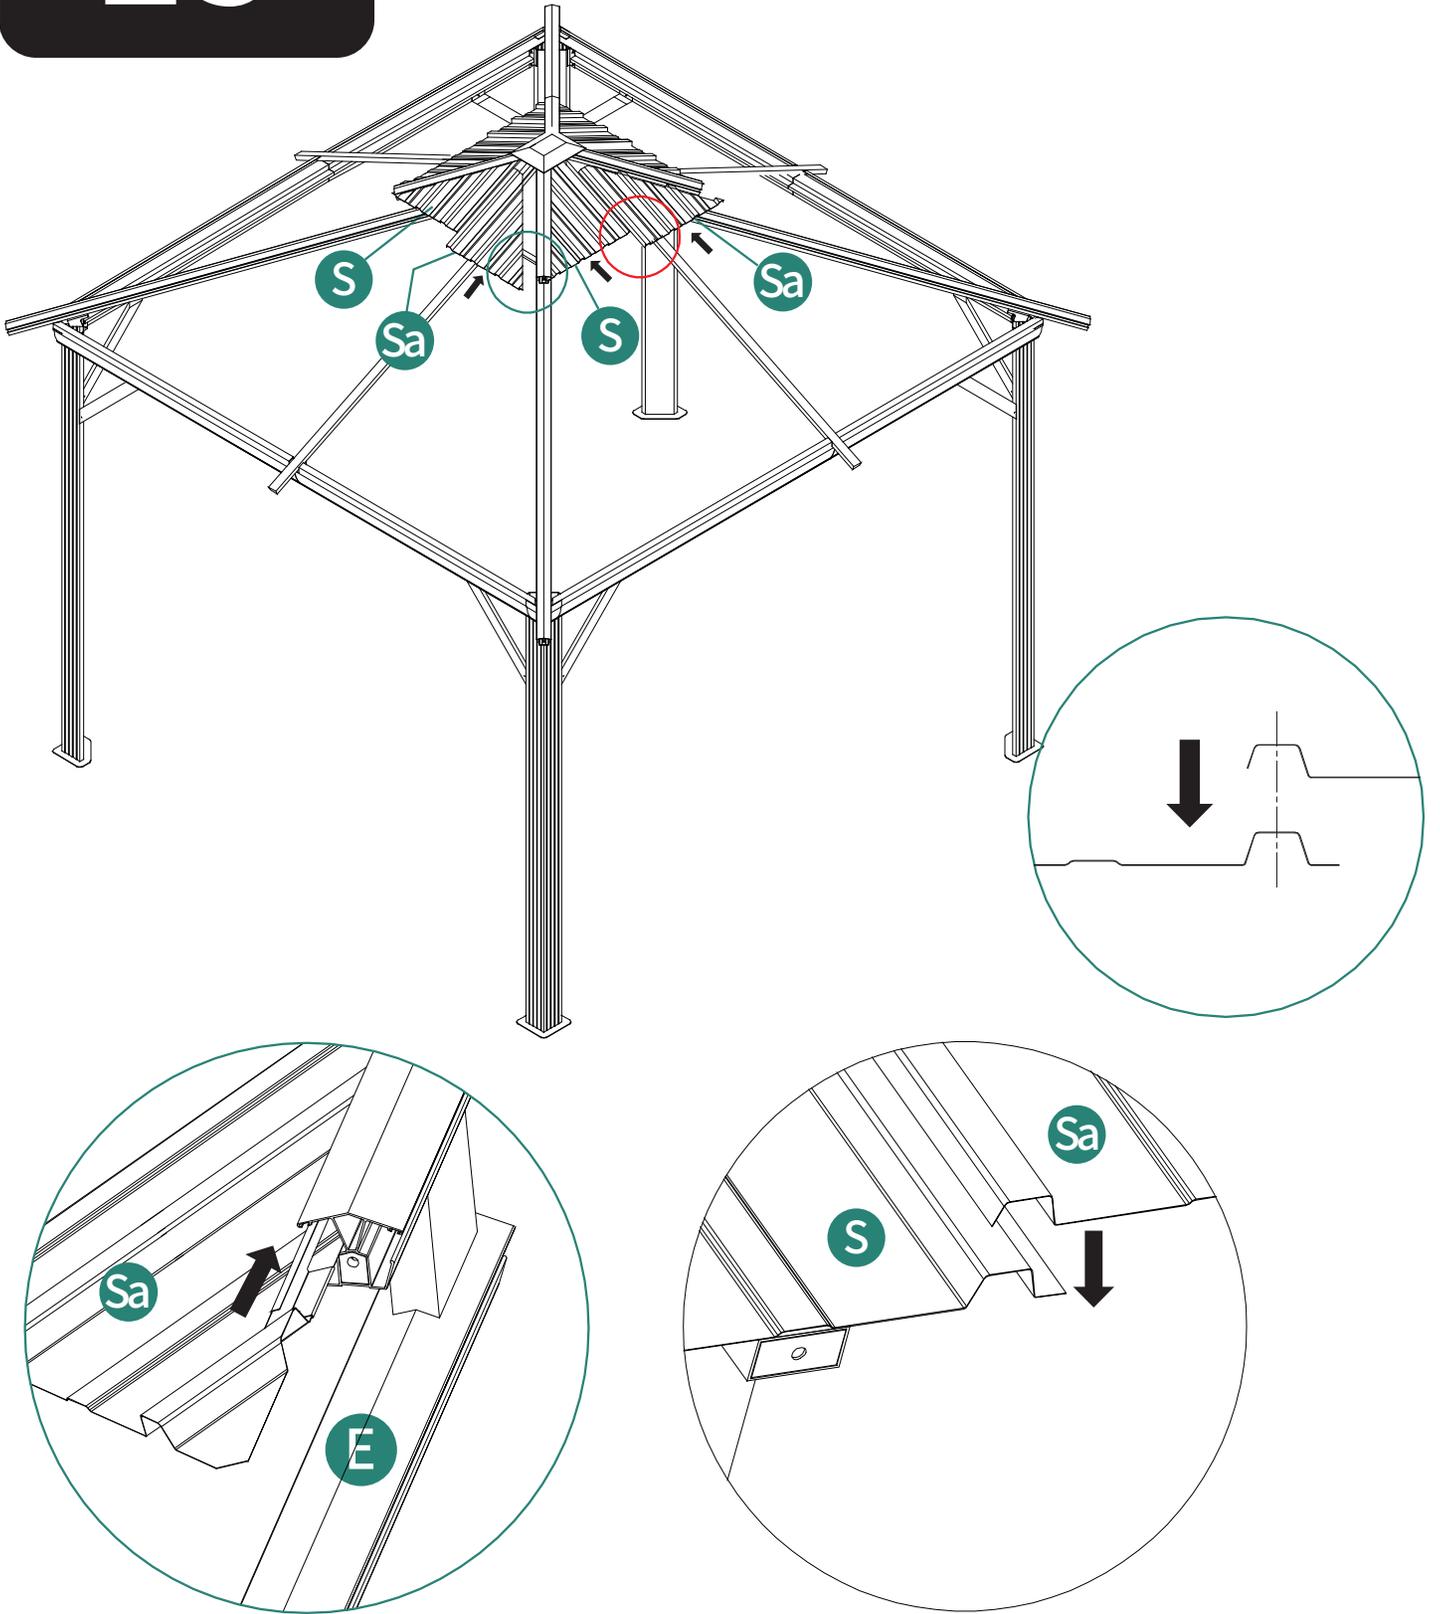

# 16







G14pcs




N4pcs




18pcs

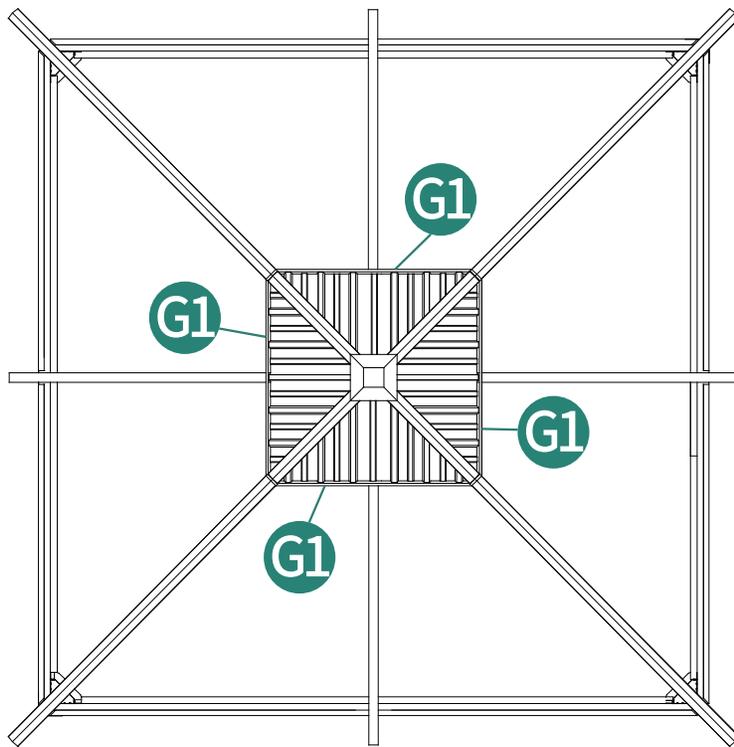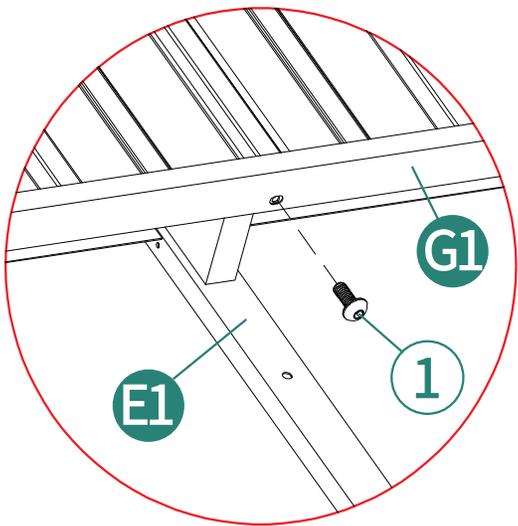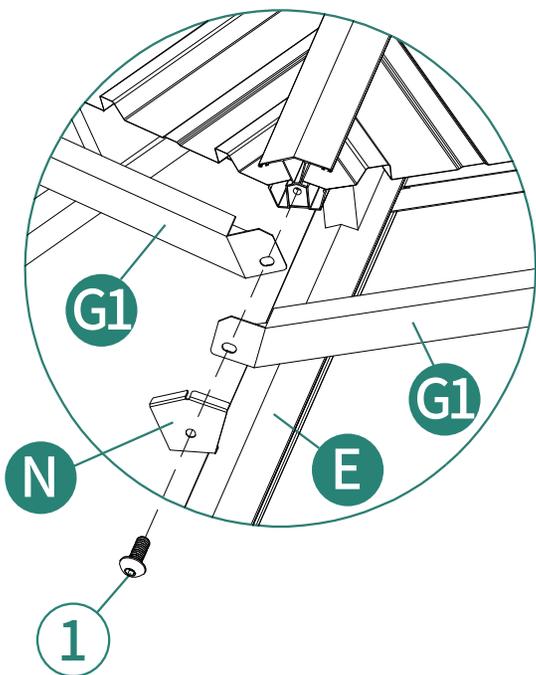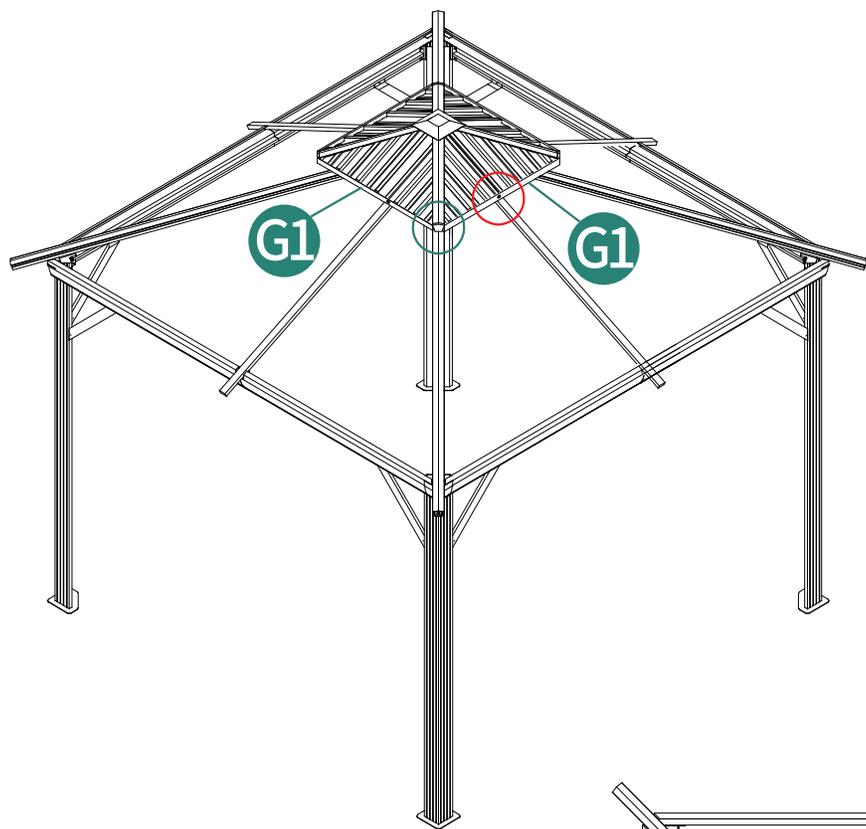


# 17



F1 8pcs







W 4pcs




W1 4pcs



1 24pcs

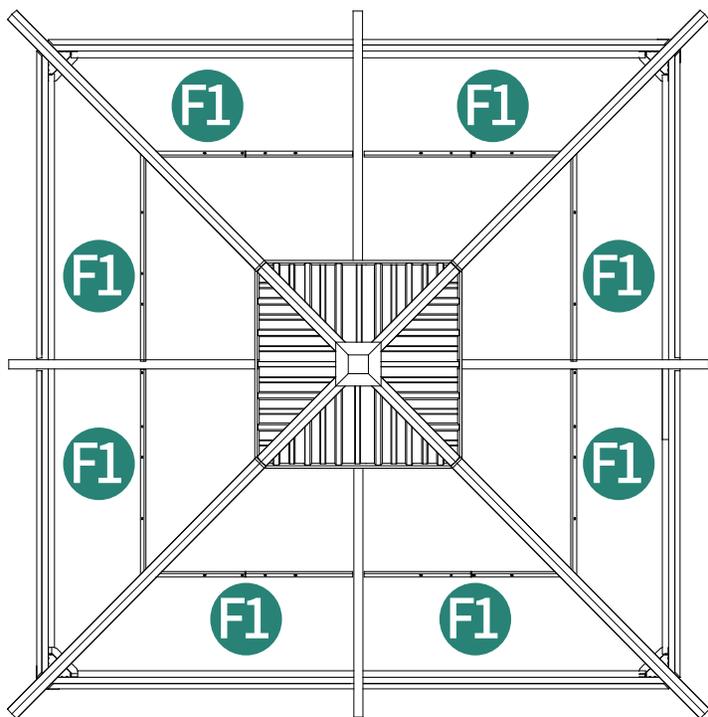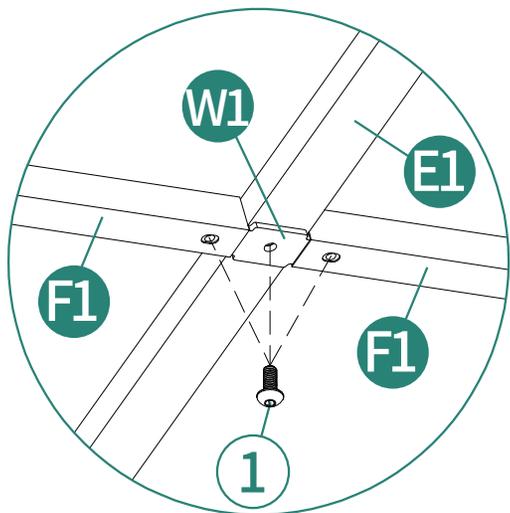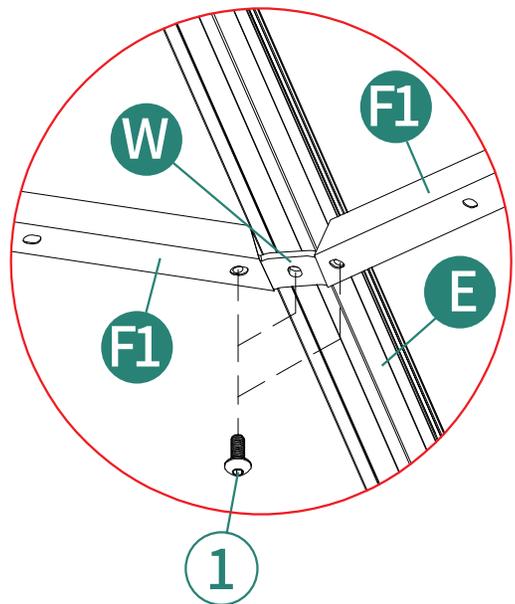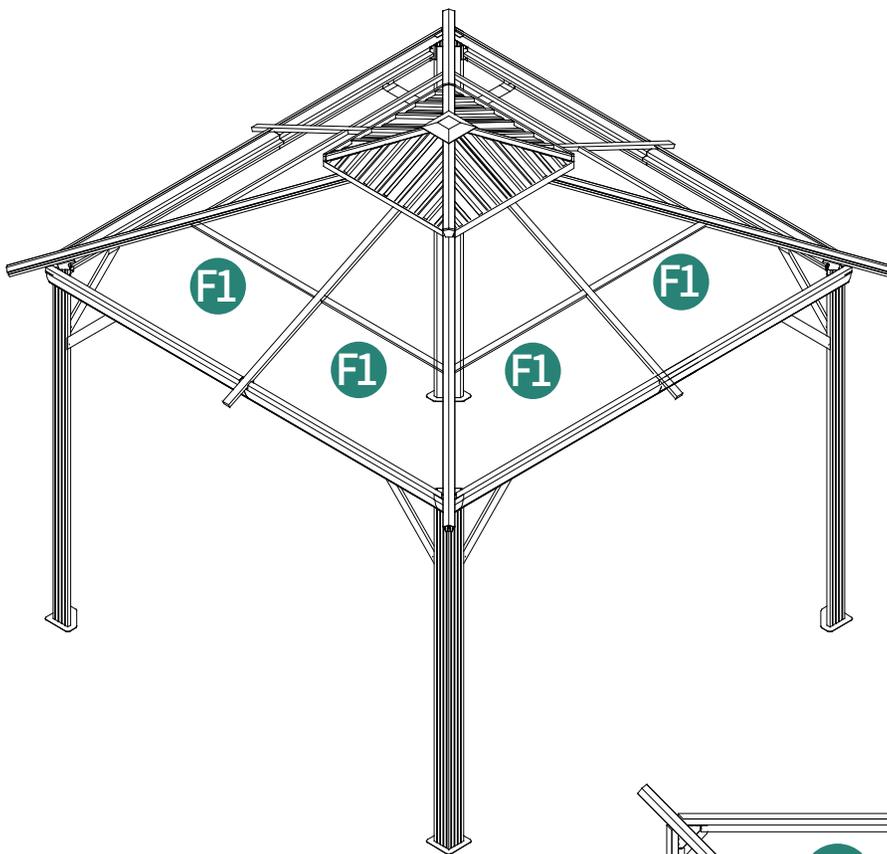

# 18




V1 4pcs




V2 4pcs



5 8pcs

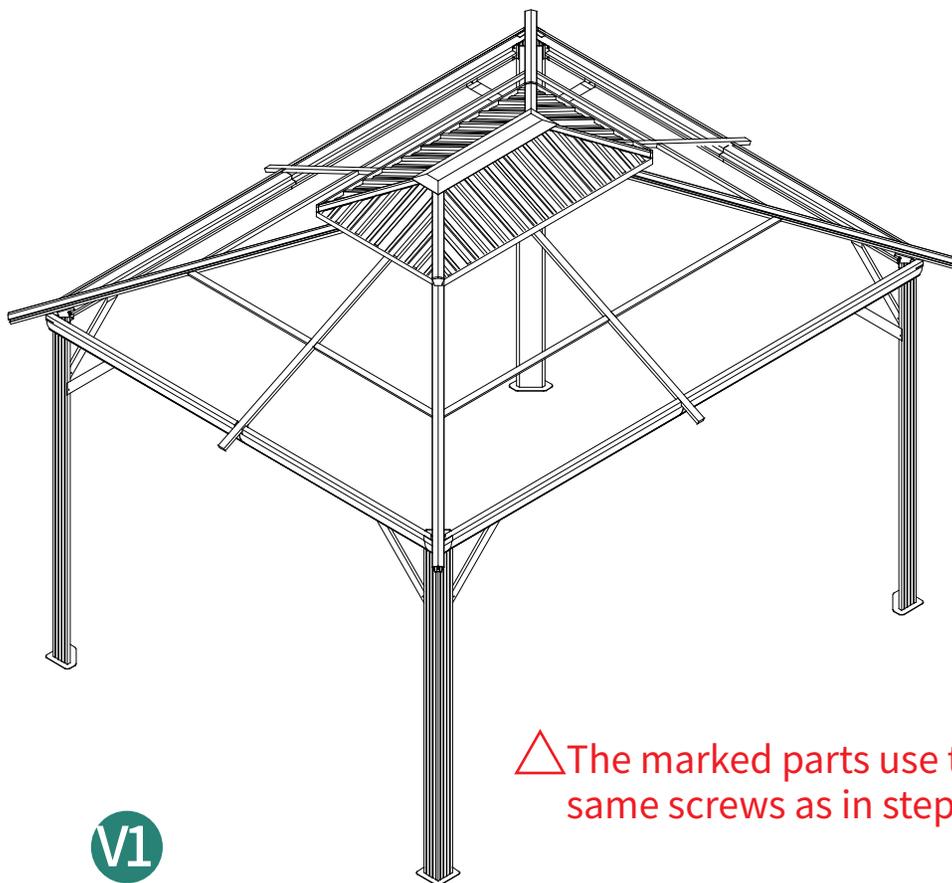


△ The marked parts use the same screws as in step 13.

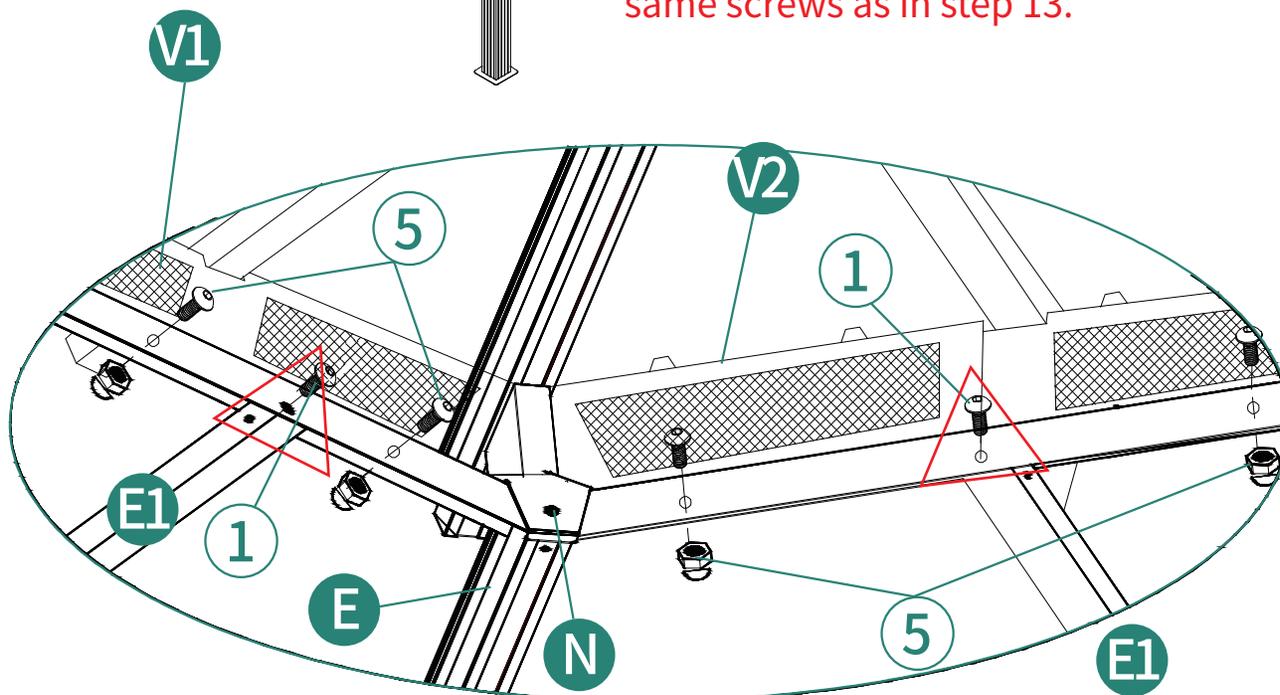


It's view from the bottom inside gazebo.

# 19

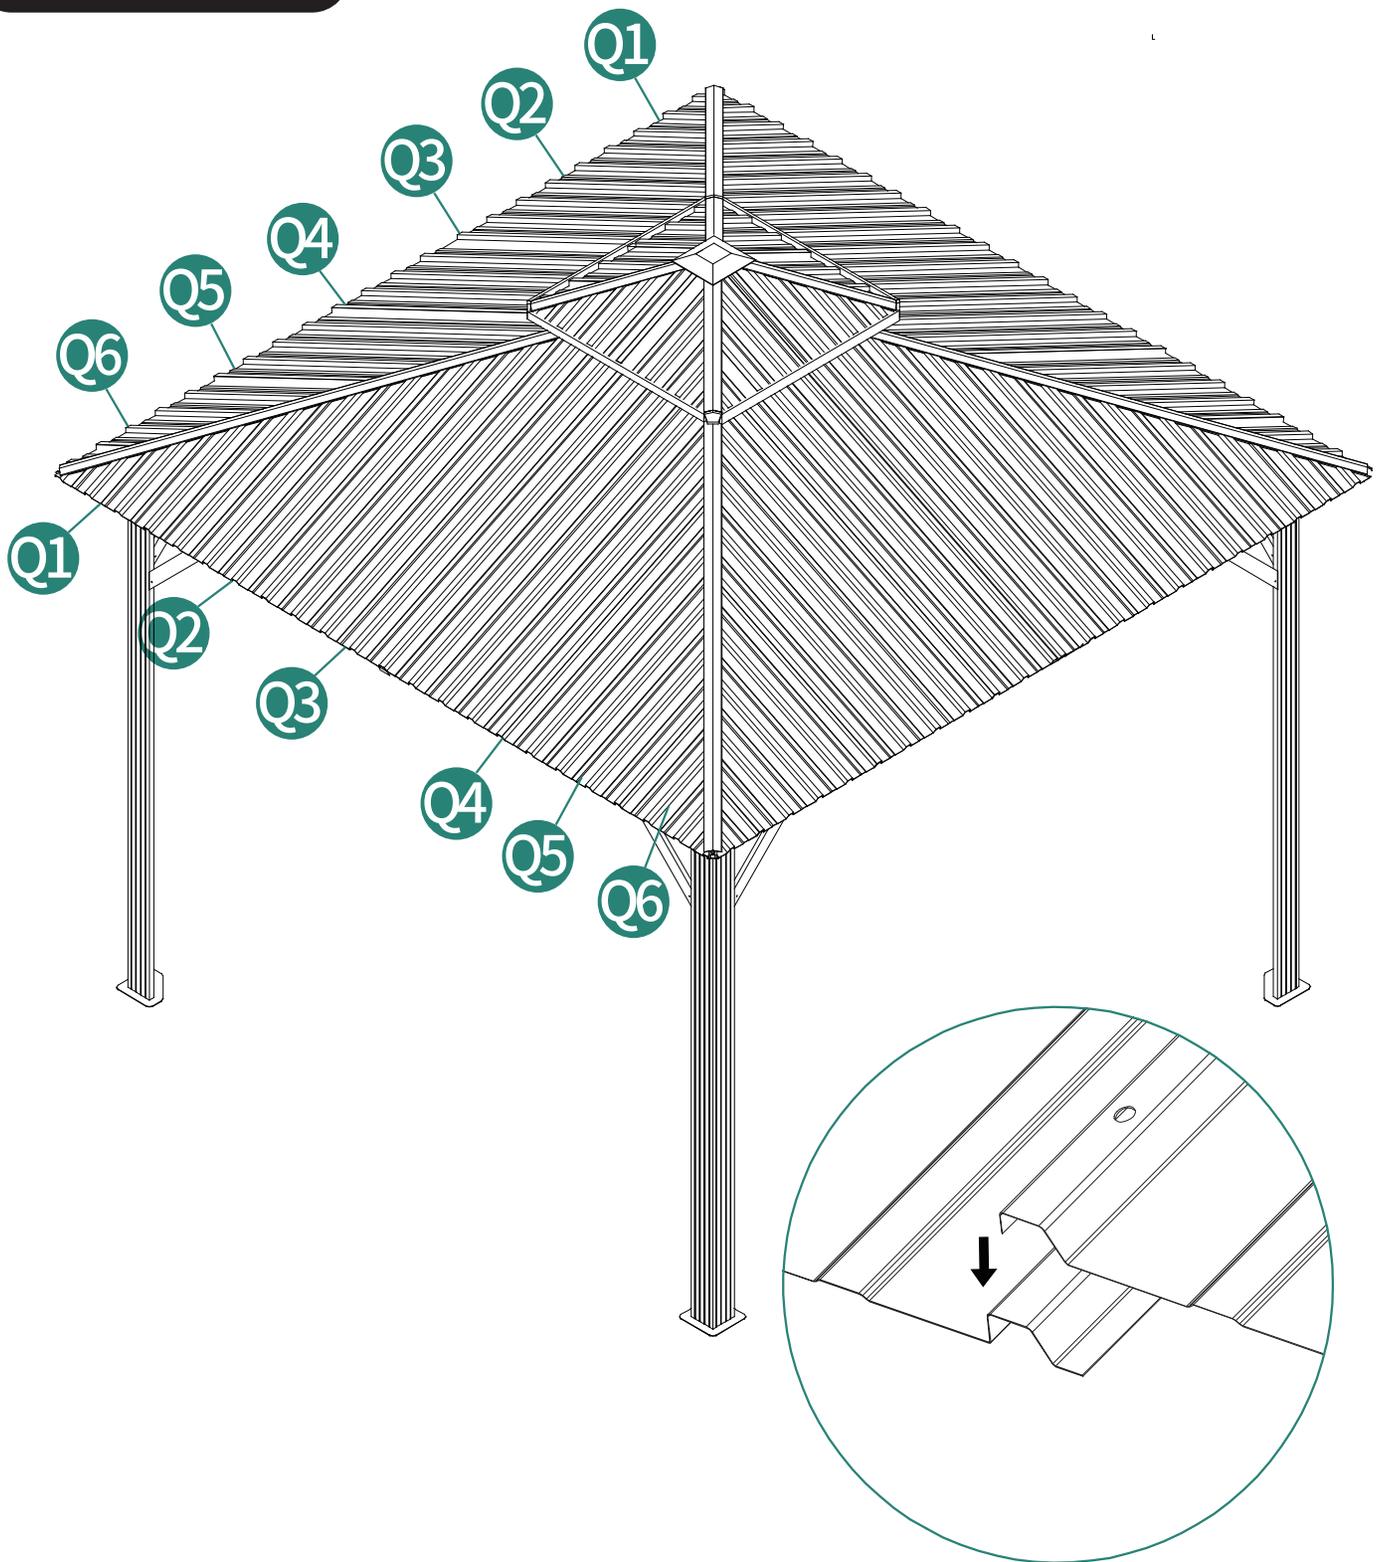


20

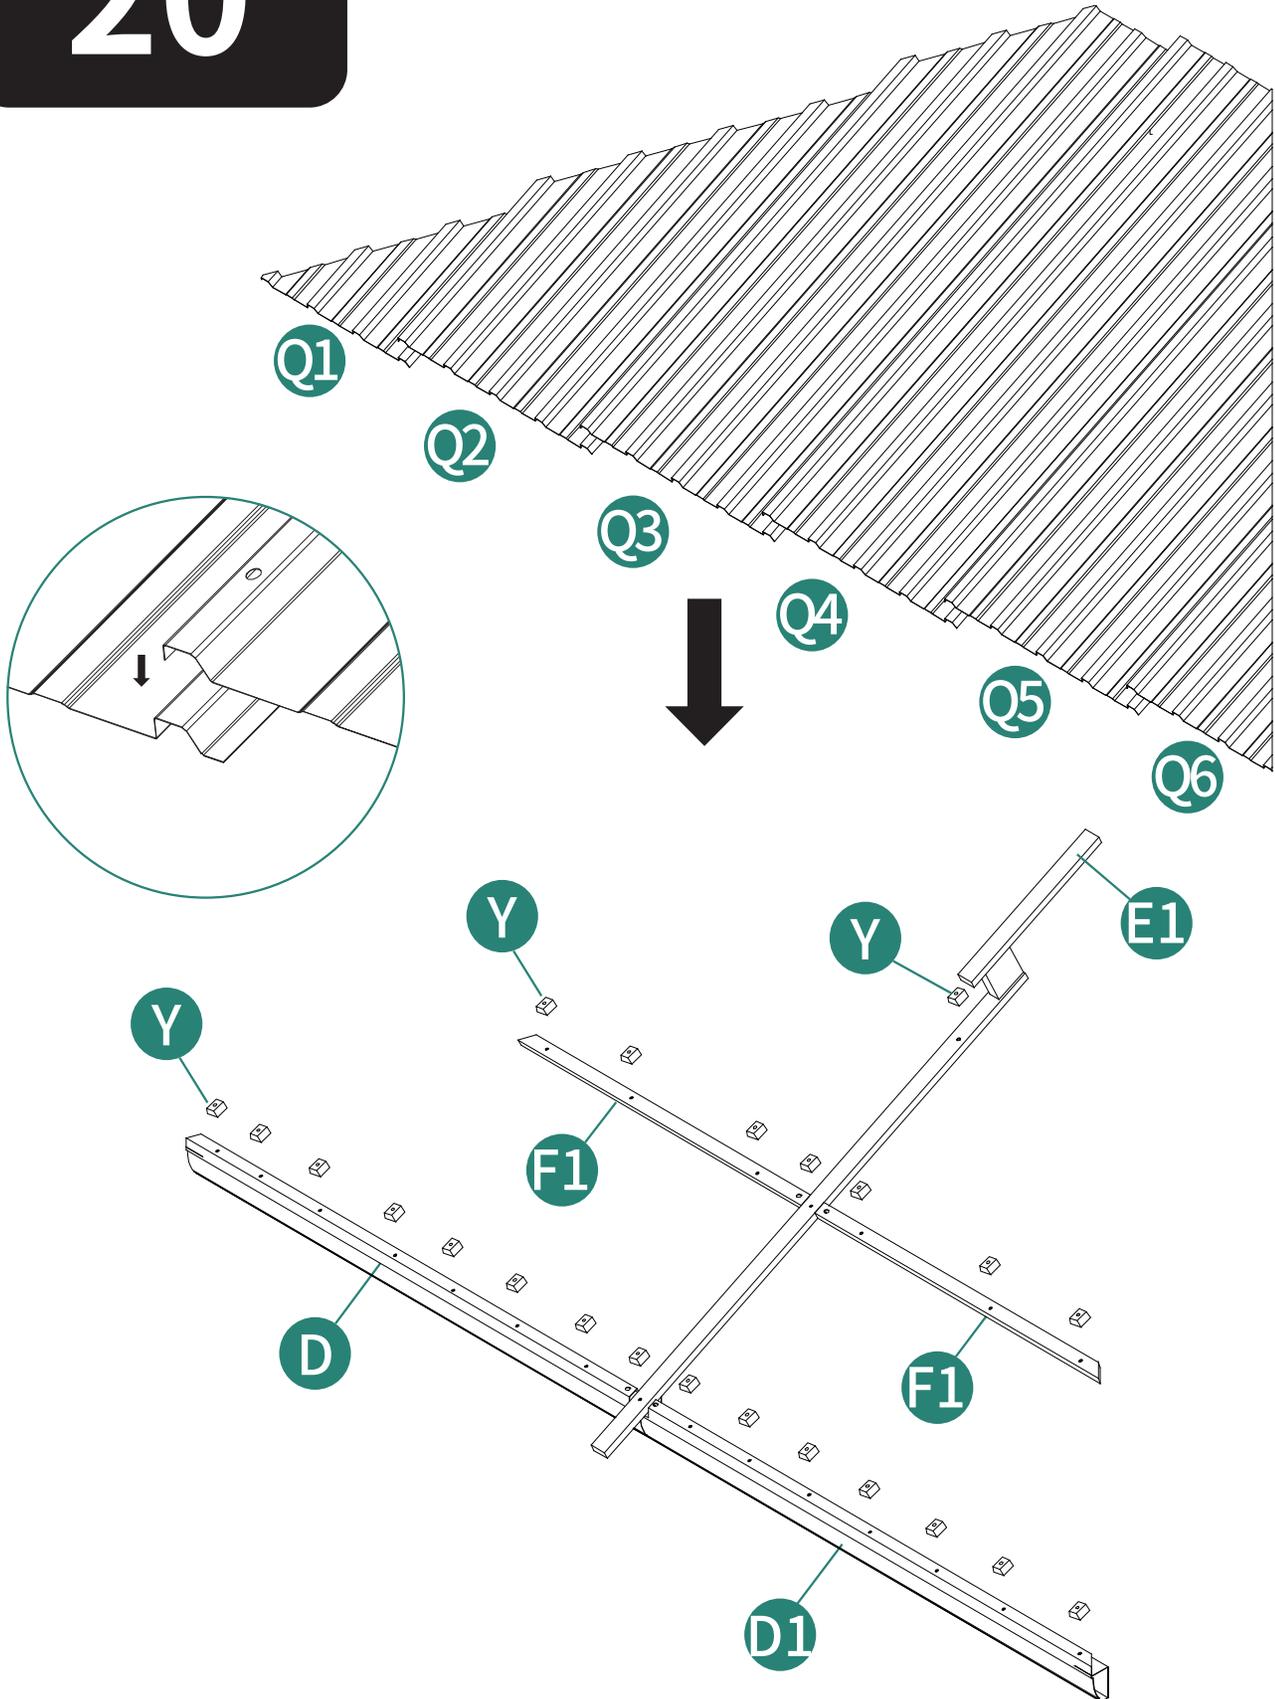


# 21

-   
 (Y) 92pcs
-   
 (2) 56pcs
-   
 (3) 8pcs
-   
 (6) 4pcs
-   
 (7) 24pcs

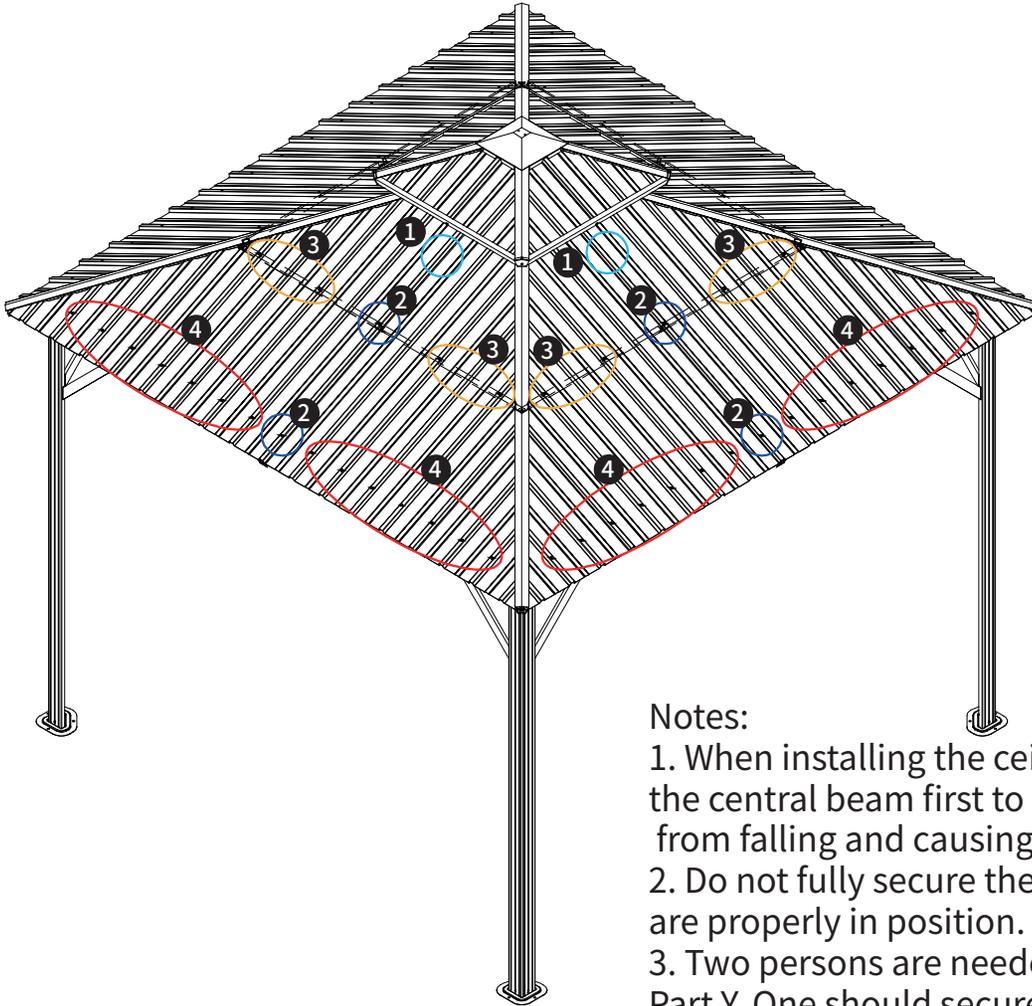


**Notes:**





1. When installing the ceiling, fix the screws on the central beam first to prevent the iron sheet from falling and causing injury.
2. Do not fully secure the screw until all screws are properly in position.
3. Two persons are needed when installing Part Y. One should secure Part Y's position from inside the gazebo, while the other inserts screws into Part Y from outside the gazebo.

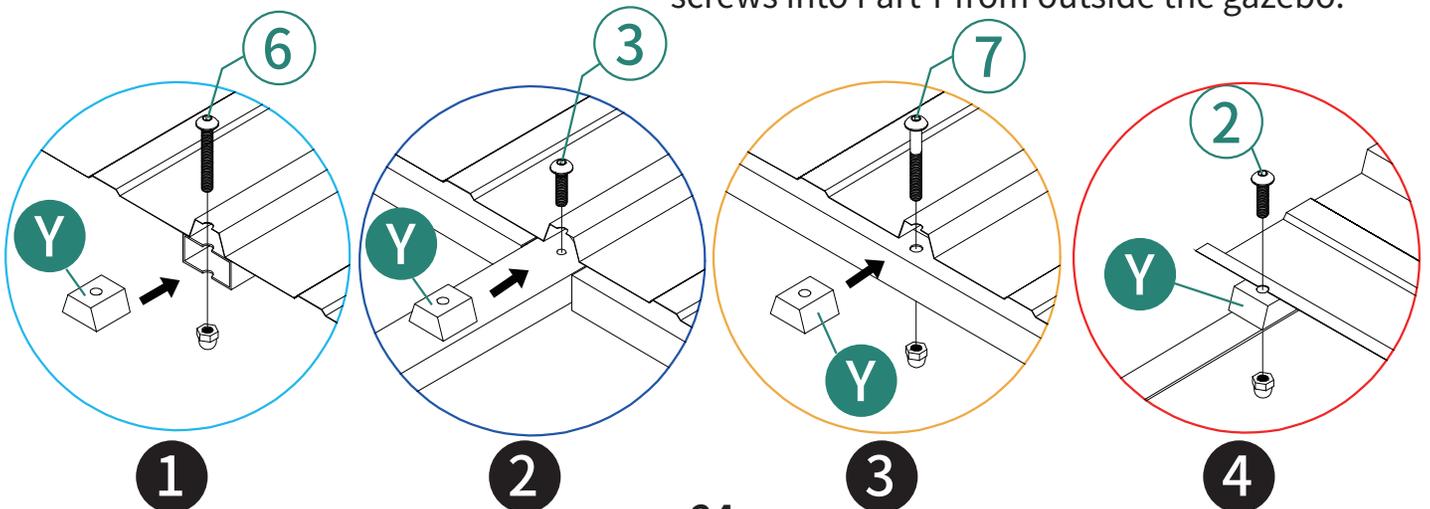


# 22







G5 4pcs G6 4pcs N 4pcs N1 4pcs 1 8pcs

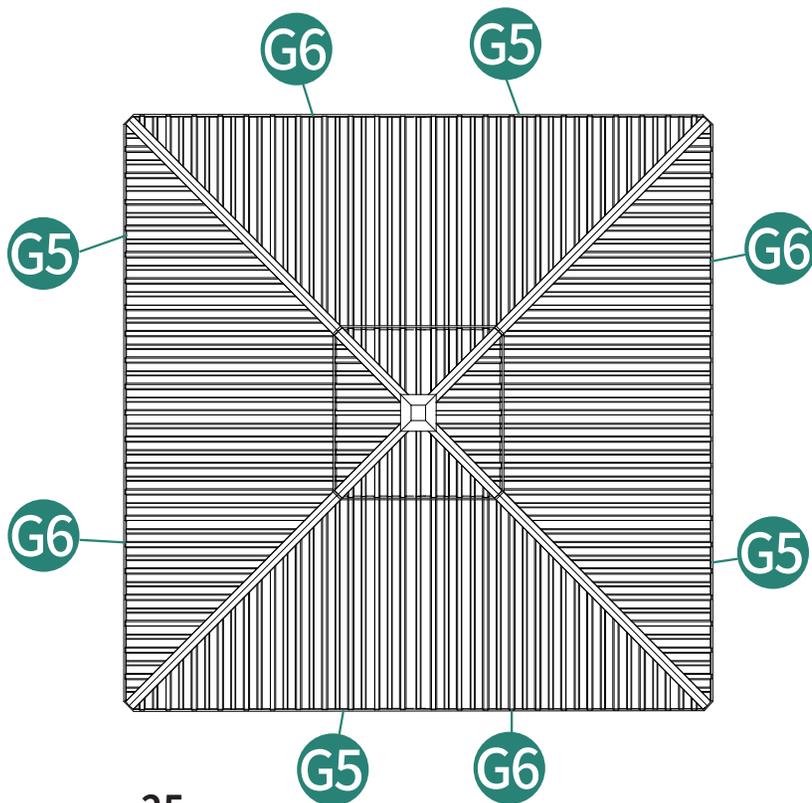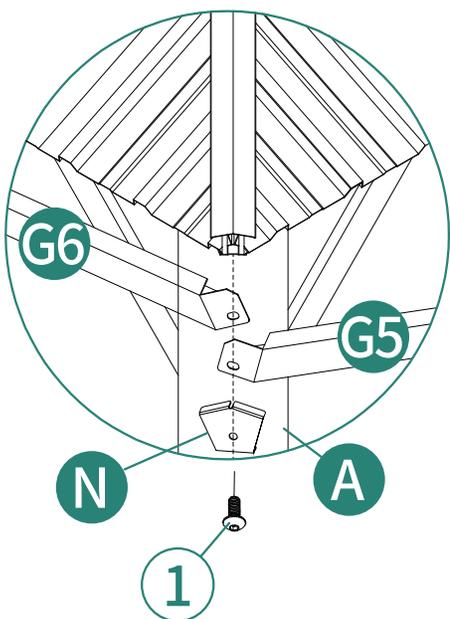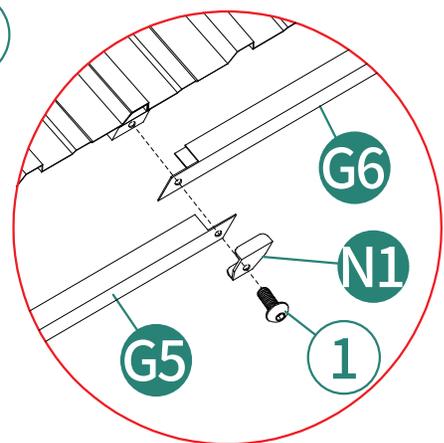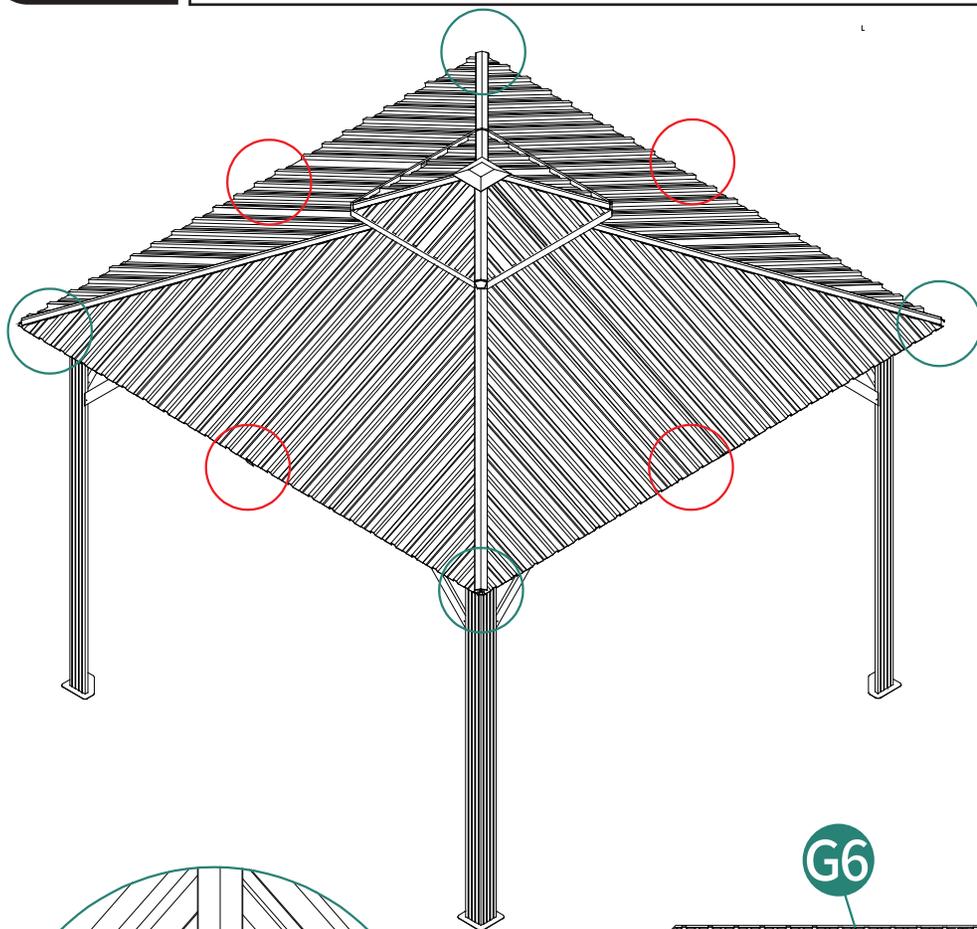




# 23



Ⓣ4pcs

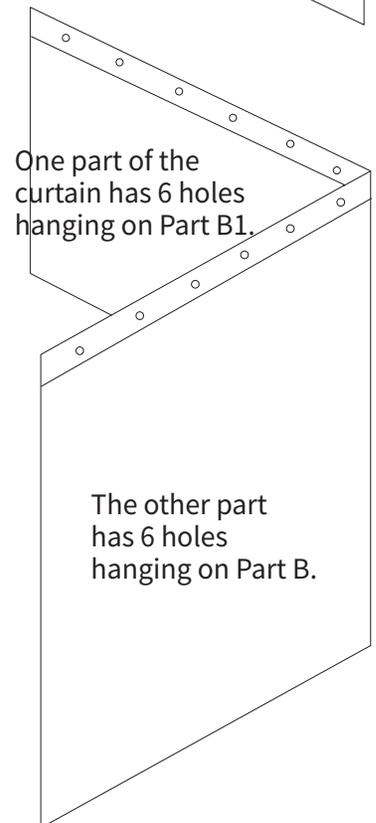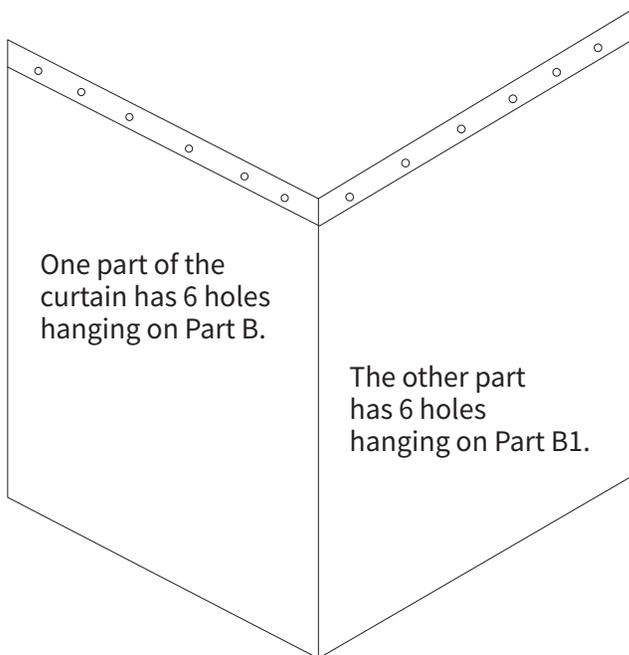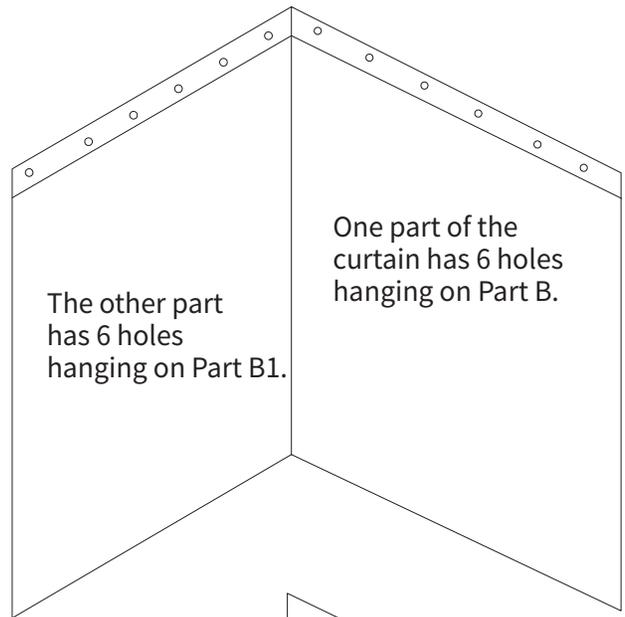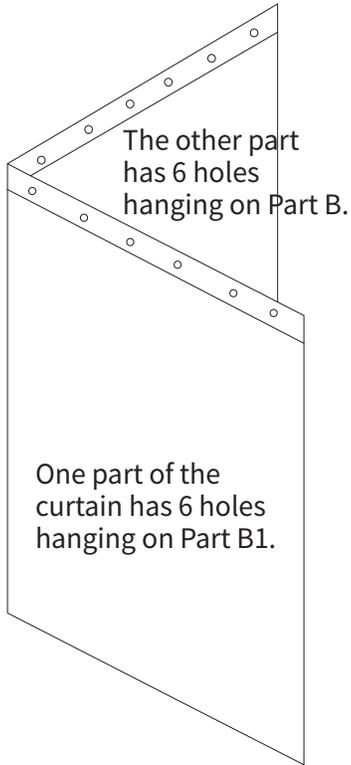


# 24


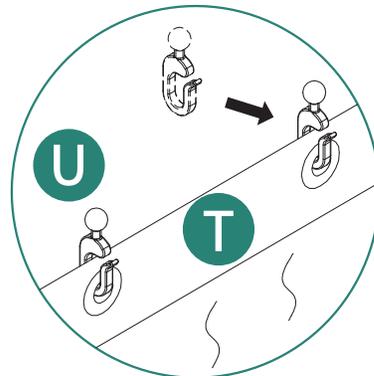
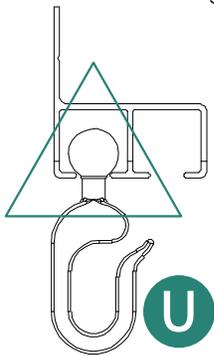
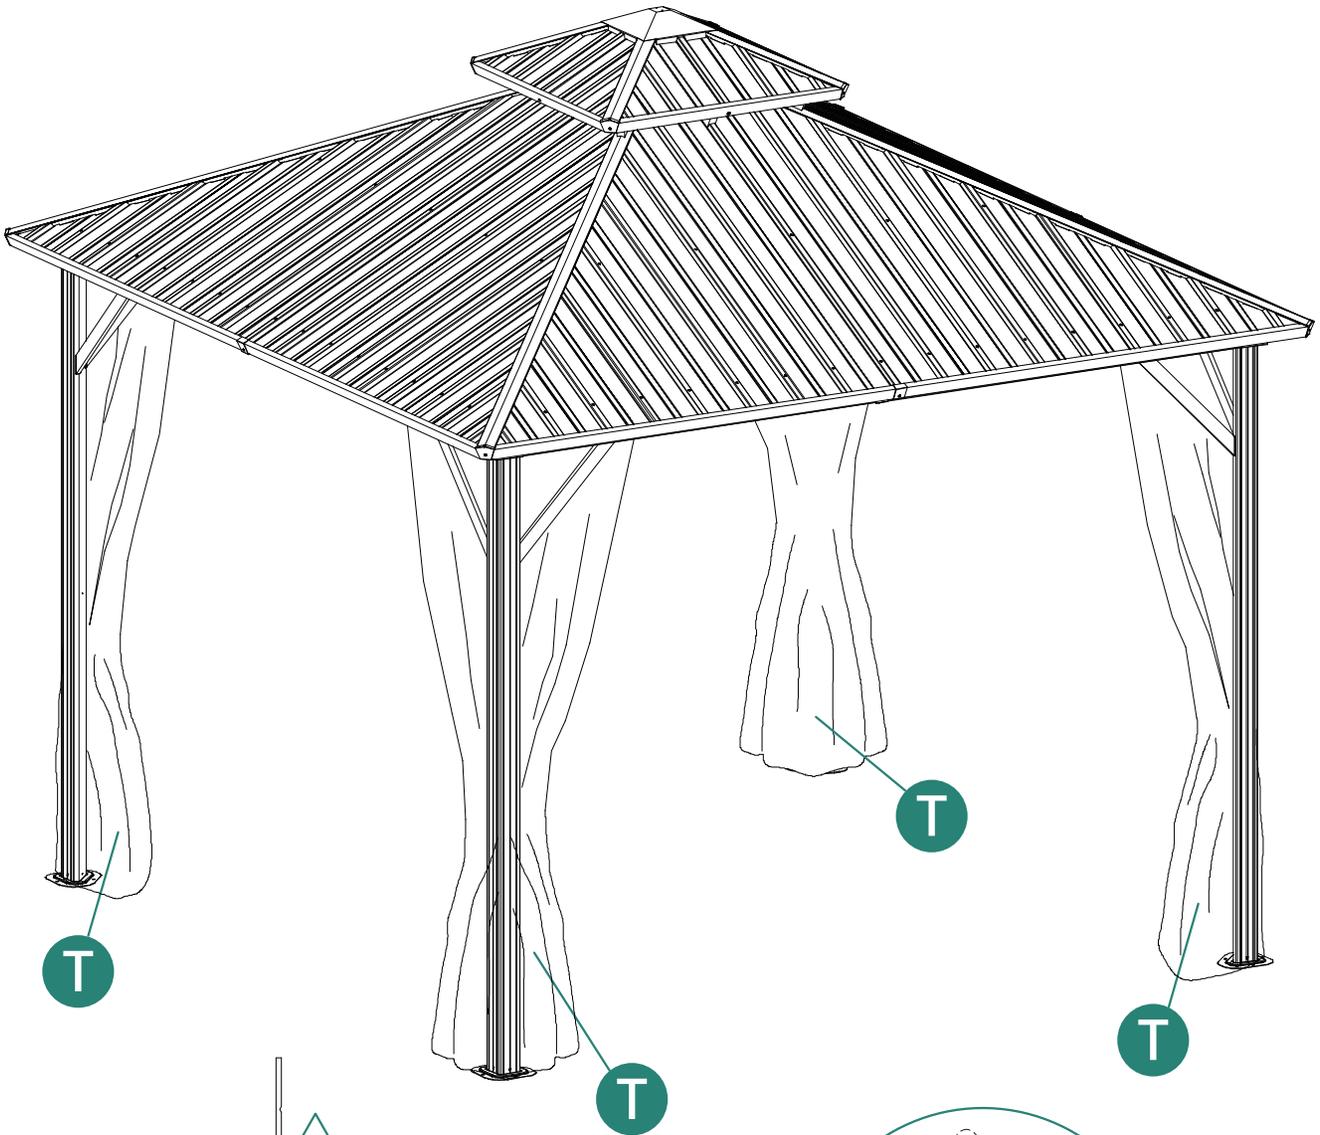


Pay attention to the sidewall curtain's installation position.



# 25




Ⓣ1 4pcs

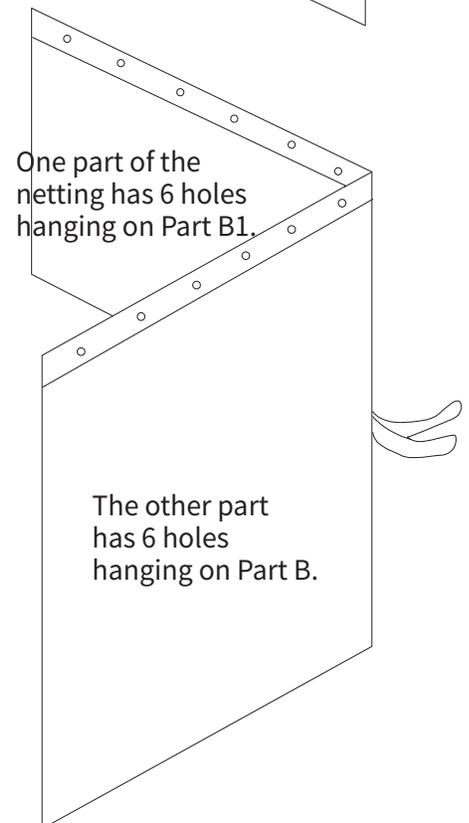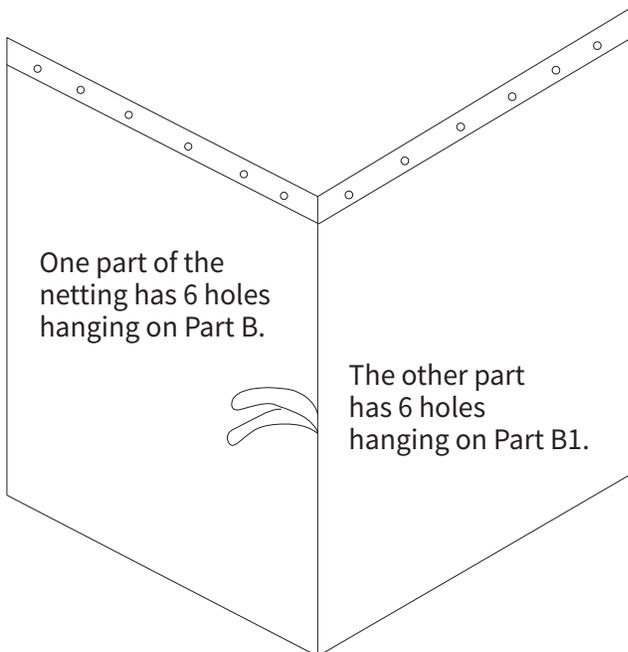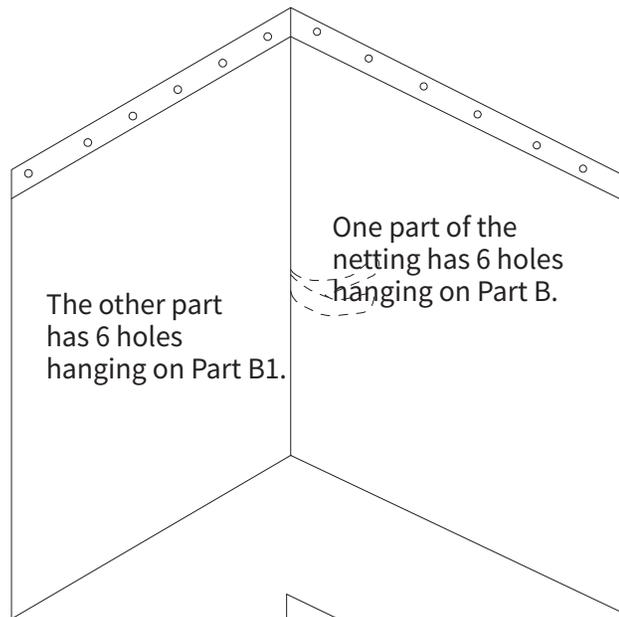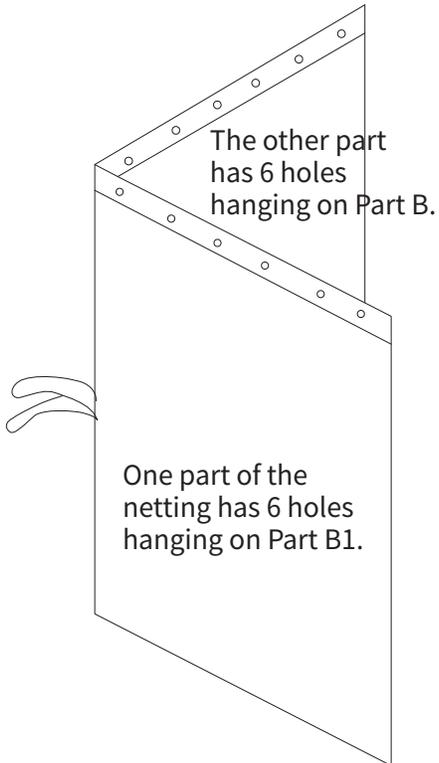

# 26

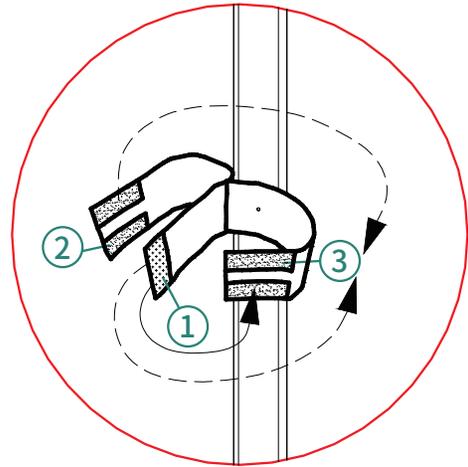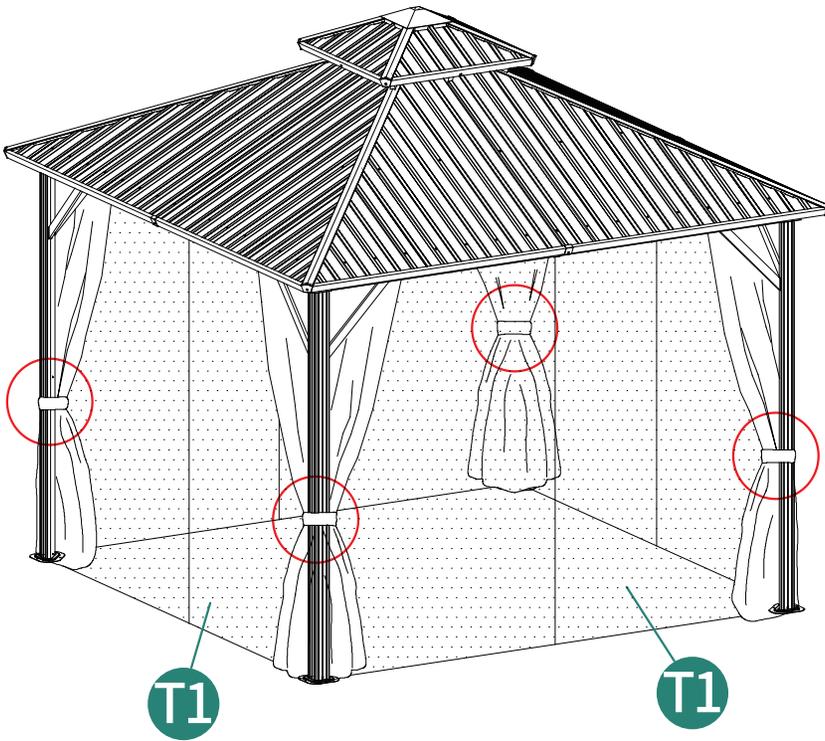

Note:  
Attach 1 to 2 to secure parts T1 and T (curtains) together.  
Attach 1 to 3 to secure the back curtain (T).  
Attach 1 to 3 to secure the front netting (T1).

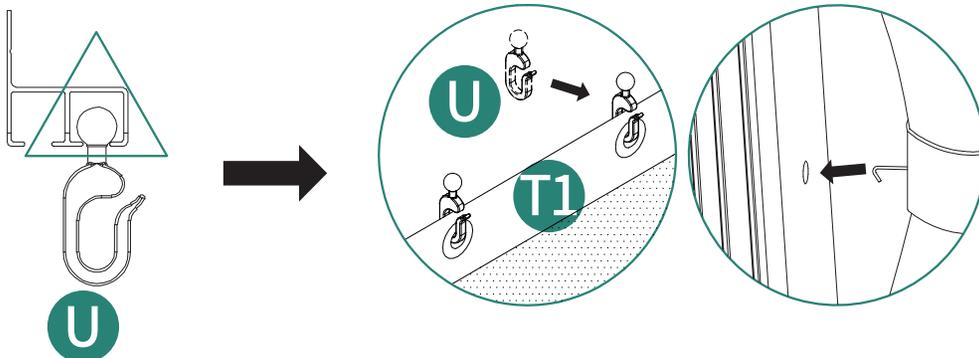


Pay attention to the sidewall netting's installation position.

Hang the hook attached to the netting on Part A.

# 27



⑨12pcs

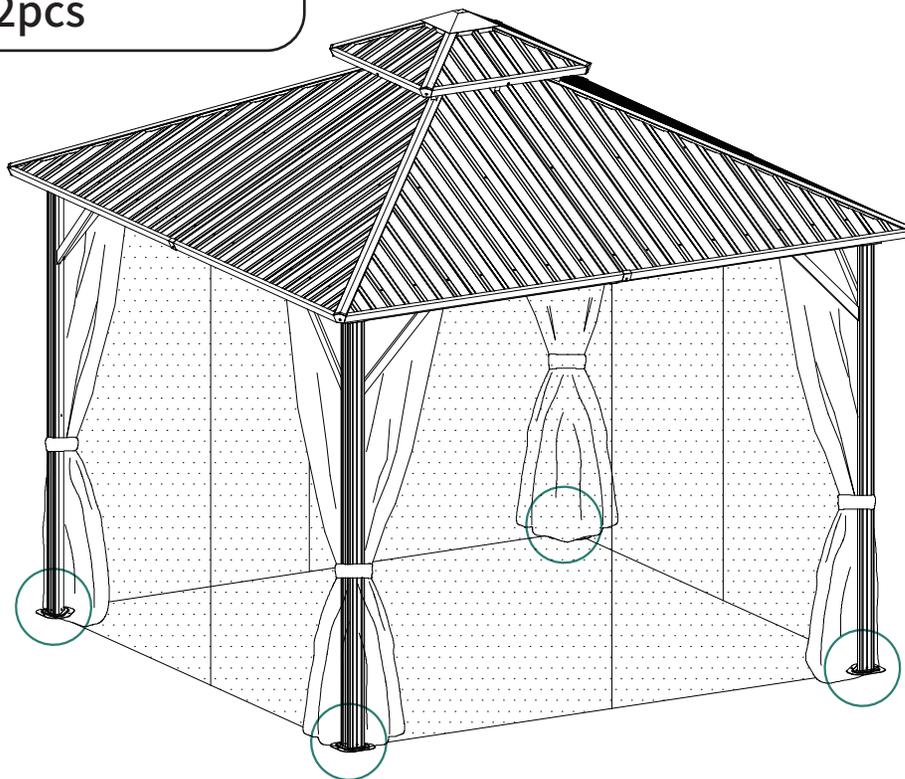

To improve wind resistance, **be sure to complete this installation step. If expansion screws or ground nails are not installed, strong winds may topple the gazebo.**

Expansion screws are essential for stability on cement surfaces, and ground nails are for grassy surfaces. All are included in the accessories package.

