

BUNK BED QUEEN
ASSEMBLY INSTRUCTIONS

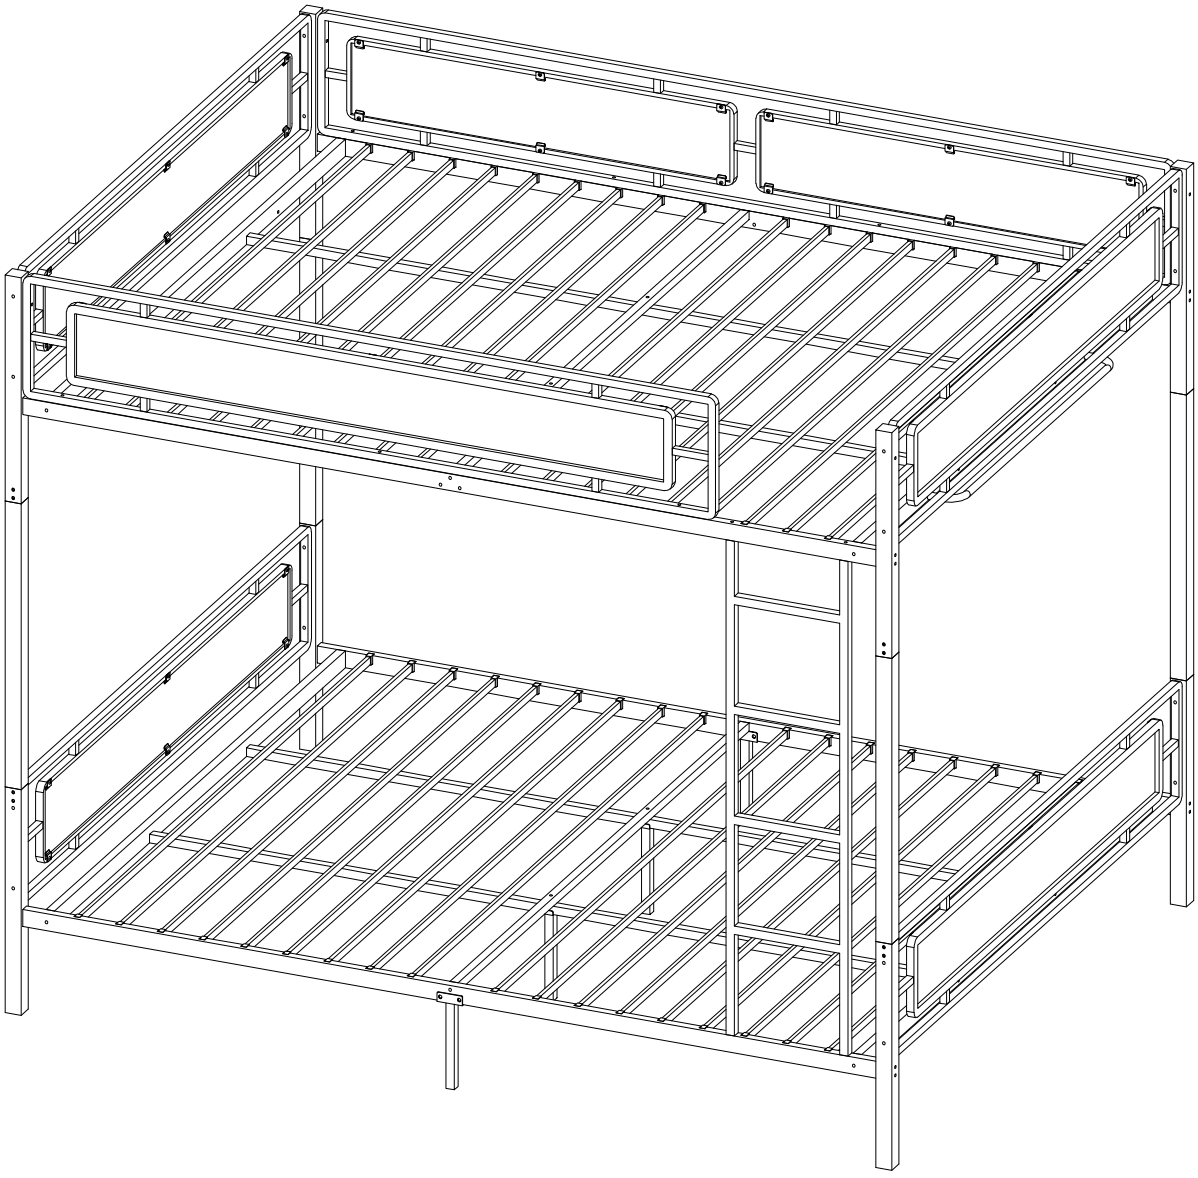







Attention

Please use the screws correctly according to the instructions.
Thank you.


Part List

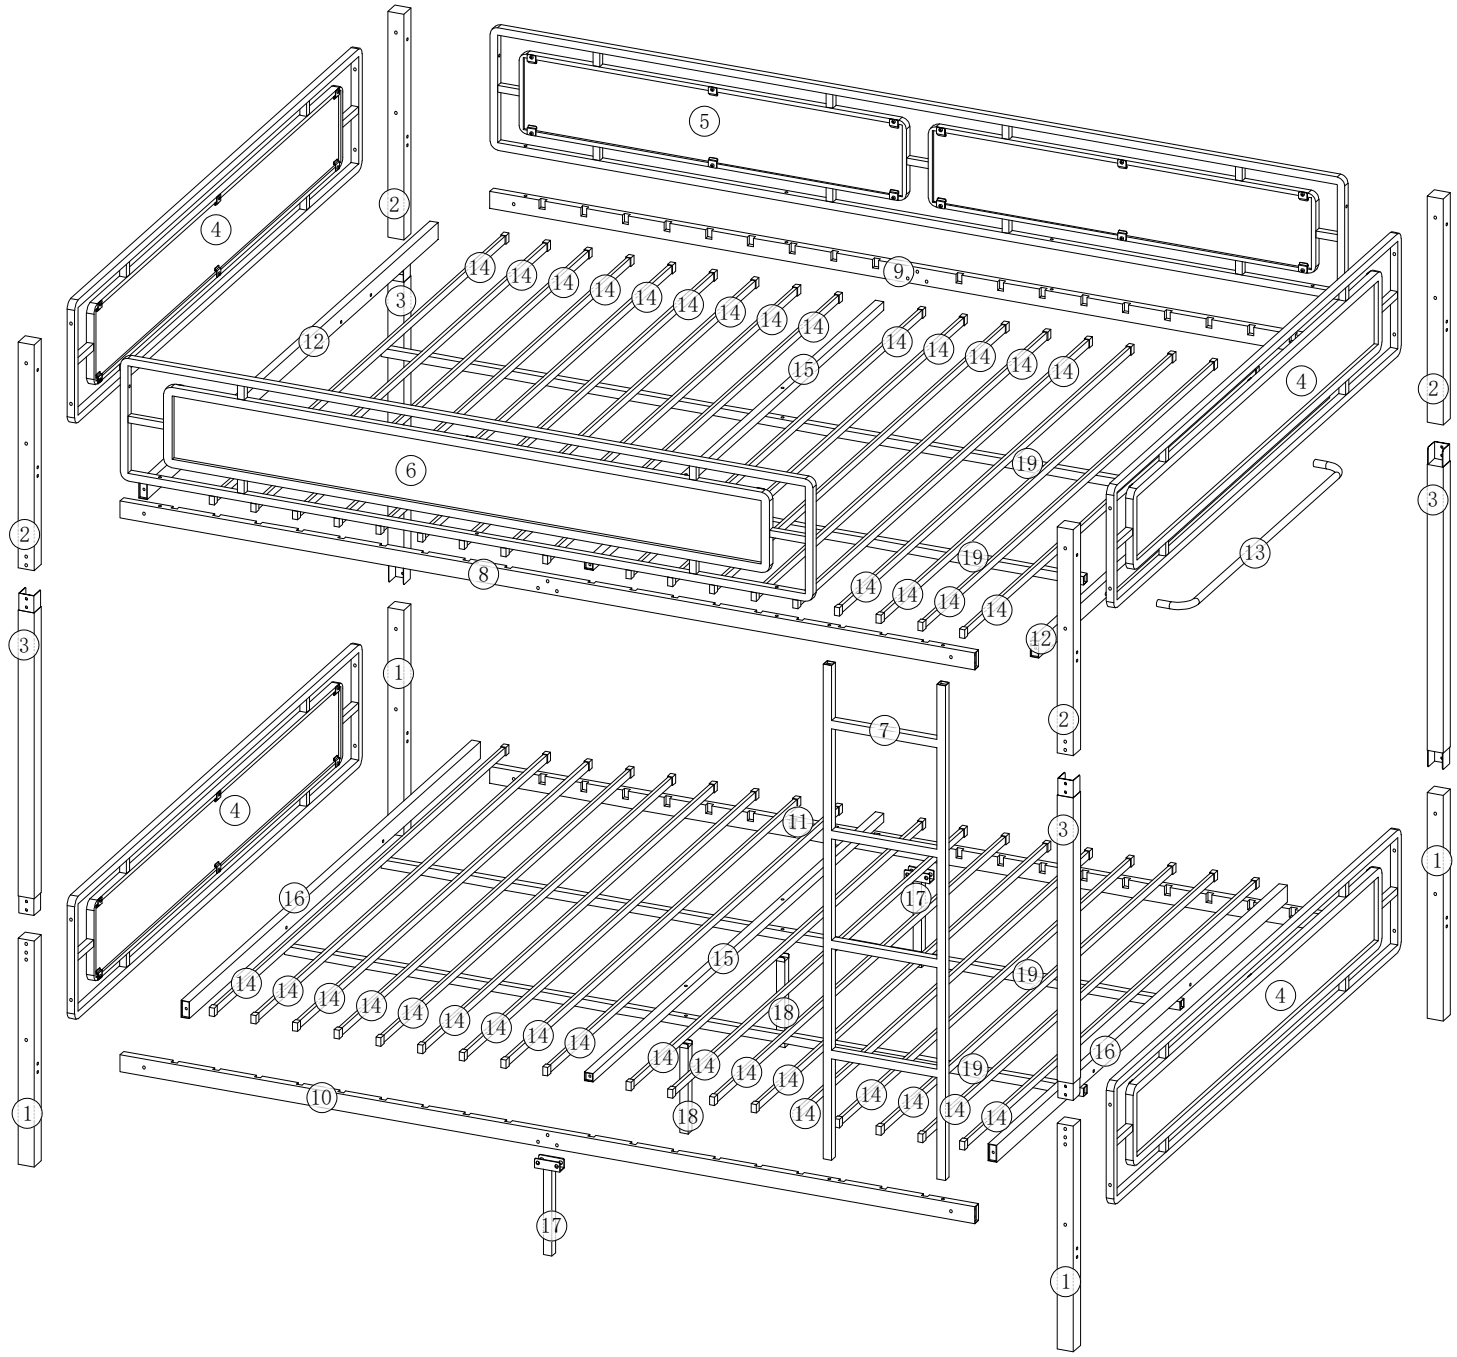


Parts view

 1-4pcs	 2-4pcs	 3-4pcs	 4-4pcs
 5-1pcs	 6-1pcs	 7-1pcs	8-1pcs
9-1pcs	10-1pcs	11-1pcs	12-2pcs
 13-1pcs	14-36pcs	15-2pcs	16-2pcs
 17-4pcs	 18-4pcs	19-4pcs	

Hardware List


 A M6*55mm--21PCS	 B M6*50mm--32PCS	 C M6*35mm--25PCS	 D M6*12mm--25PCS	 E M6*17mm--38PCS
 F 4mm--4PCS	 G 38*38mm--8PCS	 H 2PCS	 I 14PCS	 J 2PCS
 K 4*35mm--2PCS				

Step 1

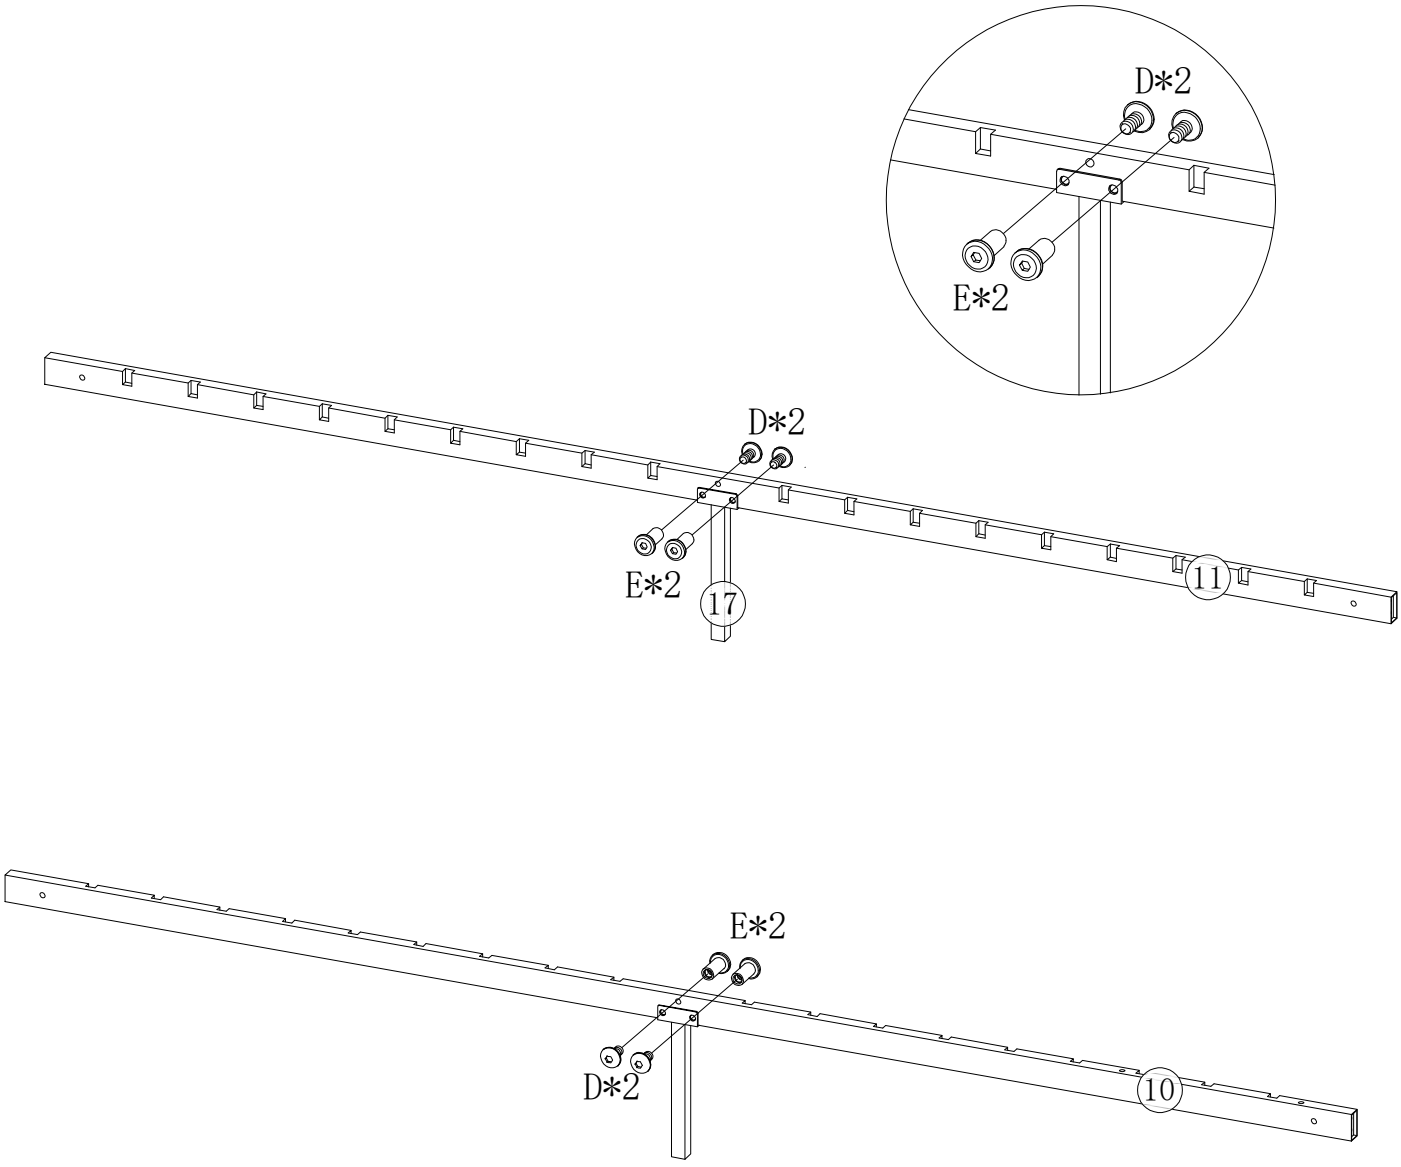


D M6*12mm--4PCS	E M6*17mm--4PCS	F 4mm--2PCS		

Step 2

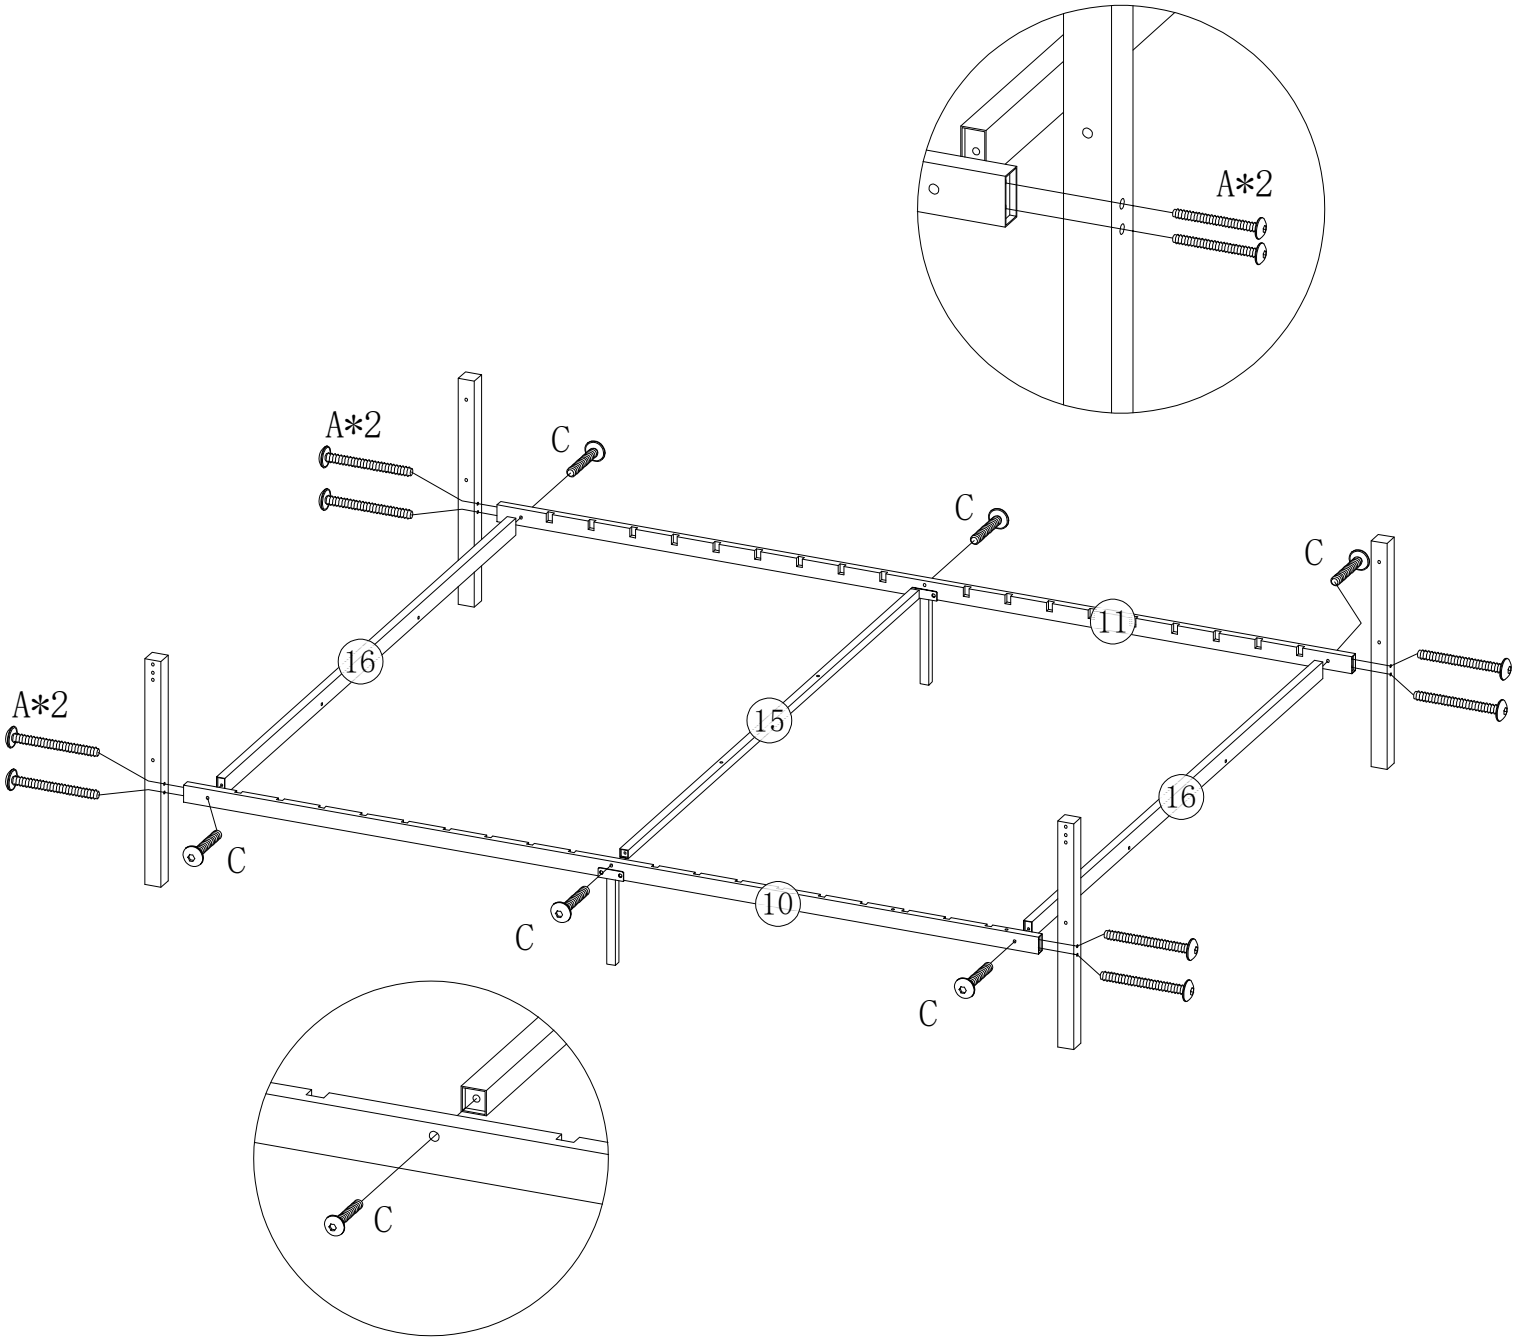


A M6*55mm--8PCS	C M6*35mm--6PCS	F 4mm--1PCS		


Step 3

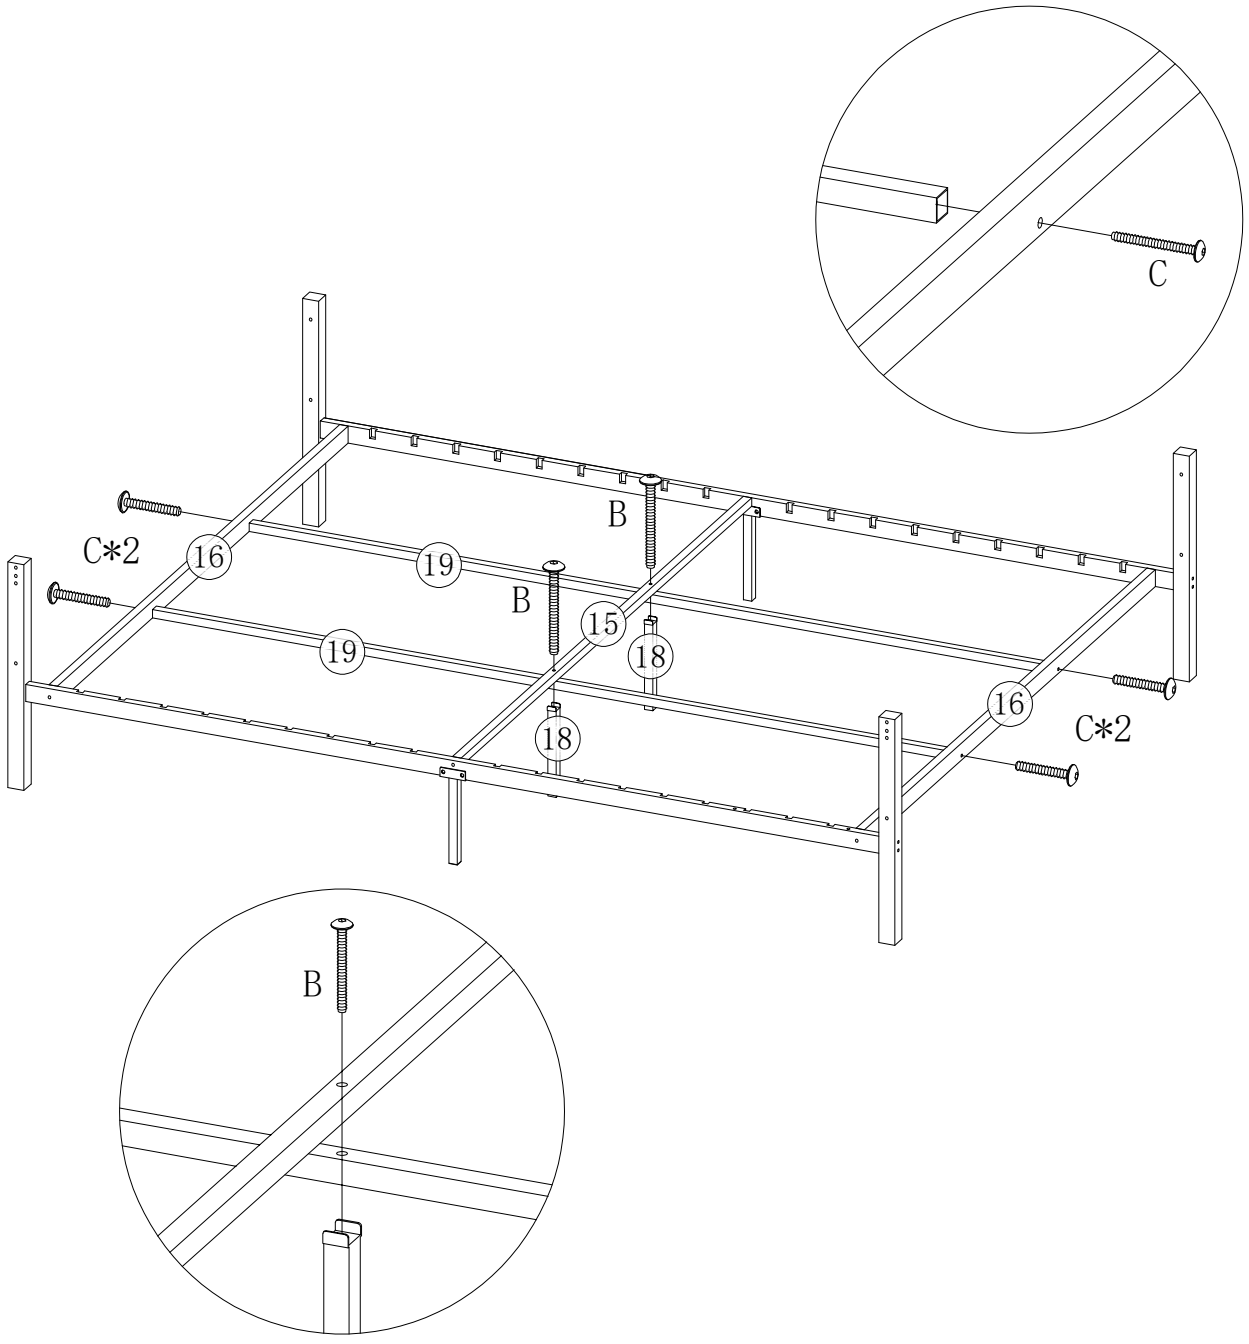


B M6*50mm--2PCS	C M6*35mm--4PCS	F 4mm--1PCS		

Step 4

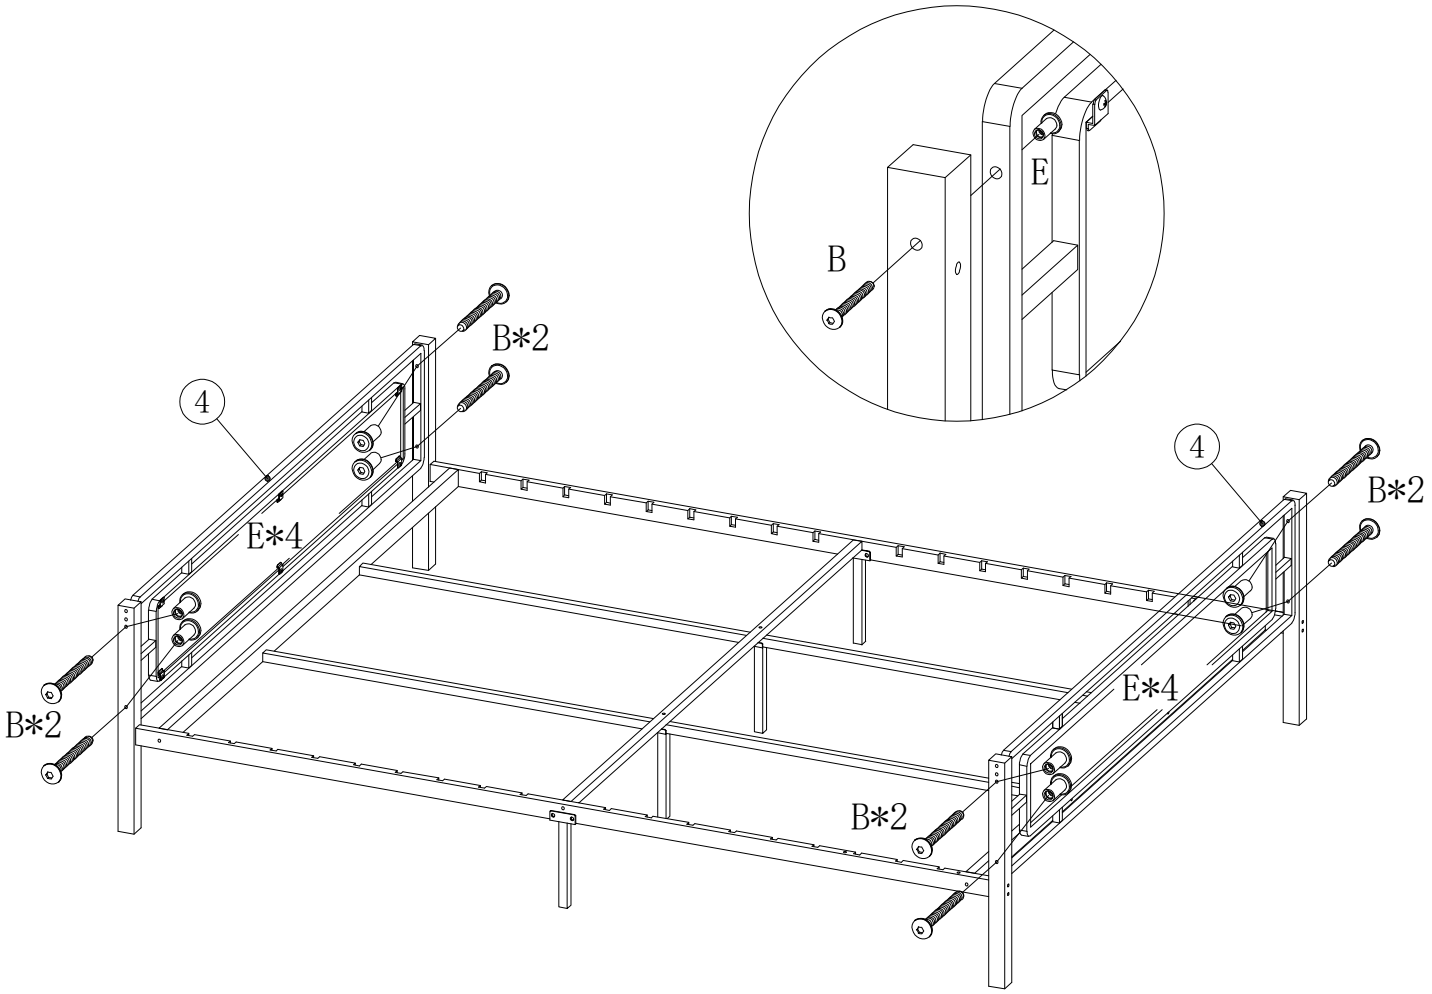


				
B M6*50mm--8PCS	E M6*17mm--8PCS	F 4mm--2PCS		

Step 5

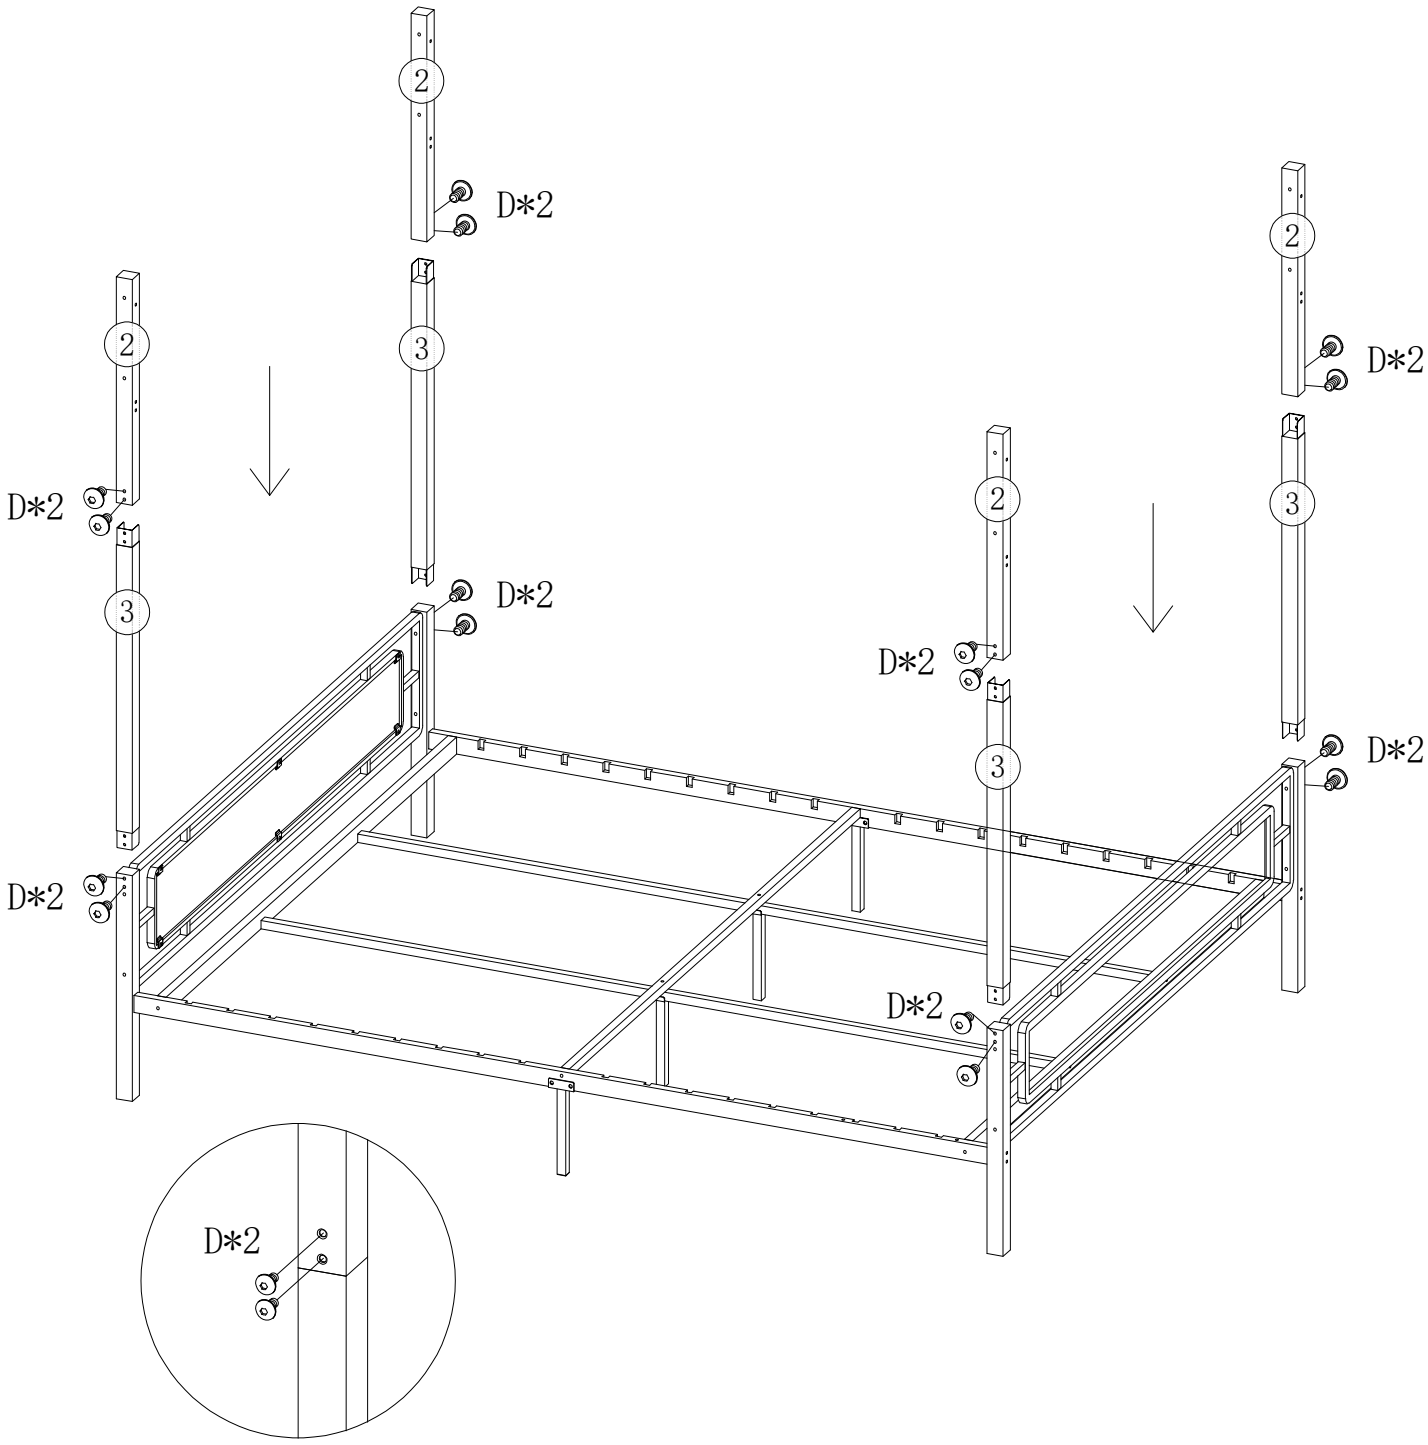


D M6*12mm--16PCS	F 4mm--1PCS			

Step 6

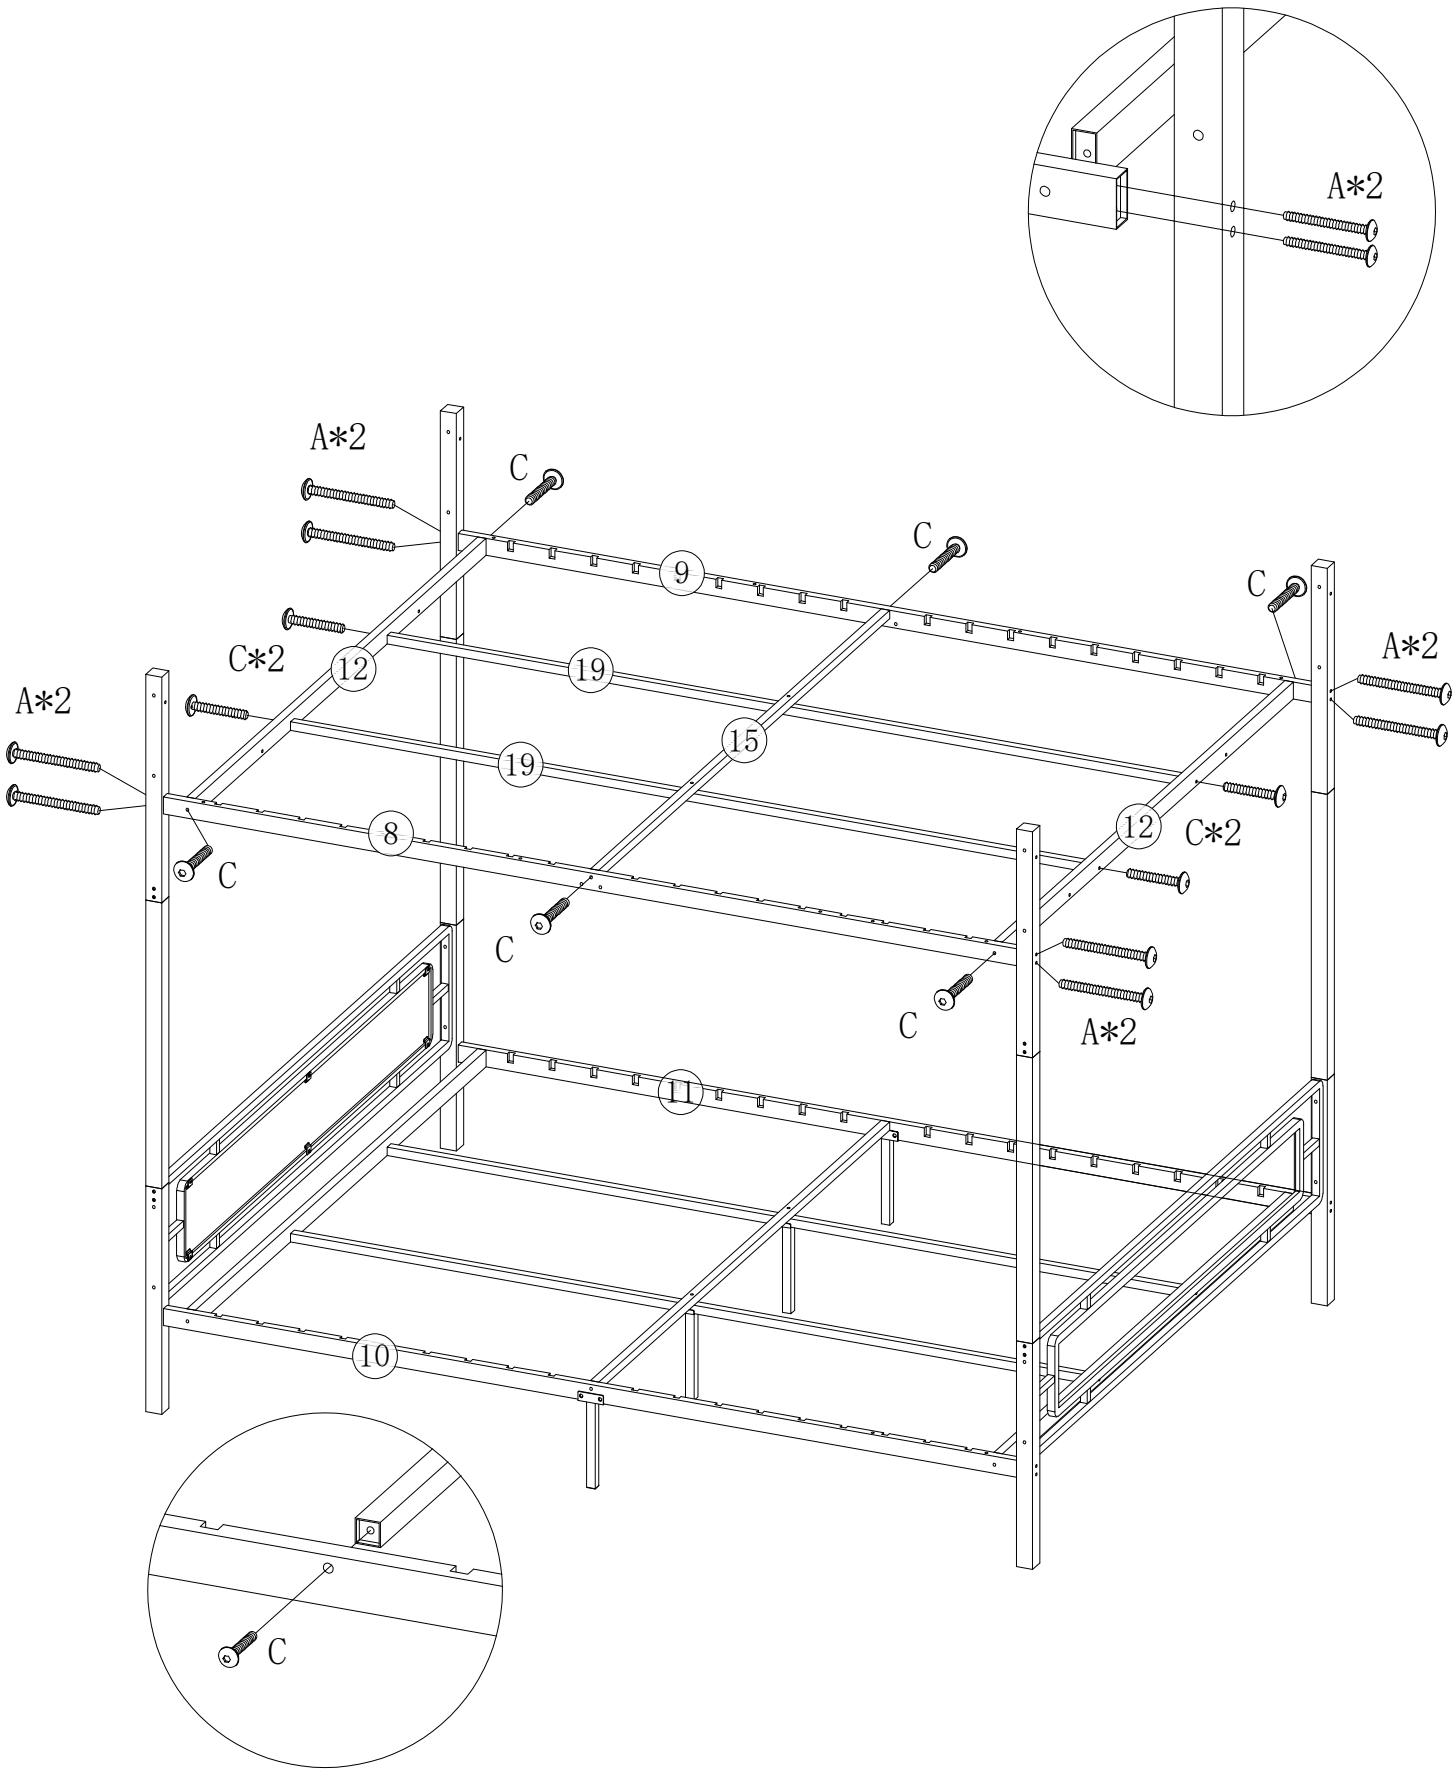


A M6*55mm--8PCS	C M6*35mm--10PCS	F 4mm--1PCS		


Step 7

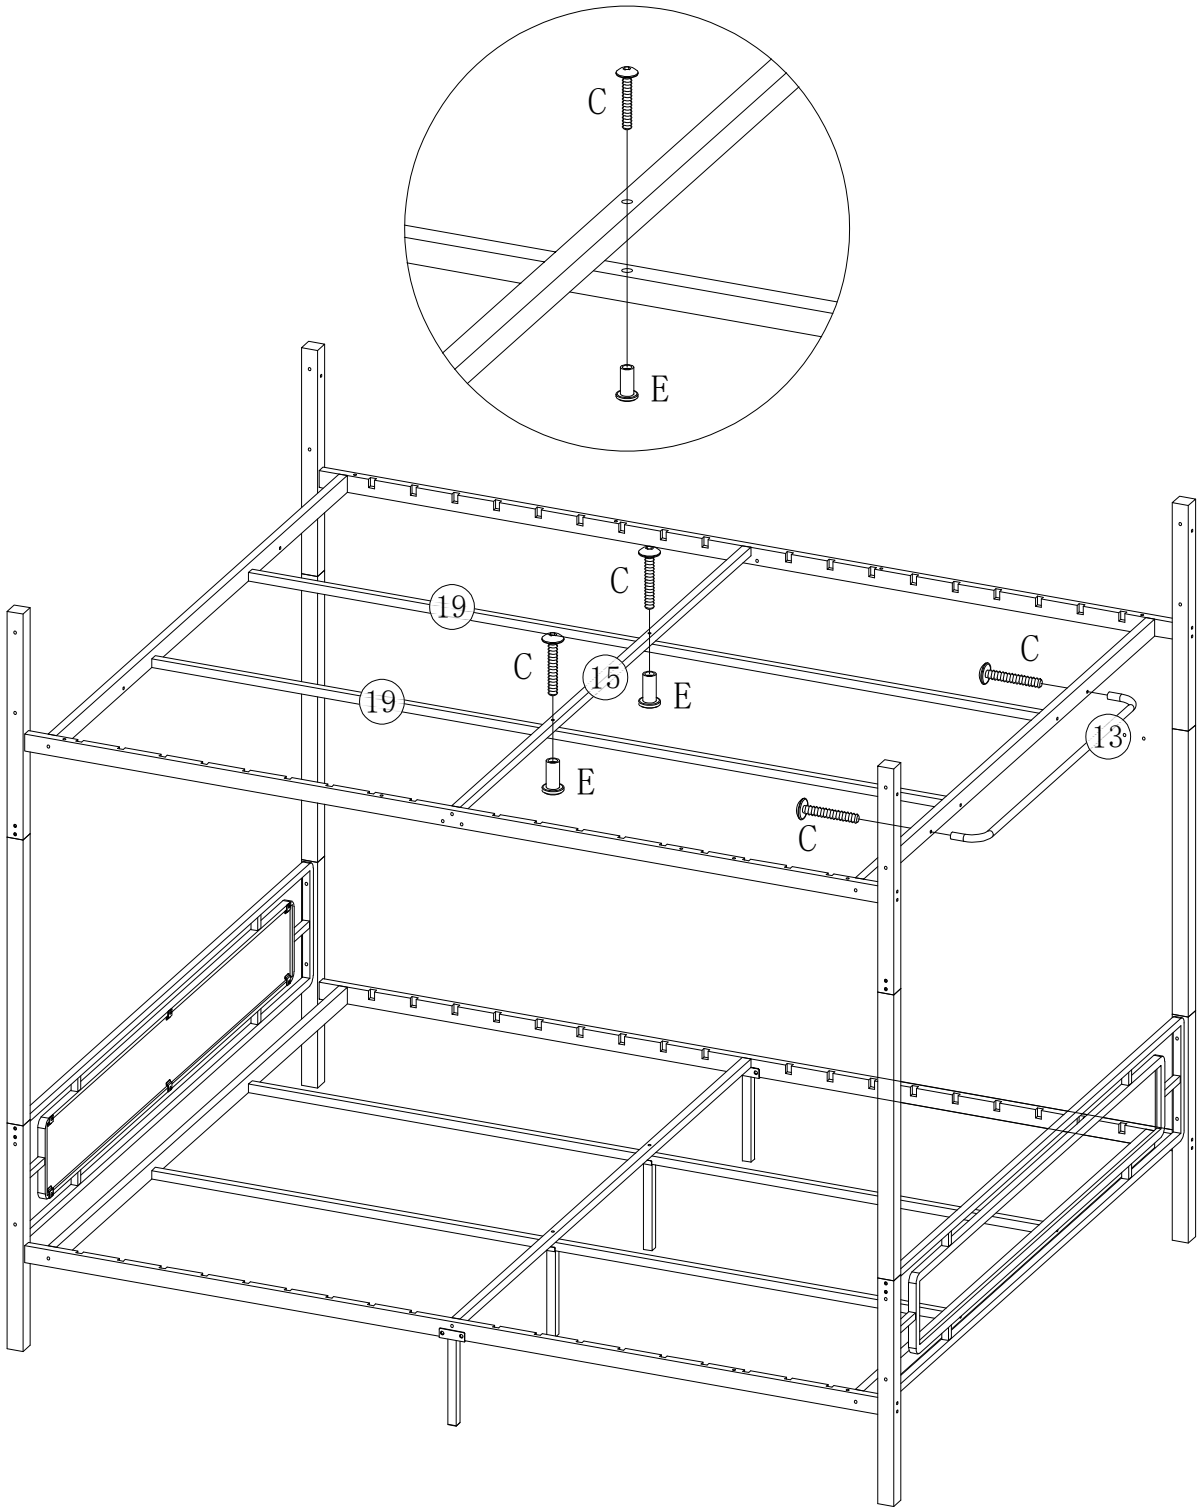


 C M6*35mm--4PCS	 E M6*17mm--2PCS	 G 4mm--1PCS		

Step 8

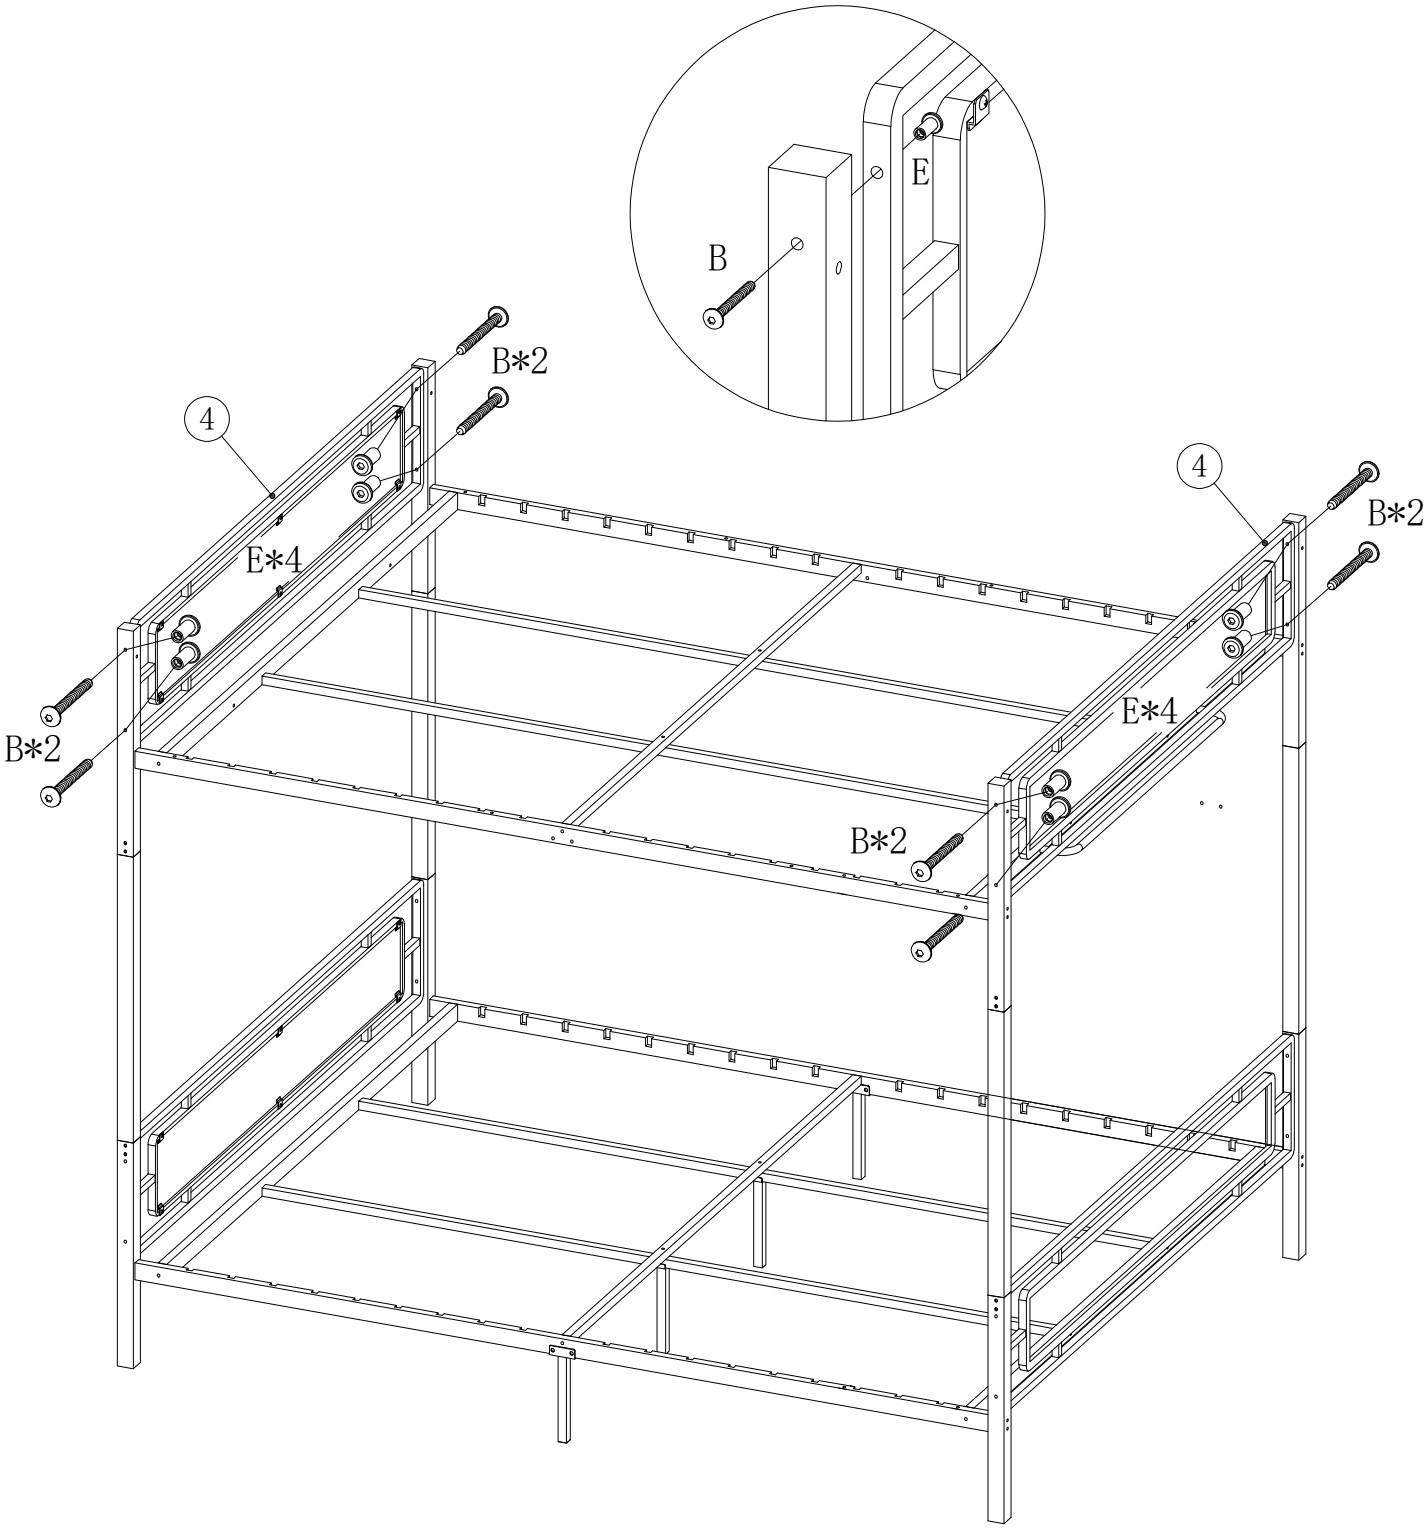


				
B M6*50mm--8PCS	E M6*17mm--8PCS	F 4mm--1PCS		

Step 9

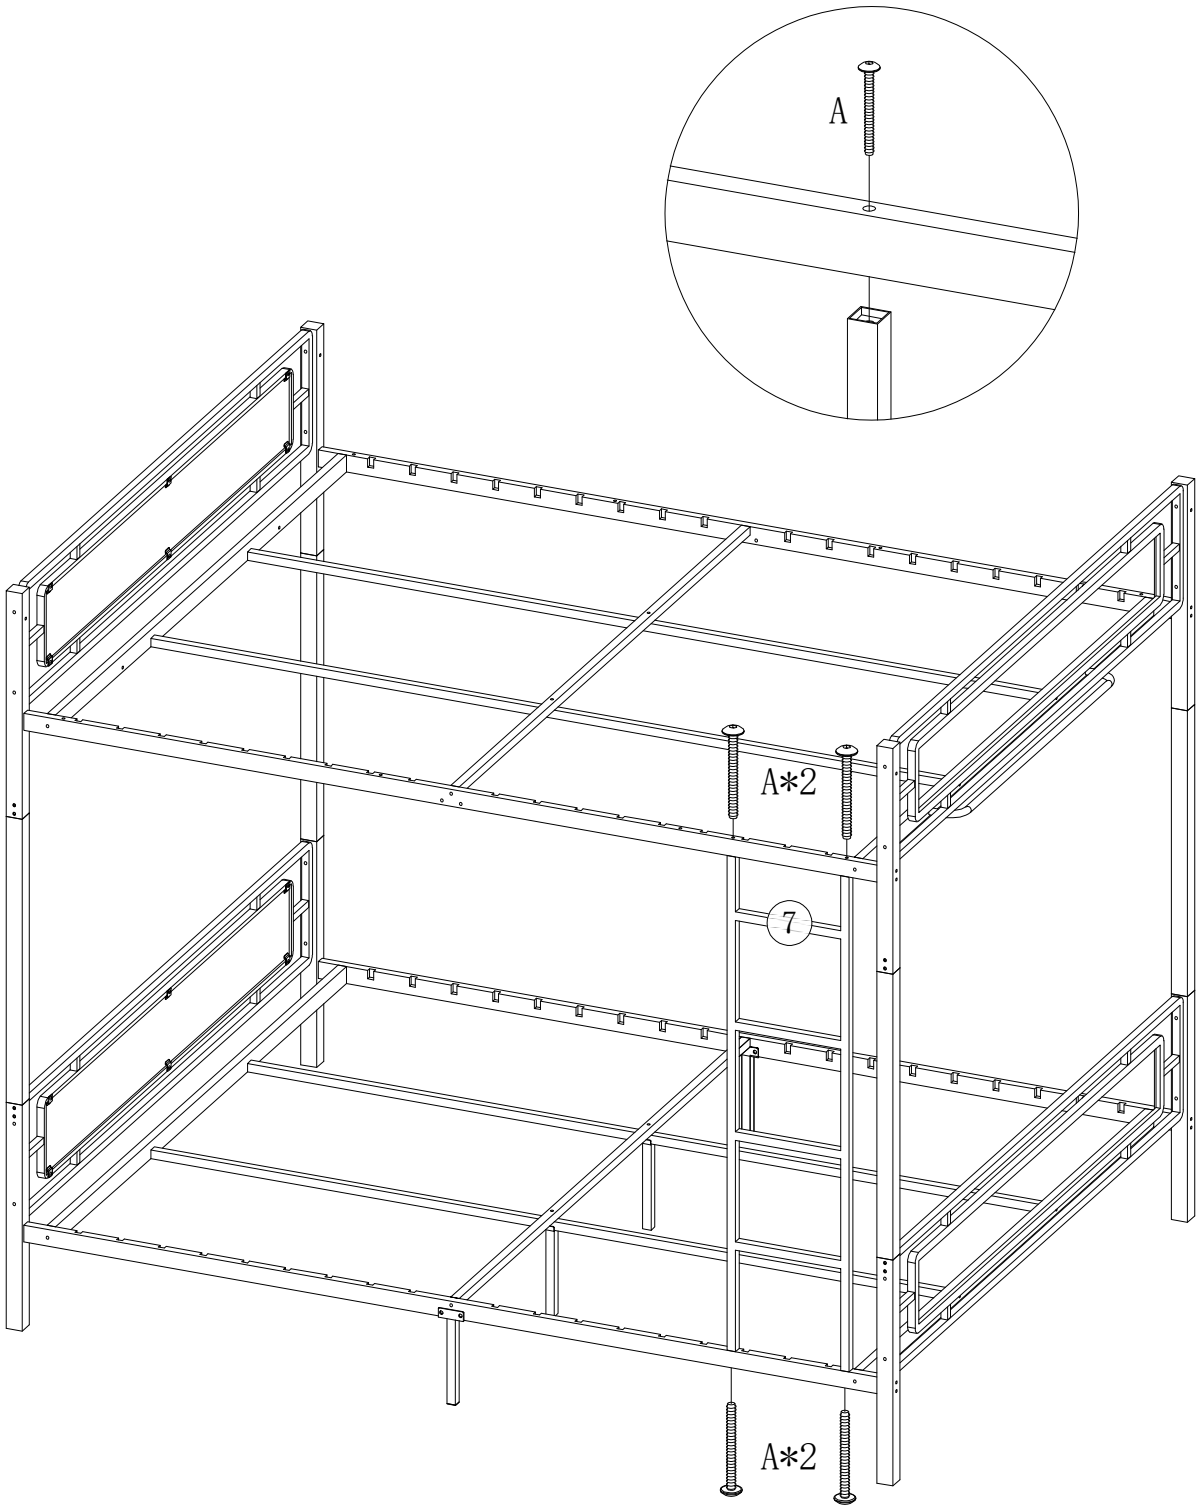


 A M6*55mm--4PCS	 F 4mm--1PCS			

Step 10

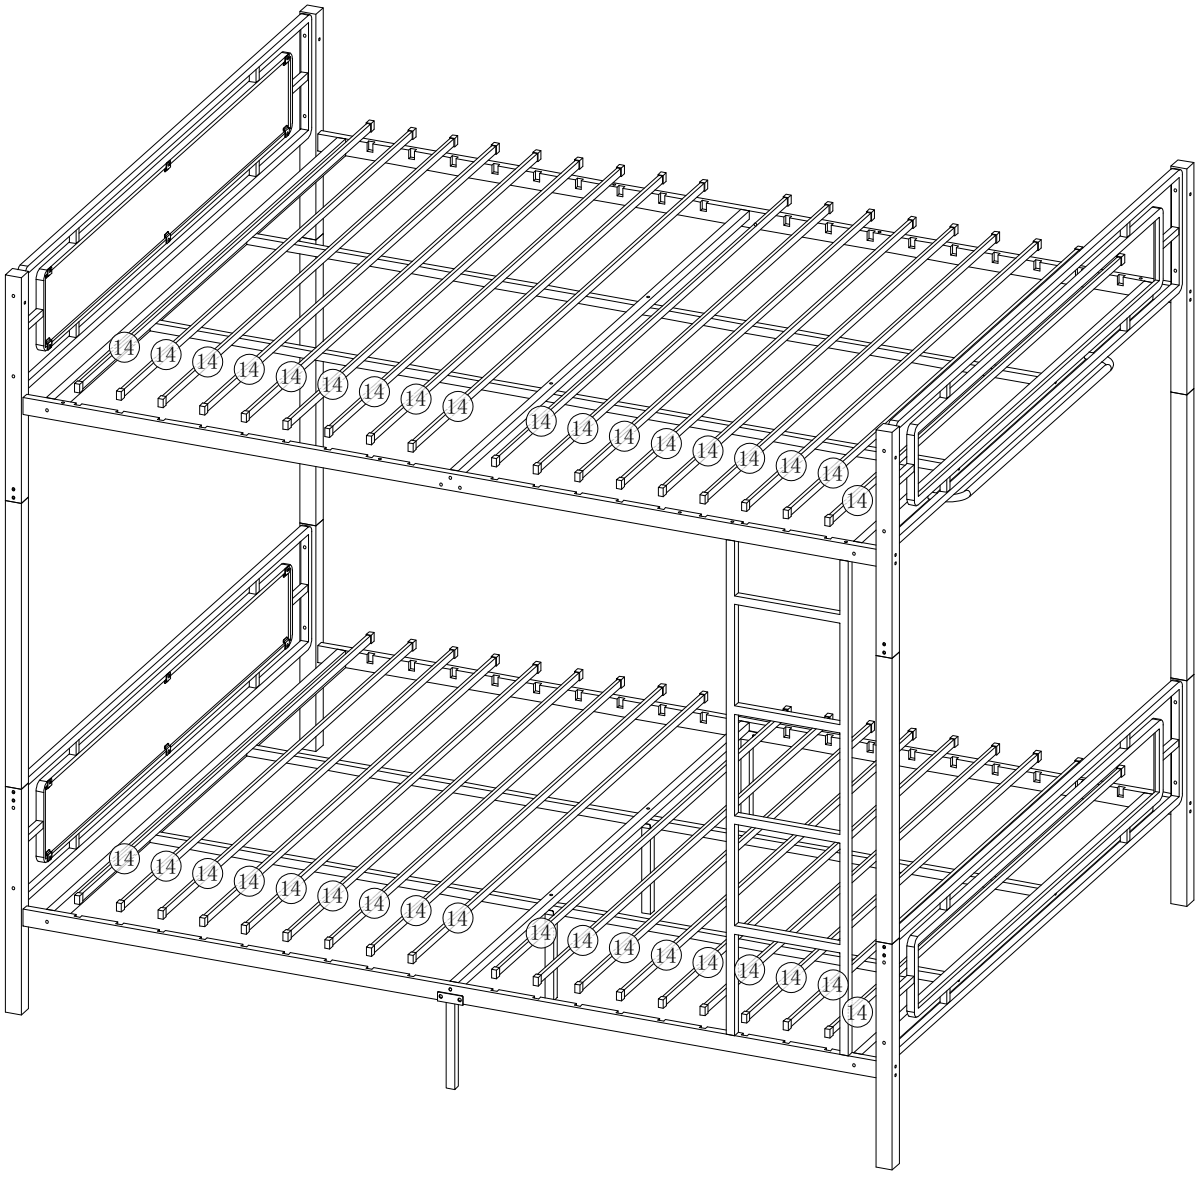


Step 11

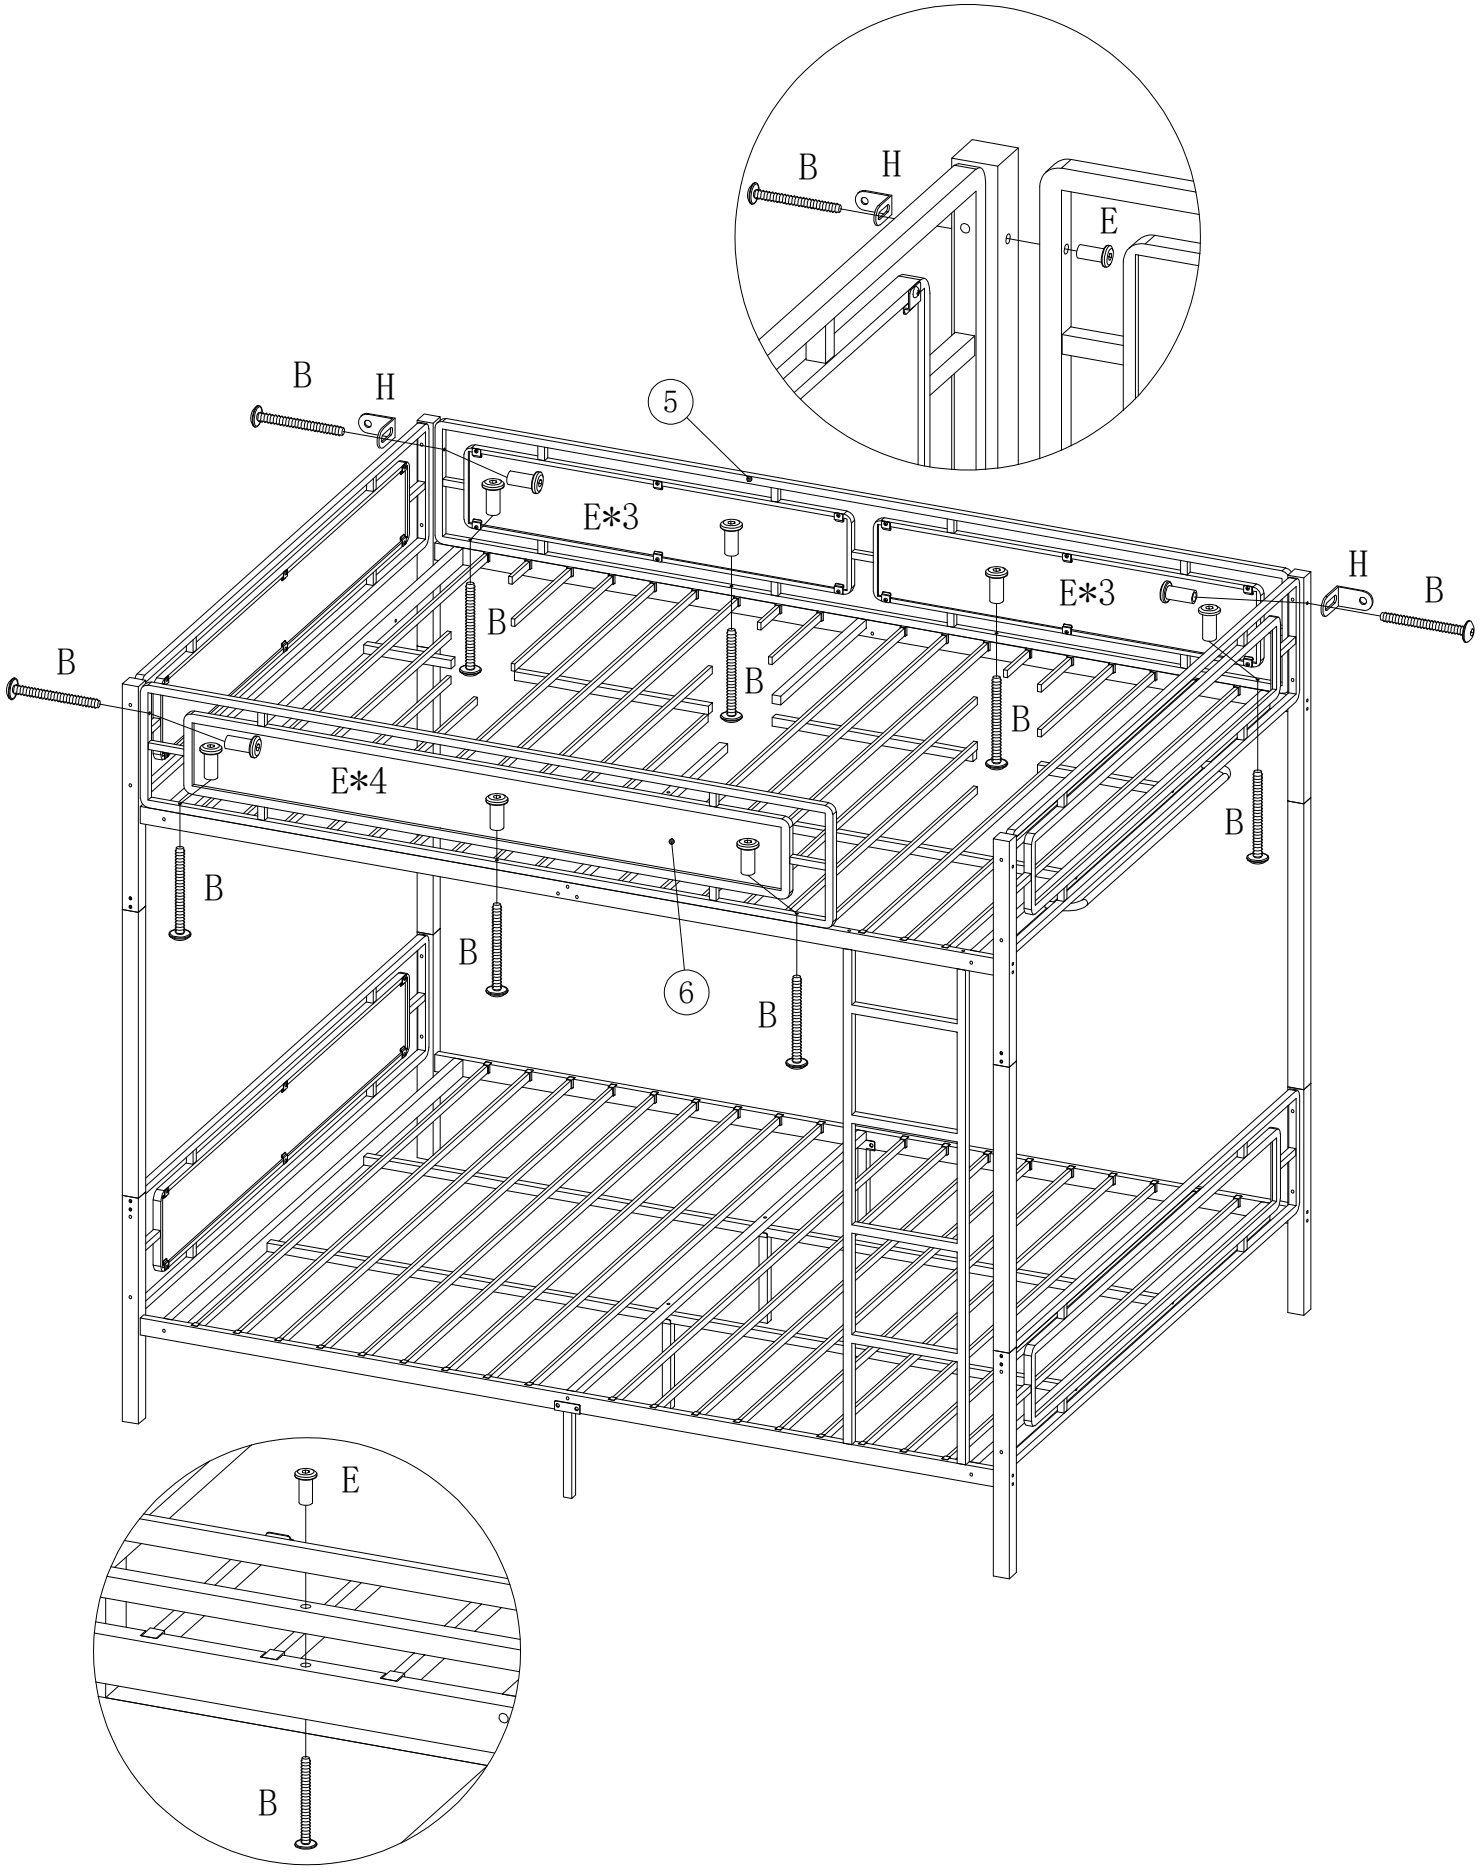


B M6*50mm--10PCS	E M6*17mm--10PCS	H 2PCS	F 4mm--2PCS	

Completed

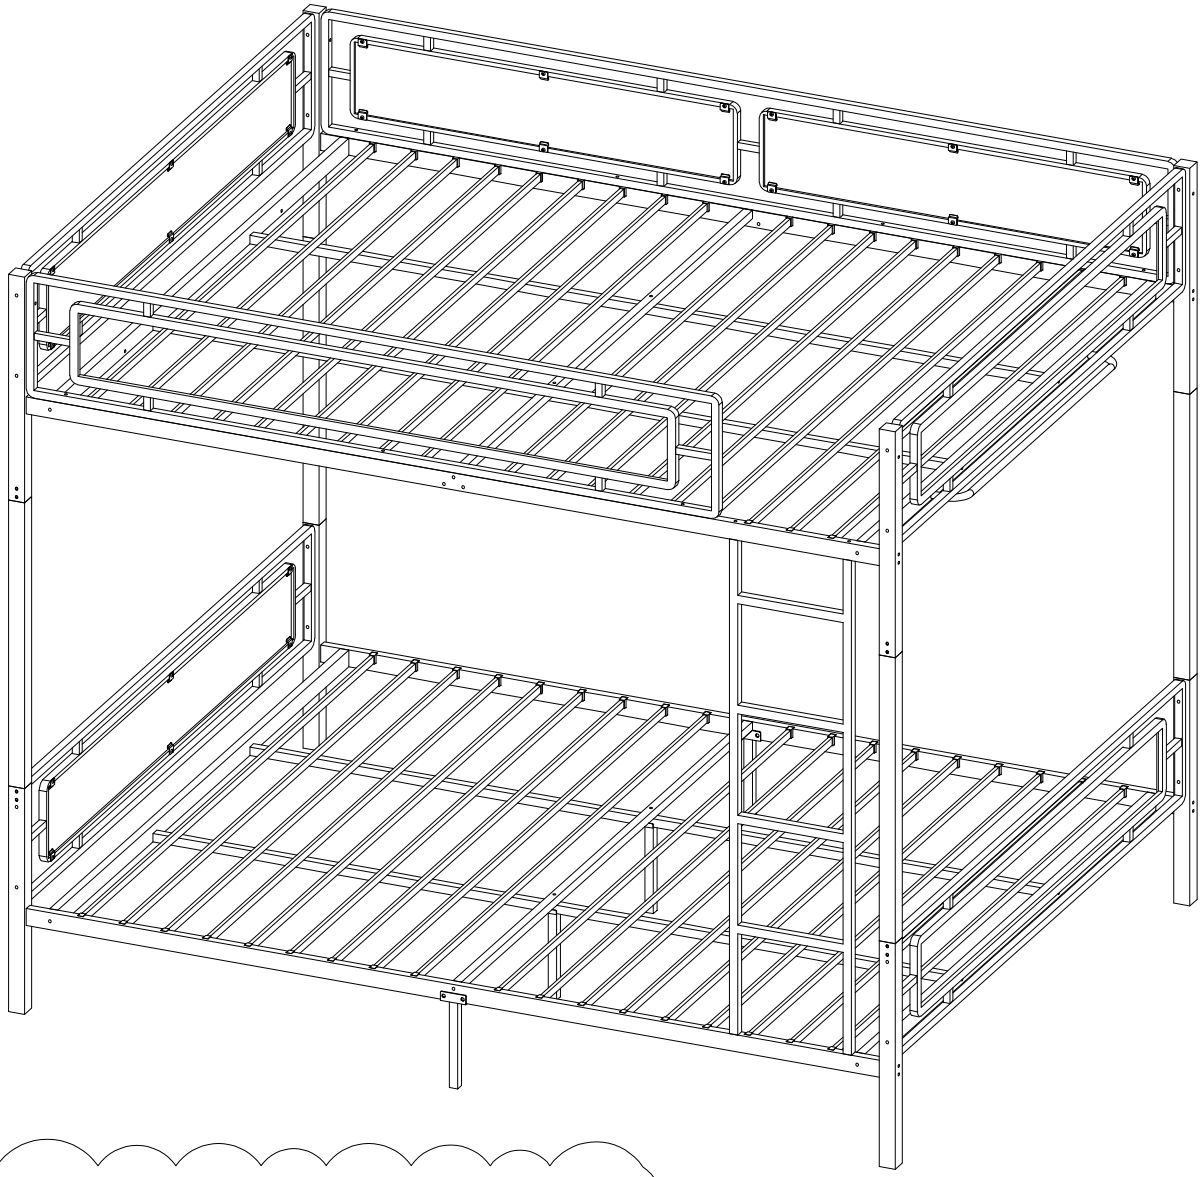


Tips:
If you feel that the bed is a little wobbly then please use the parts "J"&"K" for reinforcement

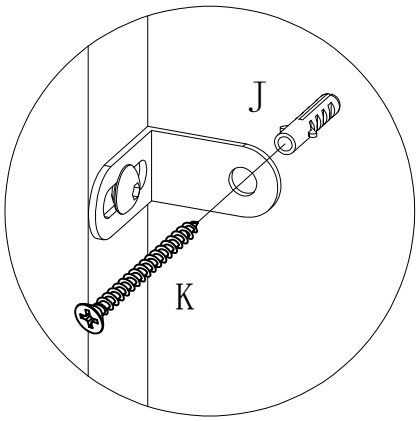

Please tighten all screws before use, thank you.


Step 12

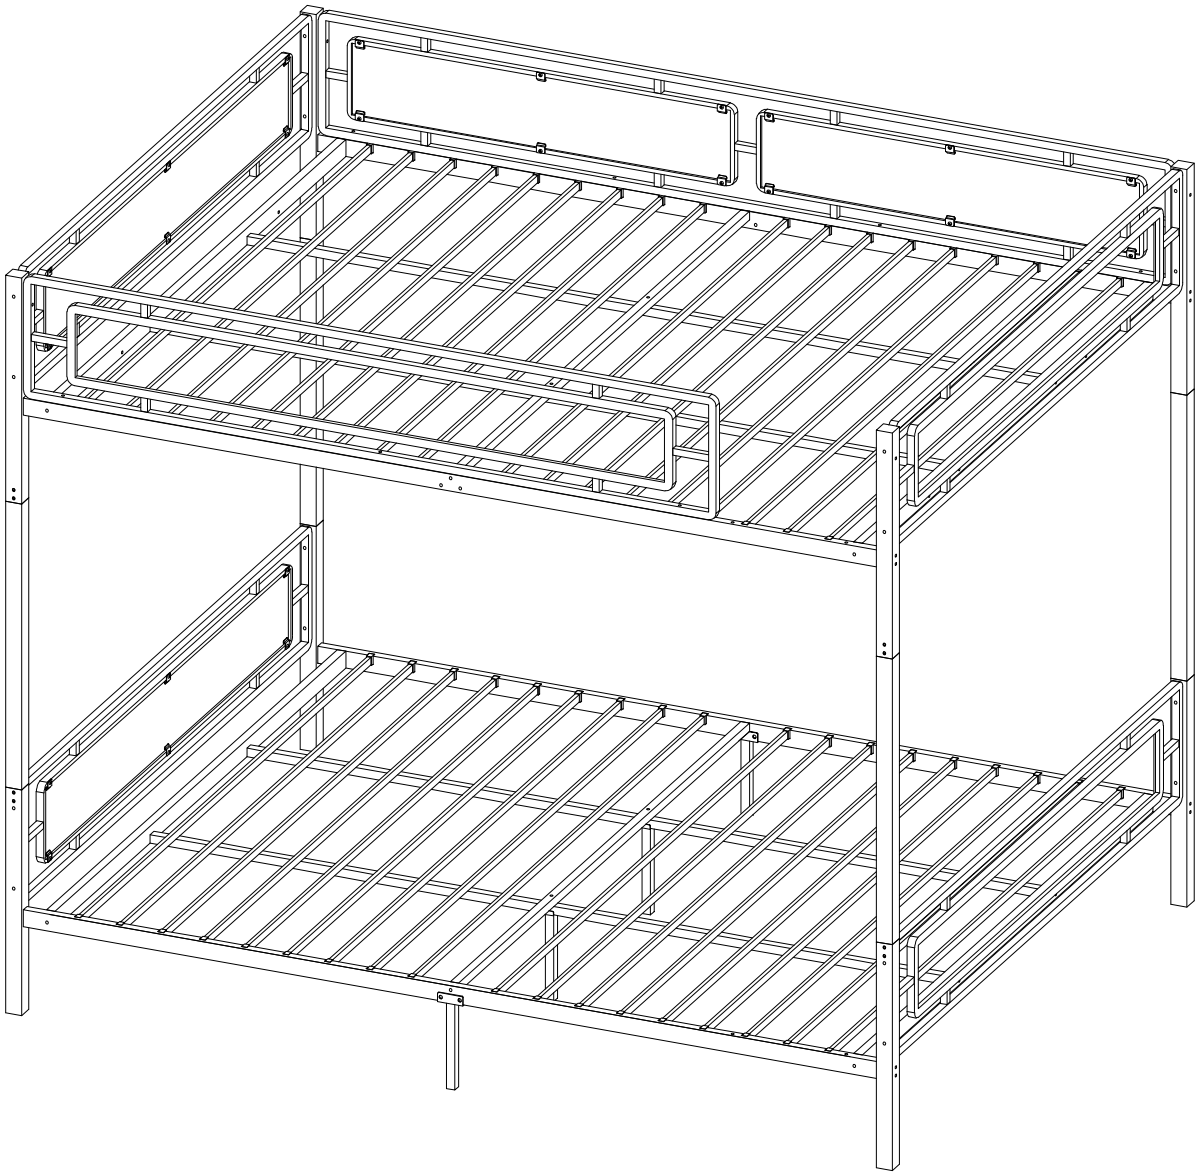


Remove the screws assembled in Step 5/7/9 and remove components "7"&"13"


 F 4mm--1PCS				

Step 13

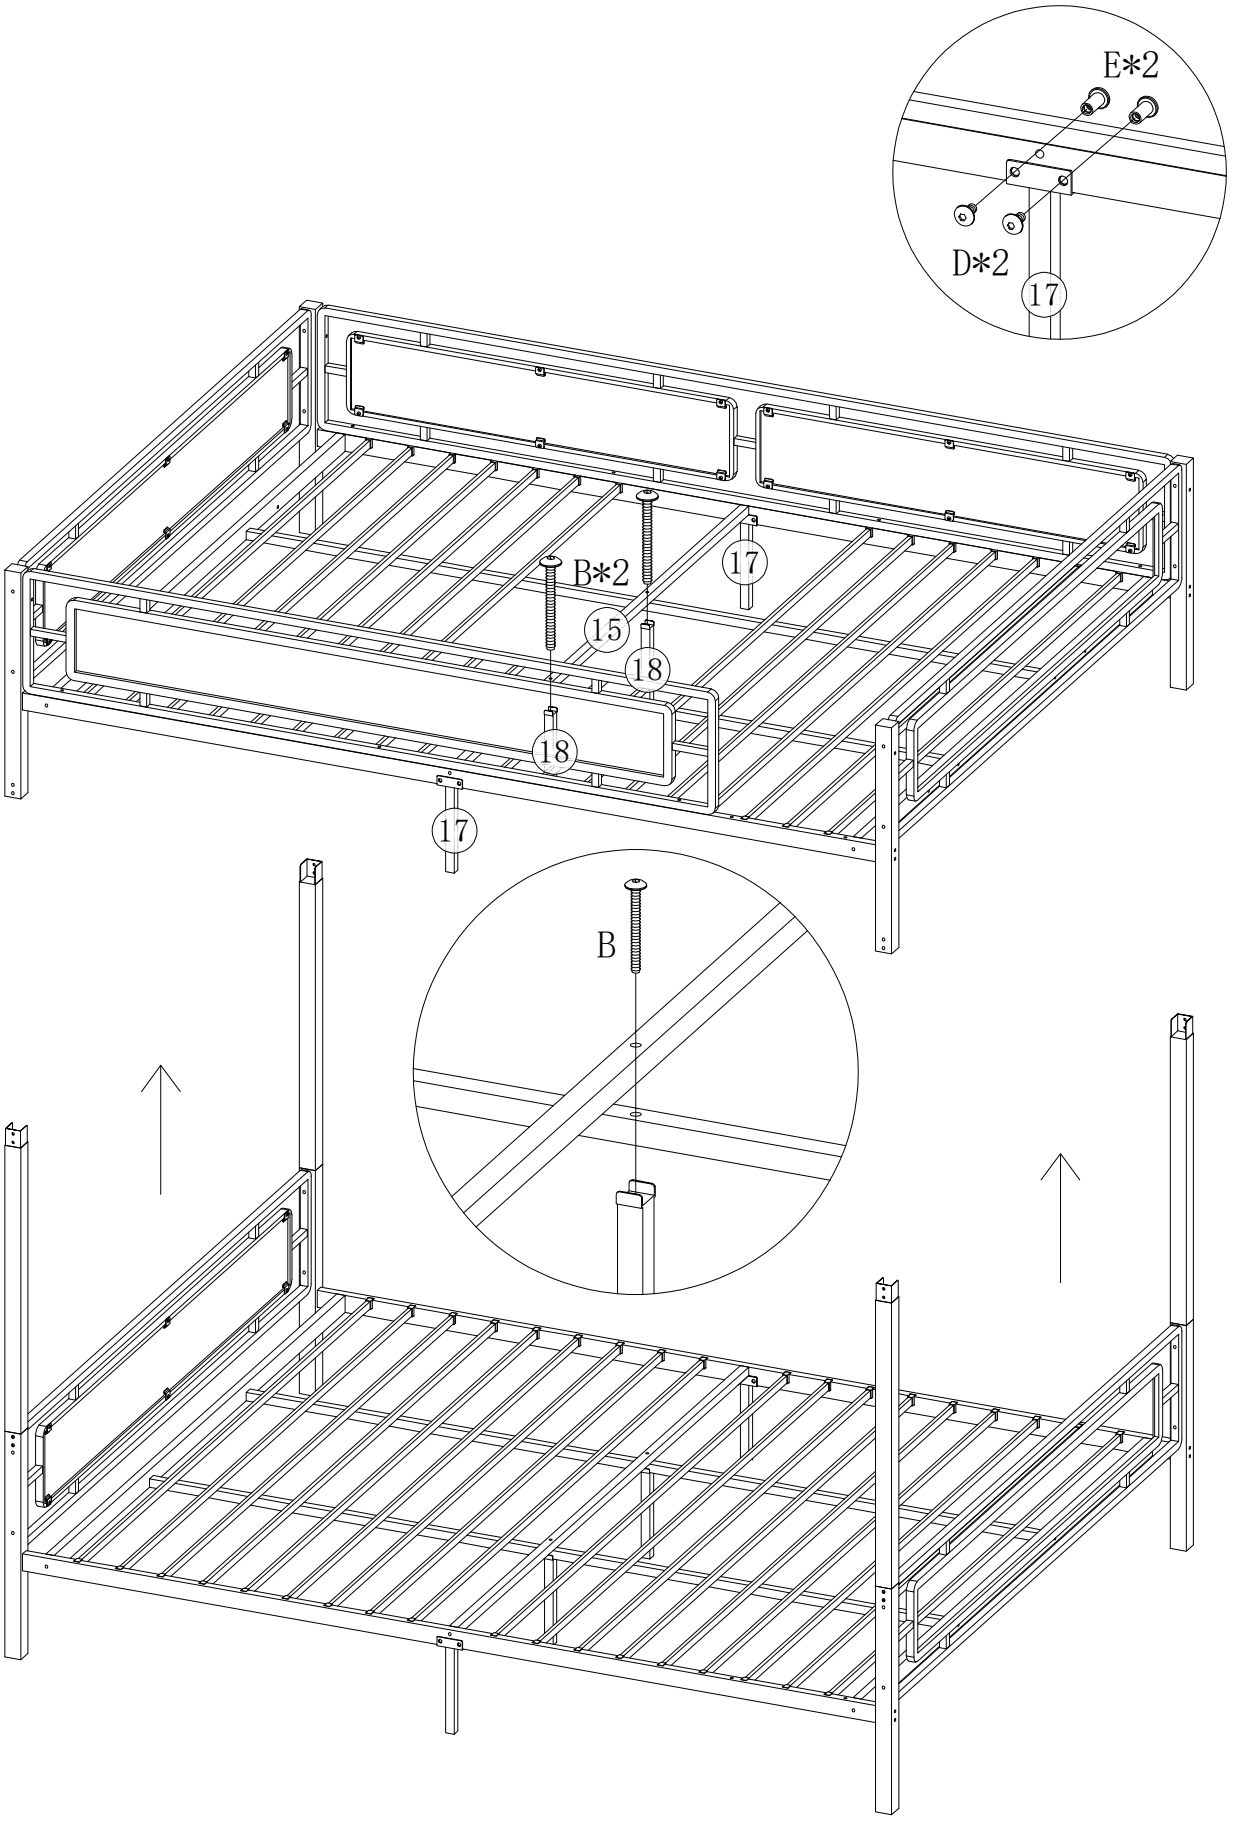



				
B M6*50mm--2PCS	D M6*12mm--4PCS	E M6*17mm--4PCS	F 4mm--2PCS	


Step 14

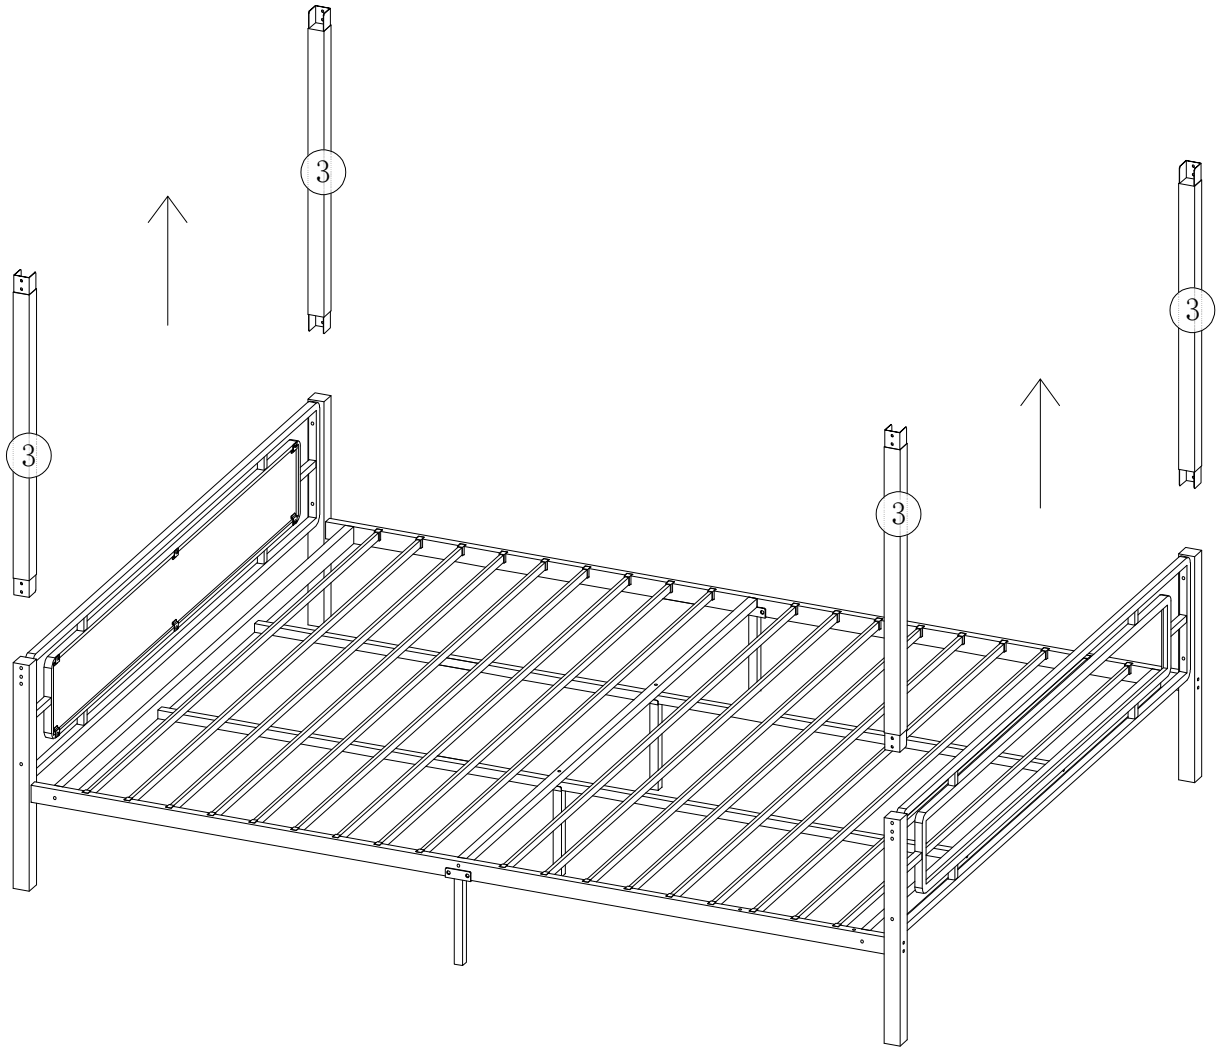

Completed

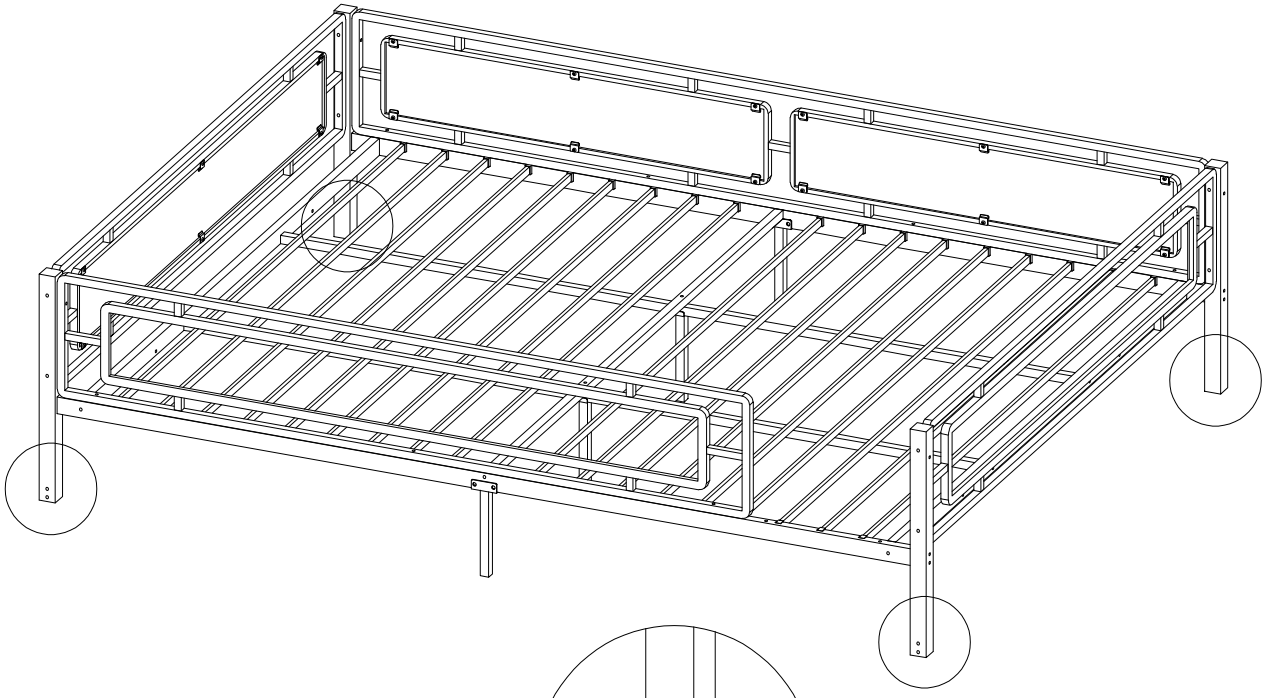

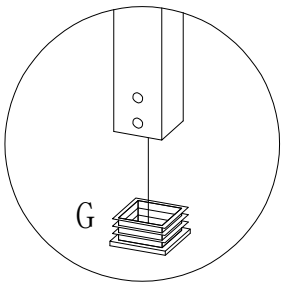

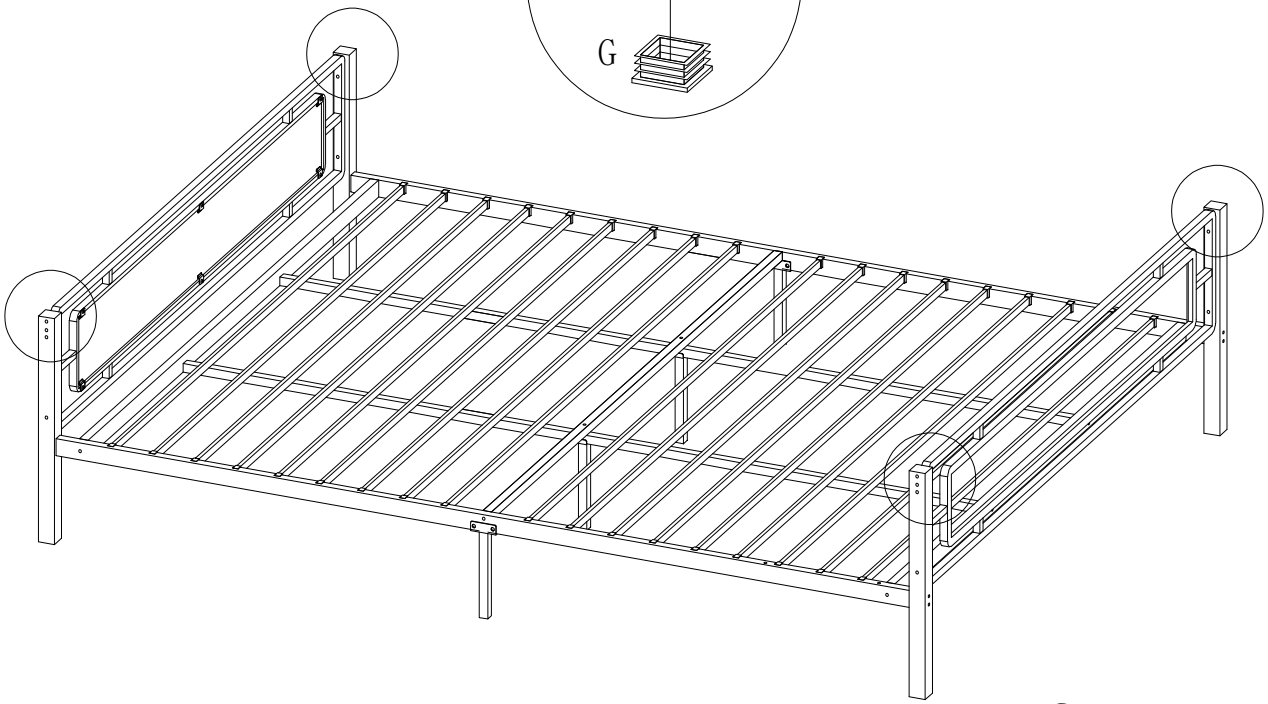

Please tighten all screws before use, thank you.

 G 38*38mm--8PCS				