
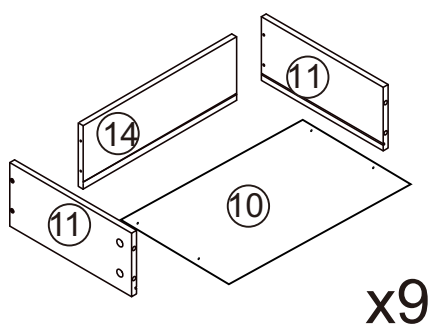
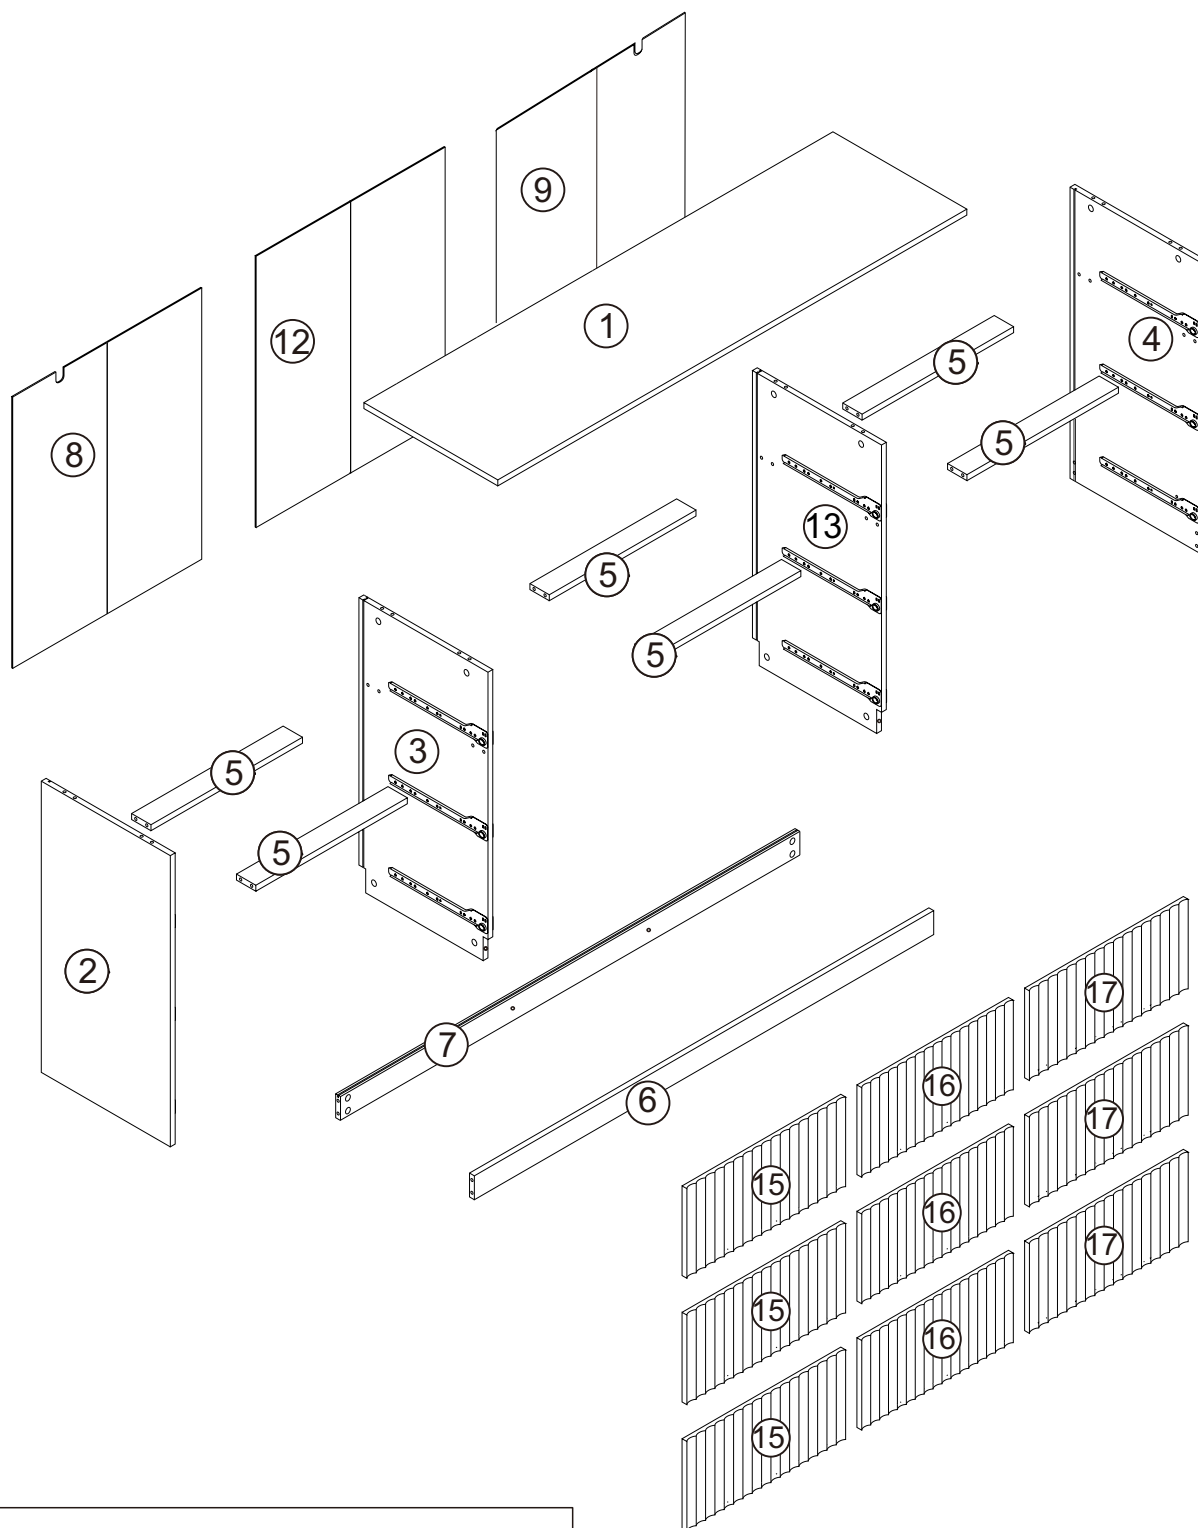
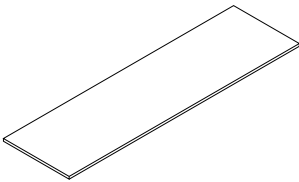

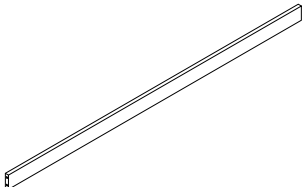
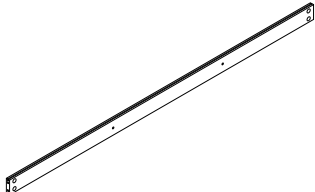


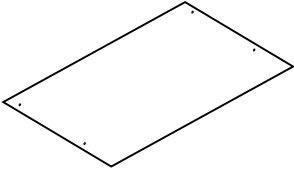
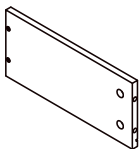


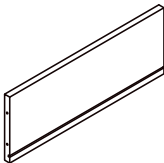
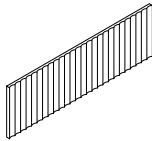
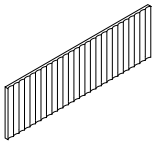











Installation instruction

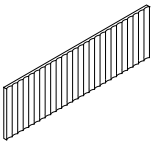

Parts and Operation Elements

					
①	1pc	②	1pc	③	1pc
					
④	1pc	⑤	4pcs	⑥	1pc
					
⑦	1pc	⑧	1pc	⑨	1pc
					
⑩	9pcs	⑪	18pcs	⑫	1pc
					
⑬	1pc	⑭	9pcs	⑮	3pcs
					
⑯	3pcs	⑰	3pcs		





Hardware

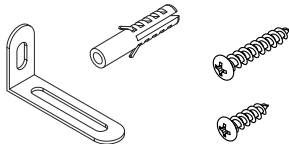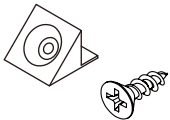 Cam bolt		 Cam Lock		 6x30mm Wood dowel		 4x35mm screw	
A	68+2pcs	B	68+2pcs	C	20+1pcs	D	36+2pcs
 3x12mm screw		 3.5x12mm screw					
E	18pcs	F	72+2pcs	G	9pcs	H	2 pcs
 3x14mm screw		 300mm		 300mm		 300mm	
I	12pcs	CL	9 pcs	CR	9 pcs	DL	9 pcs
 300mm							
DR	9 pcs						












SPARE BAG

THE SPARE BAG INCLUDED EXTRA HARDWARE FOR DAMAGED OR MISSING SMALL HARDWARE WHILE YOU ARE ASSEMBLING

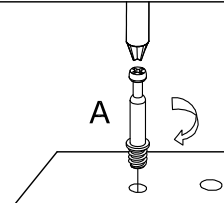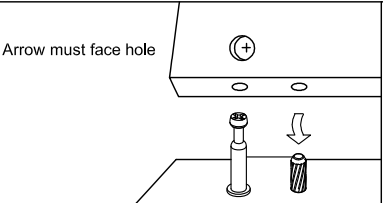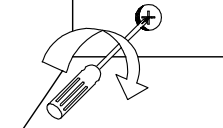 A		 C		 Arrow must face hole			
Gently screw cam bolt into the threaded anchor		Insert the wood dowel halfway into hole				Screw the camlock firmly into locked position.	

1

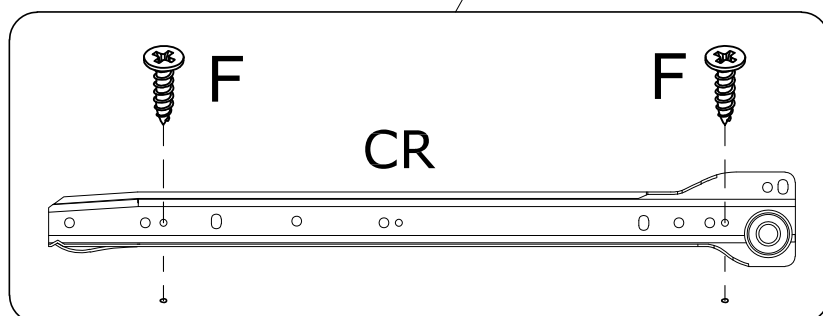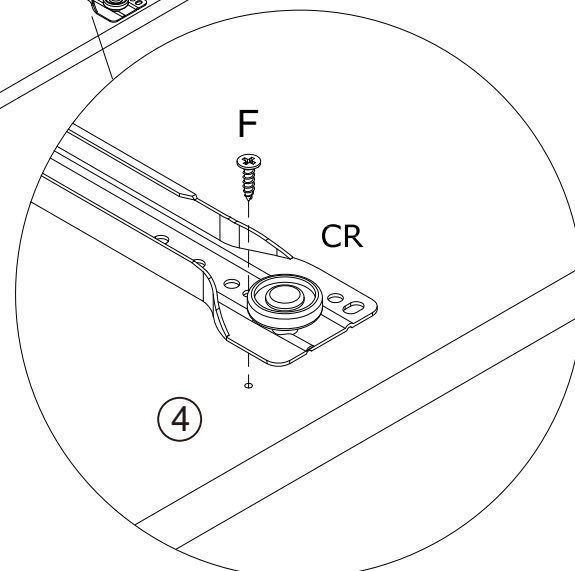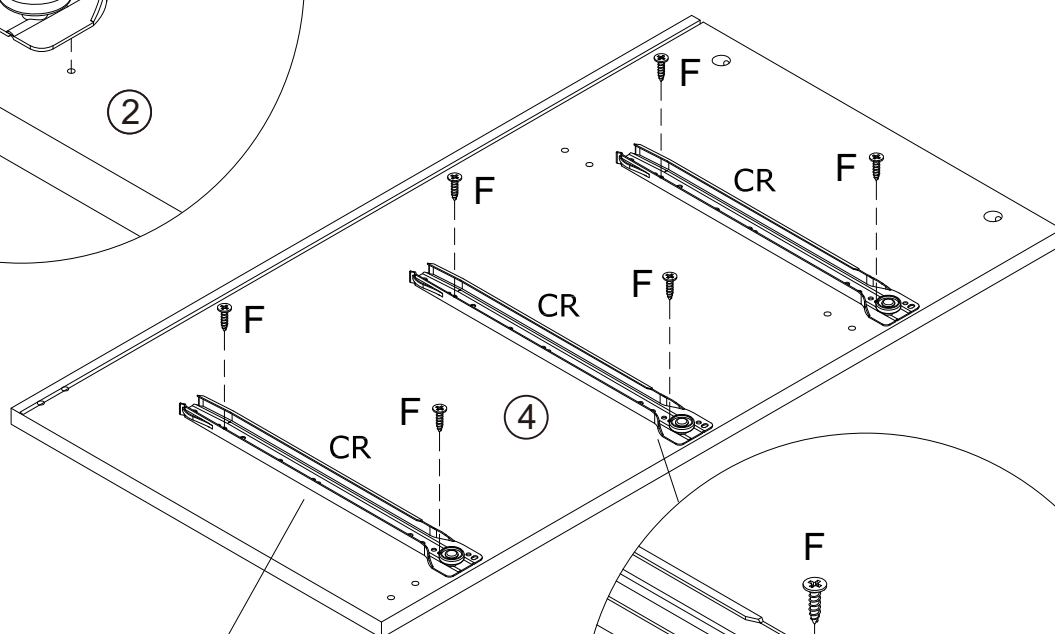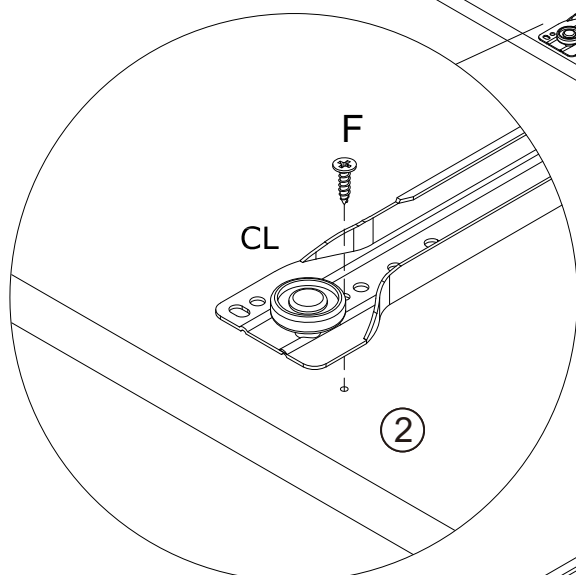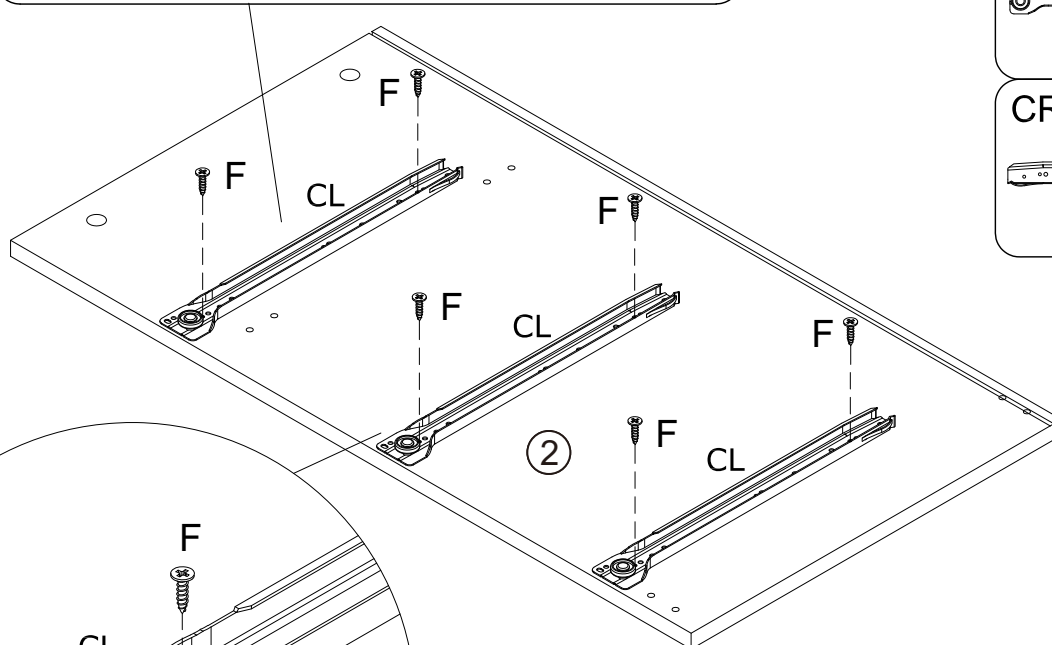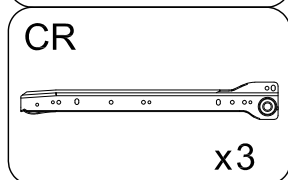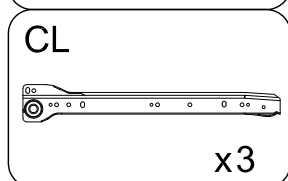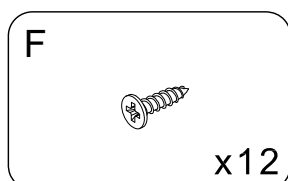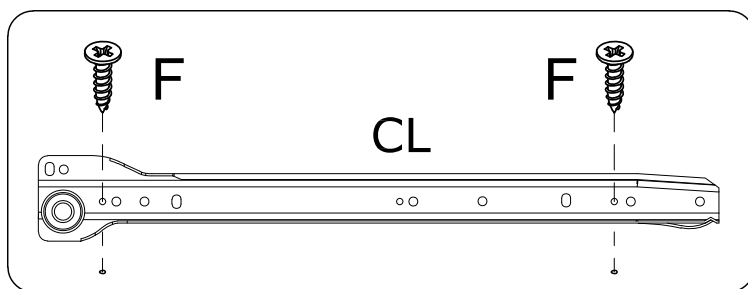


2

⚠ Only 1pc No. ③ panel.




F
x12

CL
x3

CR
x3

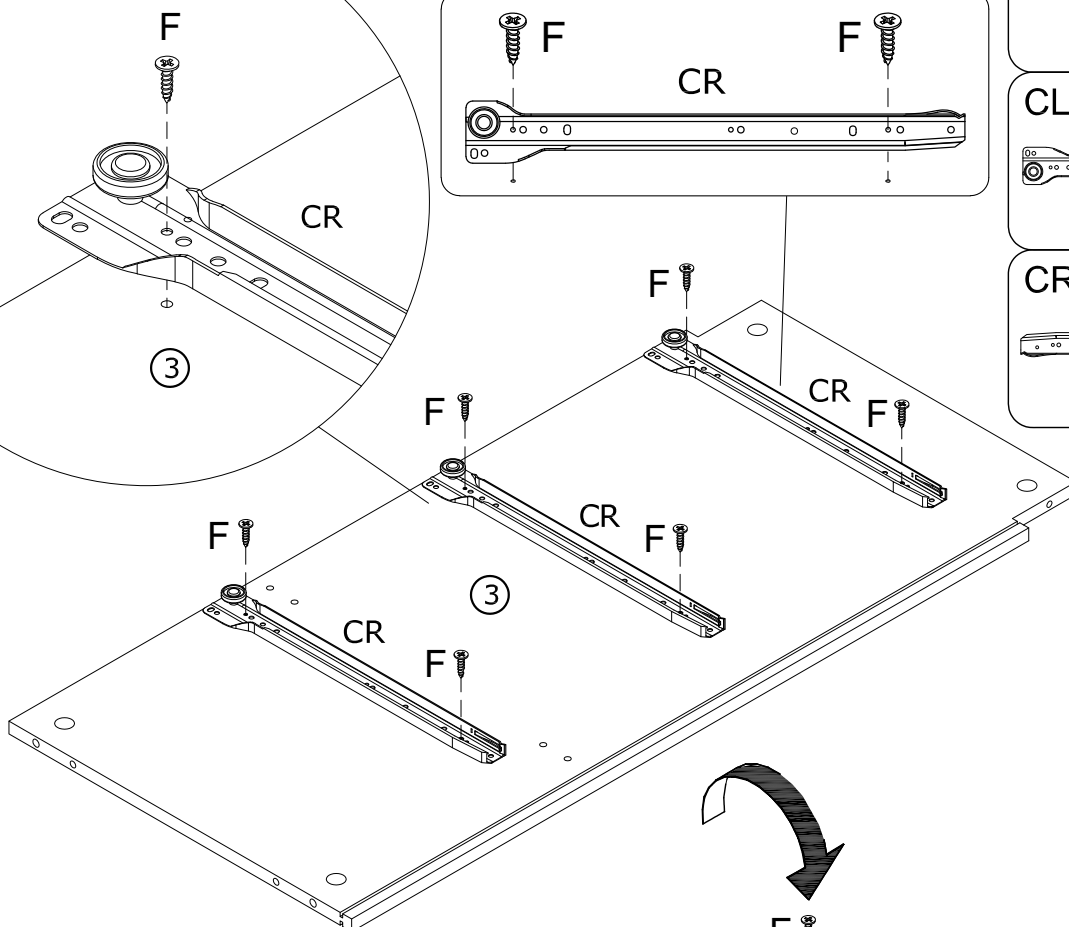

x1

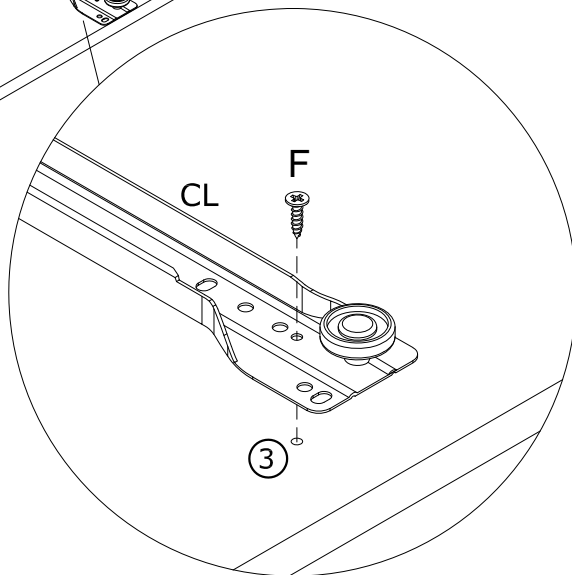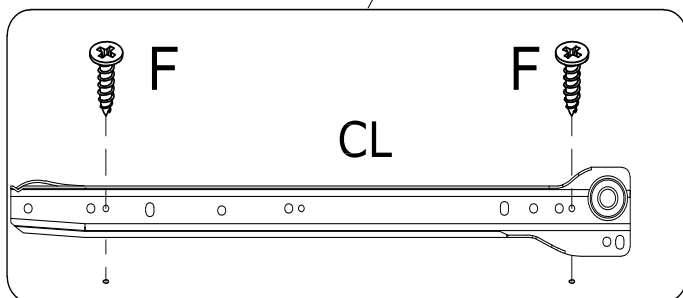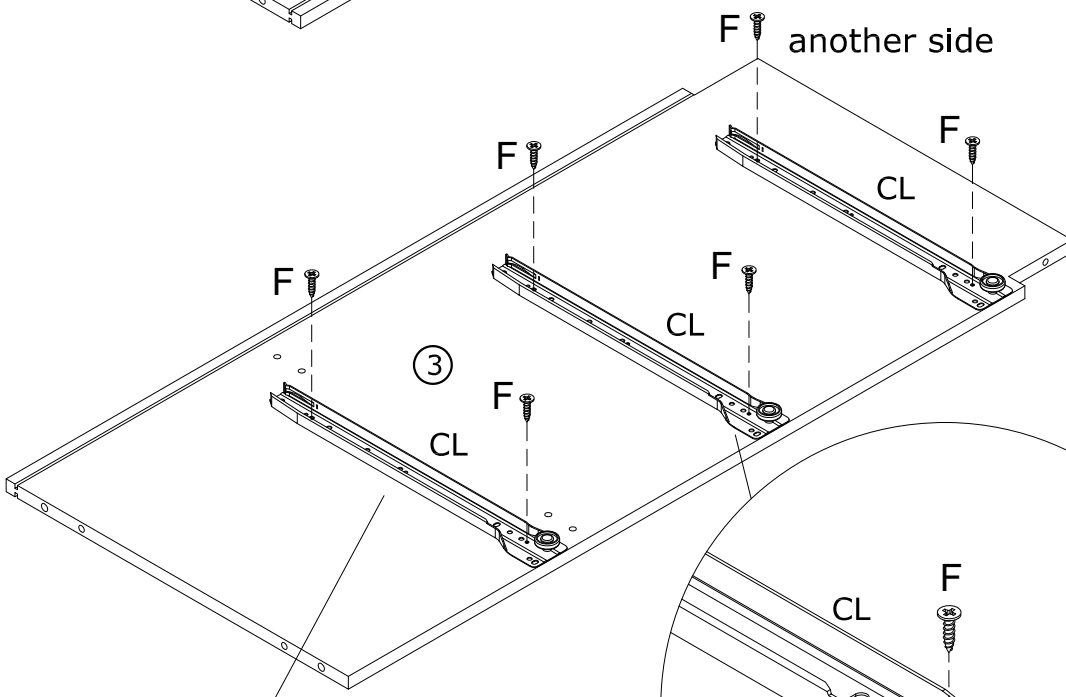



3

⚠ Only 1pc No. 13 panel.




F
x12

CL
x3


CR
x3

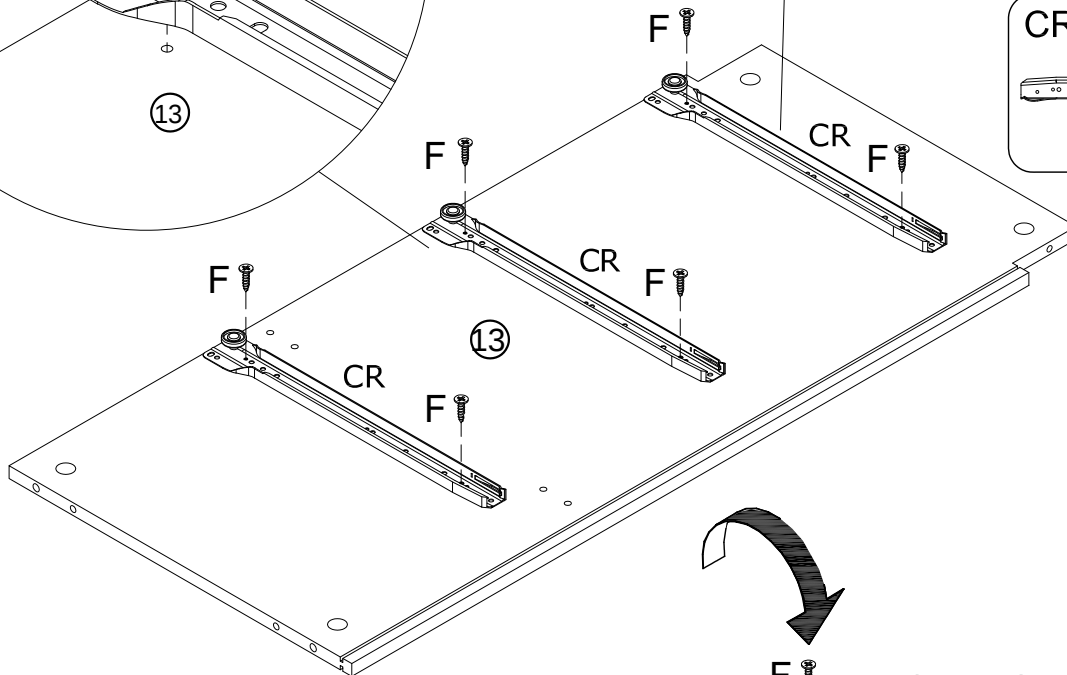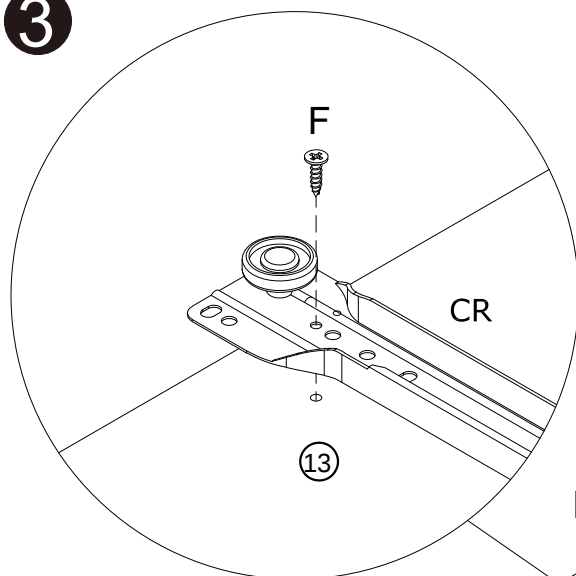

x1

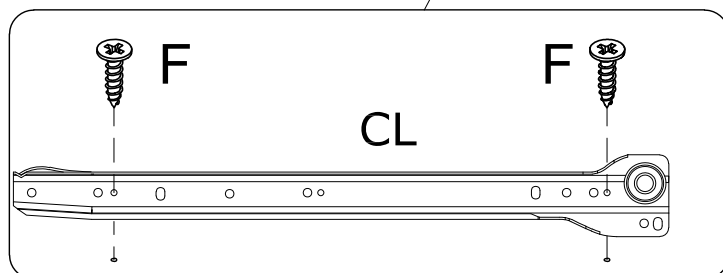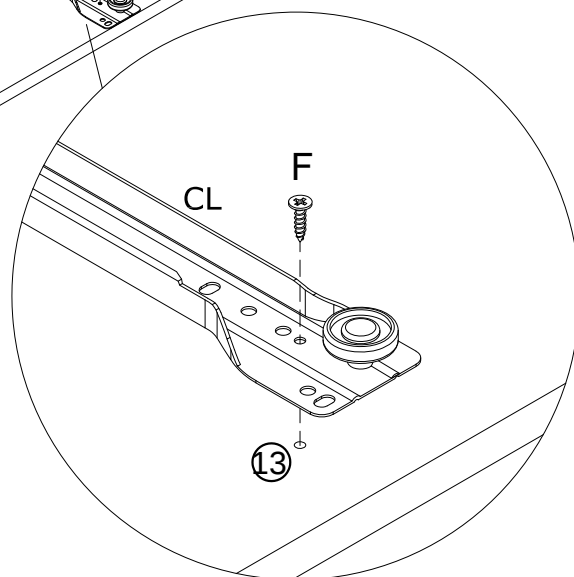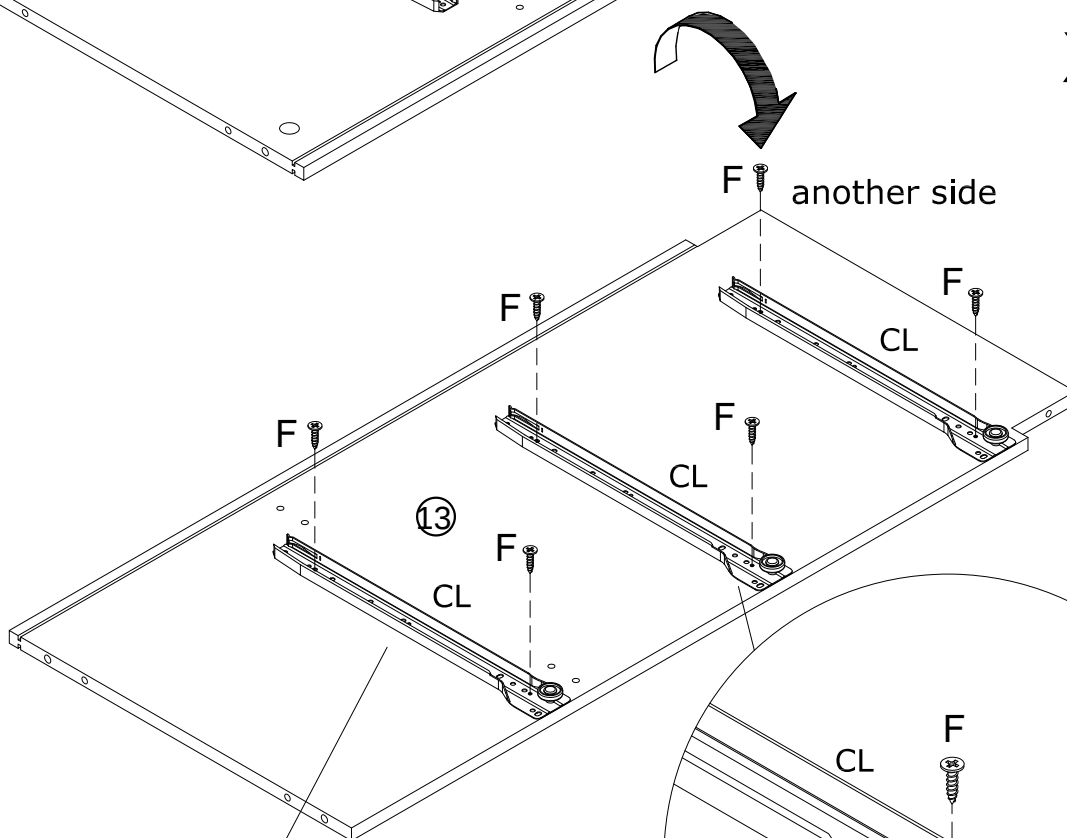


4

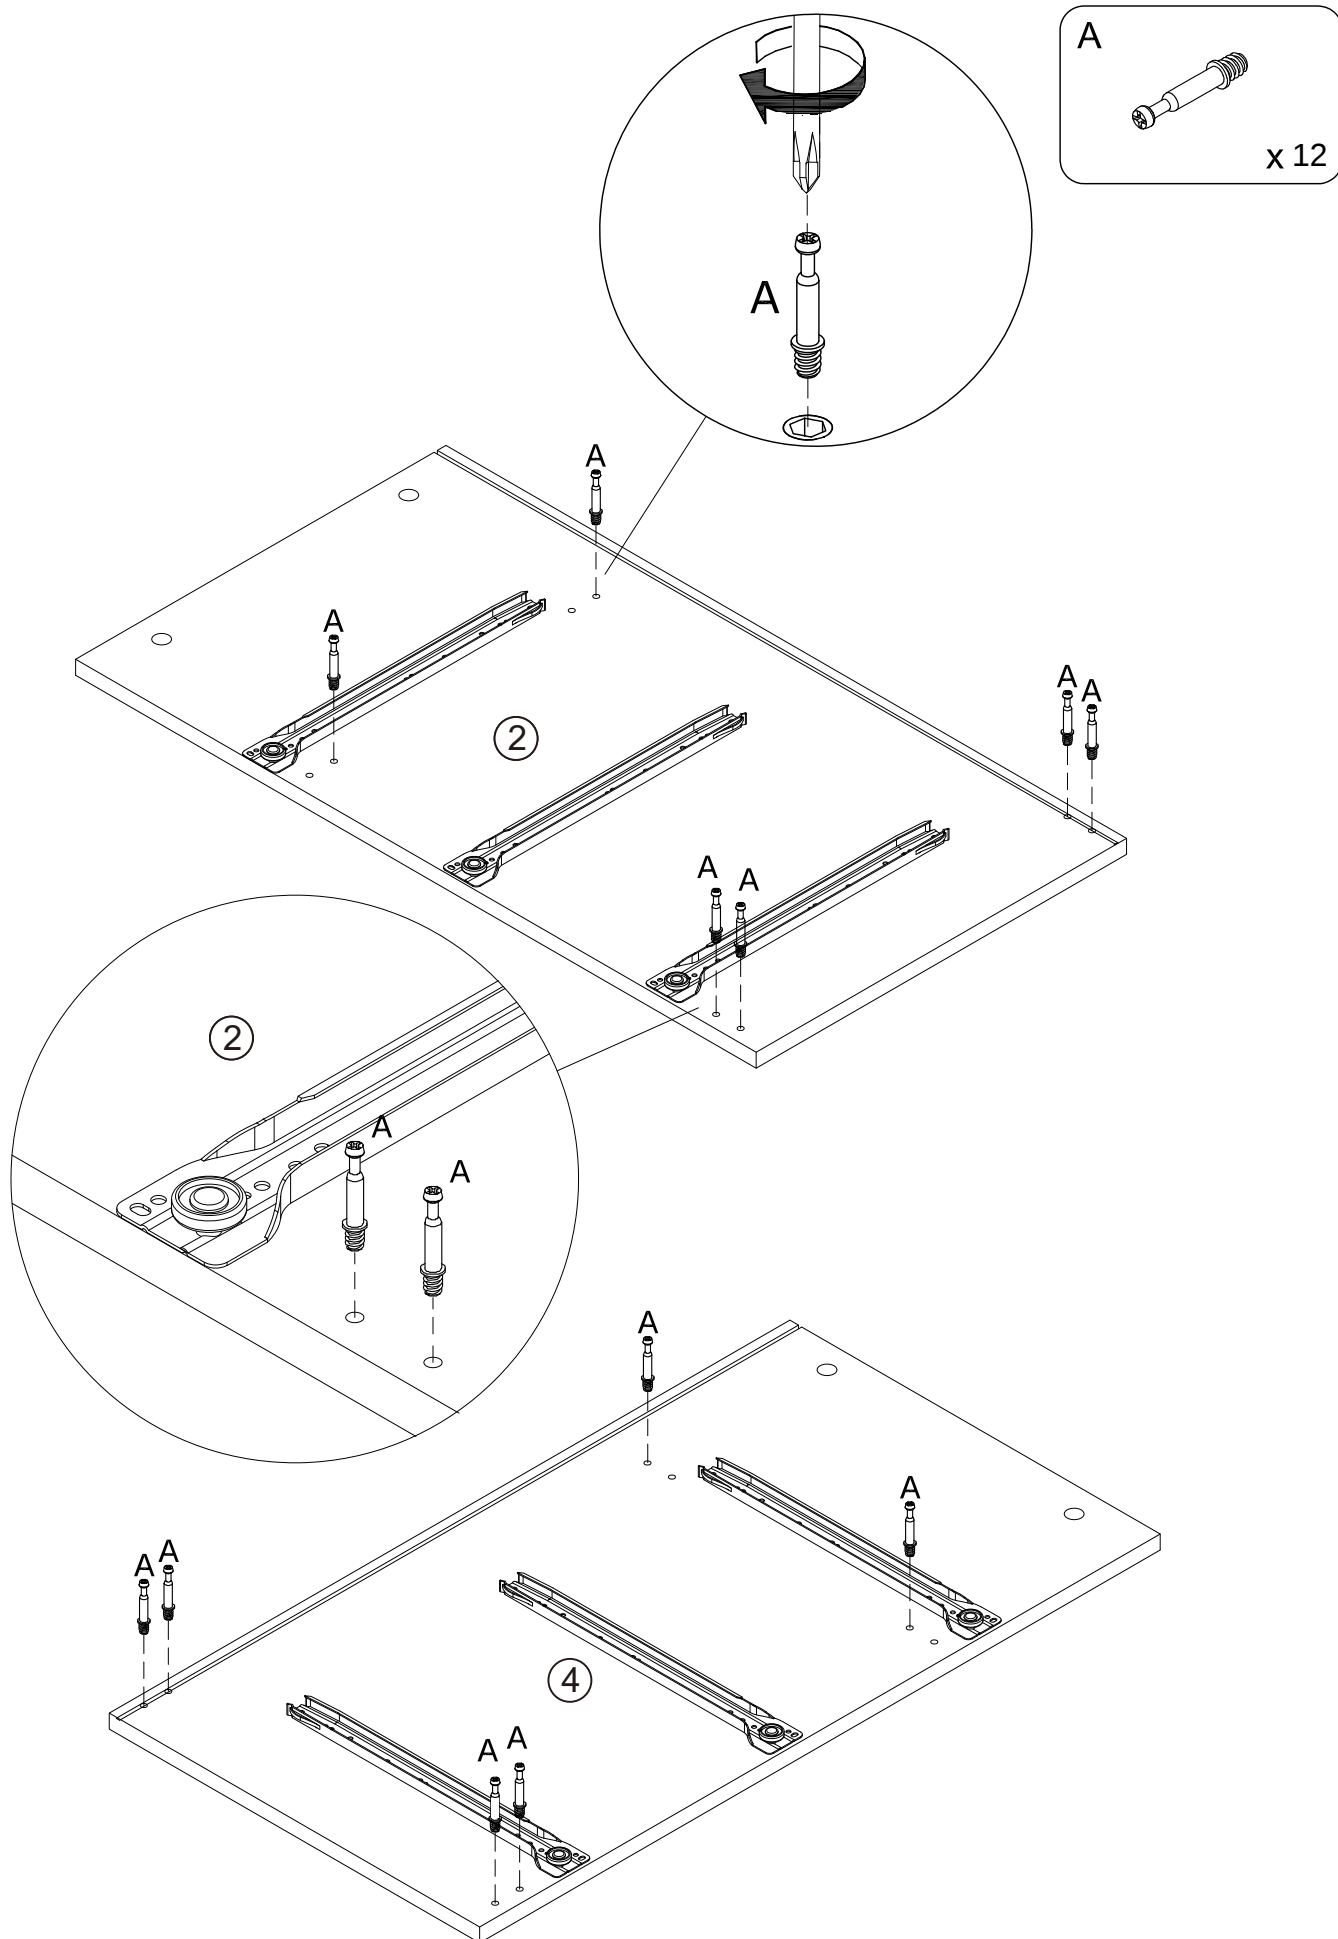


5

A




x 4

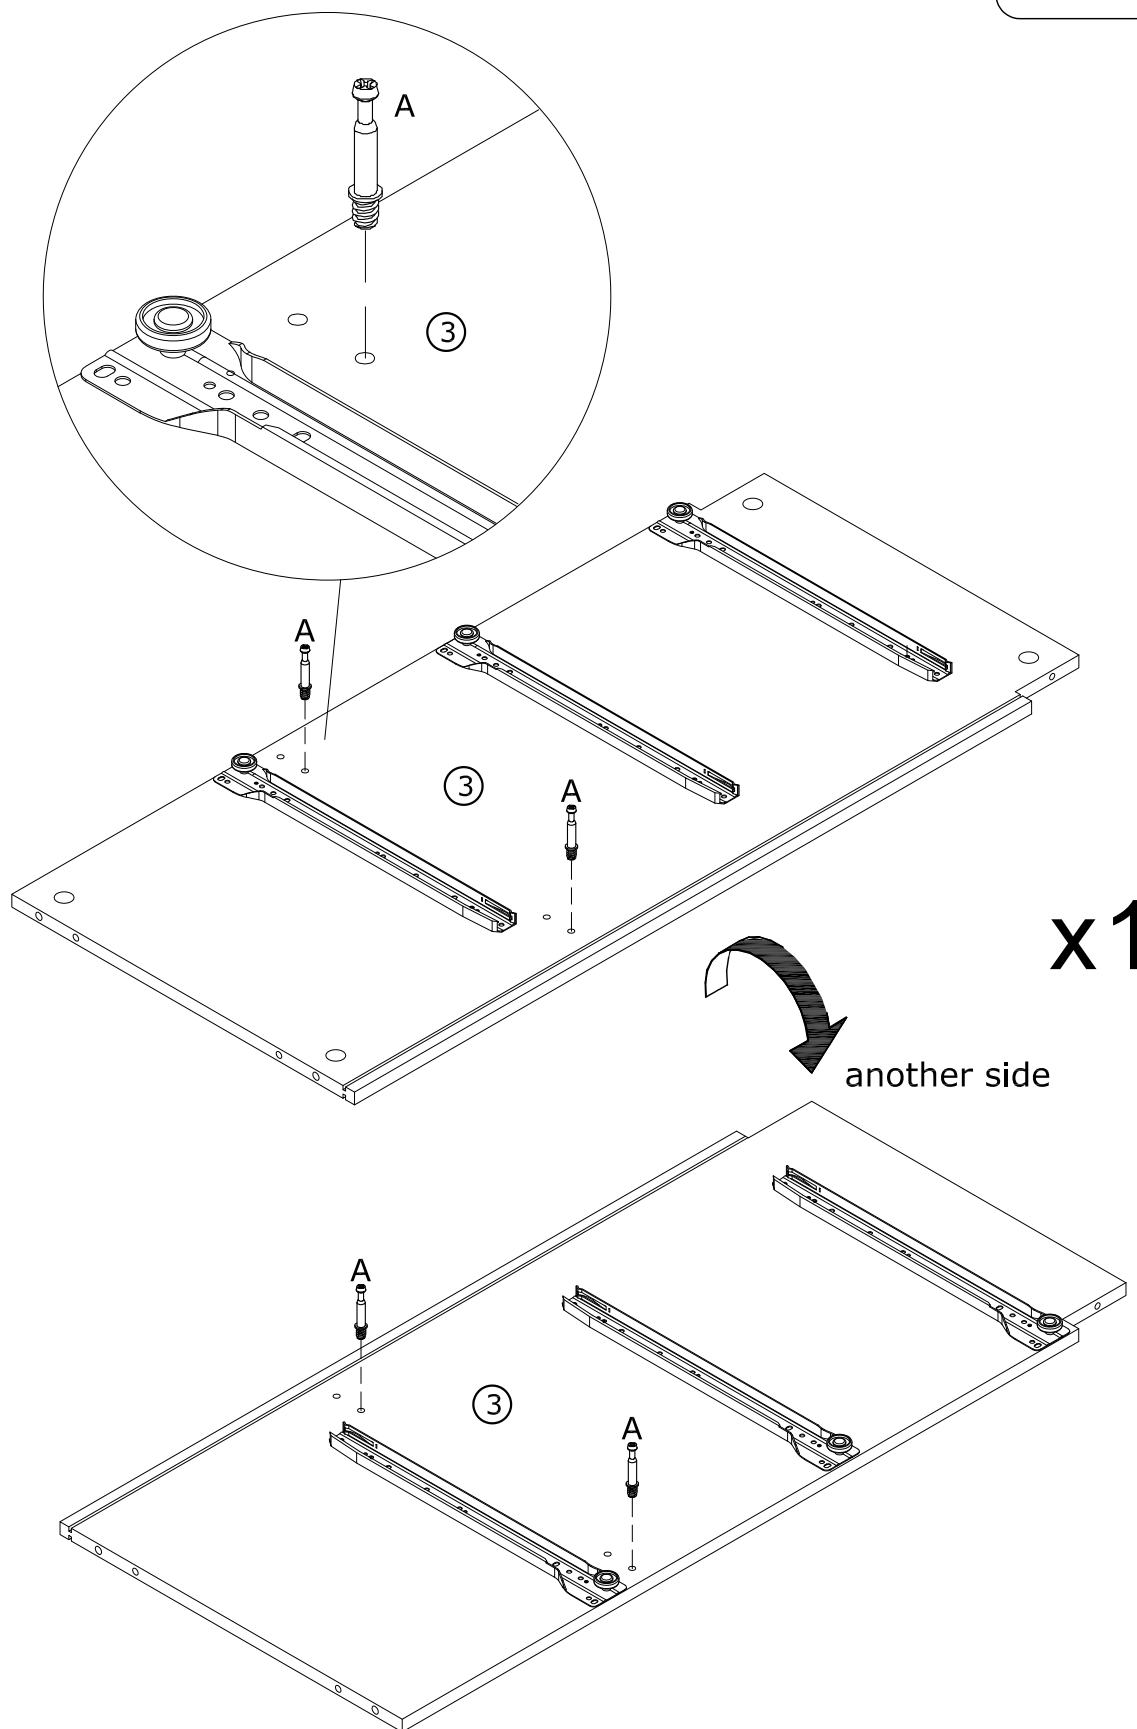


6

A



x 4

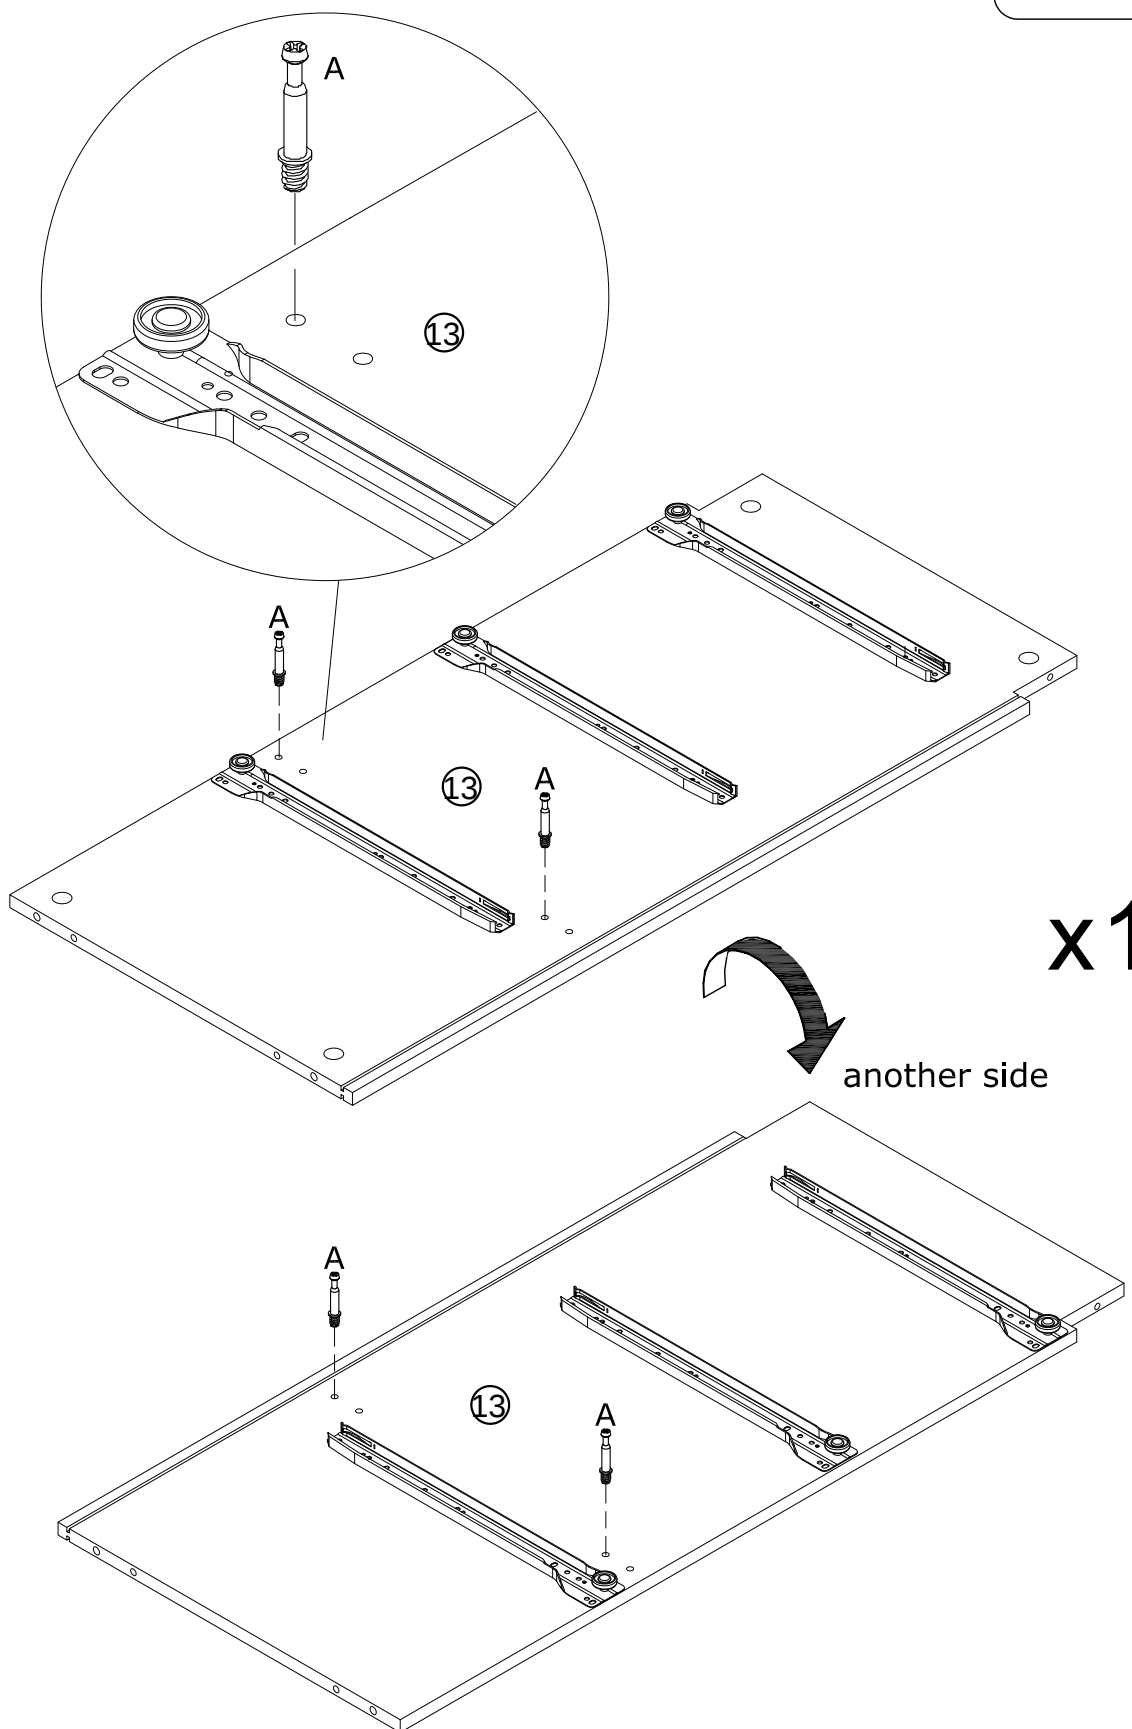


7

B






x4






C



x4

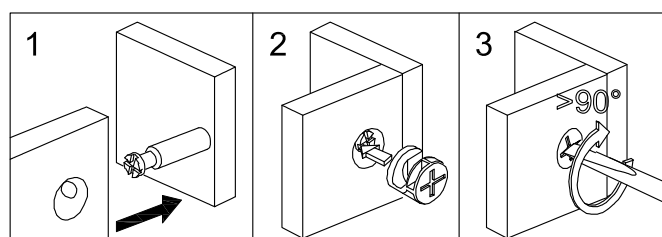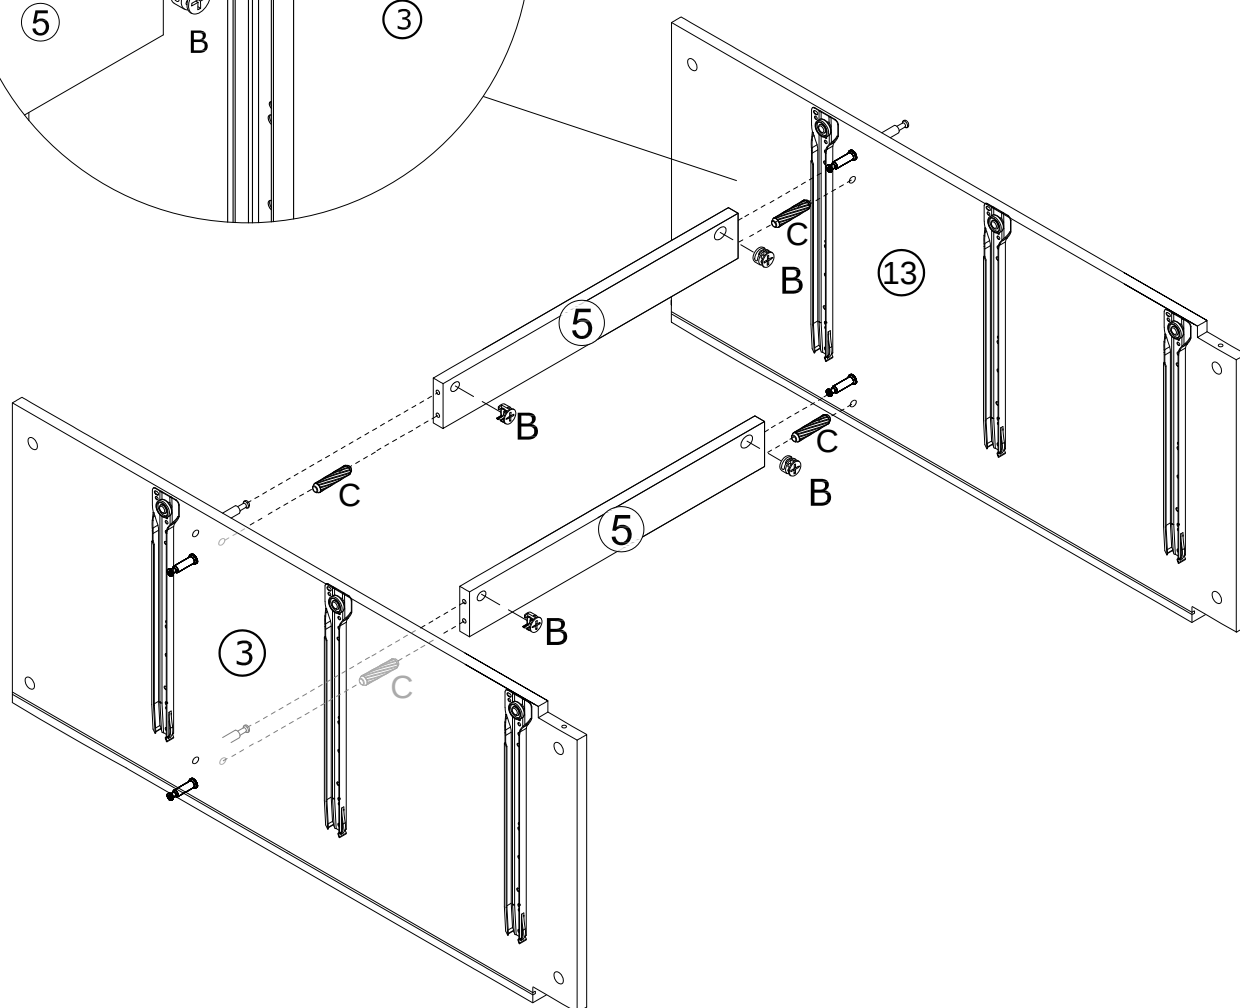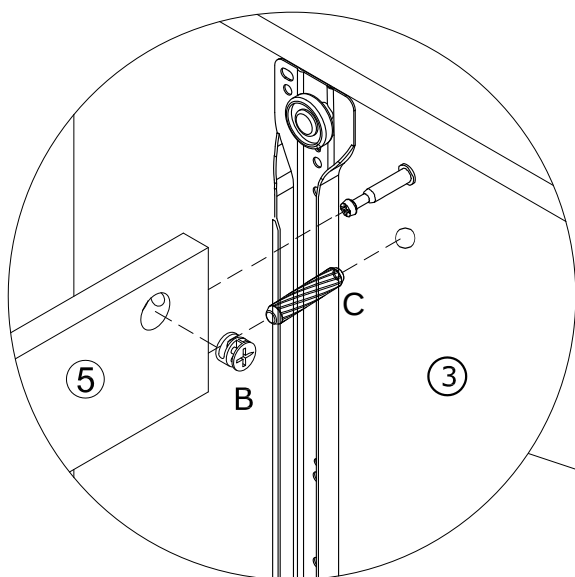

8

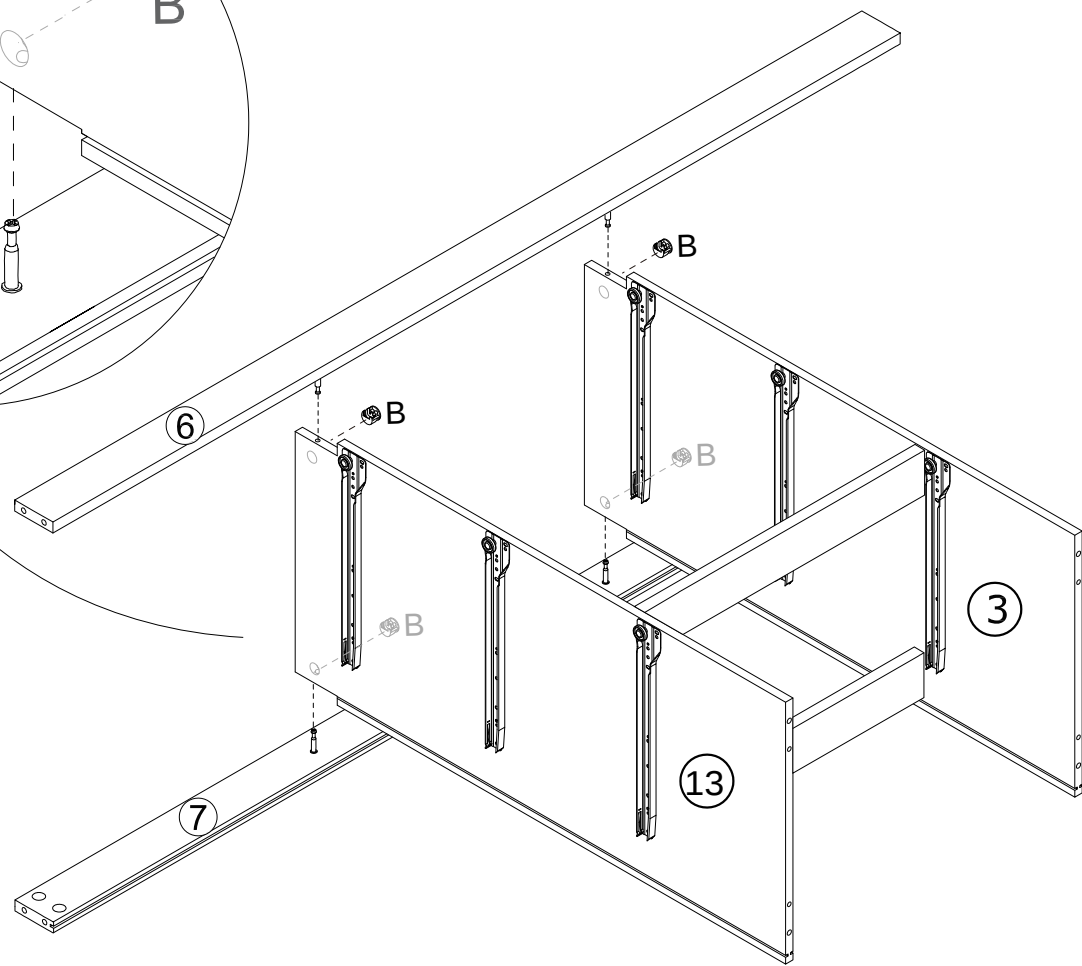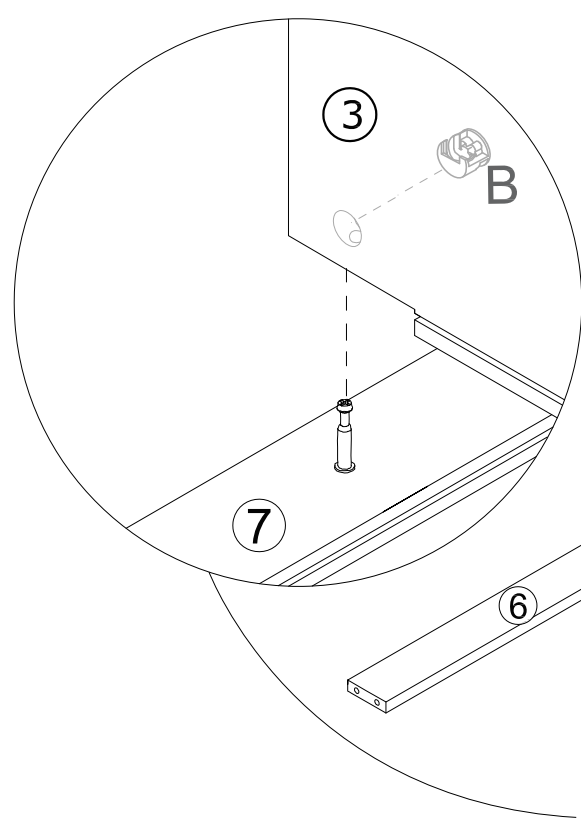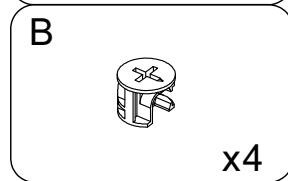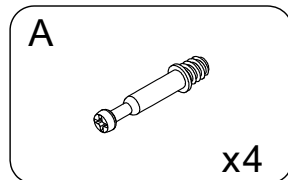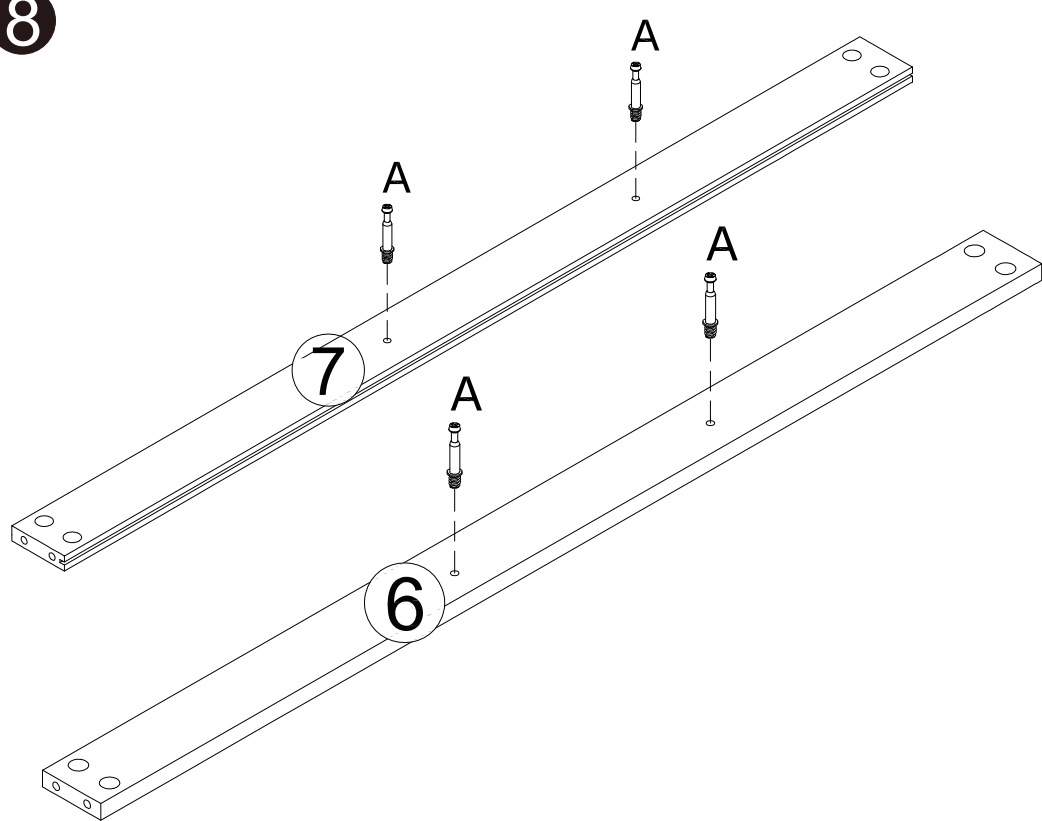

9

B




x4

C



x4

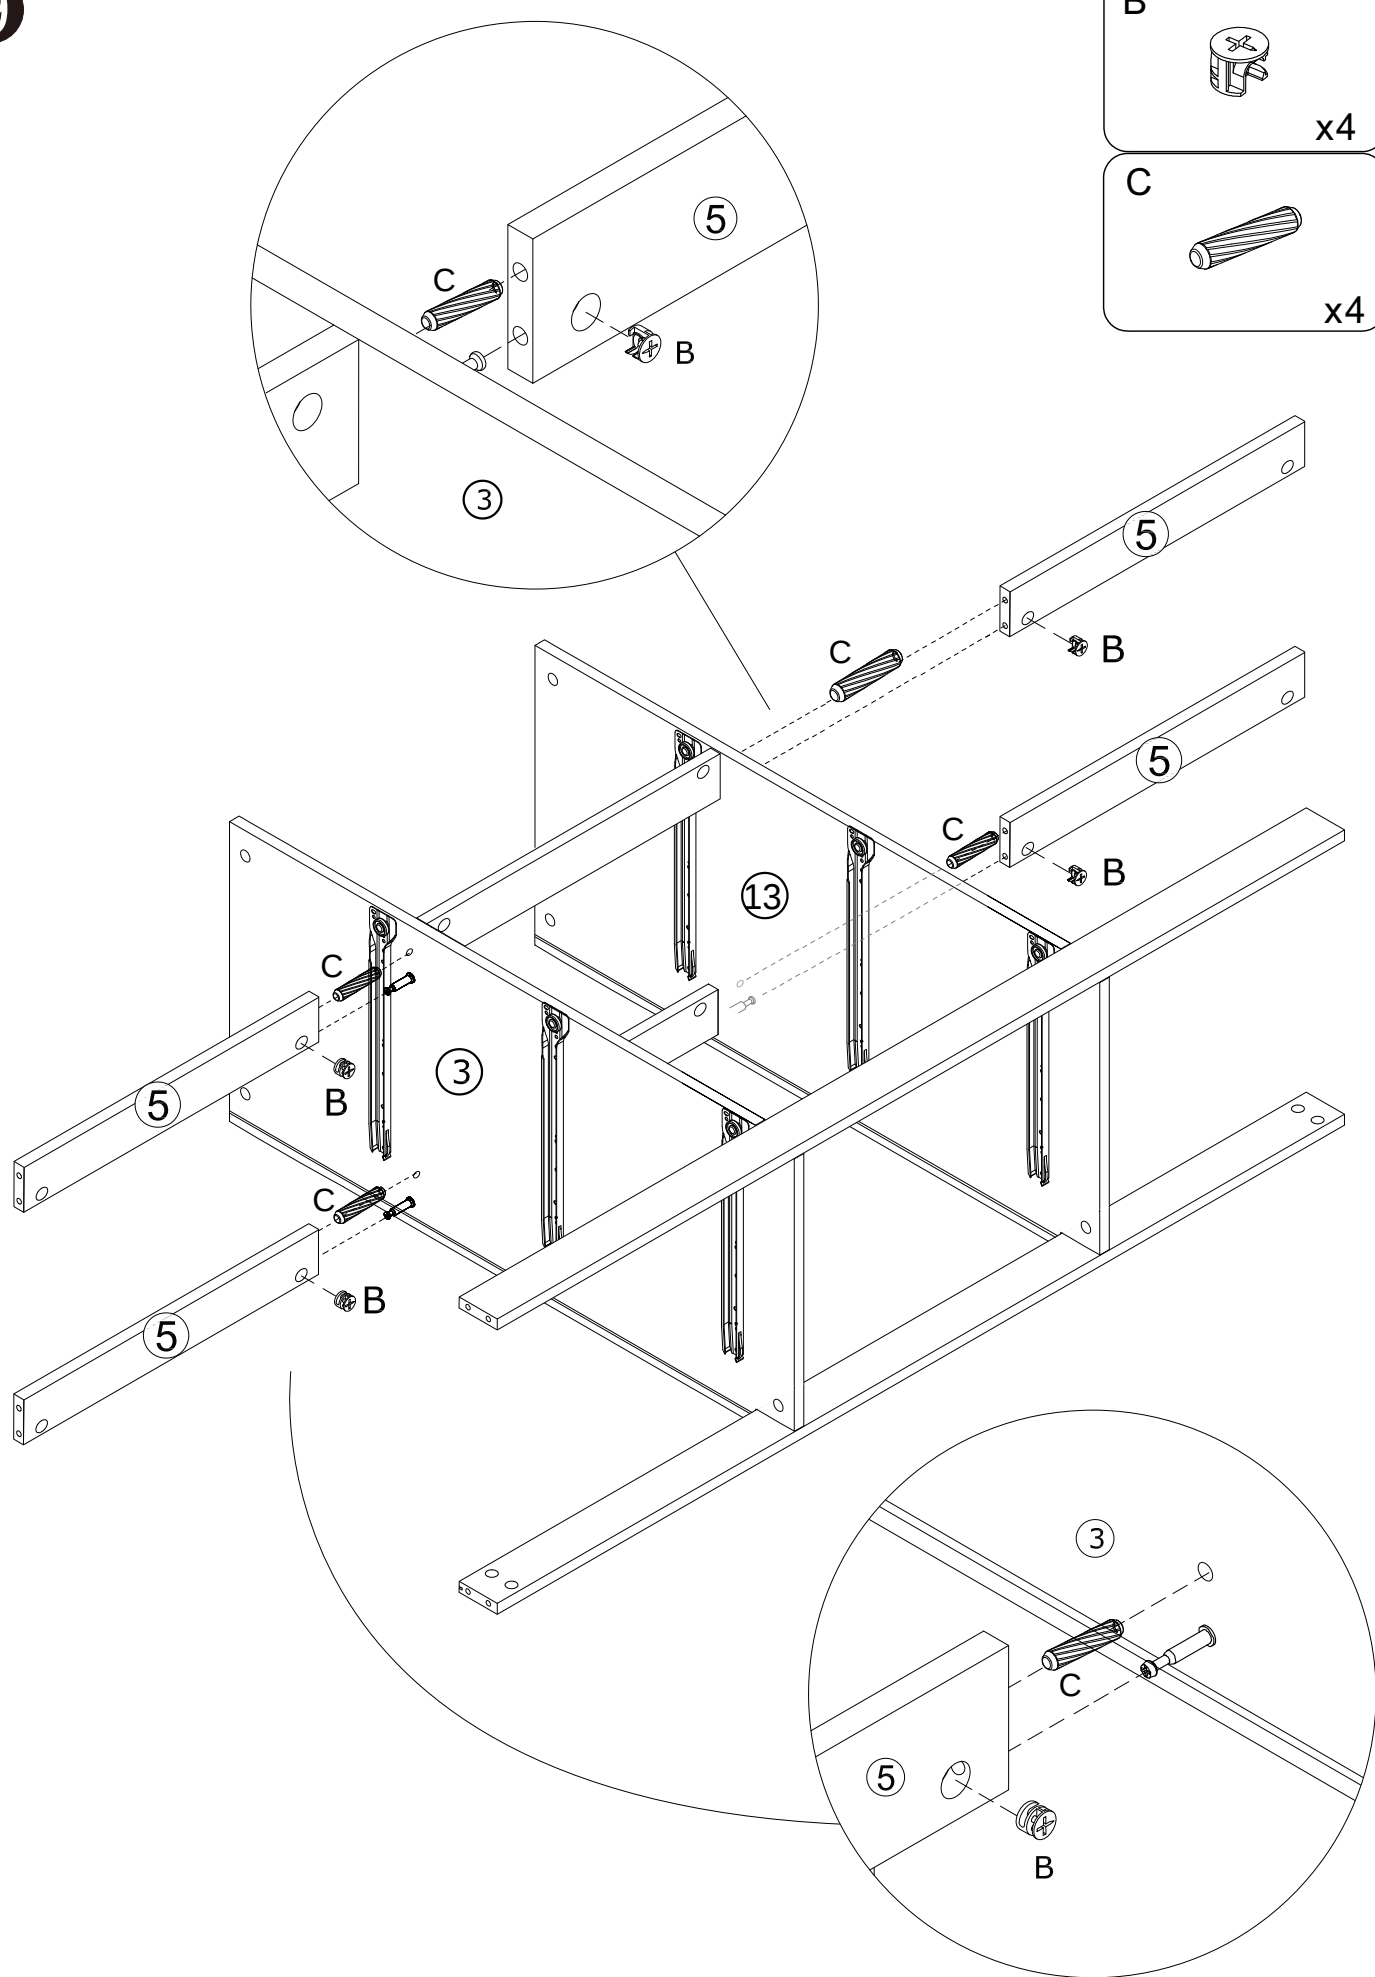


10

B





x6

C



x2

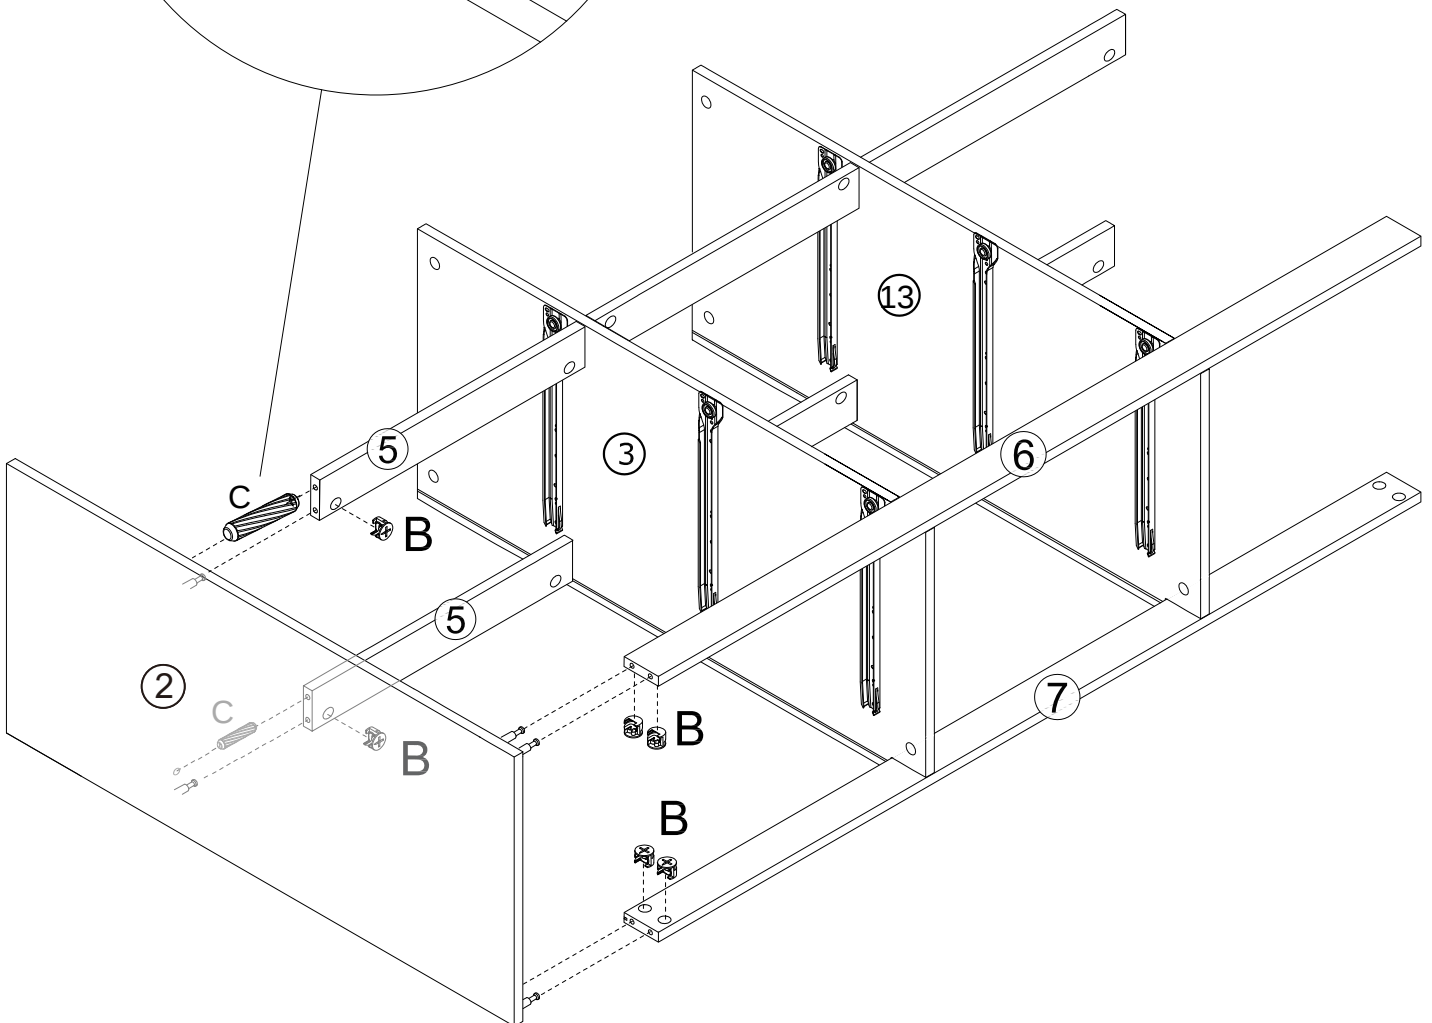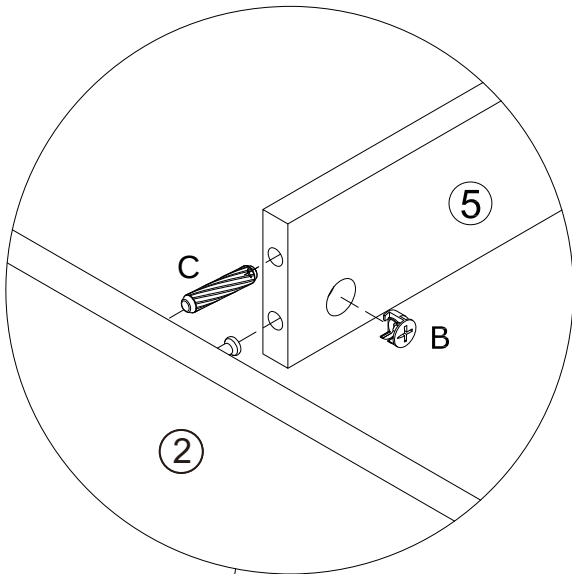


11

B





x6


C




x2


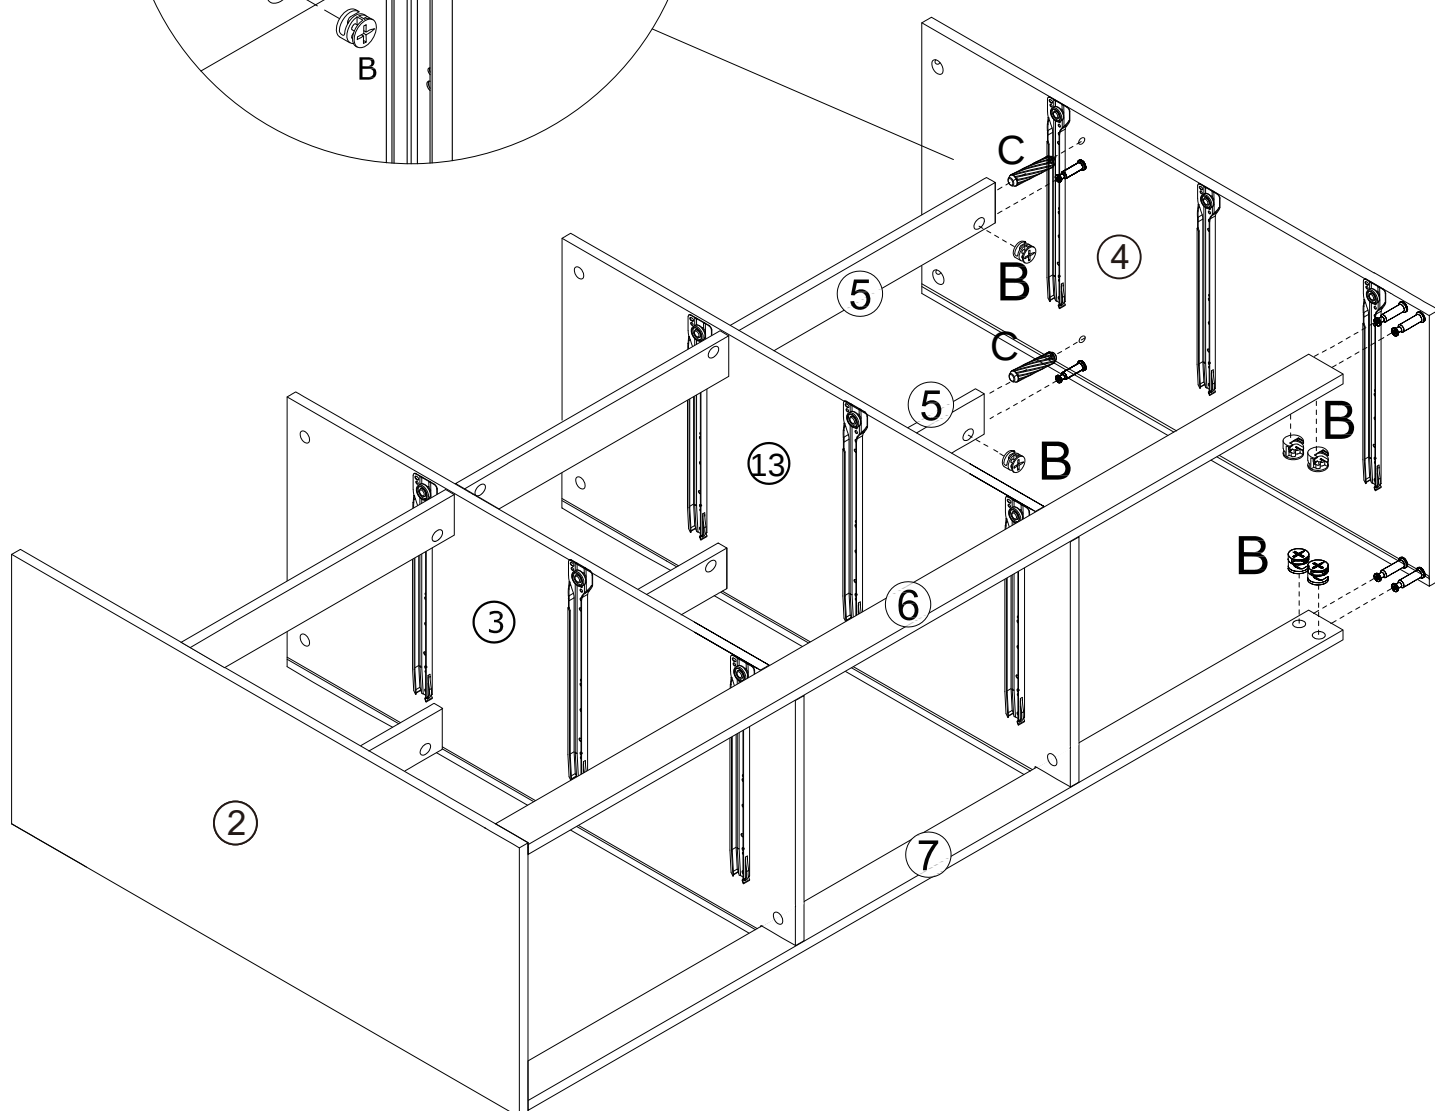
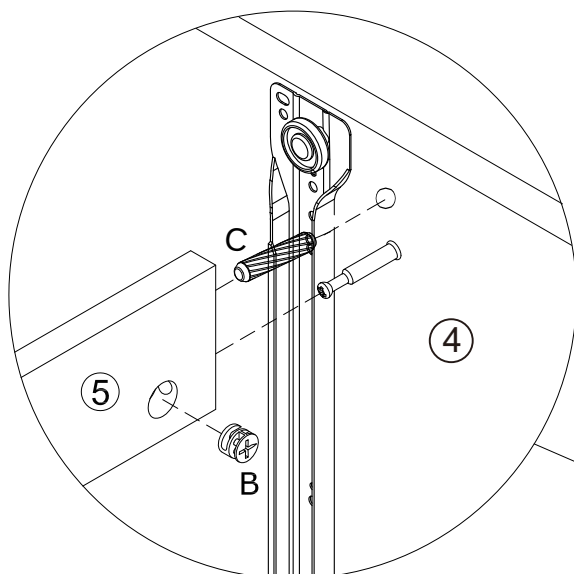


12

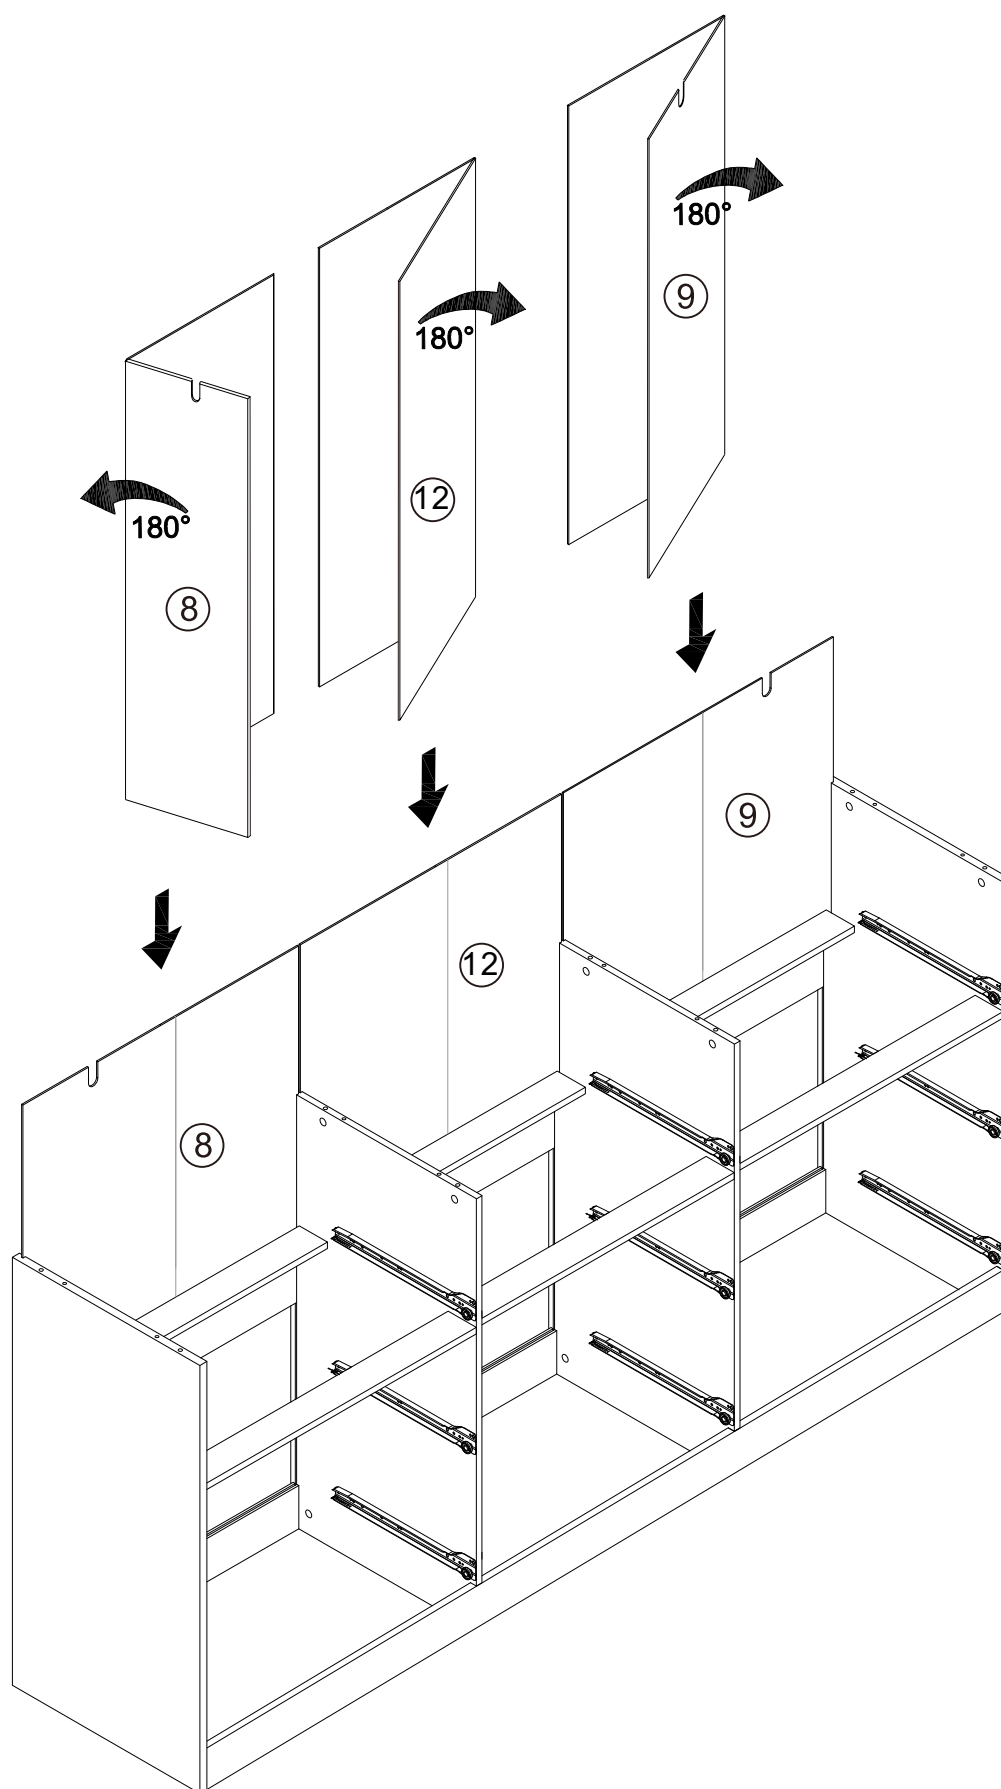

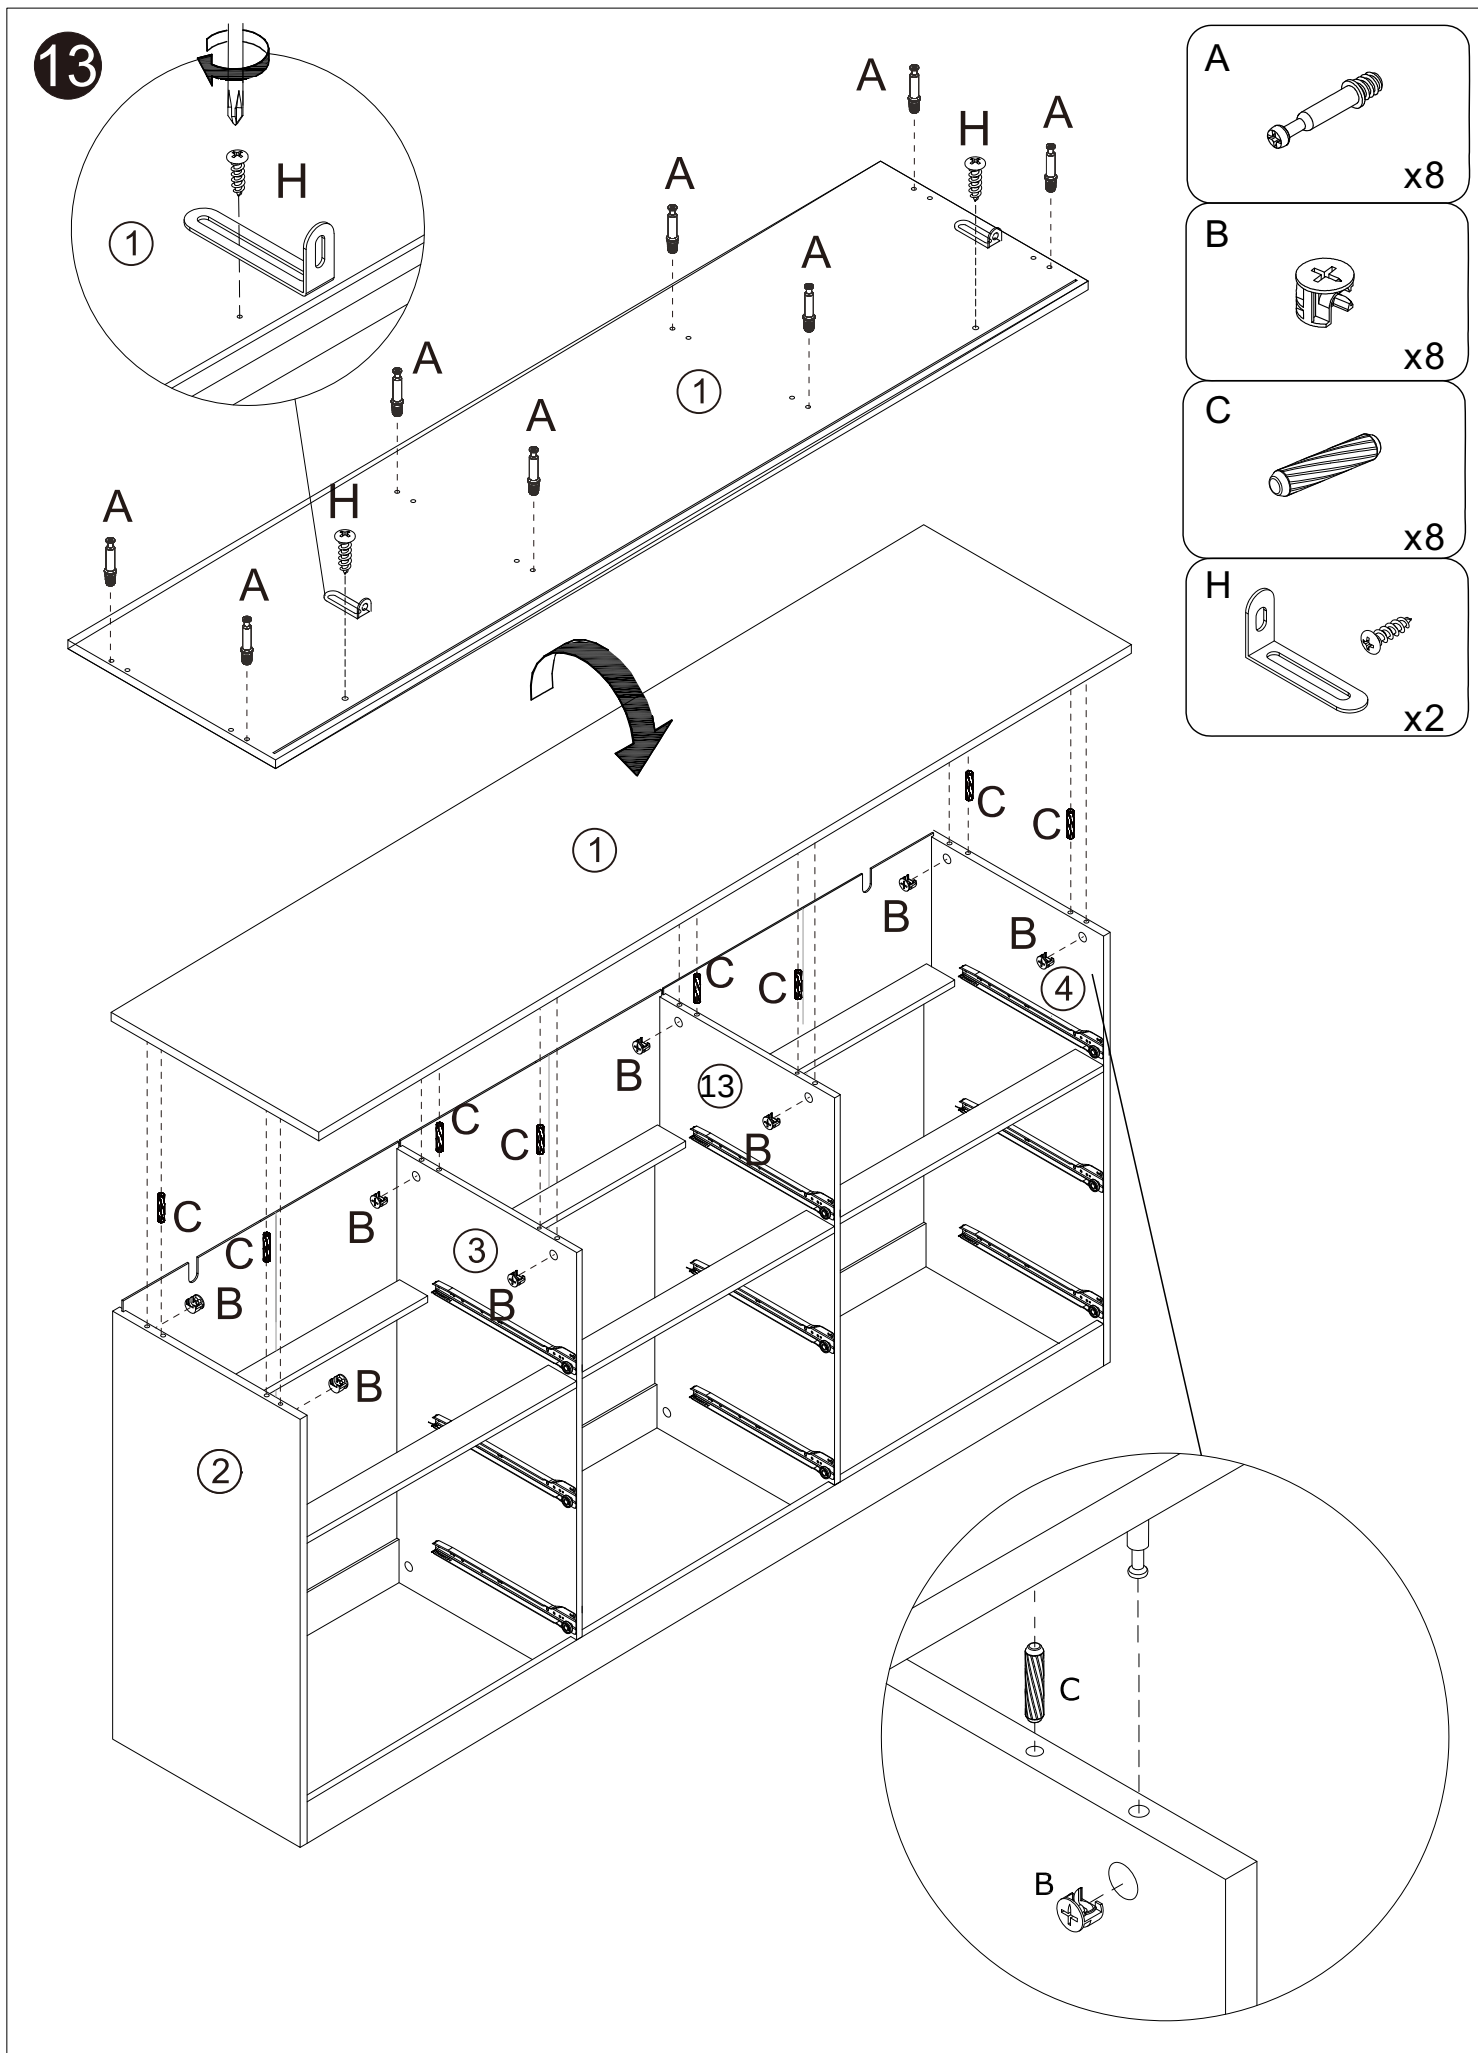

14

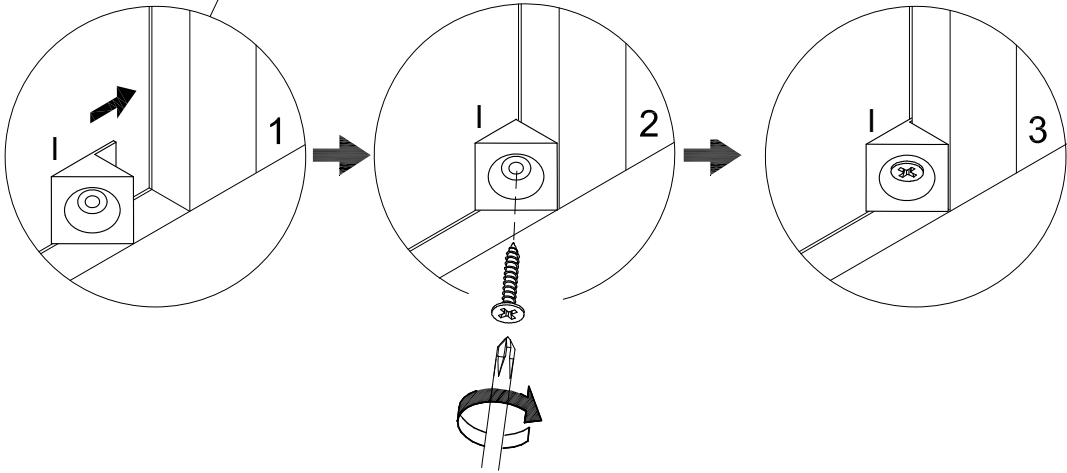
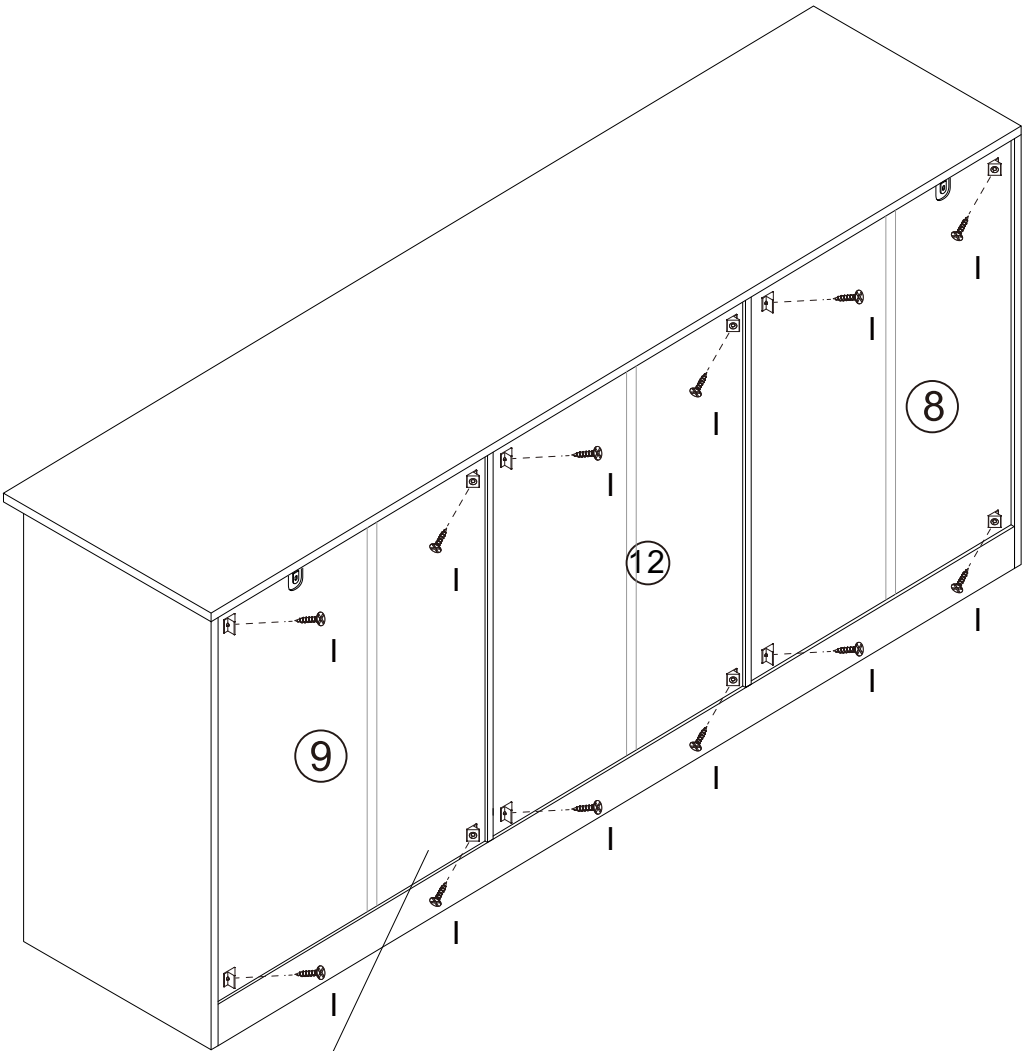
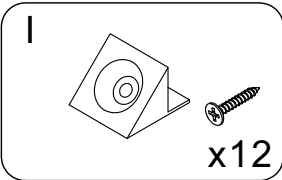


15

H




x2

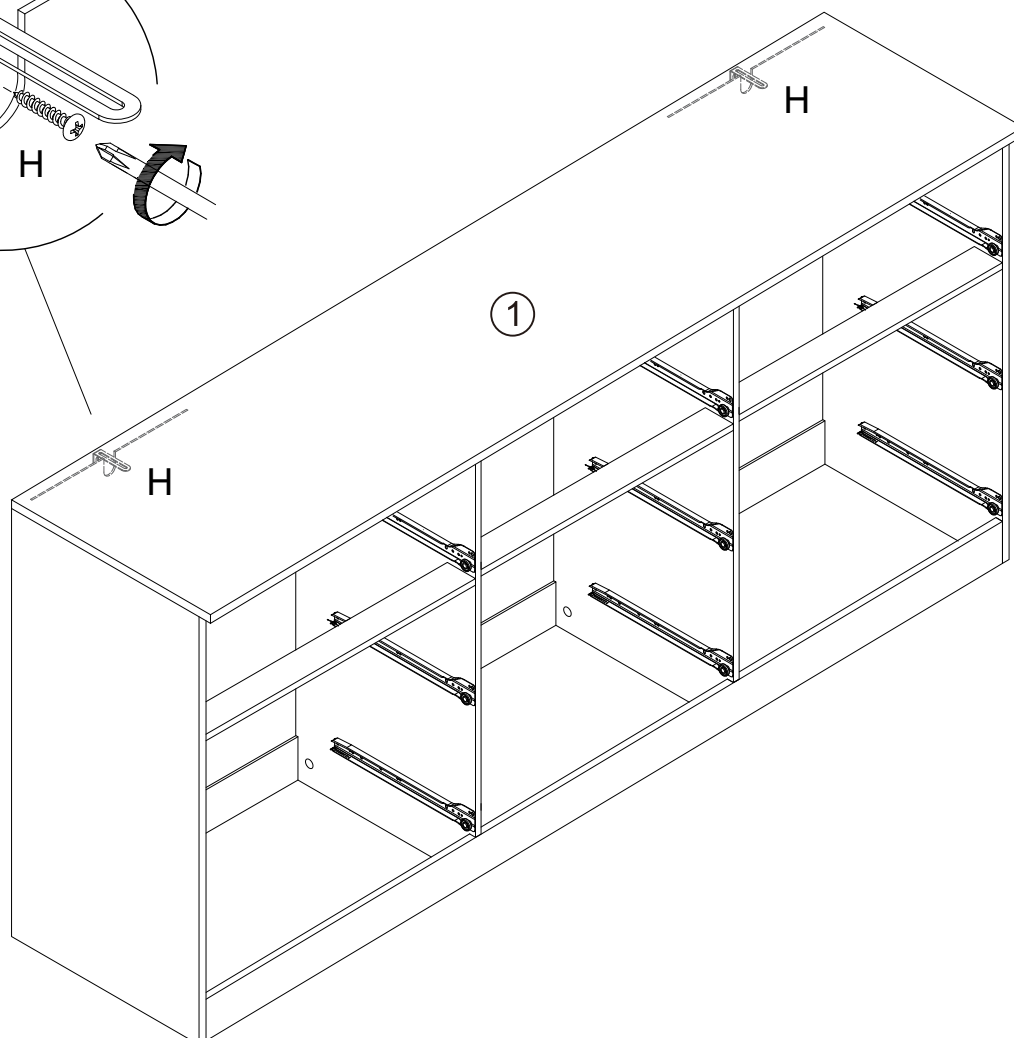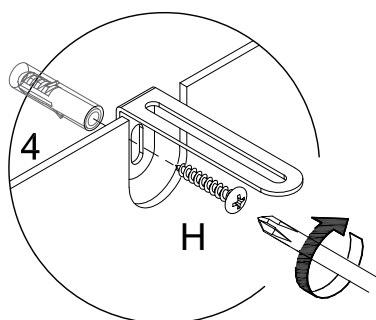
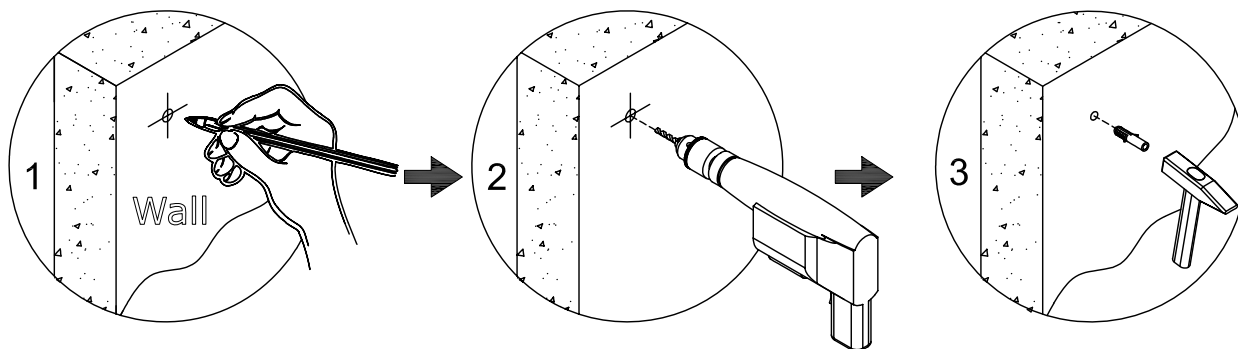


16



A





x36

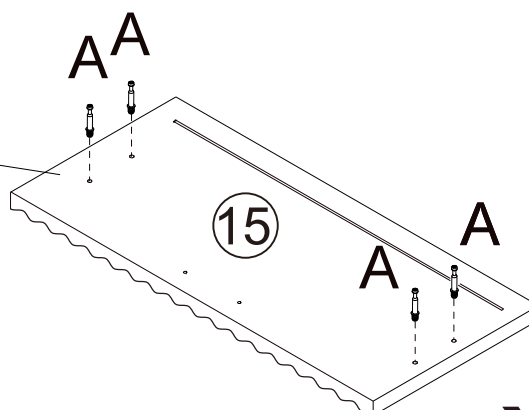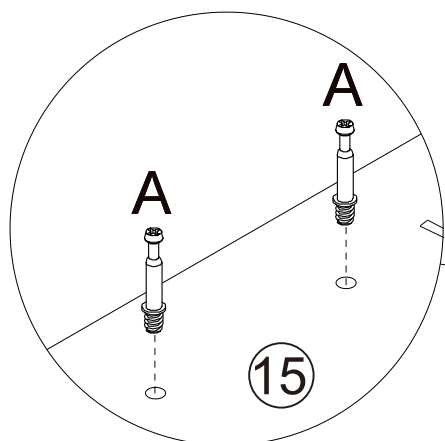

x3

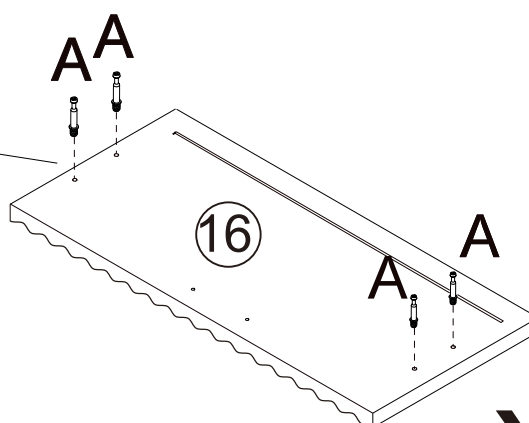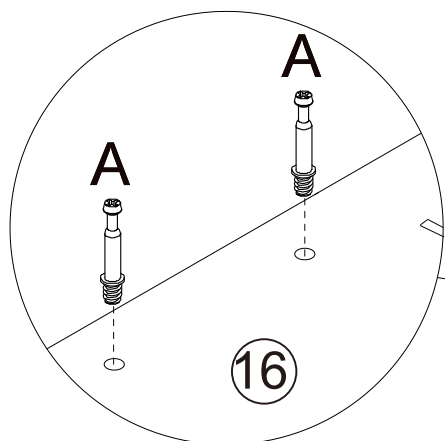

x3

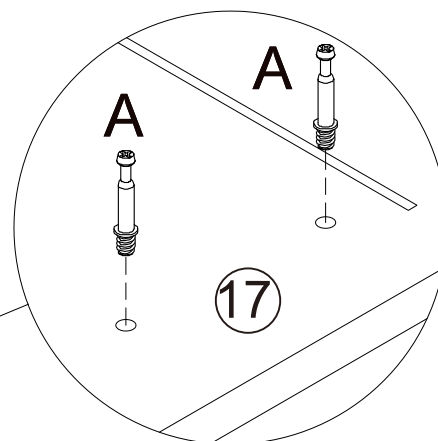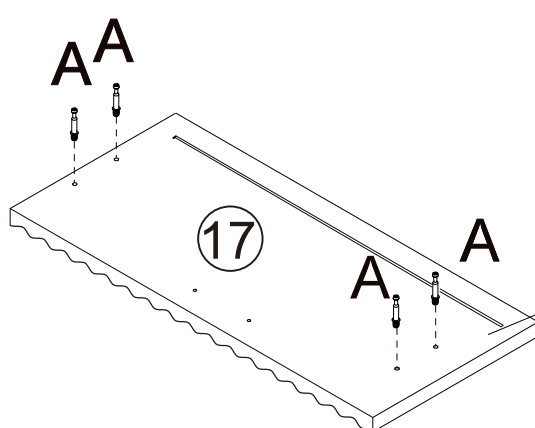


x3

17

D




x36

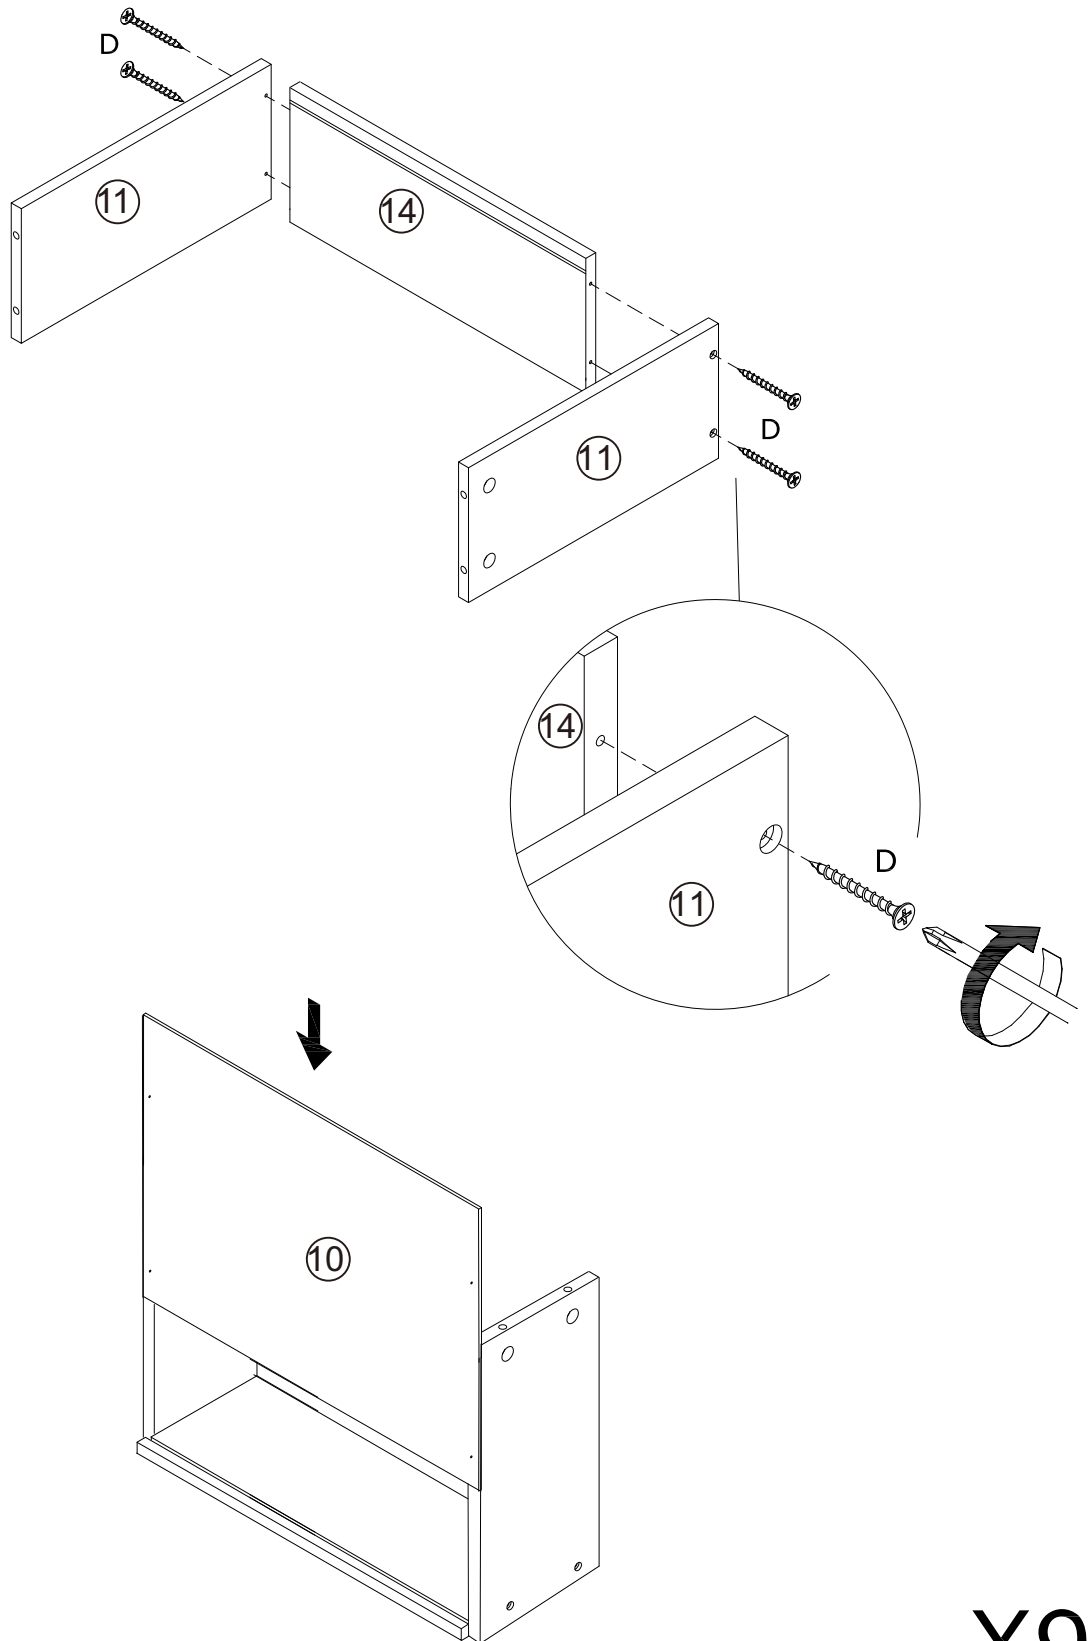

X9

18

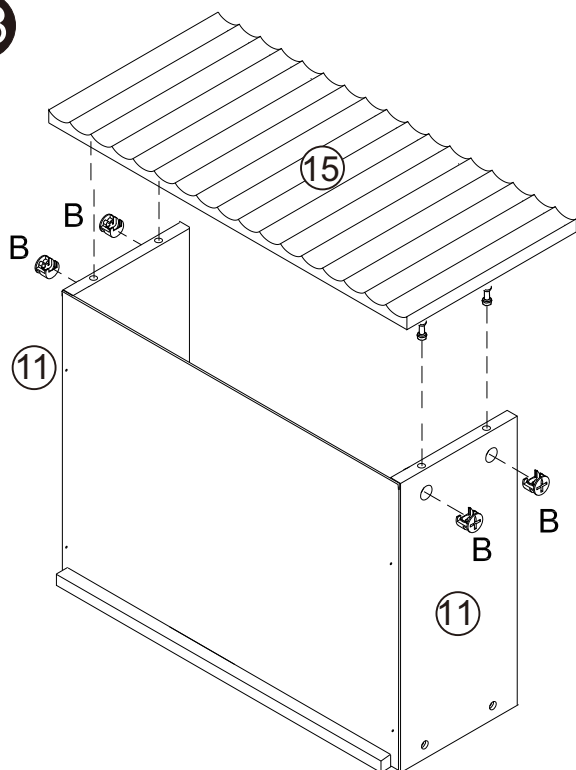


B




x36

x3

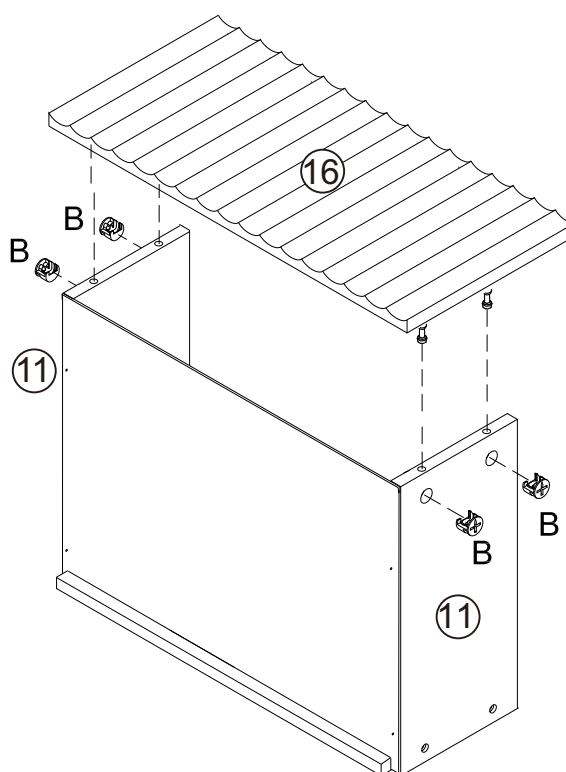


x3

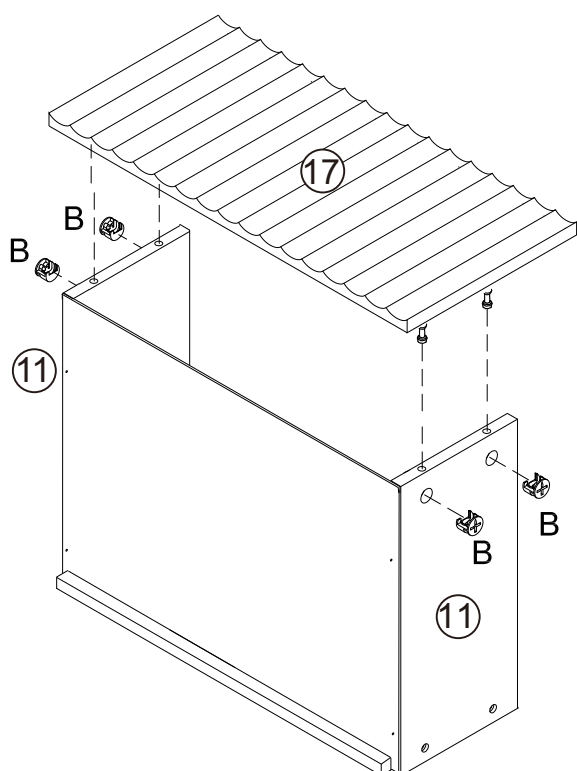

x3

19

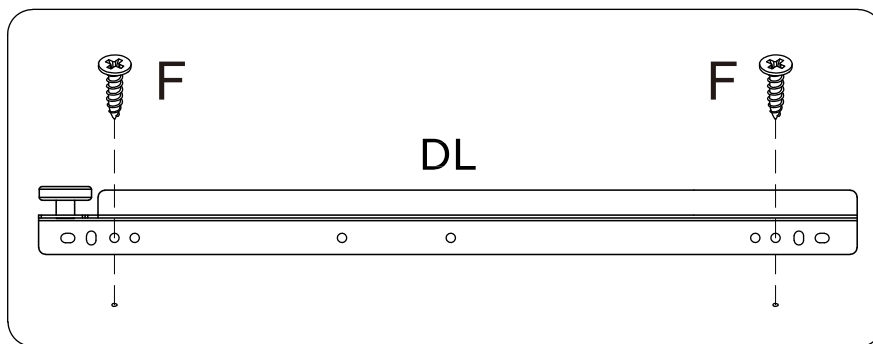

E



x18

F




x36

G




x9

DL








x9

DR



x9

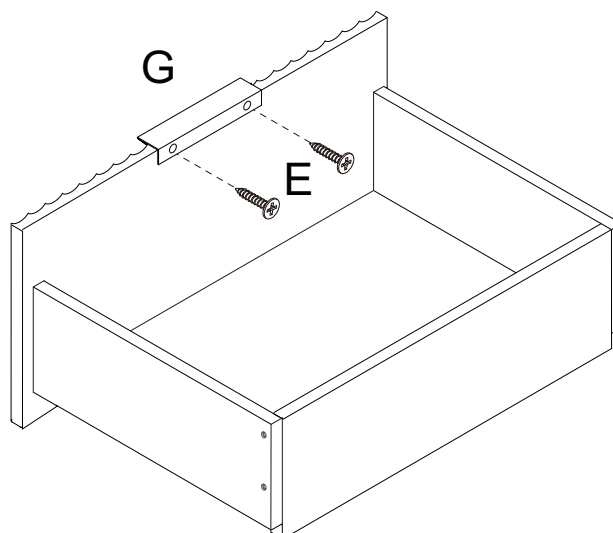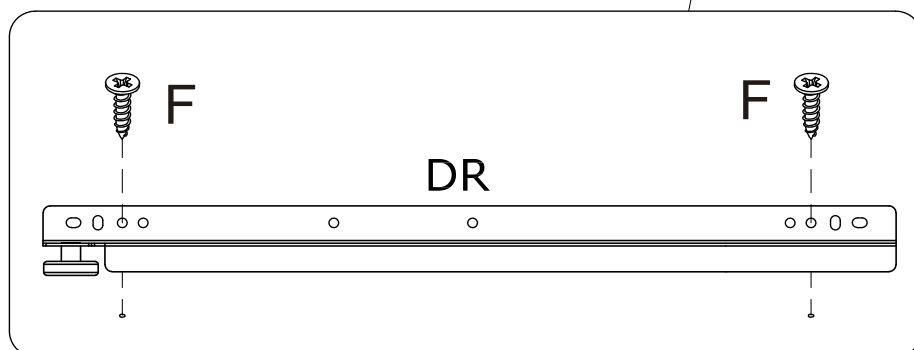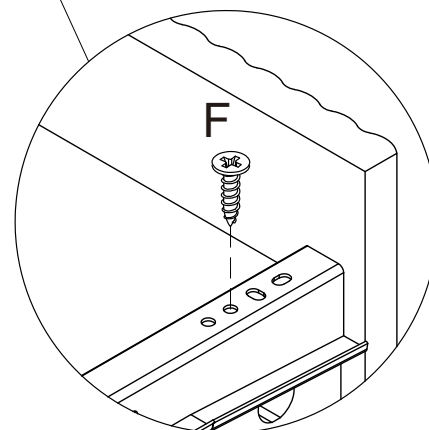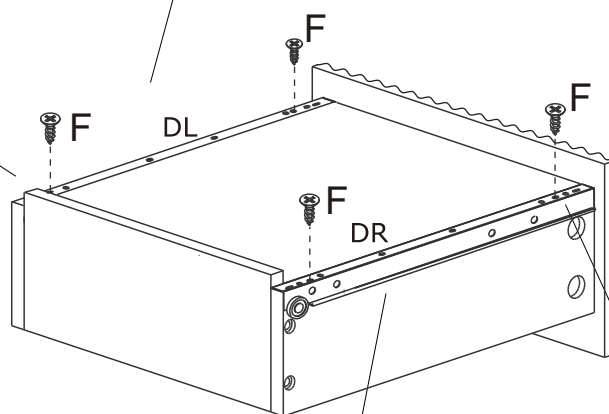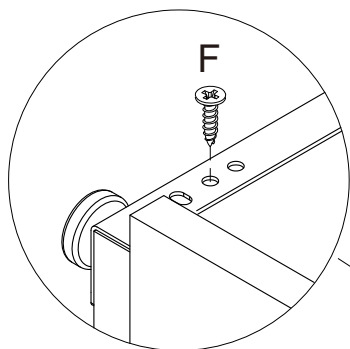

x9



Pay attention to the drawer number; do not place items incorrectly

