## Assembly Instruction Sheet #IS-1034P40-14 For Style 1034P40-14

Tools Required: Fisthead screwdriver, Philips screwdriver, pilers, who culture, who shippers, electrical tape, safety gli Limit Source: (14) G9 MAX46W (Not Include).


dy Tlane: 10.20 minut

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are miseting or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement

## **▲ Warnings and Cautions**


Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electricism if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

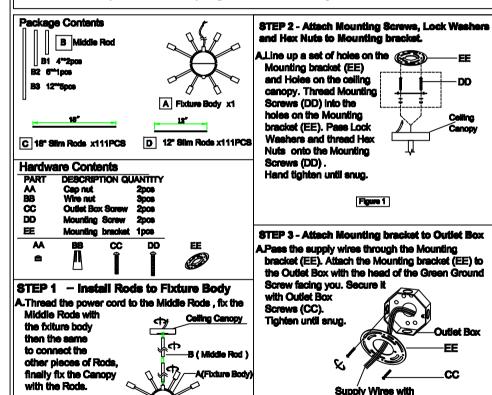


## STEP 4 - Fit Ceiling Canopy to Mounting bracket Assembly

A. Fit the ceiling cenopy to Mounting Screws (DD) and secure with Cap nut (AA). Note: The ceiling canopy should be anug against the ceiting and the Mounting Balls (AA). If not, adjust the length of the Mounting Screws (DD) by unecrewing the Hex Nut and Lock Washer and then screwing Mounting Screws (DD) in or out of the Mounting bracket (EE) until the correct length is achieved. Once the ceiling canopy to secure, remove the Cap nut (AA) and celling canopy and proceed to Step 5.




## STEP 5 - Wire Connections

A. Use standard wire connectors to make all wire connections. Twist connectors until wires are fightly joined together. Wren each connection with approved electrical tane and carefully stuff all the connected wires into the Outlet Box.

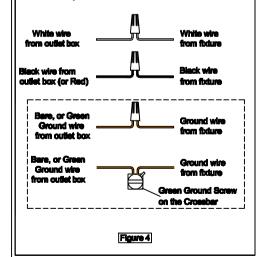


STEP 6 - Install Ceiling Canopy to Ceiling A. Carefully tuck all wires into the outlet box and position the ceiling cancov of the Fixture Body (A) over the cutlet box. Alian the holes in the ceiling cancov with the Mounting Screws (DD), Secure with Cap nut (AA) and hand tighten until anug.

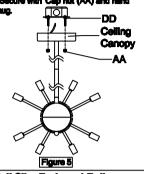

STEP 7 - Install Slim Rods and Bulbs. A. Install bulbs (Not Include) onto sockets and push snuc. into place.

B. Please put the Slim Rods (C) (D) to the Fixture Body (A). Please pay attention to assemble the Slim Rod(C) and (B) like belowing Figure A Cross Pattern

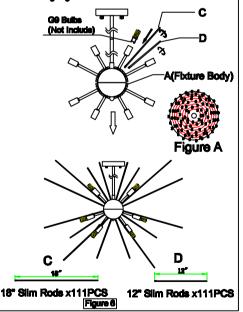

**Outlet Box Screws Ground Wire** 

Figure 2

DD