


DAY BED













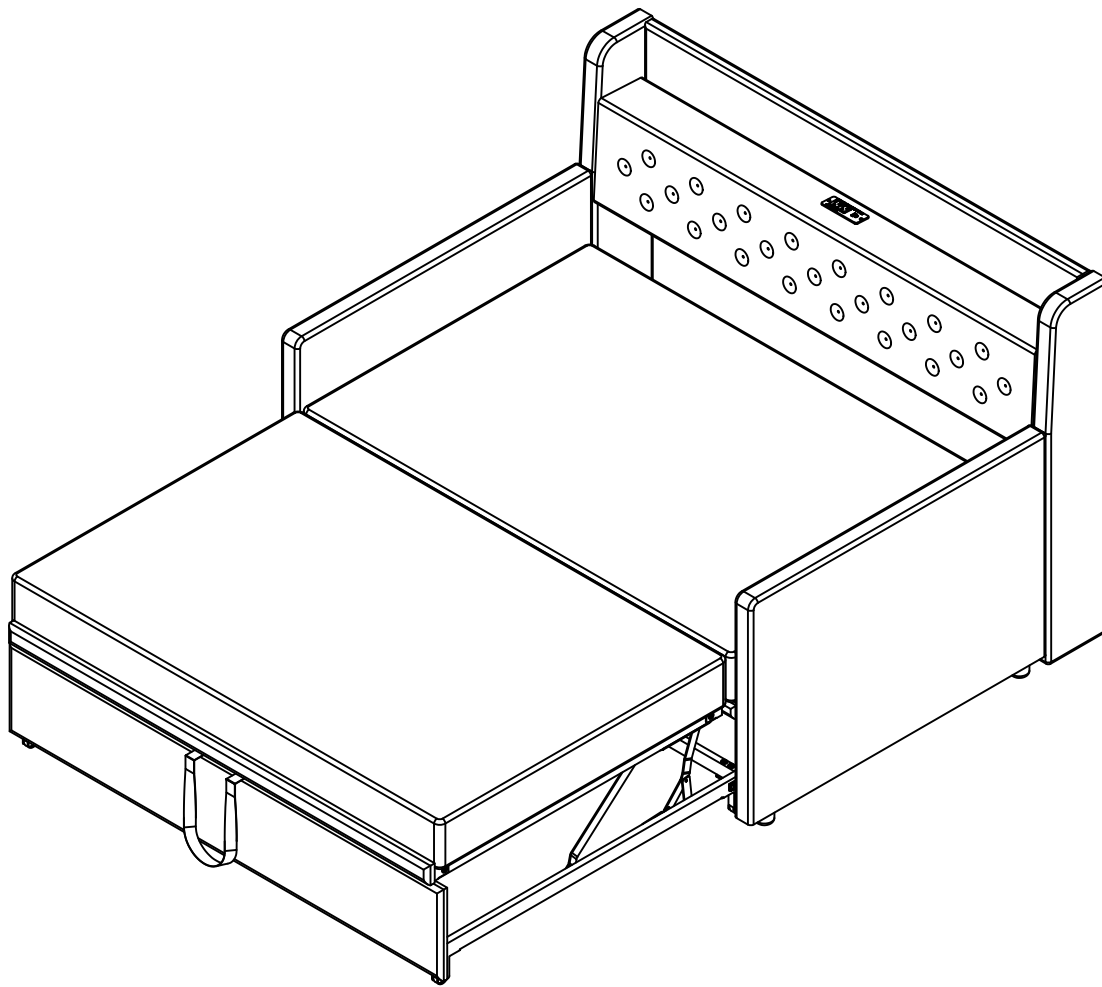


Model: C409-Q-BK-DG













Please Scan the QR code to watch the tutorial video
<https://www.youtube.com/@furnishglow/videos>






Part List (Box 1 - C409-Q-BK-DG)

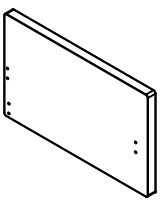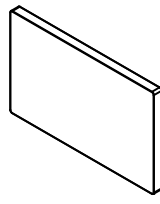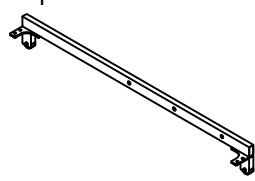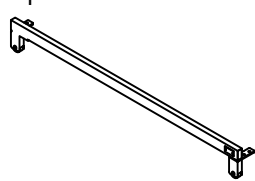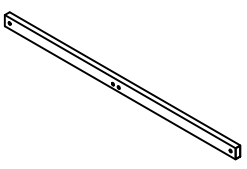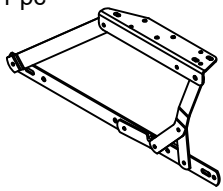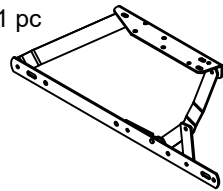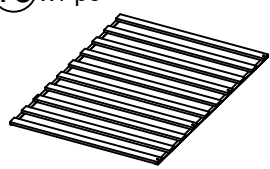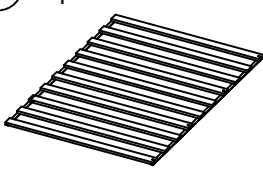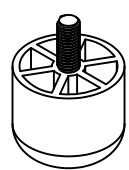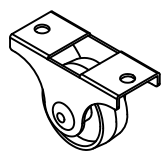① x1 pc 	② x1 pc 	⑪ x1 pc 	⑫ x1 pc 
⑬ x2 pcs 	⑭ x1 pc 	⑮ x1 pc 	⑯ x1 pc 
⑱ x1 pc 	⑲ x1 pc 	⑳ x1 pc 	ⓐ x4 pcs 
ⓑ x2 pcs 	ⓒ x2 pcs 		




Part List (Box 2 - C409-Q-BK-DG)

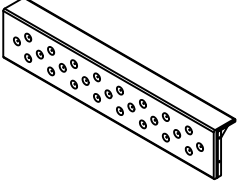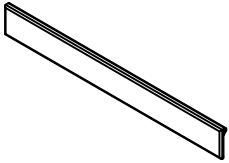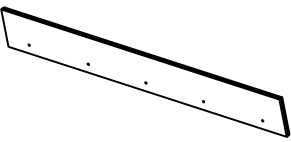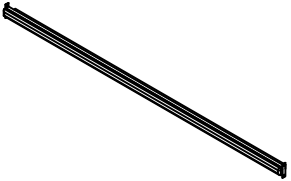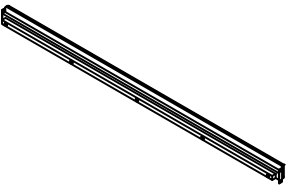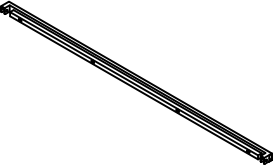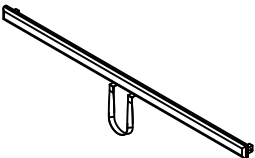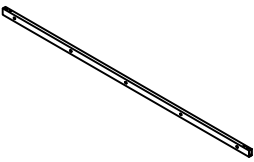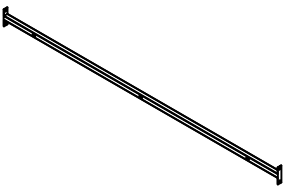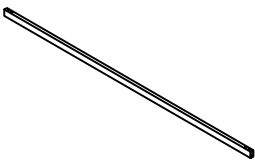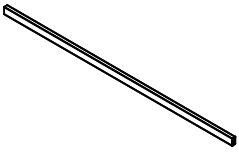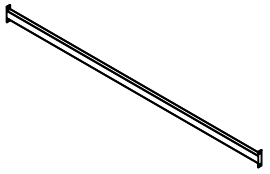③ x1 pc 	④ x1 pc 	⑤ x1 pc 	⑥ x1 pc 
⑦ x1 pc 	⑧ x1 pc 	⑨ x1 pc 	⑩ x1 pc 
⑪ x1 pc 	⑫ x1 pcs 	⑬ x1 pcs 	⑭ x1 pcs 
⑮ x2 pcs  Mattress			




Hardware List (Box 1 - C409-Q-BK-DG)

A x6 pcs  Bolts (M8x15mm)	B x8 pcs  Bolts (M8x35mm)	D x8 pcs  Bolts (M8x50mm)	E x26 pcs  Bolts (M6x15mm)
F x24 pcs  Bolts (M6x30mm)	G x4 pcs  Bolts (M6x45mm)	H x4 pcs  Bolts (M6x50mm)	I x4 pcs  Bolts (M4x6mm)
K x4 pcs  Non-slip nuts (M8)	L x2 pcs  Allen Key	M x1 pc  Spanner	S x2 pcs  Screw (M4x12mm)
T x1 pc 			

Step 1

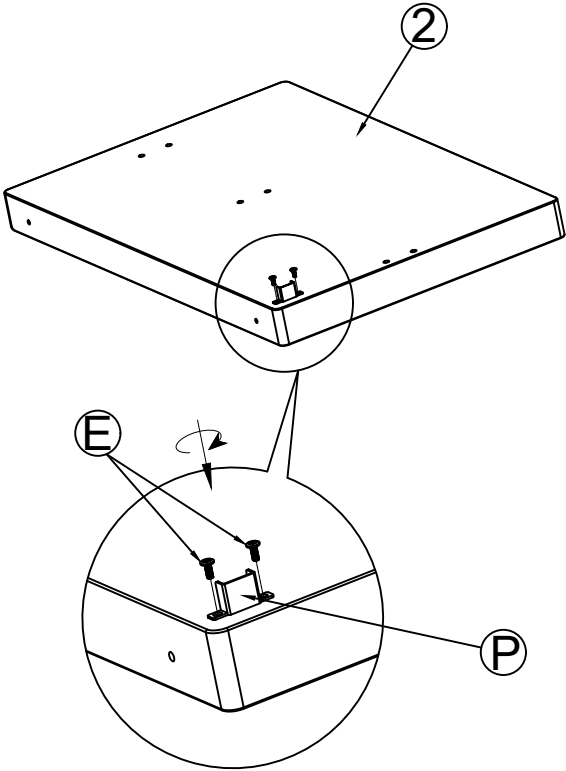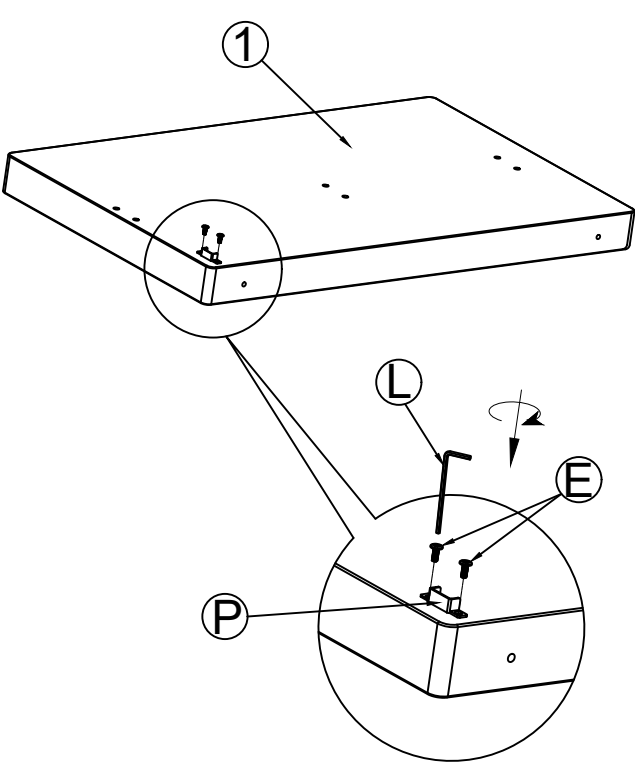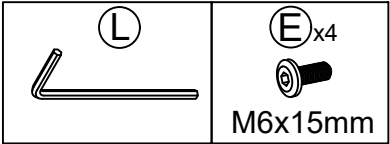

Step 2

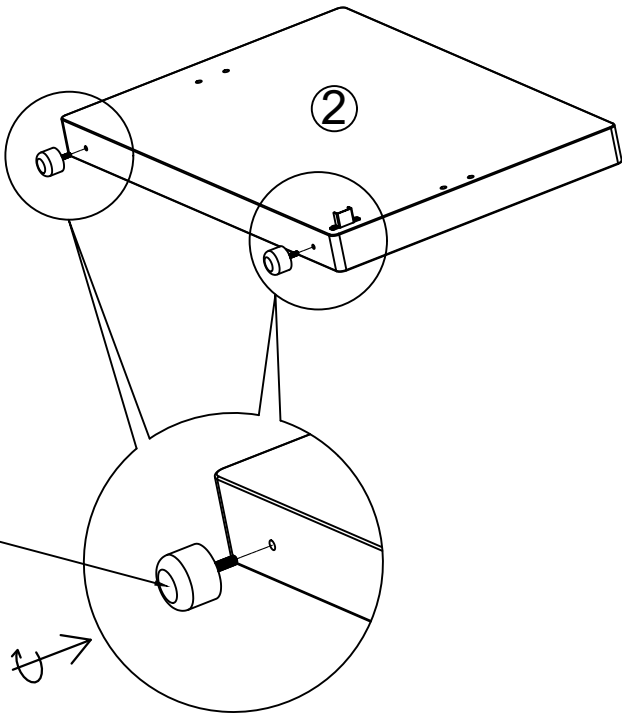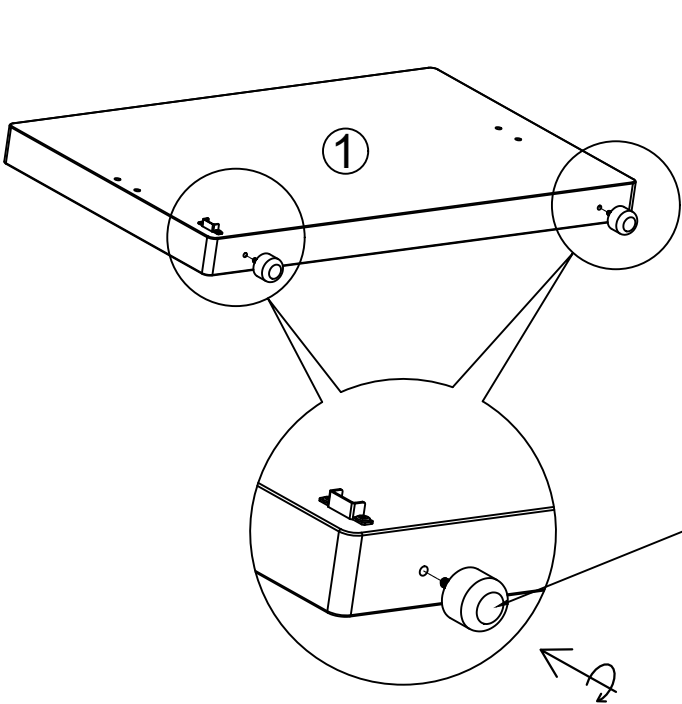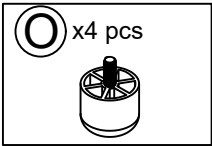

Step 3




L



E_{x8}



M6x15mm

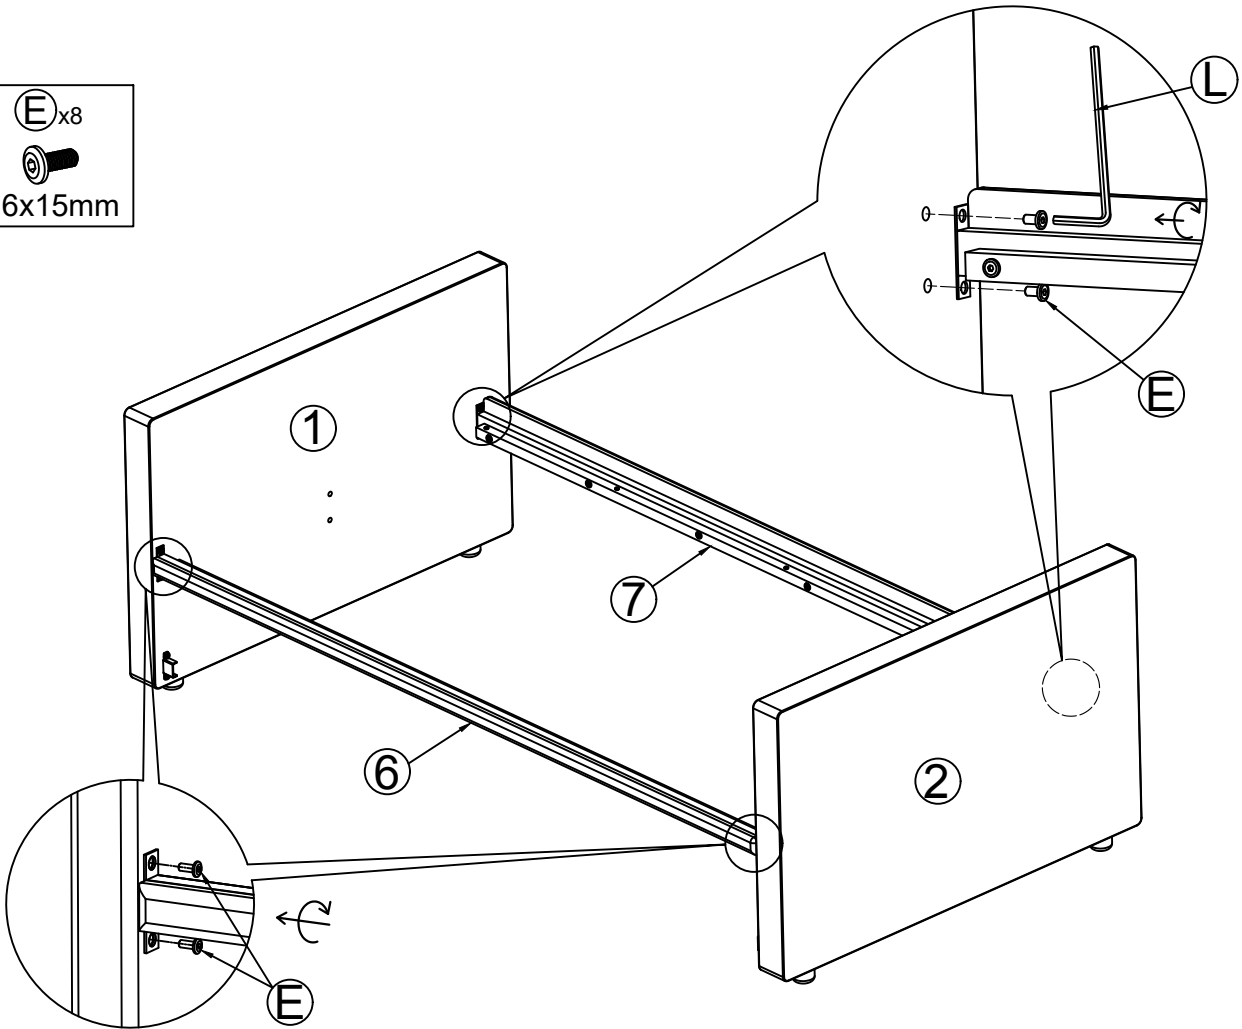

Step 4




L



E_{x4}





M6x15mm


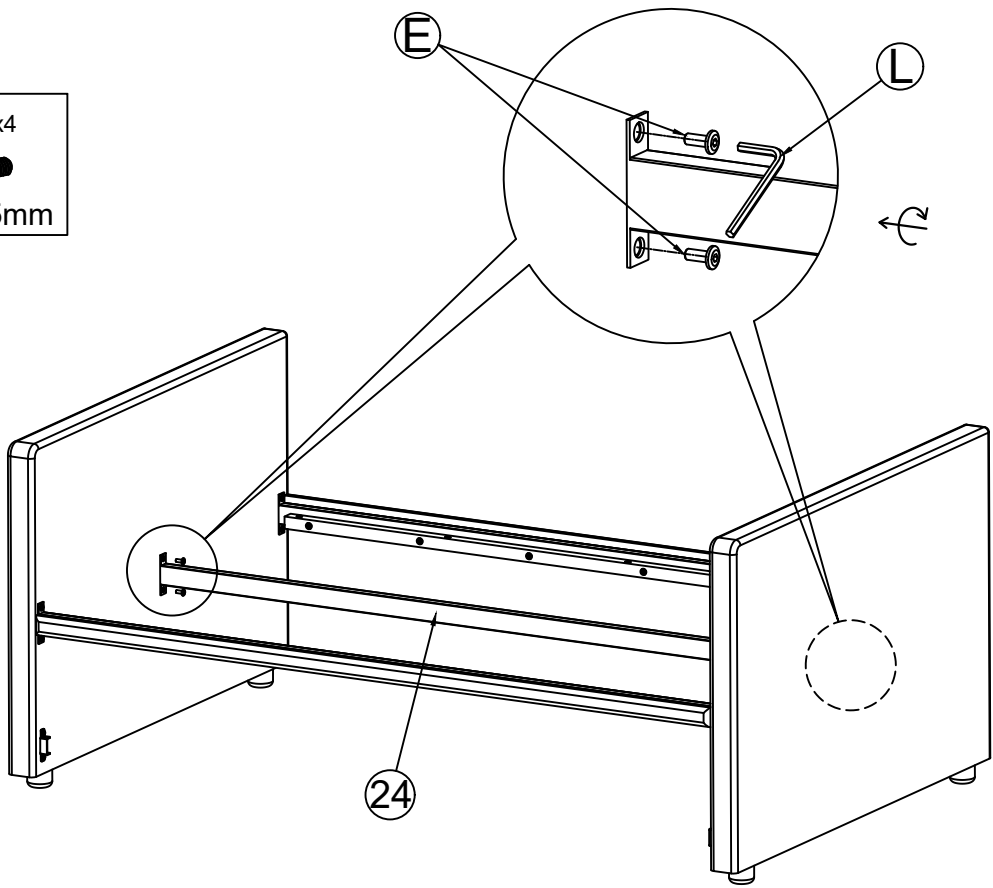


Page: 6 of 16



Step 5

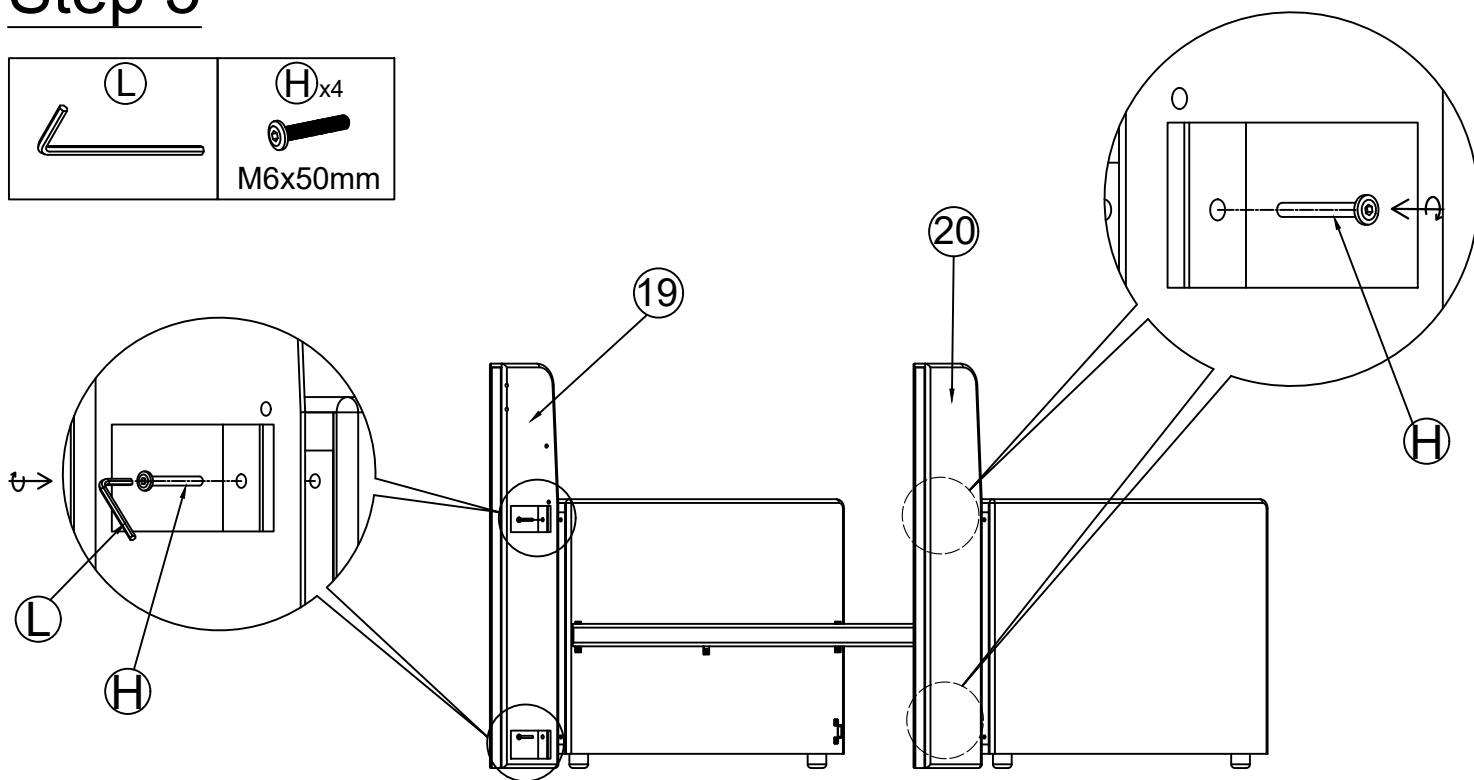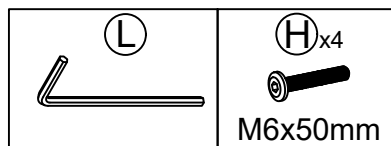



Step 6

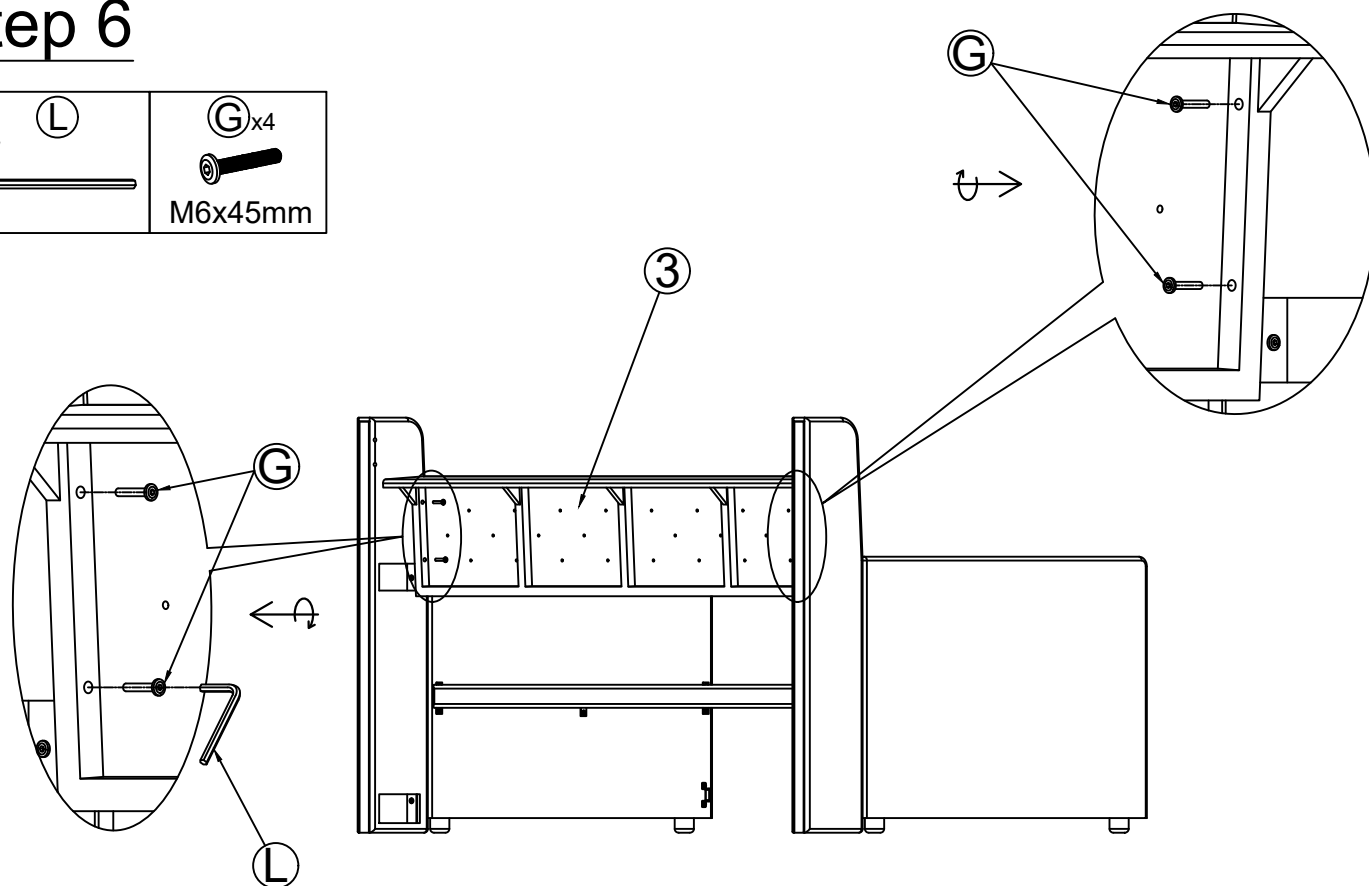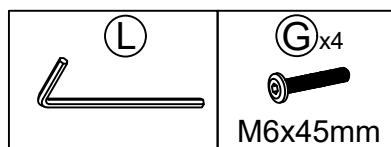

Step 7

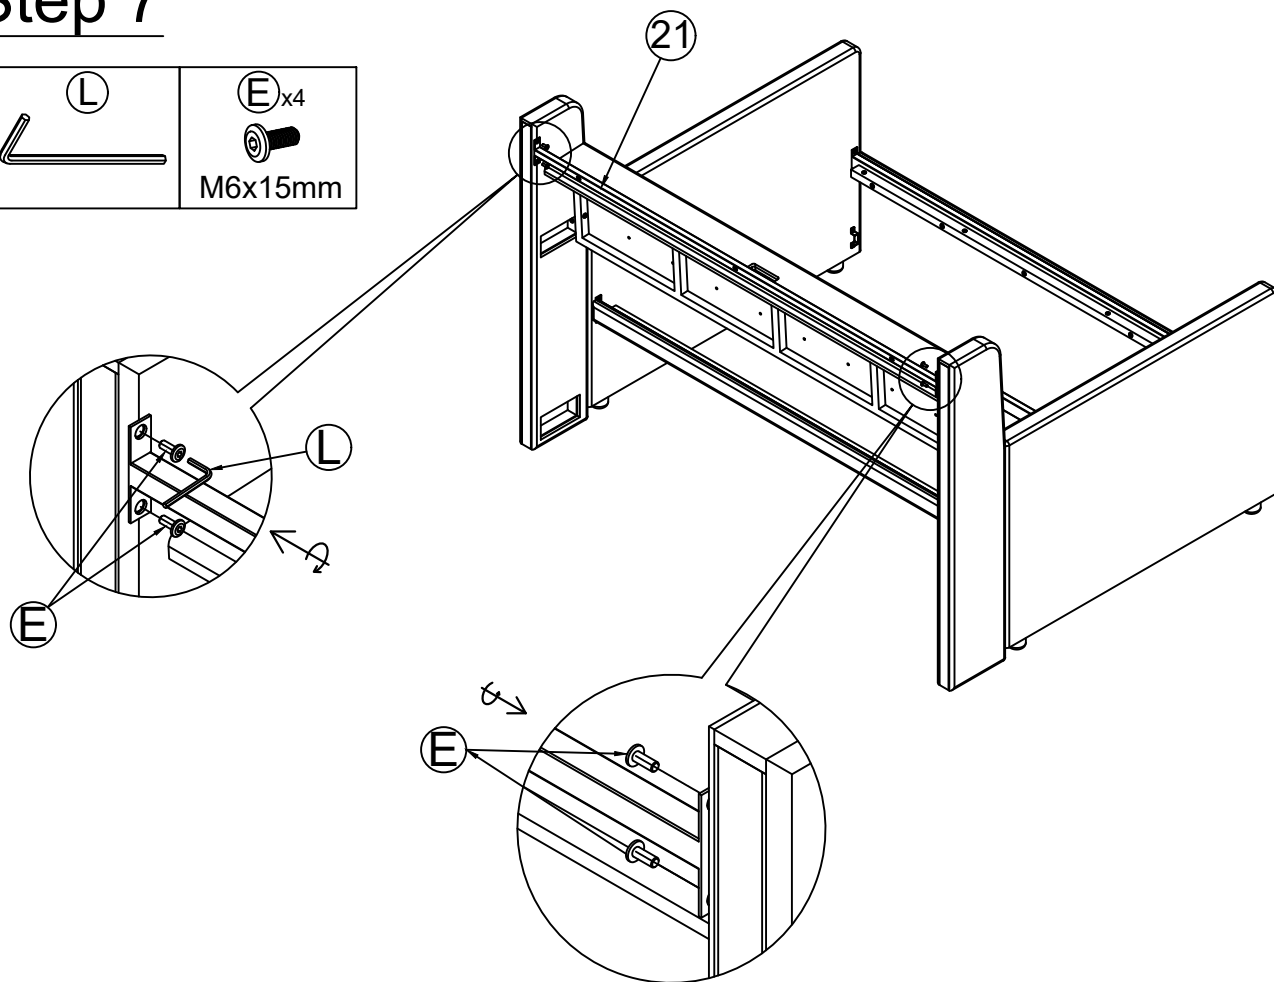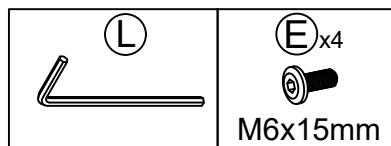

Step 8

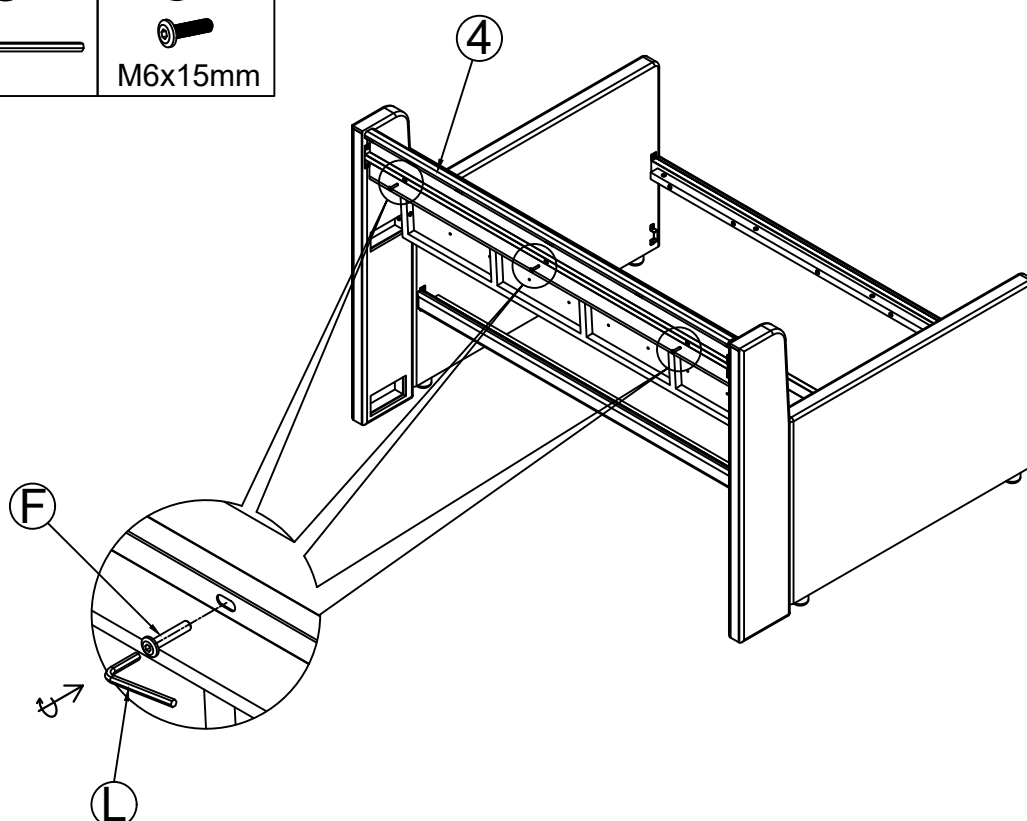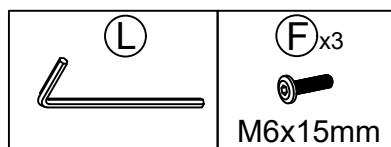


Step 9

I

x4



M4x6mm

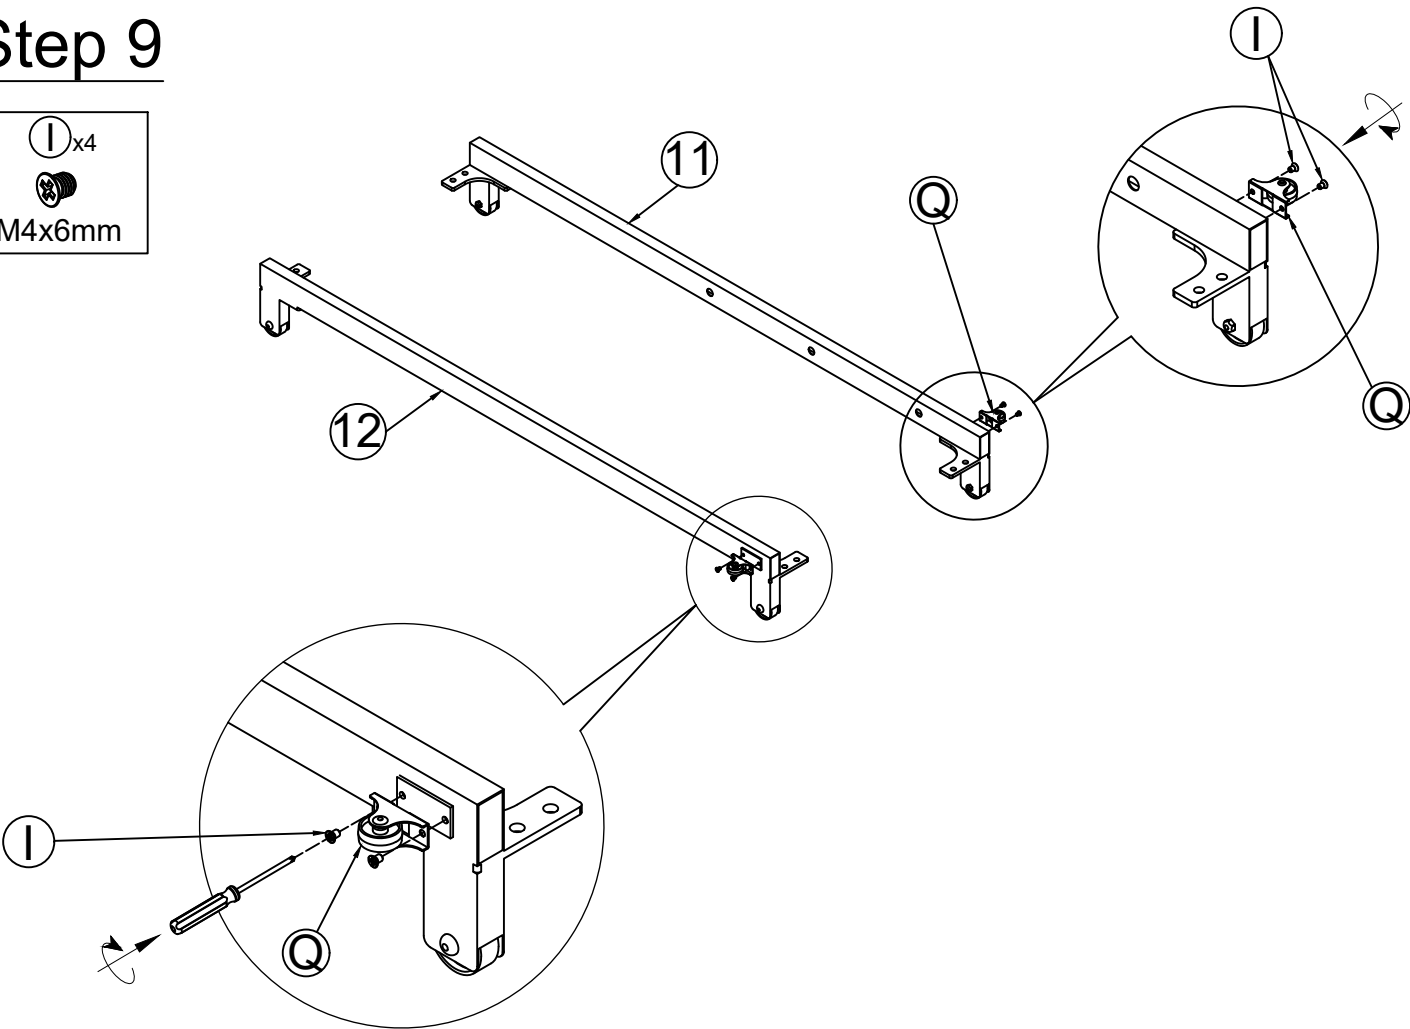

Step 10

L




D



x8





M8x50mm

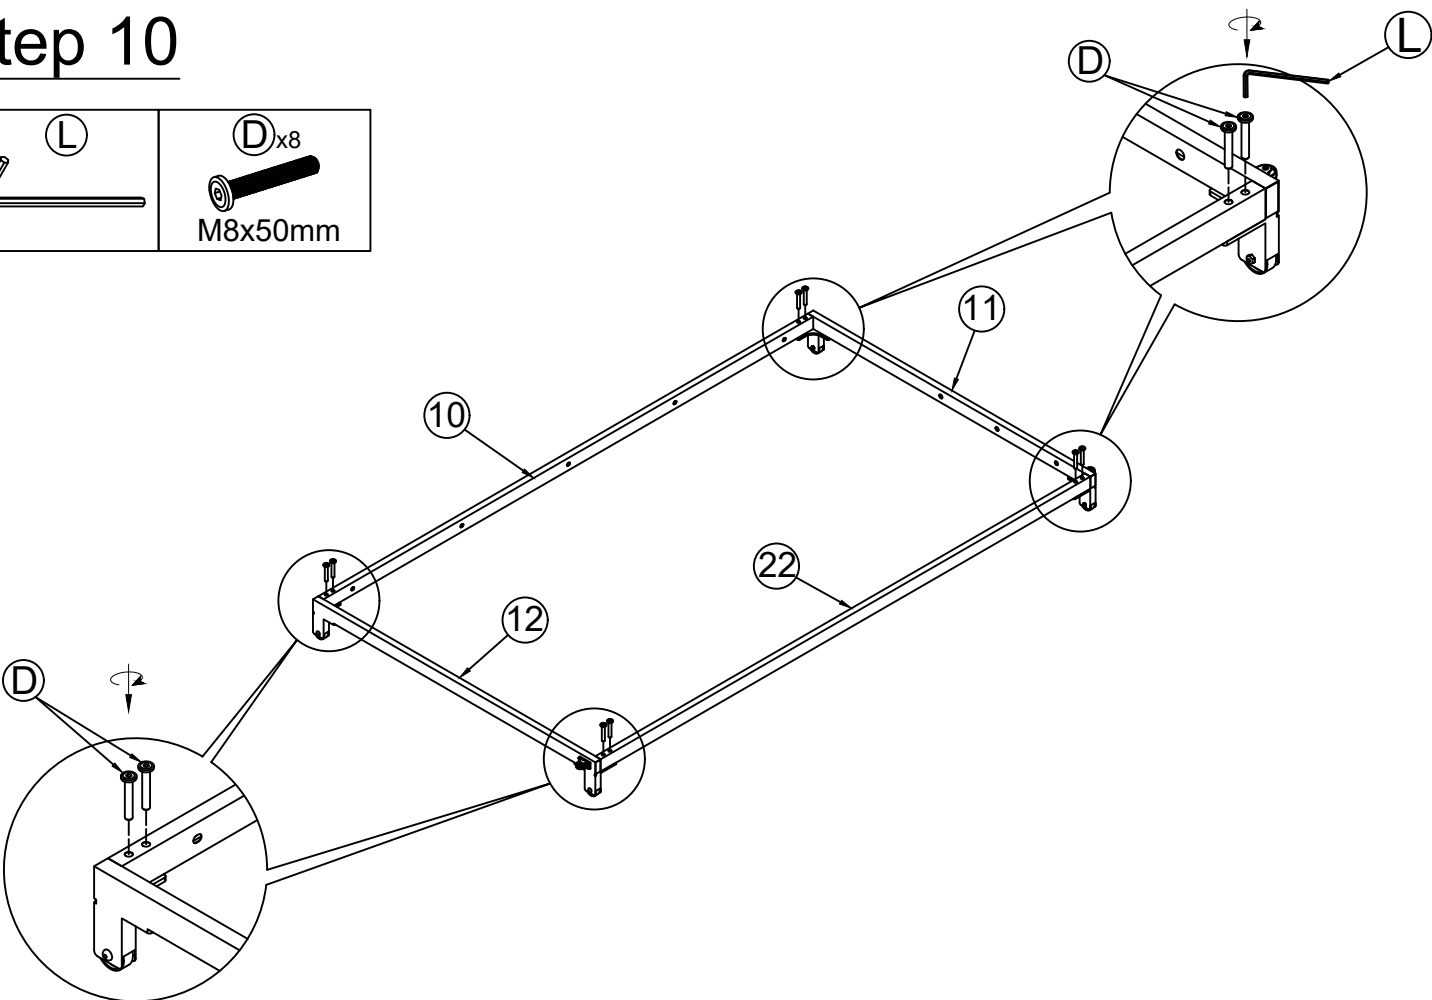

Step 11

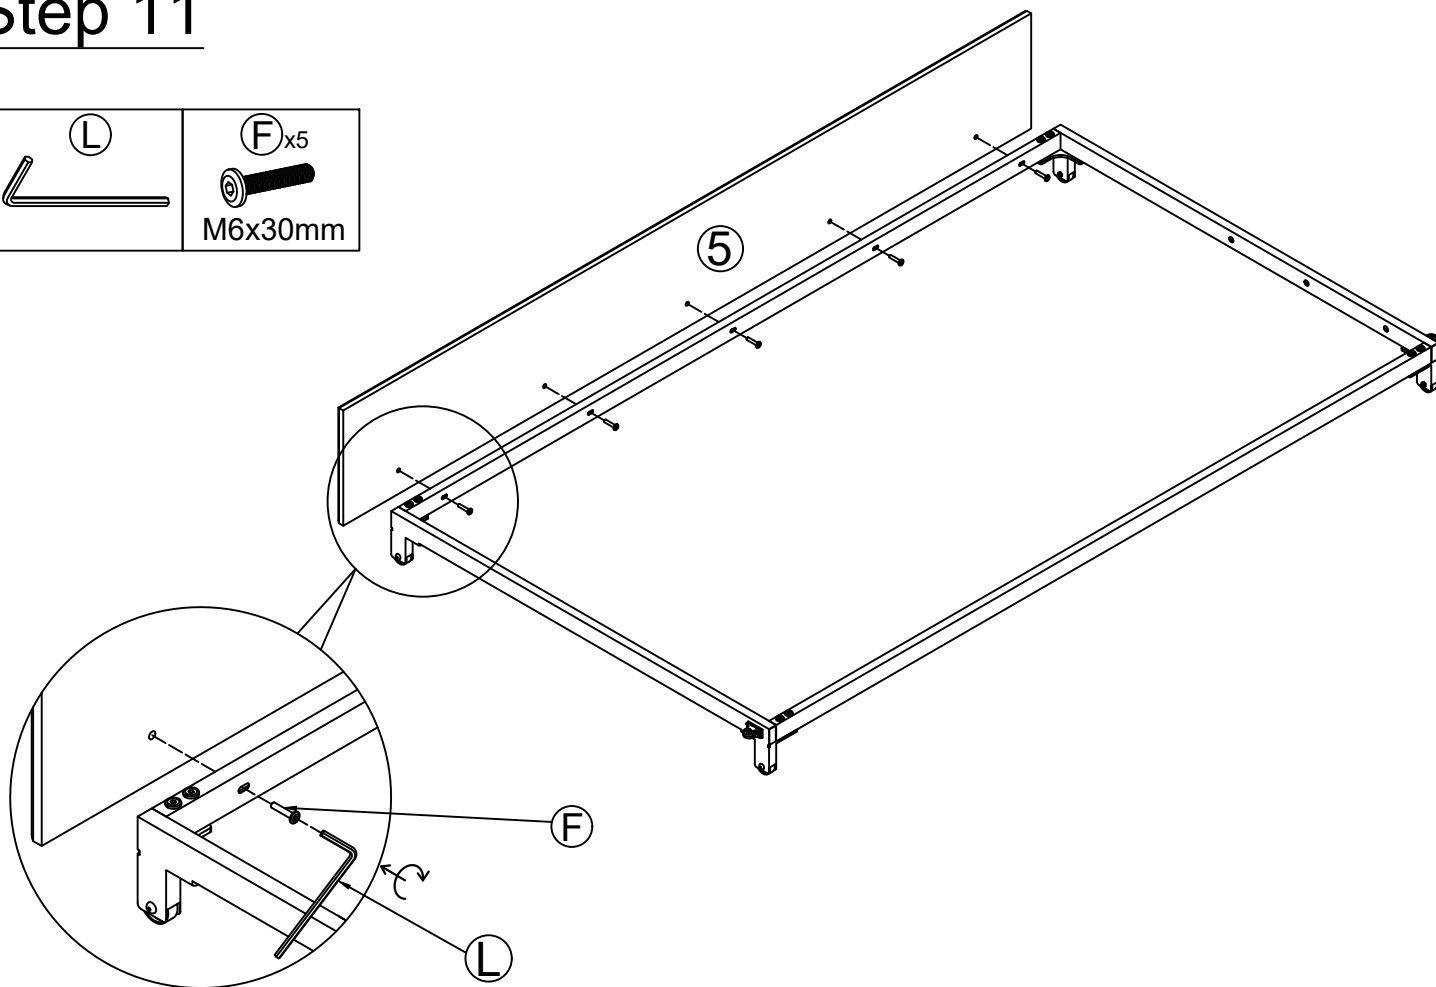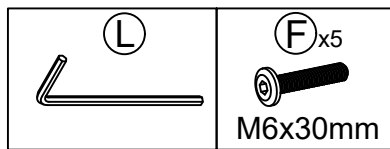

Step 12

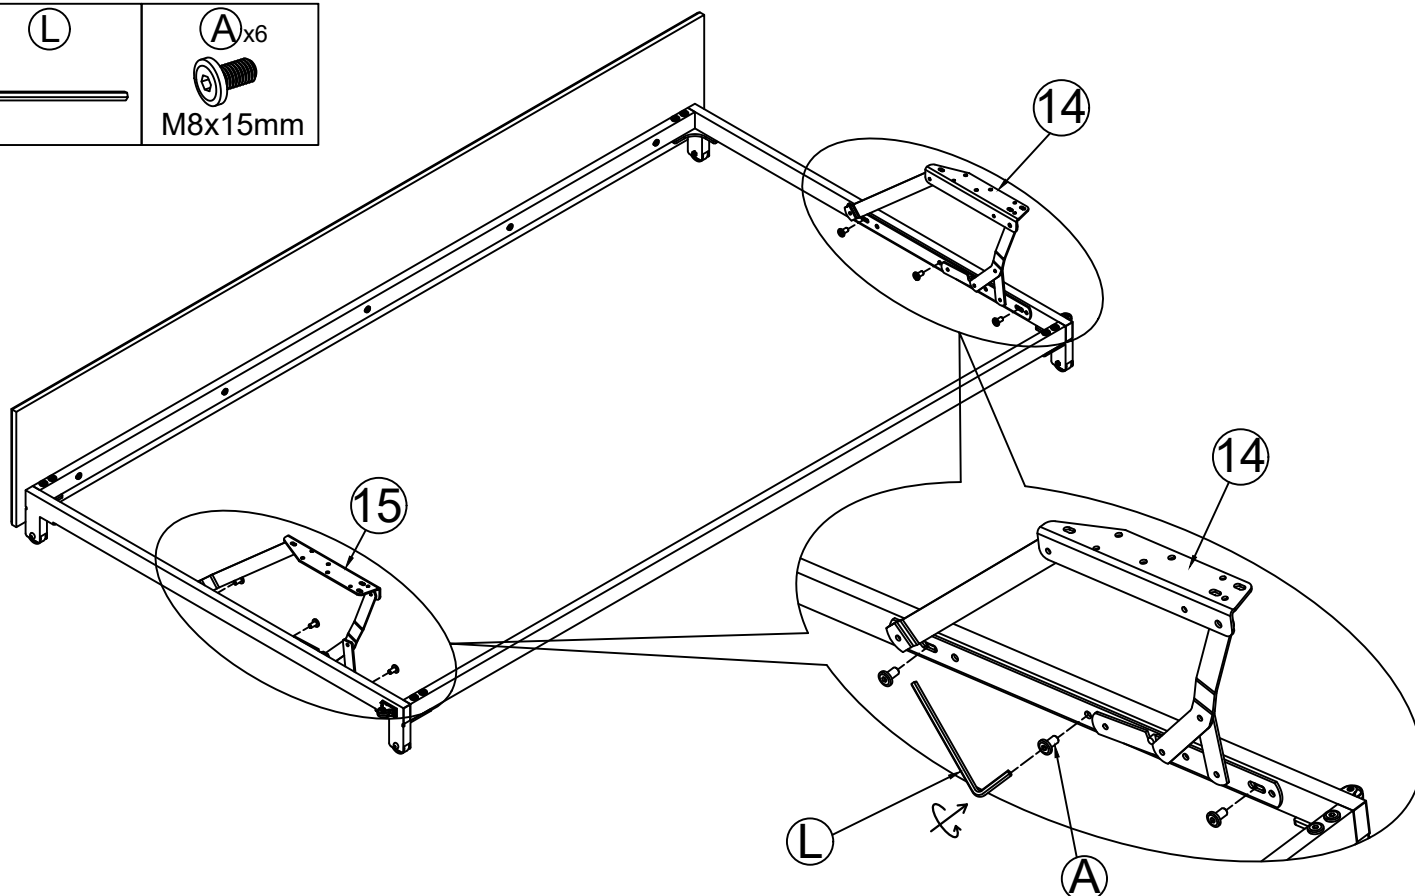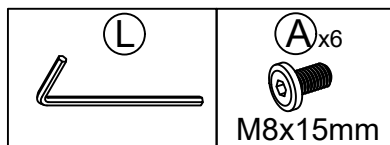

Step 13




L



E x6

M6x15mm

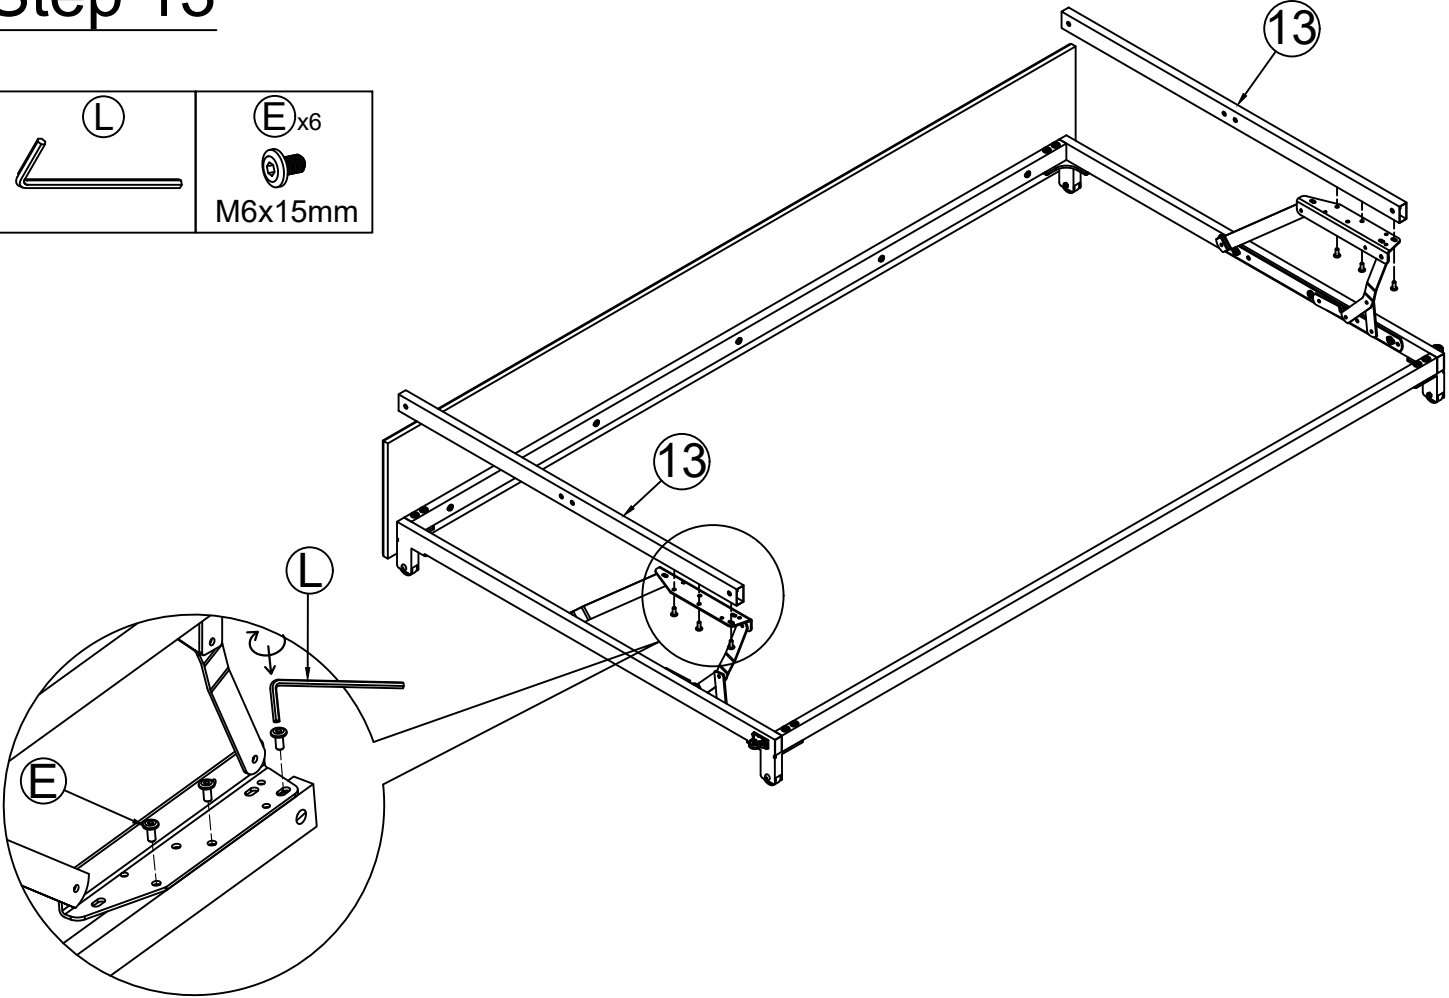

Step 14



L




B x4

M8x35mm




K x4



M8




M

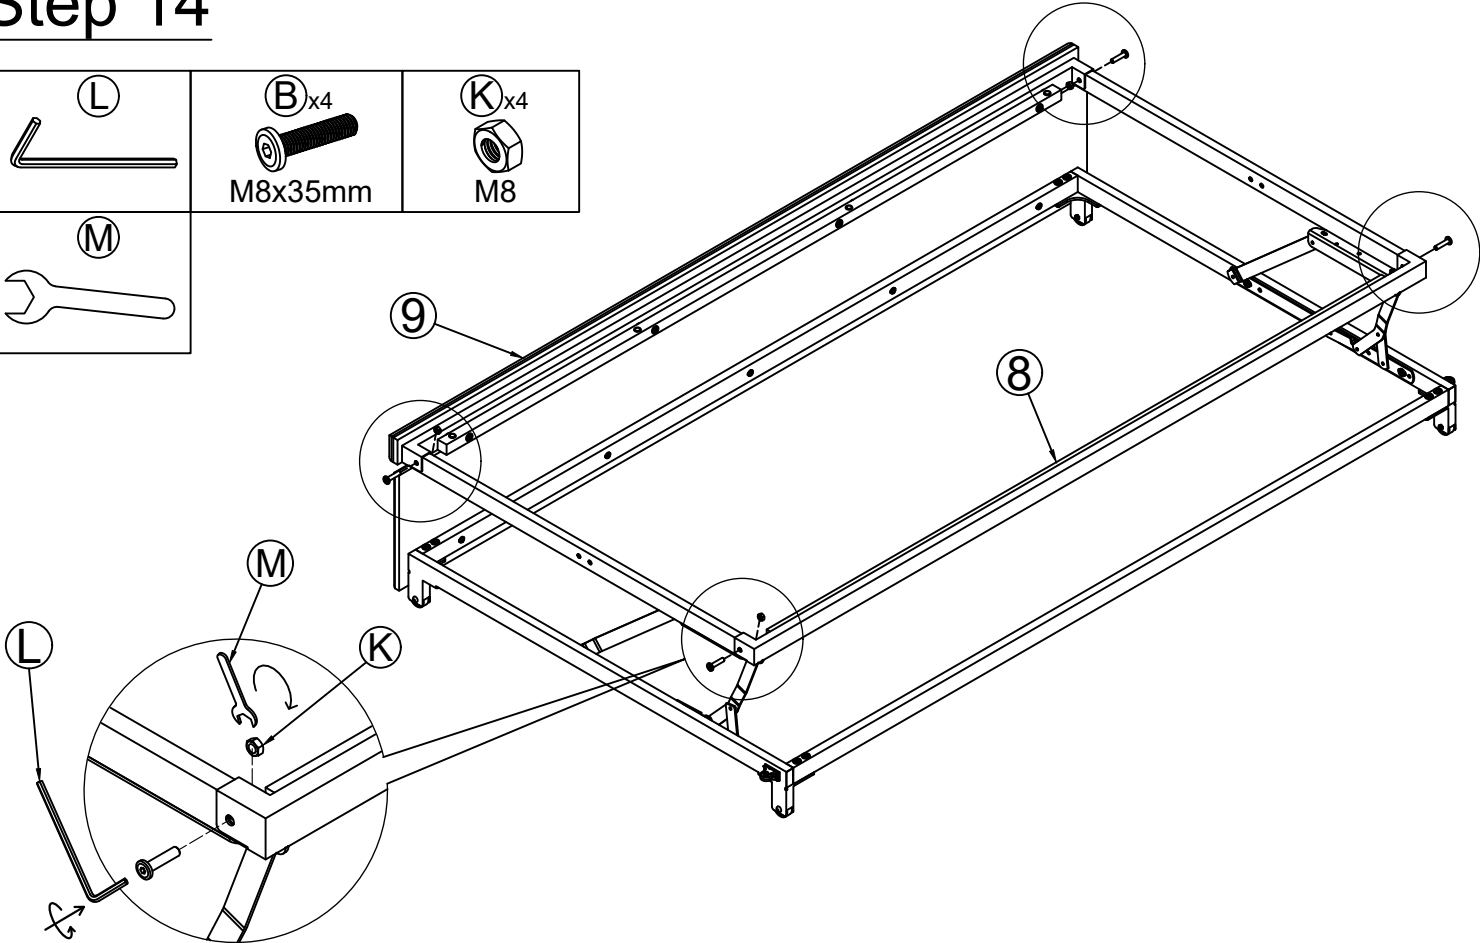



Step 15

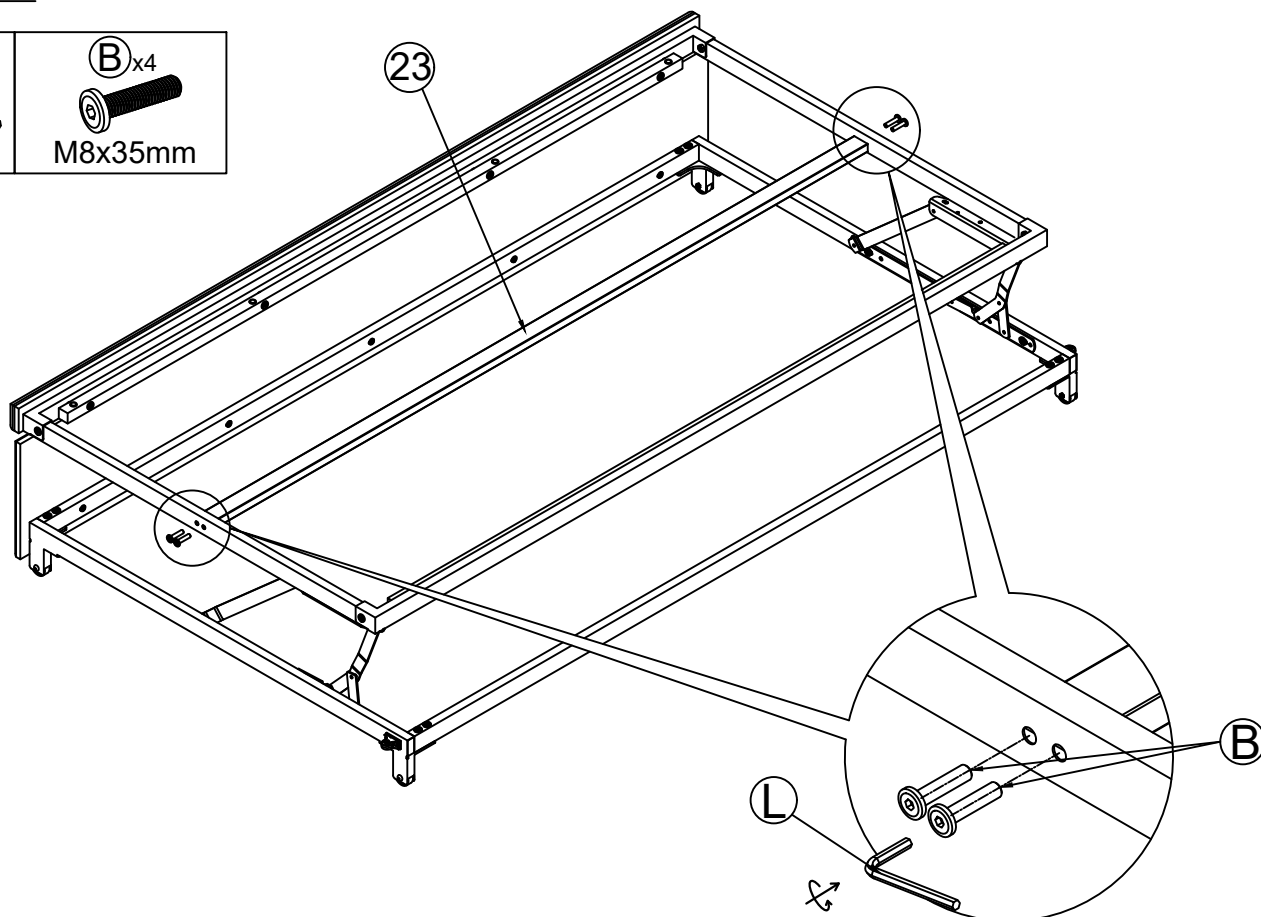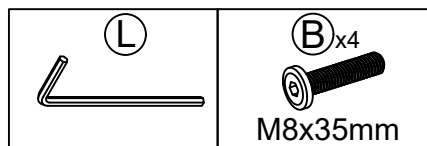



Step 16

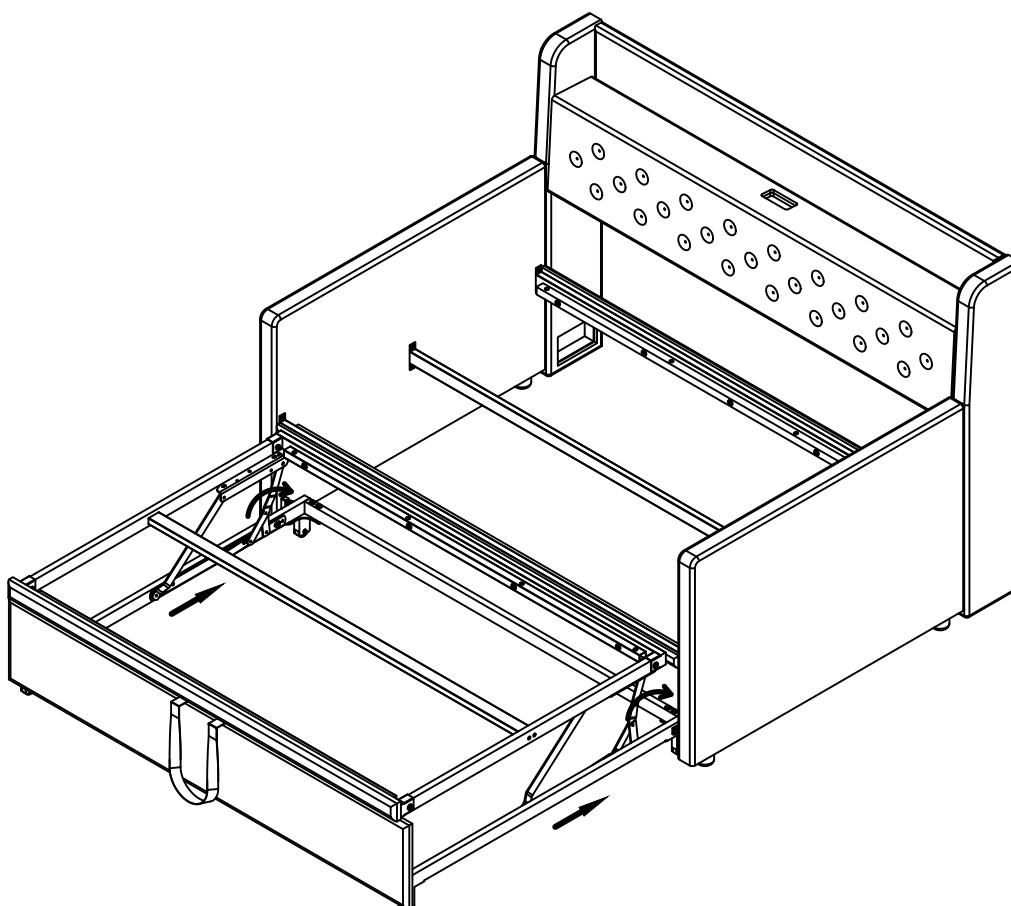



Step 17

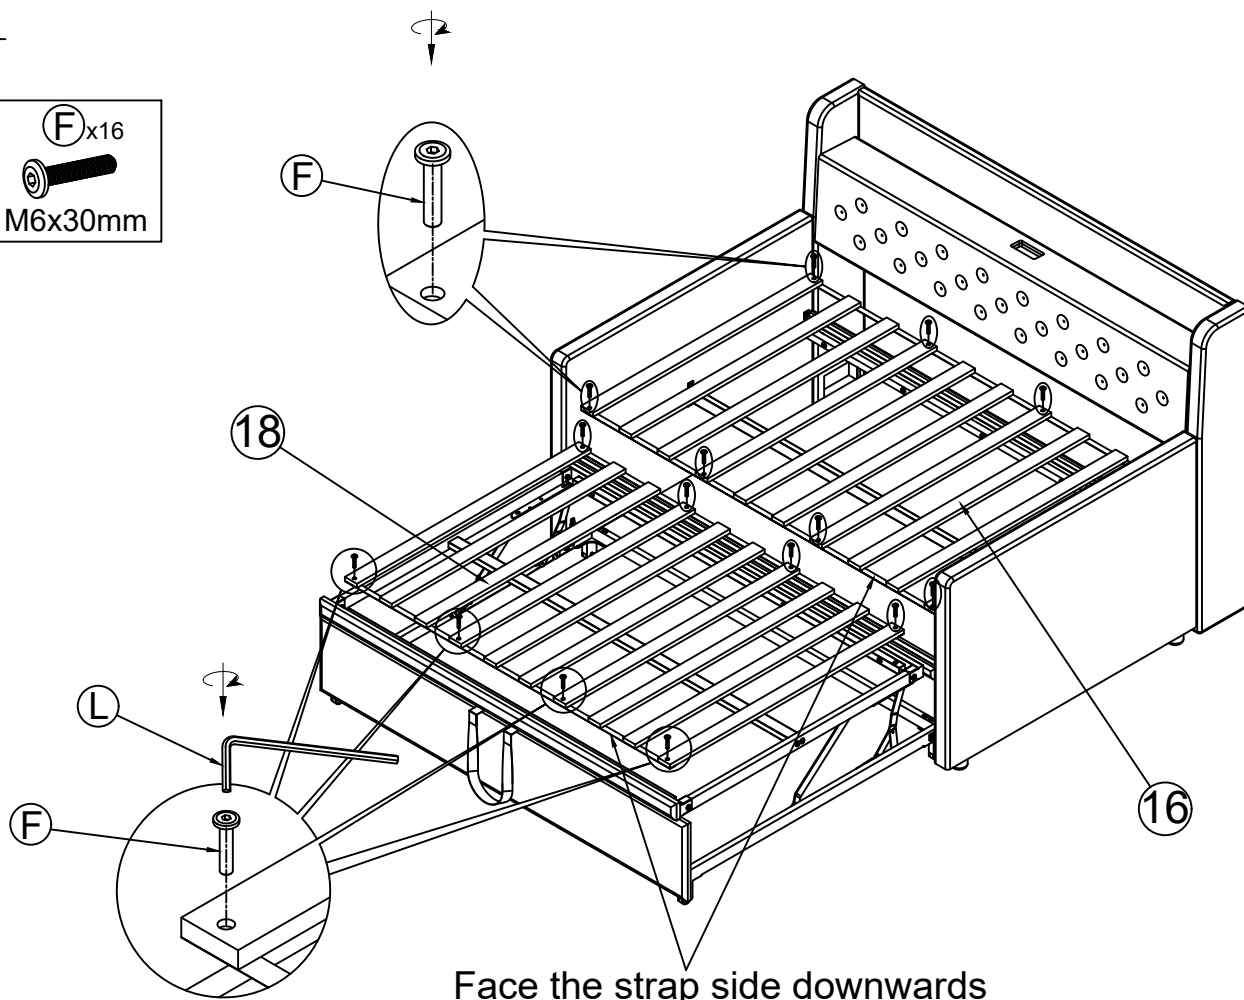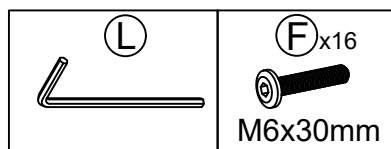


Step 18

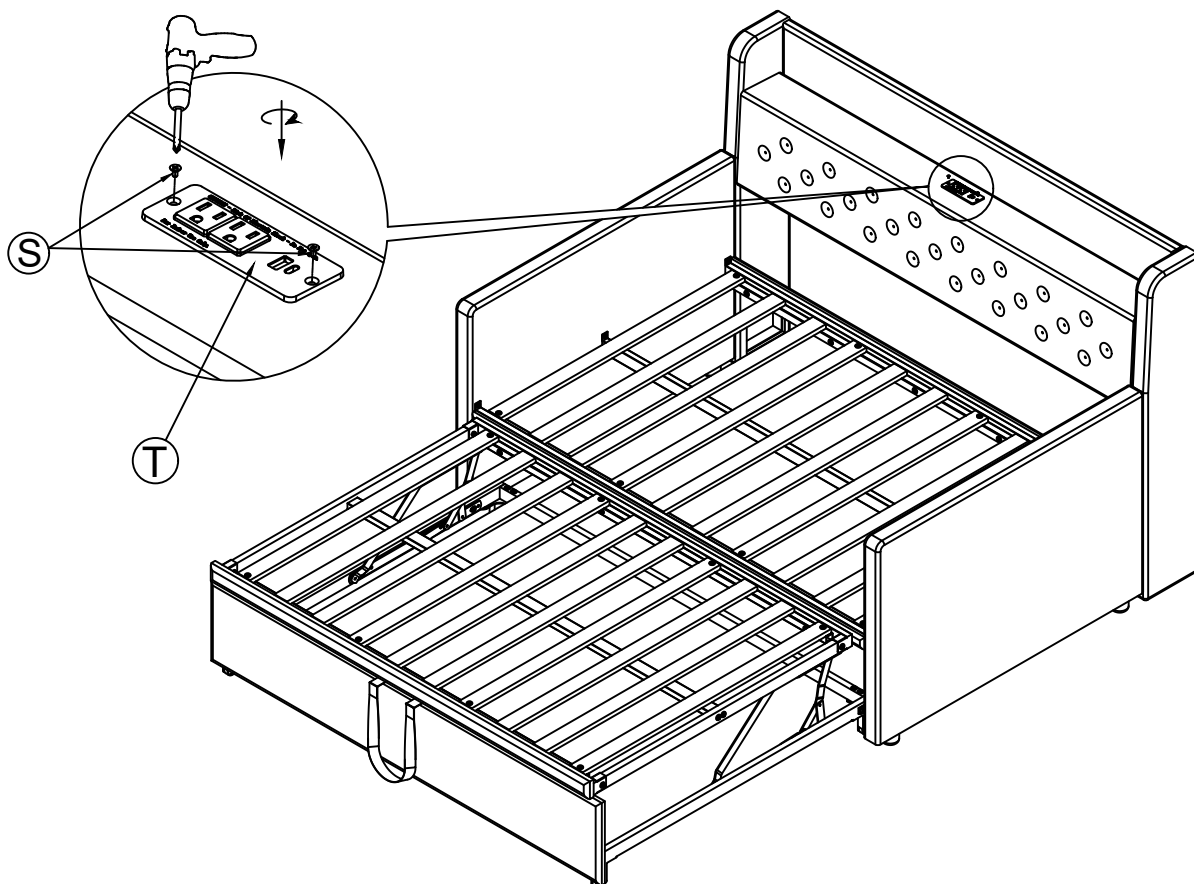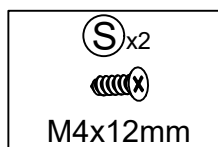

Step 19

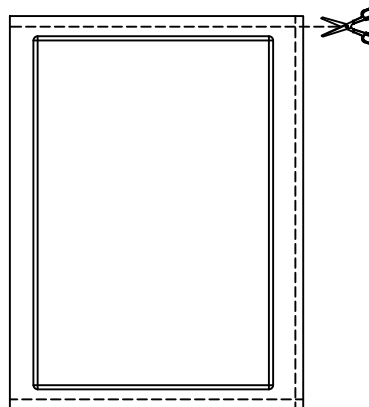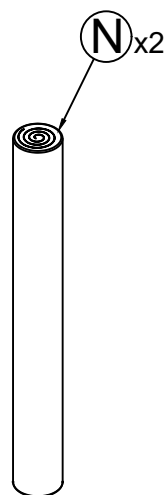


Lay the N mattress flat on a surface and use scissors to cut around the packaging, being careful not to damage the mattress. Then let it sit for half an hour to allow the mattress to return to its original thickness before use.

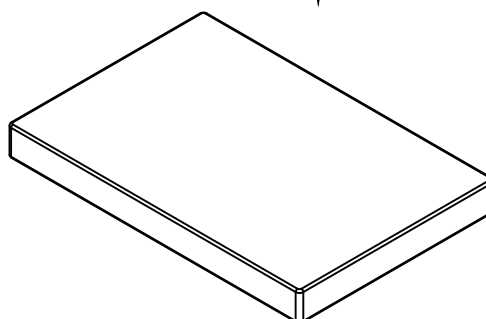


2pcs


Step 20

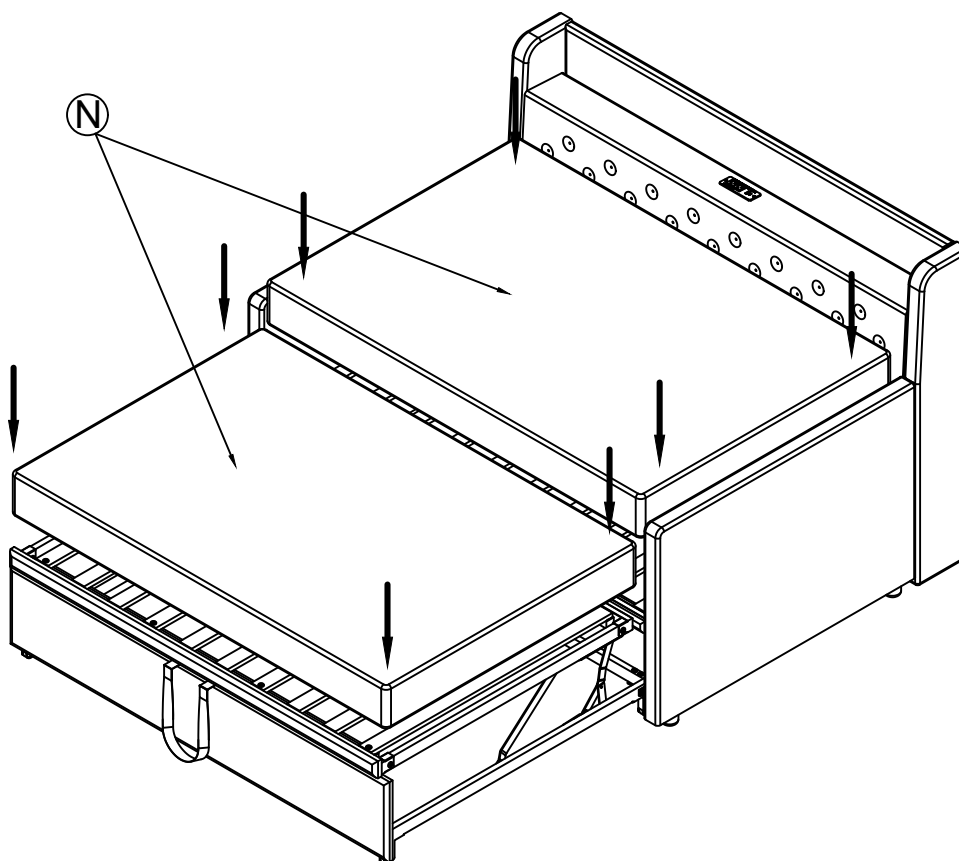

Step 21

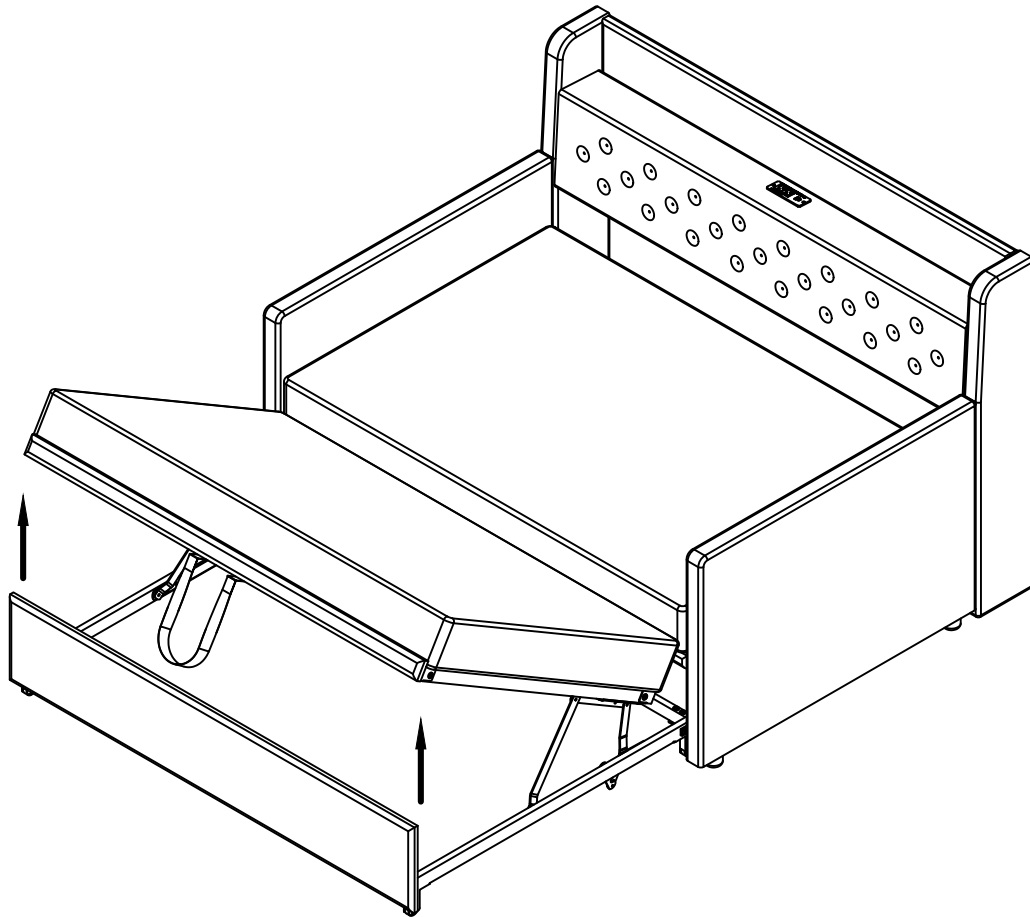

Step 22

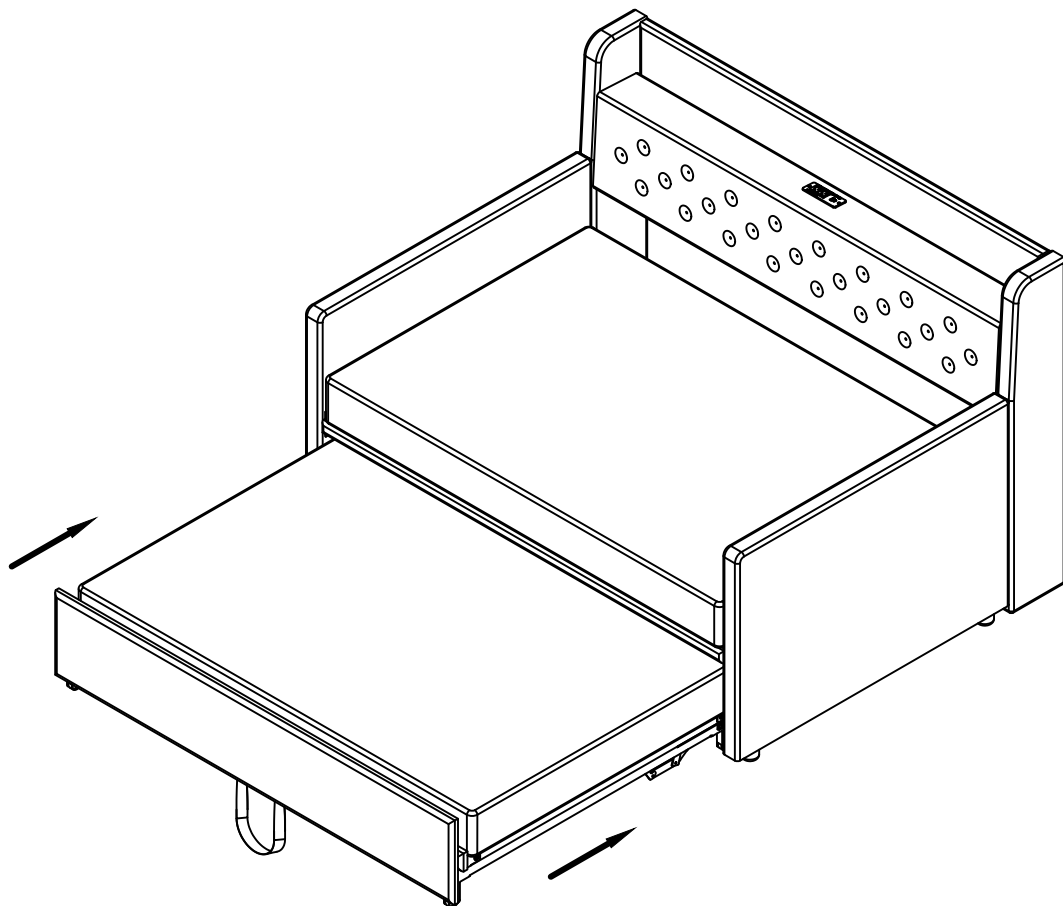

COMPLETE

