

Desk/ Dresser



70min

Thank you for choosing this furniture.

PLEASE RETAIN PACKAGING UNTIL YOU HAVE COMPLETED ASSEMBLY.

Information about your furniture.

Our furniture ranges have been carefully crafted from solid wood and natural wood veneers. Each piece of furniture has unique characteristics such as knots, variances and graining. These are part of the natural character of the furniture itself.

Caring for your furniture.


Extreme temperature can cause slight movements in the wood itself so please avoid placing your furniture close to radiators or other direct sources of heat. Humidity should also be avoided. Please avoid exposing your furniture to continued bright sunlight as it can affect the colour. Any fluid should be removed as quickly as possible. Always lift your furniture when moving, as dragging can cause damage to your furniture or flooring. Extreme changes in temperature & humidity during transit may result in a powder residue forming so silica gel bags have been included to alleviate this natural occurrence. This residue is harmless and can easily be removed before assembly with a damp cloth and mild detergent.

After care.


Wipe the surfaces with a dry cloth and an occasional use of normal household polish. We also recommend you use household spray polish occasionally on the drawer grooves and runners as this will aid use. Please do not use detergents or chemicals on your furniture.

Before you start assembly.

Please check that you have all the correct parts and fittings as detailed above.

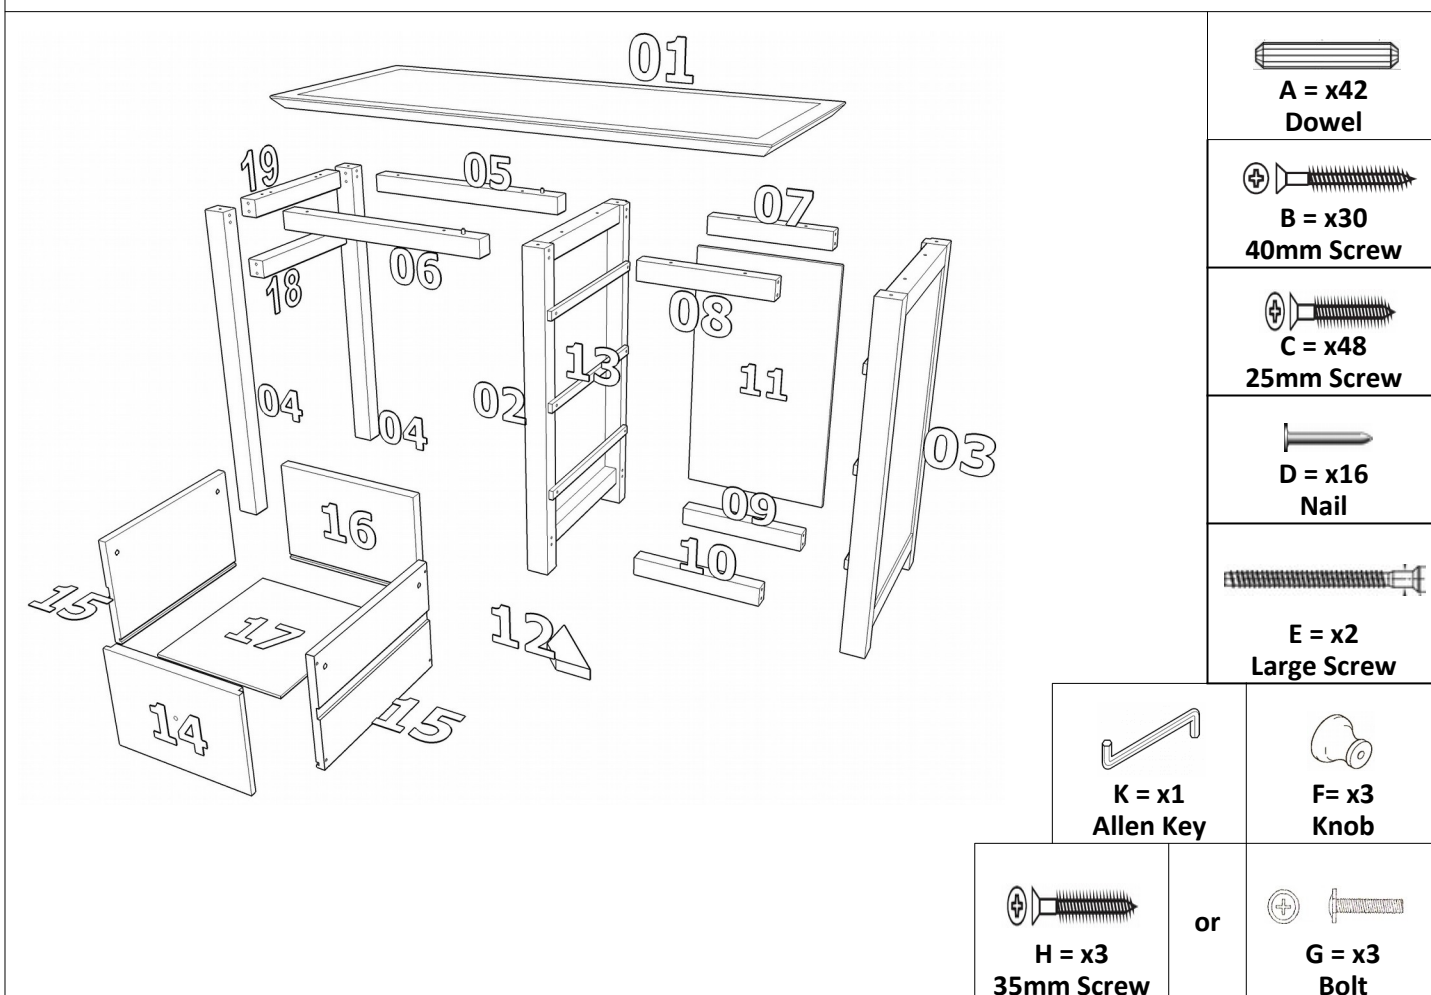

Additional parts - only applied to model with skirting board

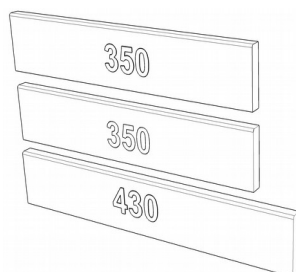

**B = x2
40mm Screw**



**N = x4
60mm Screw**


1




A = x4
Dowel



C = x12
25mm Screw

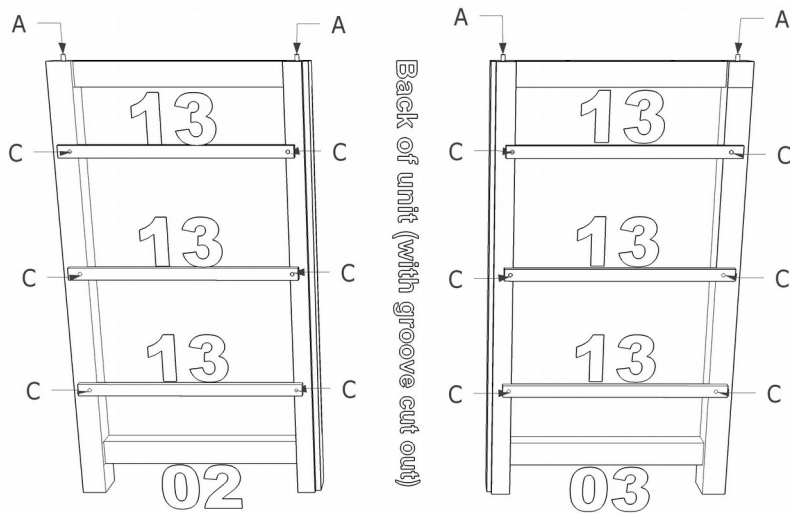


2

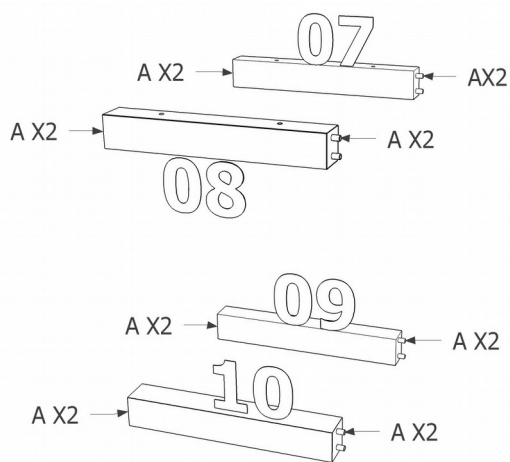


A = x16
Dowel

3

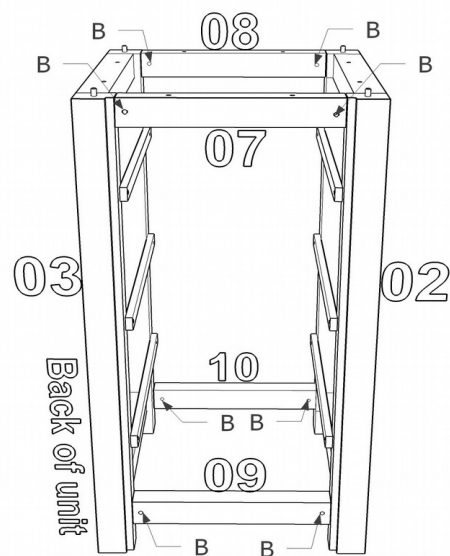

B = x8
40mm Screw


4

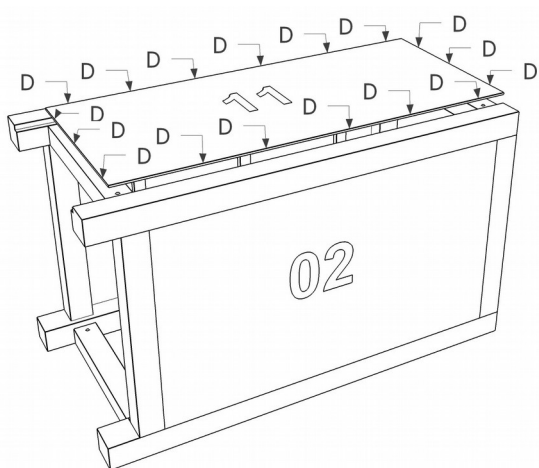


D = x16
Nail

Tip: during assembly
place unit onto a work
surface with a clean cover



5

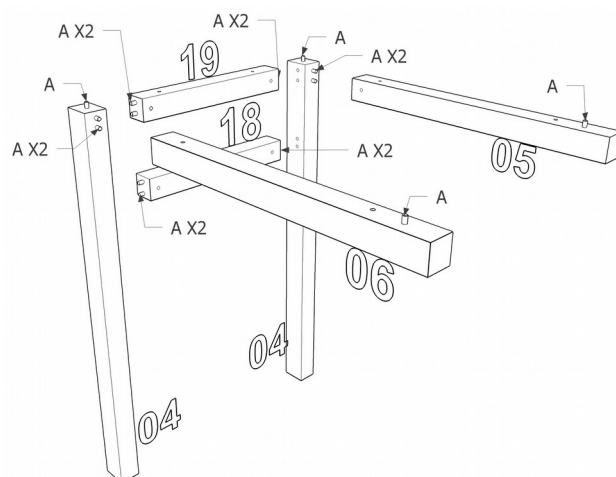

A = x16
Dowel





Technical drawing of a wooden table. The drawing shows a perspective view of the table. The top surface is labeled with dimensions 12 (width) and 19 (depth). The legs are labeled with dimensions 04 (width) and 04 (depth). The table has a central rectangular panel on the top surface, labeled with dimensions B (width) and E (depth). The legs are labeled with dimensions B (width) and E (depth). The table has a central rectangular panel on the top surface, labeled with dimensions B (width) and E (depth). The legs are labeled with dimensions B (width) and E (depth).





Tip: during assembly
place unit onto a work
surface with a clean cover

Note: drawer pedestal can be turned around allowing it to be positioned on the left or on the right of assembled desk/dressing table

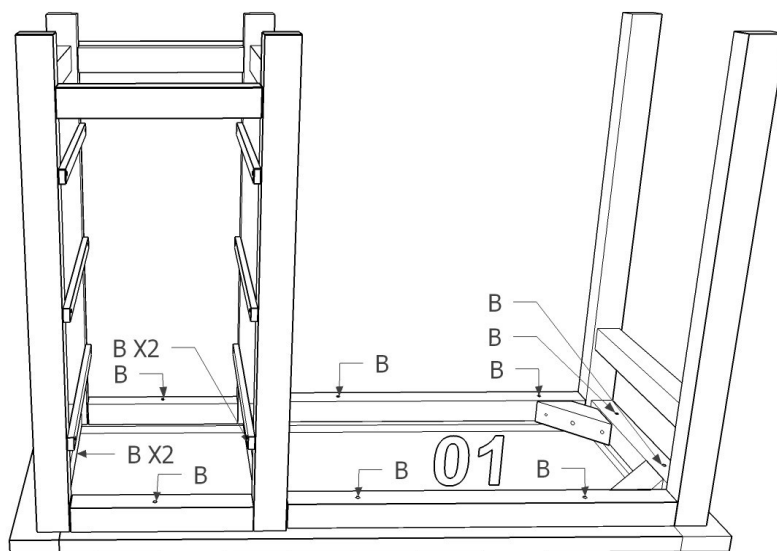

This diagram shows the assembly of the drawers into the cabinet frame. The frame (15) is shown at the top left. Below it, three drawers are shown in an exploded perspective view, labeled 14, 16, and 17. Drawer 14 is the top drawer, drawer 16 is the middle drawer, and drawer 17 is the bottom drawer. Each drawer is shown with its front panel and side panels. The front panels are labeled 14, 16, and 17. The side panels are labeled C and C X2. The drawers are shown being inserted into the frame. The front panels of the drawers are shown with a locking mechanism (F) and a handle (G). The drawers are shown being inserted into the frame from the bottom. The drawers are shown being inserted into the frame from the bottom. The drawers are shown being inserted into the frame from the bottom.




10

Tip: insert dowels from the inside of the drawers, pushing through so they sit level with the inside of the drawer side.
Repeat for all drawers



A = x6
Dowel

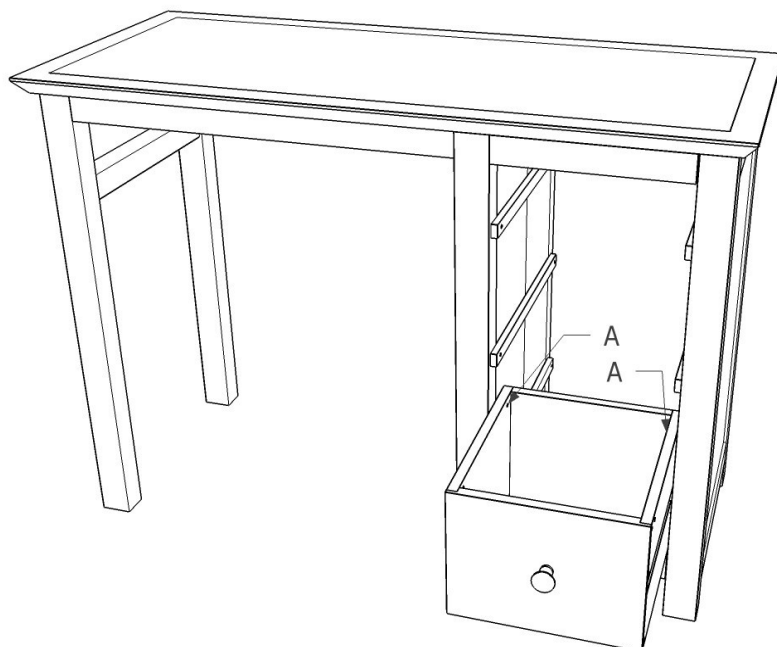

Extra step only applicable for model with a skirting board


11



B = x2
40mm Screw



N = x4
60mm Screw

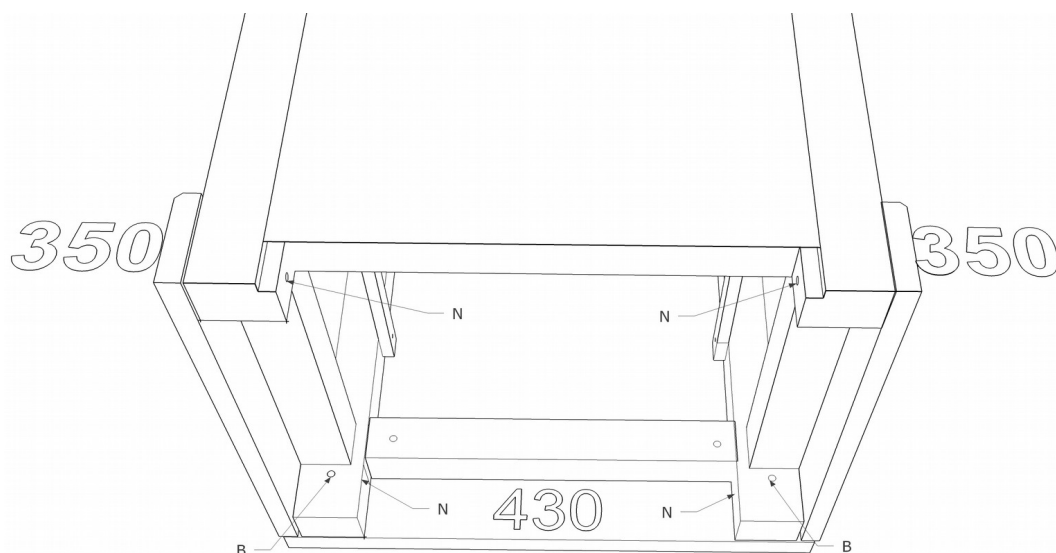

WARNING! TIPPING HAZARD – Unanchored furniture can tip over

WARNING: CHECK FOR HIDDEN PIPES AND CABLES BEFORE DRILLING.

IMPORTANT: IF YOUR WALLS ARE NOT SOLID LIKE BRICK OR STONE, YOU WILL REQUIRE SPECIALIST FITTINGS (NOT SUPPLIED)

- Attach fixing strip to the wall using the 25mm screw + washer and securely tighten;
- Pre-drill small pilot hole on the back edge of the furniture top using a 2mm drill bit. Attach the other end of the fixing strip to the back edge of the furniture top using the 15mm screw + washer and securely tighten.
- Place fixing strip against the wall and mark position for drilling hole.
- Drill hole in your wall to a depth of 30mm using a 6mm drill bit. If the surface of your wall is soft and crumbly, we would advise you to use a 5mm drill bit for a tighter fit.
- Insert plug into hole with end flush to the wall surface;

12

WALL

