


ASSEMBLY INSTRUCTIONS:

QUEEN BED

VERSION 1.1

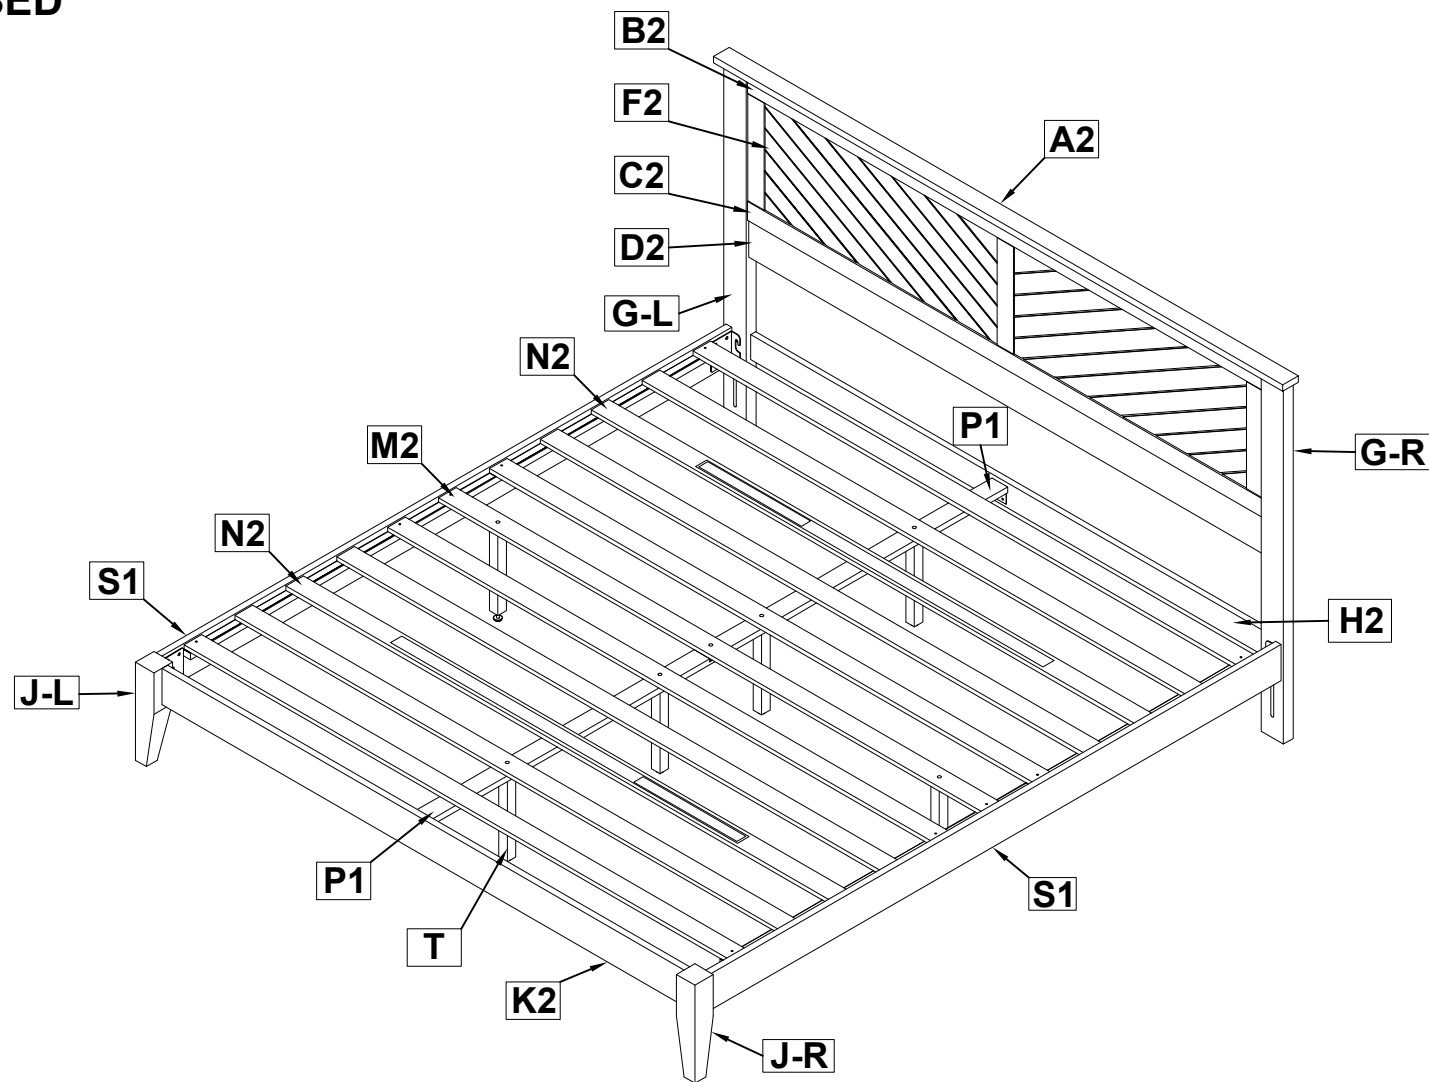

QUEEN BED

Page 2 of 16

ASSEMBLY INSTRUCTIONS


Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.


If you're having difficulty, our friendly Customer Care team is always here to help.

Attention : Veuillez Lire Toutes Les Instructions Avant De Commencer L'assemblage De Ce Produit. Les Pièces Sont Lourdes. Pour Éviter Toute Blessure Et Pour Vous Assurer Que Le Produit N'est Pas Endommagé Pendant L'assemblage, Nous Vous Recommandons De Faire Appel À Une Ou Plusieurs Autres Personnes.


Cuidado: Favor De Leer Todas Las Instrucciones Antes De Ensamblar Su Producto. Estas Piezas Son Pesadas. Para Prevenir Heridas Personales Y Asegurar Que Su Producto No Sea Dañado Mientras Es Ensamblado, Se Recomienda La Asistencia De Una O Más Personas.

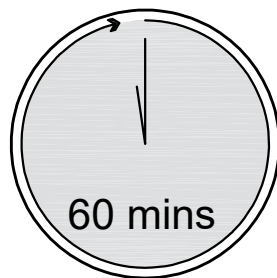

TIME

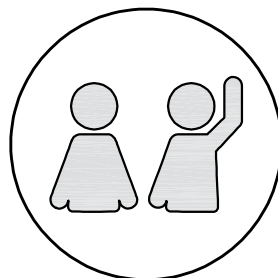

OF PEOPLE


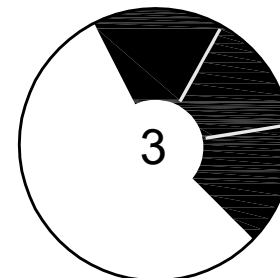







DIFFICULTY

Important: Use hand tools for assembly. Power tools can lead to over-tightening and damage.

QUEEN BED

Parts List

CODE	DESCRIPTION	QTY
A2	Headboard Top 	1 pc
B2	Crossbar Top 	1 pc
F2	Headboard 	1 pc
C2	Crossbar 	1 pc
D2	Crossbar Bottom 	1 pc
H2	Crossbar Bottom Rail 	1 pc
G-R	Right Leg 	1 pc
G-L	Left Leg 	1 pc

CODE	DESCRIPTION	QTY
K2	Footboard 	1 pc
S1	Side Rails 	2 pcs
J-L	Left Leg 	1 pc
J-R	Right Leg 	1 pc
P1	Middle Cross Slats 	2 pcs
N2	Slats 	2 rolls
M2	Slat 	1 pc
T	Support Legs 	6 pcs








QUEEN BED

Hardware List

CODE	DESCRIPTION	QTY
1	Dowel Ø8x1-1/8"	11 pcs
2	Dowel Ø10x1-5/8"	5 pcs
3	Bolt Ø5/16"x2"	6 pcs
4	Bolt Ø5/16"x1"	8 pcs
5	Bolt Ø1/4"x1"	1 pc
6	Nut Ø1/4"	1 pc
7	Cam Lock Bolt Ø1/4"x1-3/8"	19 pcs
8	Cam Lock Ø15	19 pcs
9	Spring Washer Ø5/16"	12 pcs
10	Flat Washer Ø5/16"x3/4"	14 pcs

CODE	DESCRIPTION	QTY
11	L Bracket	2 pcs
12	Allen Key	1 pc
13	Screw #8x1/2"	8 pcs
14	Screw #8x1-1/4"	10 pcs
15	Bolt Ø5/16"x3"	4 pcs
16	Curved Washer Ø5/16"	4 pcs
17	Nut Ø5/16"	4 pcs
18	Wrench	1 pc
19	Philips Head Screwdriver	1 pc

1

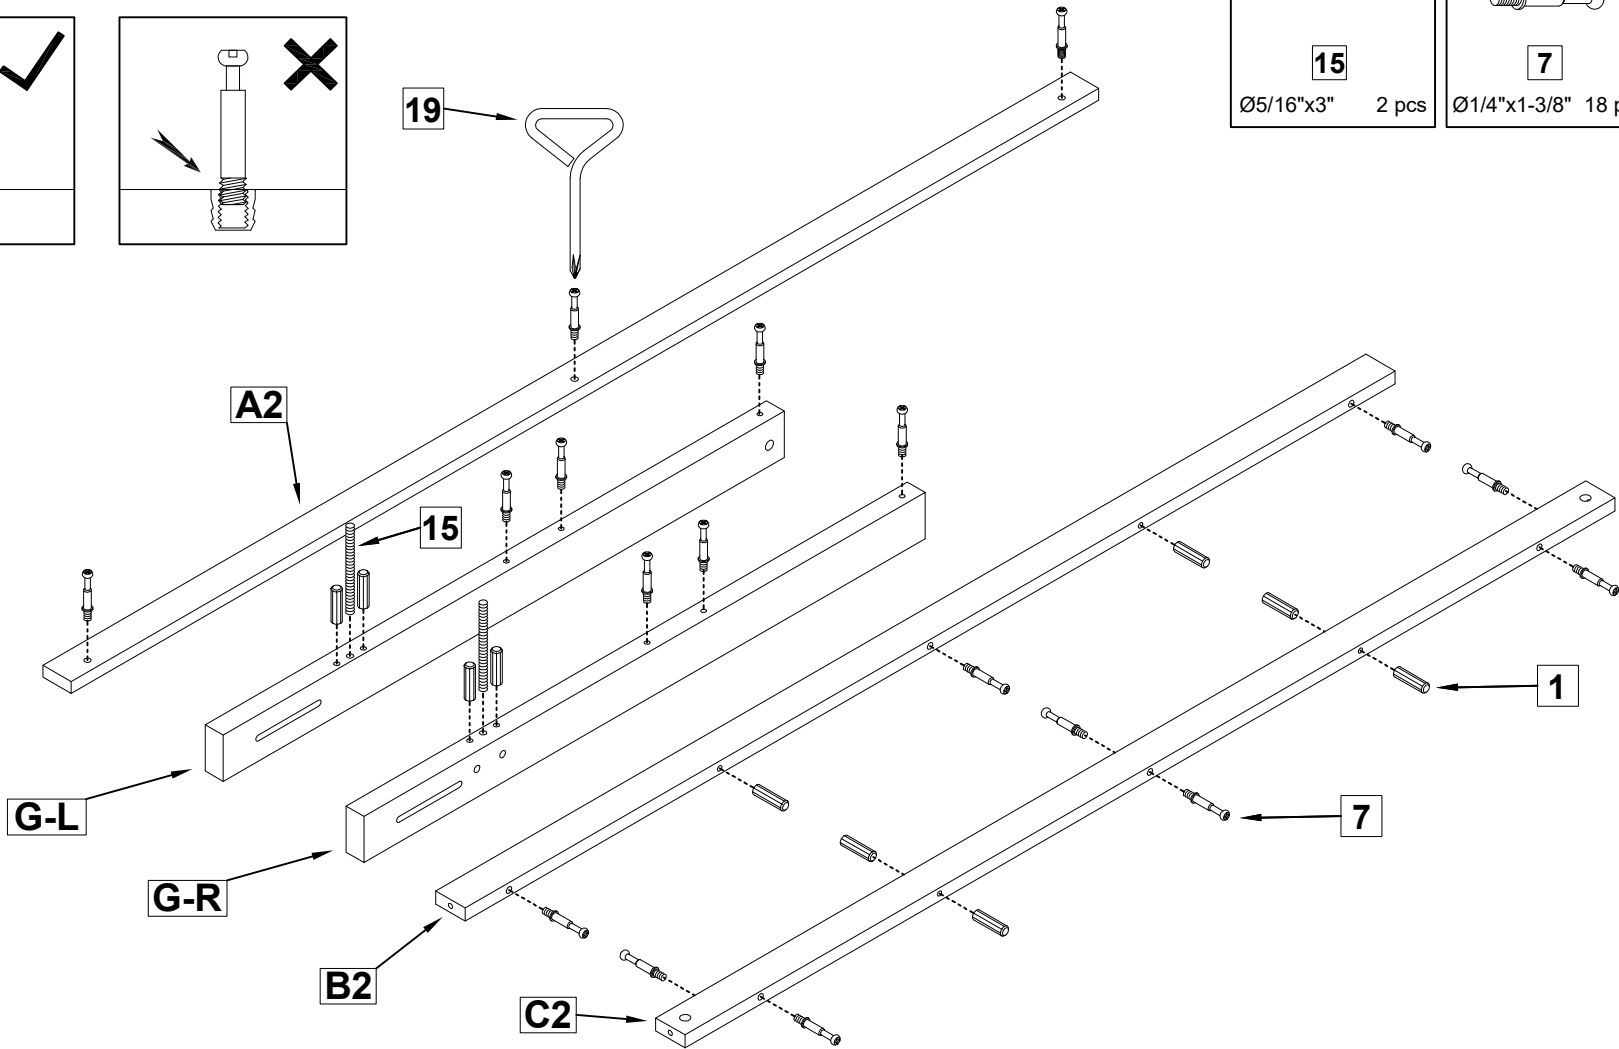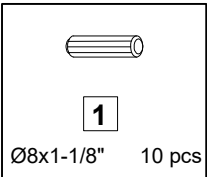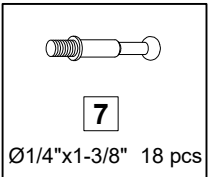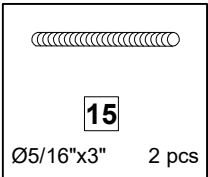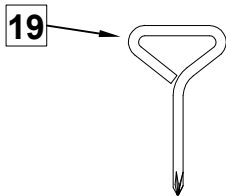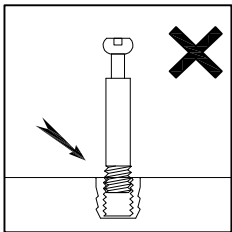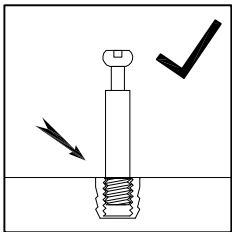

2






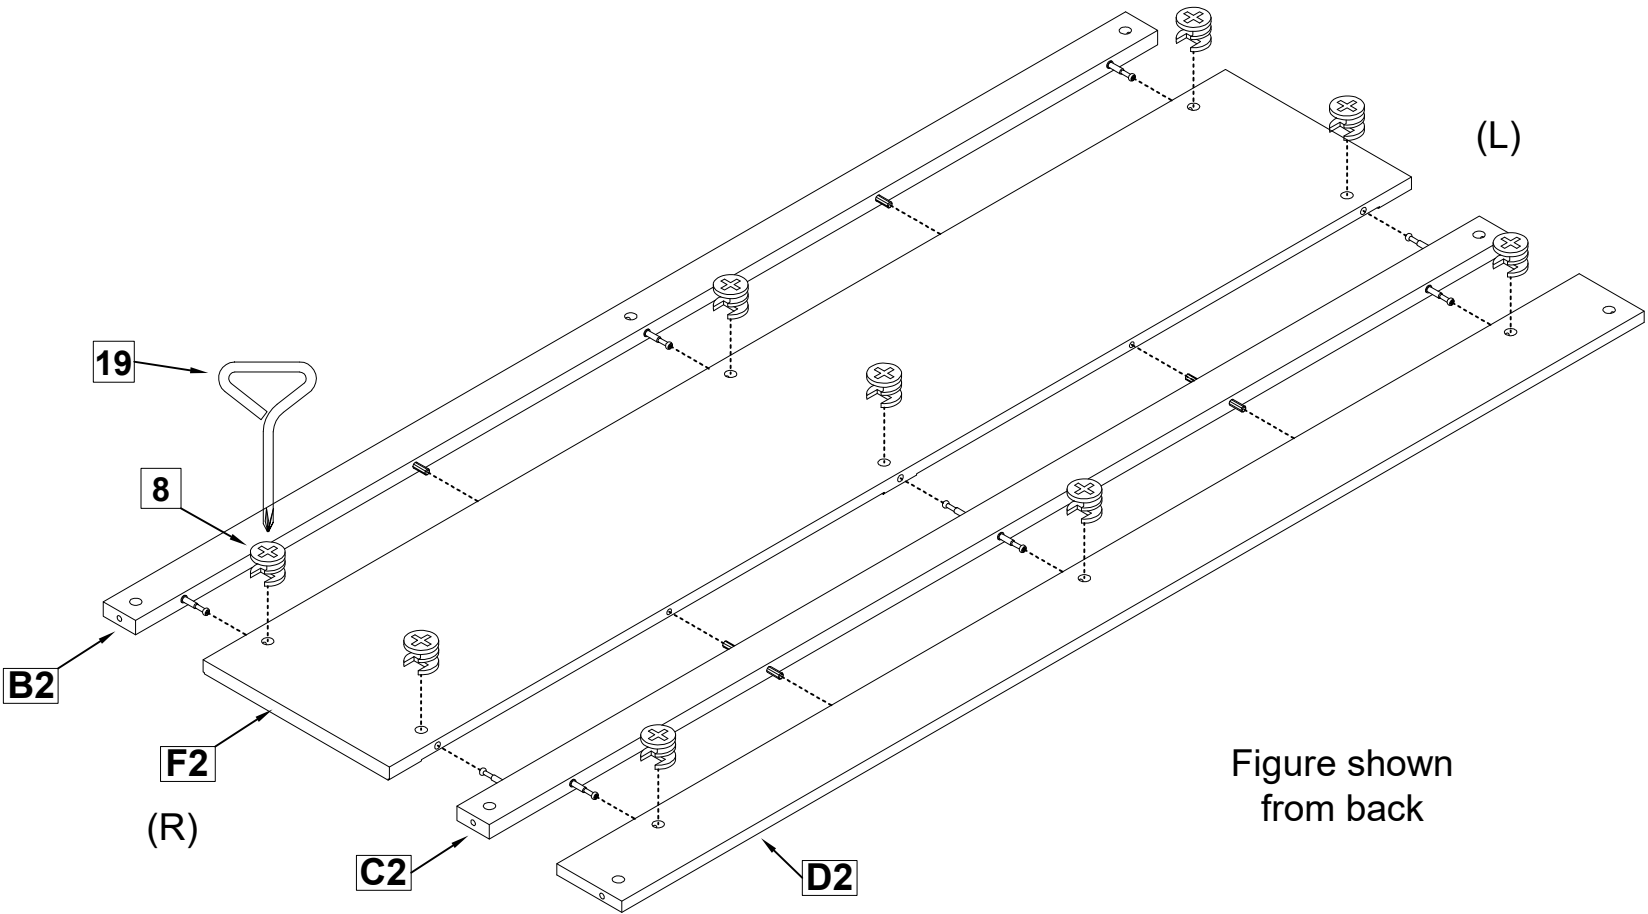


Figure shown
from back



3

 16 Ø5/16" 2 pcs	 17 Ø5/16" 2 pcs	 9 Ø5/16" 2 pcs	 1	 2	 3	 8 Ø15 6 pcs
--	--	---	---	---	---	--

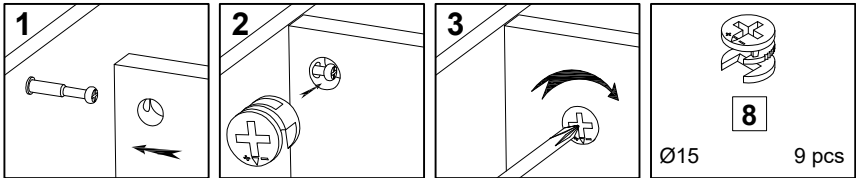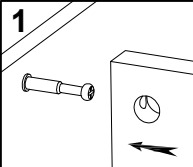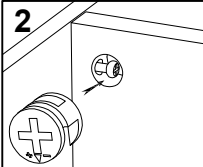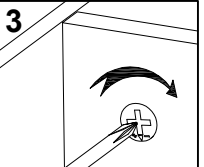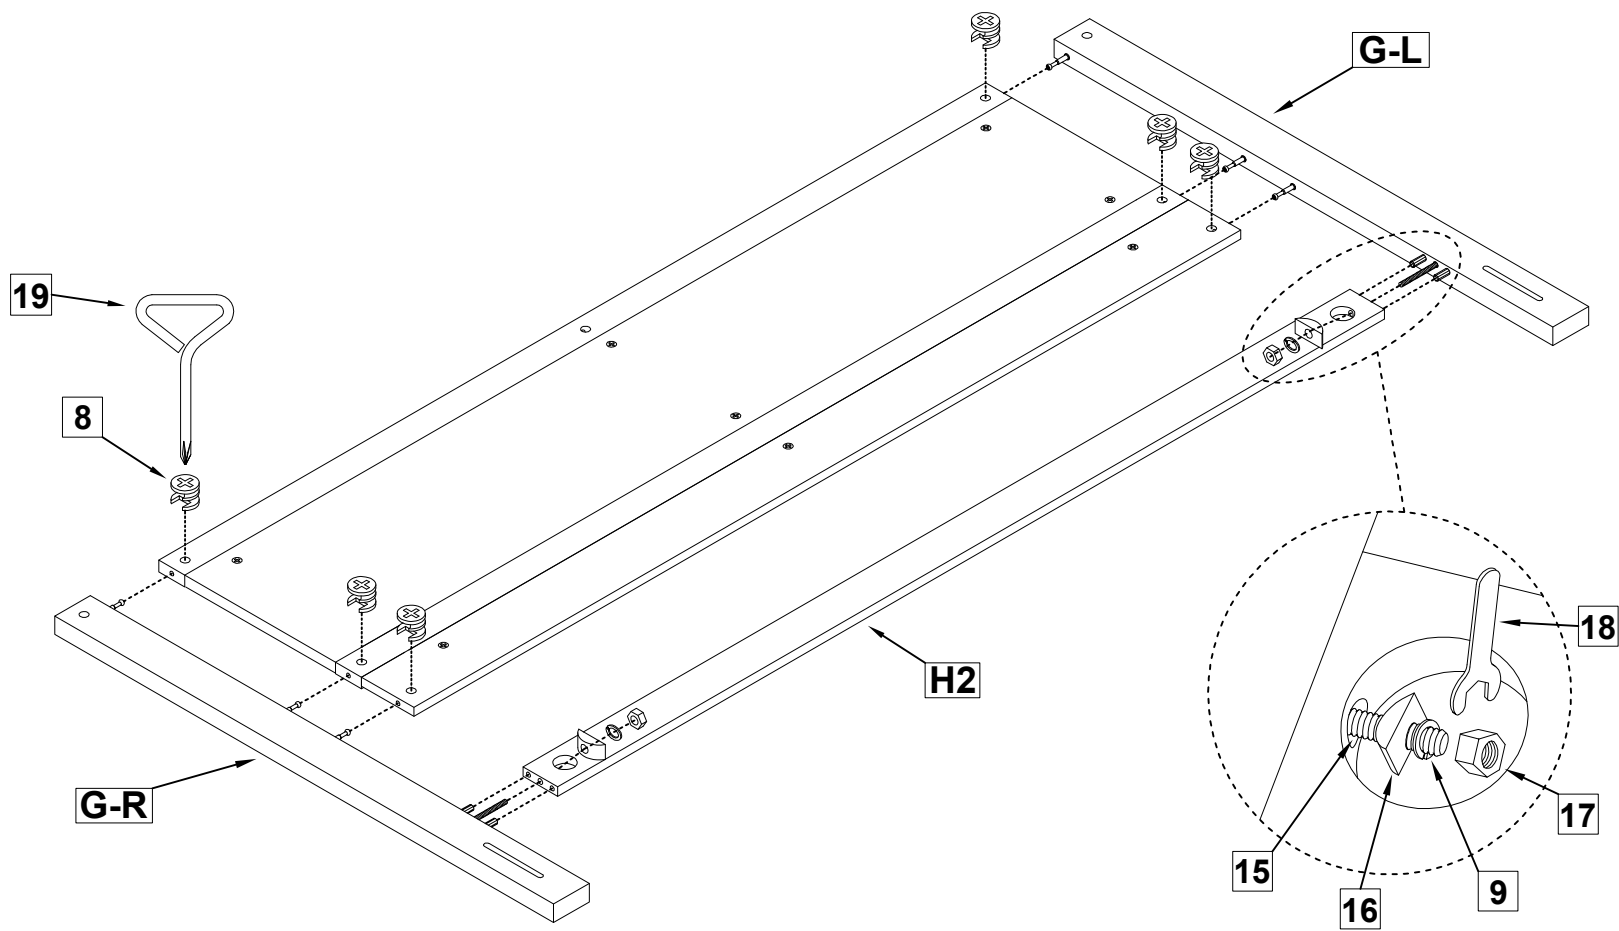

QUEEN BED

4

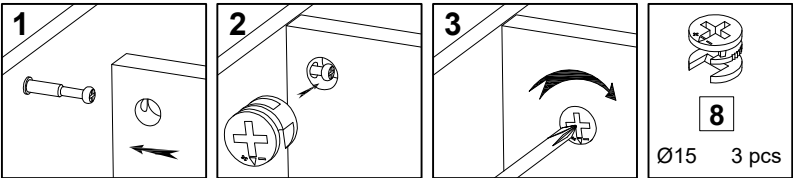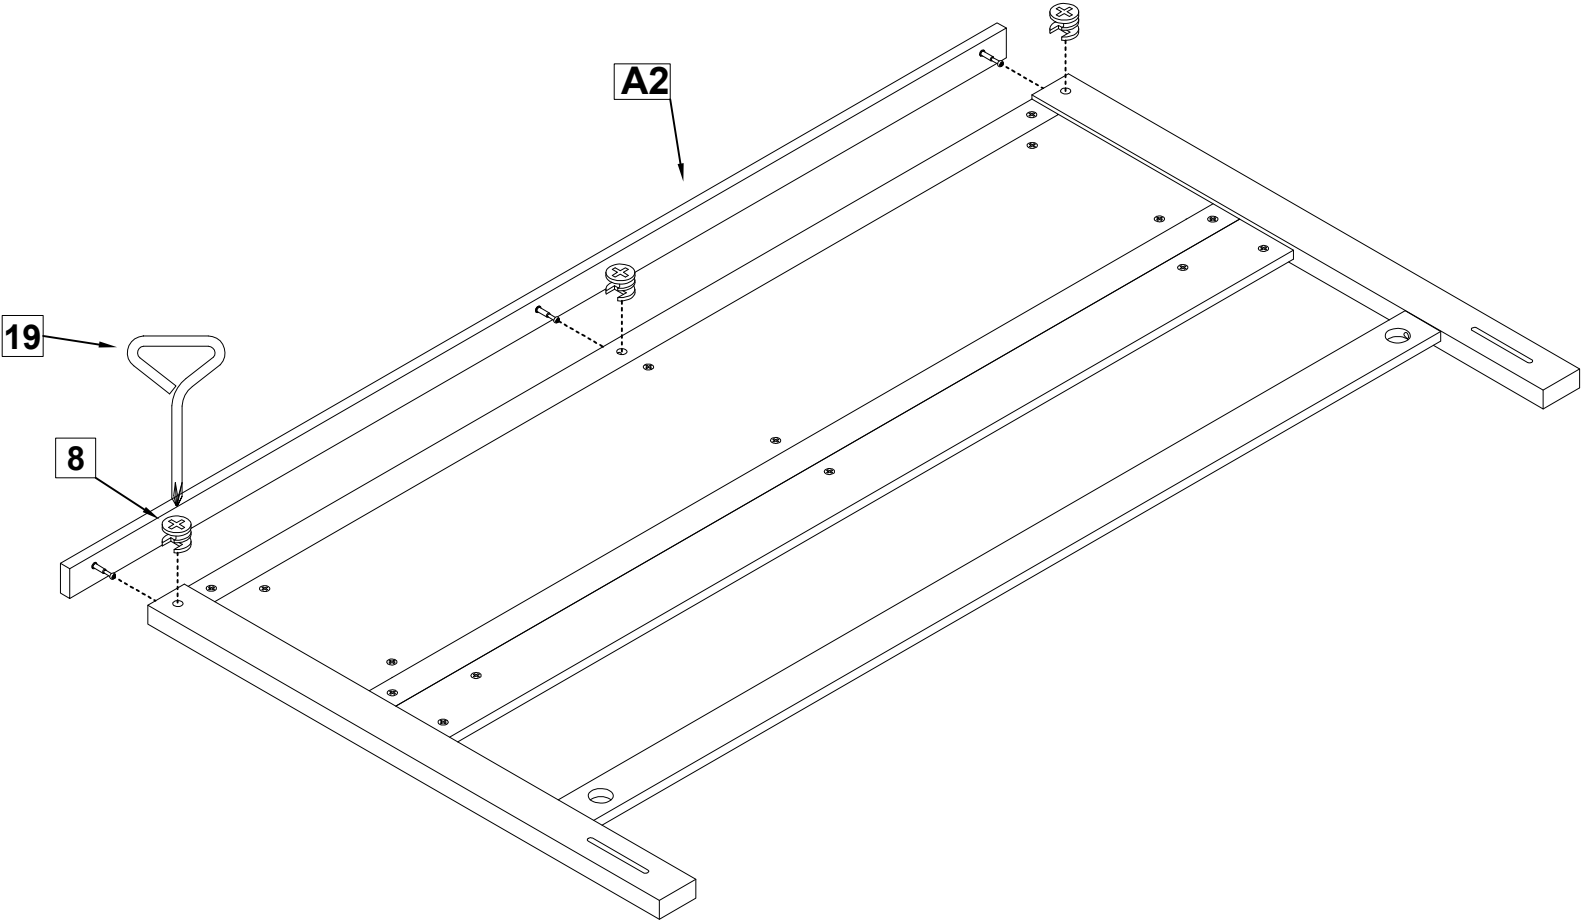

QUEEN BED

5



4


 +

9


 +



10

Ø5/16"x1" 4 pcs

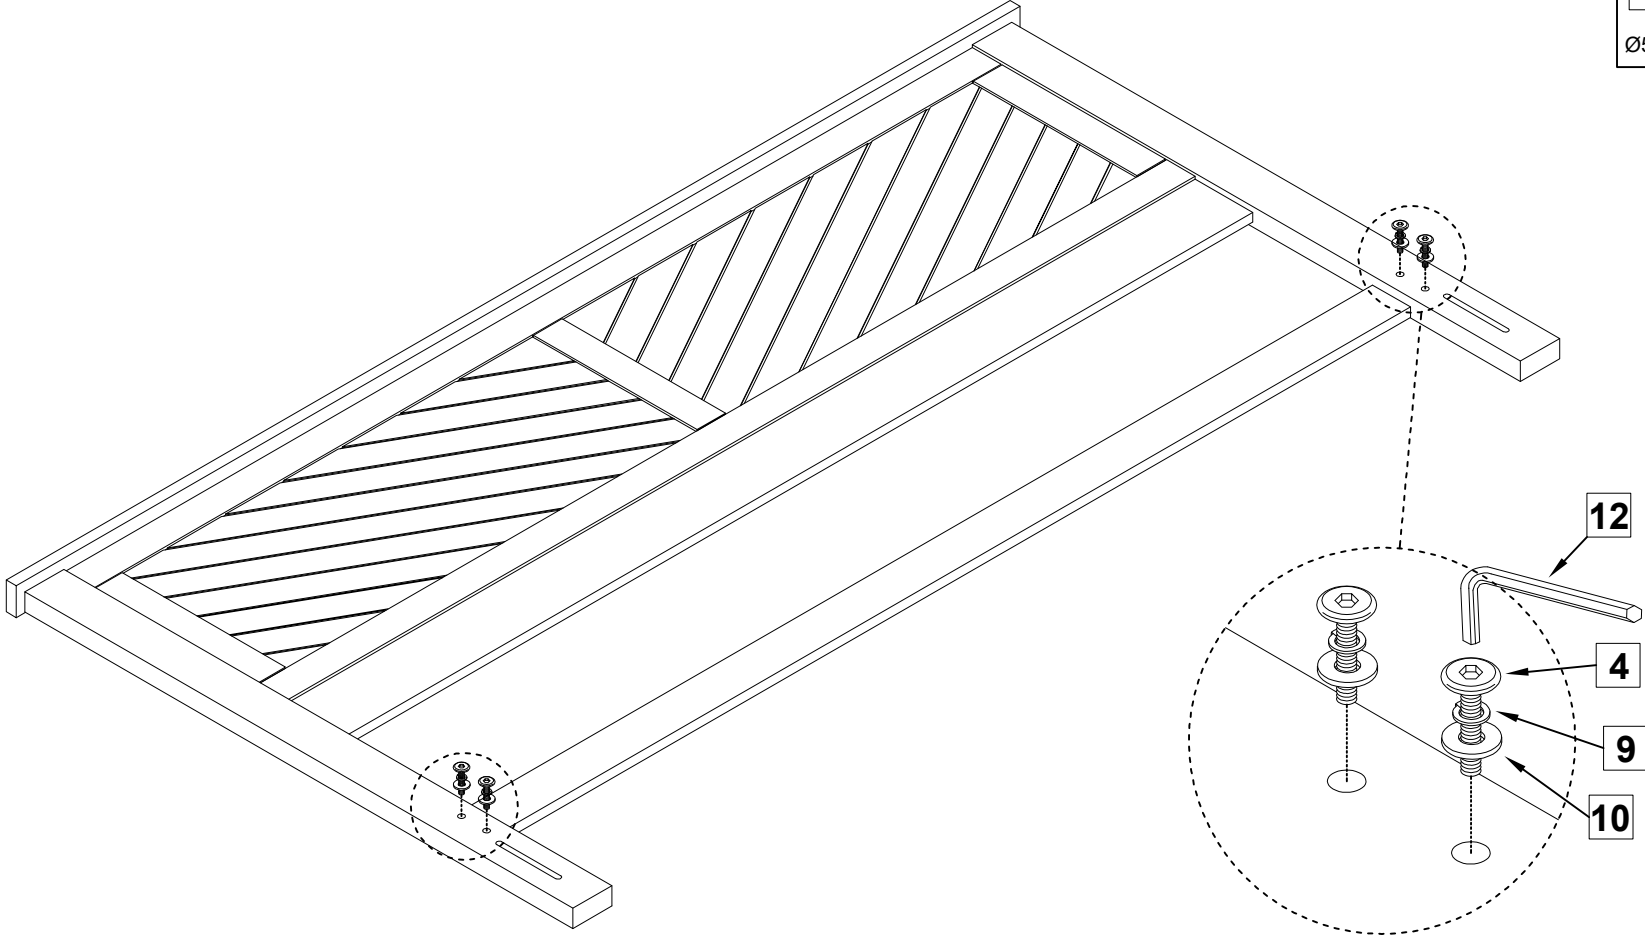


6

					
2	15	16	17	9	4 + 9 + 10
Ø10x1-5/8" 4 pcs	Ø5/16"x3" 2 pcs	Ø5/16" 2 pcs	Ø5/16" 2 pcs	Ø5/16" 2 pcs	Ø5/16"x1" 4 pcs

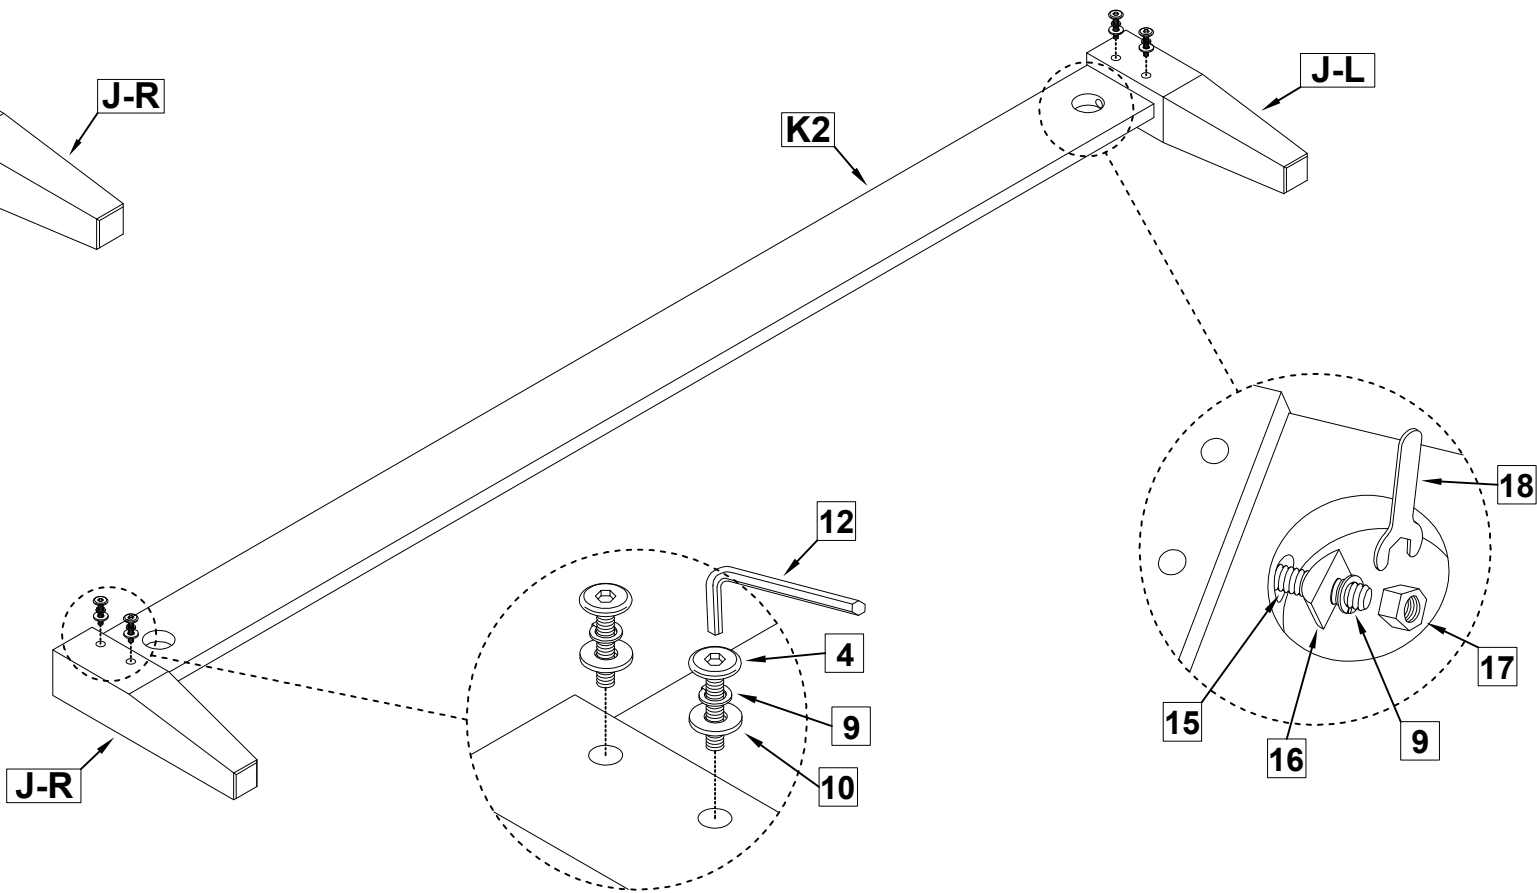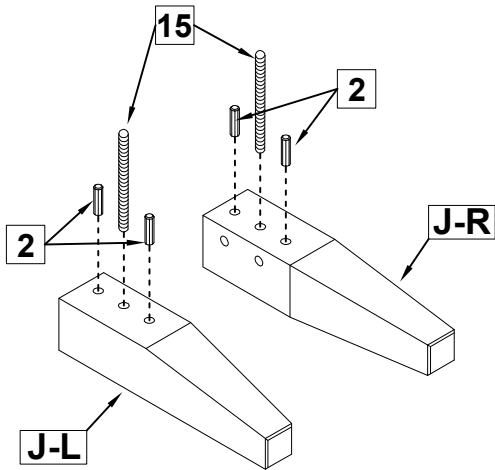


QUEEN BED

7






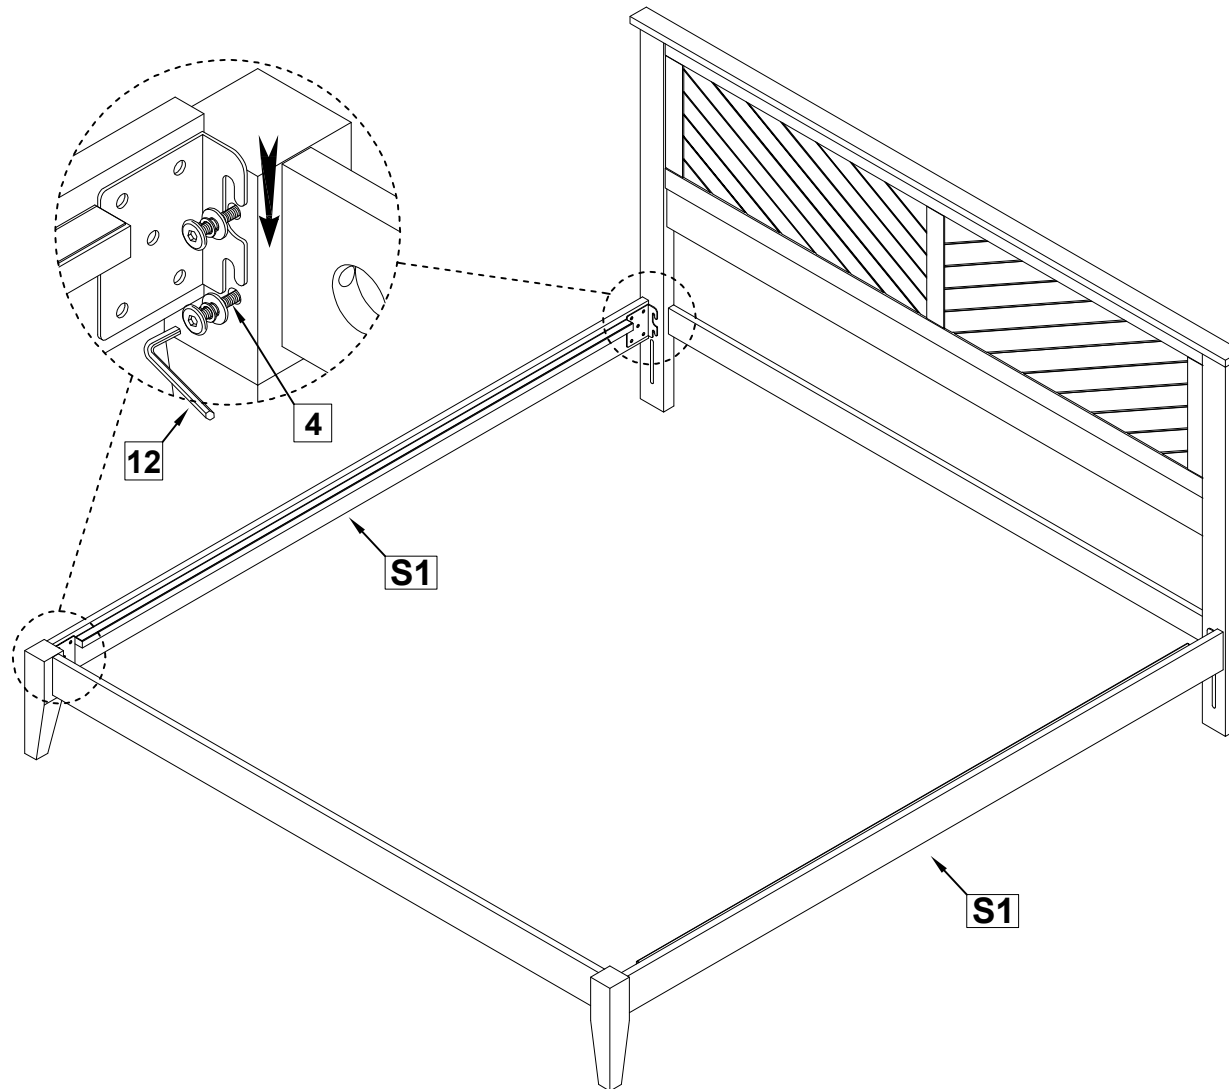


8

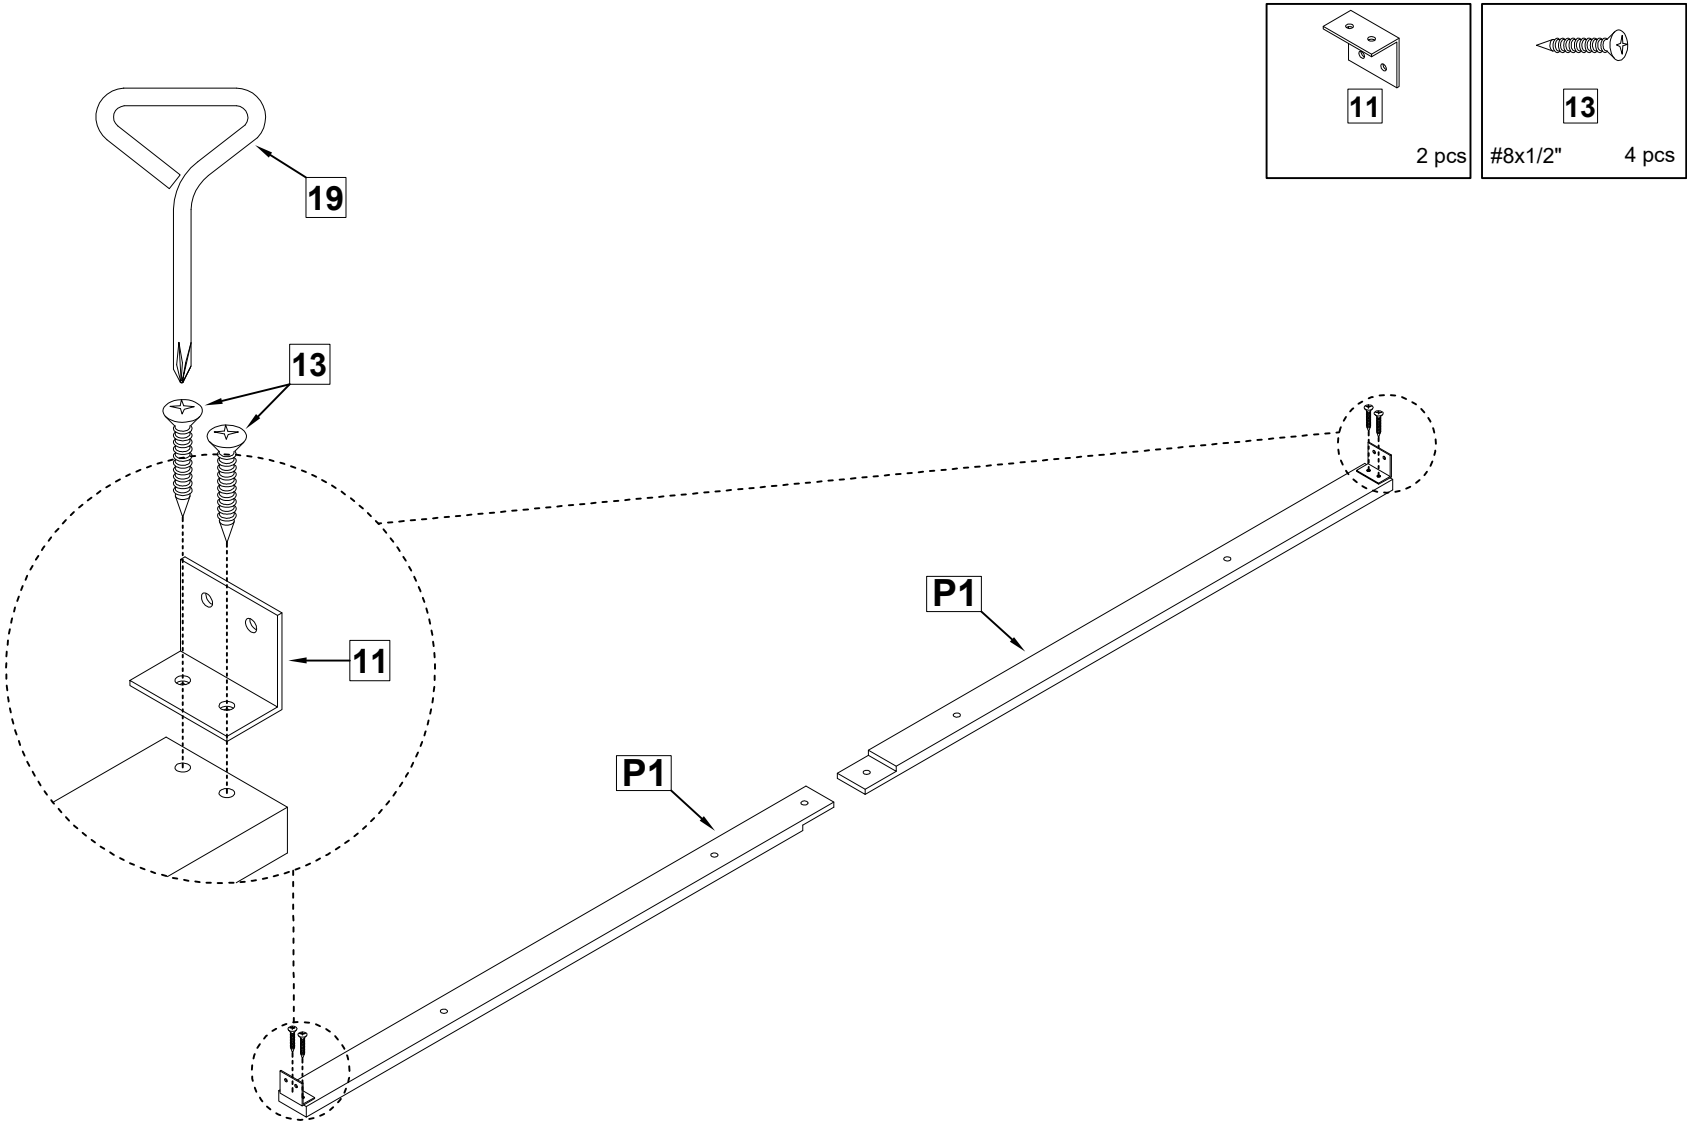


QUEEN BED

9

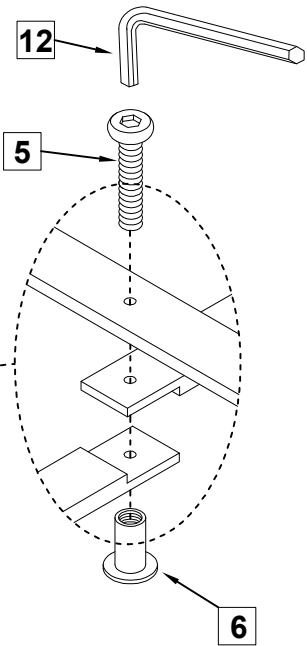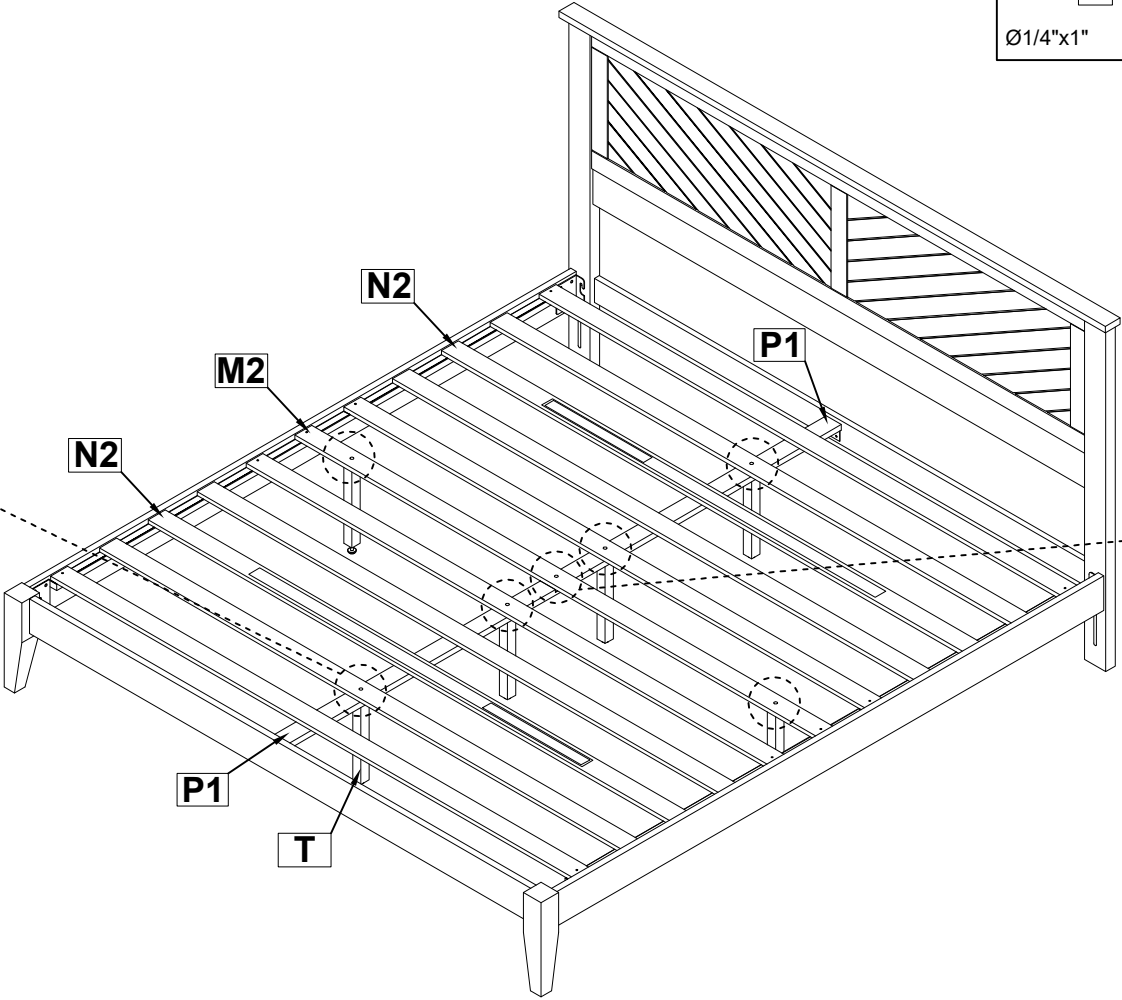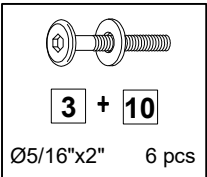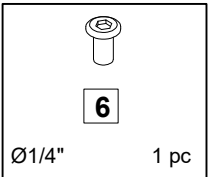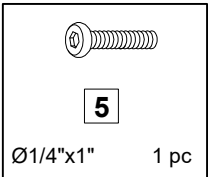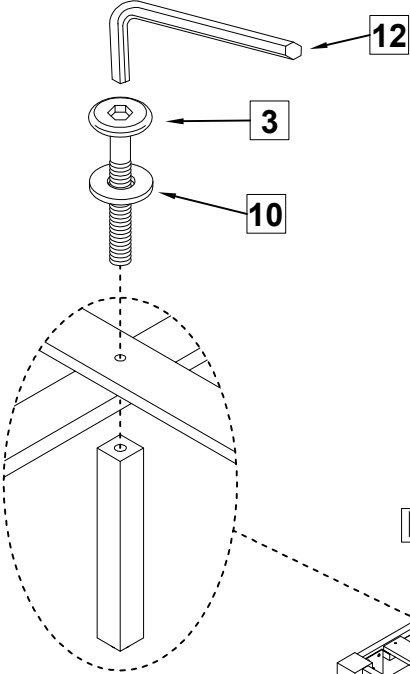


10

After the slat system is assembled, place the slats into the frame of the bed as shown, and velcro the slats to the cleat of side rail as shown below.

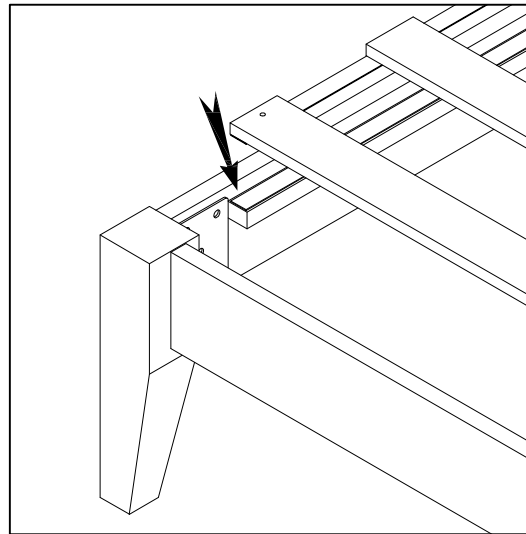

Velcro the ends of slat to the cleats of side rail

11


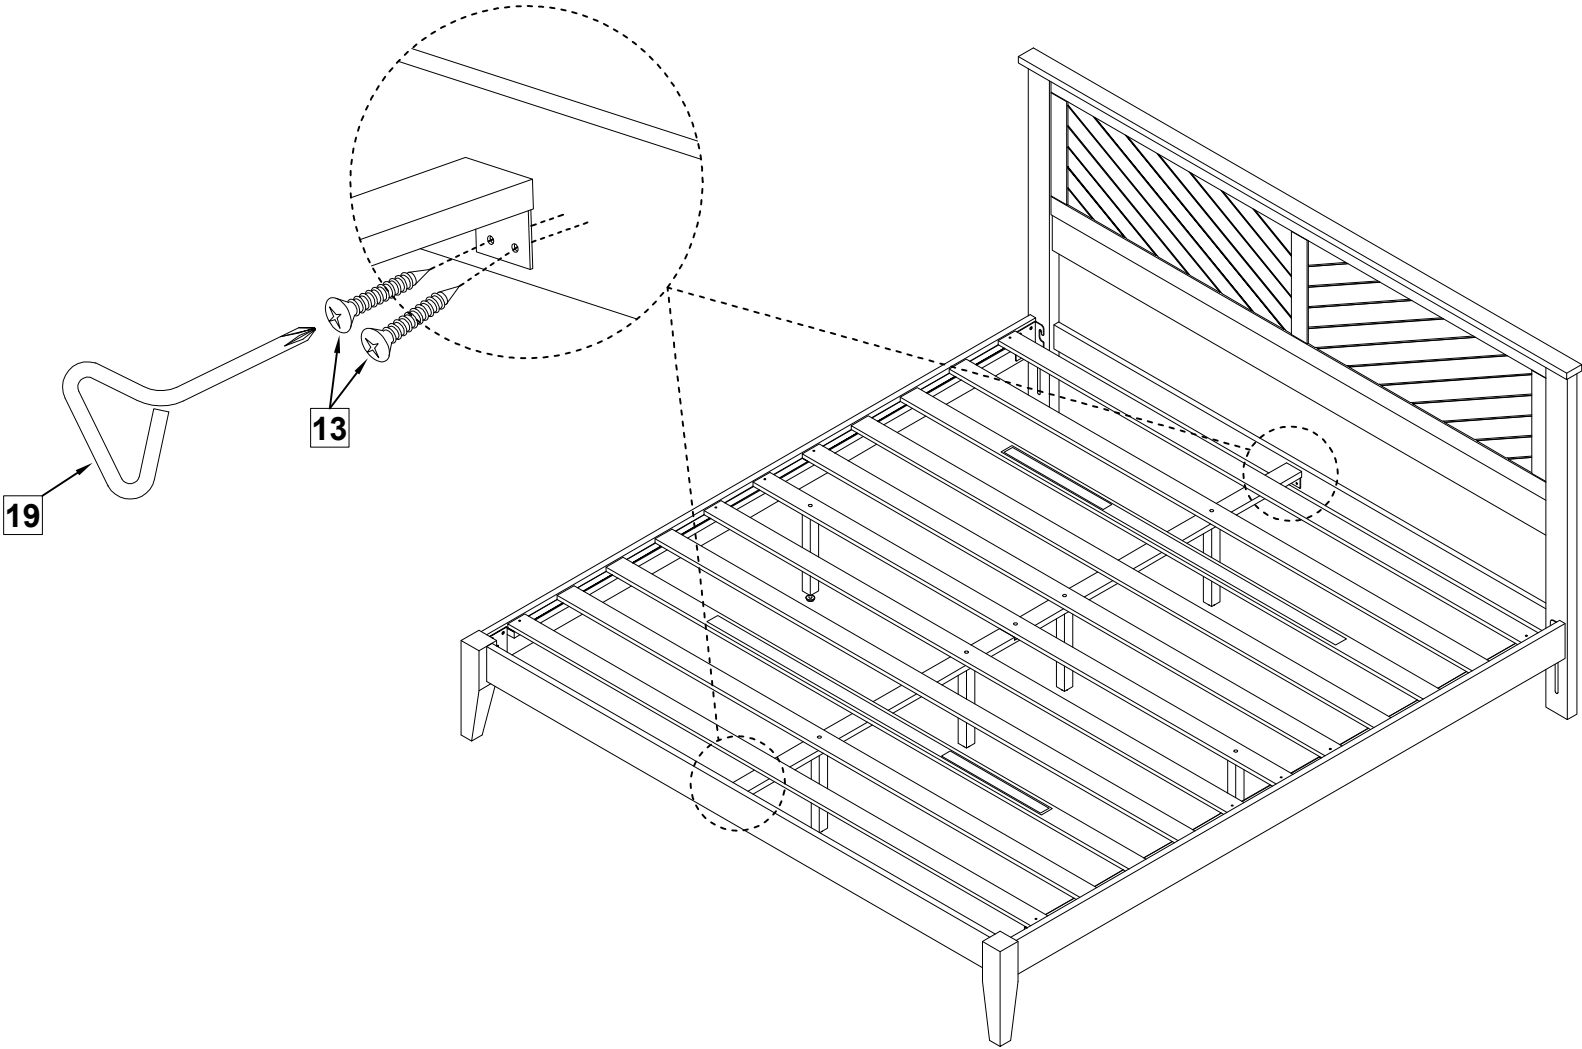




13

#8x1/2" 4 pcs


12

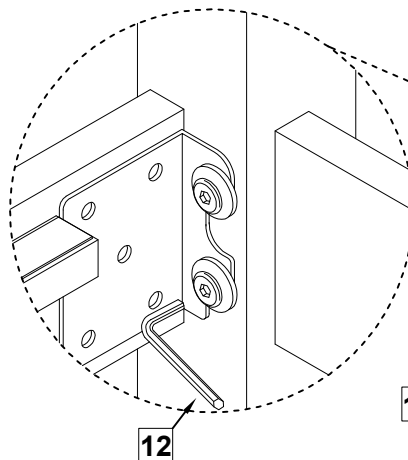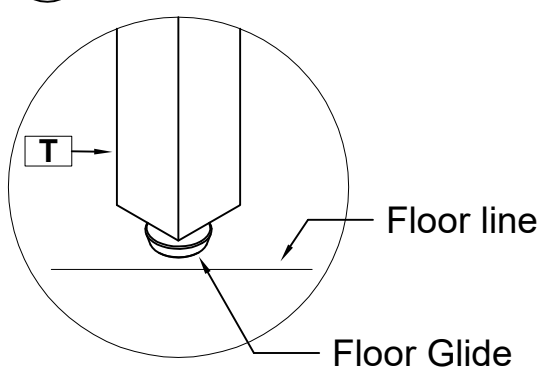

NOTE:

The center support leg glide sits approximately 1/4" off of the floor. The glide will usually touch the floor after a mattress is placed on the bedframe.

Do not place a mattress on bedframe until it is fully assembled and tightened. The bedframe should be located in your desired location. Sliding the bed with weight upon it can compromise the integrity of the center support legs.

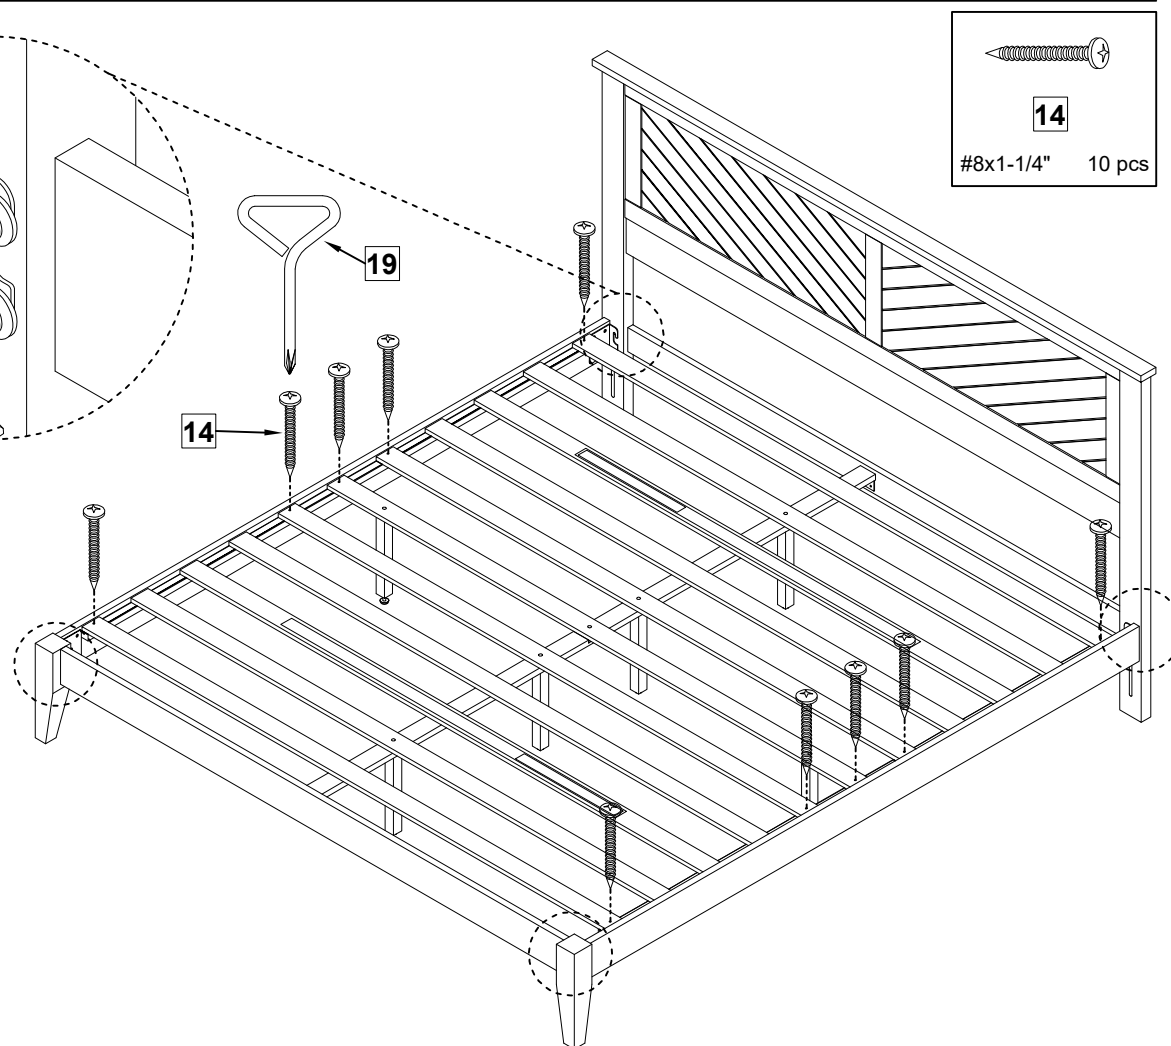

You're all finished! Sweet dreams!