

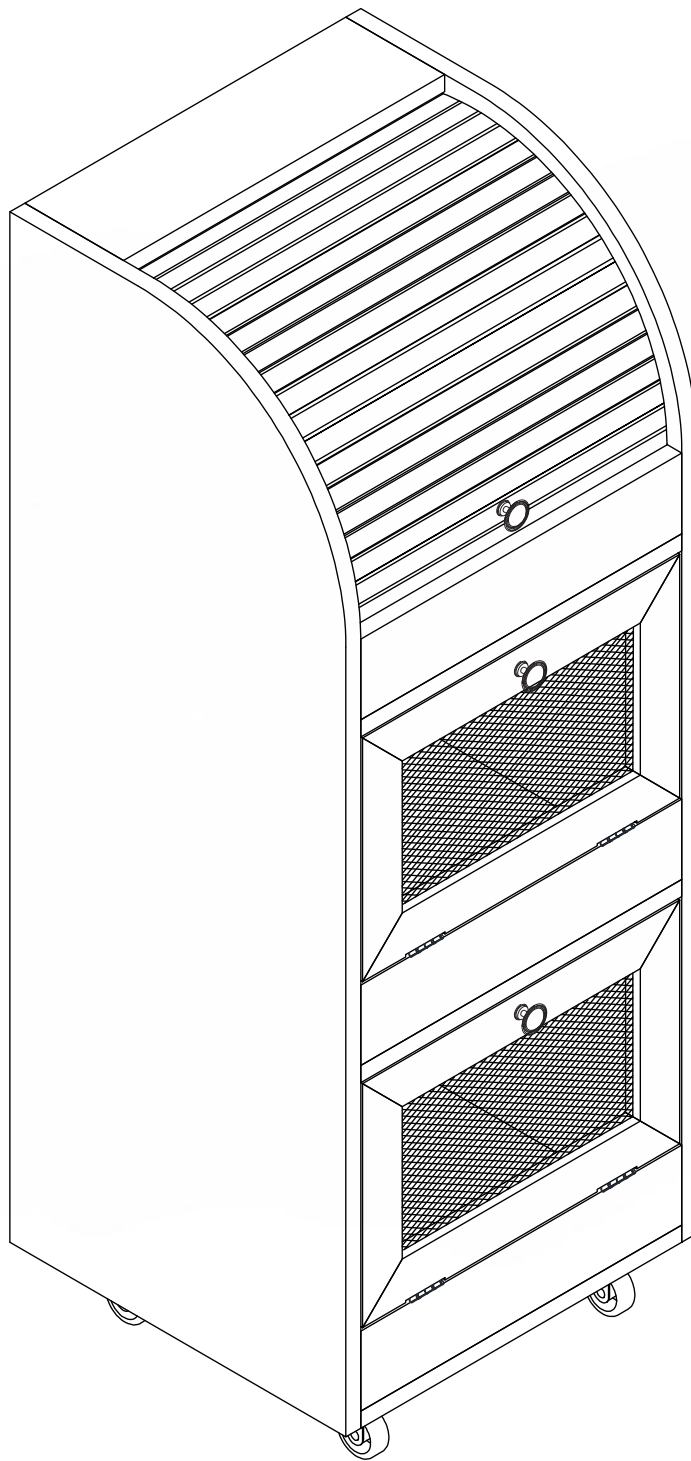
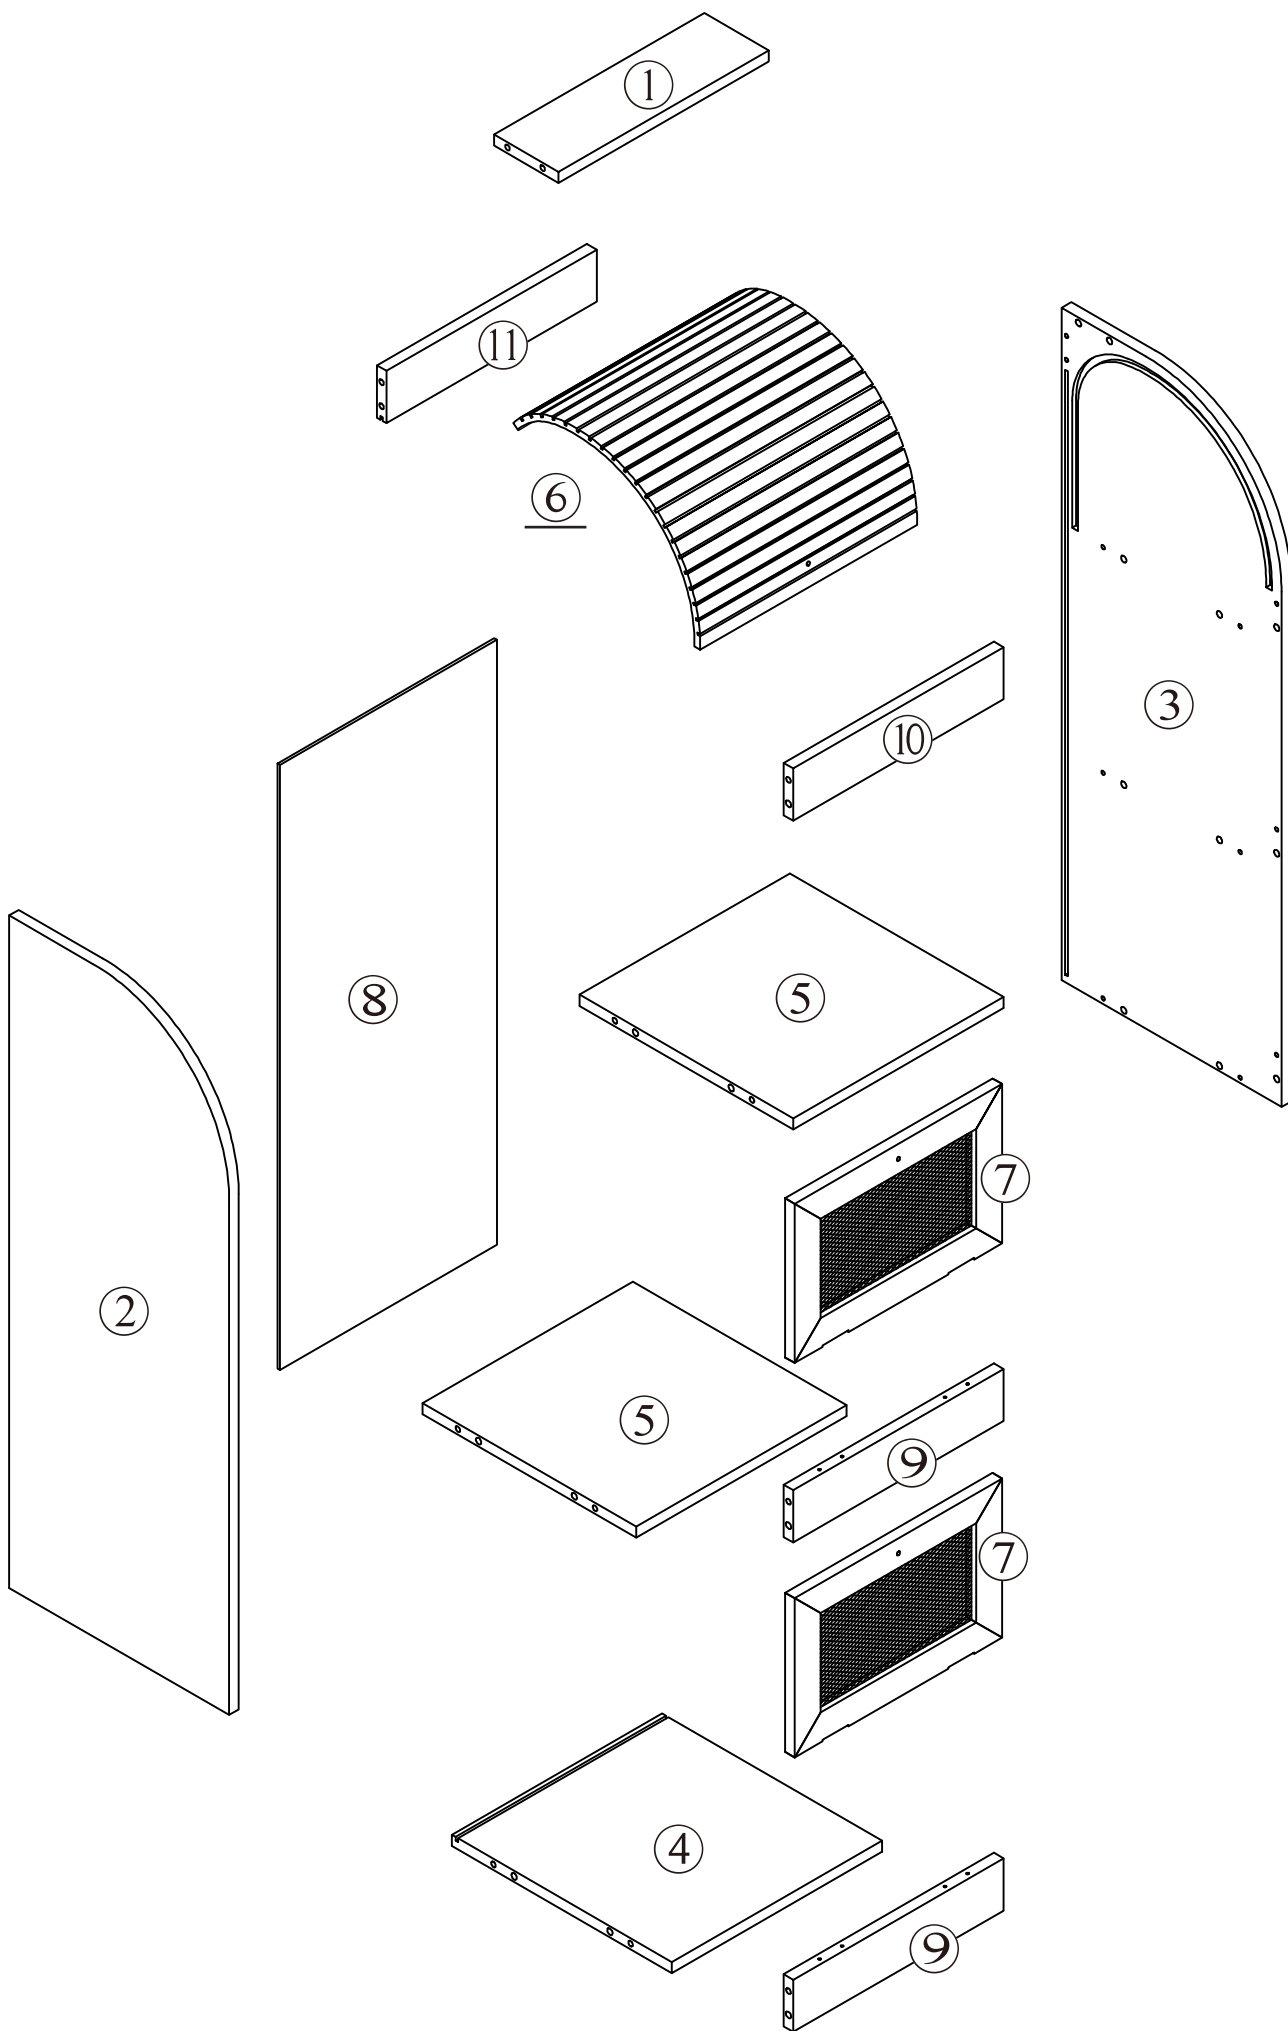
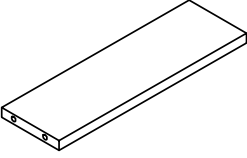
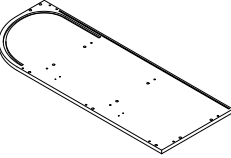
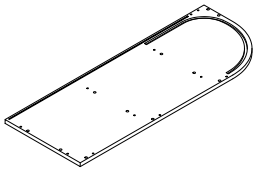
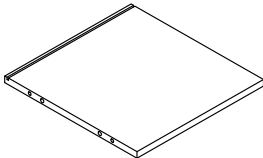






Assembly Instructions

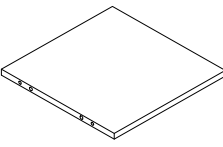



THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE
We will stand behind we sell. If you have any questions about this item, please do not hesitate to contact us

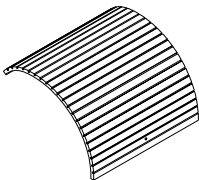




Item no.	Reference Image	Qty.
1		X1
2		X1
3		X1
4		X1
5		X2
6		X1

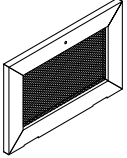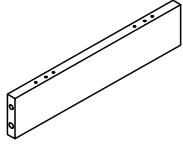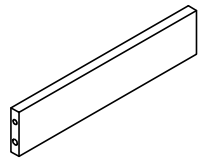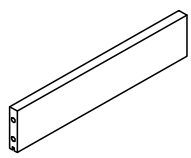Item no.	Reference Image	Qty.
7		X2
8		X1
9		X2
10		X1
11		X1




Item no.	Reference Image	Qty.
(A)	 Cam Bolt Ø6x35mm	X22
(B)	 Cam Lock Ø15x10mm	X22
(C)	 Wood Dowel Ø8x30mm	X22
(D)	 Screw M3x12mm	X36
(E)	 Metal Sheet	X2
(F)	 Magnetic Catch	X2
(G)	 Screw M4x14mm	X16
(H)	 Screw M4x14mm	X1
(I)	 Screw M4x20mm	X2

Item no.	Reference Image	Qty.
(J)	 Handle	X3
(K)	 Hinge	X4
(L)		X2
(M)		X2
(N)		X2
(O)	 Back Panel Fastener	X4
(P)	 Screw M3x14mm	X8


STEP 1

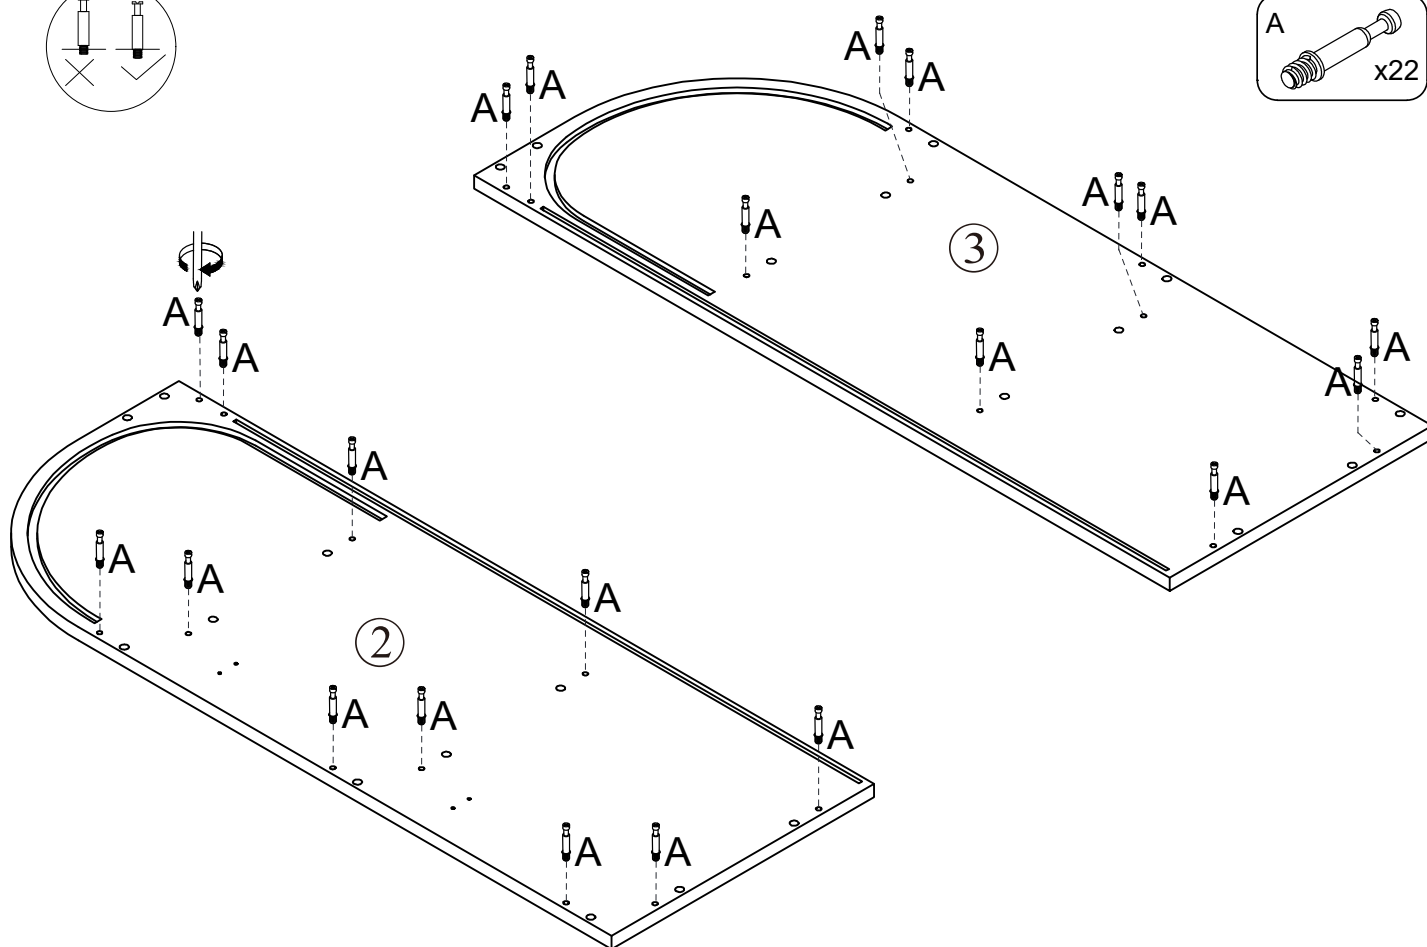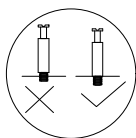


STEP 2

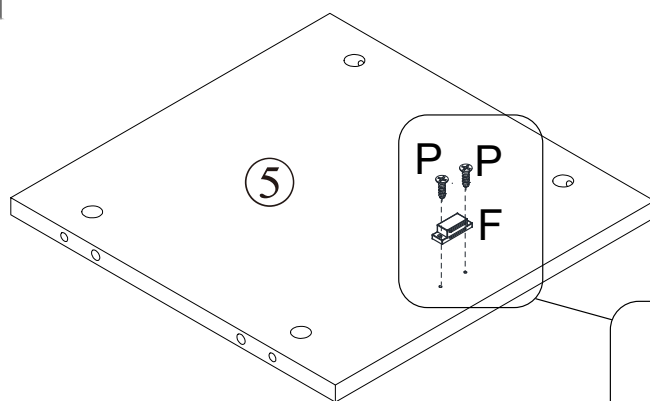


x2

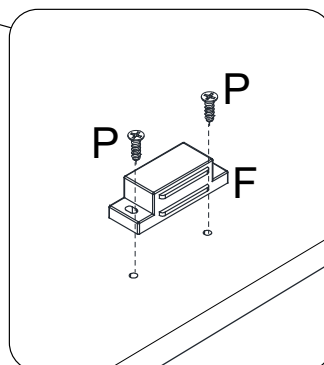


STEP 3

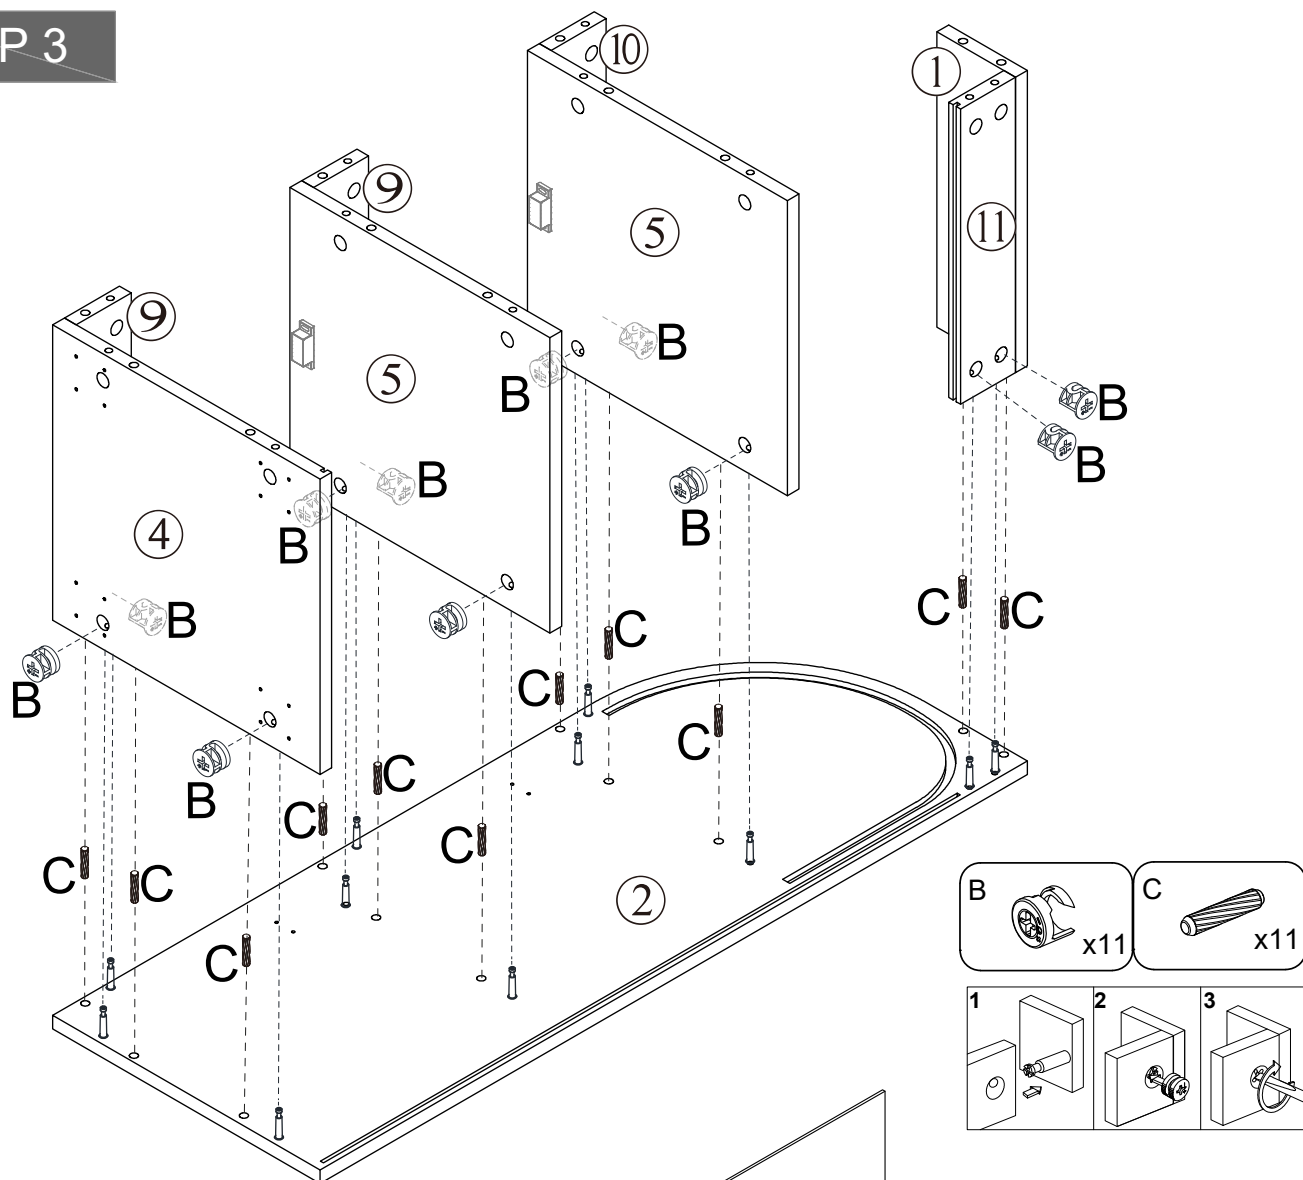


STEP 4

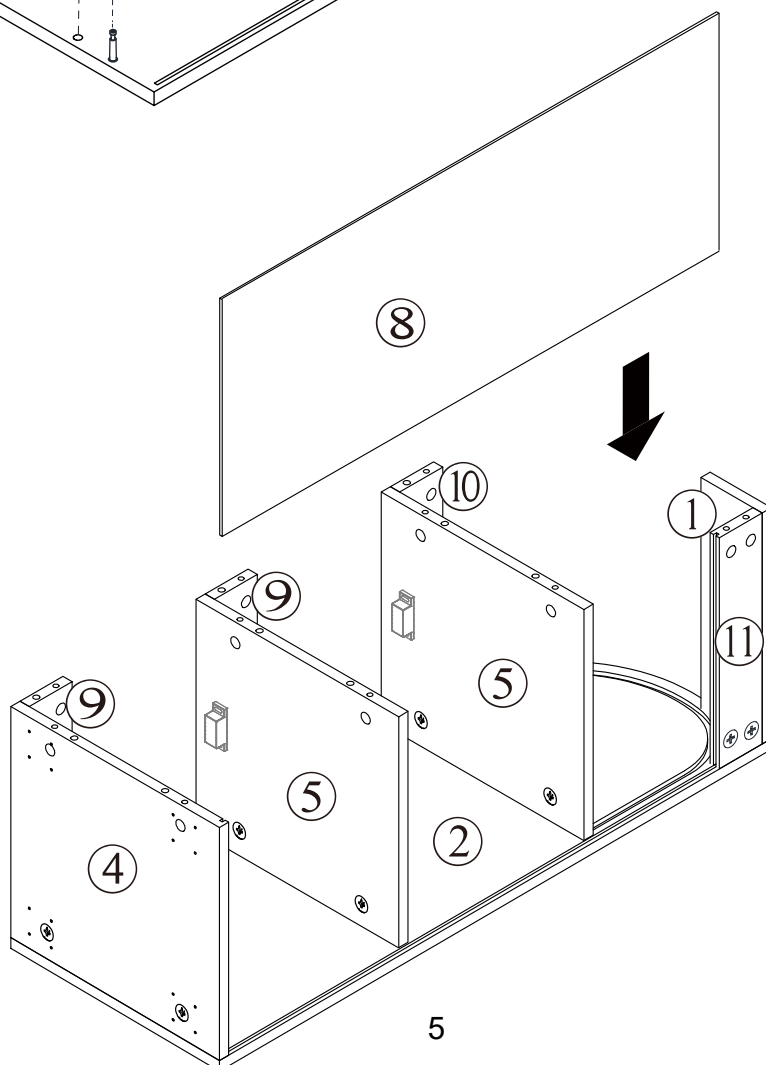



STEP 5

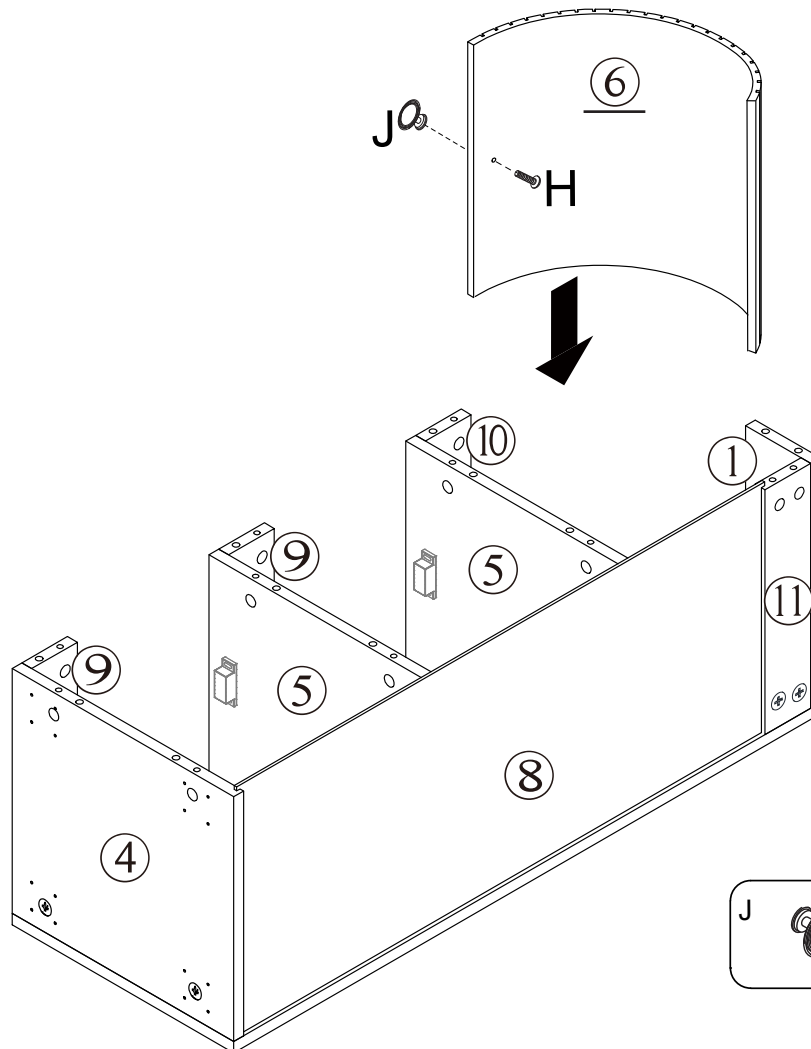

STEP 6



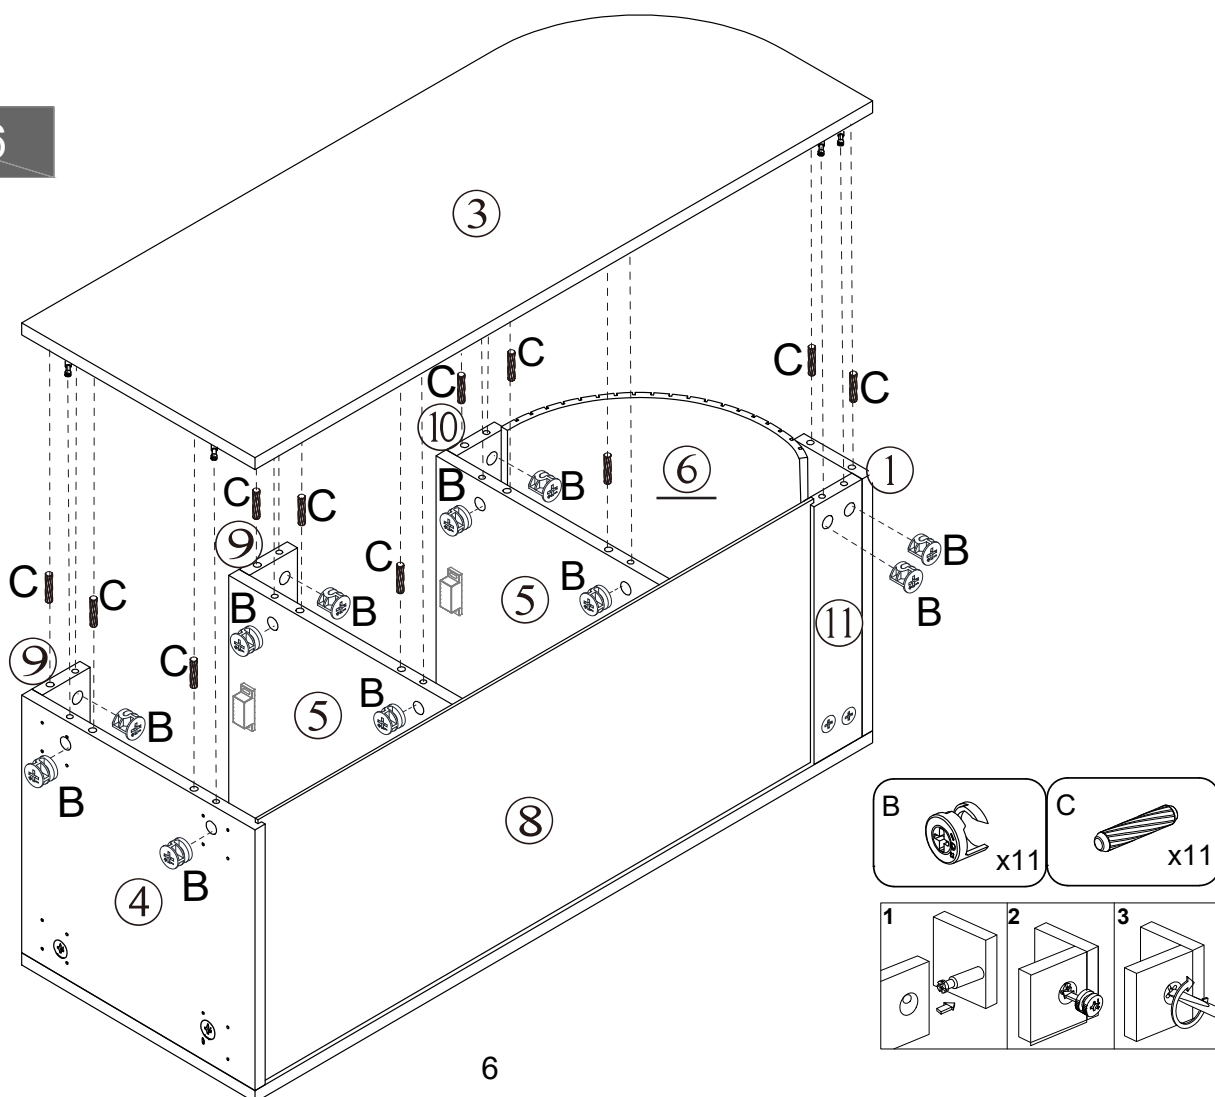


STEP 7


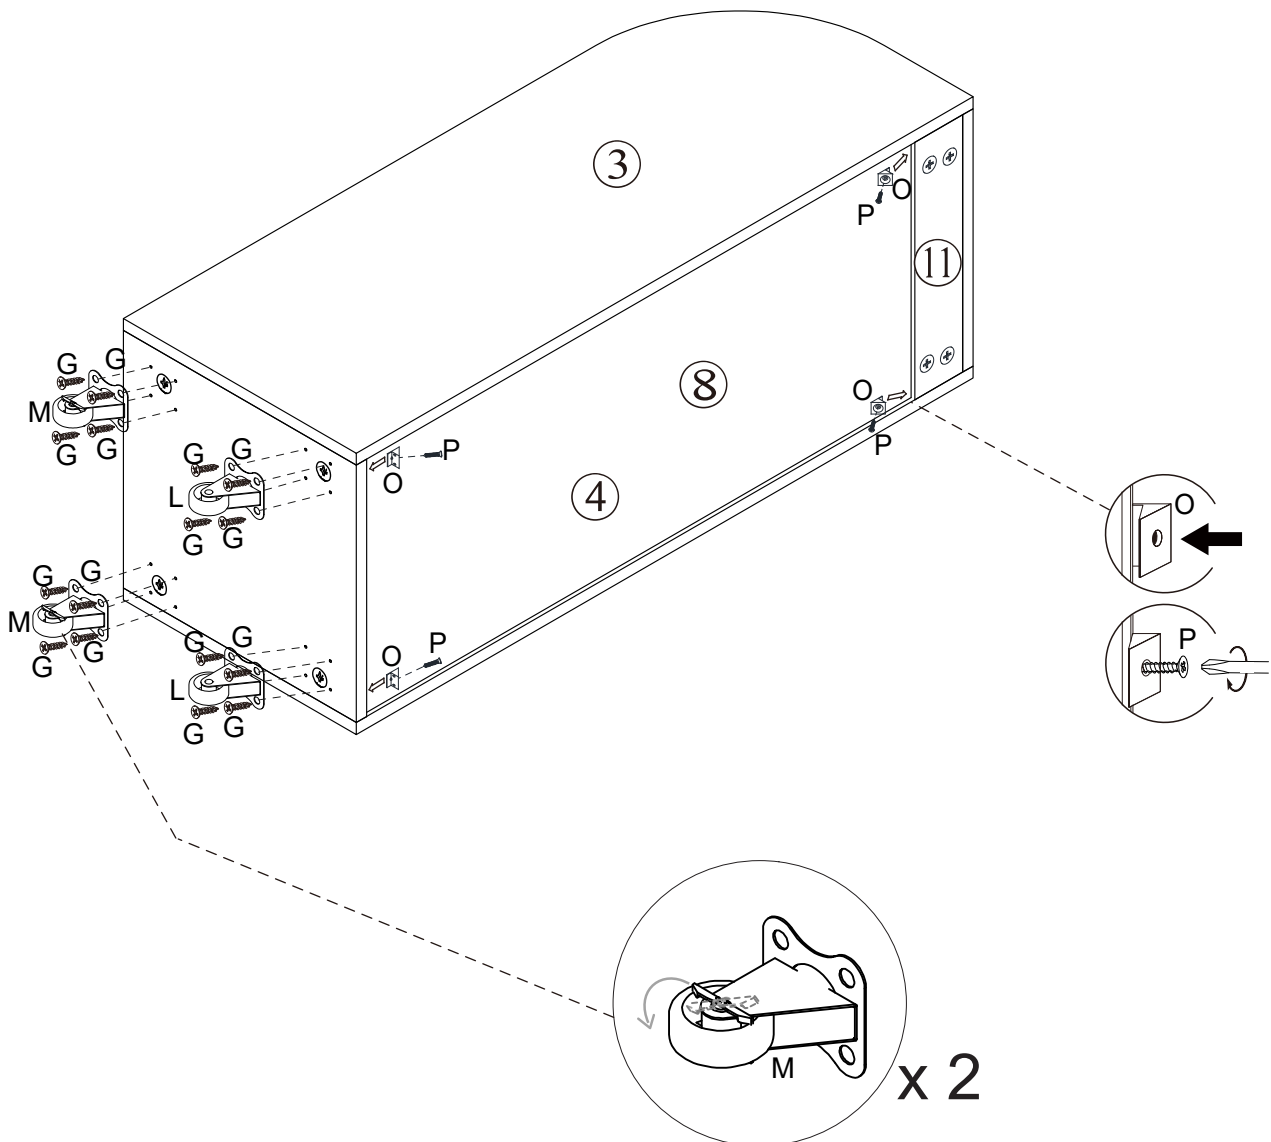
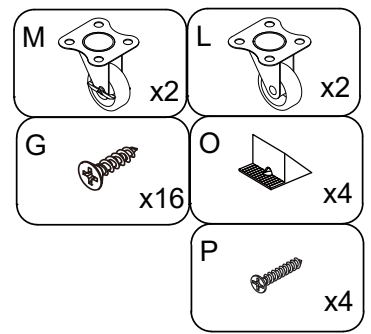


After fixing the wheels, gently rotate the locking switch to secure the wheels, and then stand the cabinet up.

STEP 8

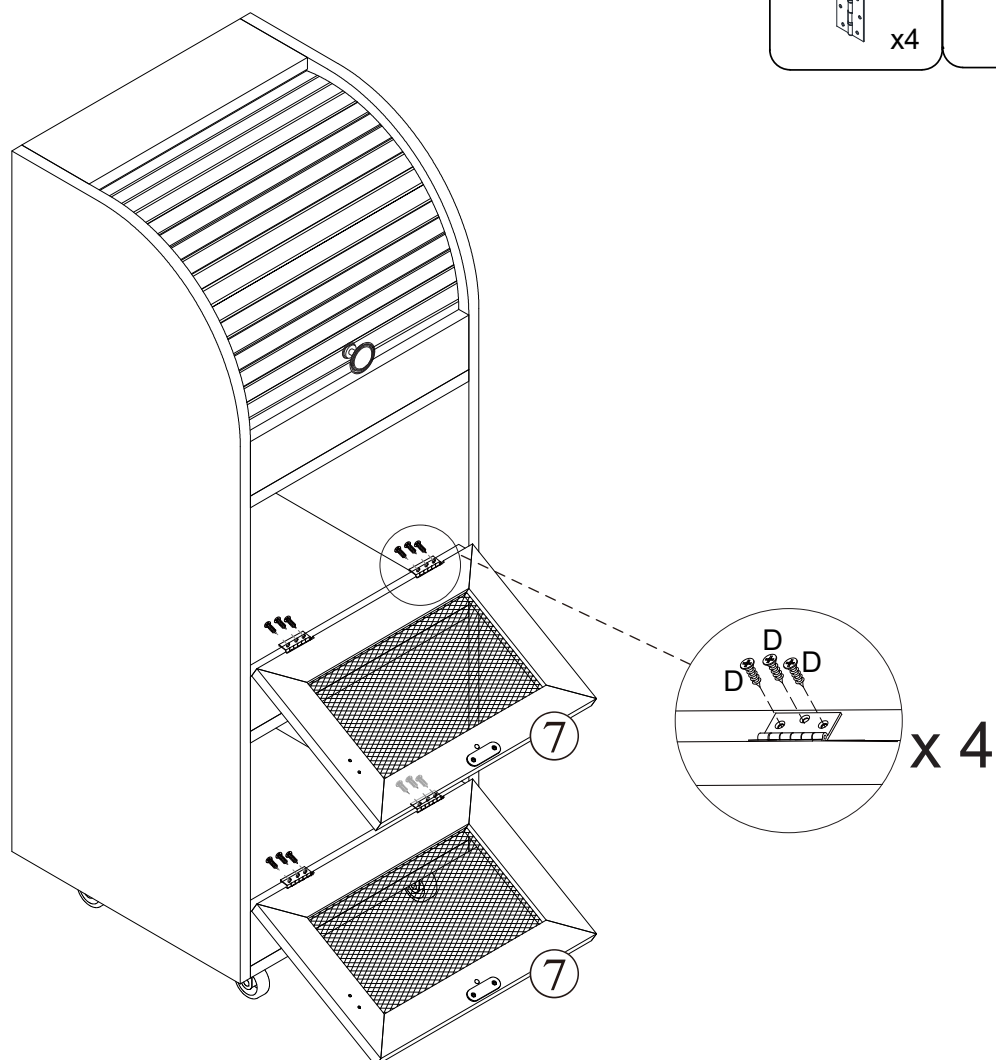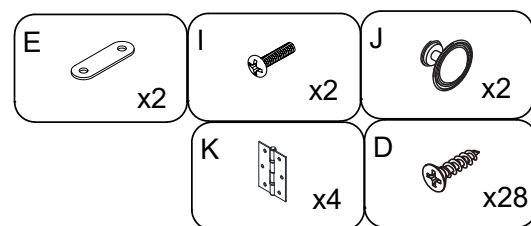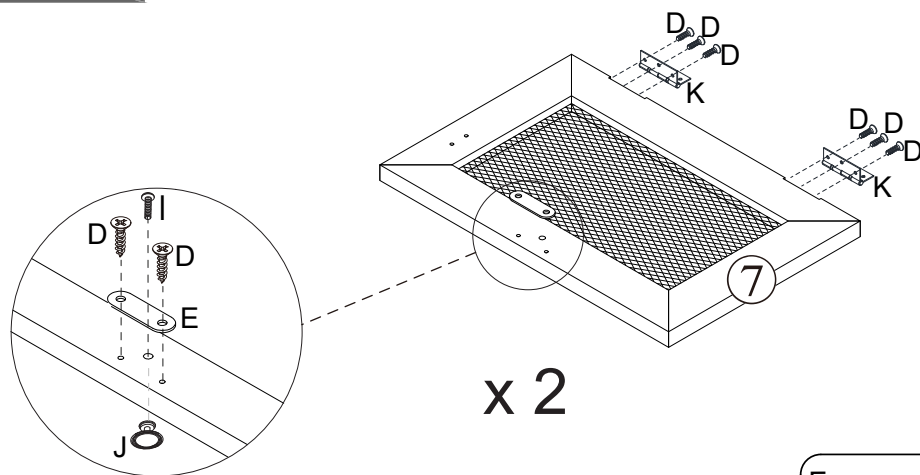

STEP 9

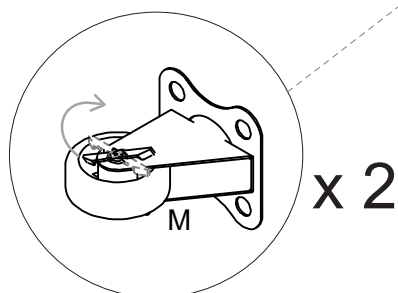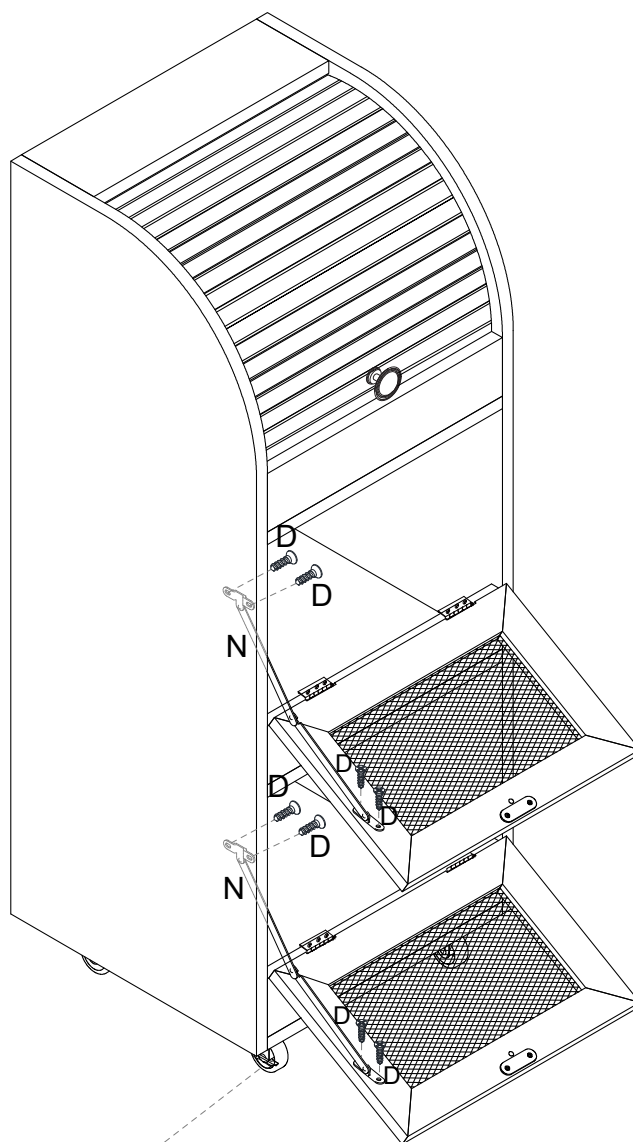

After completing all assembly steps, turn back the locking switches on the two "M" wheels respectively to allow the wheels to resume rotation, and then move the cabinet to the appropriate position.