






ASSEMBLY INSTRUCTION




Double Egg Chair

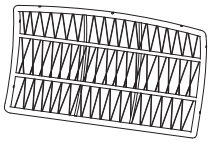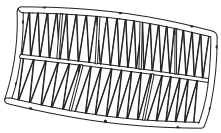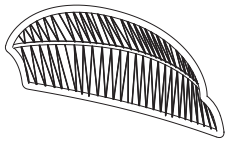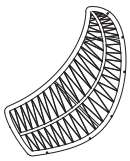



Parts List

LABEL		DESCRIPTION	QTY
A		Bottom Part of the Chair Base	1
B		Upper Part of the Chair Base	1
C		Middle Part of the Chair	1
D		Top Part of the Chair	1
E		Left Part of the Chair	1
F		Right Part of the Chair	1
G		Rear Left Leg	1
H		Rear Right Leg	1
I		Front Left Leg	1

Parts List

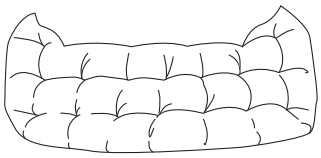LABEL		DESCRIPTION	QTY
J		Front Right Leg	1
K		Leg Support Rod	2
L		Headrest Pillow	2
M		Upper Part of Cushion	1
N		Bottom Part of Cushion	1

Hardware List


LABEL		DESCRIPTION	QTY
#1		Bolt M6*20	+2 Spare 16
#2		Bolt M6*55	+1 Spare 6
#3		Bolt M6*60	+2 Spare 15
#4		Wacher M6	+3 Spare 37
#5		Nuts M6	+2 Spare 21
#6		Wrenches M6	1
#7		Allen wrench M6	1

ATTENTION:

DO NOT tighten screws completely until assembly is completed;

1

#3 ×3PCS	#4 ×3PCS	#5 ×3PCS		
M6*60mm	M6	Nut M6	70% #6	70% #7

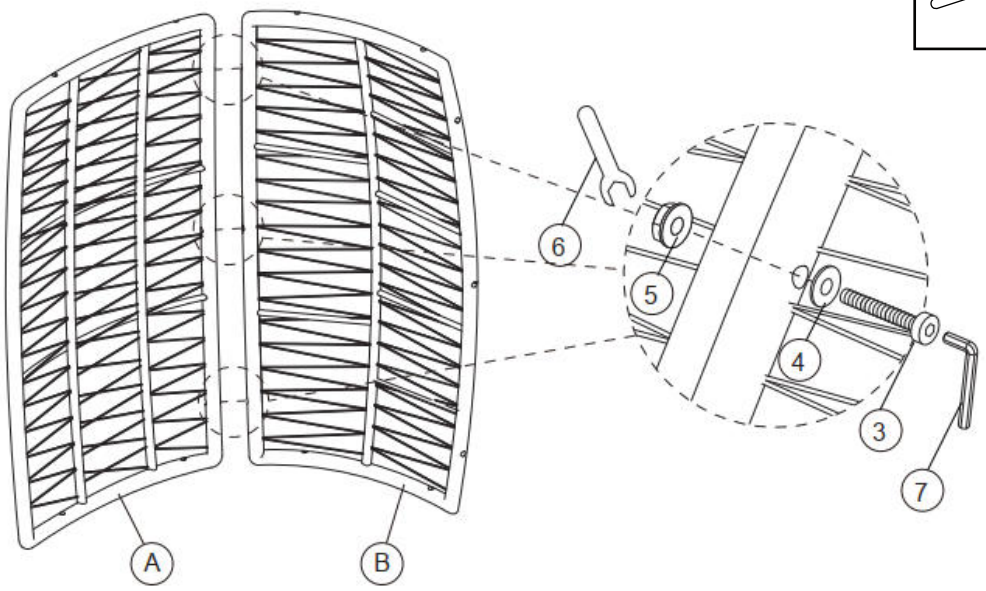


Step 1

Align the bolt holes of Bottom Part of the Chair Base (A) with the pre-drilled holes on Upper Part of the Chair Base (B). Insert screws (3#) with washers through the 3 holes shown in the figure. At this stage, use the wrench (6#) to hold the NUT (5#) in place, then tighten screws (3#) to 70%.

2

#2 ×3PCS	#4 ×3PCS	#5 ×3PCS		
M6*55mm	M6	Nut M6	70% #6	70% #7

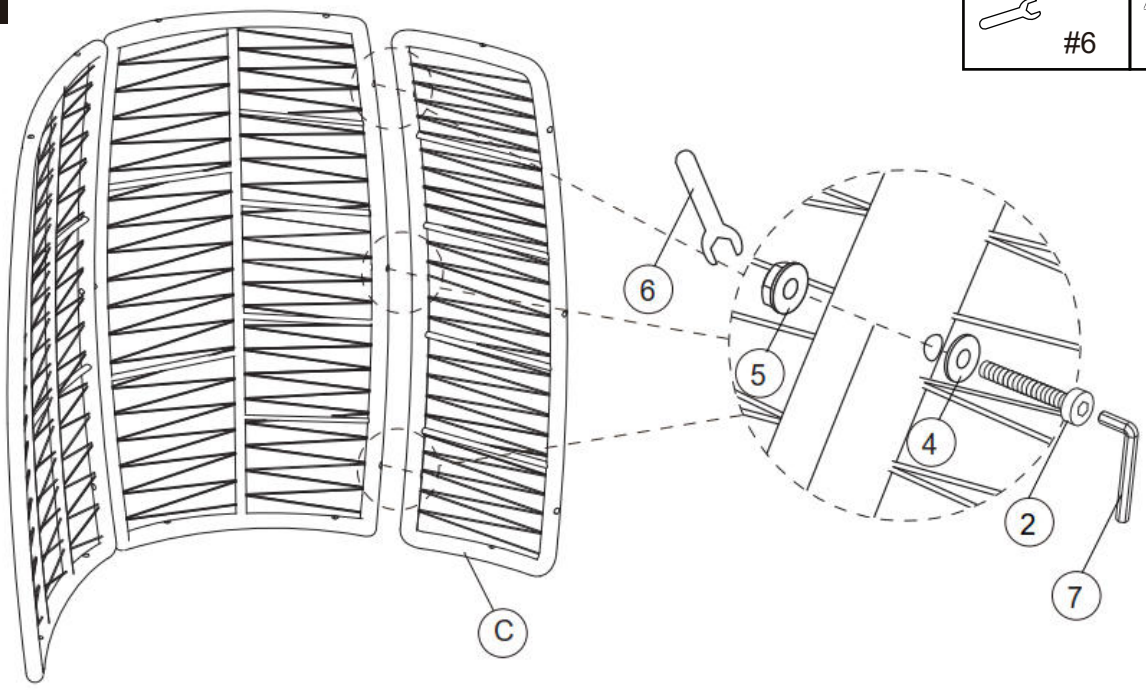


Step 2

Align the side holes of part B on the assembled section with the holes on Middle Part of the Chair (C). Insert screws (3#) with washers through the 3 holes shown in the figure, install NUT (5#), and tighten to 70%.

3

#2 ×3PCS	#4 ×3PCS	#5 ×3PCS		
M6*55mm	M6	Nut M6	#6	#7

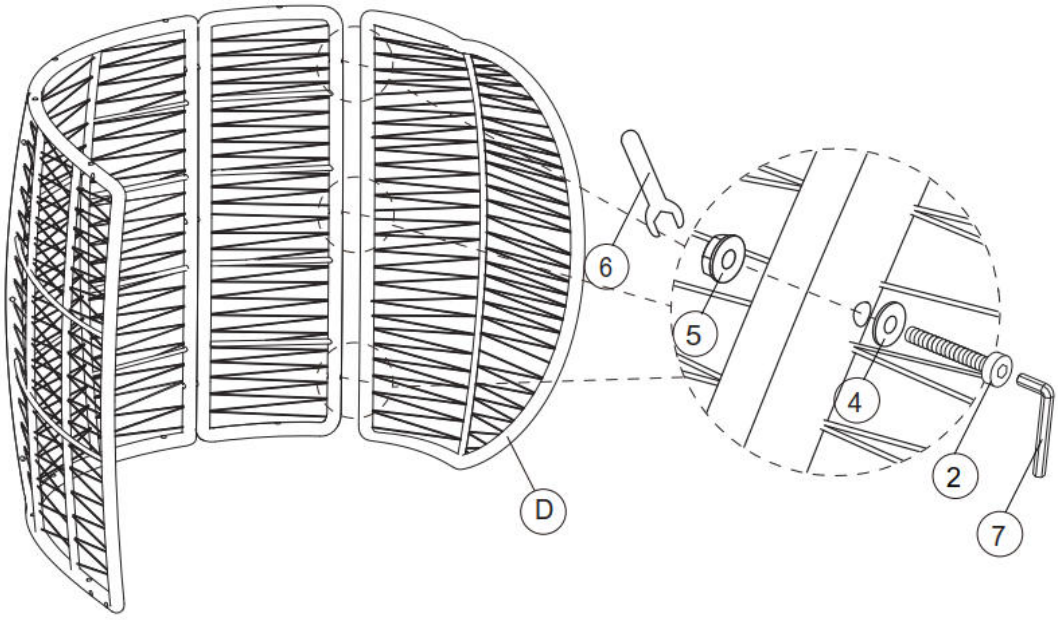


Step 3

Align the side holes of part C on the assembled section with the holes on Top Part of the Chair (D). Repeat Step 2 and use screws (2#) to tighten to 70%.

4

#3 ×6PCS	#4 ×6PCS	#5 ×6PCS		
M6*60mm	M6	Nut M6	#6	#7

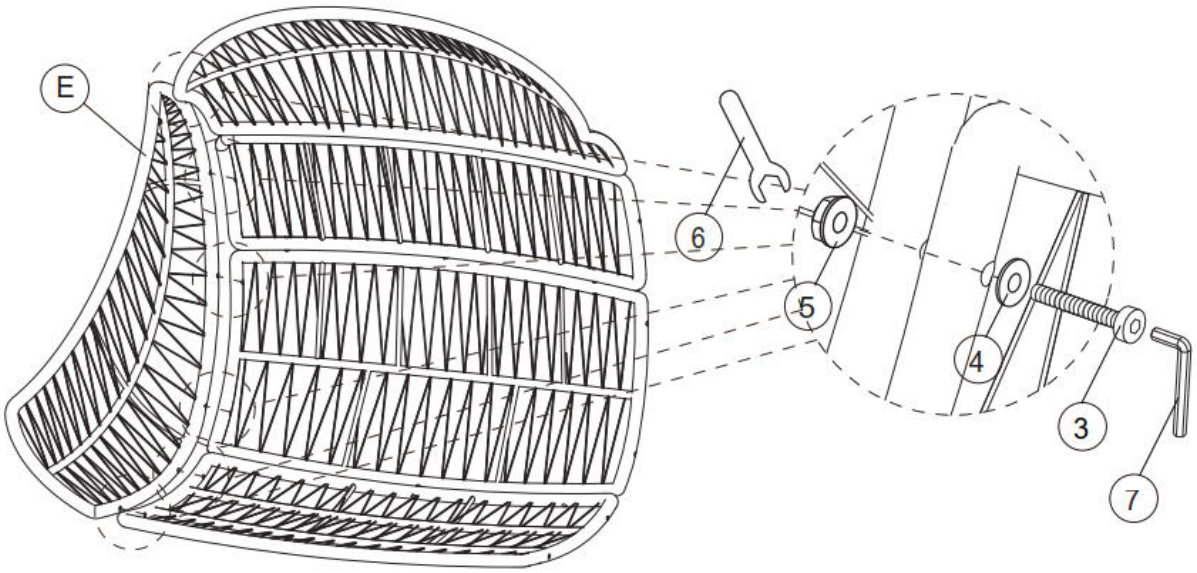


Step 4

Rotate the assembled section to the direction shown in the figure. When installing side part (E). align the 6 holes indicated by the arrows. Insert screws (3#) with washers through the 3 holes shown in the figure, install NUT (5#) , and tighten to 70%.

5

#3 ×6PCS	#4 ×6PCS	#5 ×6PCS	#6	#7
M6*60mm	M6	Nut M6	70%	70%

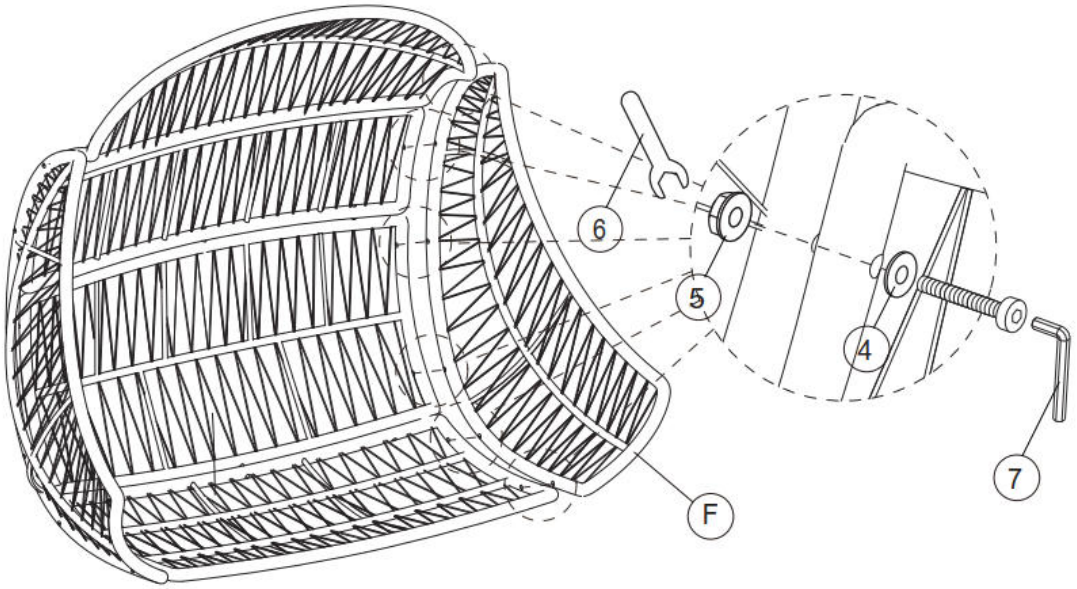


Step 5

Repeat Step 4 to install side part (F).

6

#1 ×4PCS	#4 ×4PCS	#7
M6*20mm	M6	70%

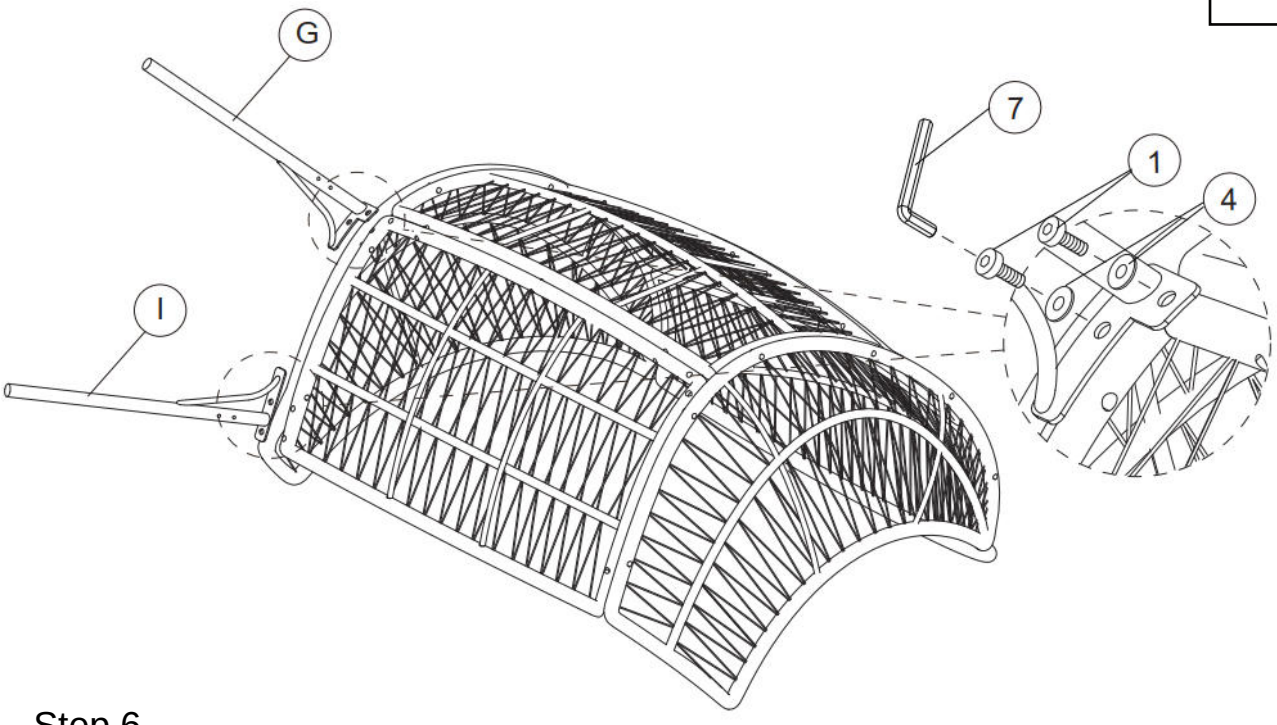


Step 6

When assembling the left legs, align the holes of Rear Left Leg (G) and Front Left Leg (I) with the bottom frame. Insert screws (1#) with washers (4#) through the holes shown in the figure. Use the Allen wrench (7#) to tighten screws (1#) to 70%.

7

#1 ×4PCS	#4 ×4PCS	70%
M6*20mm	M6	#7

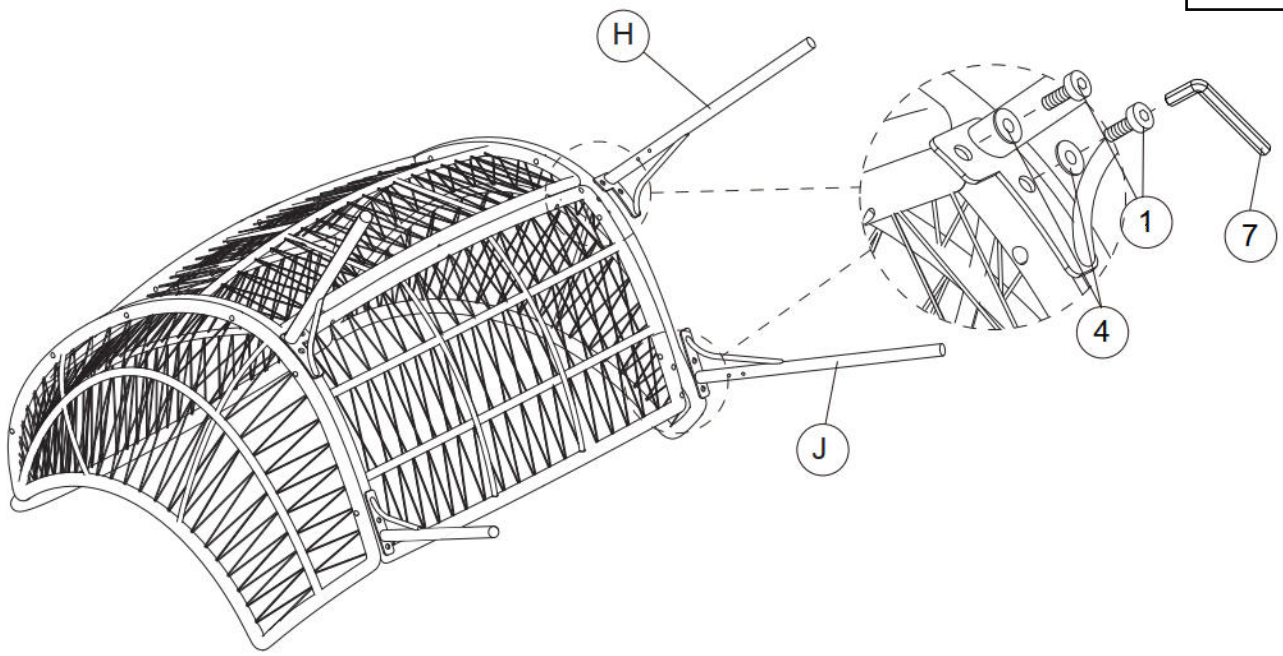


Step 7

Repeat Step 6 to assemble the right legs.

8

#1 ×8PCS	#4 ×8PCS	70%
M6*15mm	M6	#7

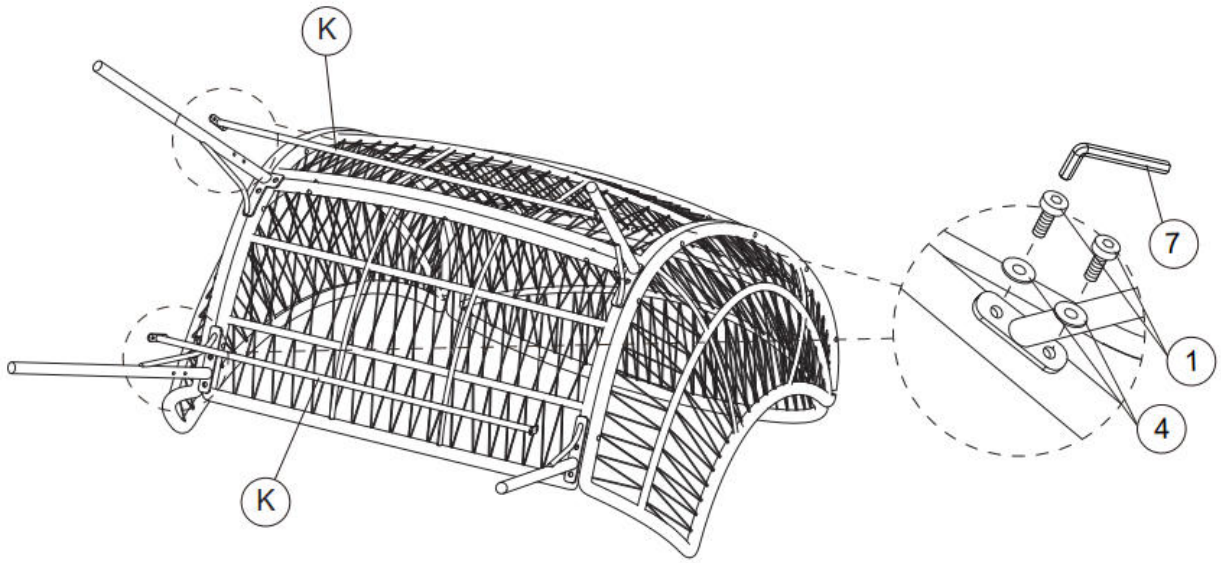


Step 8

Align the holes of Leg Support Rod (K) with the front and rear legs. Insert screws (1#) with washers (4#) through the holes shown in the figure.Use the Allen wrench (7#) to tighten screws (1#) to 70%.

At this step, tighten all screws completely.

9

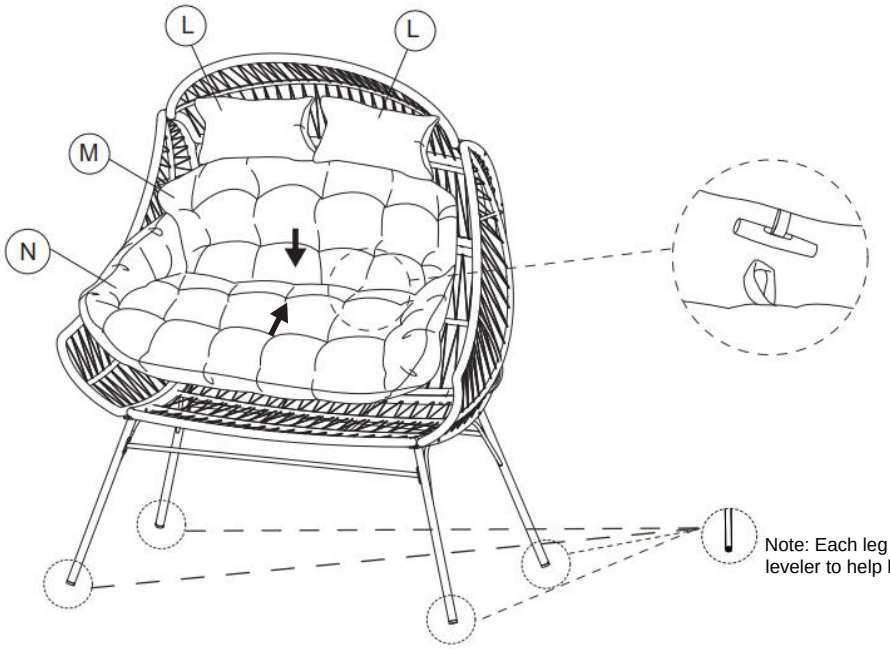


Note: Each leg has an adjustable foot leveler to help level your chair.

Step 9

Adjust the leveling feet to keep the chair level, fluff the cushion by patting it, then attach it to the chair using the hook-and-loop fasteners.

Note: The hook-and-loop fasteners must be secured to the metal frame.
Do not attach them to the wicker.

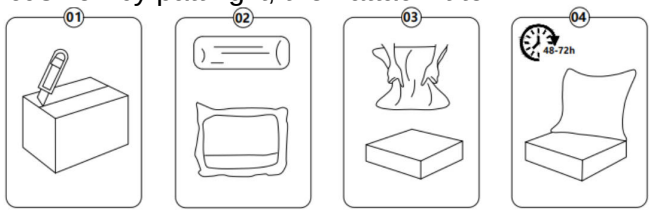

Unpack the Box
Carefully remove the cushion bag from the box.

Open the Vacuum Bag
Release the cushion from the vacuum bag.

Pat and Pinch
Gently pat and pinch the cushion to restore shape.

Allow Time to Restore
It takes about 48-72 hours to regain fullness.

10

