


ASSEMBLY INSTRUCTIONS


PF035

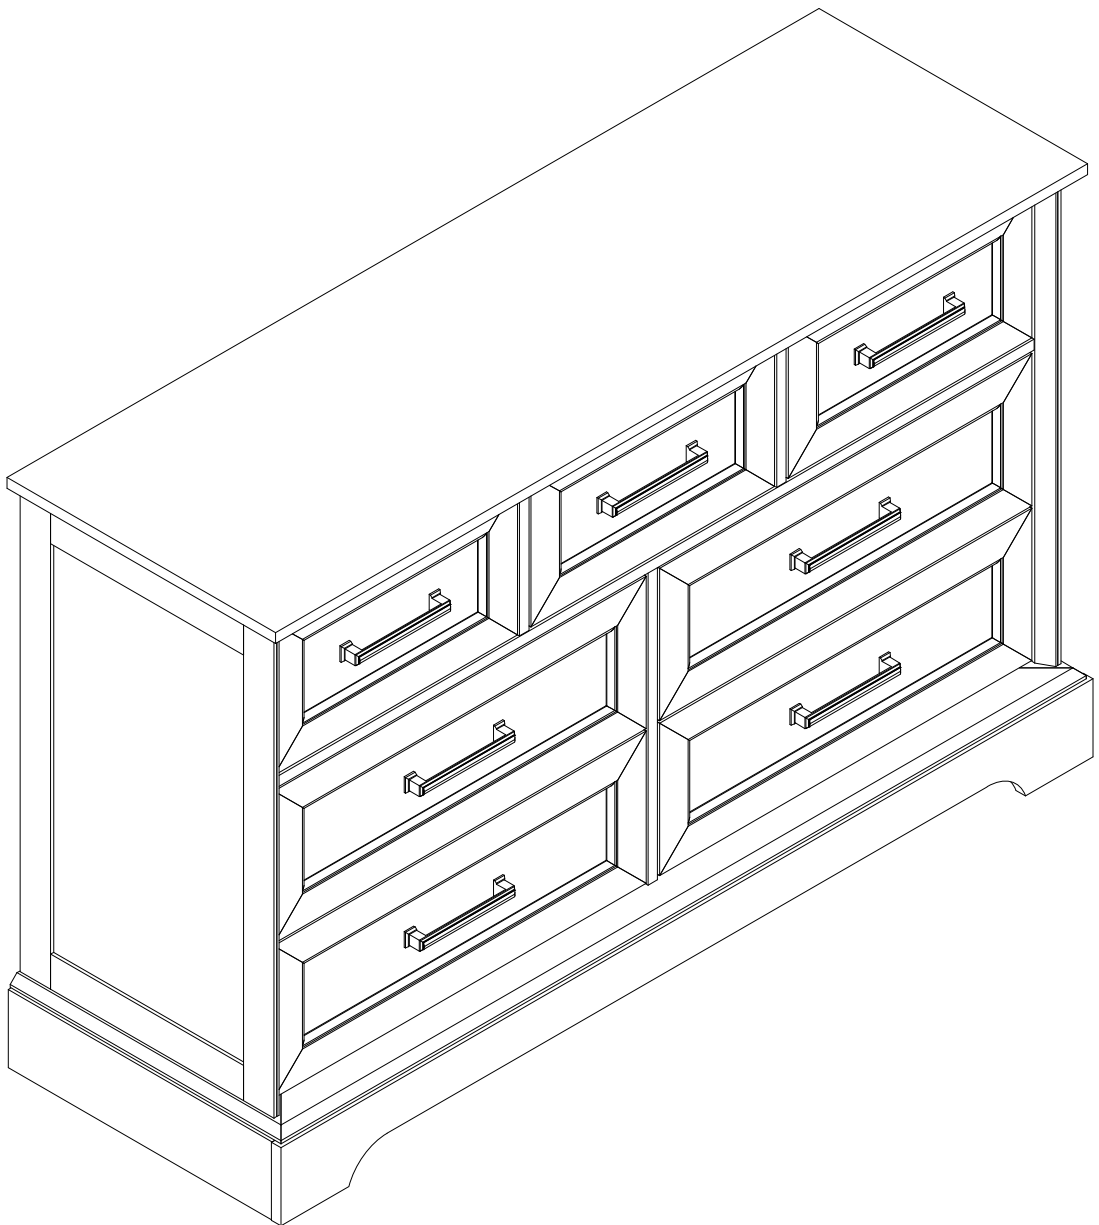

WARNING !

PF035


MAXIMUM LOAD
220 lb/ 100kg




Estimated Time for Assembly

60 mins

MAXIMUM LOAD
20 lb/ 9.1kg

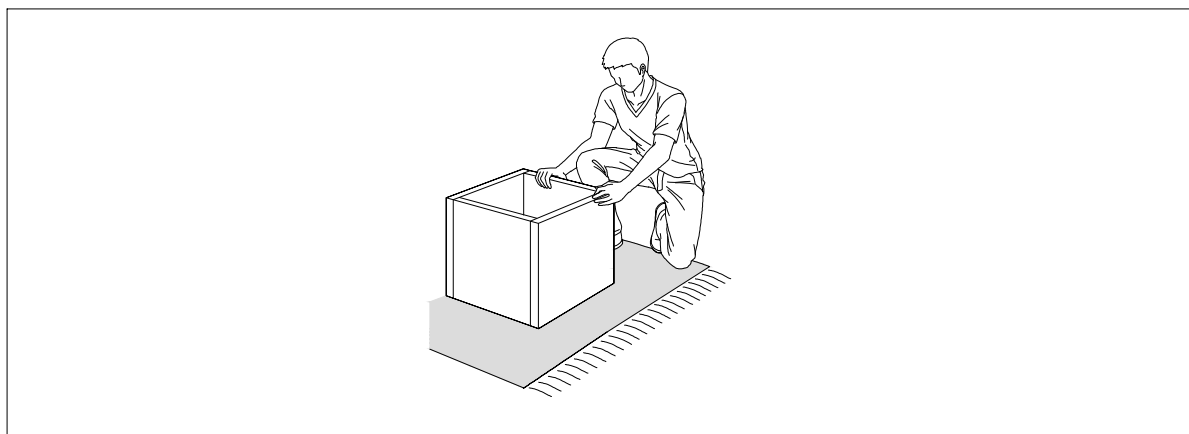

Assembly the furniture on empty carton, carpet, or rug to prevent scratches or damage.

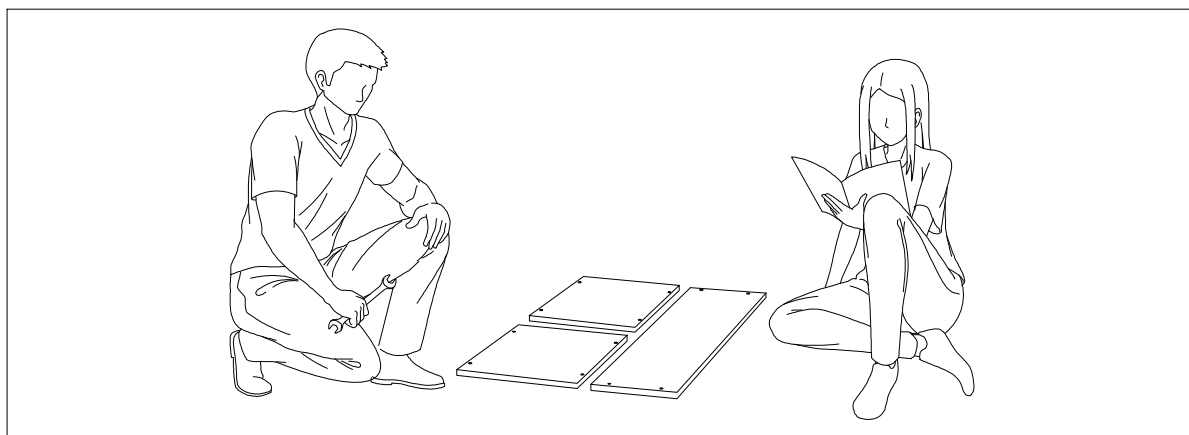


This furniture requires 2 people to assembly.

Make sure no parts are missing or damaged before assembly.

Board Identification

PF035


Not actual size

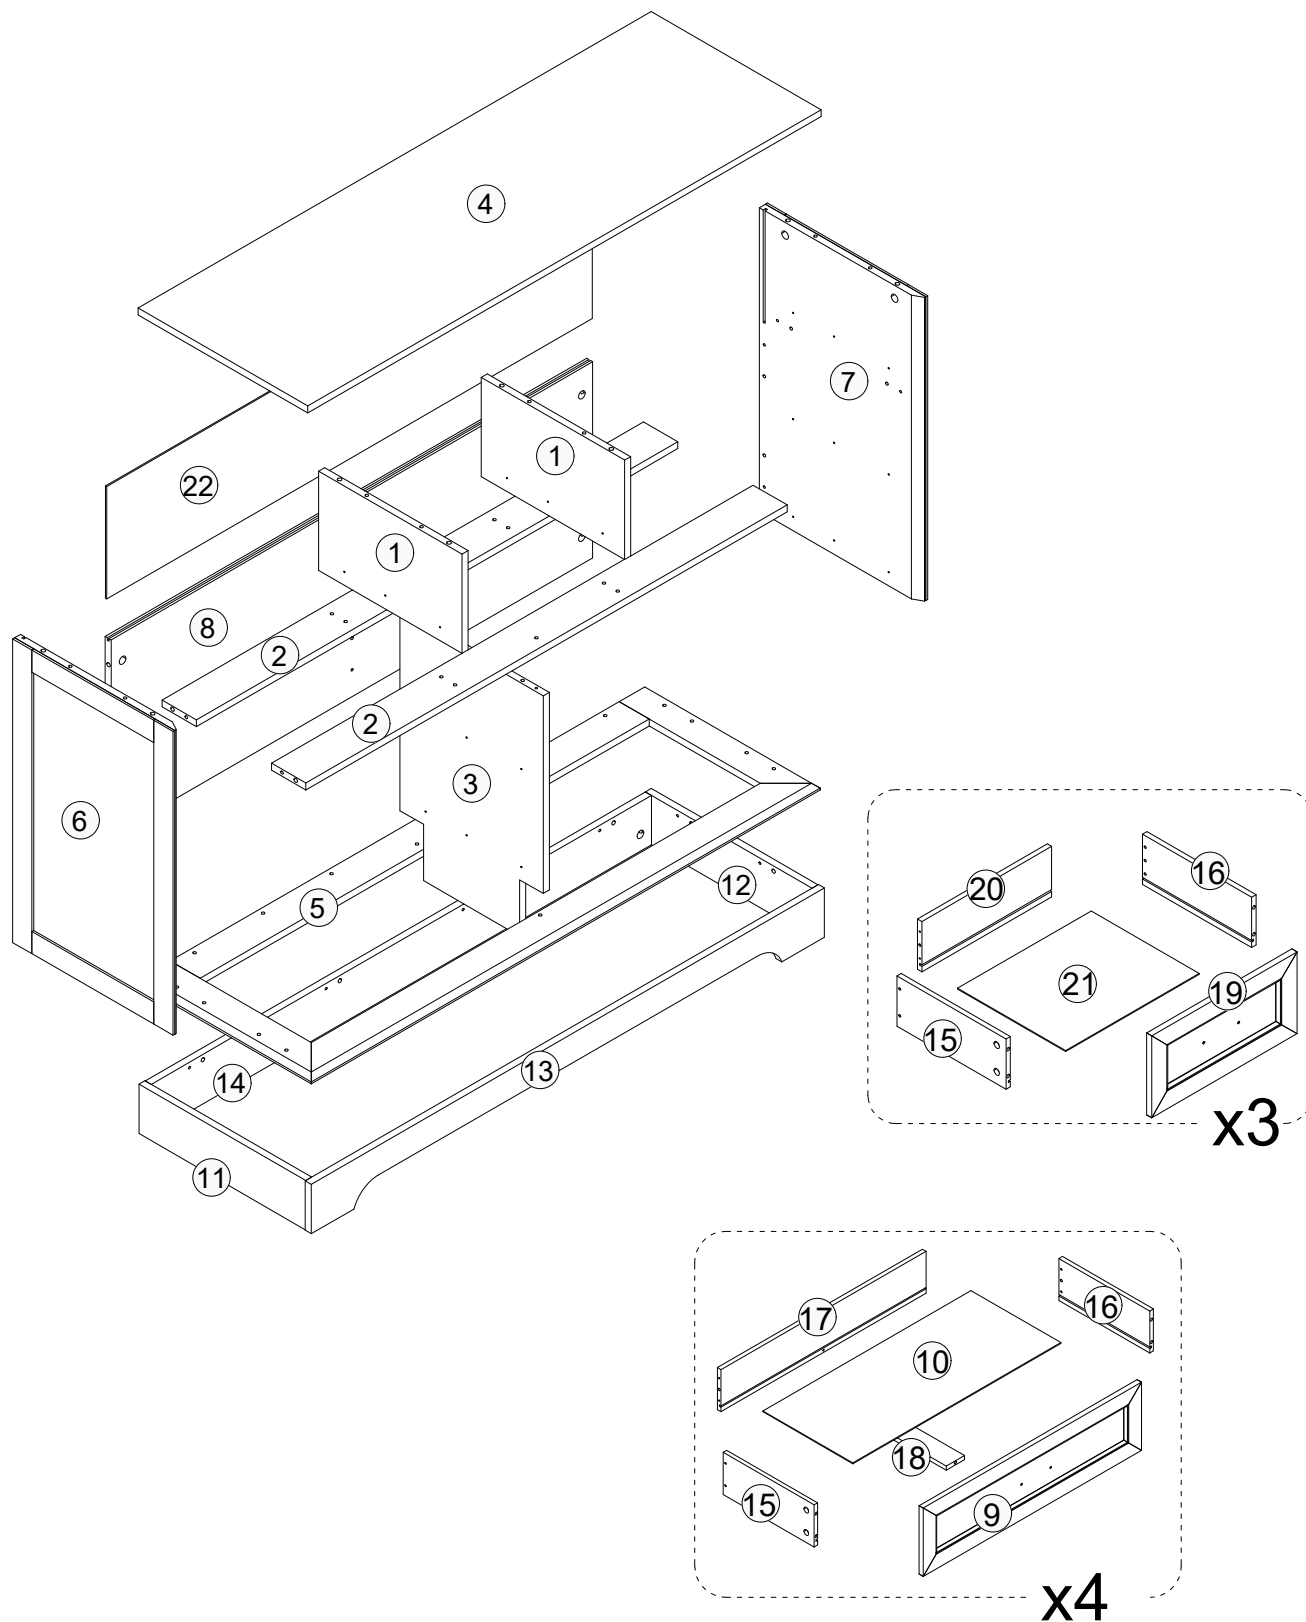


BOARD IDENTIFICATION

PF035


Not actual size

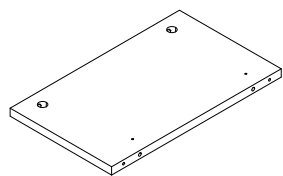


① x2

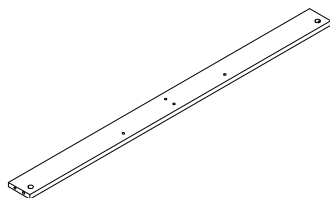


② x2

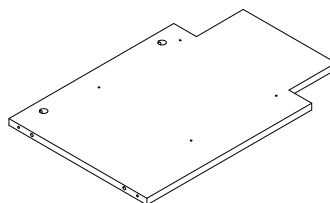


③ x1

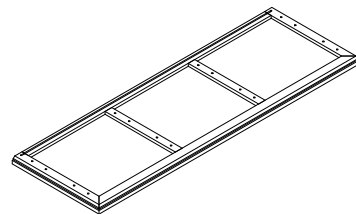


④ x1

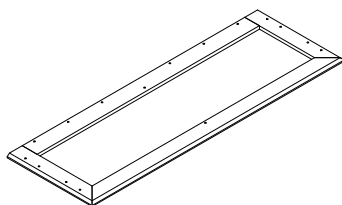


⑤ x1

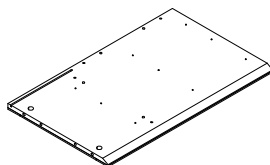


⑥ x1

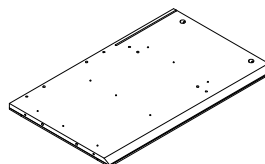


⑦ x1

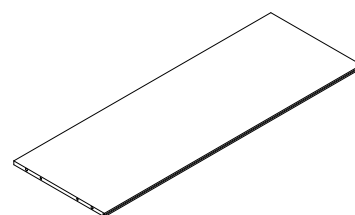


⑧ x1

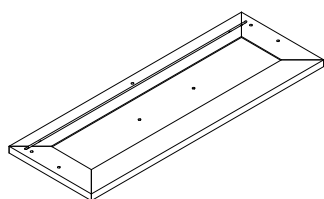


⑨ x4

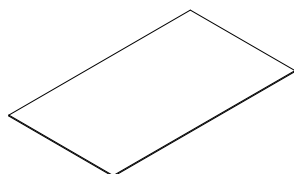


⑩ x4

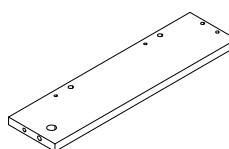


⑪ x1

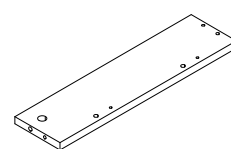


⑫ x1

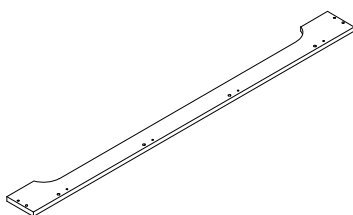


⑬ x1

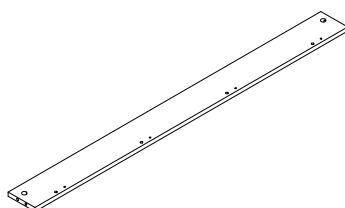


⑭ x1

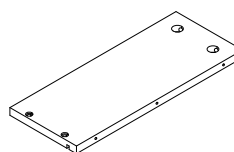


⑮ x7

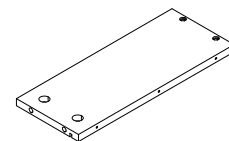


⑯ x7

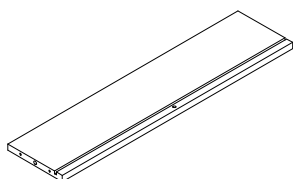


⑰ x4



⑱ x4

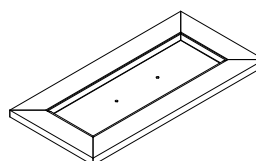

⑲ x3

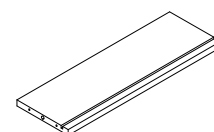


⑳ x3

BOARD IDENTIFICATION




Not actual size

PF035

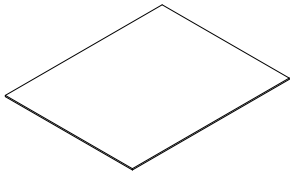











②1 x3

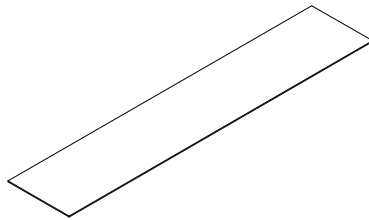

②2 x1


HARDWARE LIST

PF035

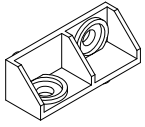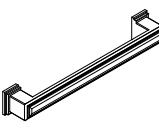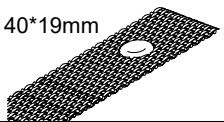 Ø6x33.5mm A x54+5	 Ø15x9.5mm B x54+5	 Ø6x30mm C x48+4	 Ø5x38mm D x16+1				
 Ø3.5x12mm E x80+8	 F x12	 Ø6x12mm G x24+2	 Ø3x15 H x4+1				
 M4x8mm I x14	 J x2+3	 K x7	 Ø4x38mm L x32+3				
M1x2 140*19mm  M2x4 Ø16xØ6.5x1mm  M3x2 Ø4x16mm  M				N1x2 Ø6x30  N2x2 Ø4x35  N		 O x1	
 CL x7		 CR x7		 DR x7		 DL x7	





Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.






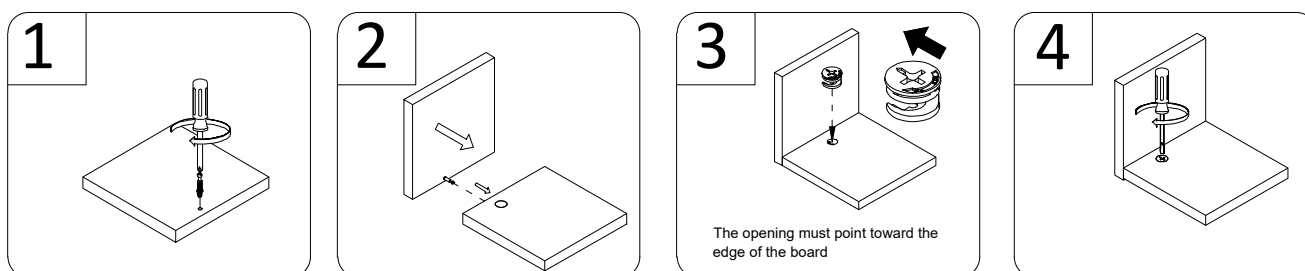


STEP 1

PF035

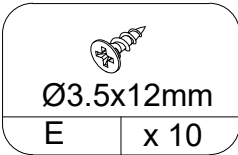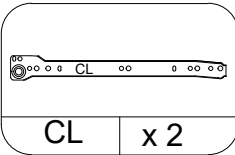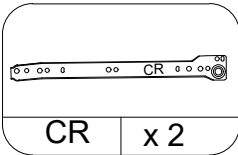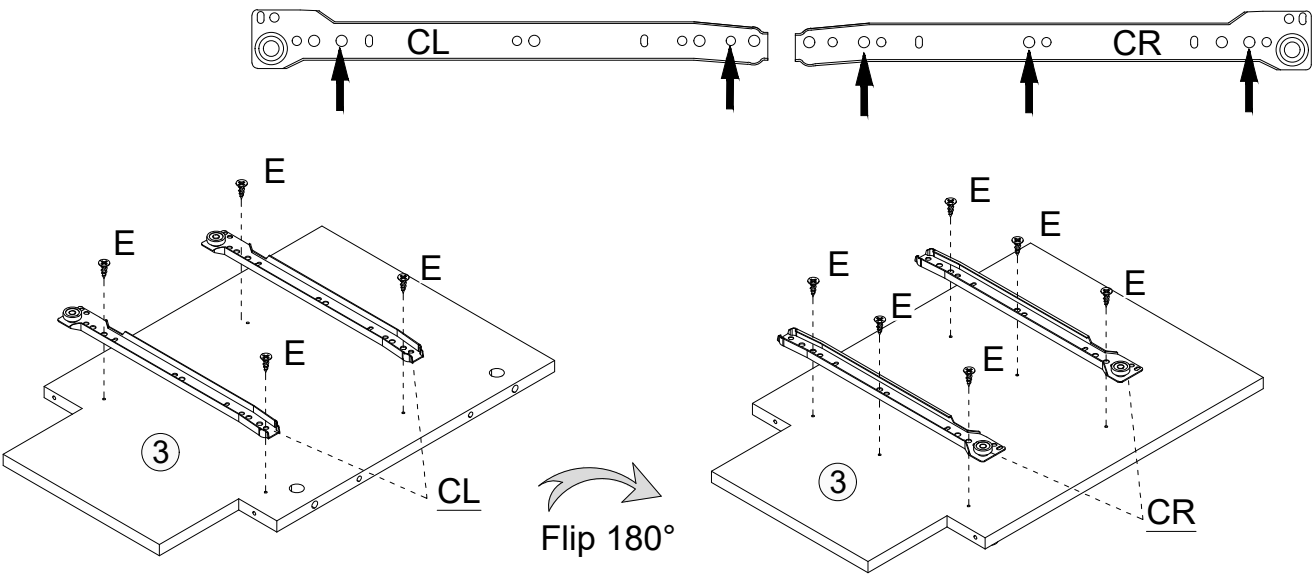




STEP 2

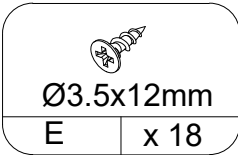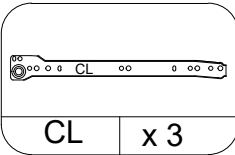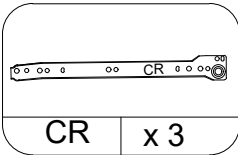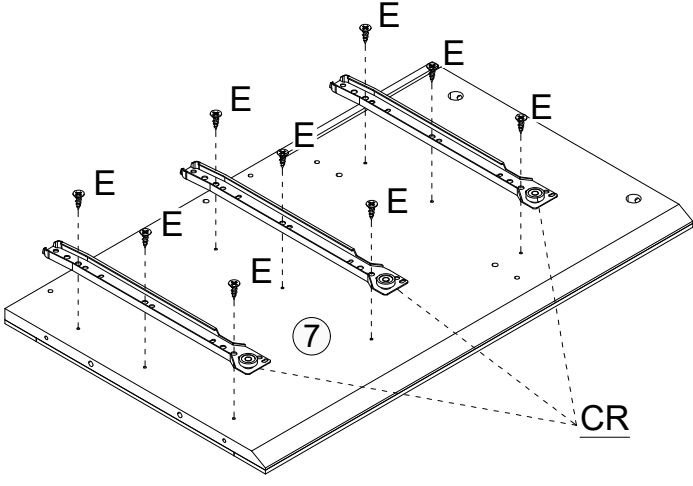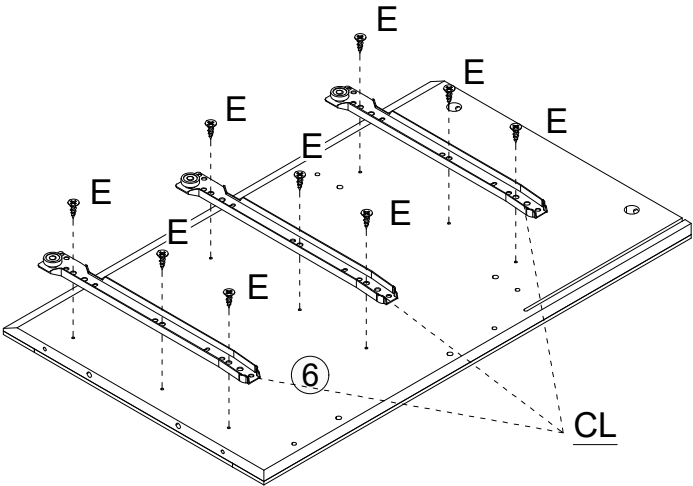



STEP 3


PF035

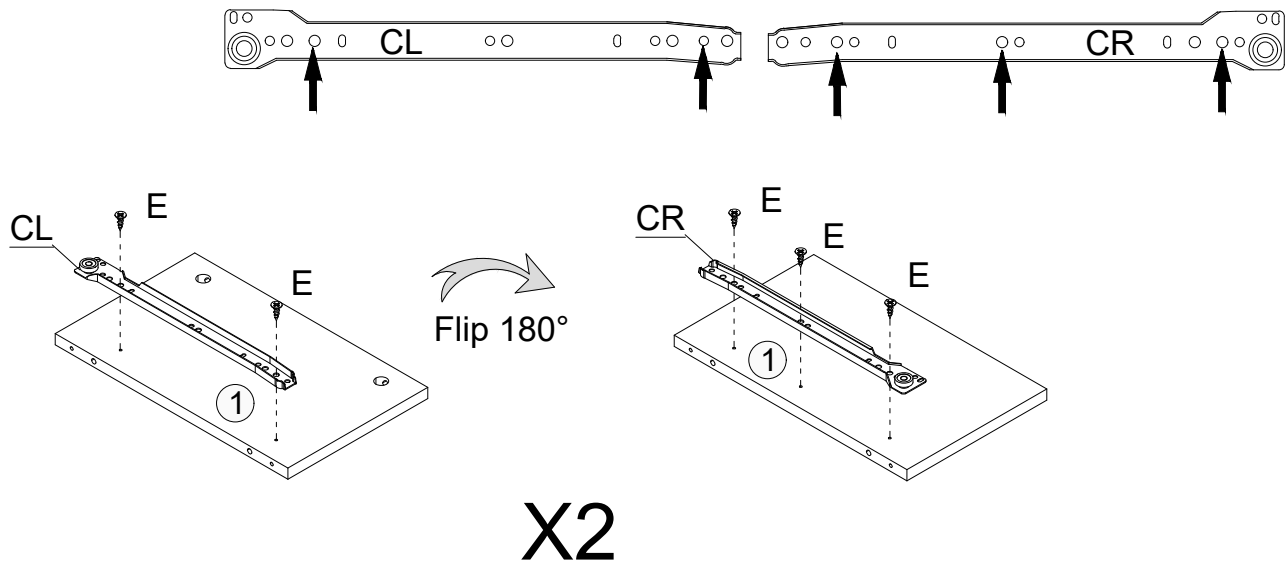

					
CR	x 2	CL	x 2	Ø3.5x12mm E	x 10




STEP 4

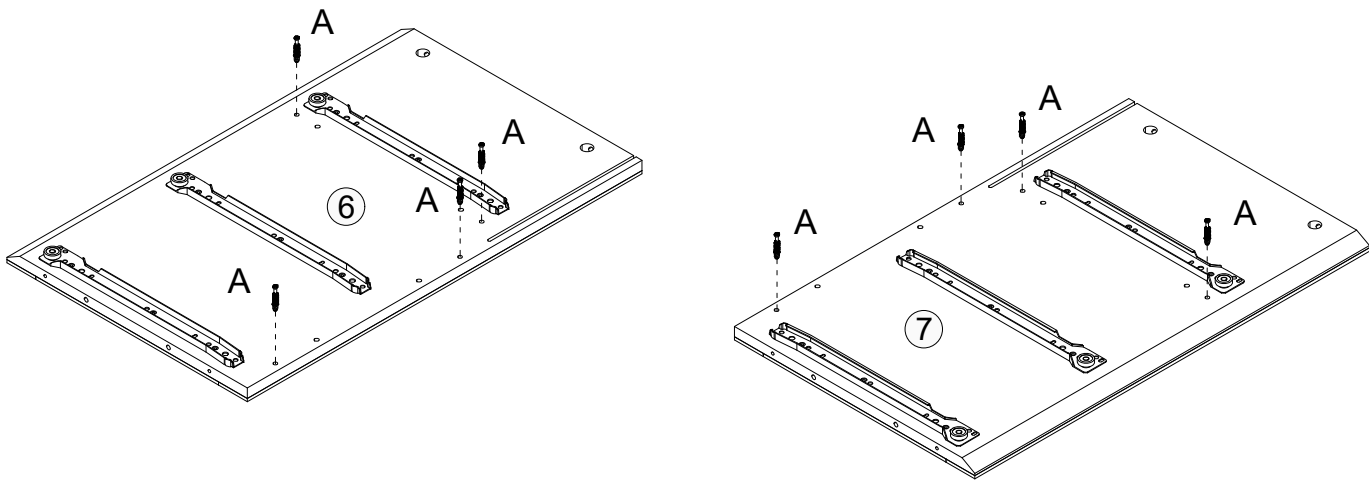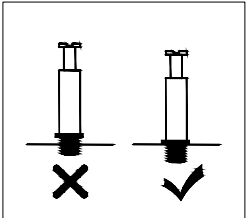




	
Ø6x33.5mm	
A	x 8

STEP 5


PF035

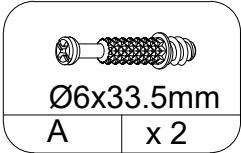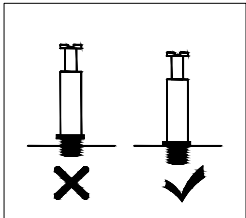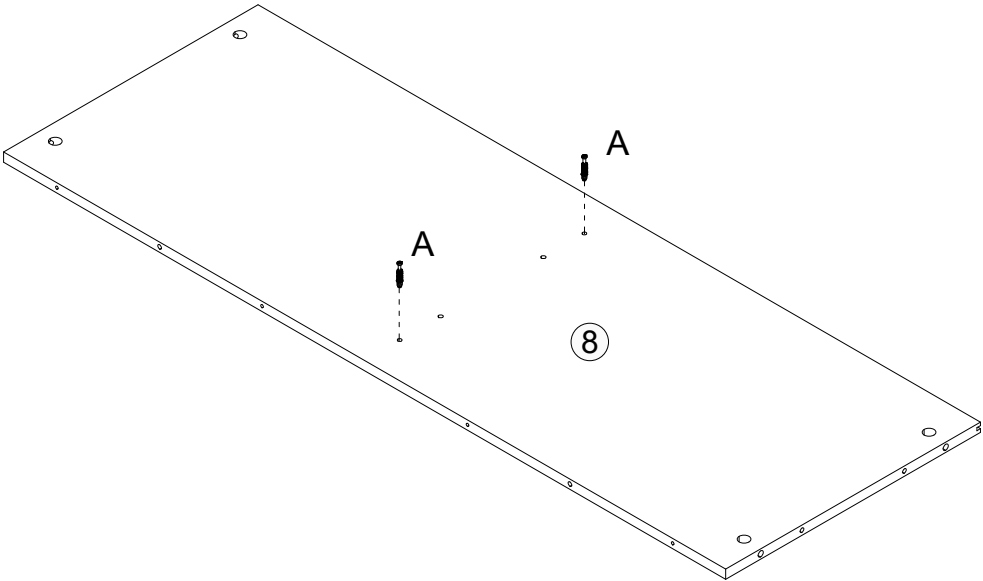


STEP 6

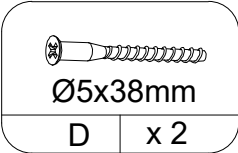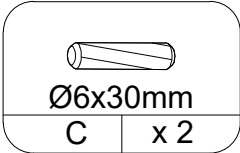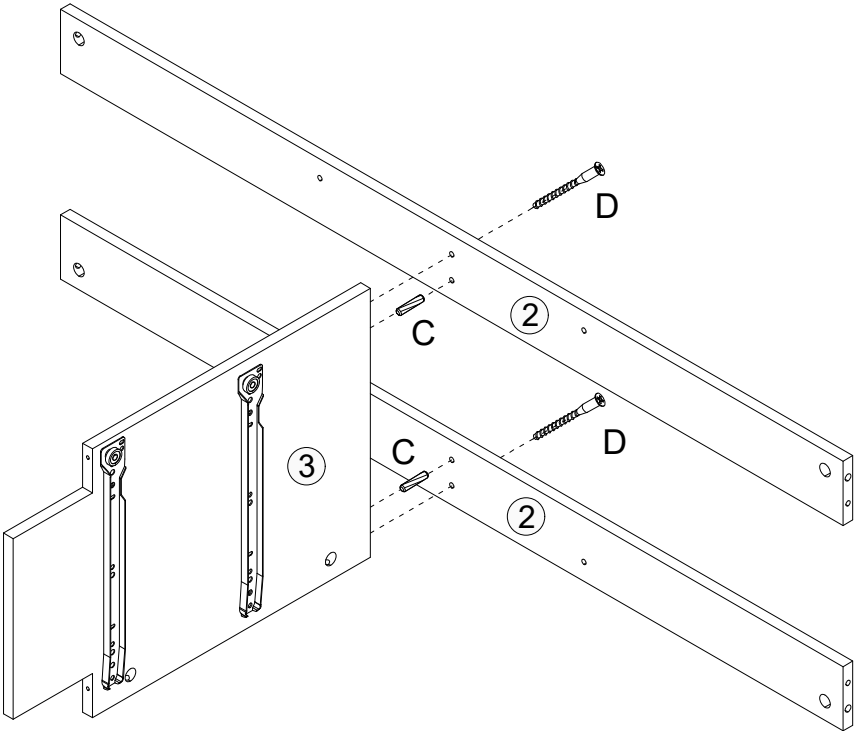


STEP 7

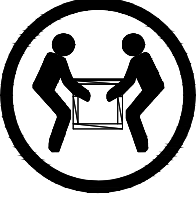


CAUTION: Heavy! You may need assistance with this step

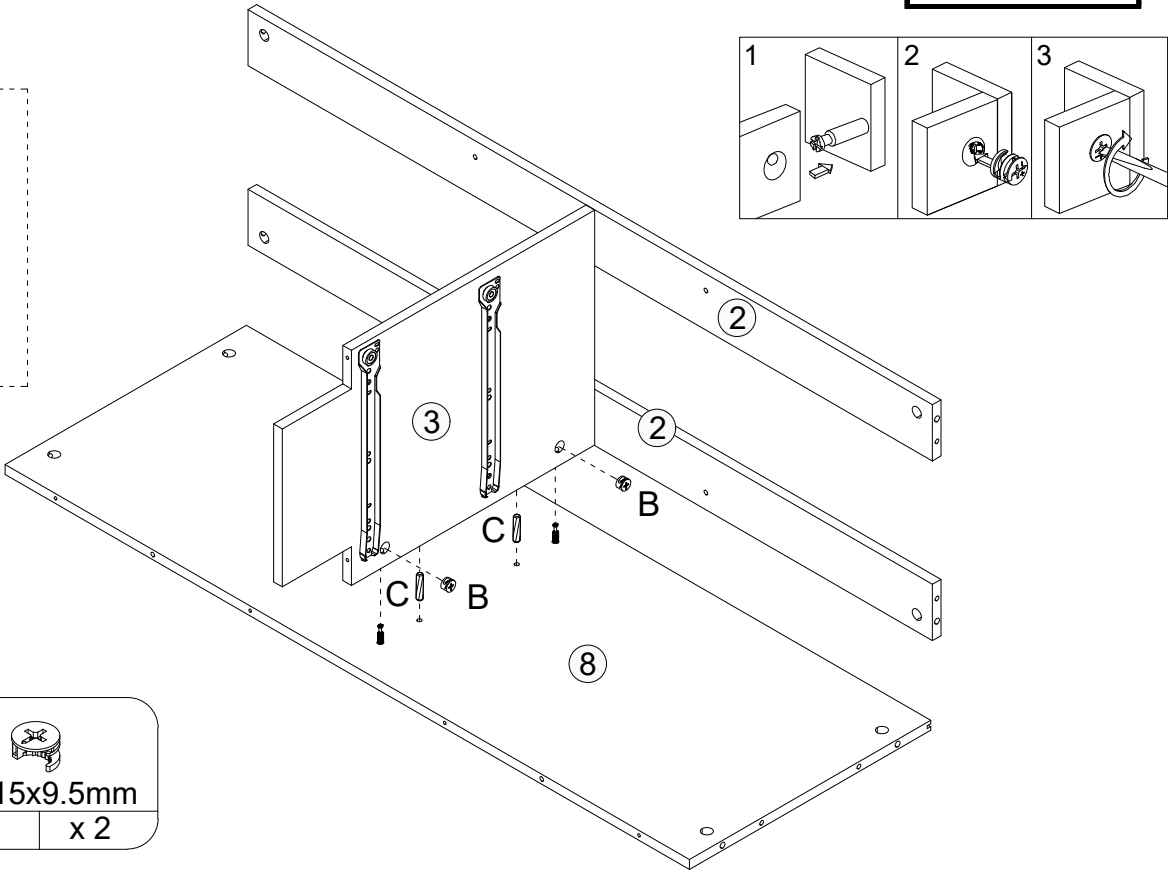

STEP 8

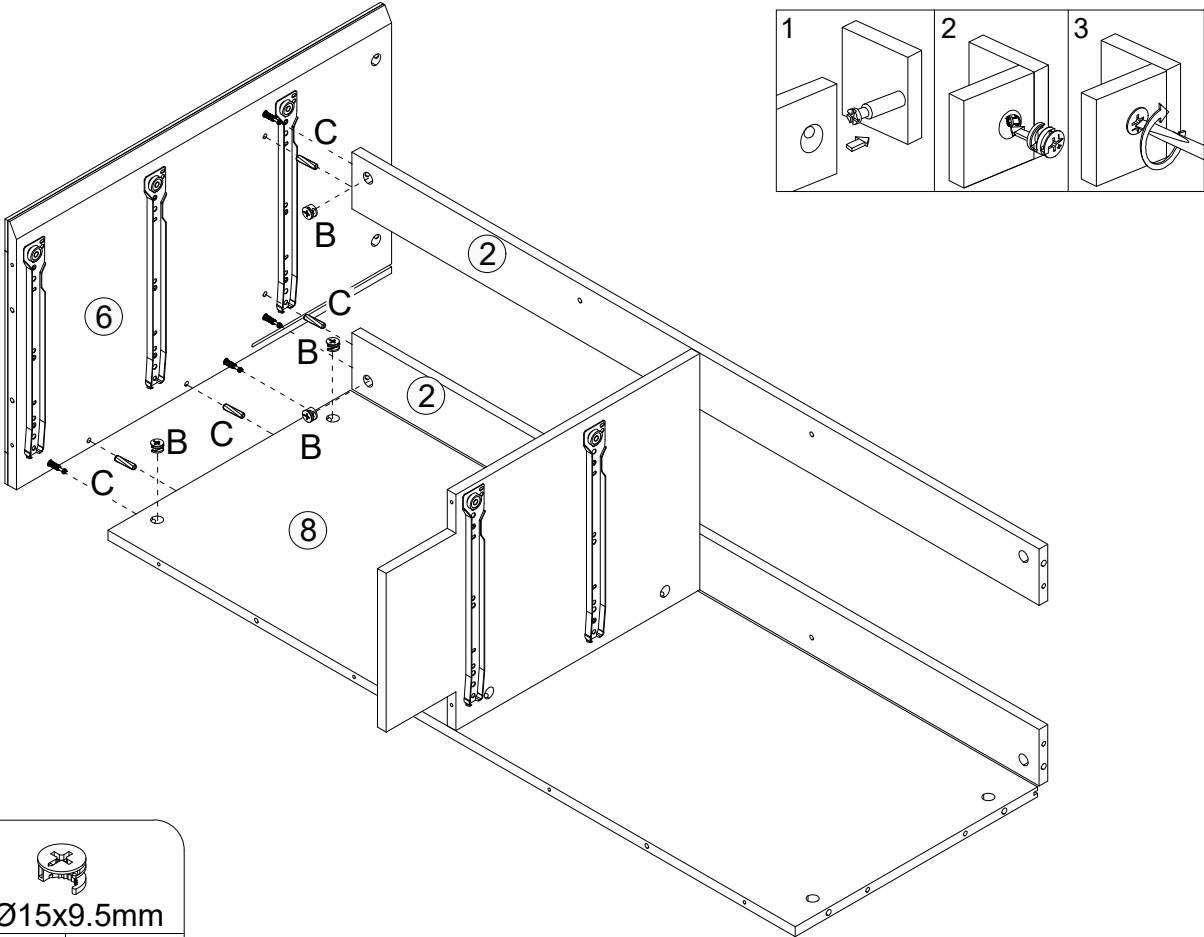






Ø6x30mm
C x 4





Ø15x9.5mm
B x 4

STEP 9




PF035

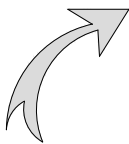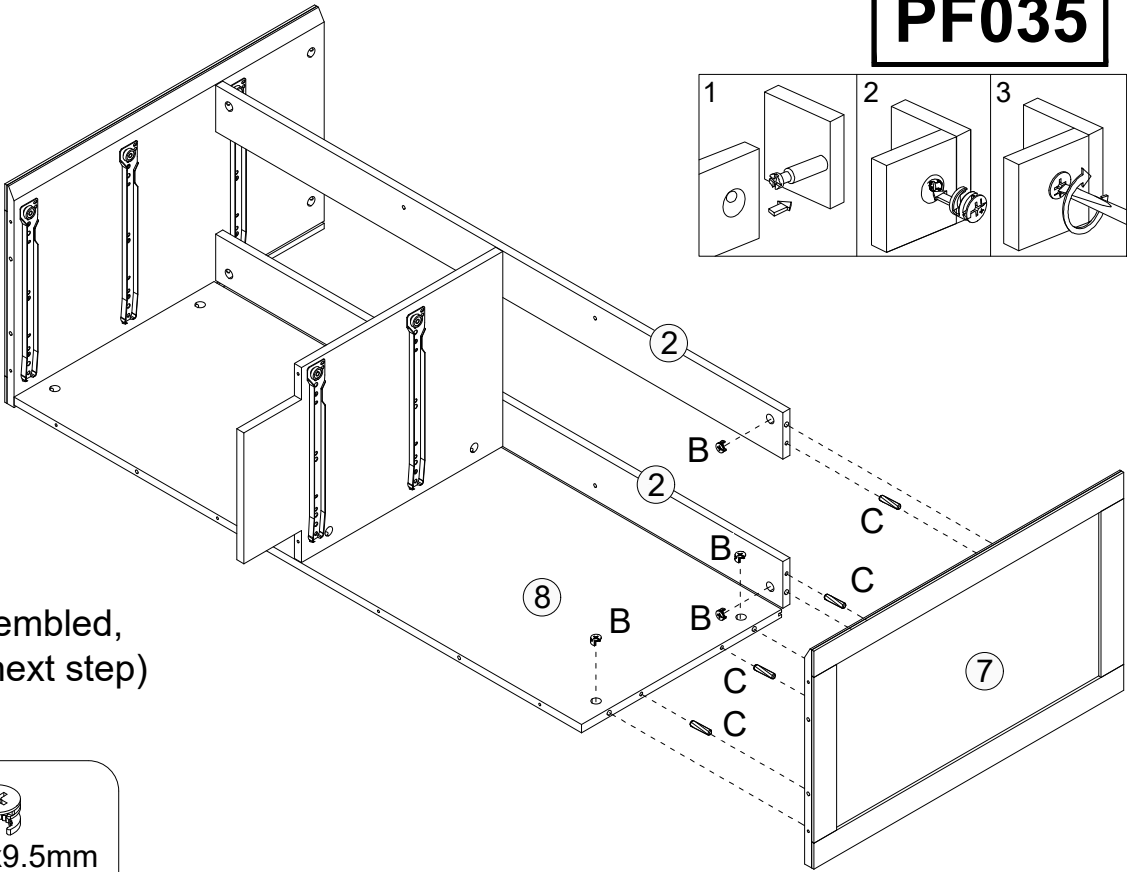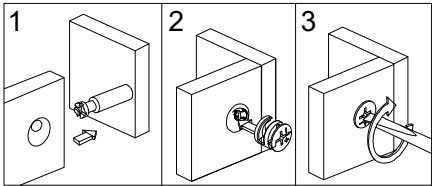

After this step is assembled,
flip it 90 degrees(to next step)

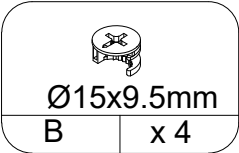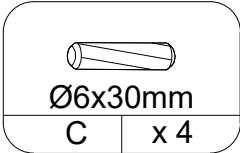


STEP 10

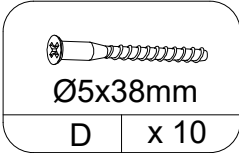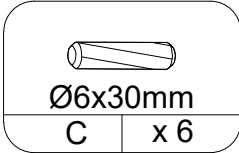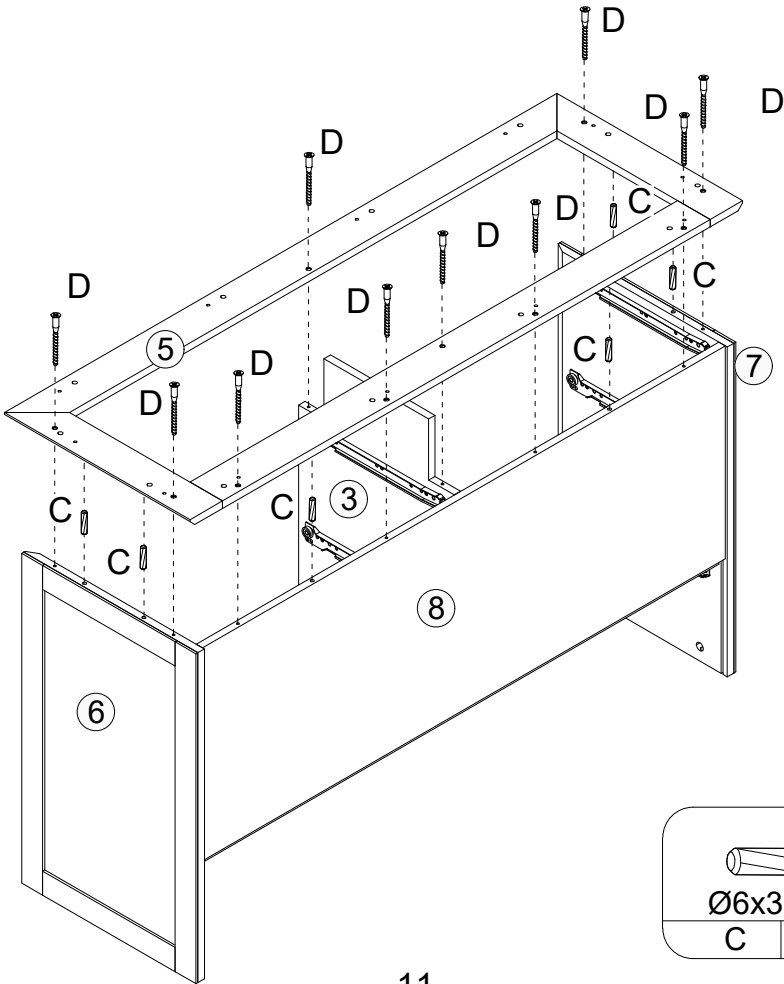


STEP 11





PF035

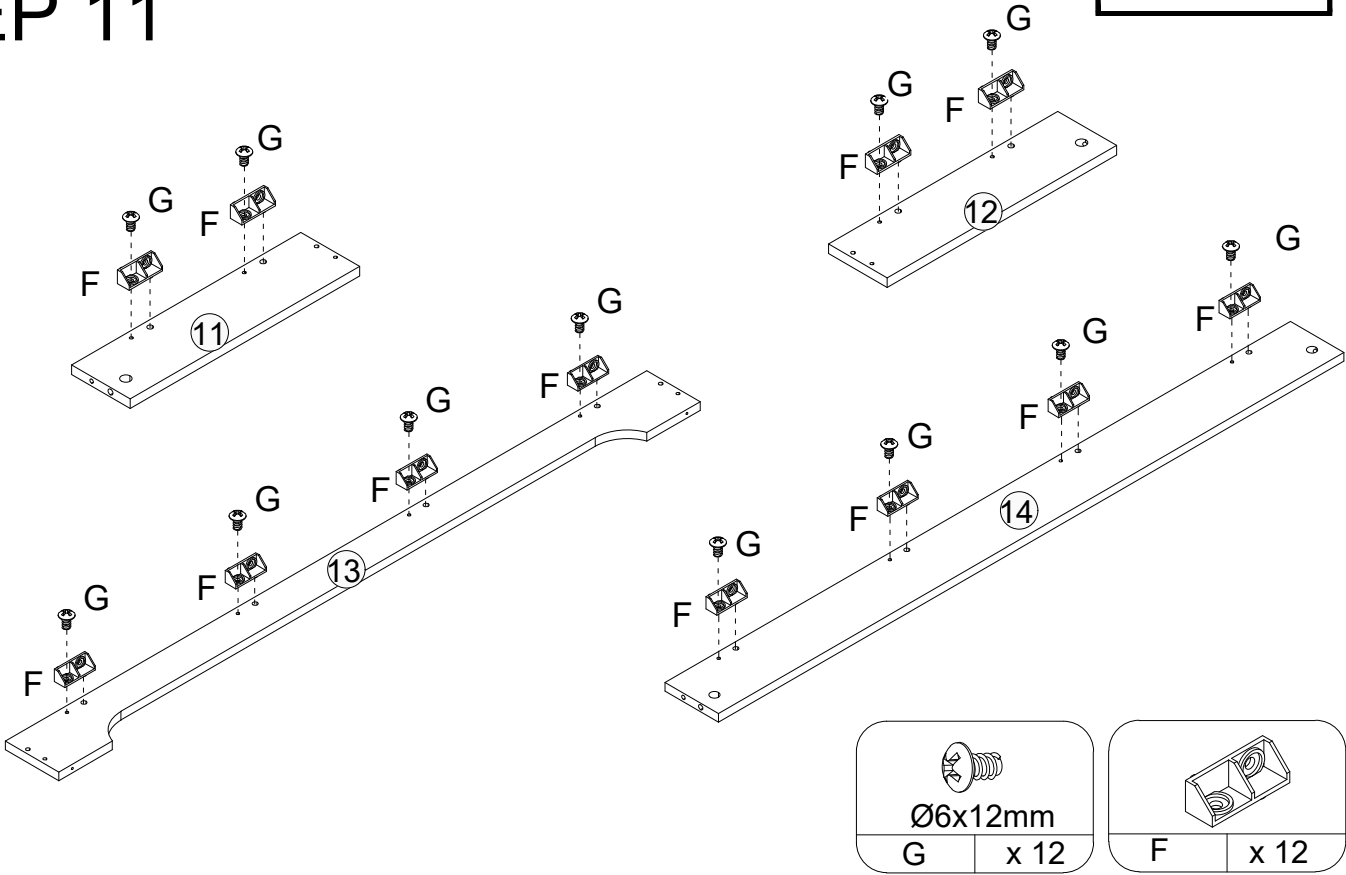





STEP 12

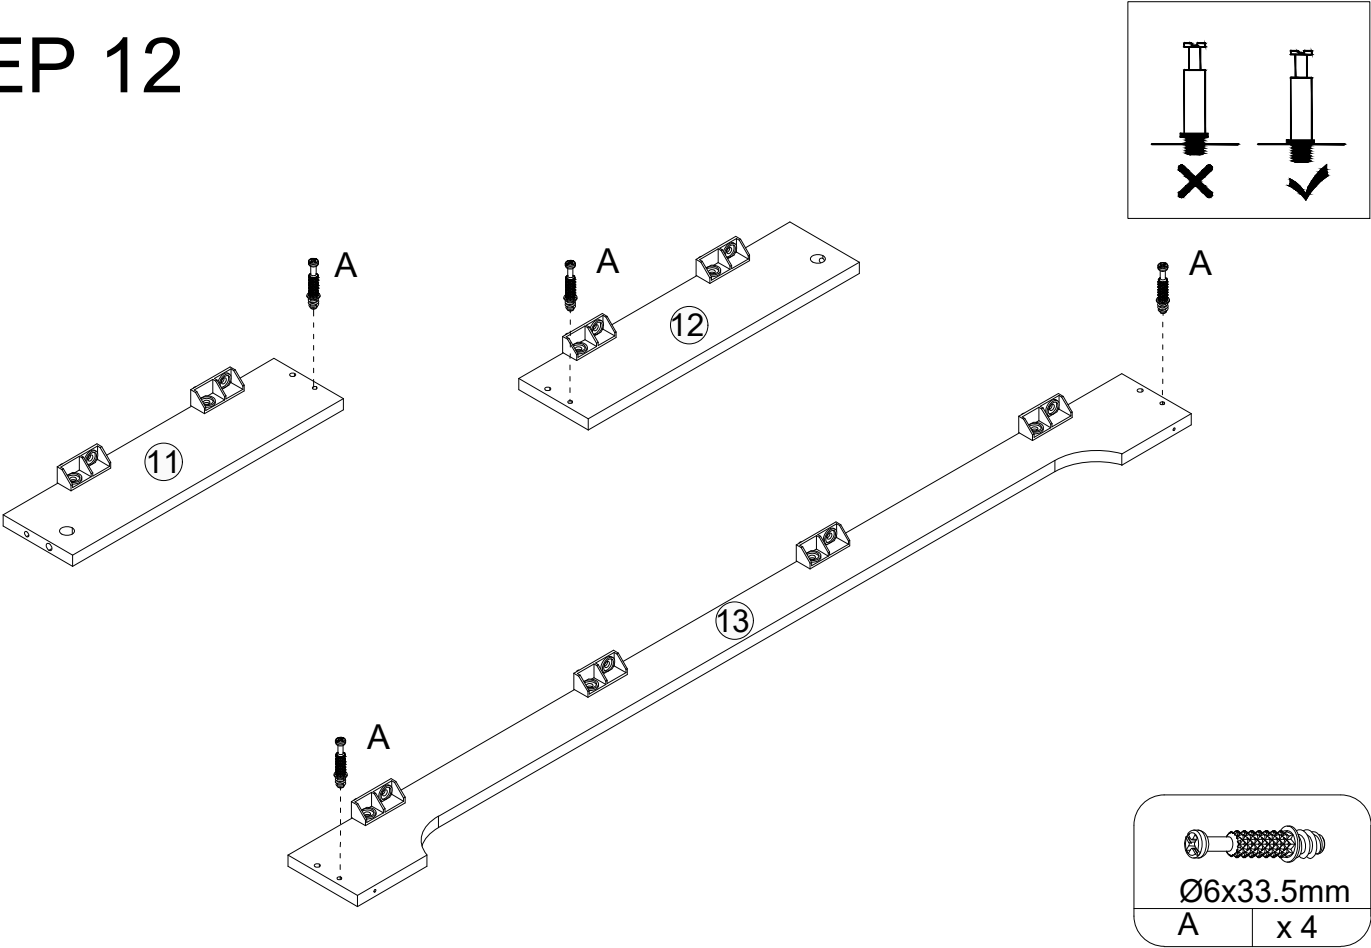

STEP 13

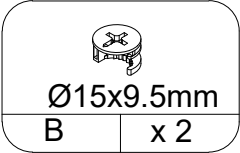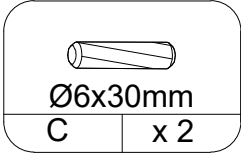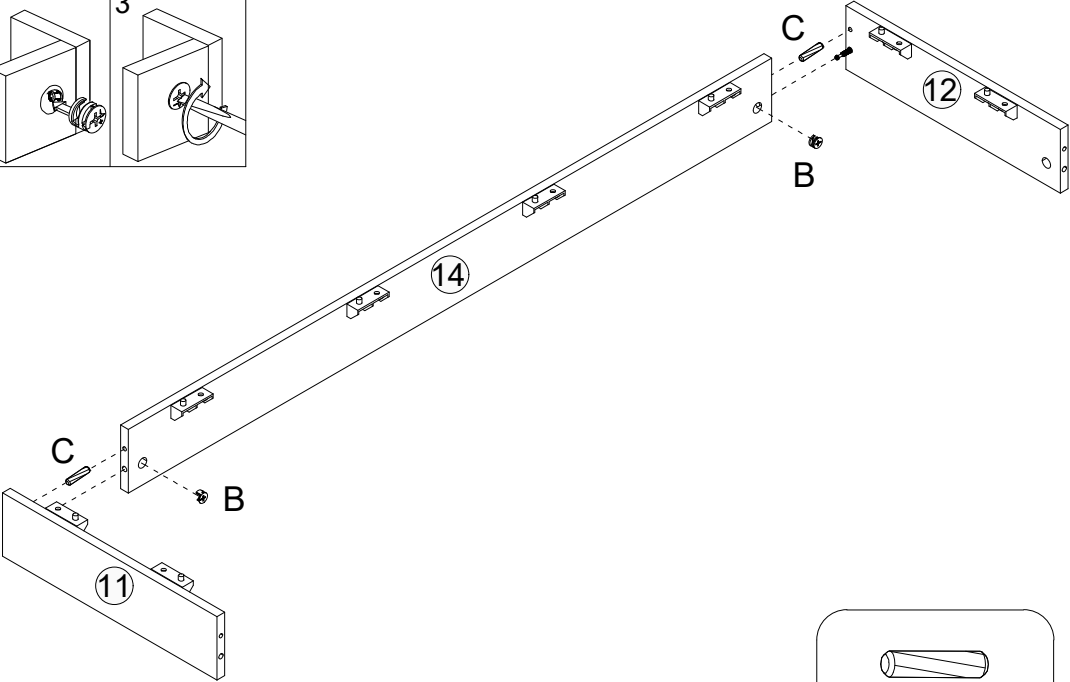
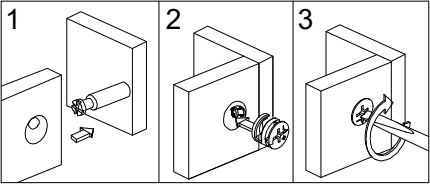


STEP 14

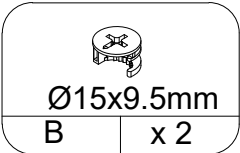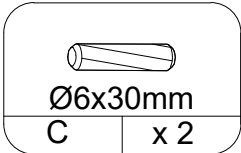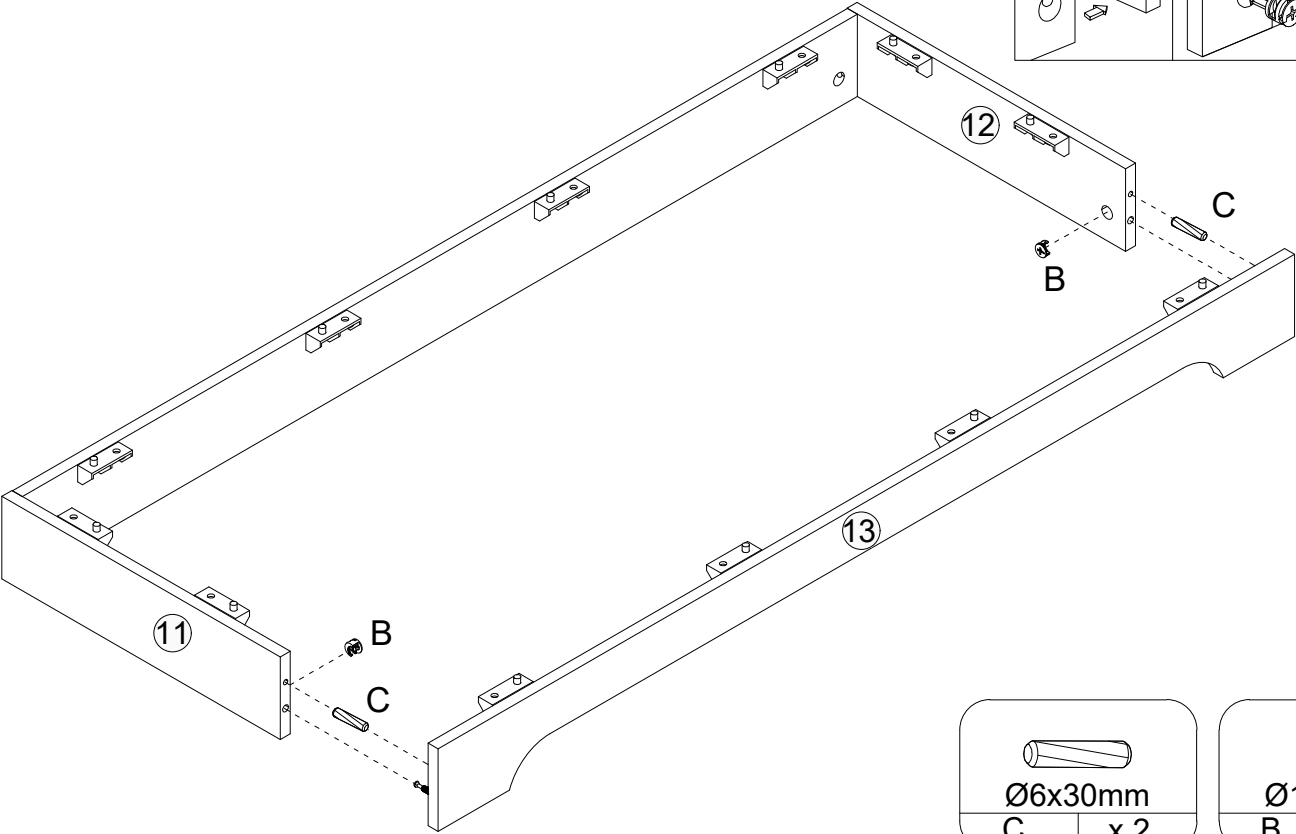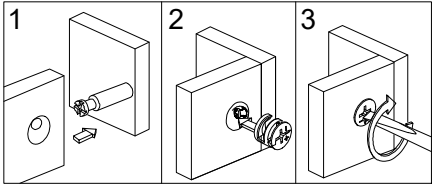


STEP 15


PF035

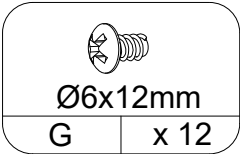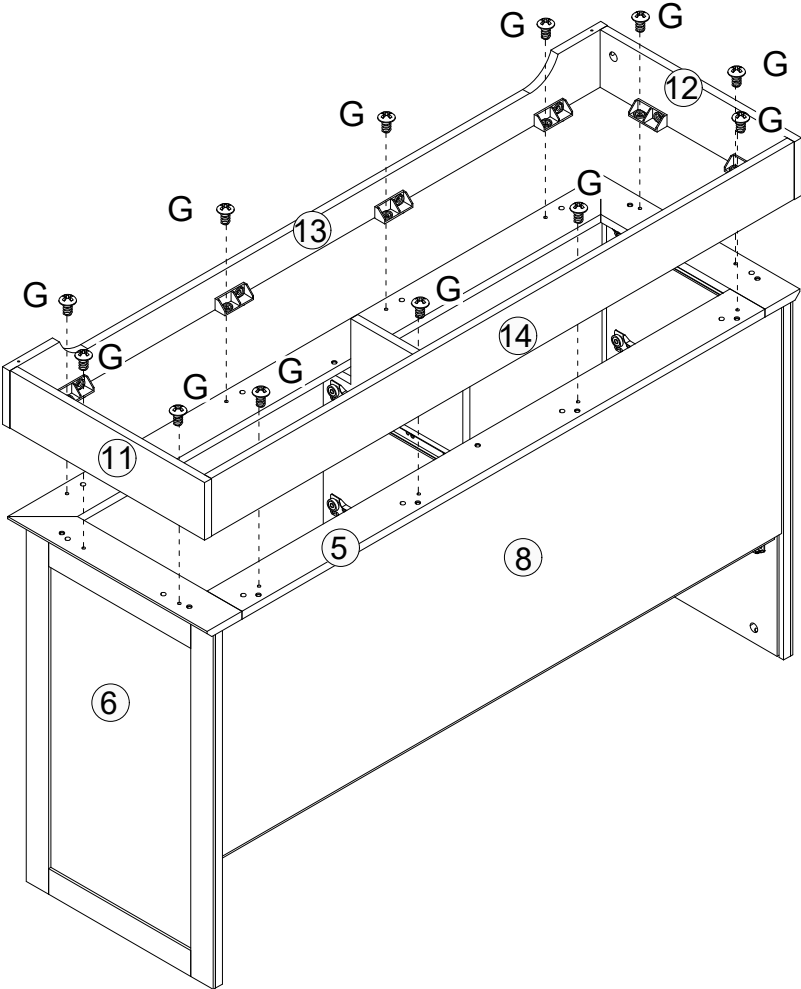

STEP 16



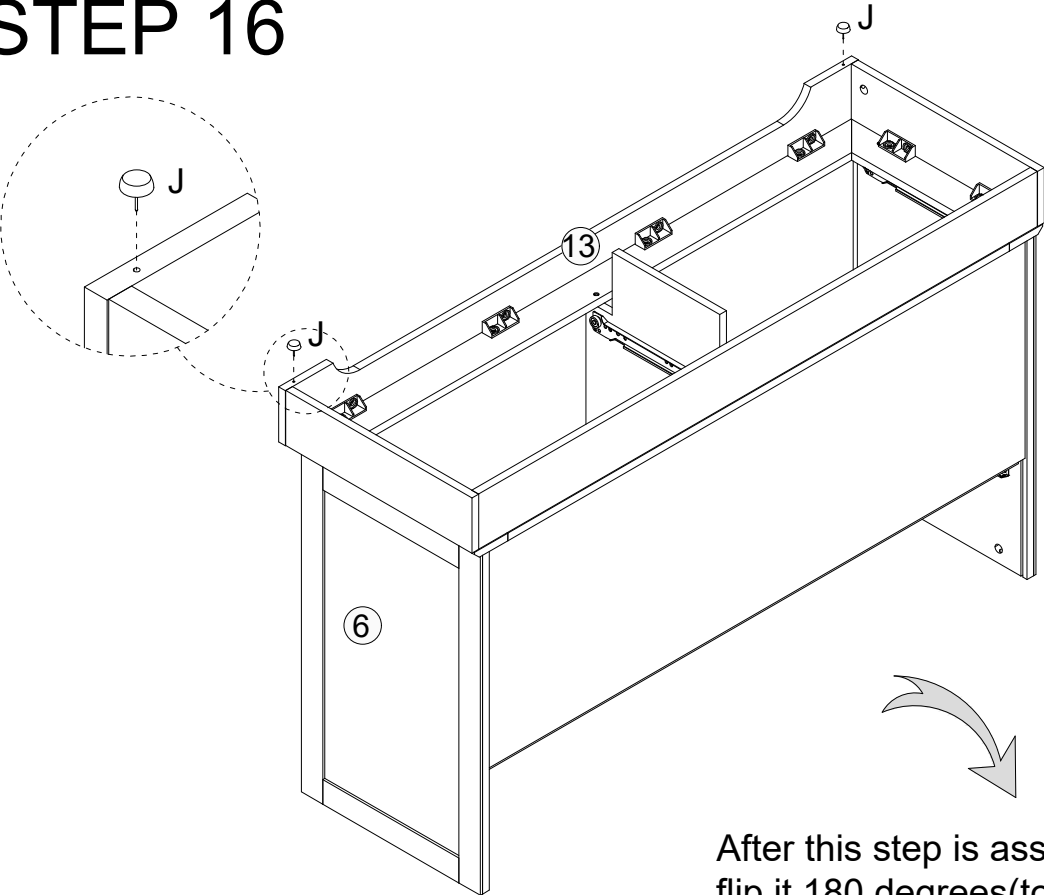


After this step is assembled, flip it 180 degrees(to next step)

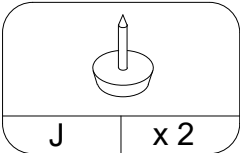


STEP 17

PF035

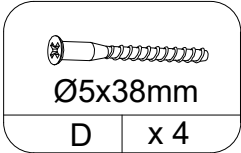
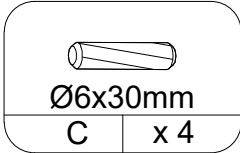
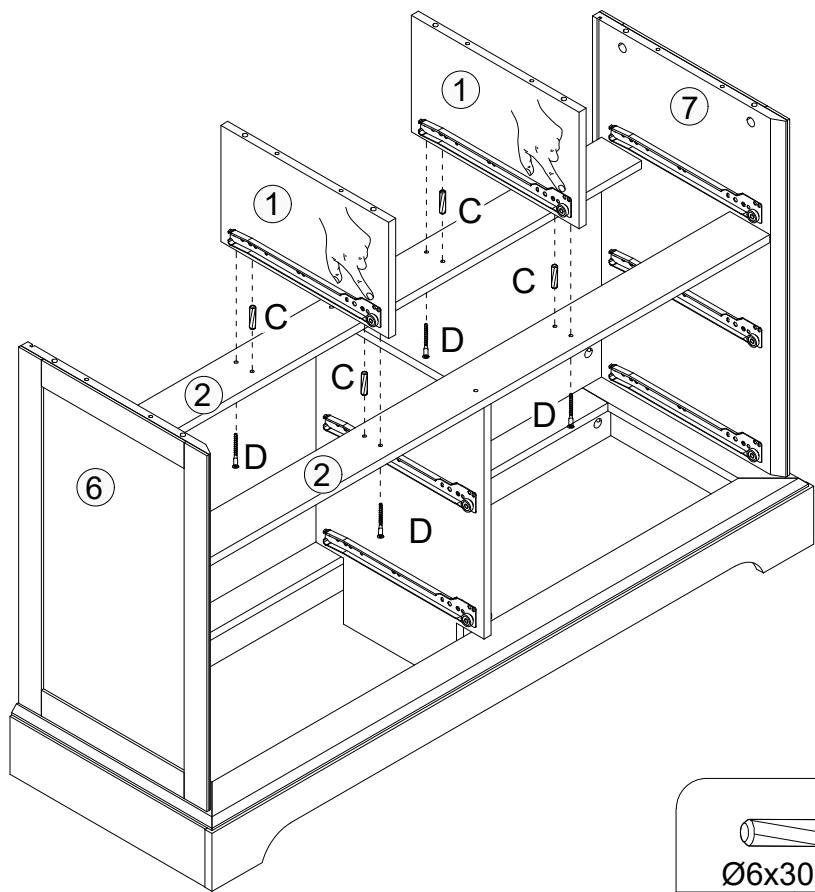


STEP 18

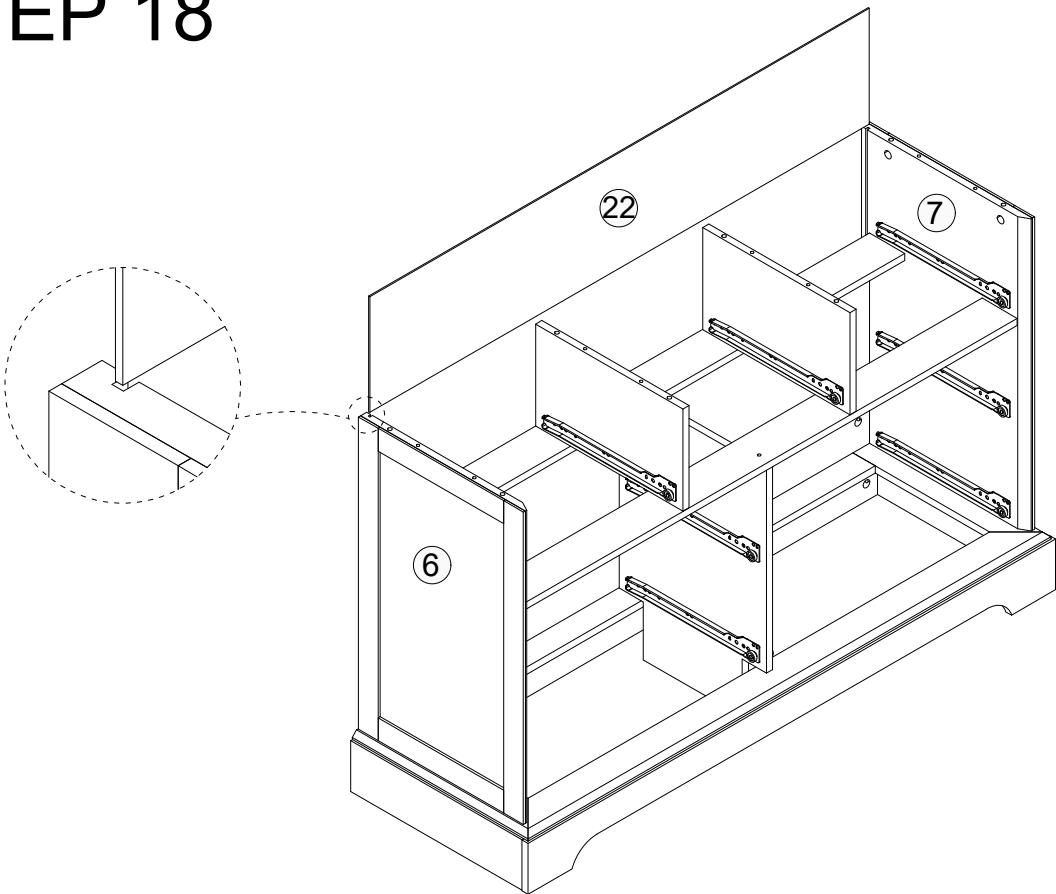


STEP 19




PF035

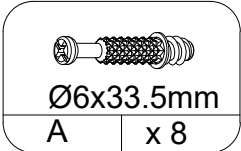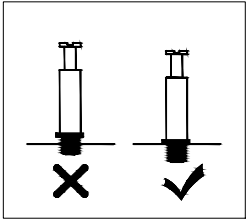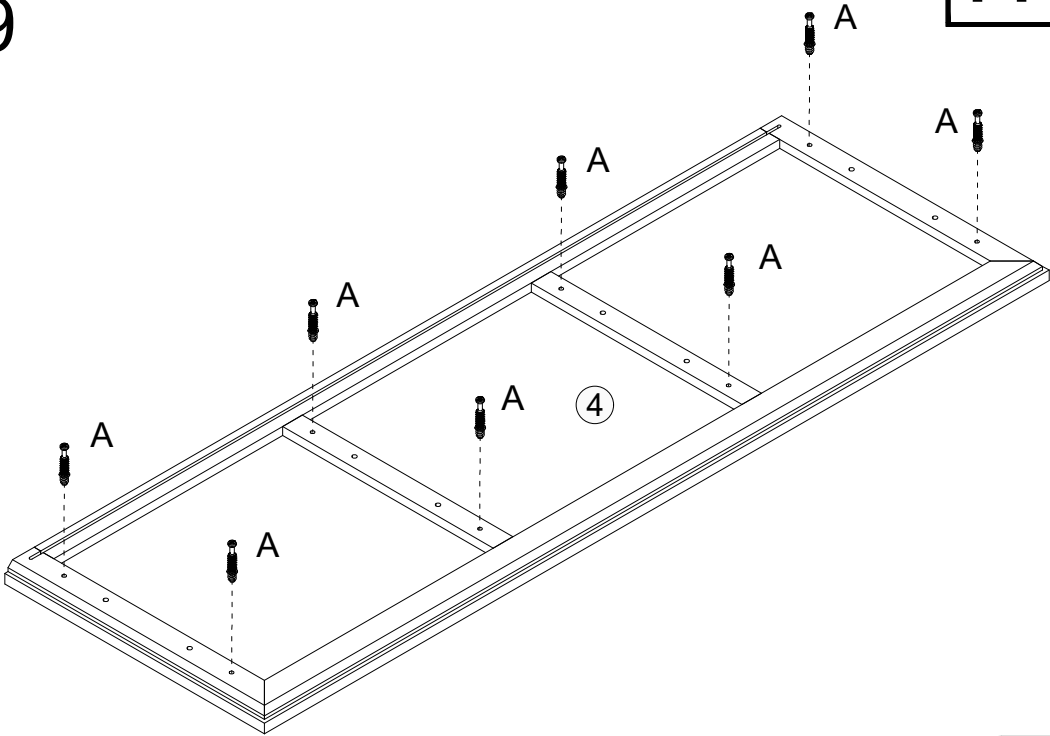

STEP 20




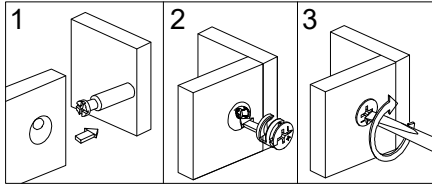


Back panel groove

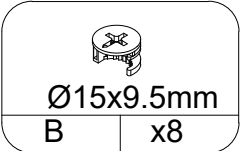
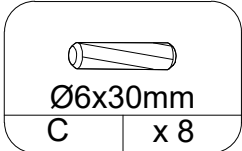
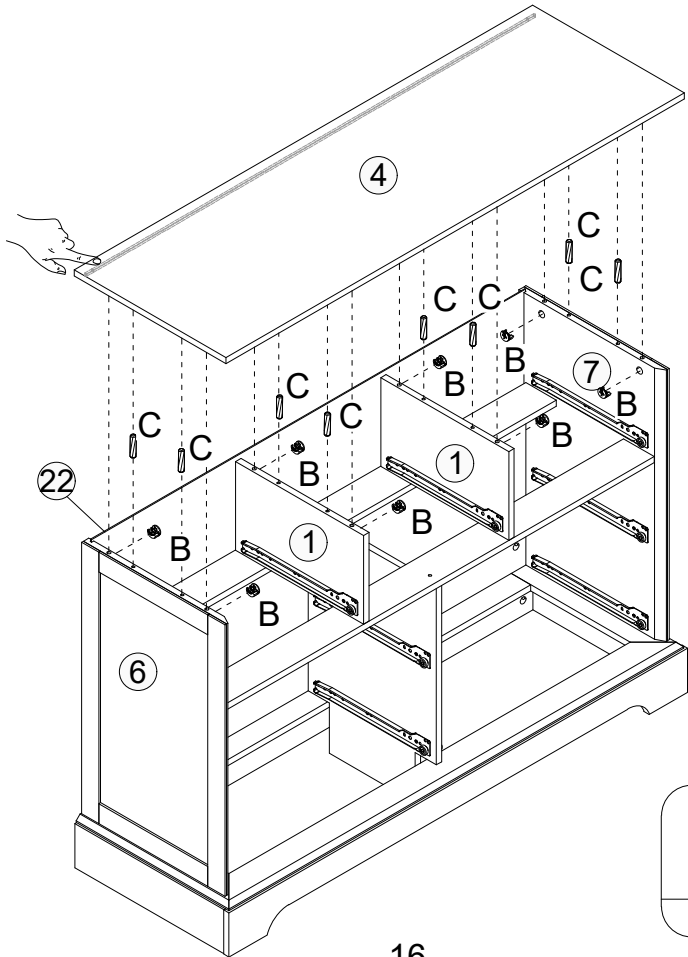


STEP 21

PF035

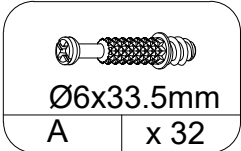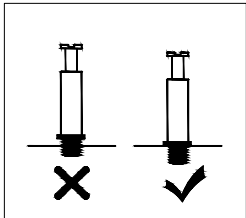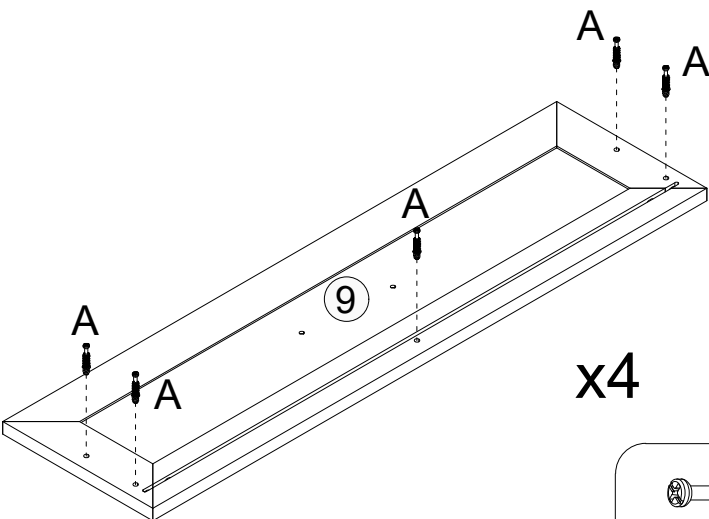
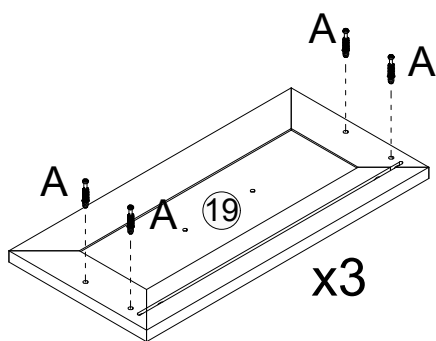


STEP 22


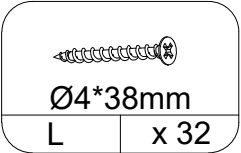
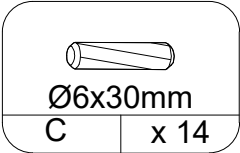
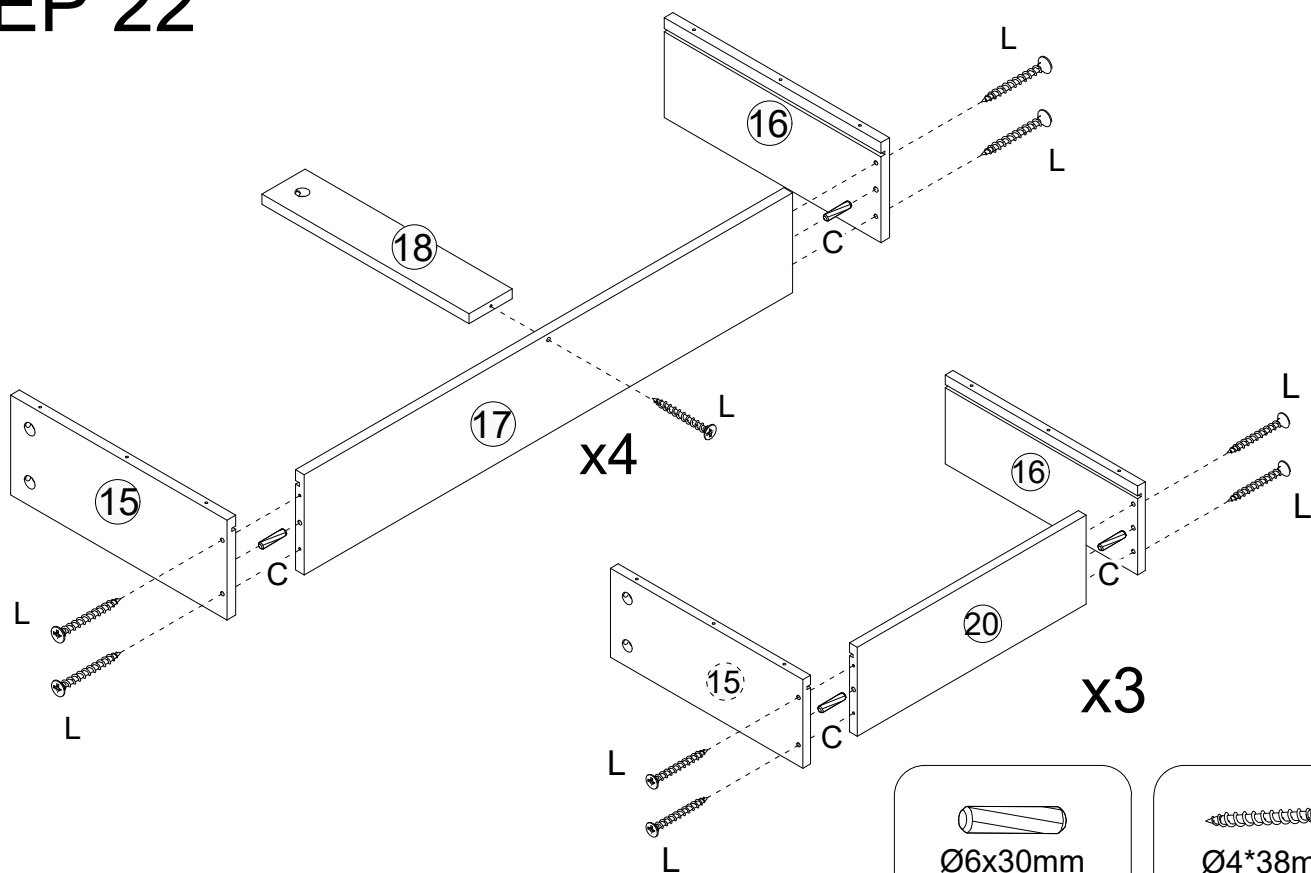


STEP 23

PF035

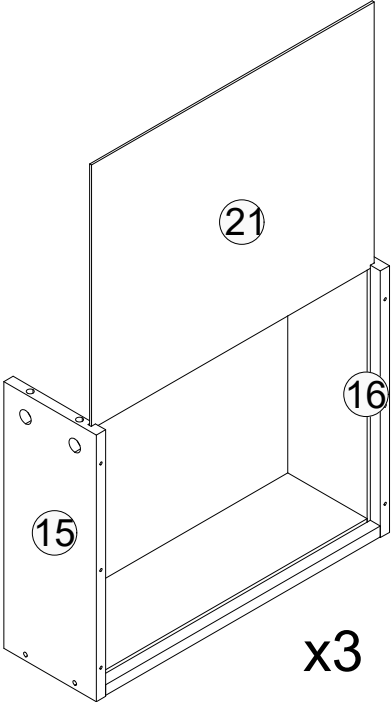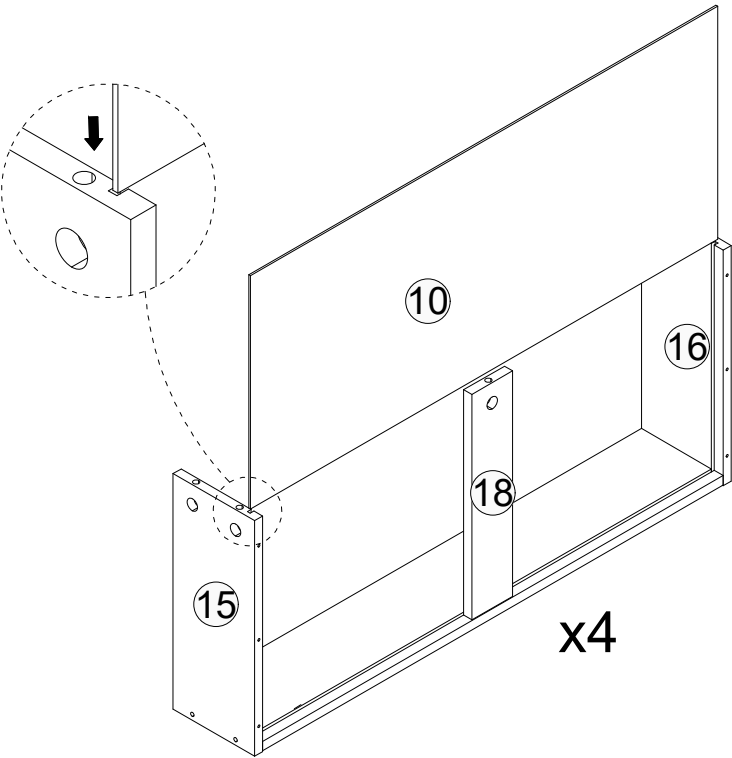


STEP 24

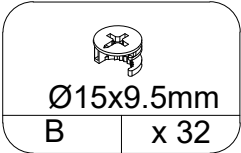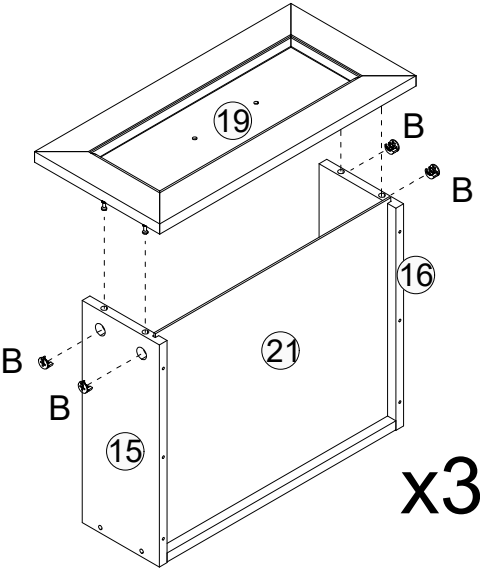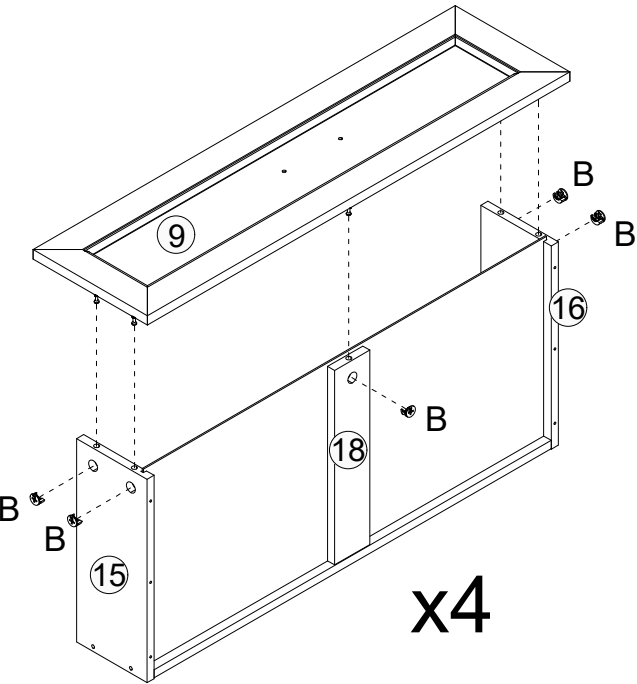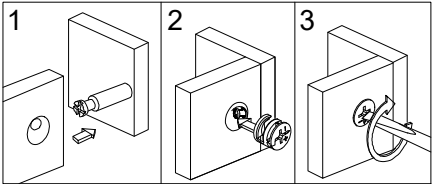


STEP25

PF035

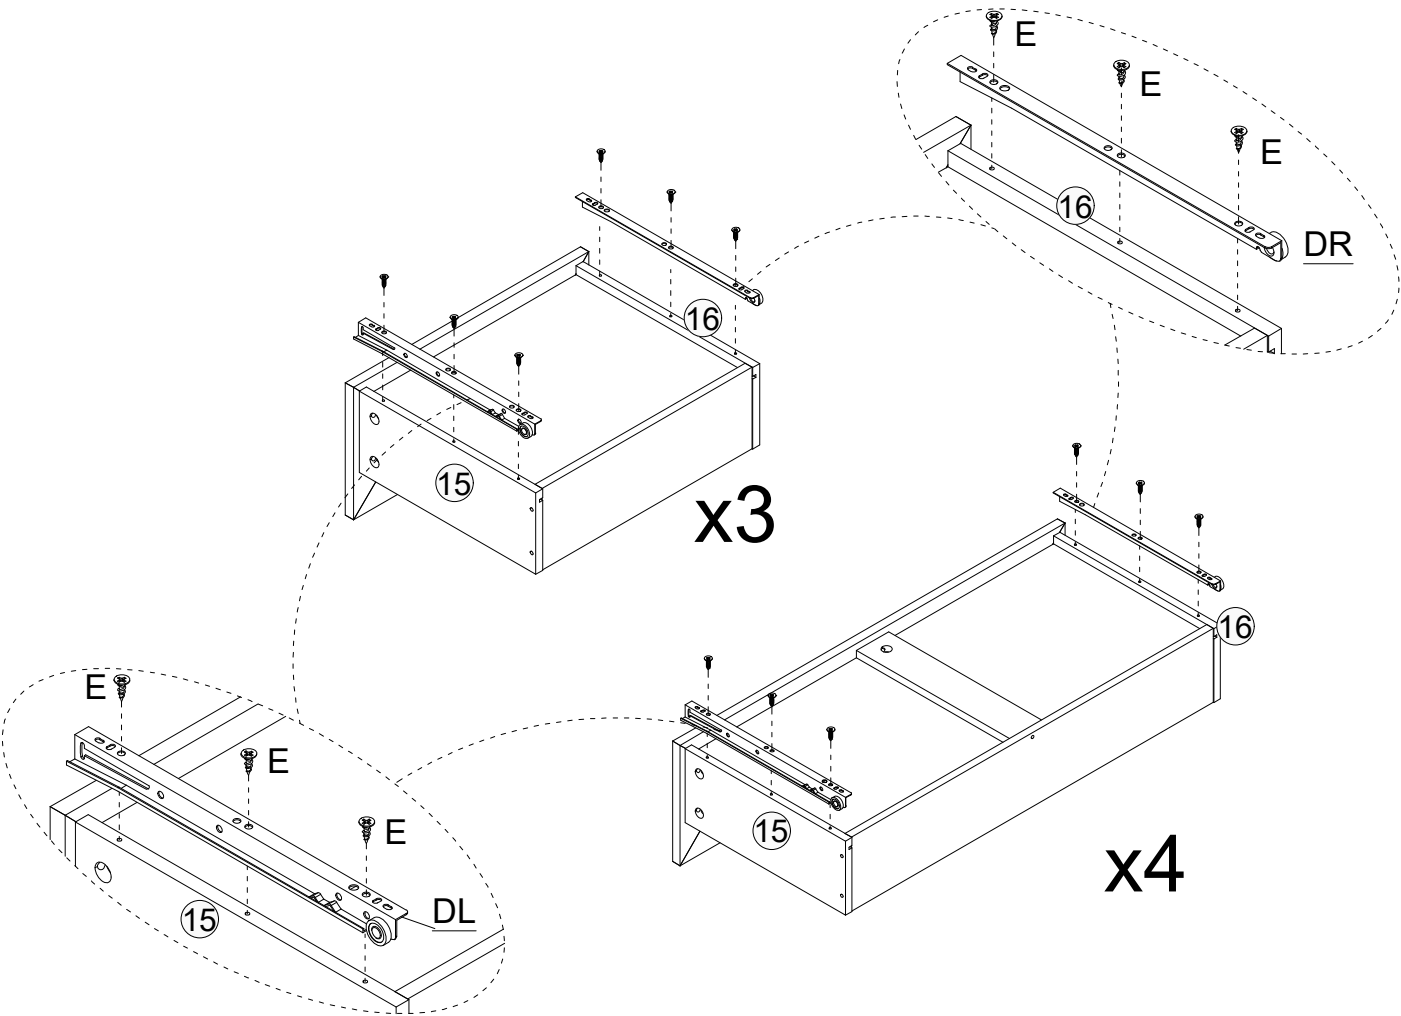



	
Ø3.5x12mm	
E	x 42

	
DR	x 7


	
DL	x 7

STEP26

PF035

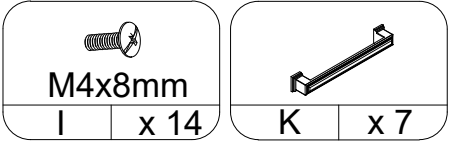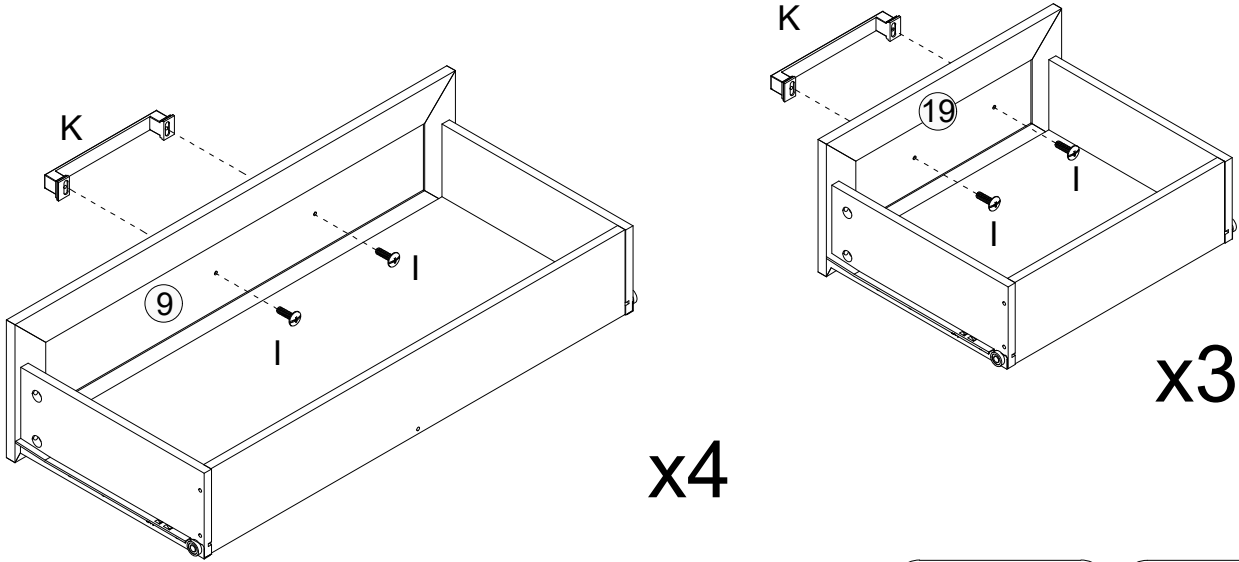


STEP27

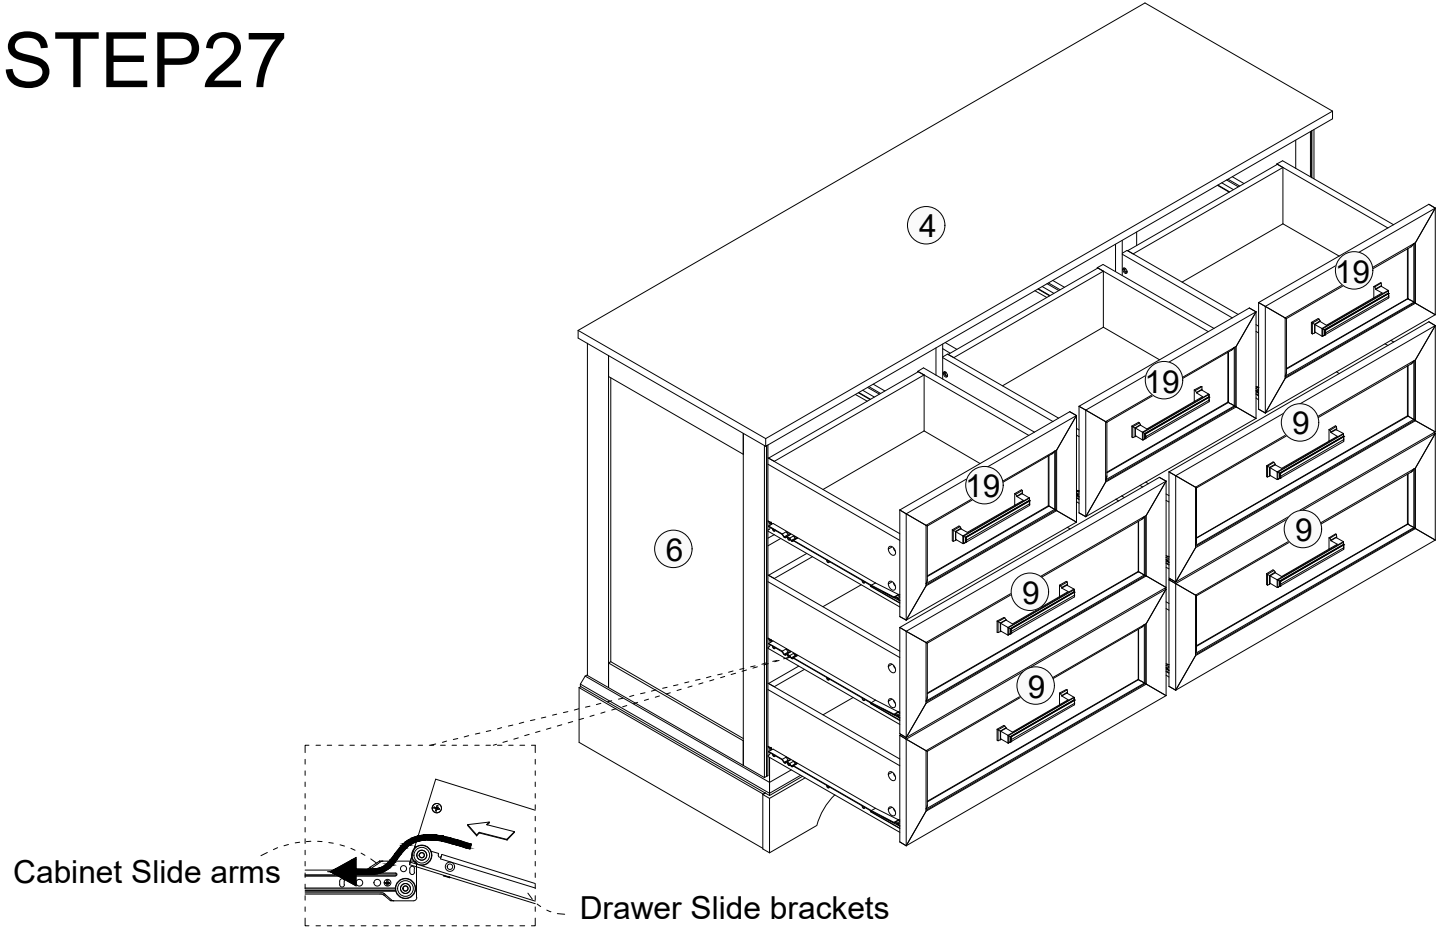


STEP 28

PF035

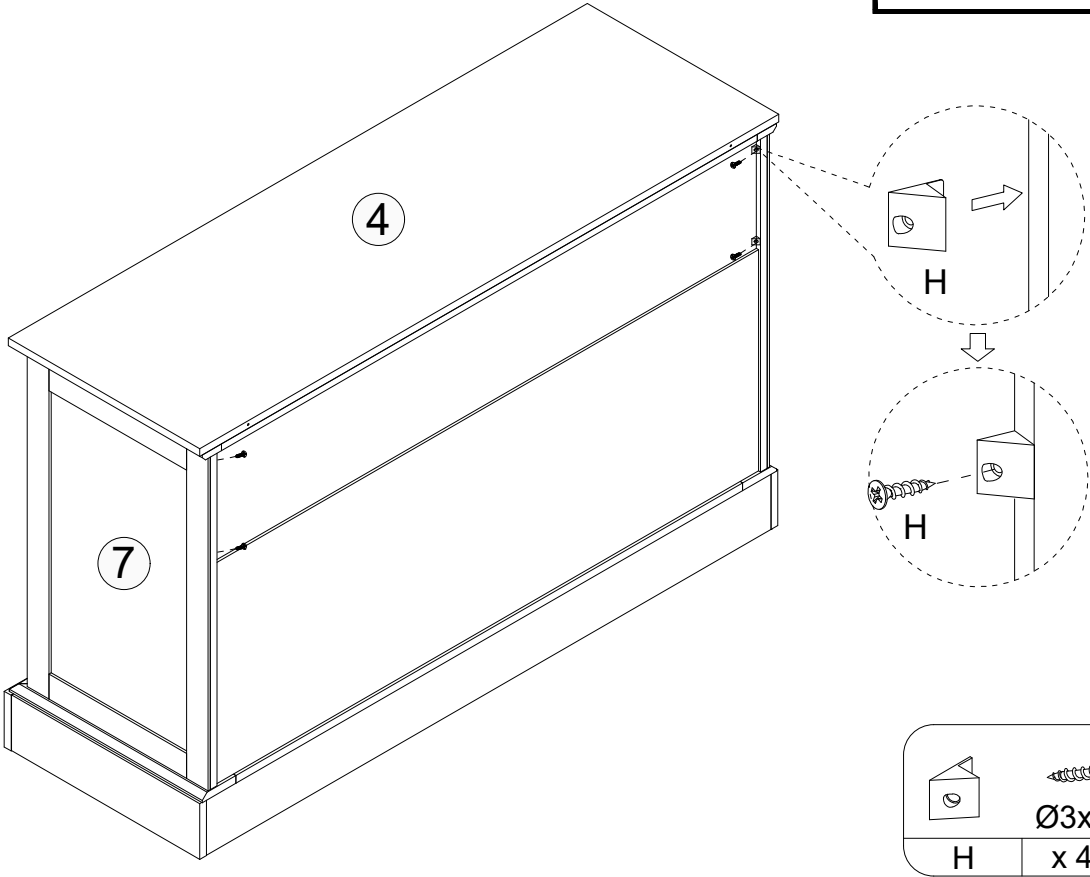


STEP 29

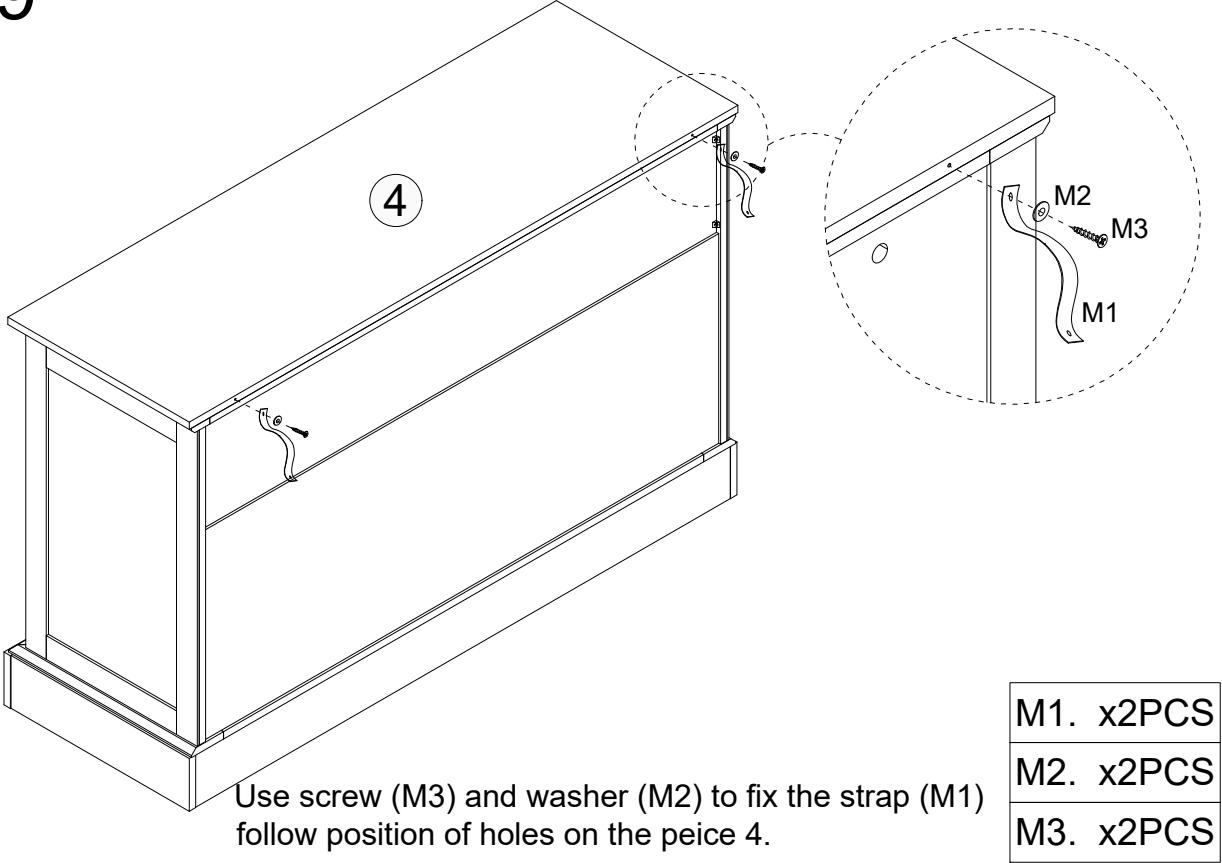


STEP 30


PF035

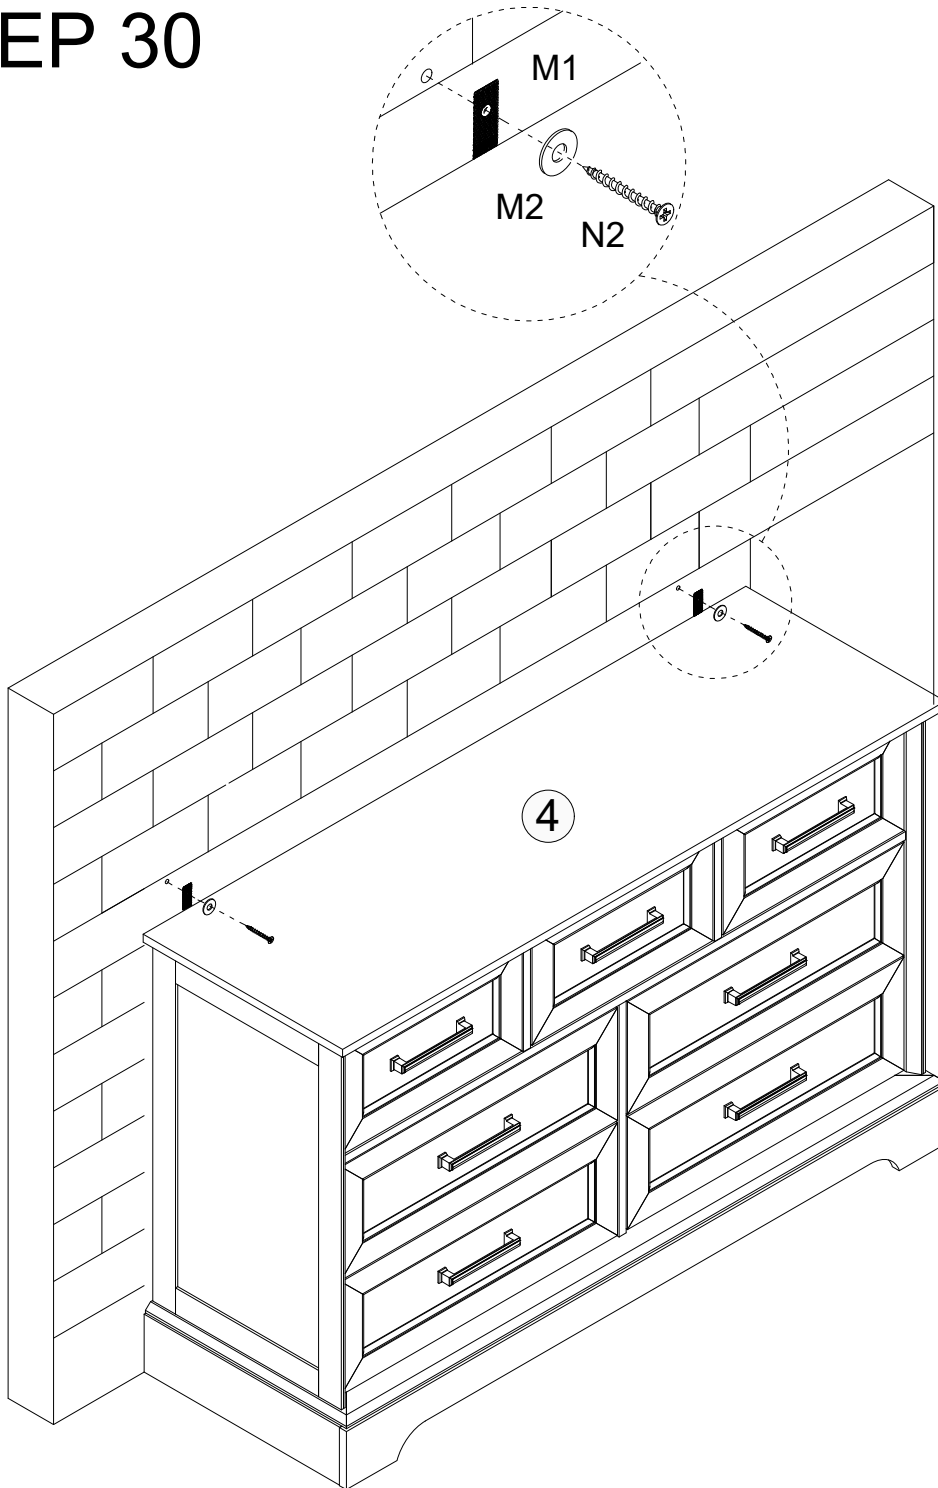


WALL

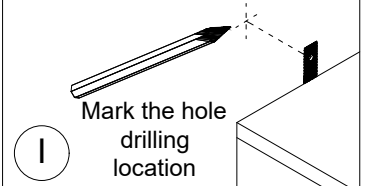

WALL

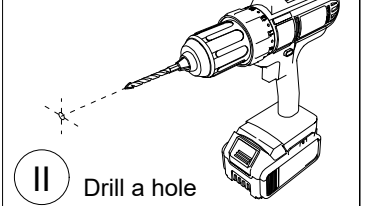

WALL

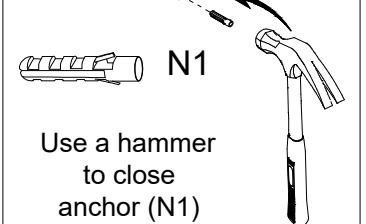

Step1: determine the location of the anti-overturning on the wall and then mark the position after confirming the product has been balanced.

Step 2: drill the hole and then fixed the anchor (N1) on the wall.

Step 3: use screw (N2) to fix the strap (M1), (M2) on the wall .

N1. x2PCS

N2. x2PCS

M2. x2PCS

FURNITURE CARE AND MAINTENANCE

Medium - Density Fiberboard and Particle board

Thank you for your purchase. We want your item to last as long as possible. To ensure the product gives you years of service, please refer to this care and maintenance guide.



MAINTENANCE

- Tighten all bolts and screws again within the first 2 weeks of assembly
- Check the tightness of all bolts every 2 months, tighten them if necessary



CLEANING

- Clean the surface of the MDF (medium - density fiberboard) or PB (particle board) with a lightly dampened cloth.
- Small amount of mild soap can be used if necessary
- Dry the surface immediately after cleaning.

⚠ DO NOT use bleach or alcohol detergent to clean the surface.

⚠ DO NOT apply wood treatment on parts made with MDF and PB.

Medium - density fiberboard and Particle board will swell and distort when suffer from water damage.

Make sure to dry the furniture immediately after cleaning