




(RIGHT ARM)

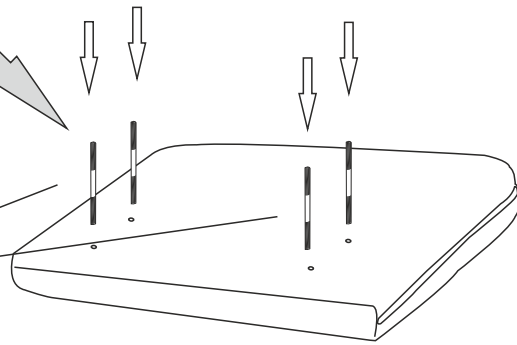

( TURN THE ARM CONNECTION  
SCREWS TO THE RIGHT AND LEFT ARM )


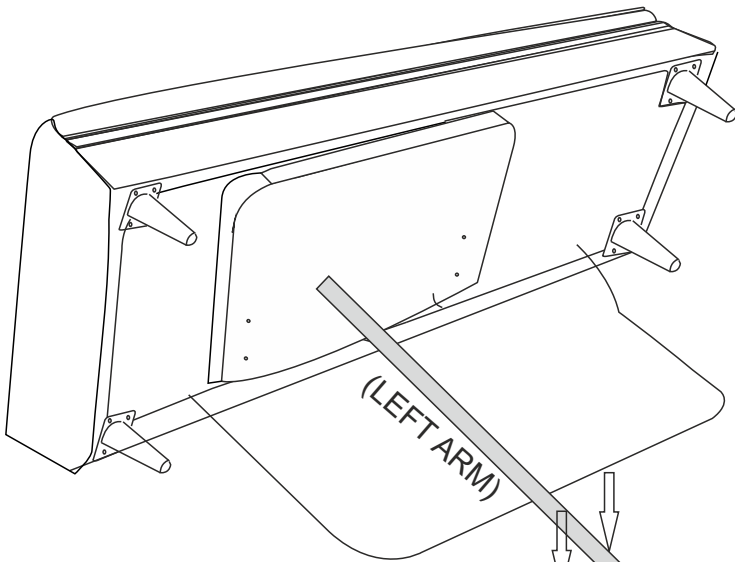


(LEFT ARM)

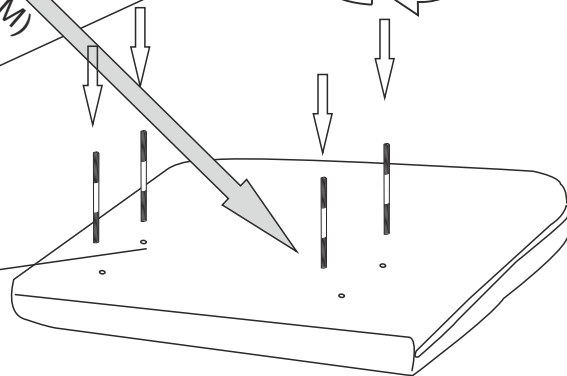


( TURN THE WOODEN LEGS TO FIX )


( TURN THE ARM CONNECTION  
SCREWS TO THE RIGHT AND LEFT ARM )

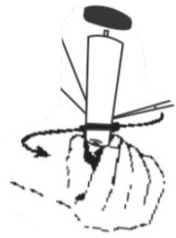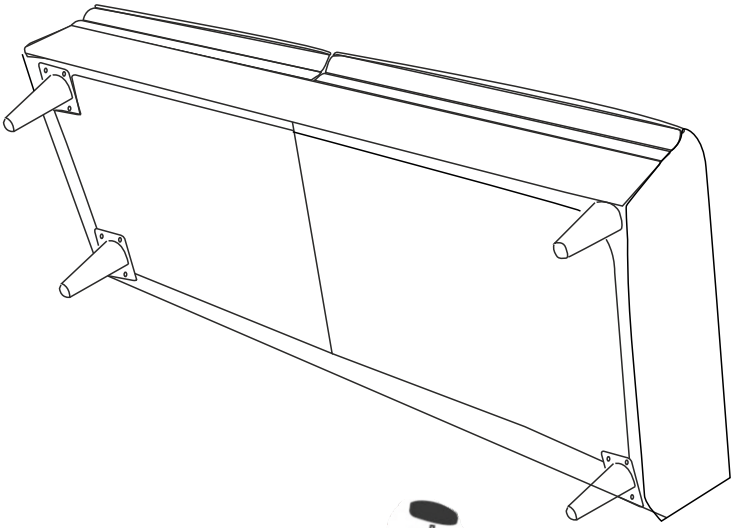



( TURN THE WOODEN LEGS TO FIX )

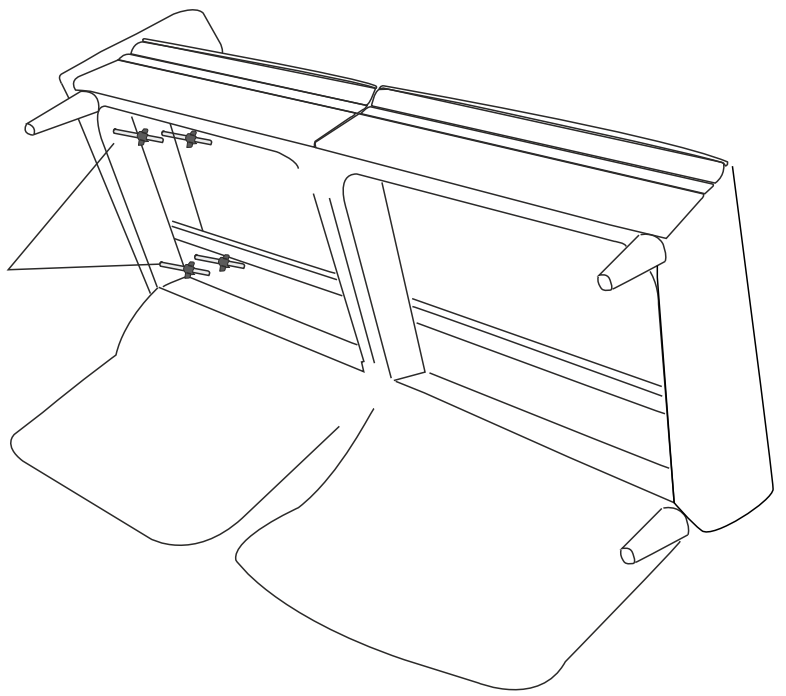

( FIX THE ARM WITH BUTTERFLY BOLTS )

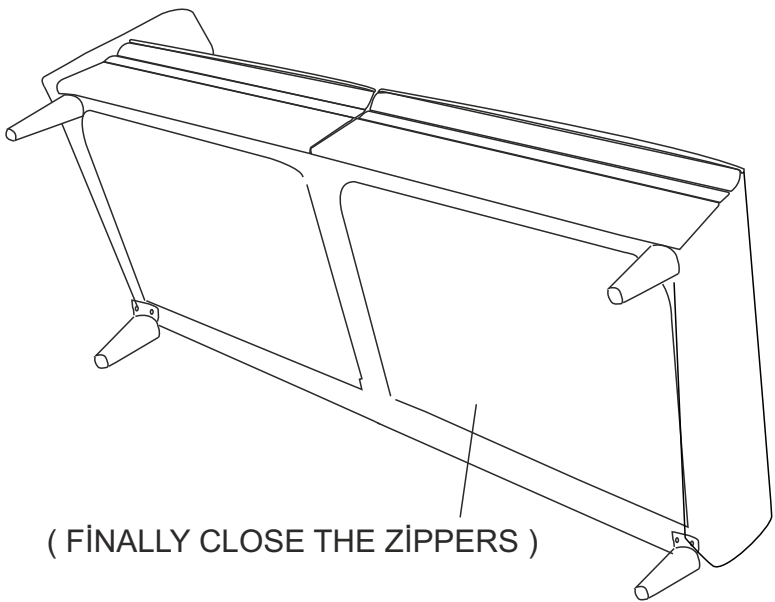

( FINALLY CLOSE THE ZIPPERS )

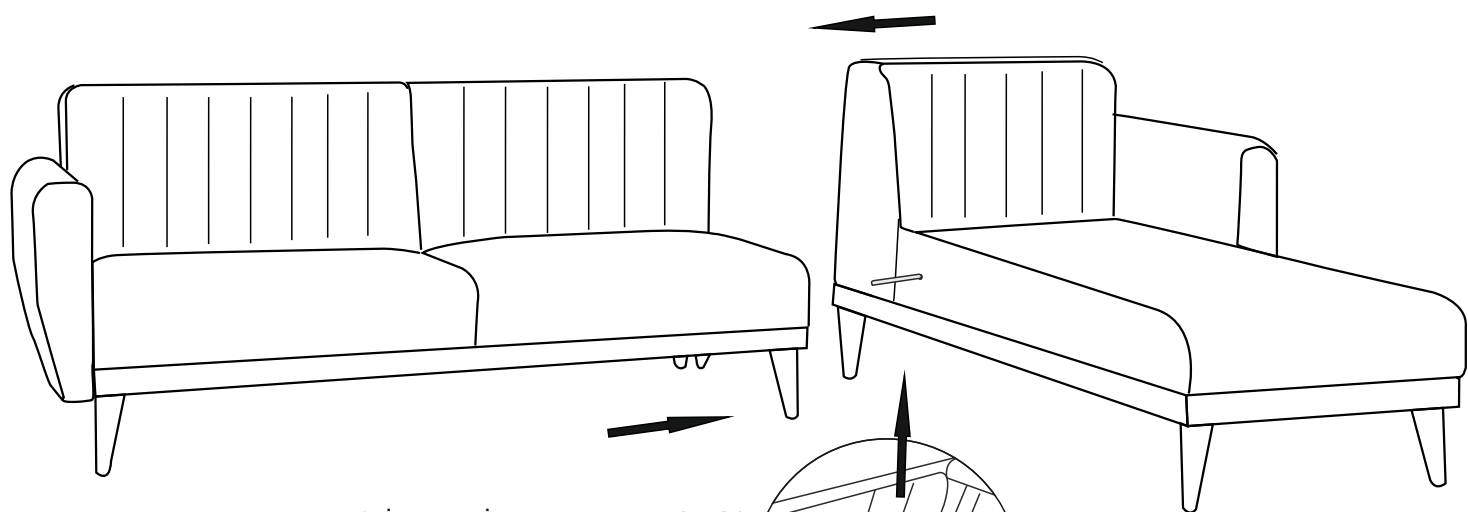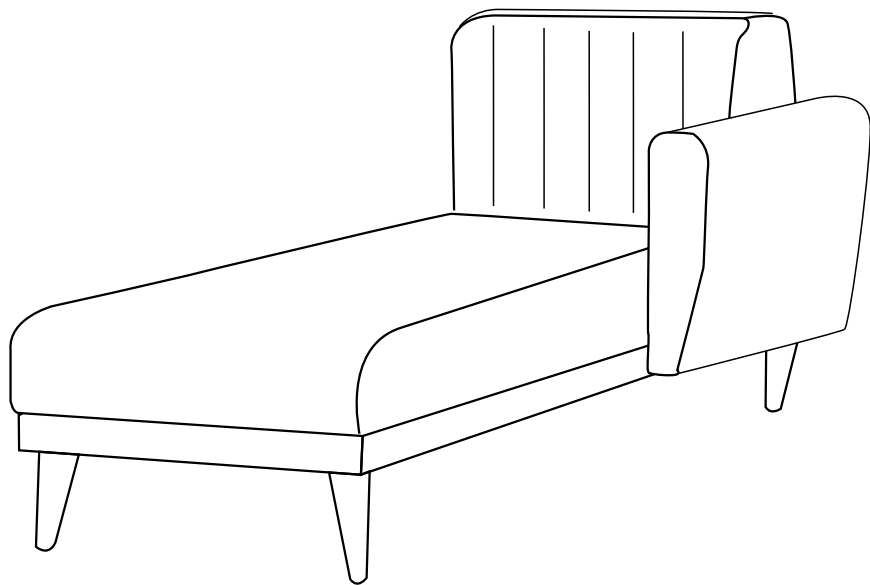

( FIX THE WITH BUTTERFLY BOLTS )

