Assembly Instructions

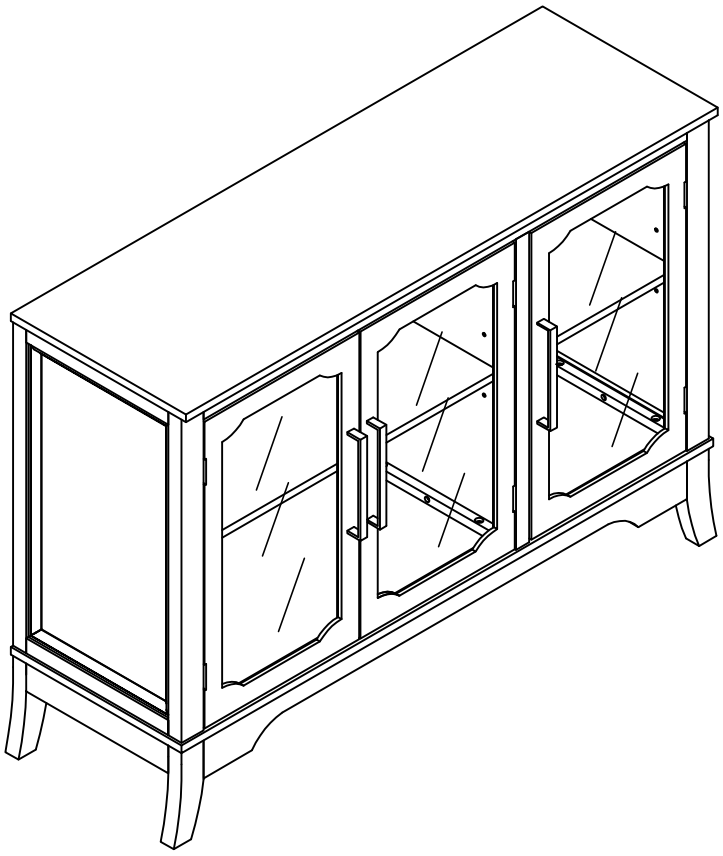
Caution: You must read this before you proceed

Care & Maintenance

	● Not for commercial use. For residential use only.
	● Do not put hot items directly on furniture surface.
	● Do not clean furniture with harsh cleansers or polish.
	● Do not place furniture under direct sunlight.
	● Do not place furniture near heating or cooling vents.
	● Do not write on furniture without a padded barrier to protect the surface.
	● Do not place furniture outside . For indoor use only.
	● Stains may be removed with mild soap solution and damp cloth.
	● Children should not climb or jump on the furniture.
	● Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Please look in Corner of carton for hardware packs
Sets often ship in multiple boxes and may arrive a day or two apart.

SIDEBOARD




45 MINUTE ASSEMBLY
















2 - People




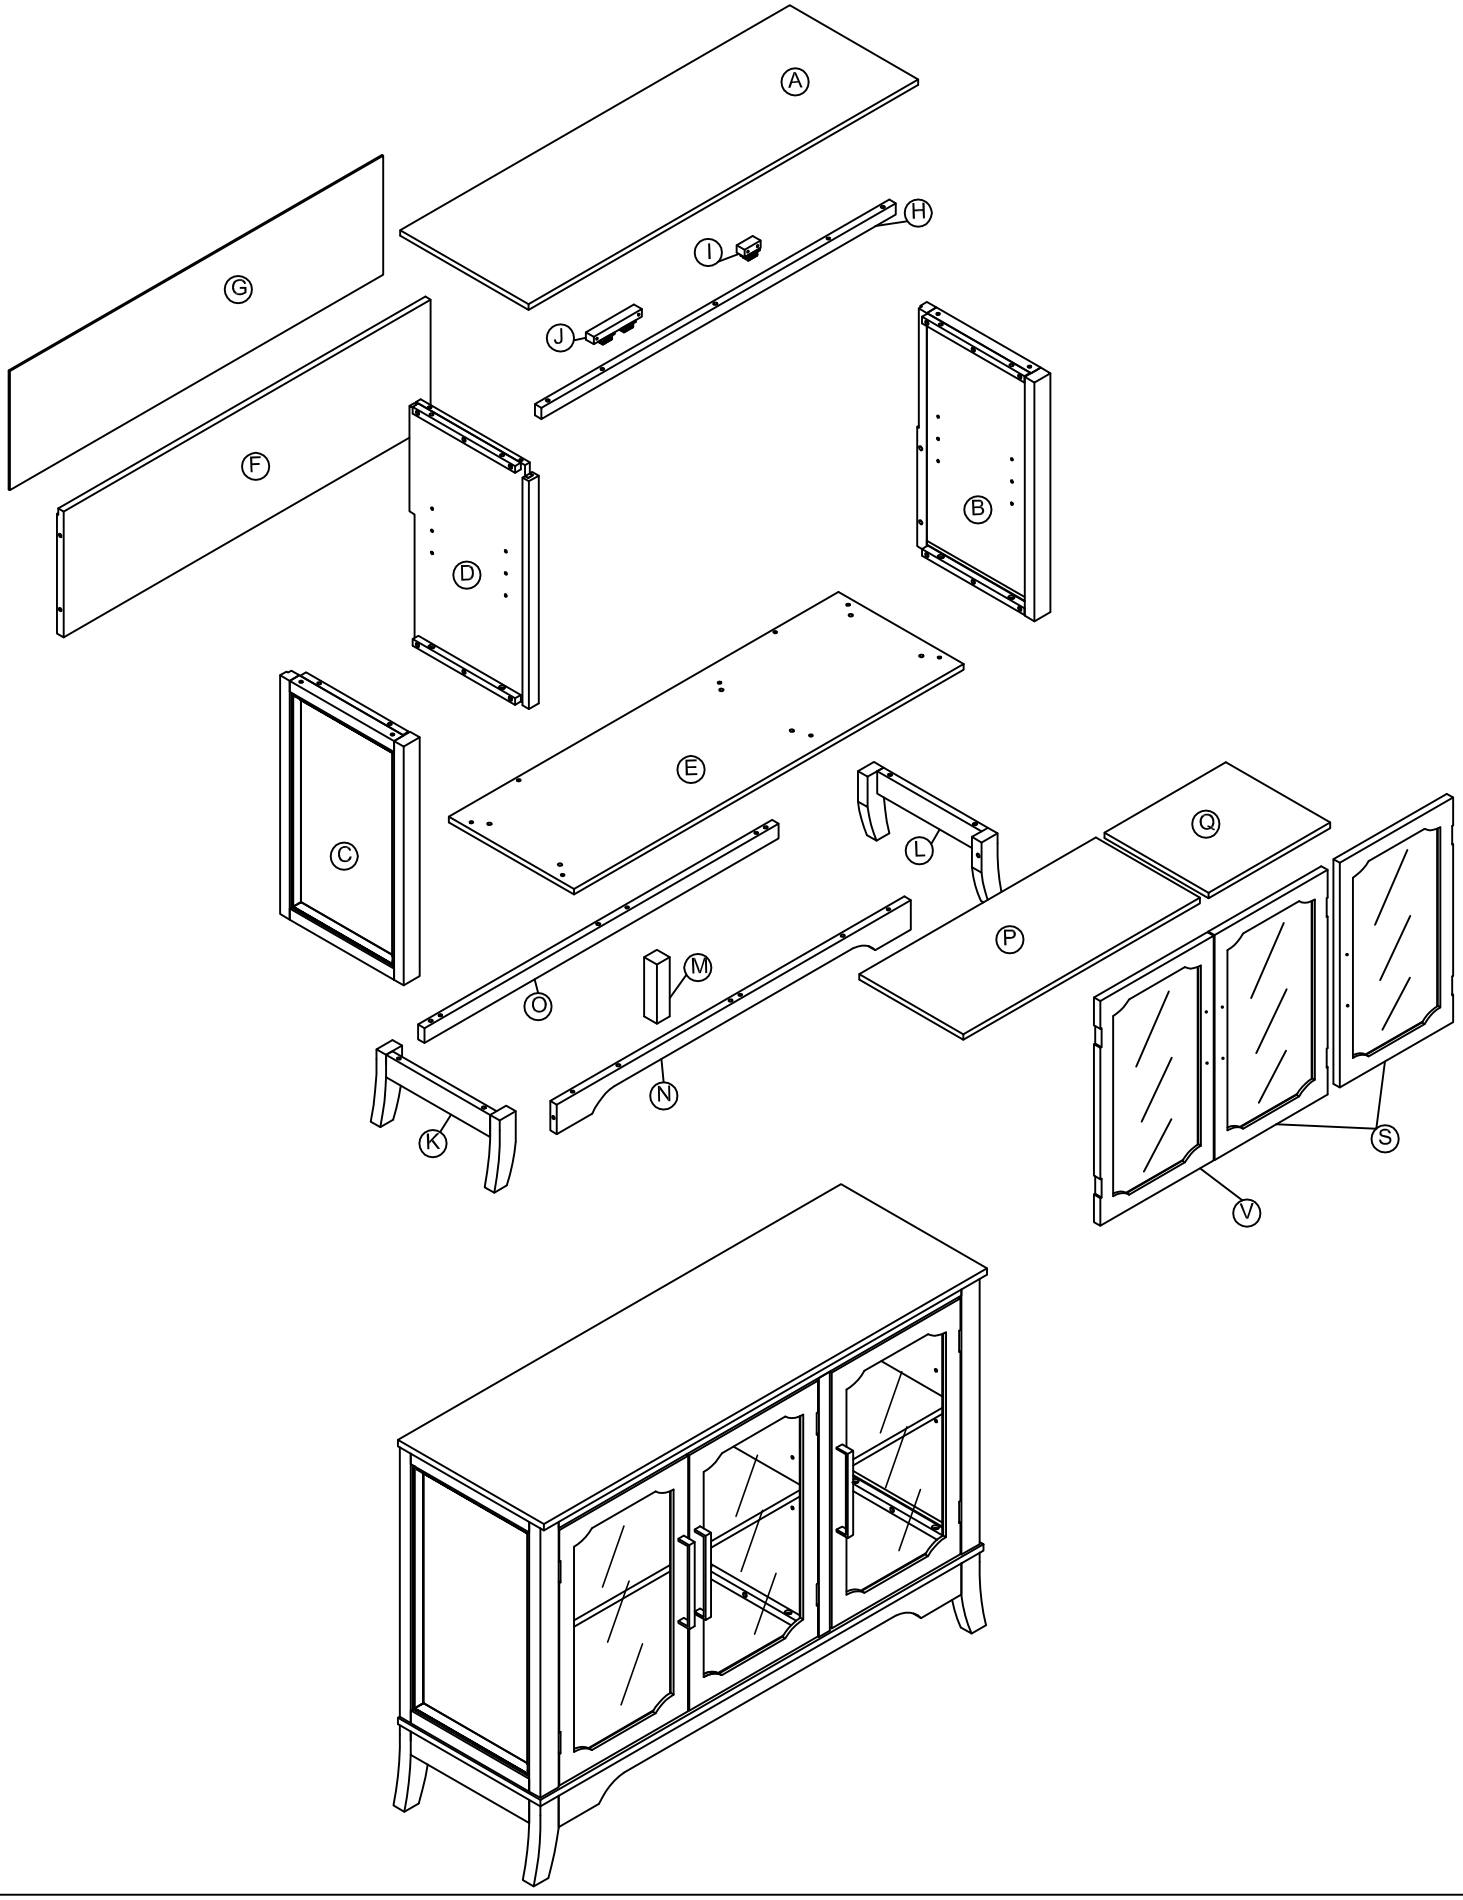
ASSEMBLY INSTRUCTION



ASSEMBLY INSTRUCTION

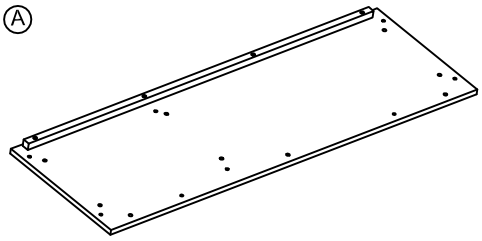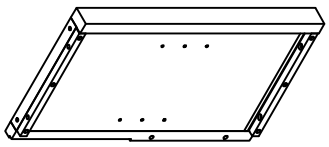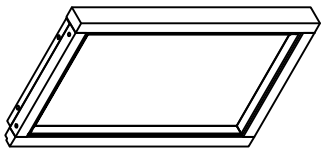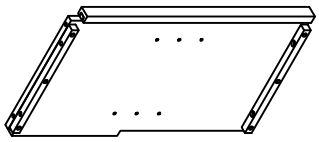
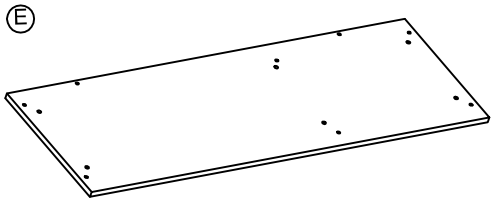
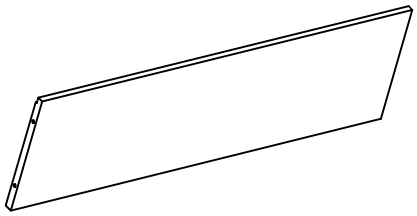
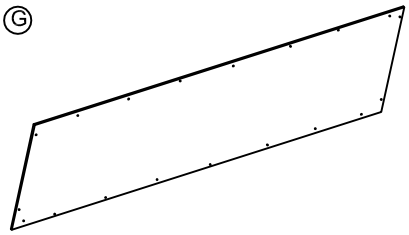
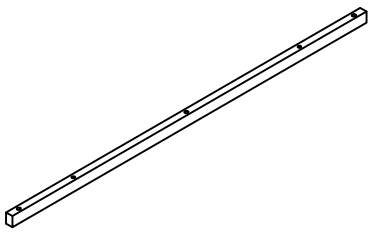
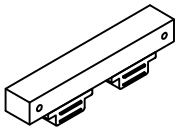
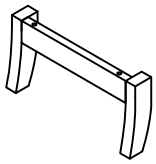
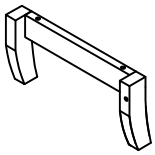
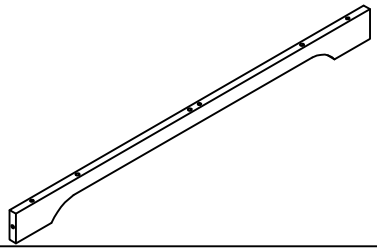
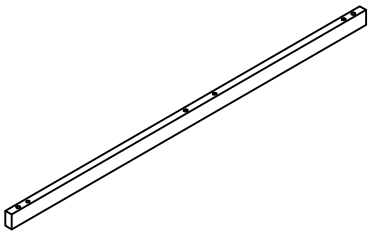
Pack List

Ⓐ 	Ⓑ 	Ⓒ 
Table Top =1pc	Right Side=1pc	Left Side=1pc
Ⓓ 	Ⓔ 	Ⓕ 
Middle=1pc	Bottom=1pc	Back Lower=1pc
Ⓖ 	Ⓗ 	Ⓘ 
Back Upper =1pc	Front support Top =1pc	Sigle Magnetic =1pc
Ⓙ 	Ⓚ 	Ⓛ 
Double Magnetic=1pc	Left frame Leg =1pc	Right frame Leg =1pc
Ⓜ 	Ⓝ 	Ⓞ 
Support Leg	Front support Bottom =1pc	Back support Bottom =1pc

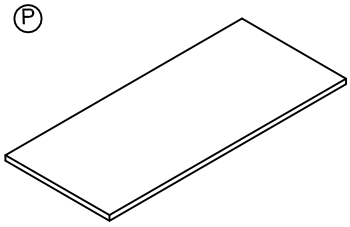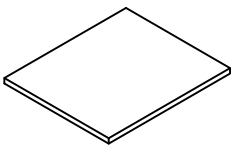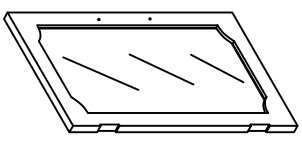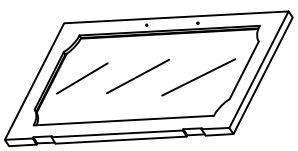
Ⓟ 	Ⓠ 	Ⓢ 	Ⓥ 
Long Shelf =1pc	Short Shelf =1pc	Right door=2pcs	Left doors =1pc


ASSEMBLY INSTRUCTION

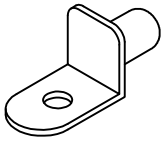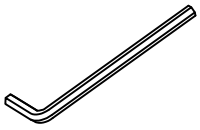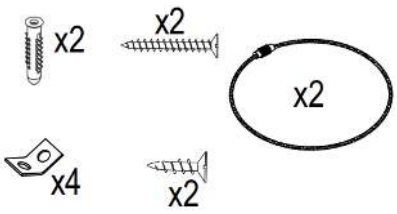
Pack List


① 	② 	③ 
Cam Bolt M6x 28mm =4pcs + extra 1pc	Camlock∅15 x 10mm =4pcs+ extra 1pc	Wooden Dowel∅8 x 30mm =20pcs + extra 1pc
④ 	⑤ 	⑥ 
Short Bulong 1/4" x 25mm= 12pcs+ extra 1pc	Middle Bulong 1/4" x 38mm = 13pcs + extra 1pc	Long Bulong 1/4" x60mm =2pcs+ extra 1pc
⑦ 	⑧ 	⑨ 
Spring Washer =25pcs + extra 1pc	Flat Washer =25pcs + extra 1pc	Hafl Moon Nut 12 x 20 =2pcs + extra 1pc
⑩ 	⑪ 	⑫ 
Mushroom screw M3 x 15=18pcs + extra 1pc	Flat Screw M4 x 25 =4pcs+ extra 1pc	Support Shelf =8PCS+ extra 1pc
⑬ 	⑭ 	⑮ 
Allen Key K4 x 80 =1pc + extra 1pc	Bolt of Handle M4 x 25 =6pcs + extra 1pc	Handle 12 x 34 x 135mm =3pcs
⑯ 		
ANTITIP KIT =2SETS		

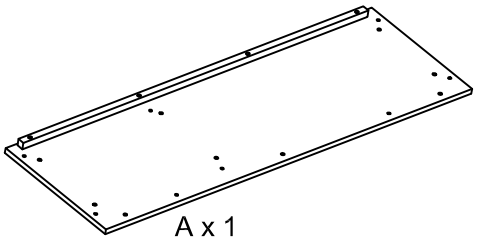
Assembly Preparation
Before Beginning Assembly:



A x 1

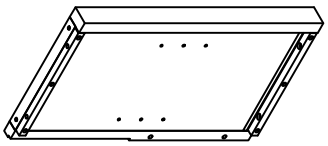

B x 1

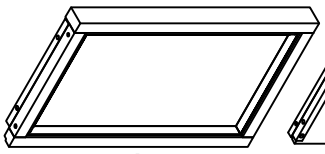

C x 1

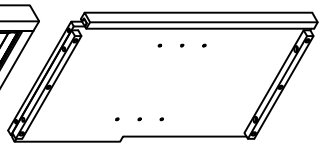
D x 1

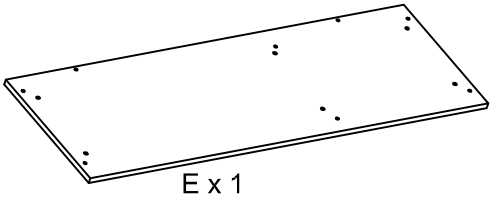

E x 1

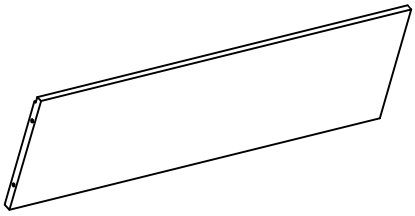
F x 1

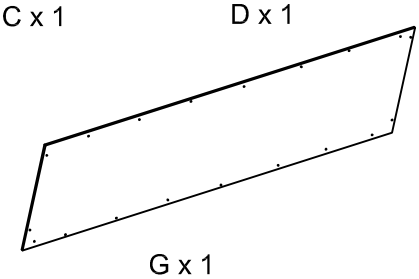

G x 1

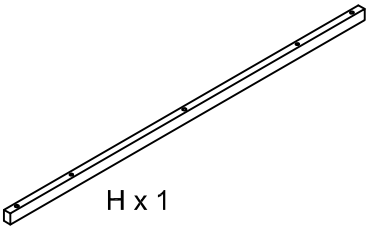

H x 1

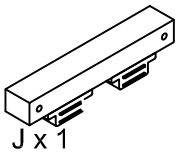

I x 1



J x 1

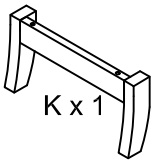

M x 1



K x 1

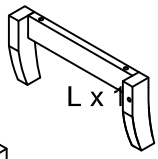

L x 1

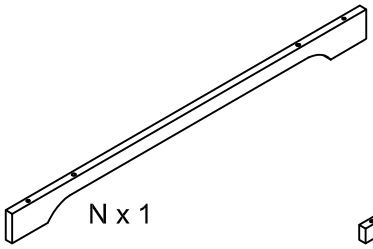

N x 1

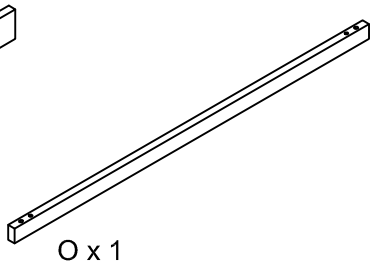
O x 1

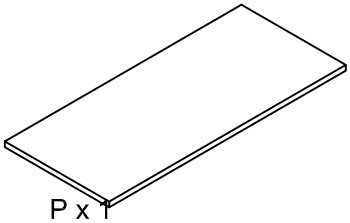

P x 1

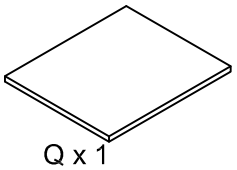
Q x 1

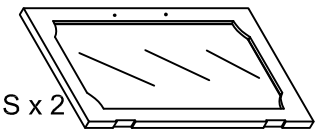
S x 2

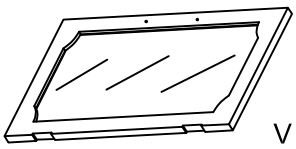
V x 1

①x 5




②x 5




③x 21




④x 13




⑤x 14



⑥x 3




⑦x 26




⑧x 26




⑨x 3




⑩x 19




⑪x 4



⑫x 9

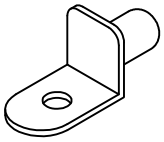


⑬x 2

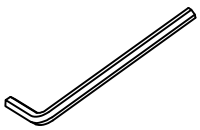


⑭x 7



⑮x 3




⑯x 2

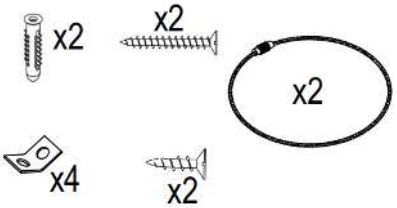

Assembly Preparation
Before Beginning Assembly:

- Read instructions, cover to cover-
- Have 2 adults on hand for assembly-
- Do not assemble on flooring or carpet-
- Assemble on a clean non-marring surface (packing foam)-
- Save all packaging until finished-

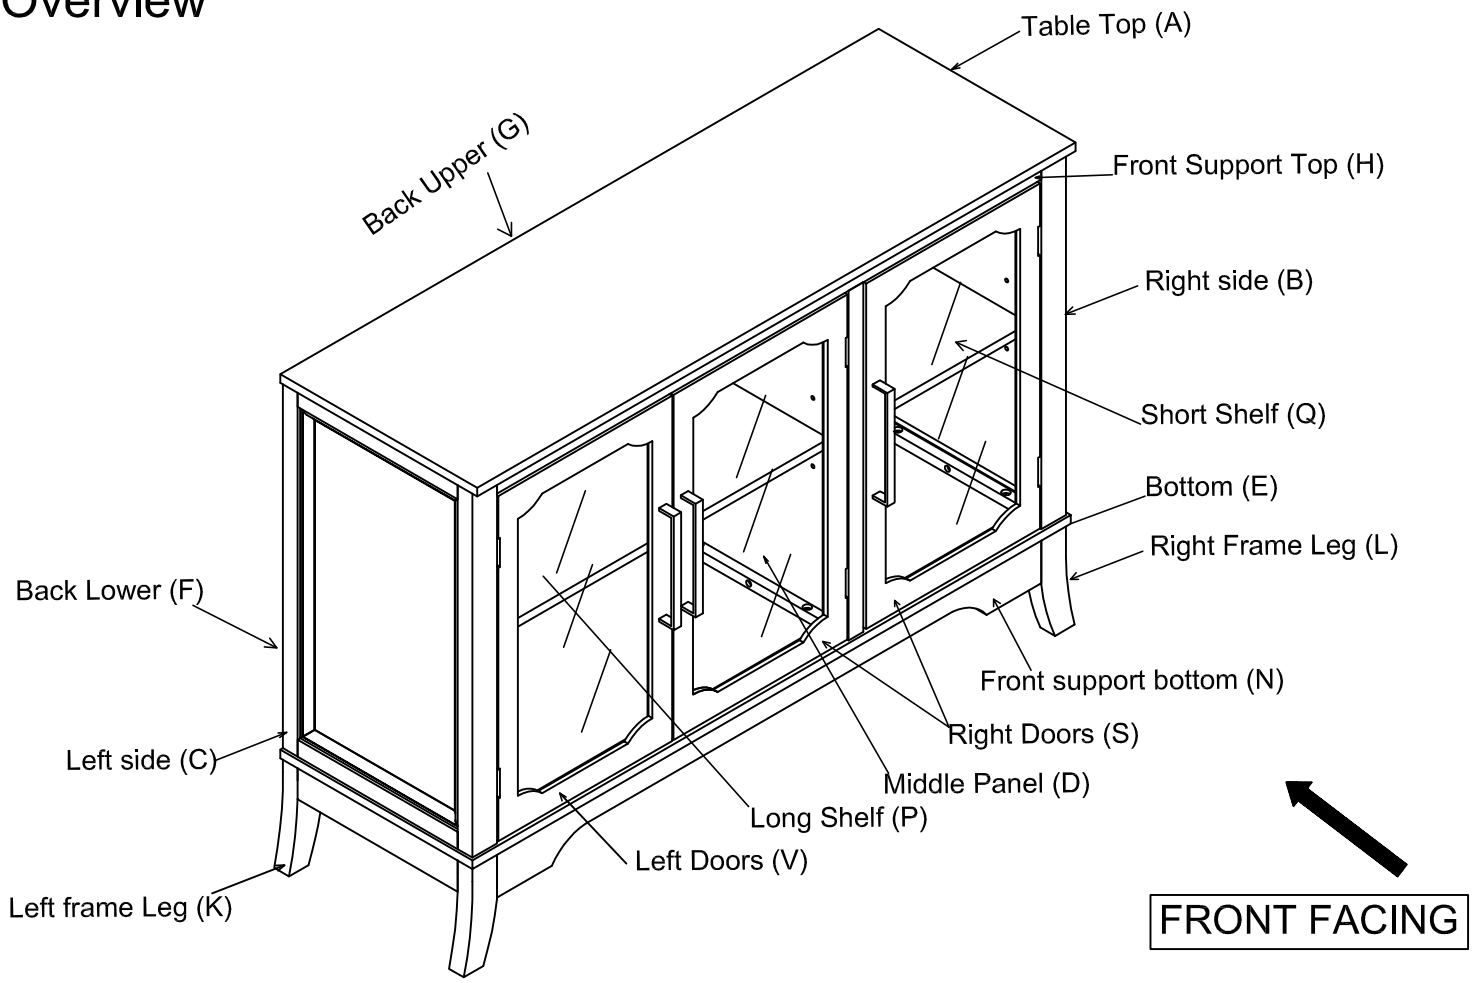
Assembly Steps
Overview




This Sideboard has multiple parts and may require up to some 45 minutes to assemble. To give you an overview of the Sideboard parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

ASSEMBLY INSTRUCTION

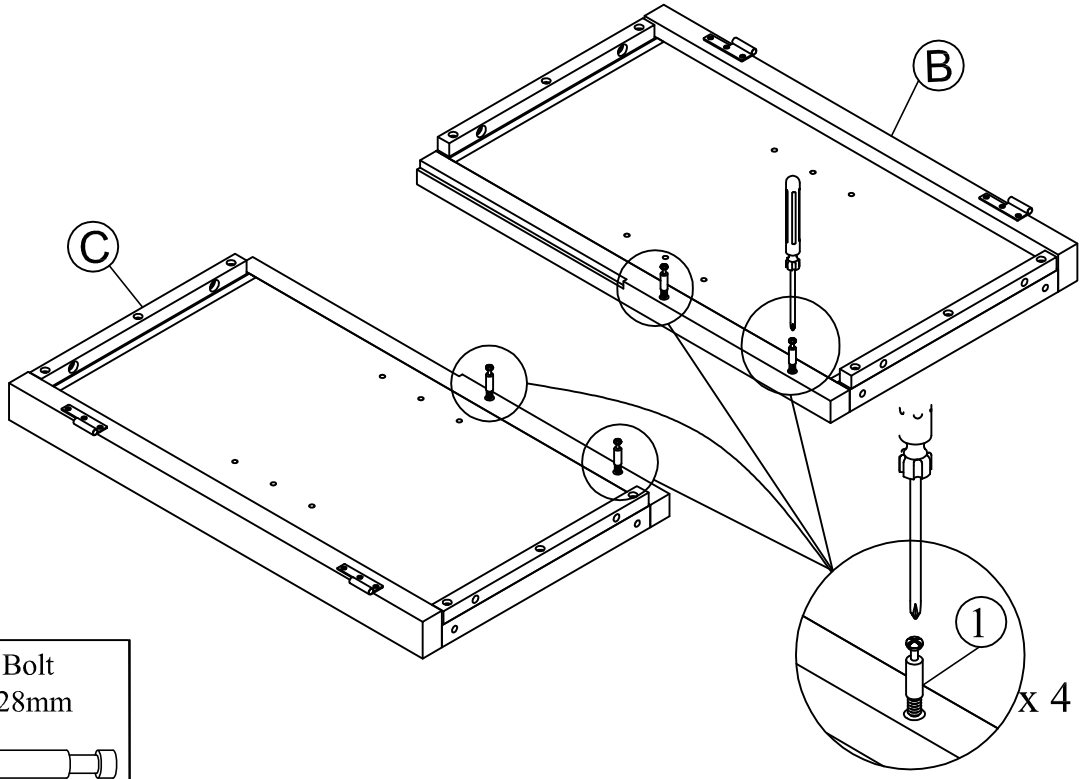Step 1:




Cam Bolt
M6x 28mm



1 x 4

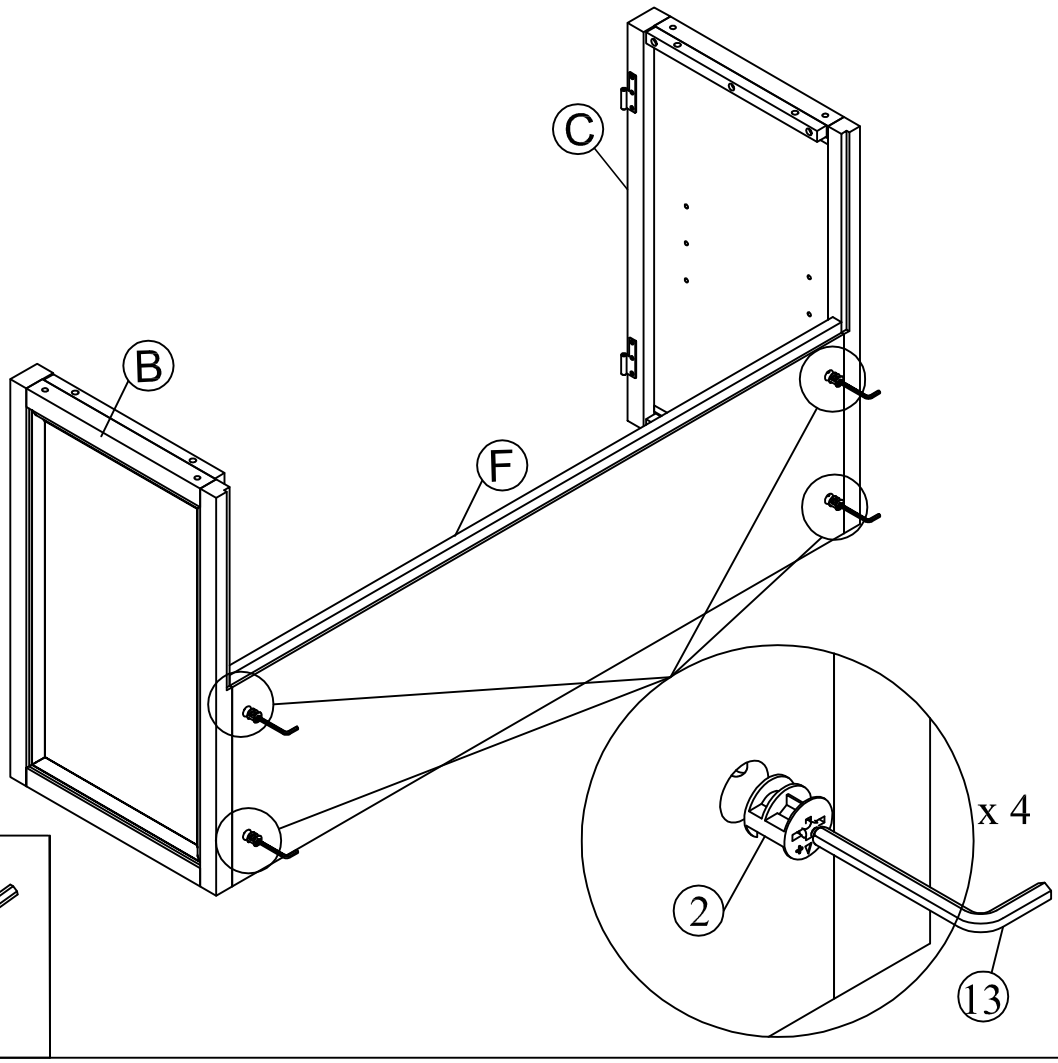Step 2




Camlock
∅ 15 x 10mm



2 x 4

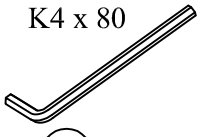
Allen Key
K4 x 80



13 x 1


ASSEMBLY INSTRUCTION

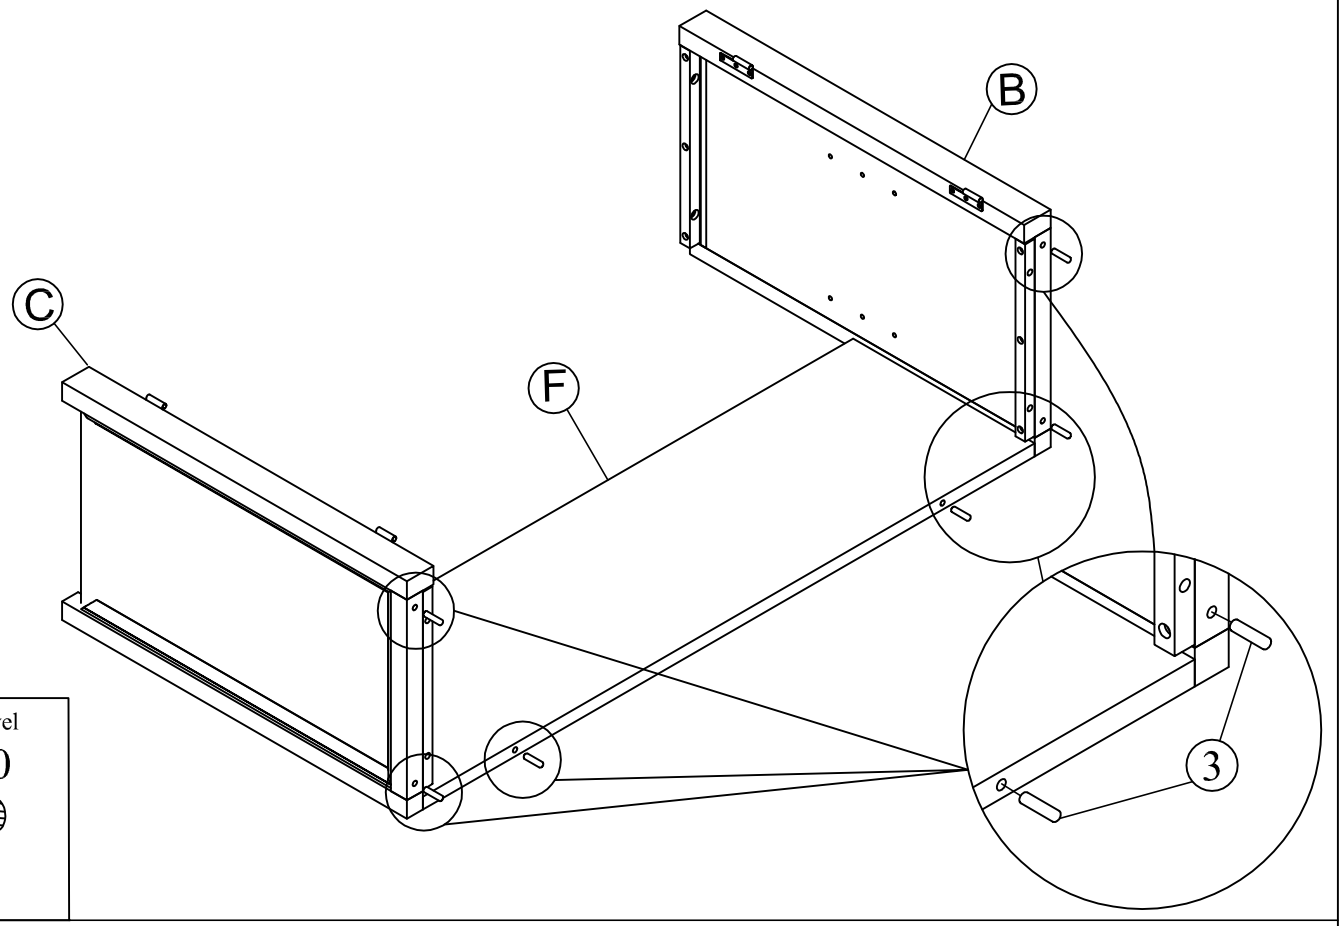Step 3



Wooden Dowel
∅8 x 30
3 x 6

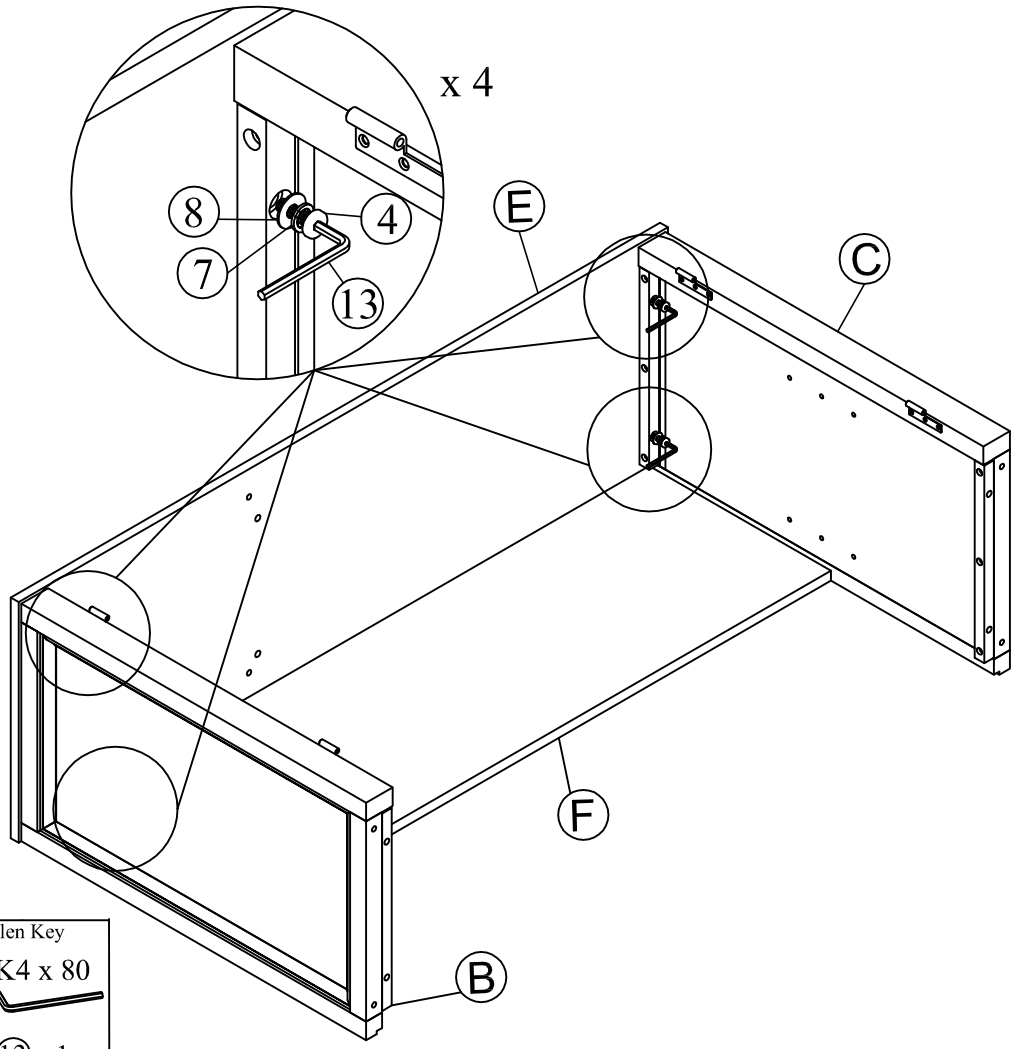
Step 4



Short Bolt	Spring washer	Flat Washer	Allen Key
1/4" x 25	∅10 x ∅6	∅12 x ∅6	K4 x 80
4 x 4	7 x 4	8 x 4	13 x 1


ASSEMBLY INSTRUCTION

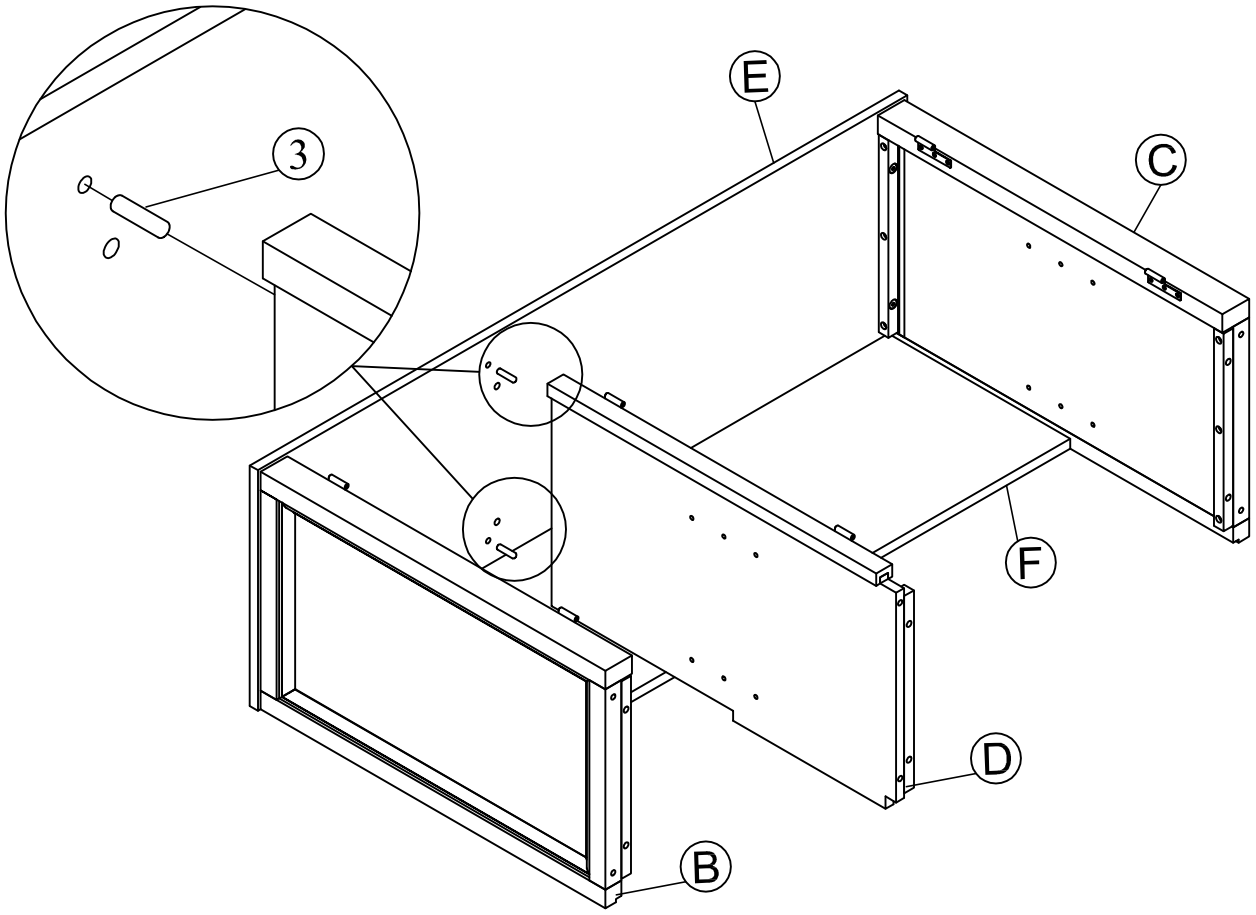Step 5



Wooden Dowel
∅8 x 30
3 x 2

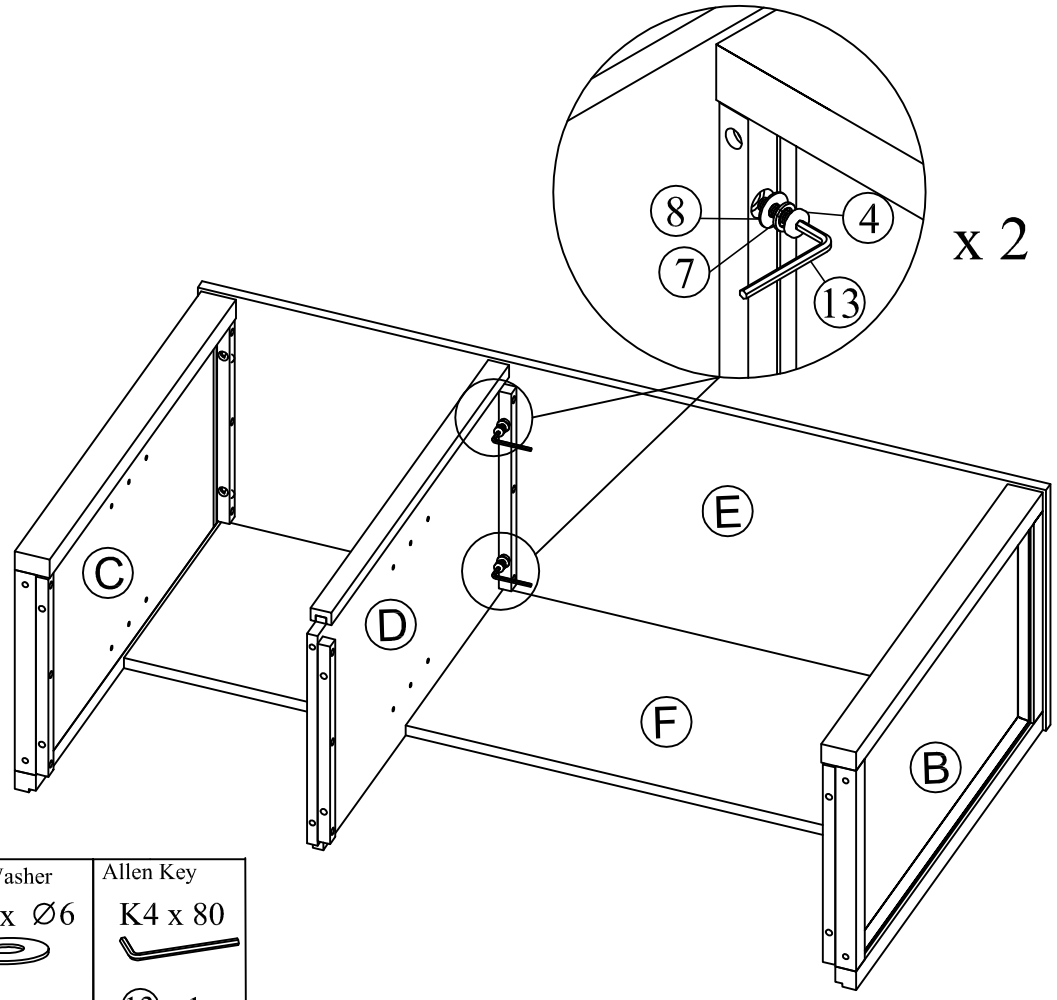
Step 6



Short Bolt	Spring washer	Flat Washer	Allen Key
1/4" x 25	∅10 x ∅6	∅12 x ∅6	K4 x 80
4 x 2	7 x 2	8 x 2	13 x 1


ASSEMBLY INSTRUCTION

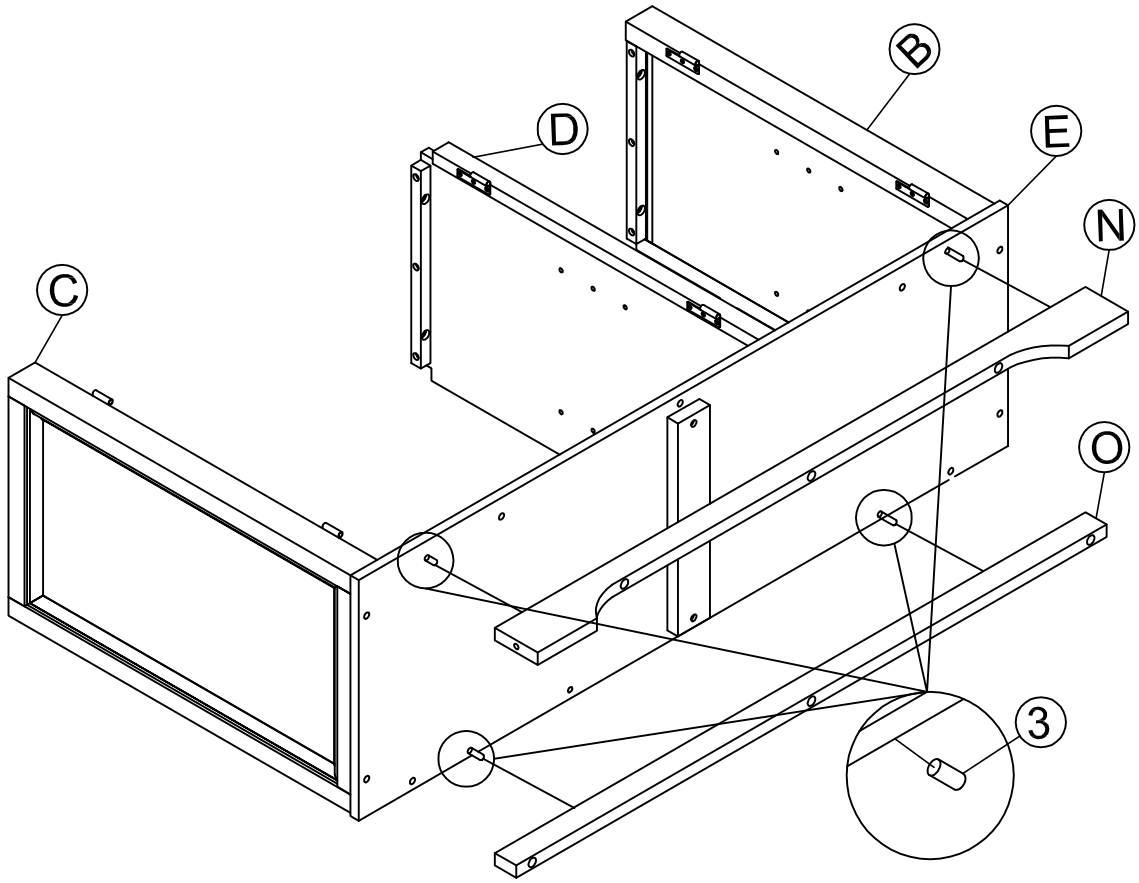Step 7:



Wooden Dowel
∅8 x 30
3 x 4

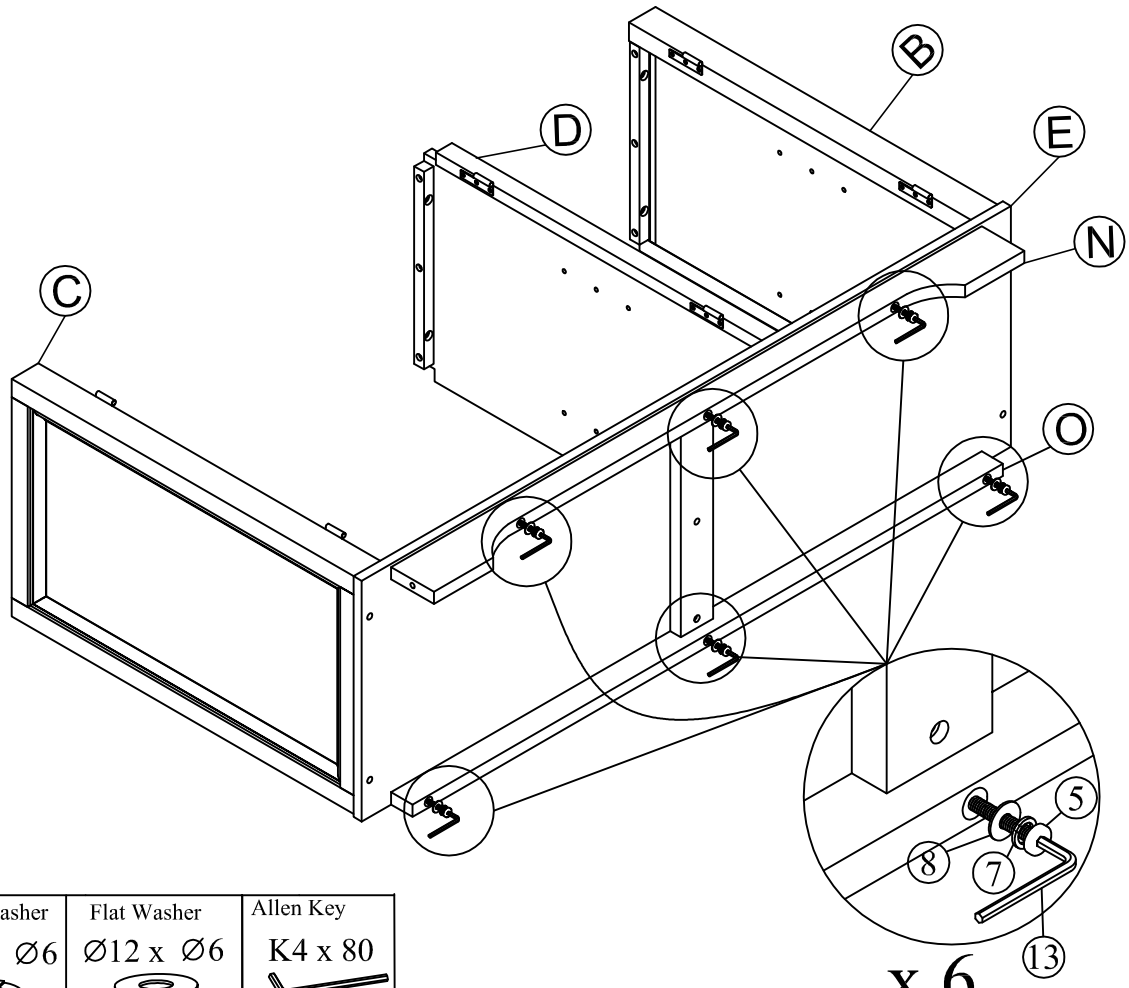
Step 8



Middle Bolt	Spring washer	Flat Washer	Allen Key
1/4" x 38	∅10 x ∅6	∅12 x ∅6	K4 x 80
5 x 6	7 x 6	8 x 6	13 x 1


ASSEMBLY INSTRUCTION

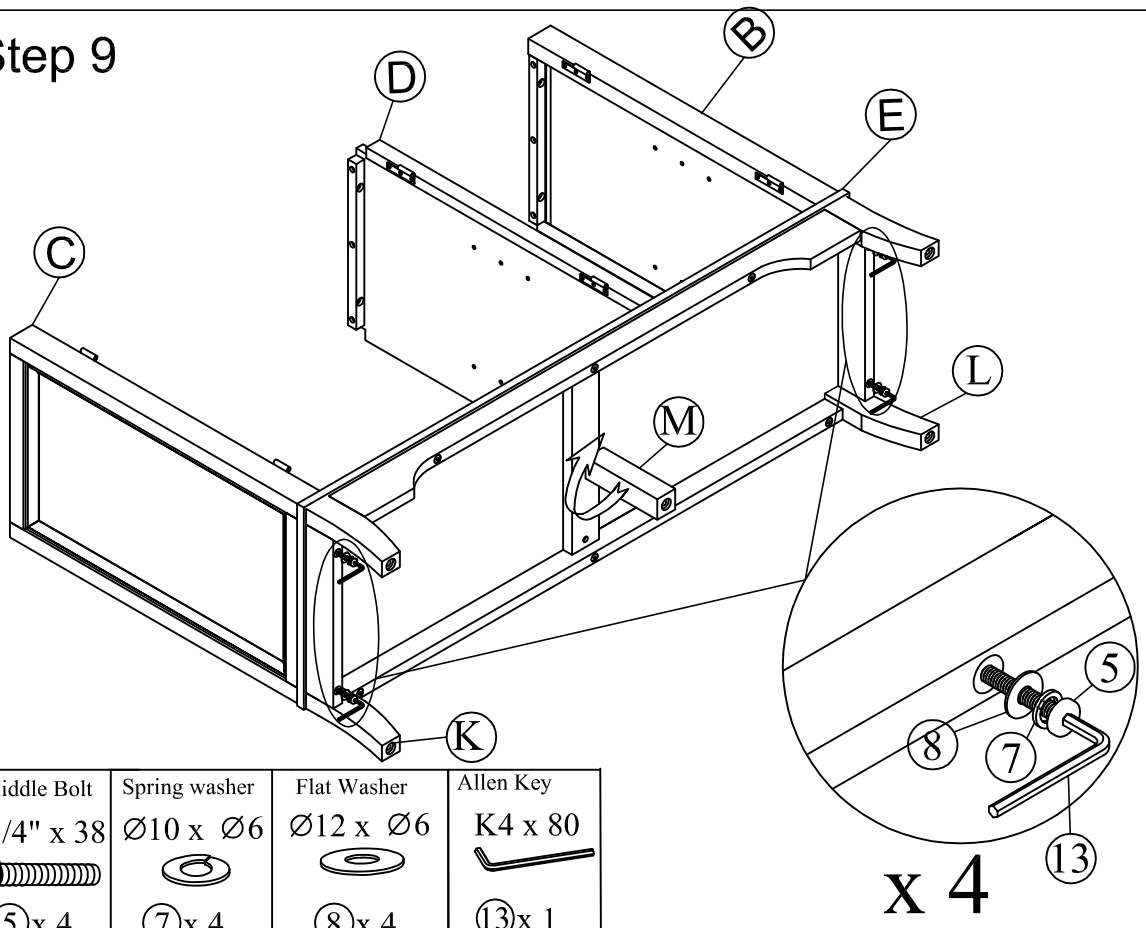Step 9



Middle Bolt	Spring washer	Flat Washer	Allen Key
1/4" x 38	Ø10 x Ø6	Ø12 x Ø6	K4 x 80
⑤x 4	⑦x 4	⑧x 4	⑬x 1

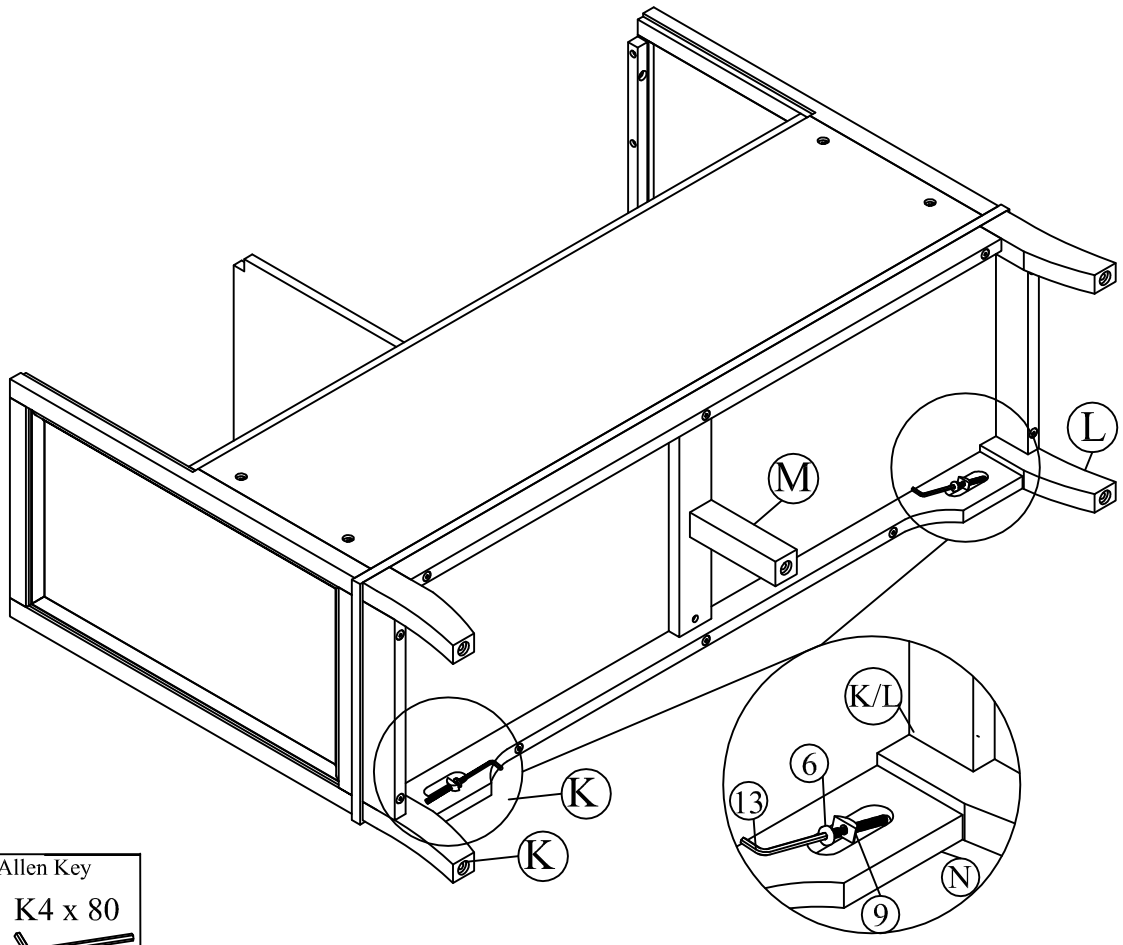
Step 10



Long Bolt	Half moon Nut	Allen Key
1/4" x 60	12 x 10	K4 x 80
⑥x 2	⑨x 2	⑬x 1


ASSEMBLY INSTRUCTION

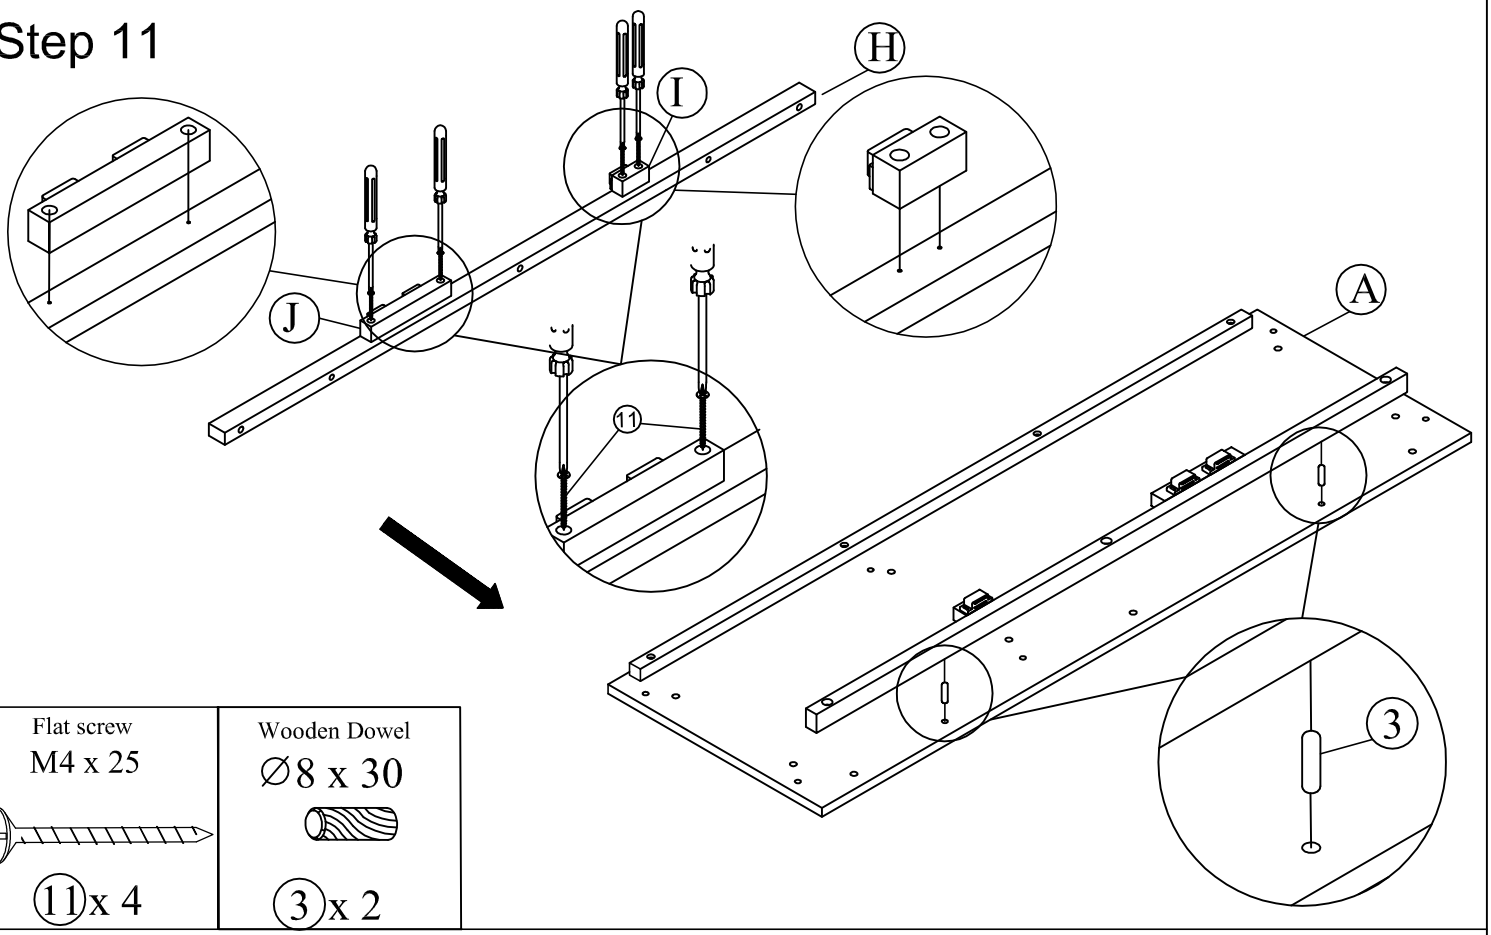Step 11



Flat screw M4 x 25	Wooden Dowel ∅8 x 30
11 x 4	3 x 2

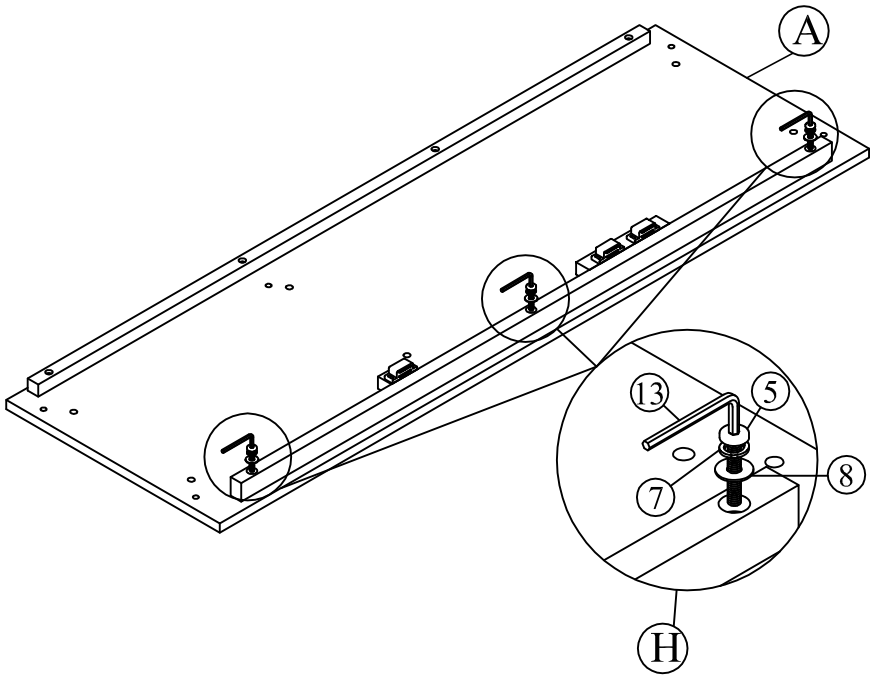
Step 12



Middle Bolt 1/4" x 38	Spring washer ∅10 x ∅6	Flat Washer ∅12 x ∅6	Allen Key K4 x 80
5 x 3	7 x 3	8 x 3	13 x 1


ASSEMBLY INSTRUCTION

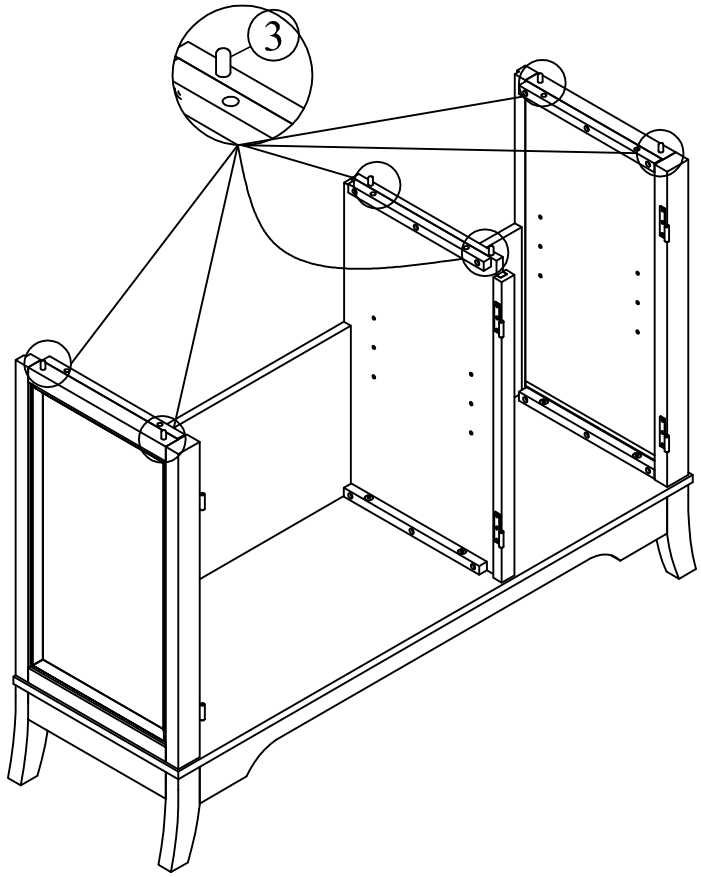Step 13



Wooden Dowel
∅8 x 30
③x 6

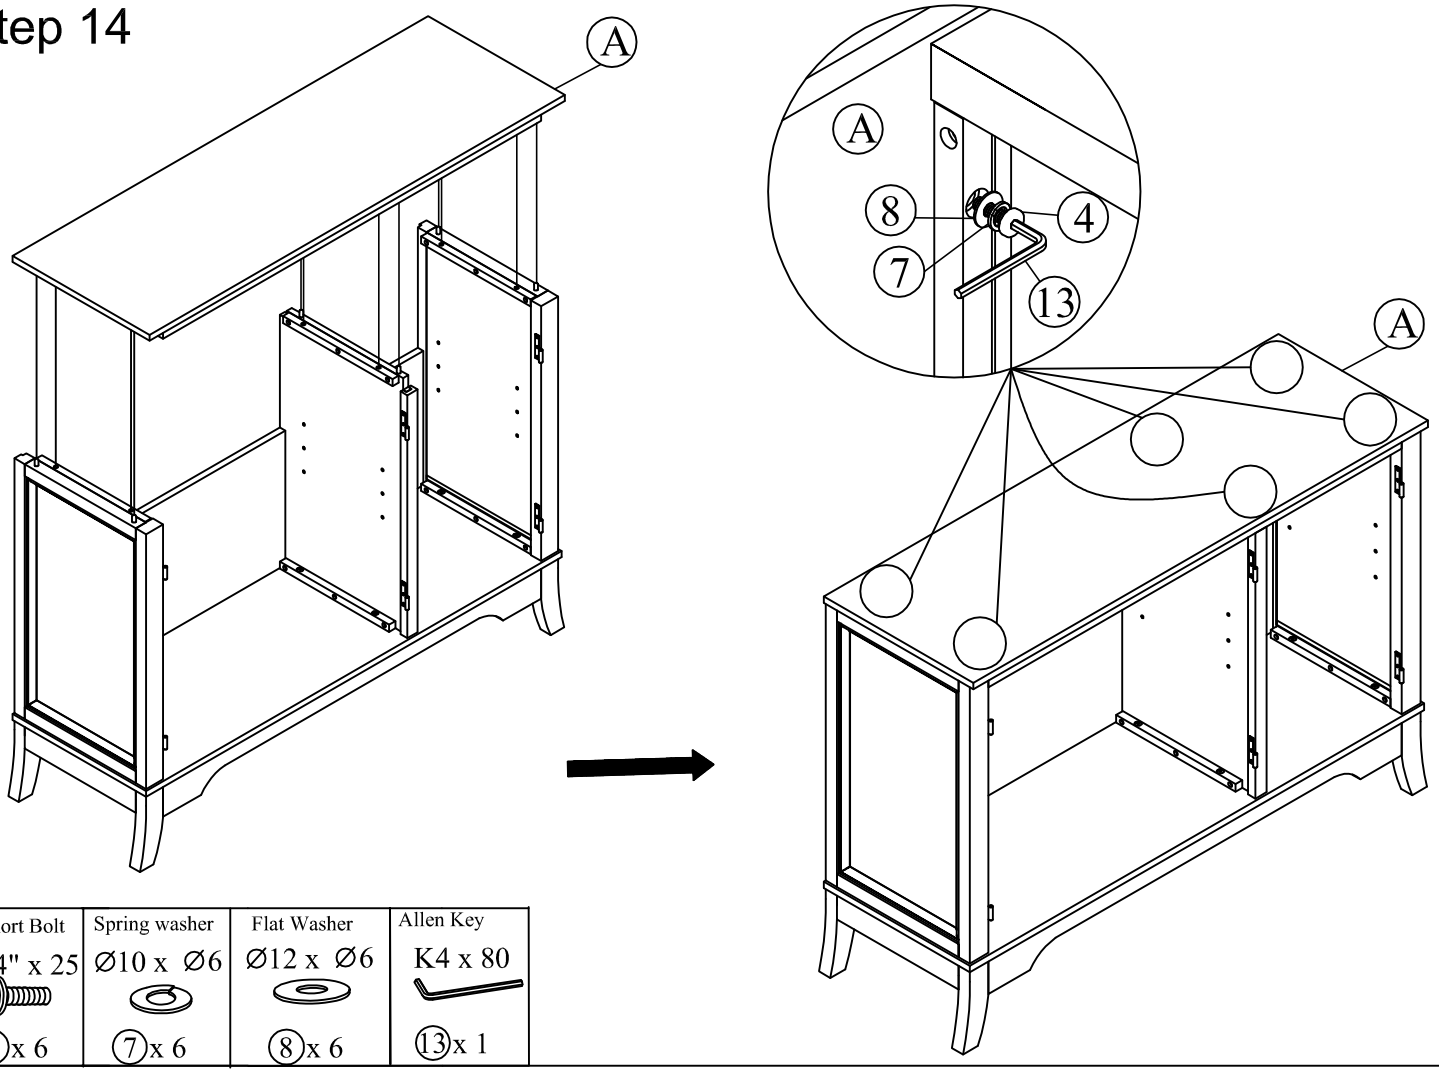Step 14




Short Bolt	Spring washer	Flat Washer	Allen Key
1/4" x 25	∅10 x ∅6	∅12 x ∅6	K4 x 80
④x 6	⑦x 6	⑧x 6	⑬x 1

ASSEMBLY INSTRUCTION


.

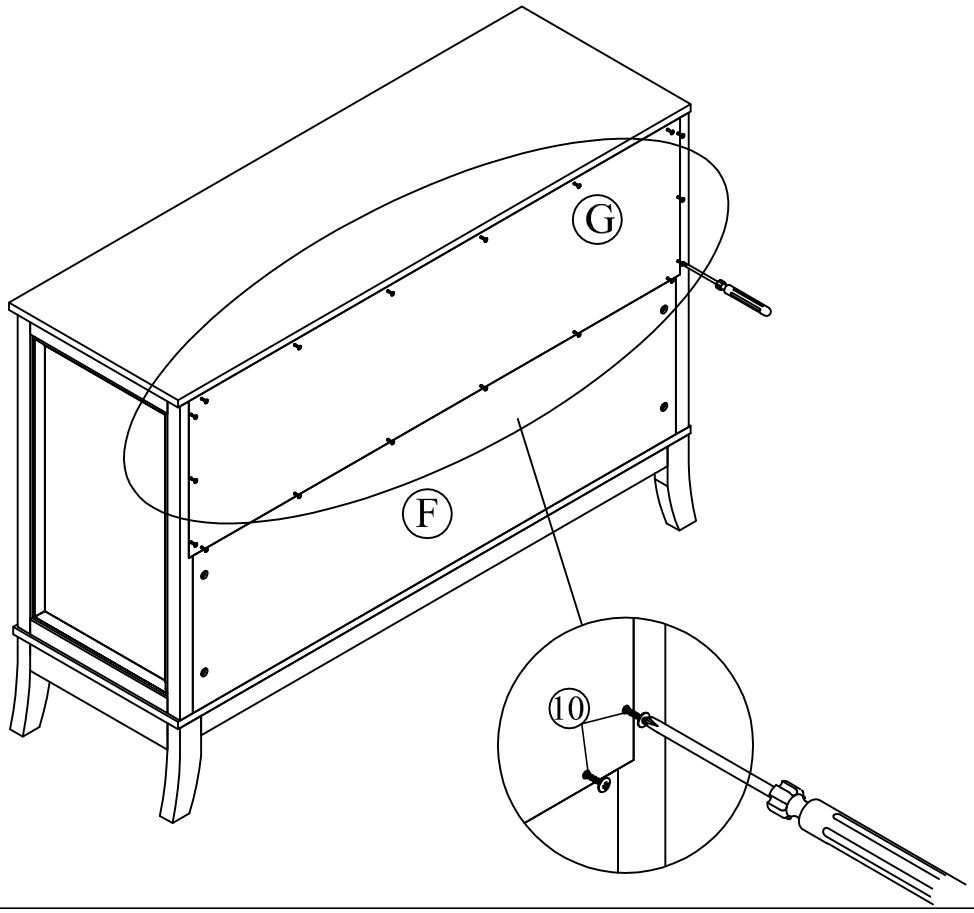Step 15




Mushroom screw

M3 x 15




⑩x 18

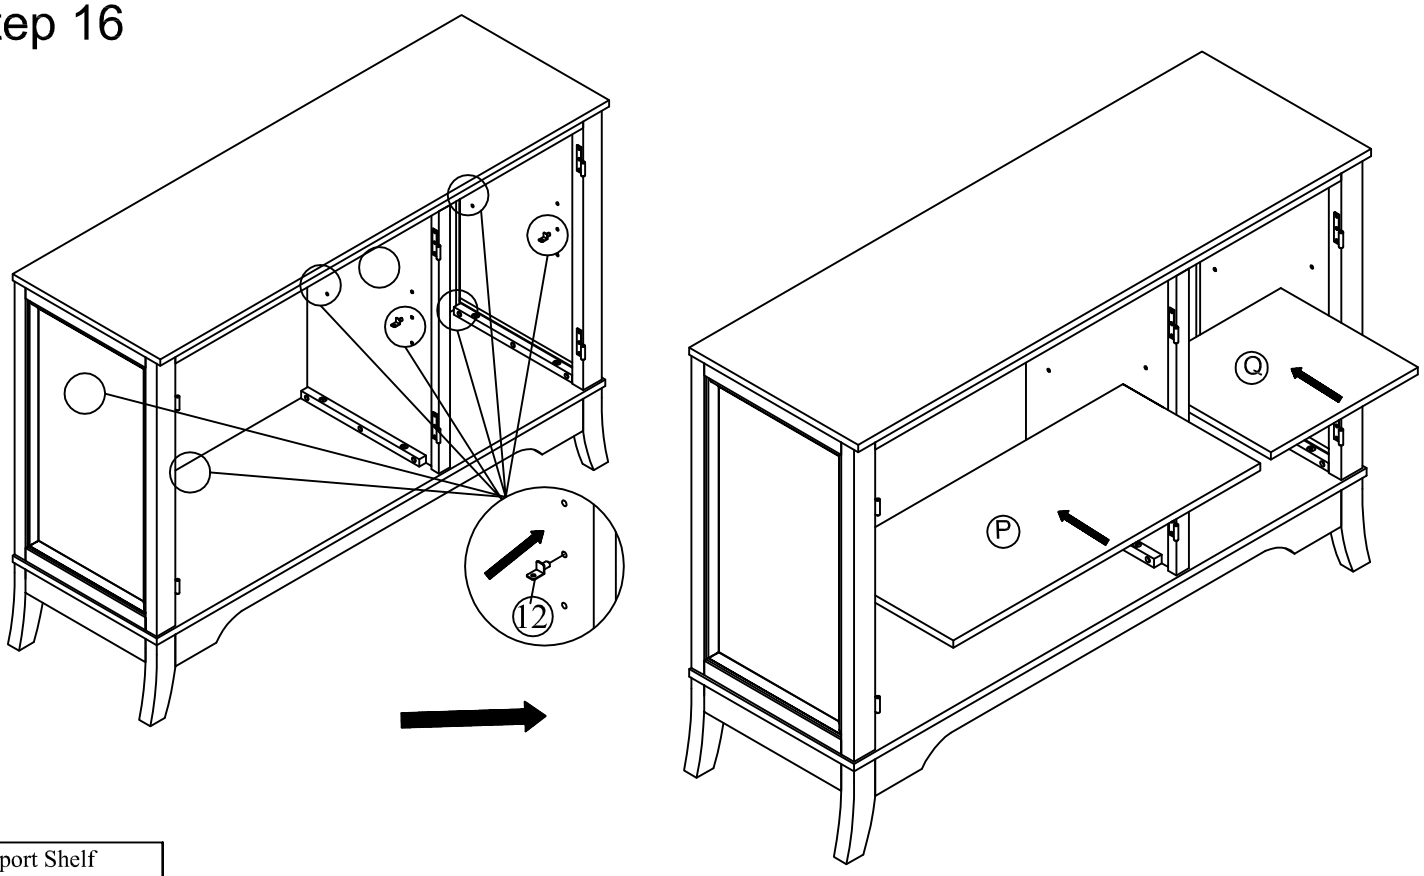Step 16




Support Shelf




⑫x 8


ASSEMBLY INSTRUCTION

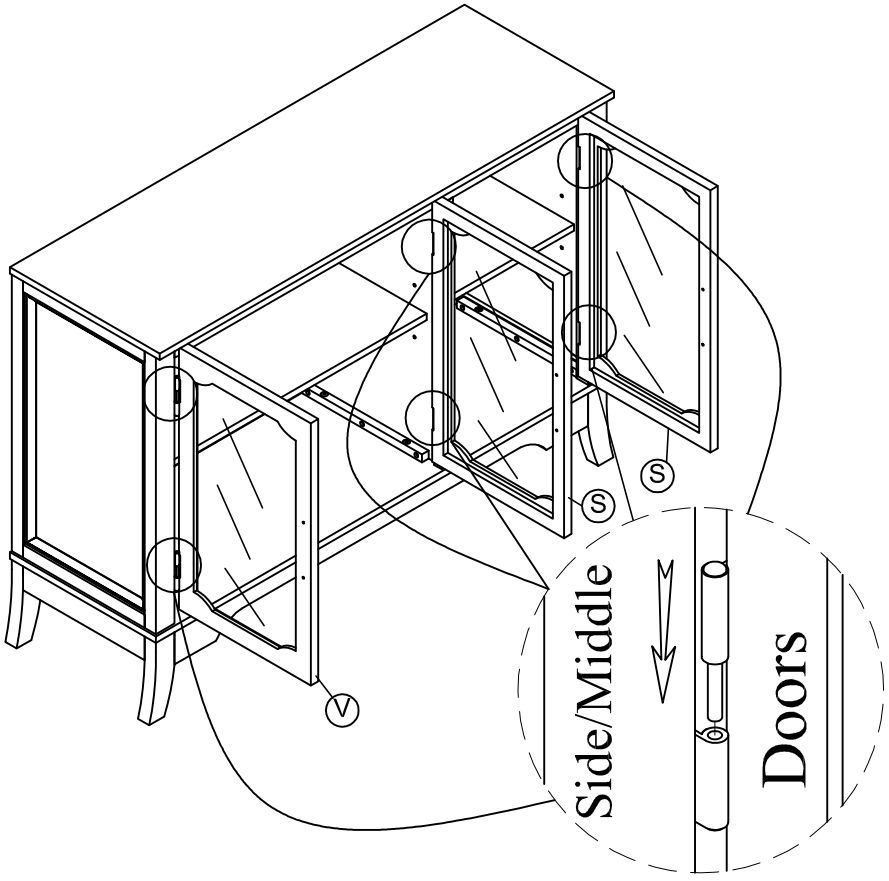Step 17



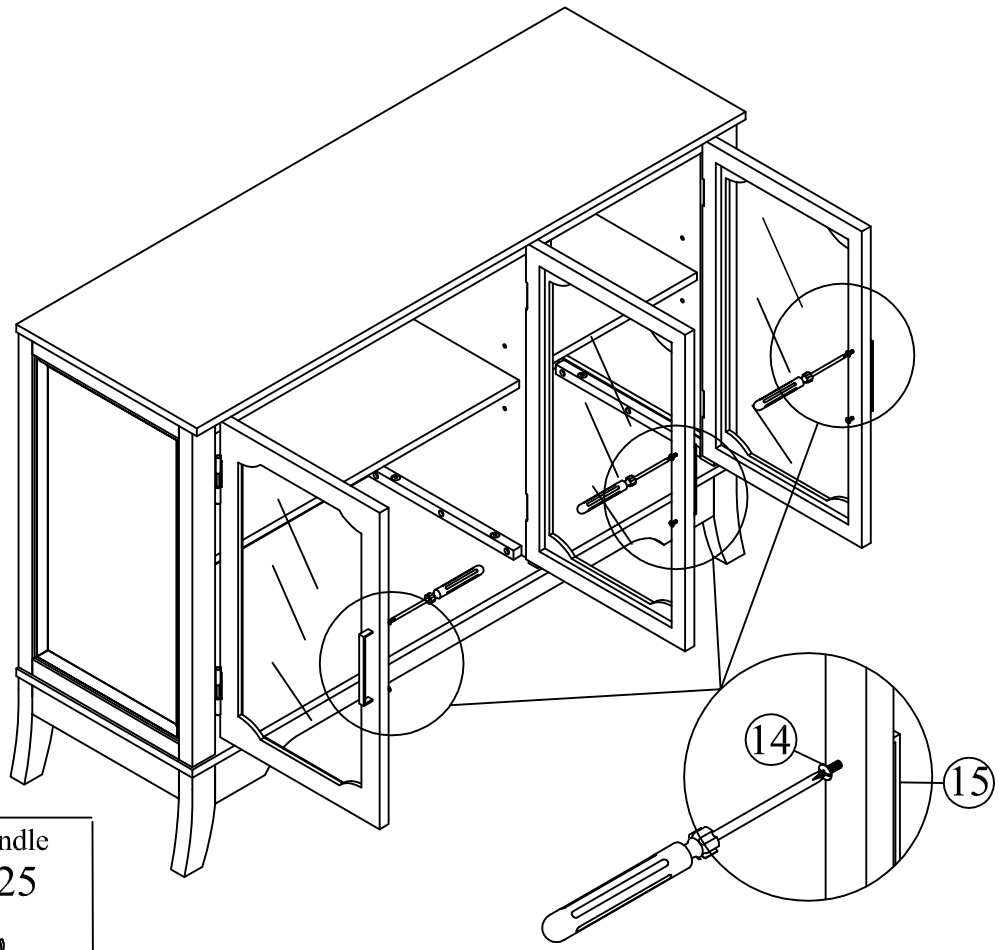
Step 18



Handle 12 x 34 x 135mm	Bolt of Handle M4 x 25
 15 x 3	 14 x 6

ASSEMBLY INSTRUCTION

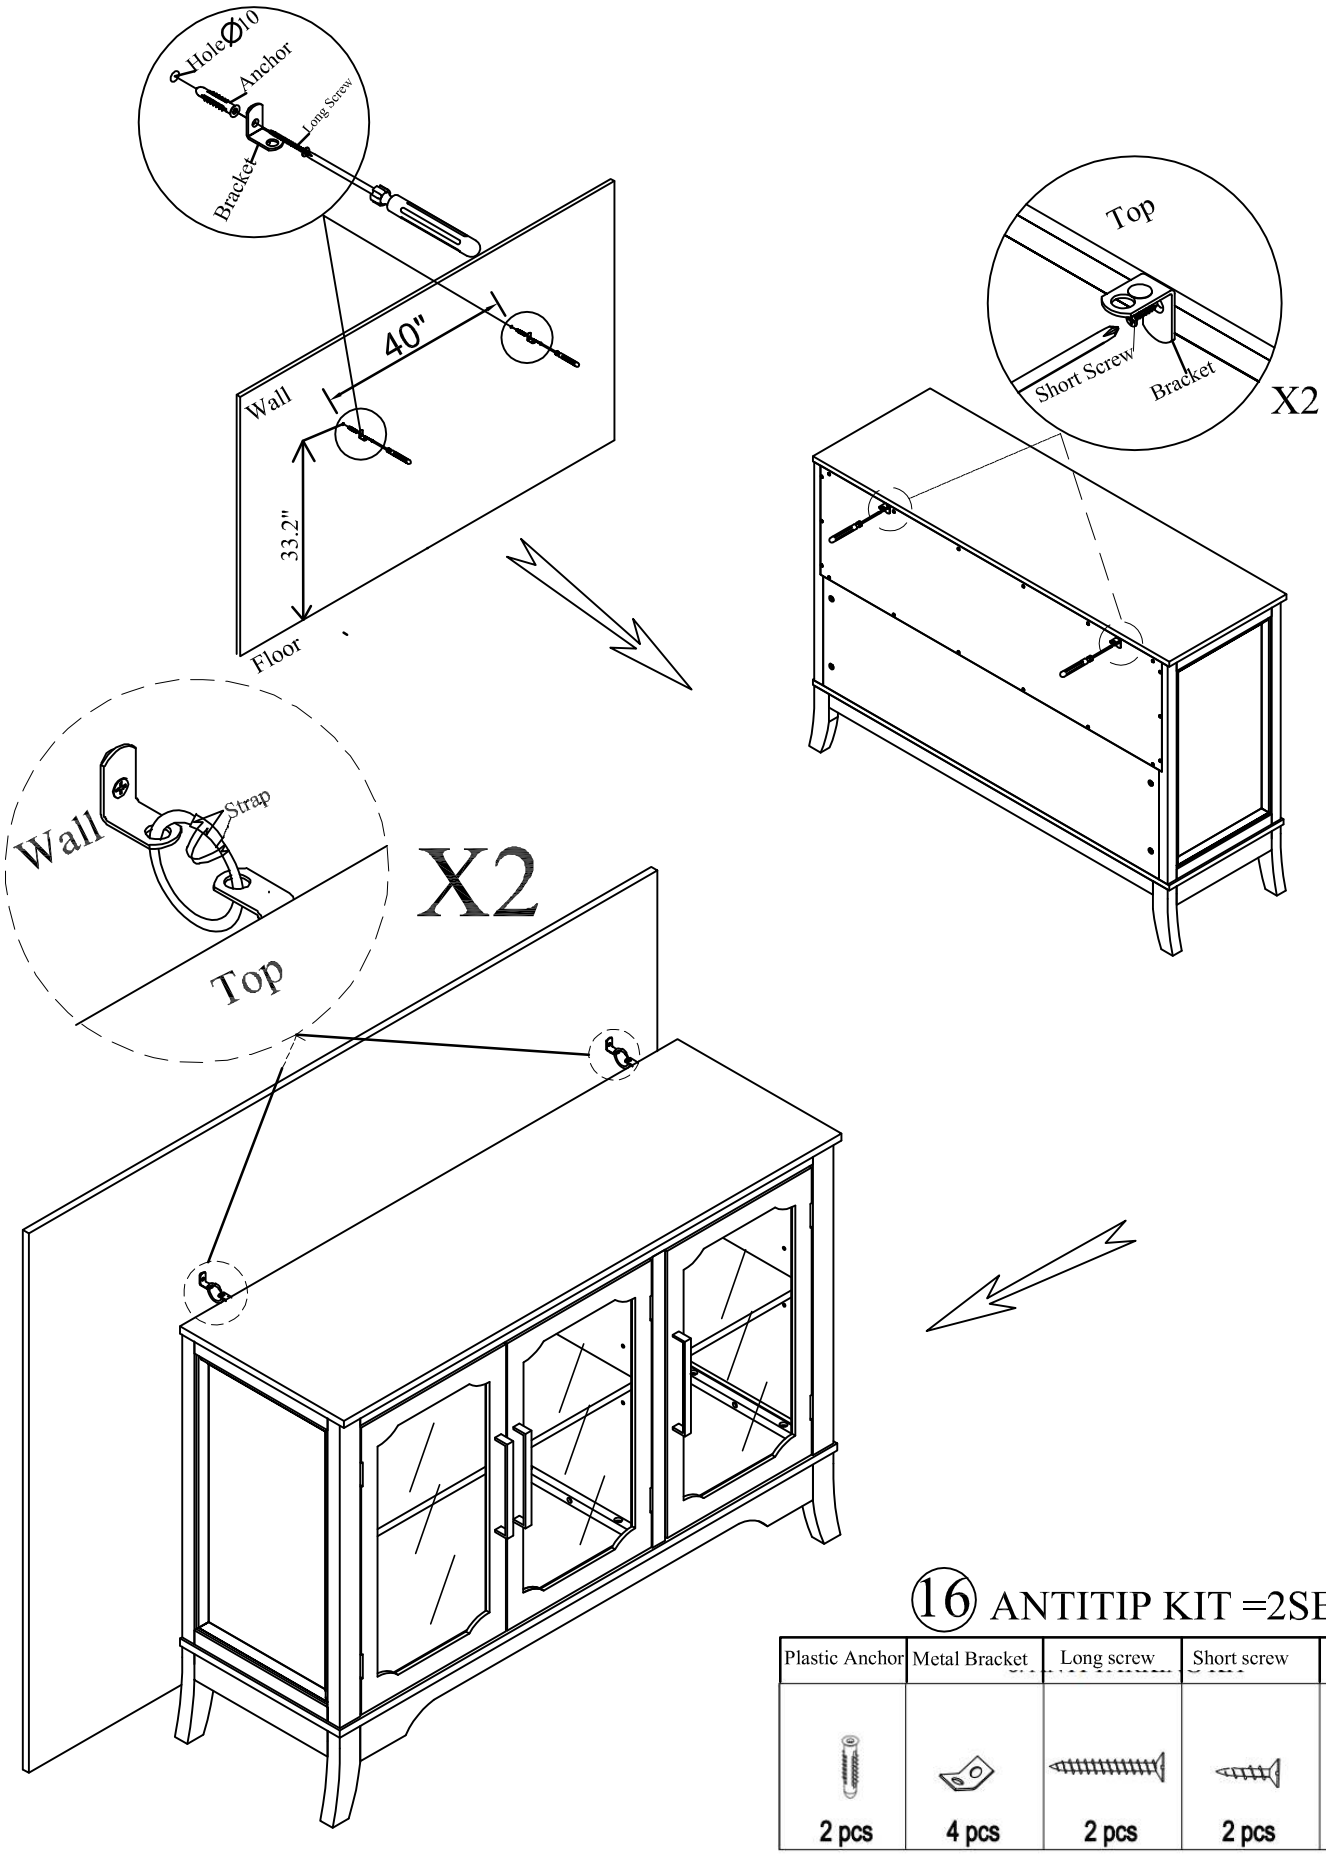Step 19




⑯ ANTITIP KIT =2SETS

Plastic Anchor	Metal Bracket	Long screw	Short screw	Steel Wire
2 pcs	4 pcs	2 pcs	2 pcs	2 pcs

Is your cabinet door looking crooked or unevenly spaced?

If you're still having trouble lining everything up, your next step should be to try to adjust the feet slightly to square up the cabinet and doors. Follow the instructions below:

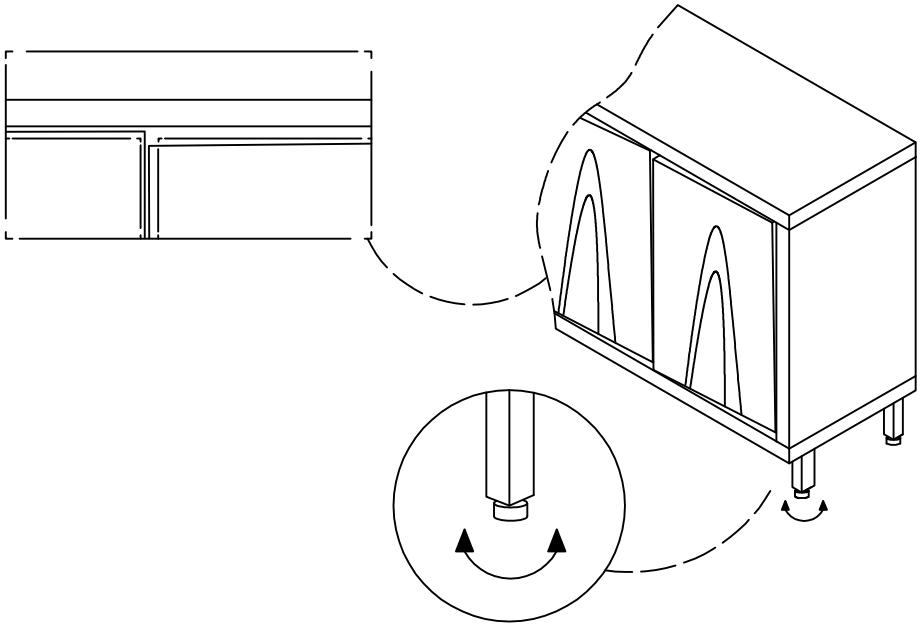If the right door appears to be hanging low, you can adjust the adjustable leveler on the front right until the door is better aligned.



If the left door appears to be hanging low, you can adjust the adjustable leveler on the front left until the door is better aligned.

