


# Recliner Sofa





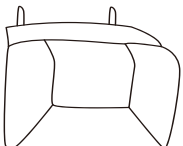



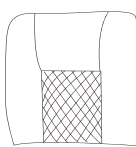
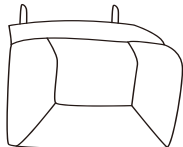



---

## Operating instruction

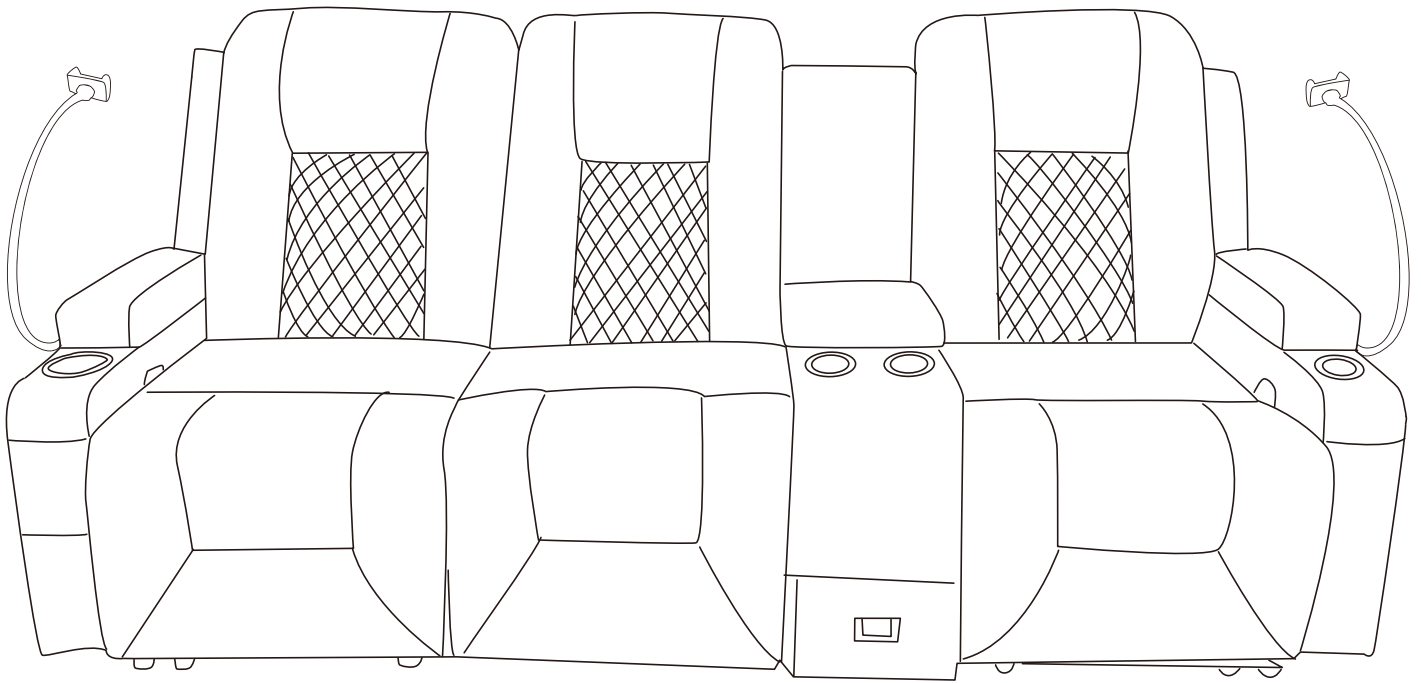





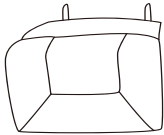







- NOTE: This sofa ships in 4 boxes. All accessories are included.
- Our package comes with some cardboard that you can unfold before installing and then put the sofa on the cardboard for assembly to prevent the fabric from wearing out.
- If you have any questions after receiving the sofa, please contact us in time and provide pictures. We will try our best to help you solve it.
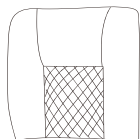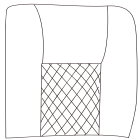
# PARTS LISTING


BOX-A					
part	Description	Qty	part	Description	Qty
B1	 seat cushion(left)	1pc	C1	 Ear(left)	1pc
D1	 Arm(left)	1pc	G	 	1pc
BOX-B					
B2	 seat cushion(right)	1pc	C2	 Ear(right)	1pc
D2	 Arm(right)	1pc	G	 	1pc
BOX-E					
G	 Back cushion (mid)	1pc	H	 Seat cushion (mid)	1pc
3	 	8pcs	4	 	4pcs
6	 	2pcs			

# PARTS LISTING

## BOX-C

part	Description	Qty	part	Description	Qty
A1	 Back cushion(left)	1pc	A2	 Back Cushion(right)	1pc
F	 Console	1pc	E	 Console Back	1pc
1	 	2pcs	2	 	2pcs
3	 	16pcs	4	 	8pcs
5	 	8pcs	6	 	4pcs
7	 	1pc	8	 	2pcs

# Step 1

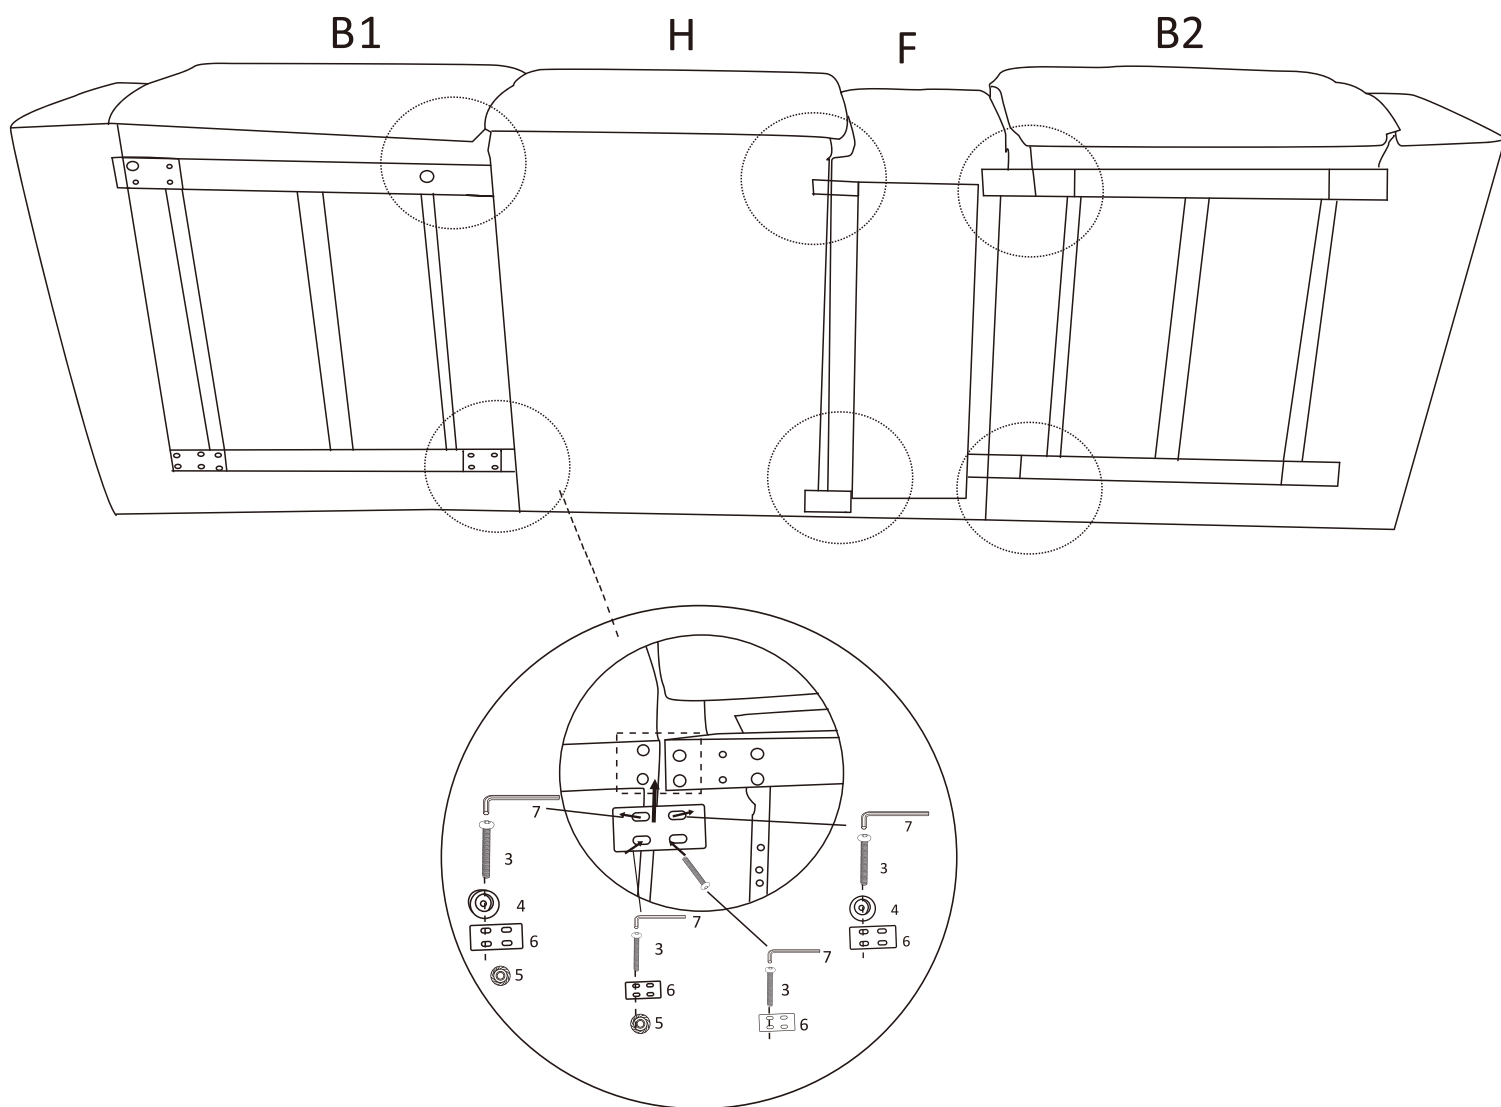

Accessories: Part 3\*24 Part 4\*12 Part 5\*8 Part 6\*6


Operating Procedure:

Connect the Part B1/B2/F/H by using the Part 6. For the convenience to adjust parts connection, never fully tighten the screws until you finish the installation, tighten screws to 80%-90% is enough.

Note: The Part 4 is used around H part and the center console, and Part 5 is used to fix the Part 6 near the chair.

**\* Mounting Three parts 4 horizontally side by side is more stable.**

## step2

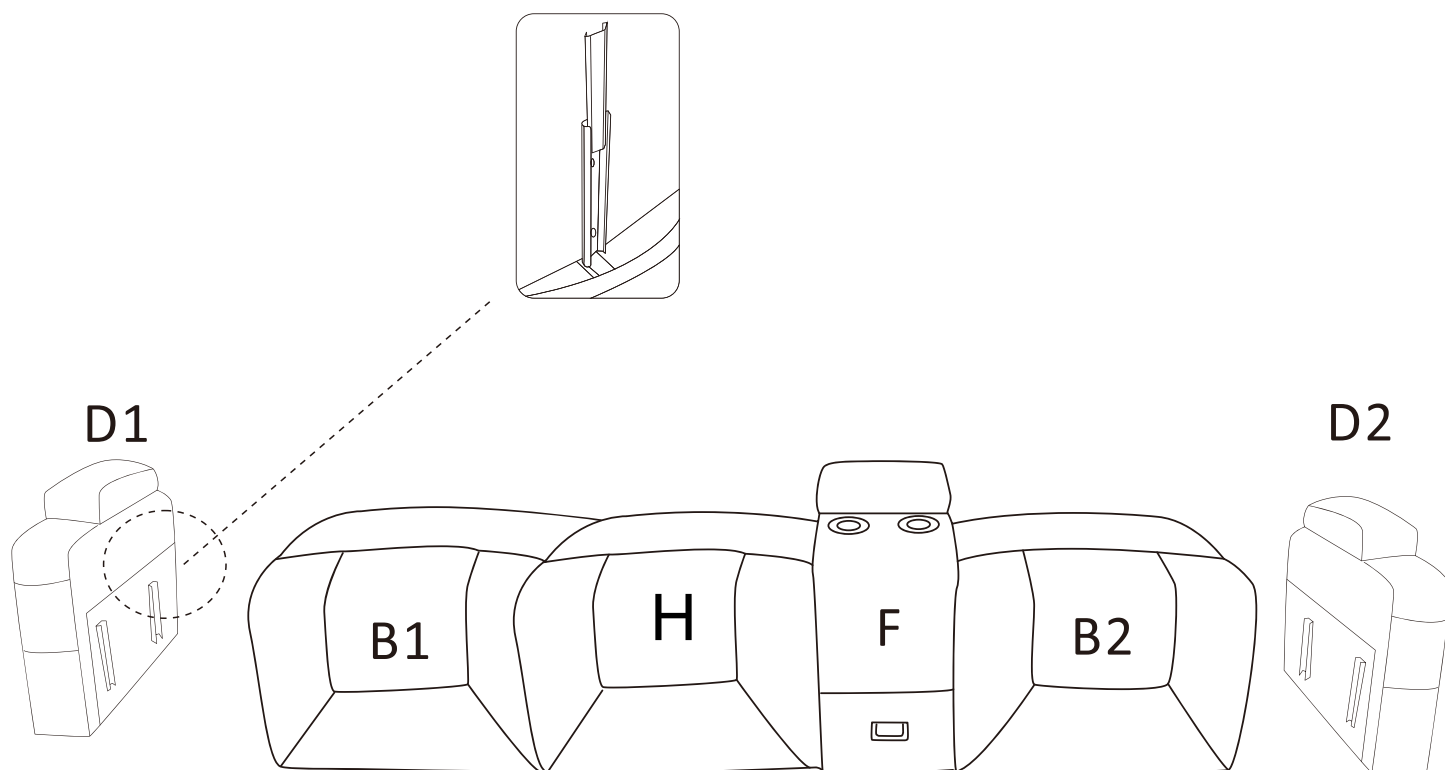


Accessories: Part D1\*1 Part D2\*1

Operating Procedure:

Insert left and right armrest pads (Part D1 Part D2) into the armrests. Align the slot and slide armrest pad forward to ensure it snaps in properly.

## step3

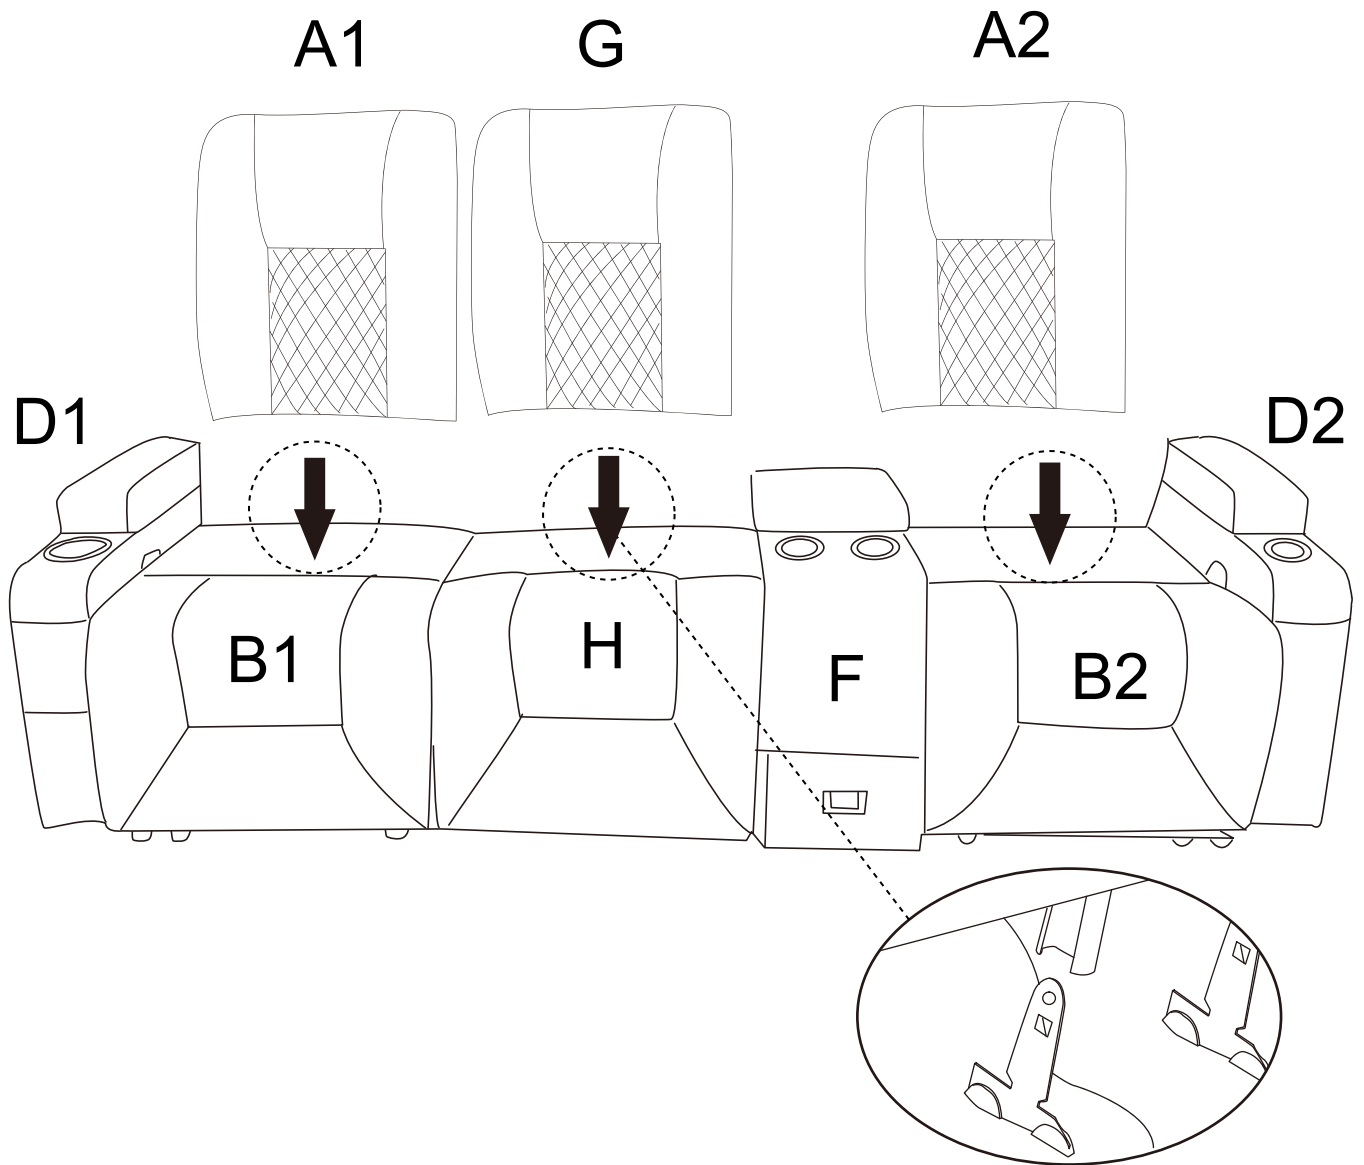


Accessories: Part A1\*1 Part A2\*1 Part G\*1

Operating Procedure:

Align the backrests(Part A1 Part A2 Part G) with the slot on the lbases(Part B1 Part B2 Part H ) separately and insert them firmly, when you hear a click that's ccorrect installation

## step4


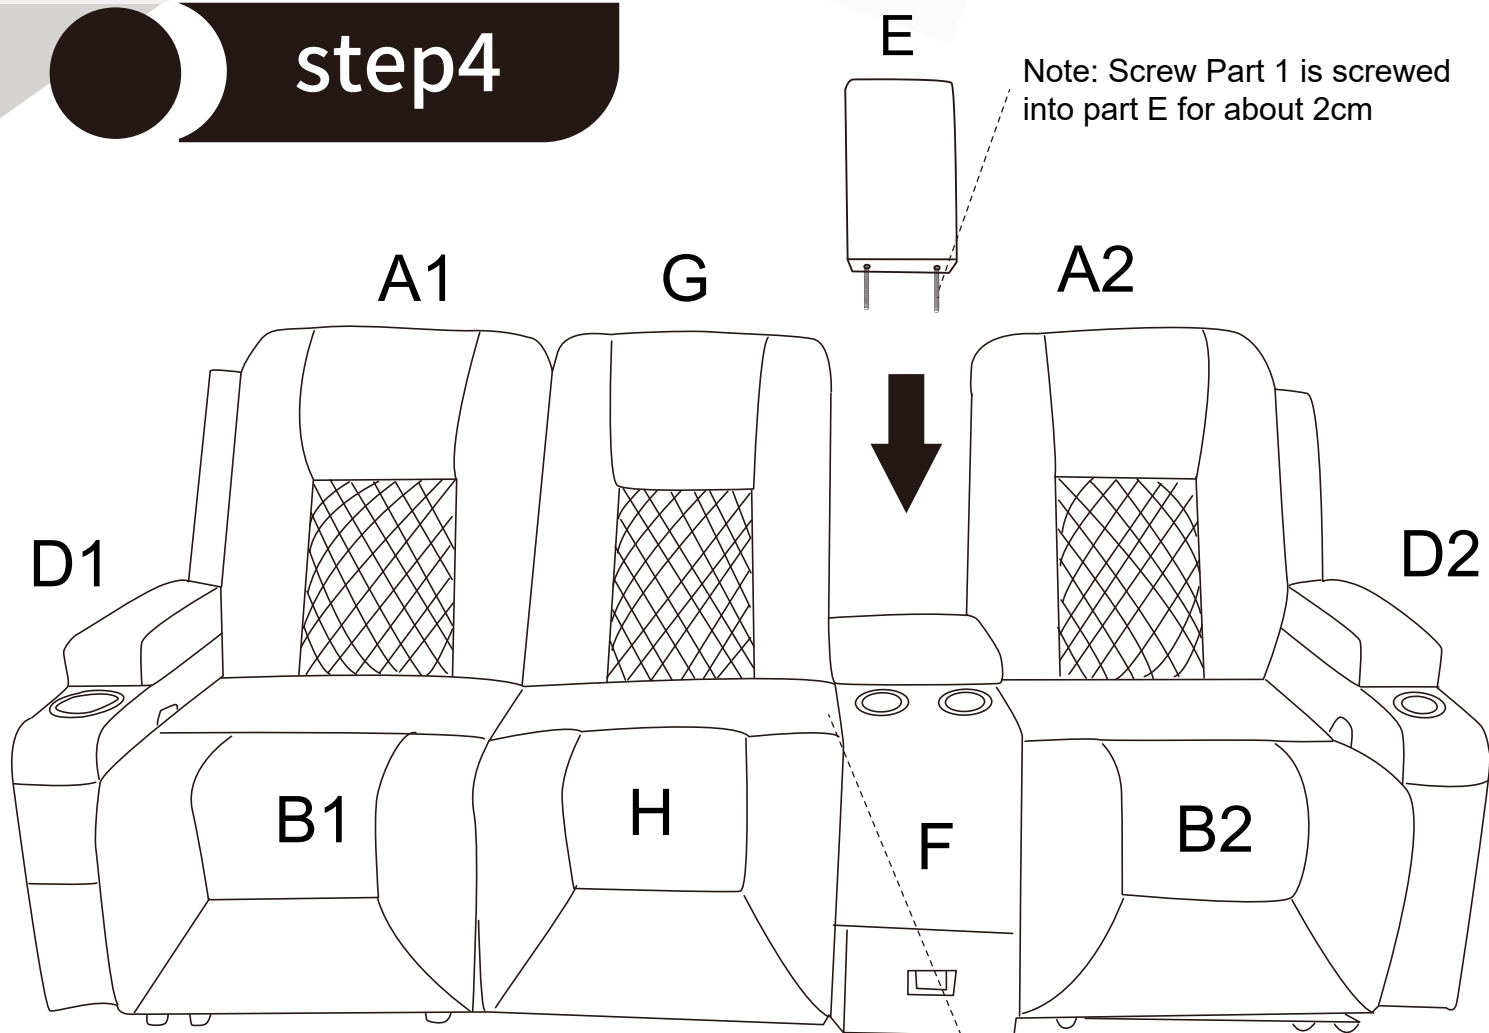


Accessories: Part E\*1 Part 1\*2 Part 2\*2

Operating Procedure:


1. Screw Part 1 screwed into Part E for about 2cm, the remaining parts inserted into Part F.

2. Open the zipper at the back of the Part F, put the Part 2 nut into the Screw Part 1 and fix it.

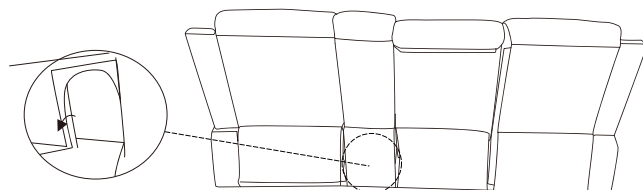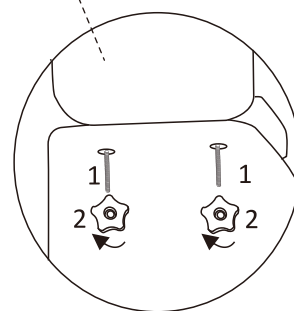

Note: Part E is placed in the inner space of Part F. Open the zipper at the bottom of Part F to take it out.

## step5

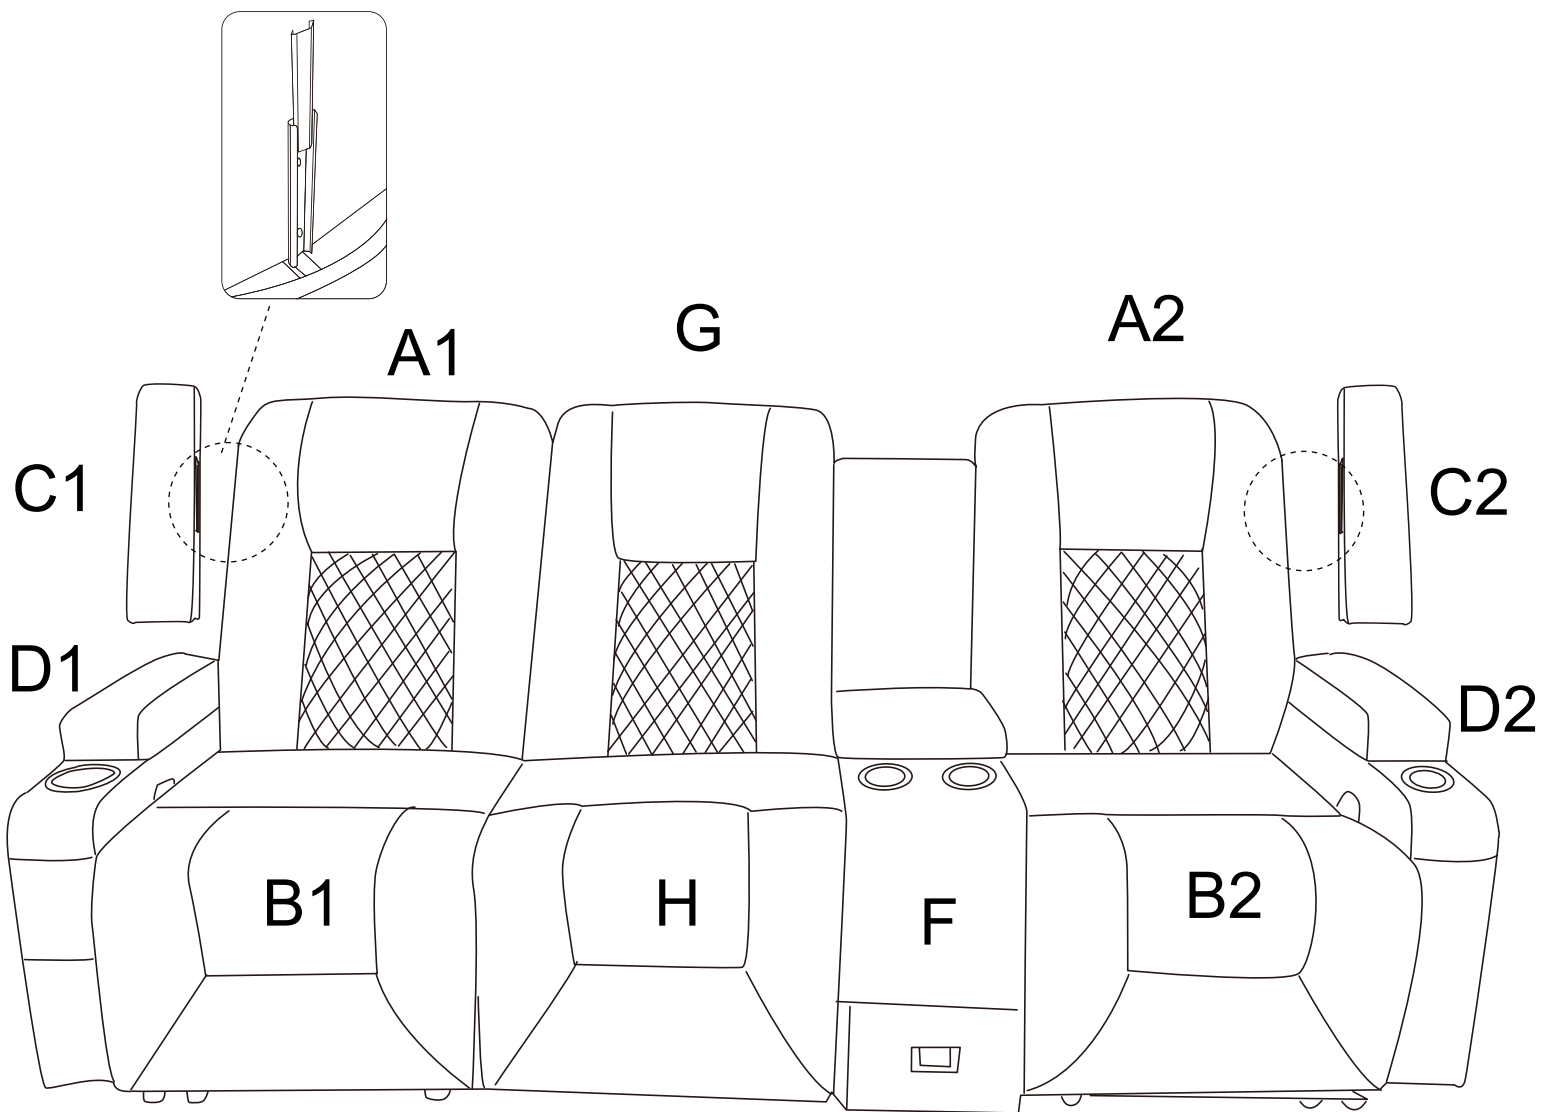


Accessories: Part C1\*1 Part C2\*1

Operating Procedure:

Align the Part C1 and Part C2 with the slot on the backrests (Part A1 Part A2) separately and insert them firmly.



## step6

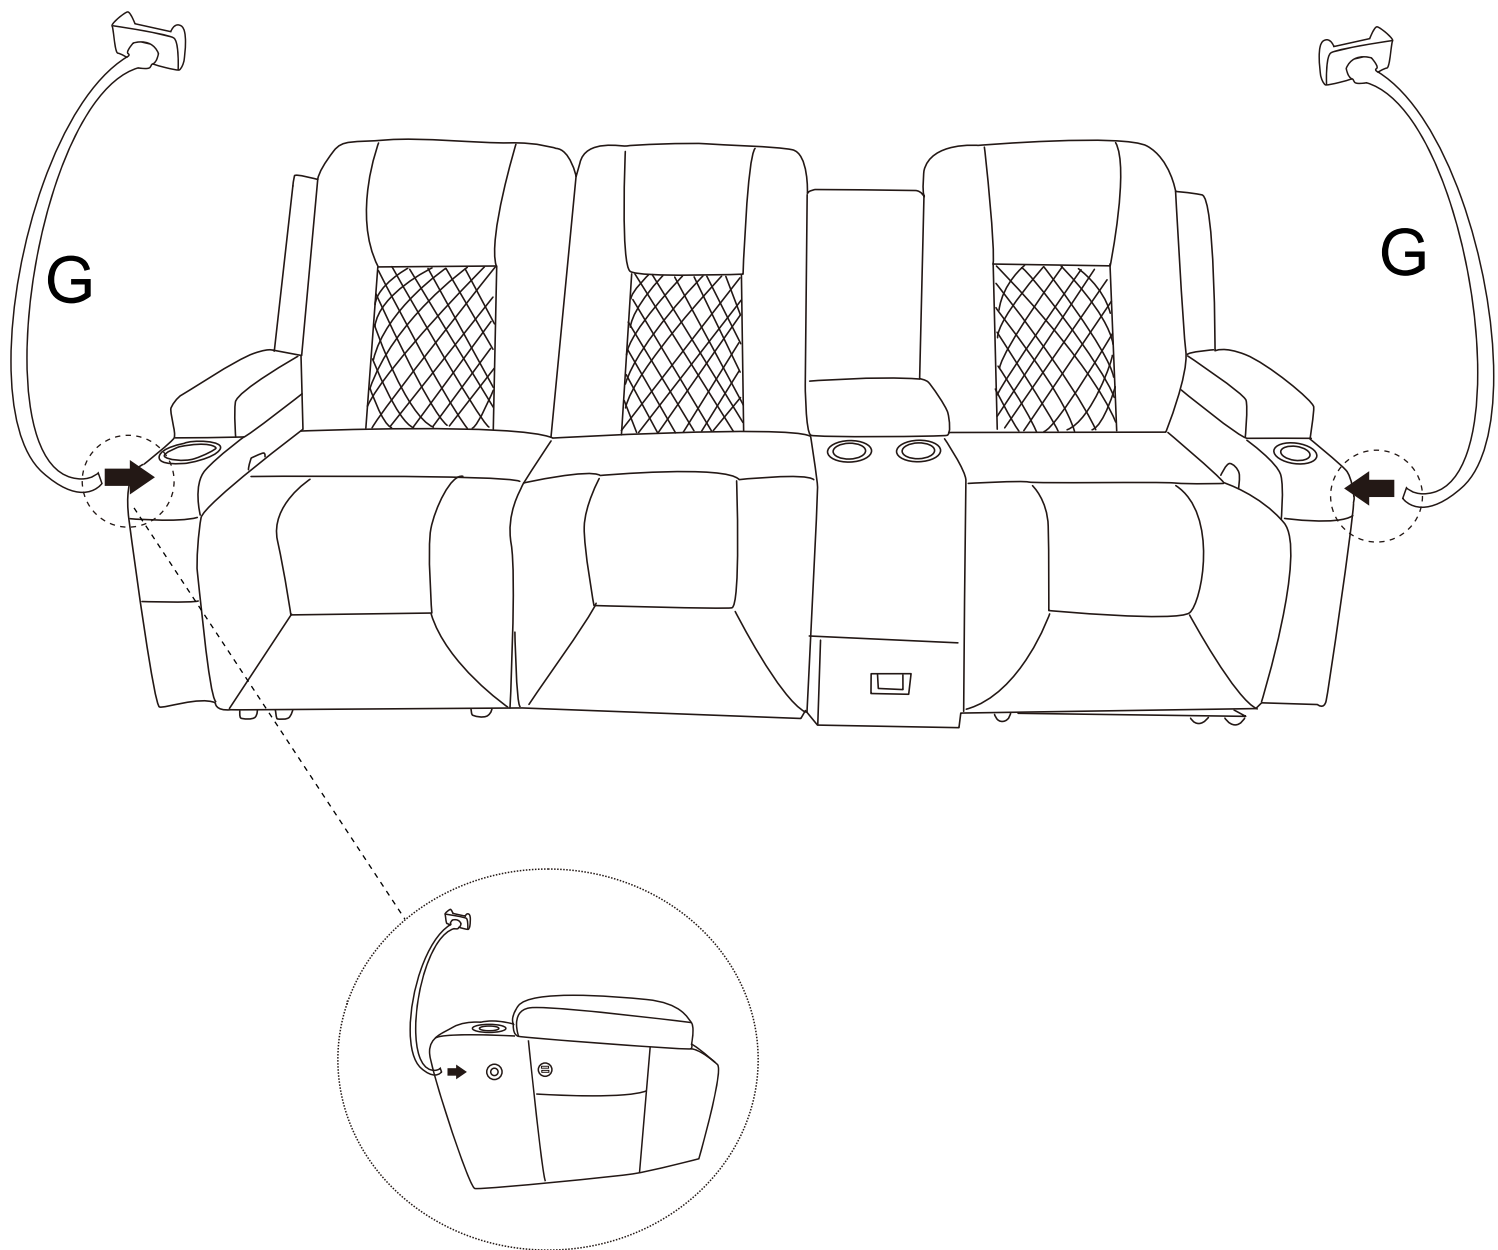


Accessories: Part G \* 2

Operating Procedure:

Connect the Part G to the D1/D2 handrail

## step 7

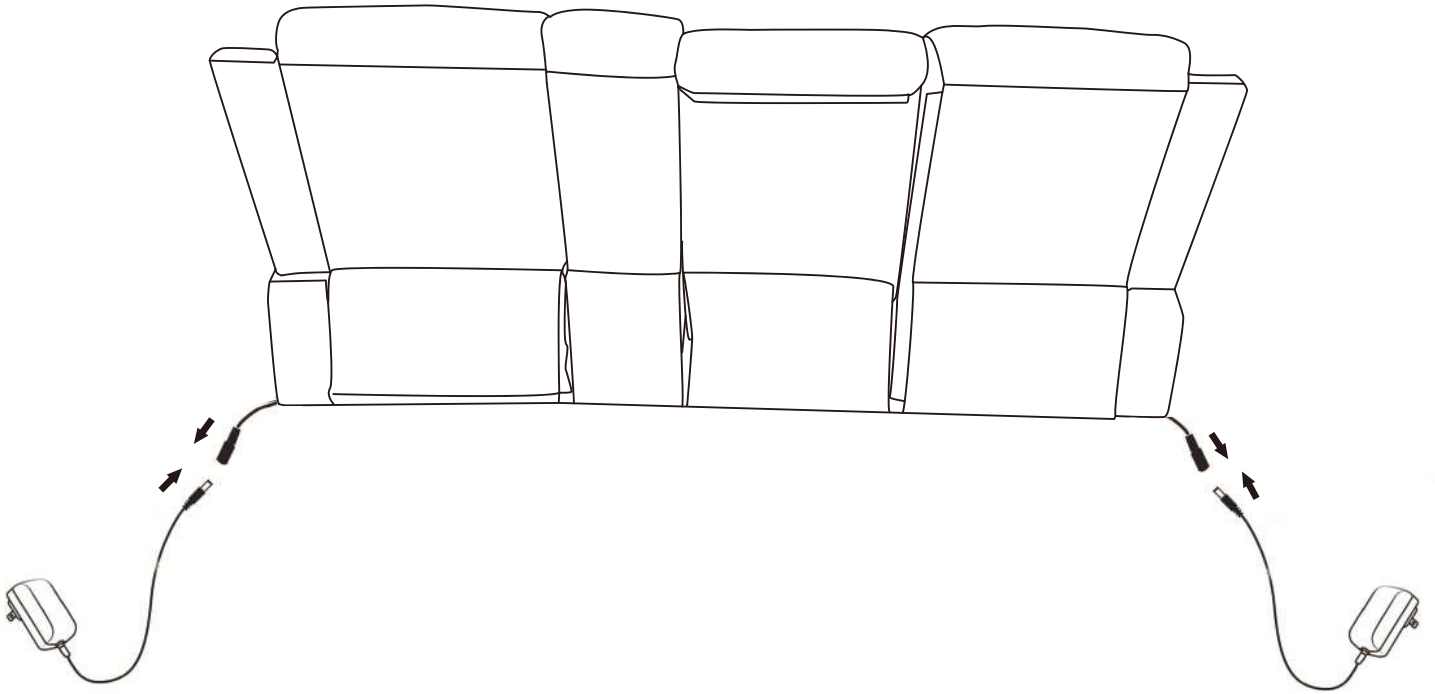

Accessories: Part 8\*2

Operating Procedure:

Connect the wires on the plug, then plug it in and start using it.

## Assembly Completed

