




# Installation & Assembly

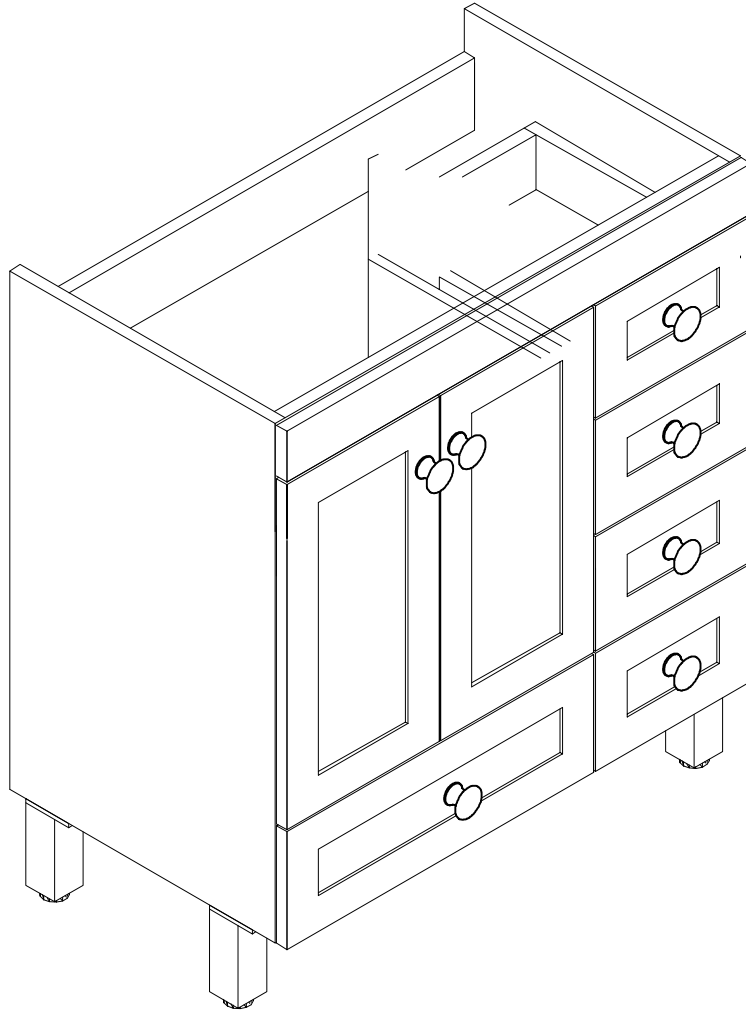

**YOU MAY NEED (NOT SUPPLY)**

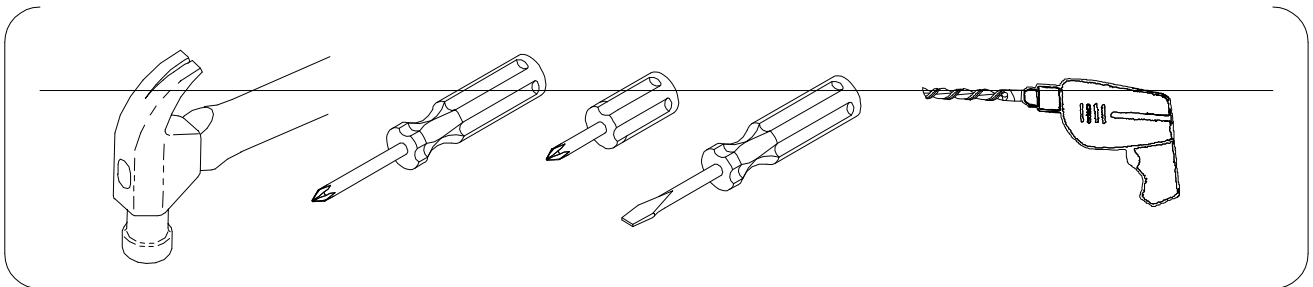


# ASSEMBLY DIAGRAM

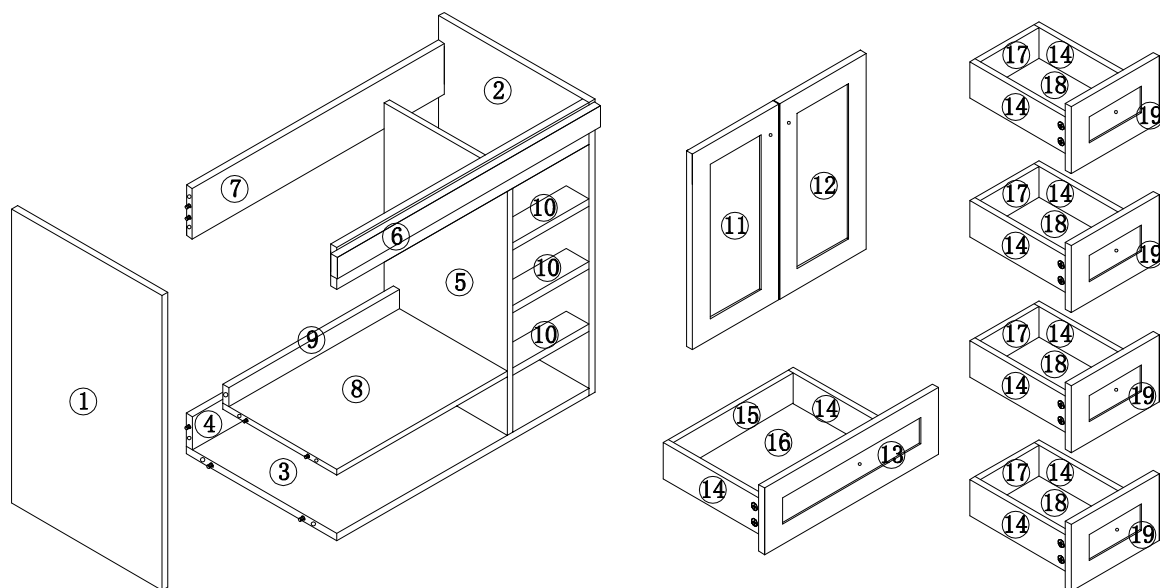


## PARTS LIST

### PARTS LIST

| NO | DESCRIPTION                                                                                                  | QTY | NO | DESCRIPTION                                                                                                   | QTY |
|----|--------------------------------------------------------------------------------------------------------------|-----|----|---------------------------------------------------------------------------------------------------------------|-----|
| ①  | Left side panel           | 1   | ⑪  | Left door panel            | 1   |
| ②  | Right side panel          | 1   | ⑫  | Right door panel           | 1   |
| ③  | Bottom panel              | 1   | ⑬  | Left Drawer front panel    | 1   |
| ④  | Lower back panel          | 1   | ⑭  | Drawer side panel          | 10  |
| ⑤  | Center partition Panel    | 1   | ⑮  | Left Drawer rear panel     | 1   |
| ⑥  | Upper front panel         | 1   | ⑯  | Left Drawer bottom panel   | 1   |
| ⑦  | Upper back panel          | 1   | ⑰  | Right Drawer rear pane     | 4   |
| ⑧  | Inner shelf panel         | 1   | ⑱  | Right Drawer bottom panel  | 4   |
| ⑨  | Left laminate rear panel  | 1   | ⑲  | Right Drawer front panel   | 4   |
| ⑩  | Right front center plate  | 3   |    |                                                                                                               |     |

## PARTS LIST


### HARDWARE LIST

| NO | DESCRIPTION                                                                                                       | QTY | NO | DESCRIPTION                                                                                              | QTY |
|----|-------------------------------------------------------------------------------------------------------------------|-----|----|----------------------------------------------------------------------------------------------------------|-----|
| A  | Three-in-one eccentric wheel  | 68  | G  | 4*23mm screw        | 2   |
| B  | Three-in-one connecting rod   | 68  | H  | 4*18mm screw        | 5   |
| C  | Three-in-one sticker          | 68  | I  | Door handle         | 2   |
| D  | 8*40mm wood dowel pins        | 26  | J  | Drawer handle       | 5   |
| E  | Drawer slides                 | 10  | K  | Aluminum alloy leg  | 4   |
| F  | 4*16mm screw                 | 96  | L  | Door hinge          | 4   |
|    |                                                                                                                   |     |    |                                                                                                          |     |
|    |                                                                                                                   |     |    |                                                                                                          |     |

### CAUTION:


Please confirm the parts list before installation

## STEP 1


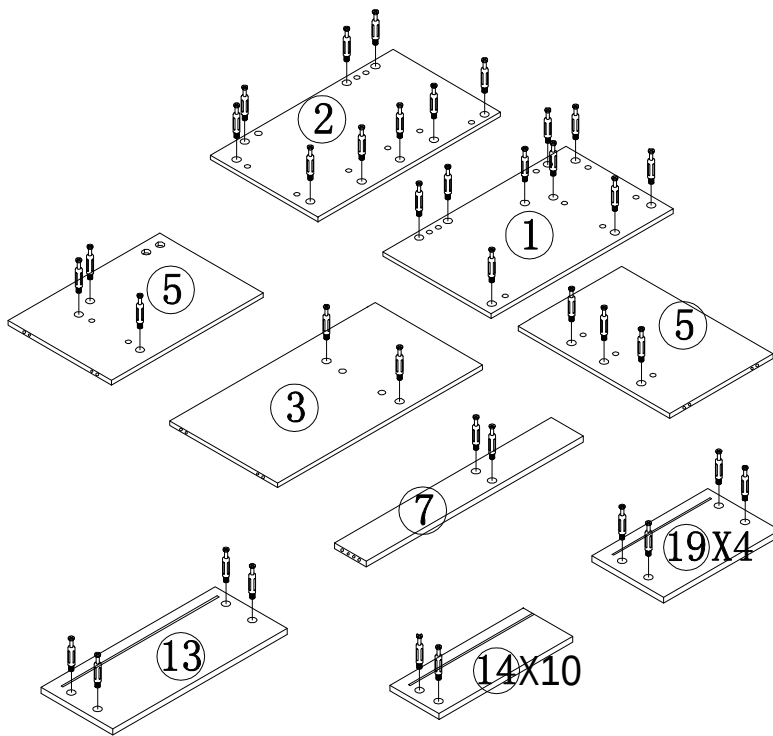


| HARDWARE LIST                                                                                                               |                                                                                     |
|-----------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| Three-in-one connecting rod<br>B  68 PCS |  |


1. Put the three-in-one connecting rod in the  $\varnothing 10\text{mm}$  hole of the following panels and tighten them with a cross screwdriver or an electric tool.

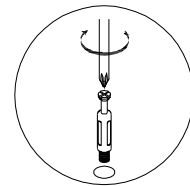

## STEP 2

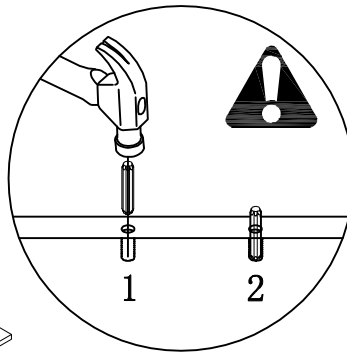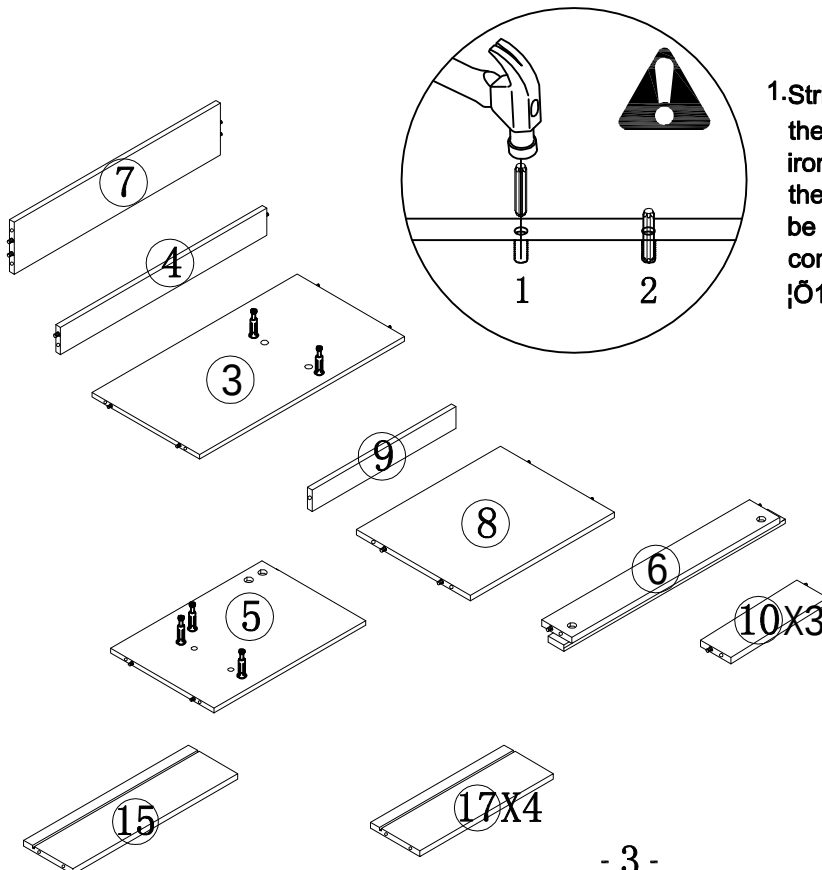


1. Strike the  $\varnothing 8 \times 40\text{mm}$  wood dowel pin into the  $\varnothing 8\text{mm}$  hole of the above panels with an iron hammer. Please note that the hole of the three-in-one connecting rod should also be 8mm. The hole of the three-in-one connecting rod connects to the hole of  $\varnothing 15\text{mm}$  three-in-one eccentric wheel.

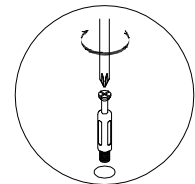

| HARDWARE LIST                                                                                                                |                                                                                       |
|------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
| Three-in-one connecting rod<br>B  5 PCS |  |

| HARDWARE LIST                                                                                                            |                                                                                       |
|--------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
| 8*40mm wood dowel pins<br>D  26 PCS |  |

## STEP 3

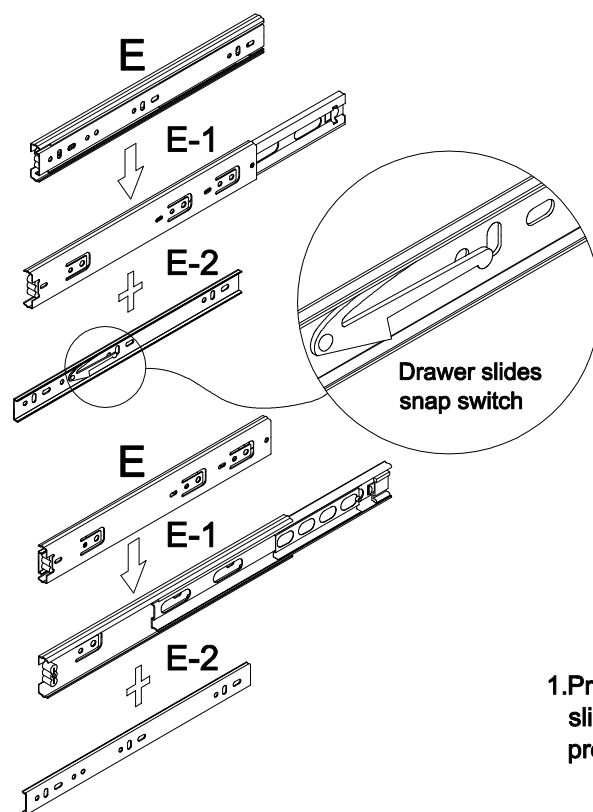


| HARDWARE LIST |  |
|---------------|--|
| Drawer slides |  |
| E 10 PCS      |  |

1. Press the slide snap switch, disassemble slide blocks and put them in a place properly for further use.



## STEP 4

1. Fix the drawer slide to the side panel with 4\*16mm screws.

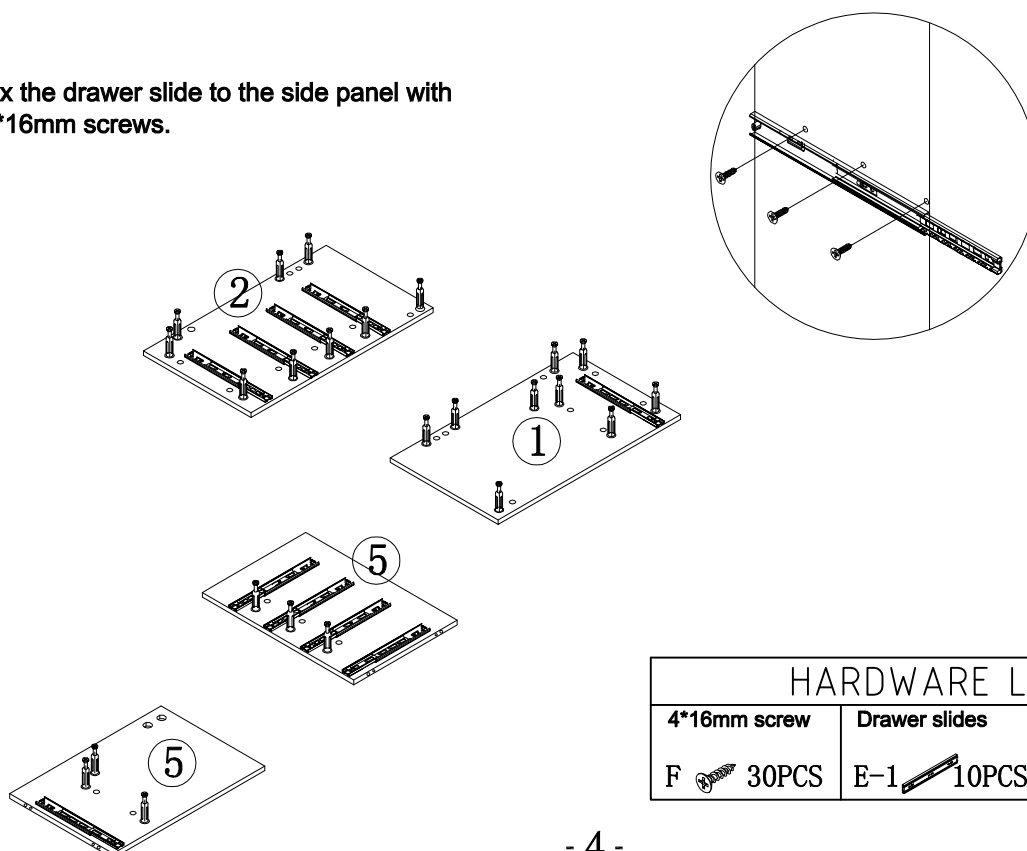


| HARDWARE LIST |               |  |
|---------------|---------------|--|
| 4*16mm screw  | Drawer slides |  |
| F 30PCS       | E-1 10PCS     |  |

## STEP 5

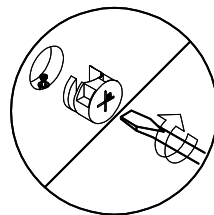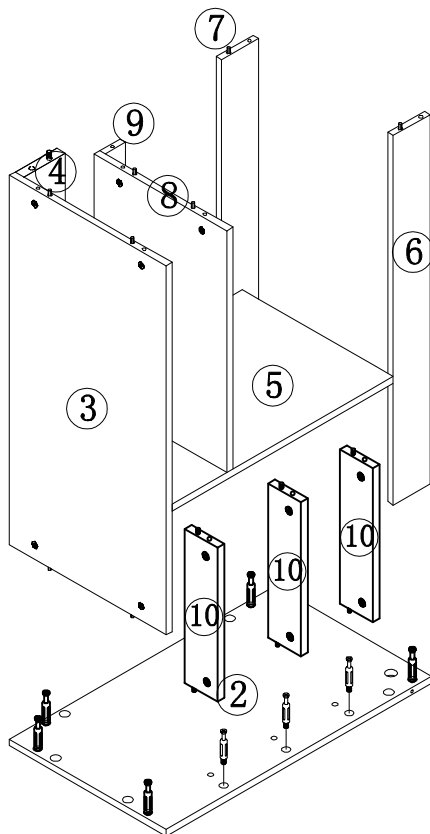

1. Connect No. 3-6-7-8 panel to No.2 panel tightly with the three-in-one eccentric wheel.


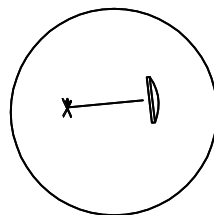


2. Cover the mounting hole of the eccentric wheel with a three-in-one sticker.


### HARDWARE LIST

|                                                                                                                               |                                                                                                                         |                                                                                      |
|-------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|
| Three-in-one<br>eccentric wheel<br>A  12PCS | Three-in-one<br>sticker<br>C  12PCS |  |
|-------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|

## STEP 6

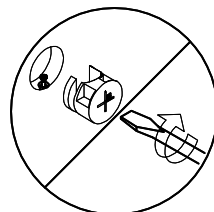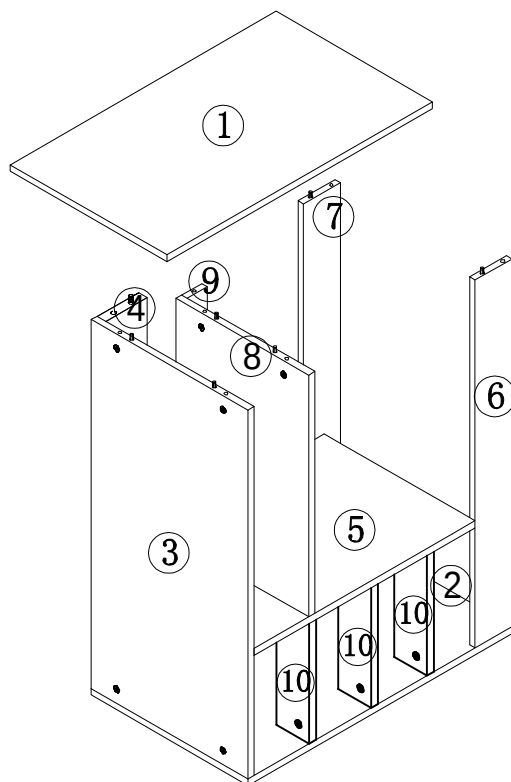

1. Connect No. 1 panel to No. 3-4-6-7-8 panel tightly with the three-in-one eccentric wheel.

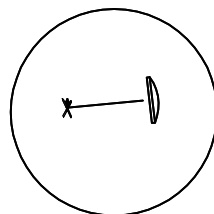


2. Cover the mounting hole of the eccentric wheel with a three-in-one sticker.

### HARDWARE LIST

|                                                                                                                               |                                                                                                                         |                                                                                       |
|-------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
| Three-in-one<br>eccentric wheel<br>A  8PCS | Three-in-one<br>sticker<br>C  8PCS |  |
|-------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|

## STEP 7

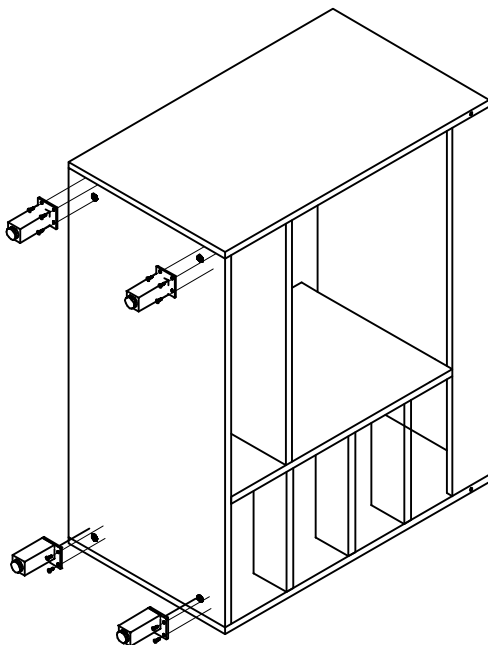

1. Fix feet of the cabinet with 4\*16mm screws.

### HARDWARE LIST

4\*16mm screw



F  12PCS

Aluminum alloy leg


K  4PCS



## STEP 8

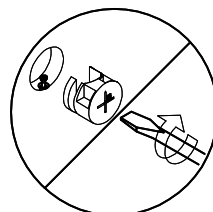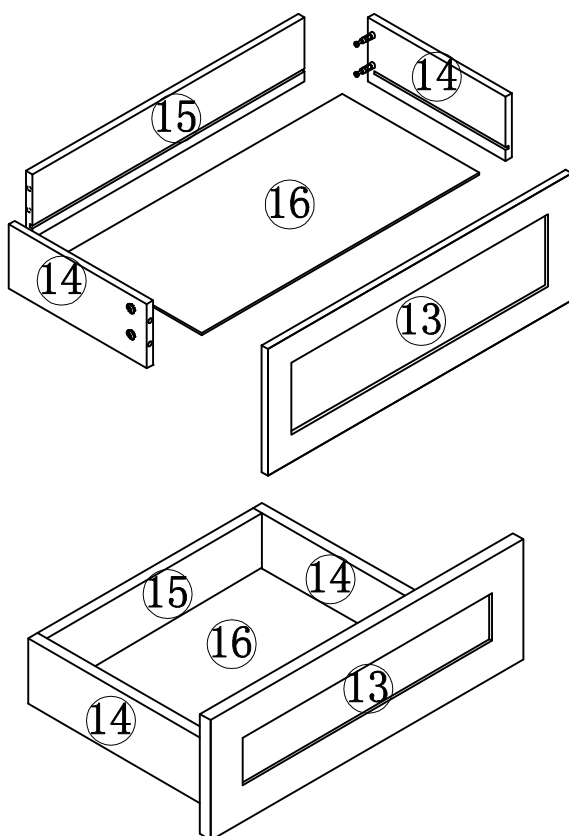

1. Install No. 12-14-15-16 panels with the three-in-one eccentric wheel tightly.

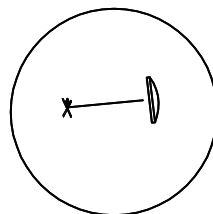

2. Cover the mounting hole of the eccentric wheel with a three-in-one sticker.

### HARDWARE LIST

Three-in-one eccentric wheel



A  8PCS

Three-in-one sticker


C  8PCS



## STEP 9

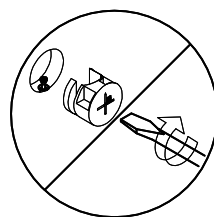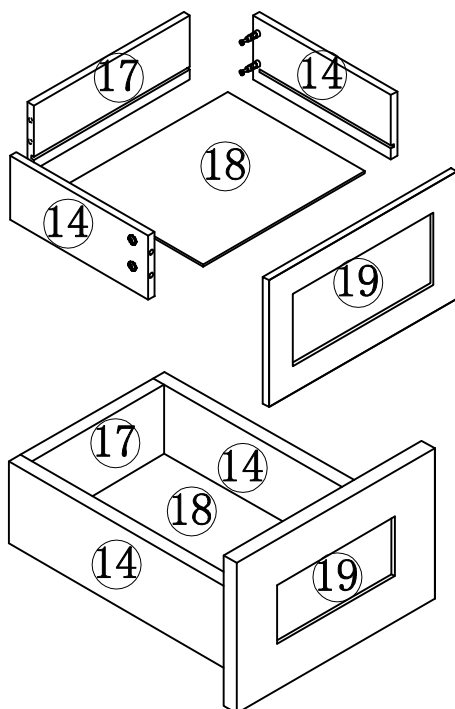

1. Install No. 13-14-17-18 panels with the three-in-one eccentric wheel tightly.


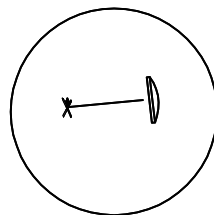


2. Cover the mounting hole of the eccentric wheel with a three-in-one sticker.

### HARDWARE LIST

|                                                                                                                            |                                                                                                                      |                                                                                      |
|----------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|
| Three-in-one eccentric wheel<br>A  32PCS | Three-in-one sticker<br>C  32PCS |  |
|----------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|

## STEP 10

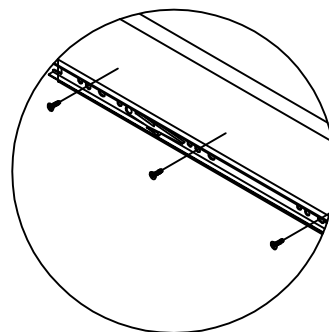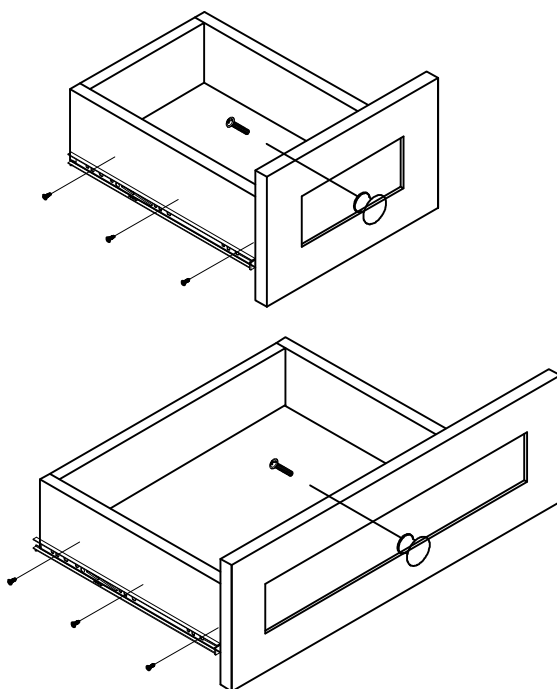



1. Lock the spare drawer slide block to the drawer.

2. Install the drawer handle with 4\*18 handle screws.


### HARDWARE LIST

|                                                                                                             |                                                                                                                  |                                                                                       |
|-------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
| 4*16mm screw<br>F  30PCS | Drawer slides<br>E-2  10PCS |  |
| 4*18mm screw<br>H  5PCS  | Drawer handle<br>J  5PCS    |                                                                                       |

## STEP 11

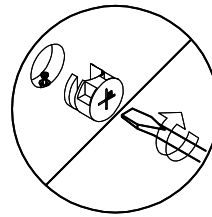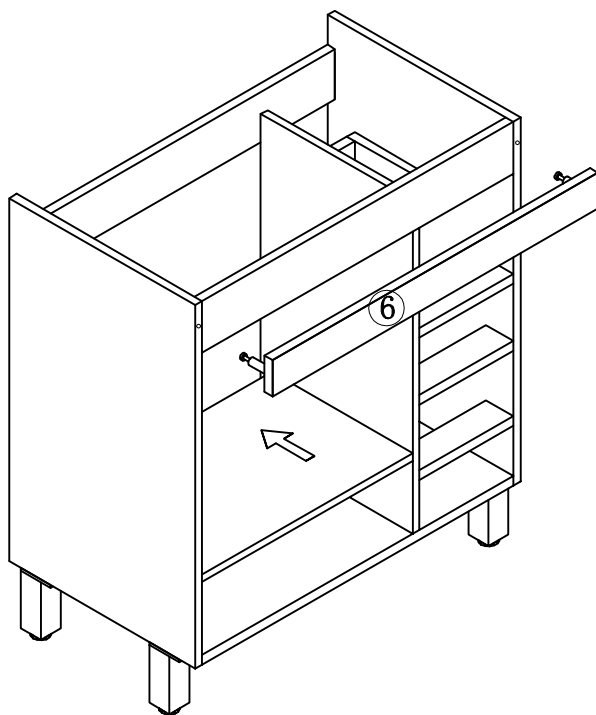

1. Install No.9 panels with the three-in-one eccentric wheel tightly.

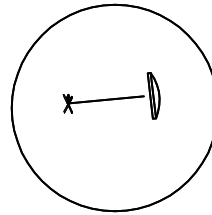

2. Cover the mounting hole of the eccentric wheel with a three-in-one sticker.



### HARDWARE LIST

Three-in-one  
eccentric wheel  
A  2PCS

Three-in-one  
sticker  
C  2PCS






## STEP 12

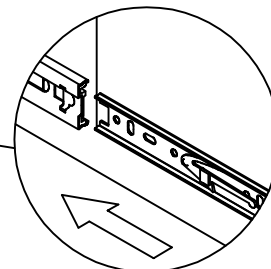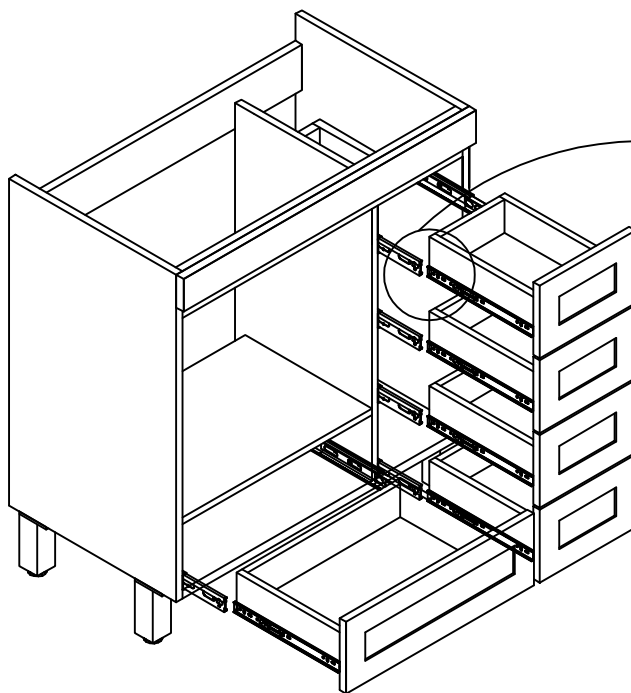


1. Align slide block with the trough on the guide rail, press the snap switch and press it forward to install the drawer.

2. Install drawer handles.


## STEP 13

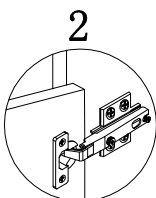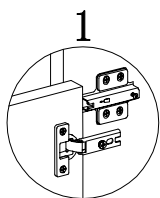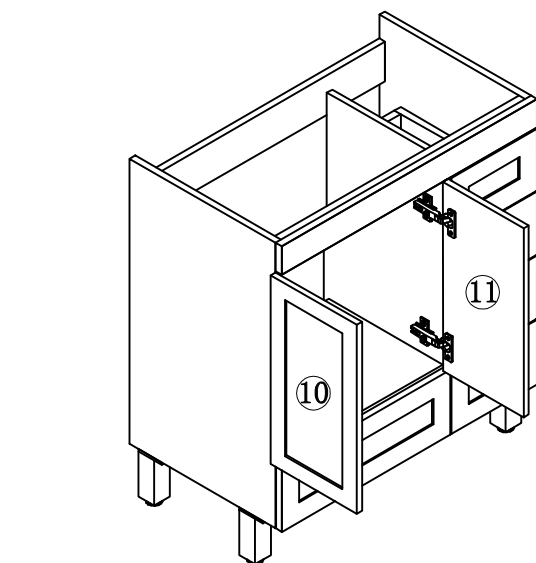


3. Install the hinge cup on the door panel to the hinge of the side panel.

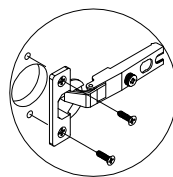

1. Install the hinge cup to the door panel with 4\*16mm screws.

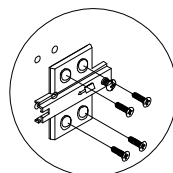

2. Install the hinge to the side panel with 4\*16mm screws.

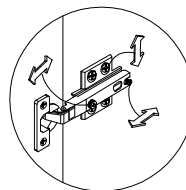

4. Adjust the door panel clearance.


### HARDWARE LIST

4\*16mm screw



Door hinge

F  24PCS

L  4PCS



## STEP 14

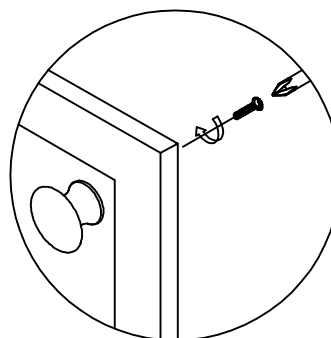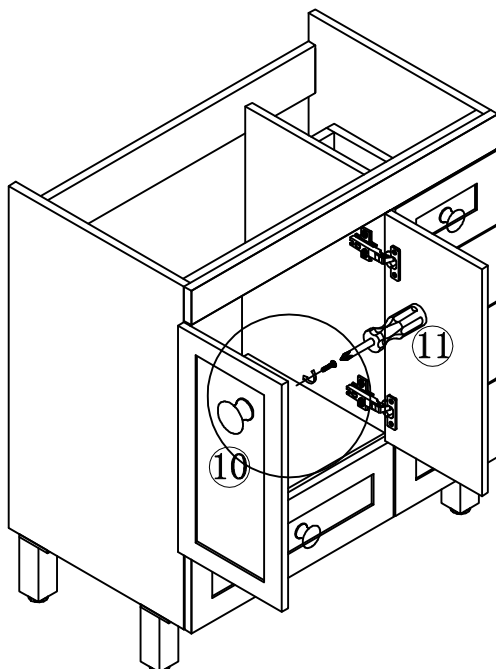

1. Install the door handle with 4\*23 handle screws.

### HARDWARE LIST

4\*23mm screw

Door handle

G  2PCS

I  2PCS





**Choking hazard-Small Parts :** This unit contains small parts, not for children under 3 years.

**Tip-over hazard :** Secure finished unit to wall stud using L-Bracket and wall screw (#10\*1.5"W/out provided). If a wall stud is not neccessible , Consault your local hardware store for appropriate mounting hardware . Failure to properly install will result in product collapse or tip-over. Serious injury can occur .