


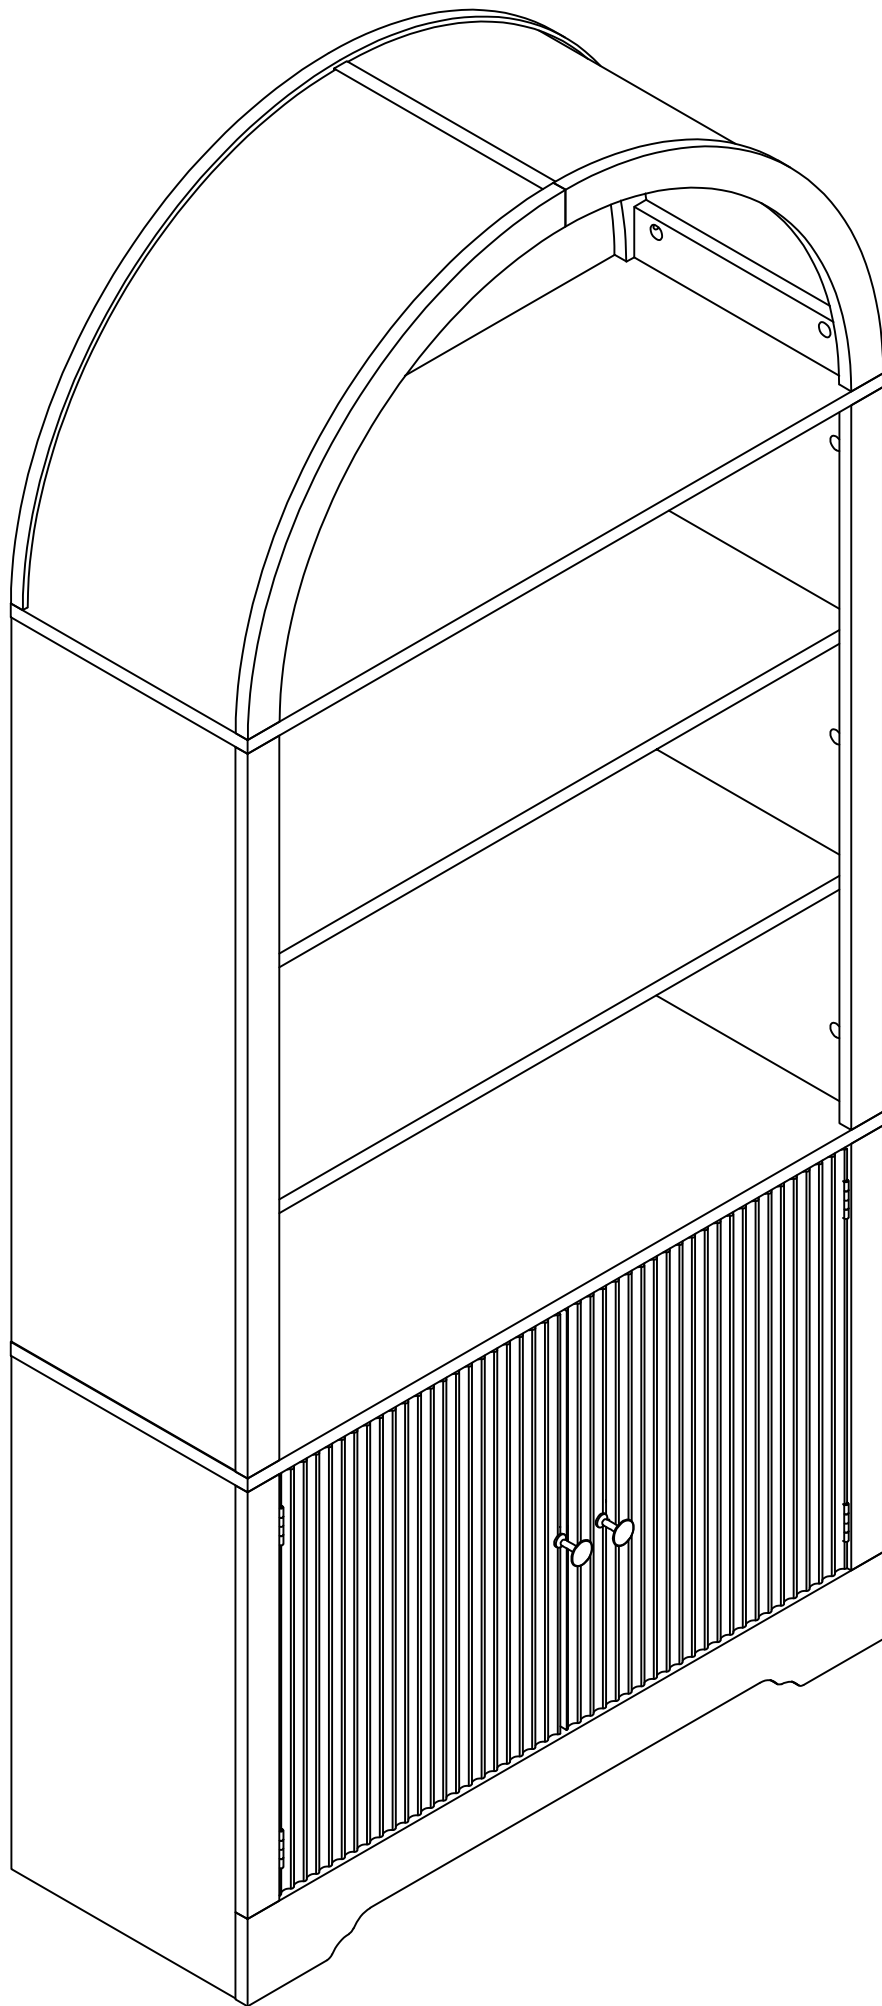
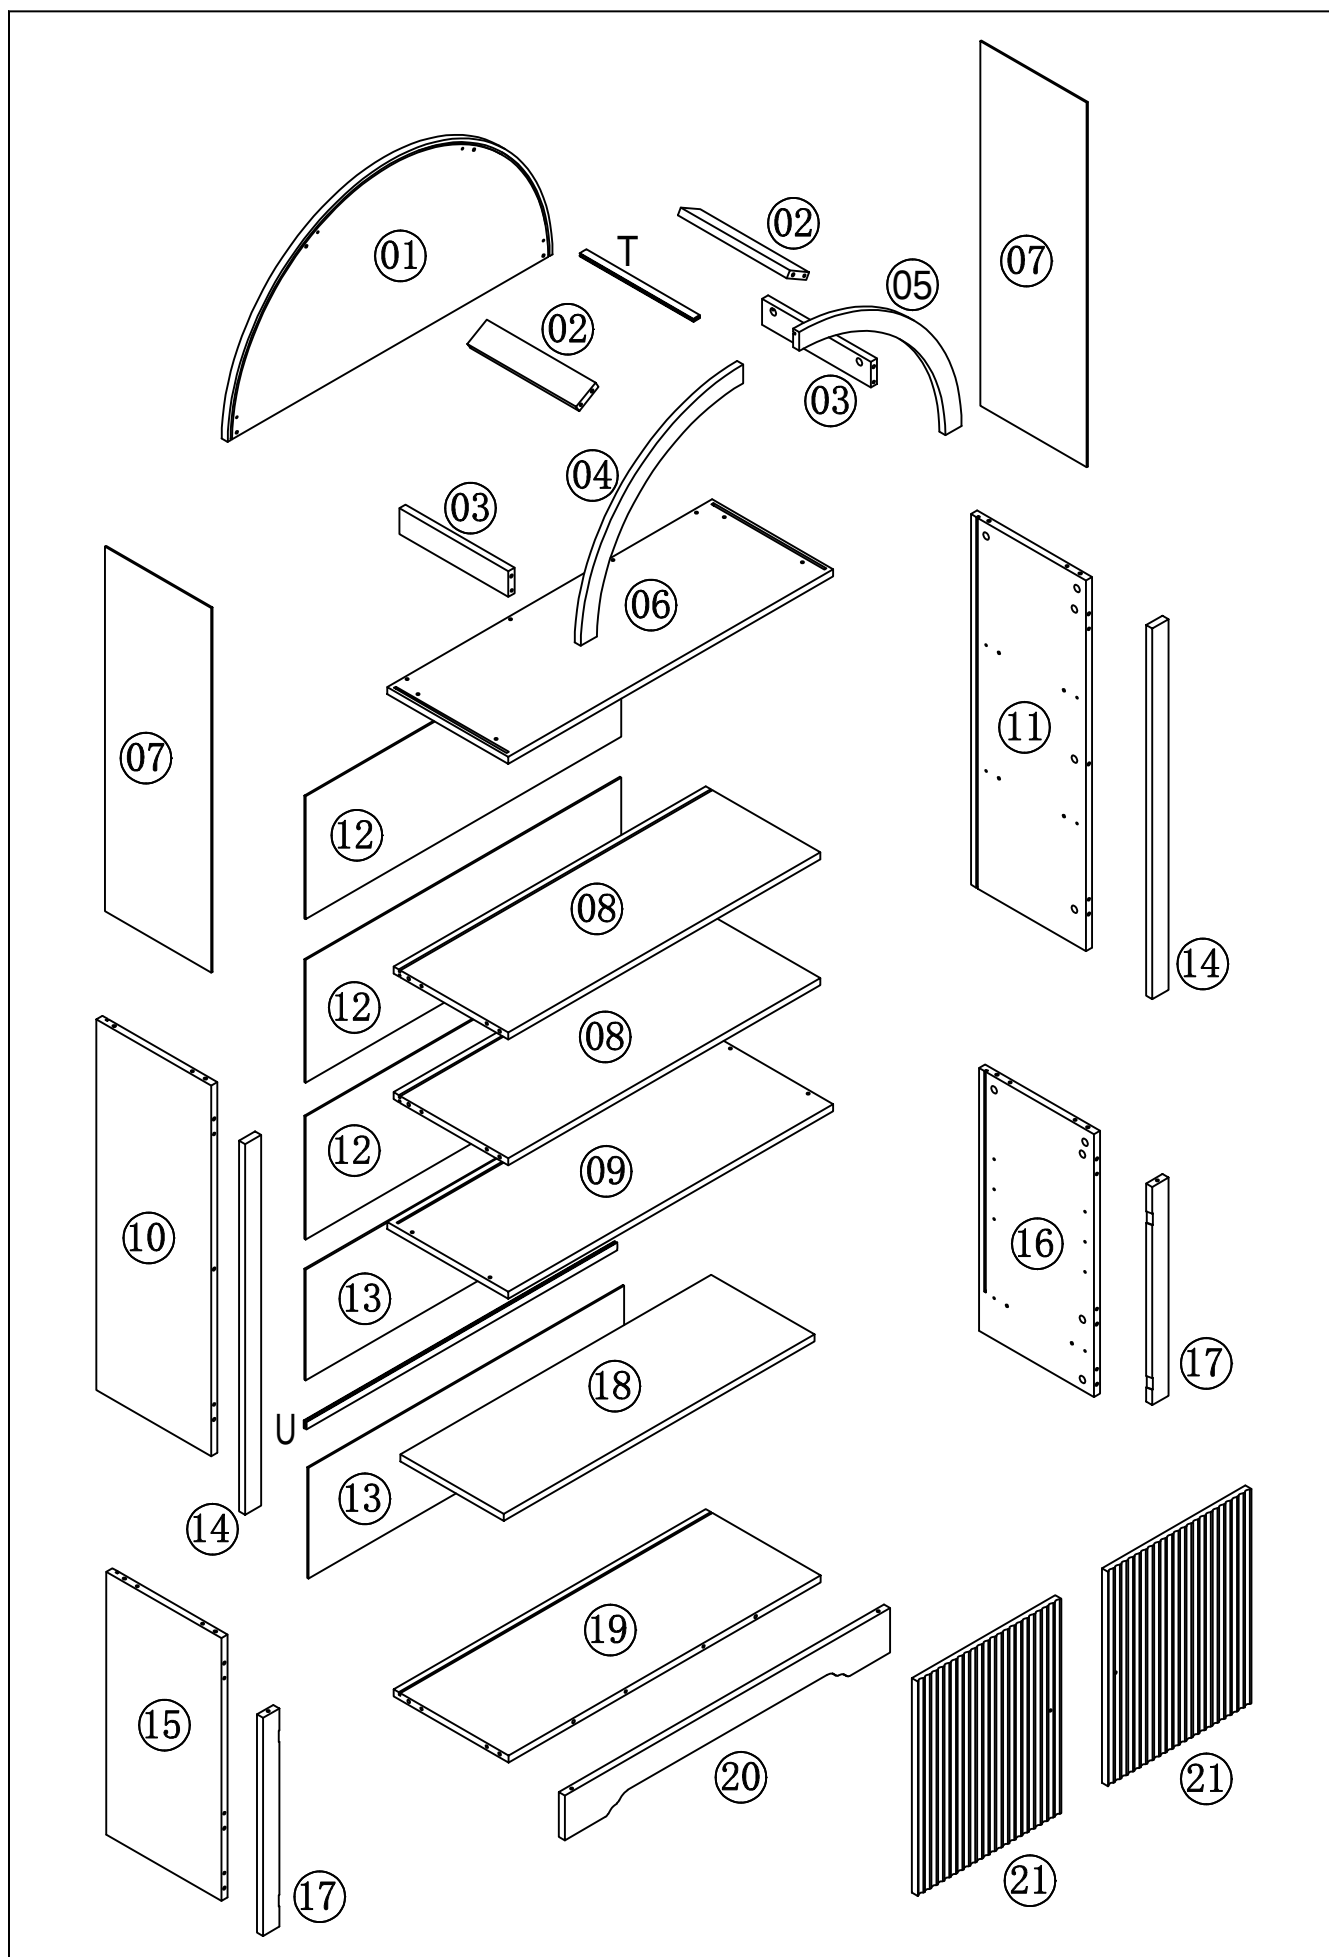
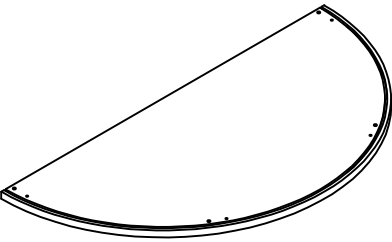
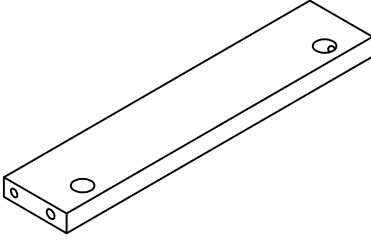
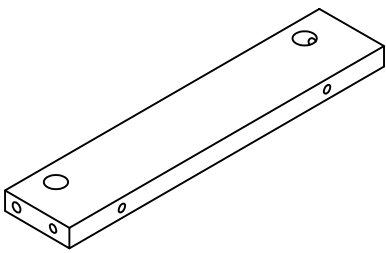
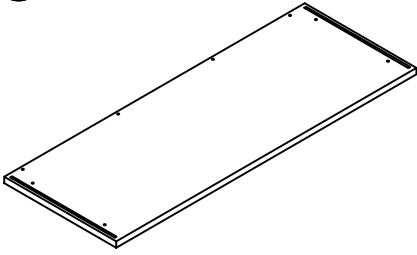
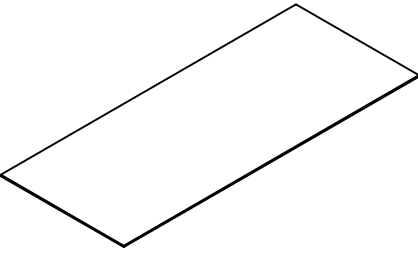
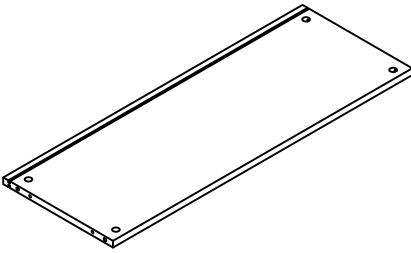
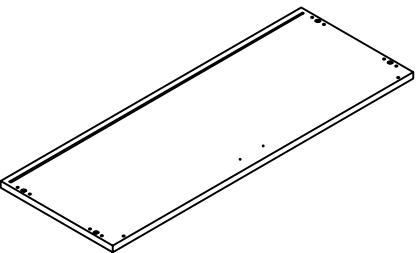
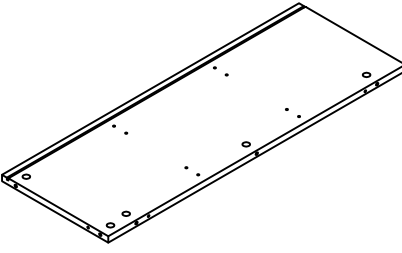
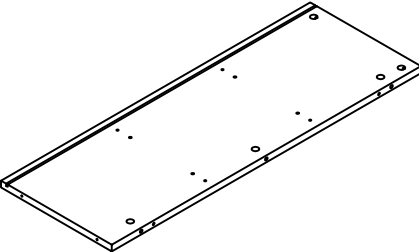
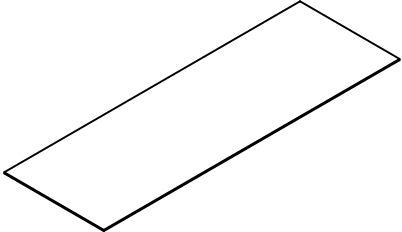
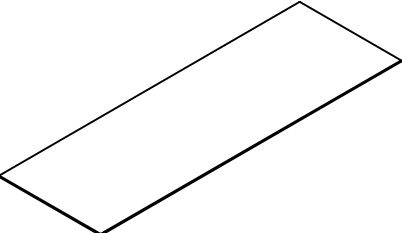


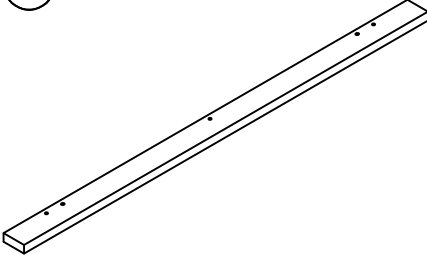

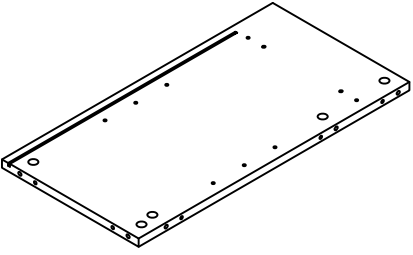


①  1 PC	②  2 PCS	③  2 PCS
④  1 PC	⑤  1 PC	⑥  1 PC
⑦  2 PCS	⑧  2 PCS	⑨  1 PC
⑩  1 PC	⑪  1 PC	⑫  3 PCS
⑬  2 PCS	⑭  2 PCS	⑮  1 PC

①⑥

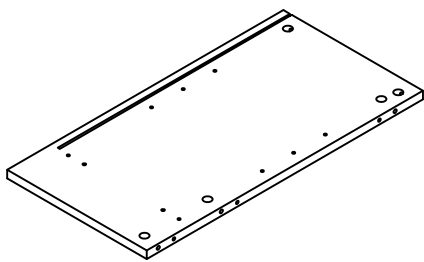


1 PC

①⑦

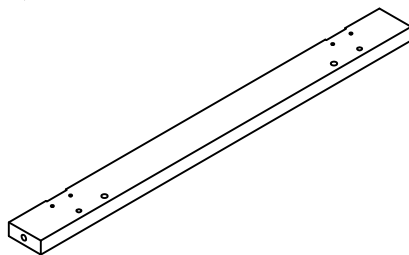


2 PCS

①⑧

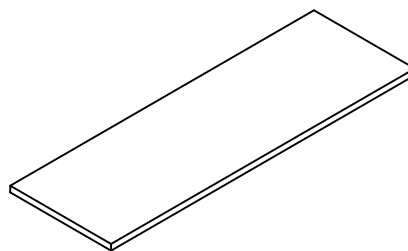


1 PC

①⑨

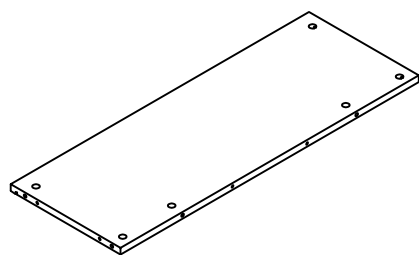


1 PC

②⑦




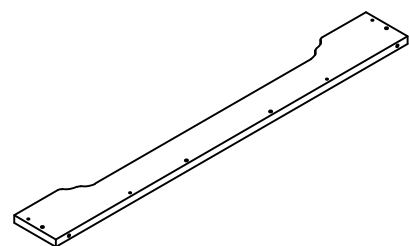




















1 PC





②①

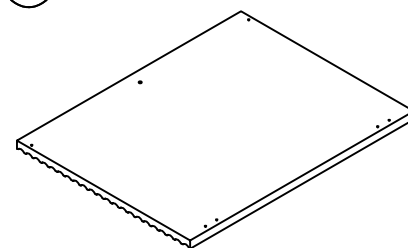


2 PCS

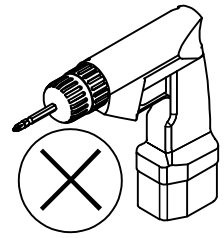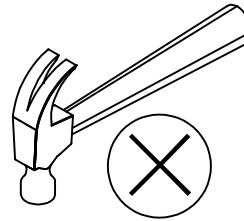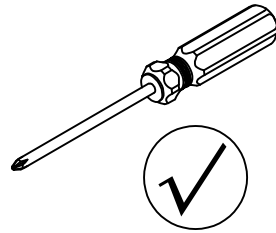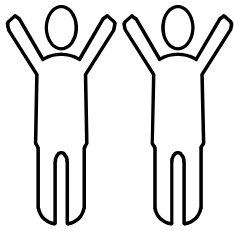

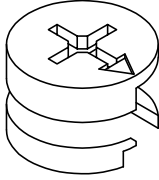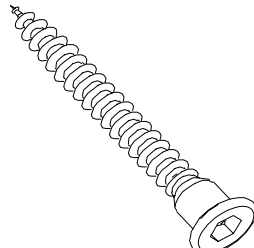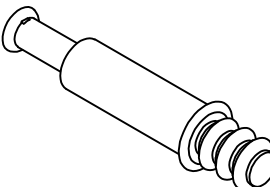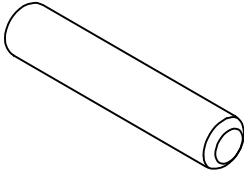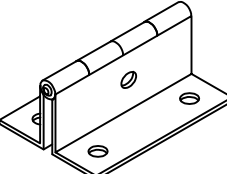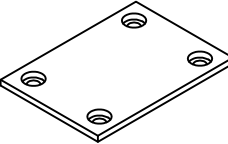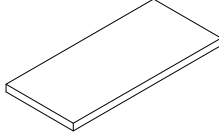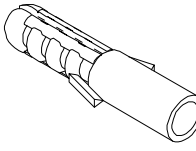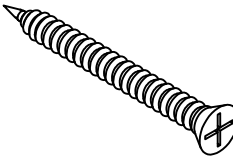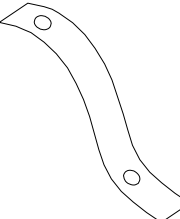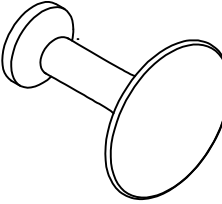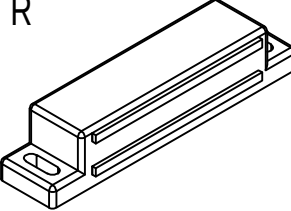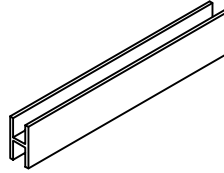A  Ø15*10mm 42PCS	B  M5*45mm 12PCS	C  Ø6*35mm 42PCS	D  Ø6*30mm 44PCS
E  4mm 1PC	F  41*15*1 4PCS	G  M4*18mm 2PCS	H  13*13*11 36PCS
I  40*28*1 1PC	J  M3*16mm 39PCS	K  M3*12mm 30PCS	L  25*11*3mm 6PCS
M  M8*37mm 1PC	N  M4*35mm 1PC	O  205*25 1PC	P  17*12*13 4PCS
Q  Ø28*24 2PCS	R  74*16 1PC	S  34*12*1mm 2PCS	T  268*12*6 1PC

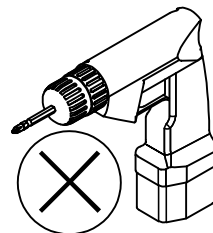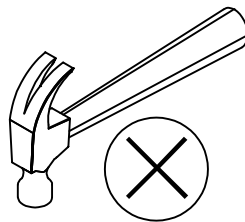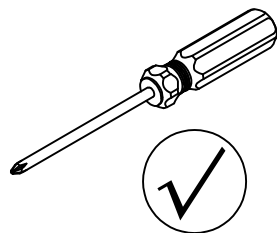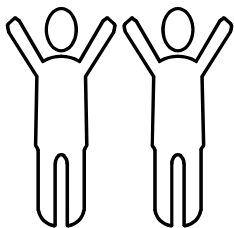


U

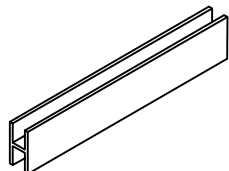


768*12*6

1PC


STEP1

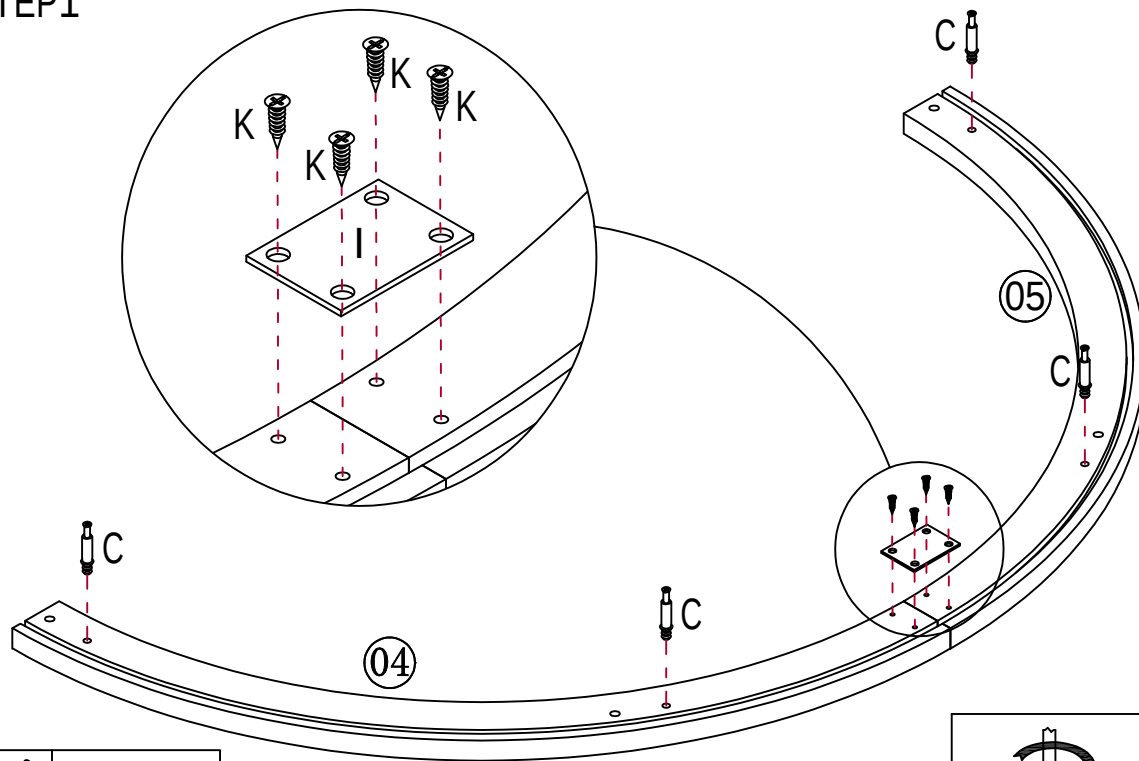


	C*4PCS
	K*4PCS
	I*1PC

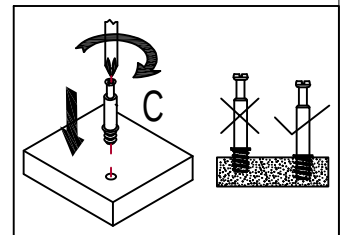



STEP2

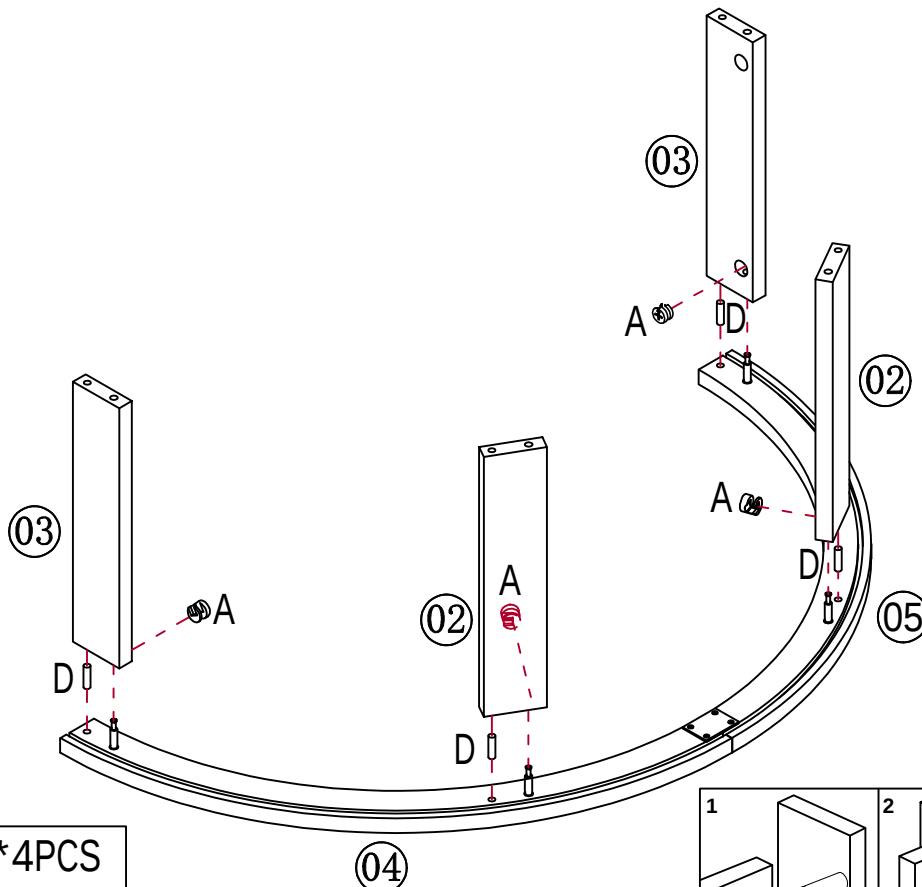

	A*4PCS
	D*4PCS

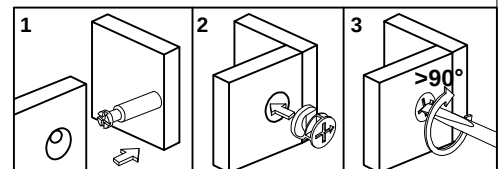


STEP3

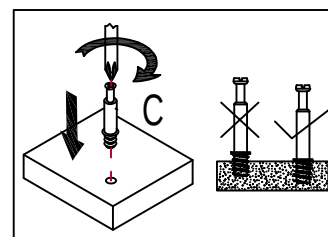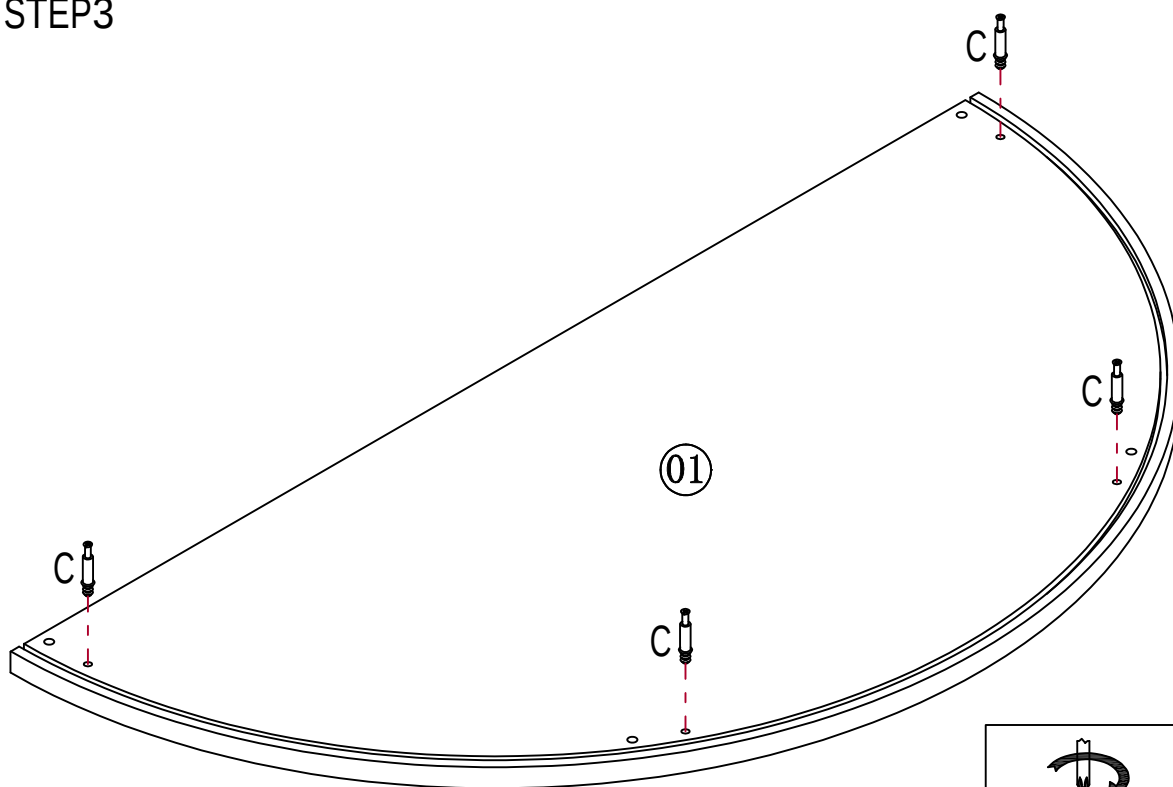

C*4PCS


STEP4

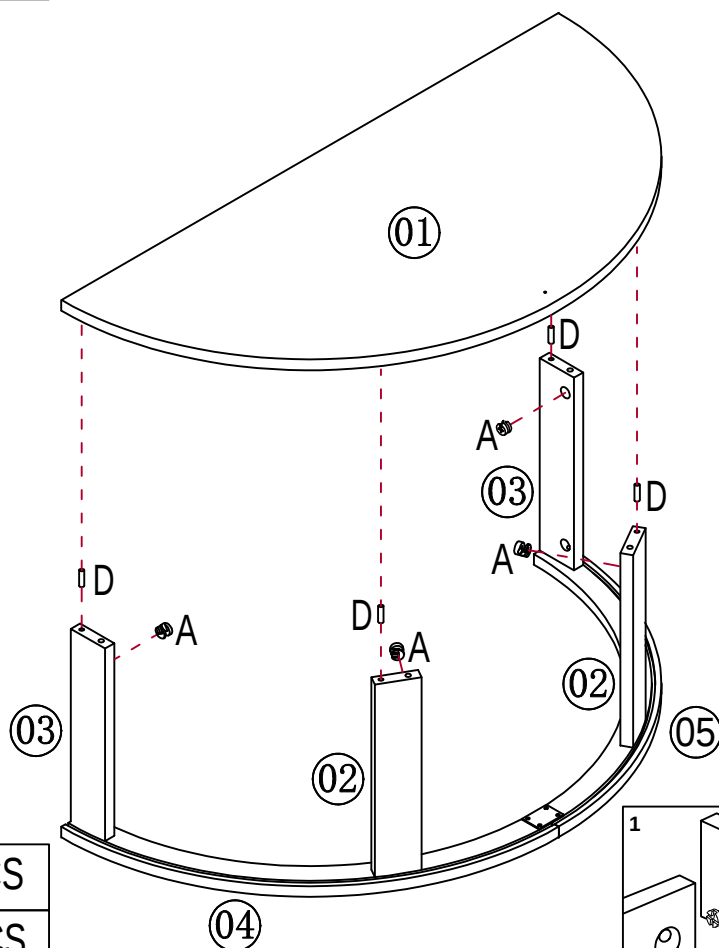


A*4PCS



D*4PCS

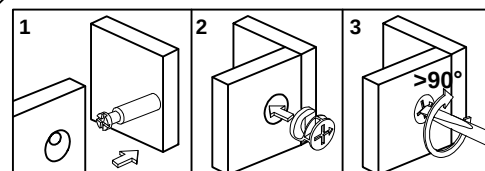


STEP5

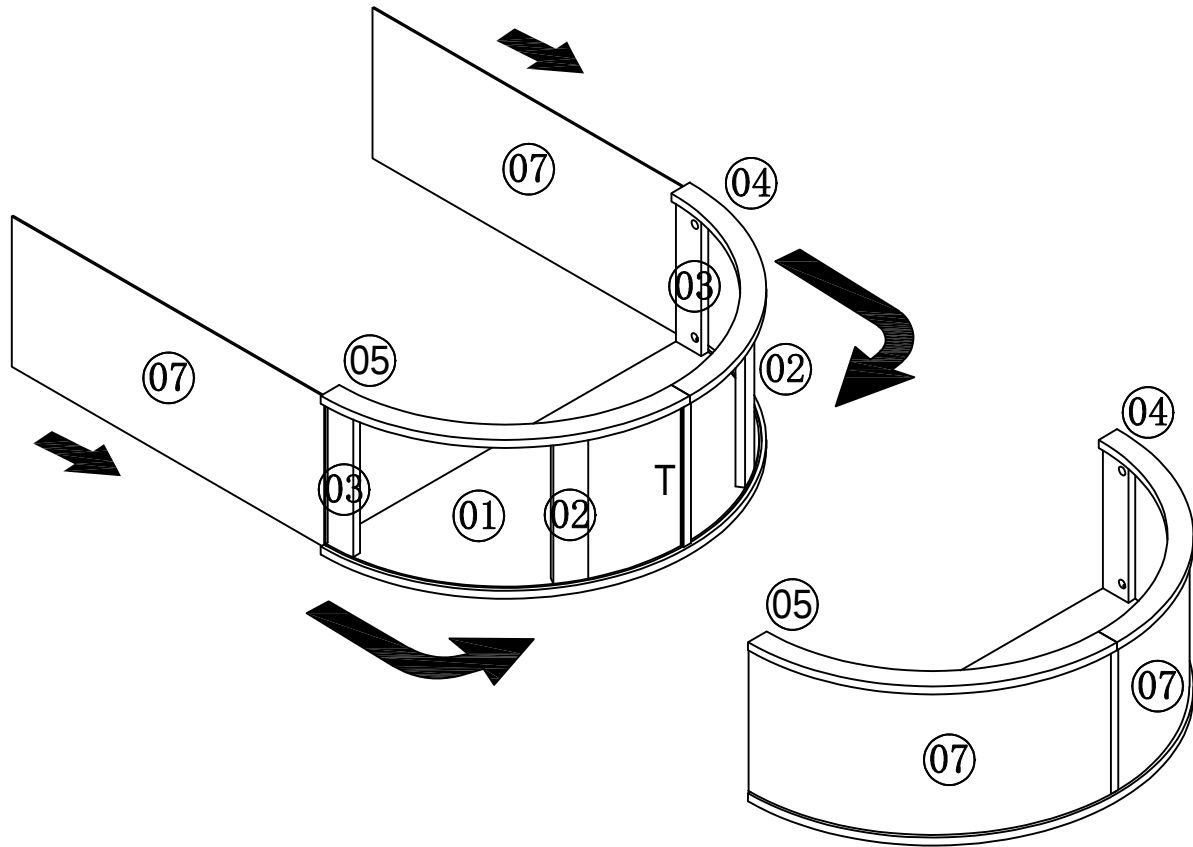


T*1PC


STEP6

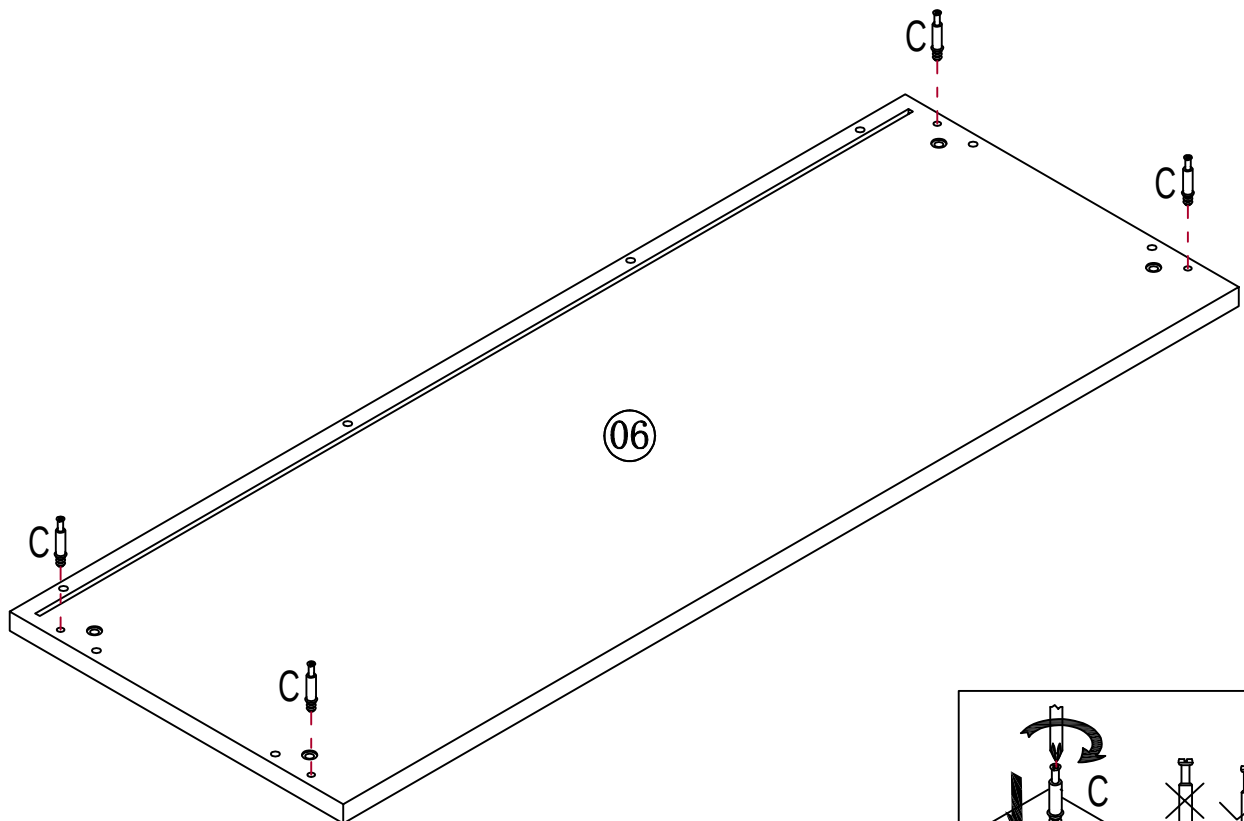

C*4PCS

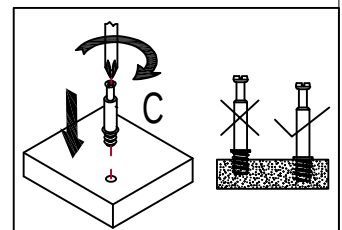


STEP7

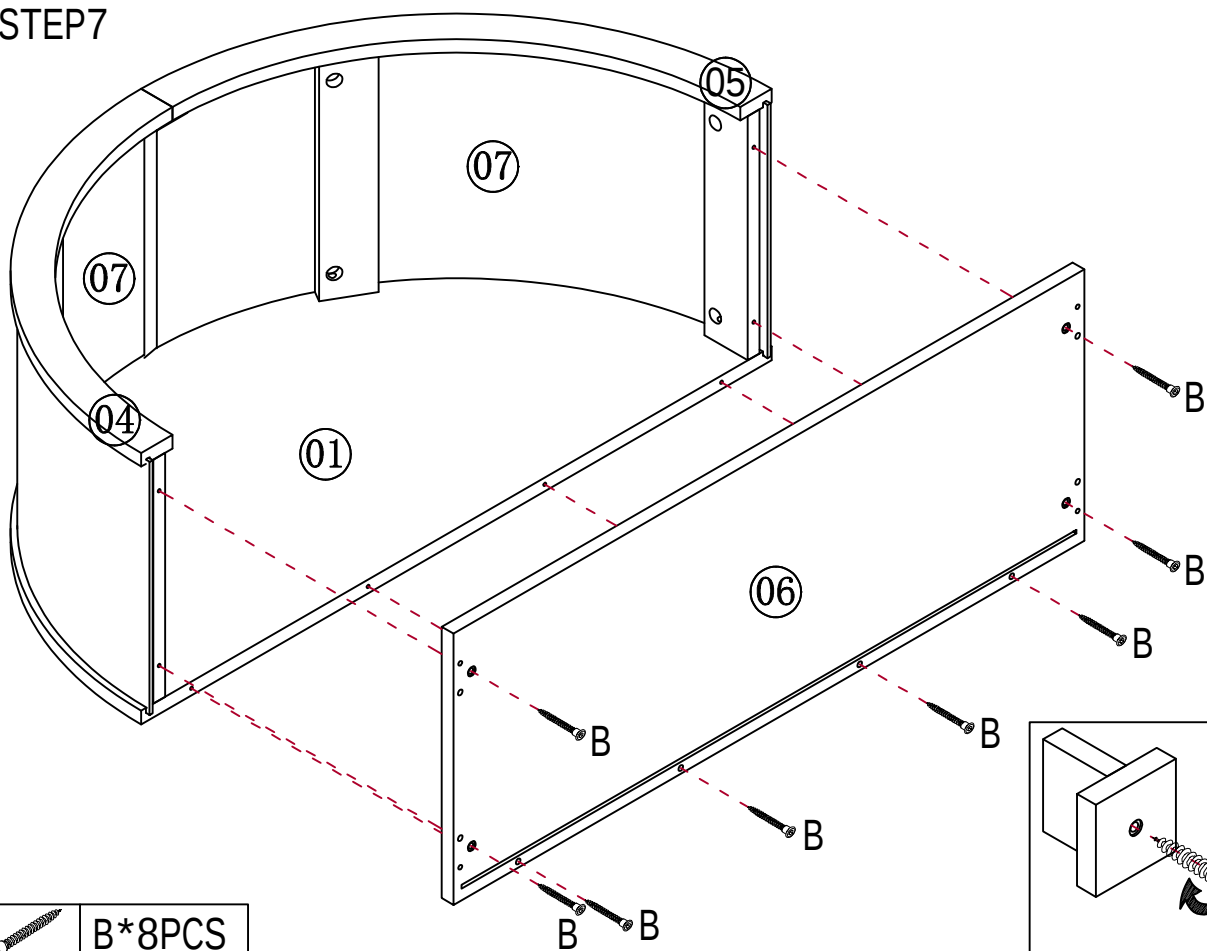


B*8PCS

STEP8


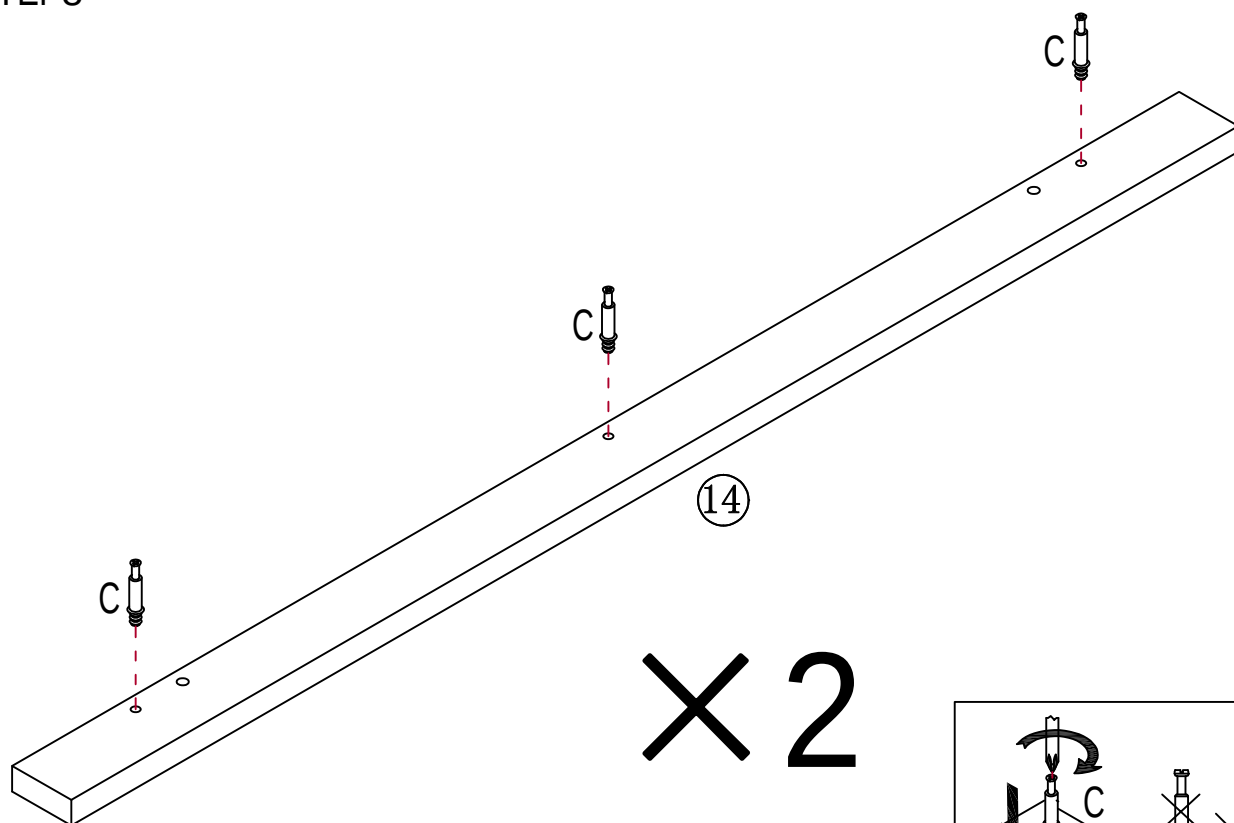


C*6PCS


STEP9

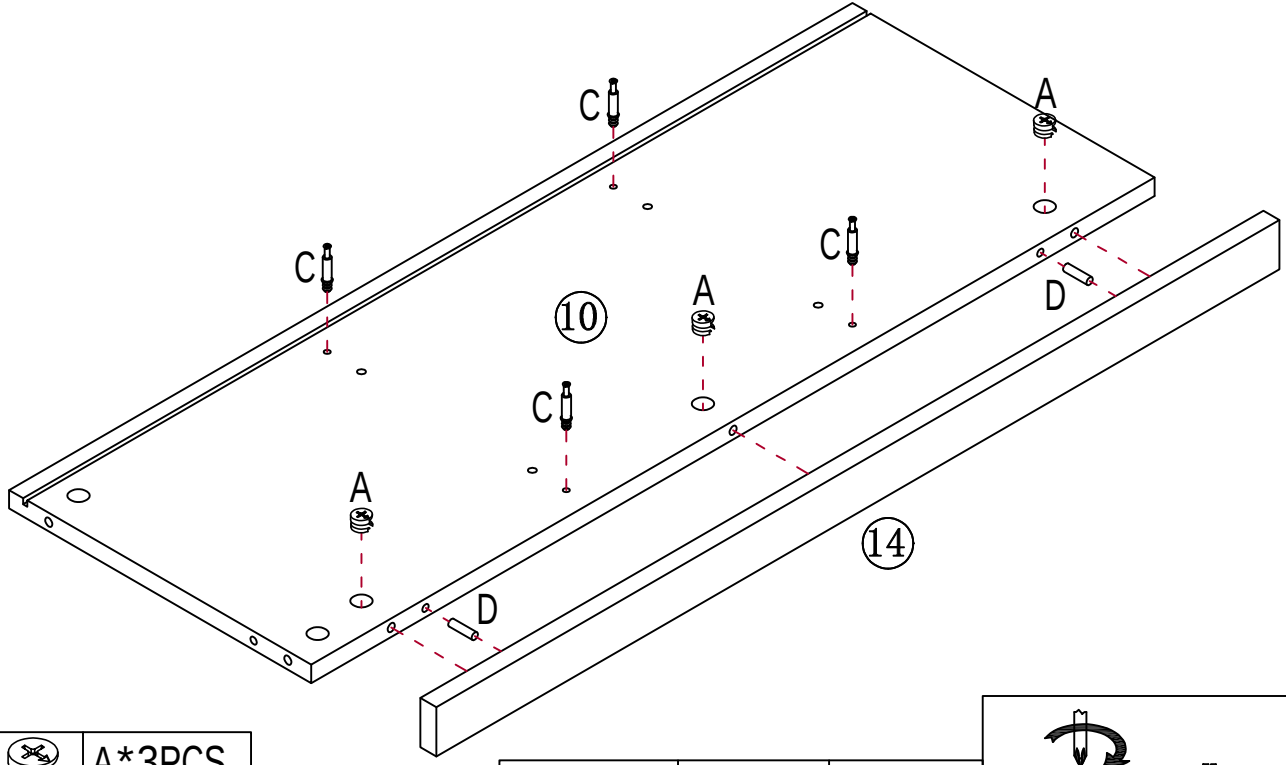



	A*3PCS
	C*4PCS
	D*2PCS

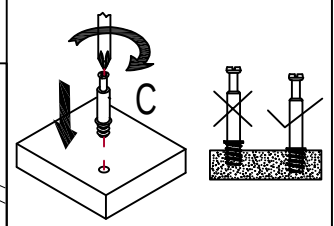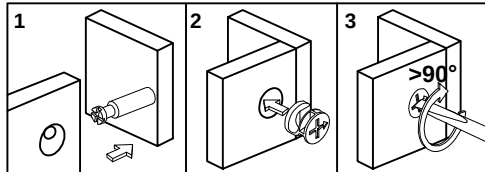



STEP10

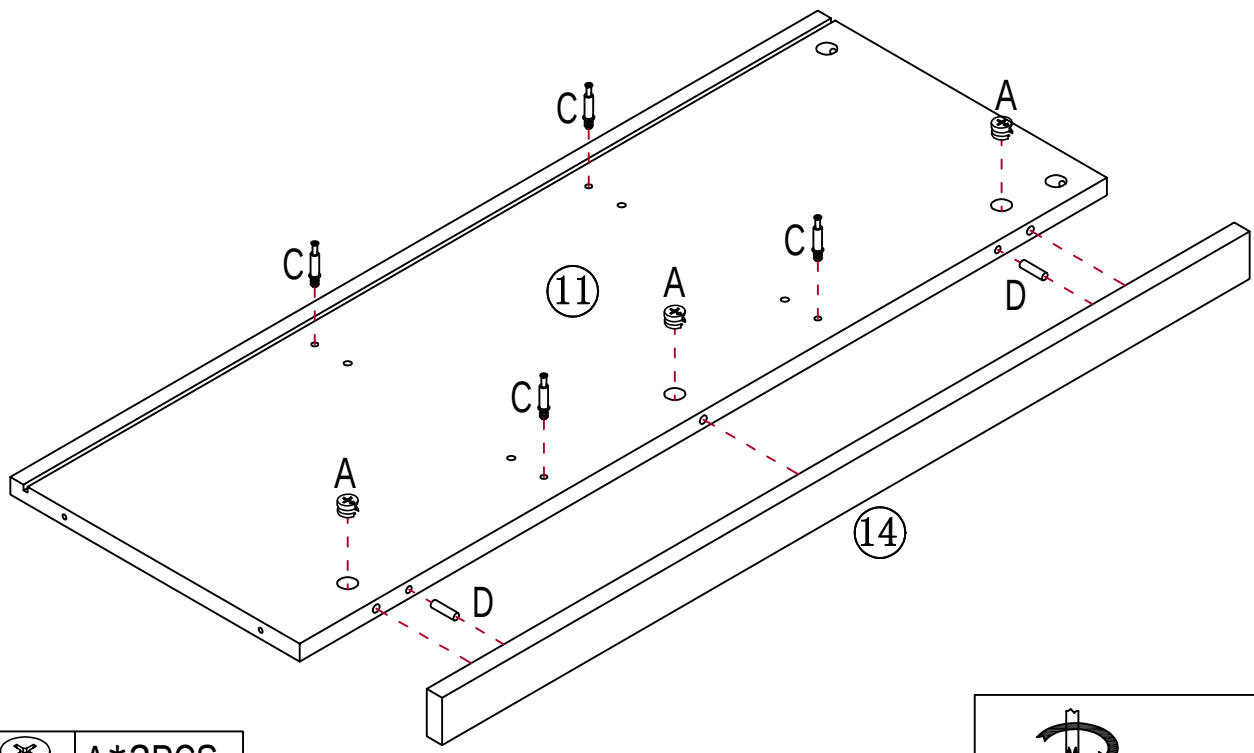

	A*3PCS
	C*4PCS
	D*2PCS

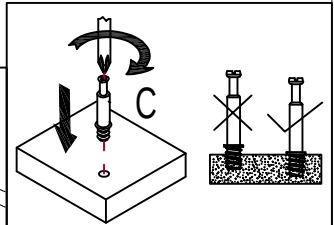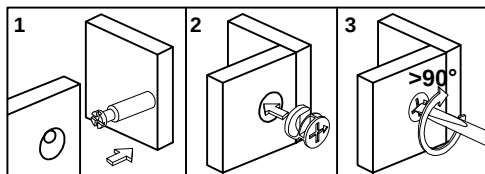


STEP11

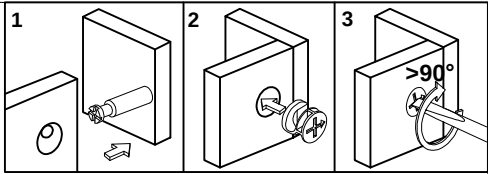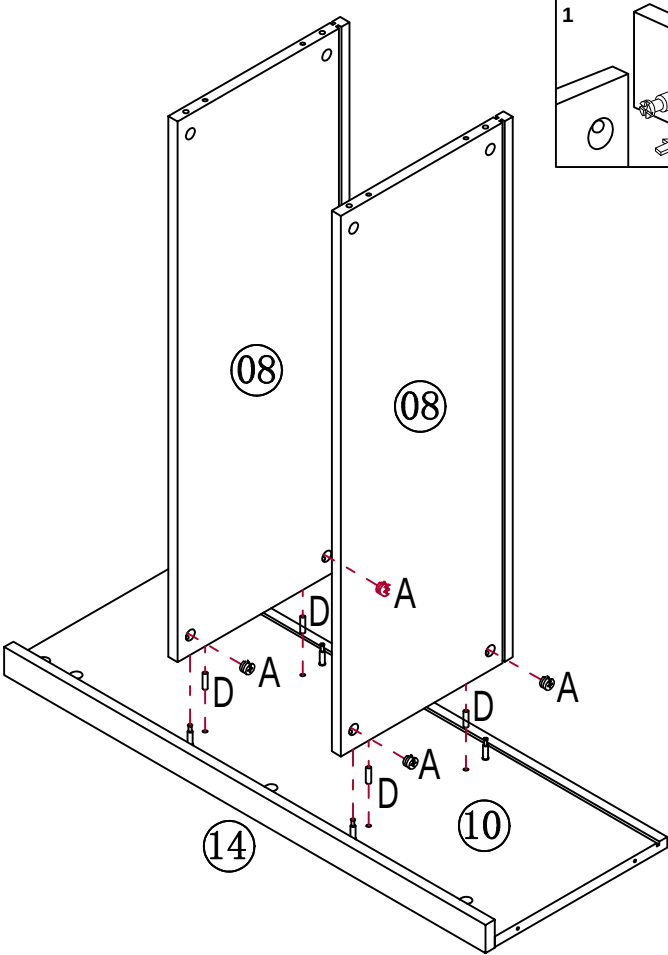


	A*4PCS
	D*4PCS


STEP12

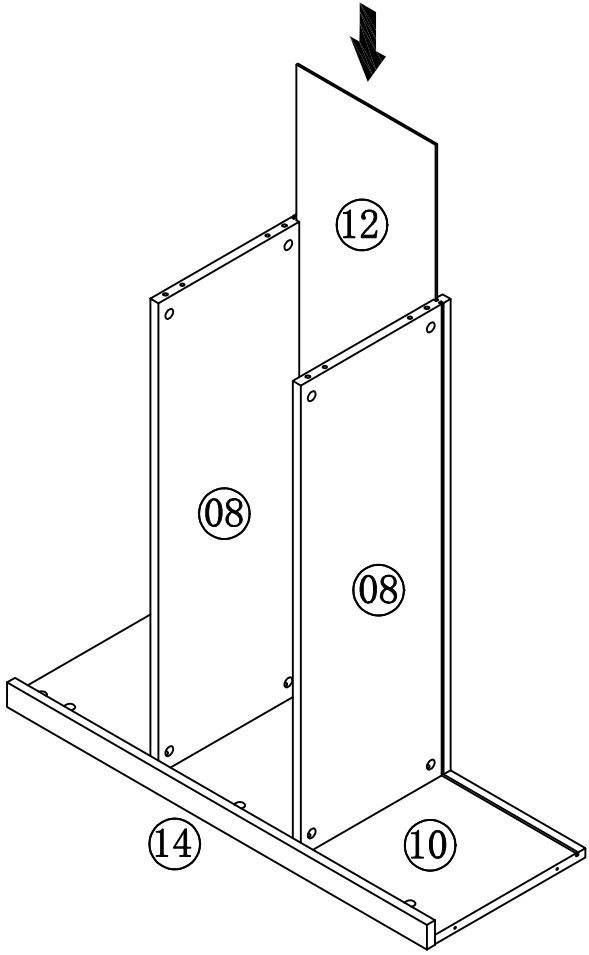


STEP13

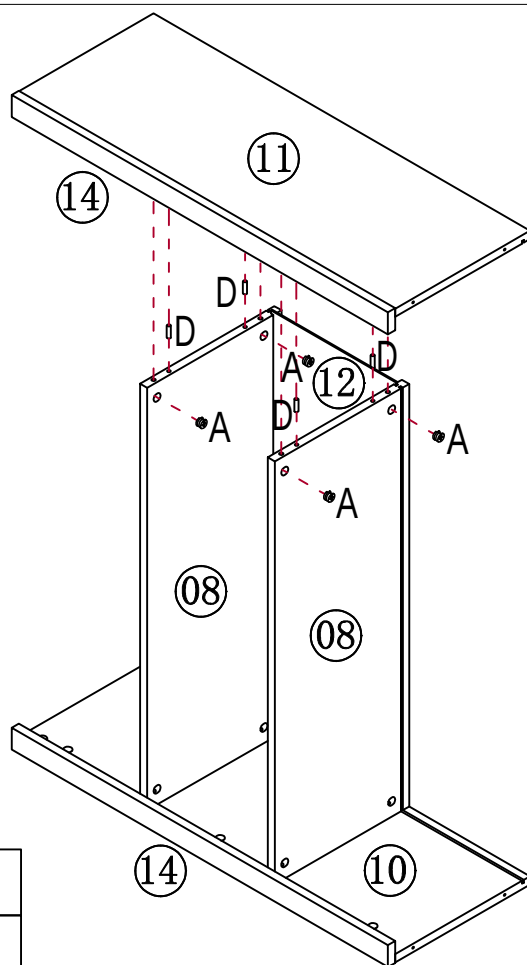


	A*4PCS
	D*4PCS

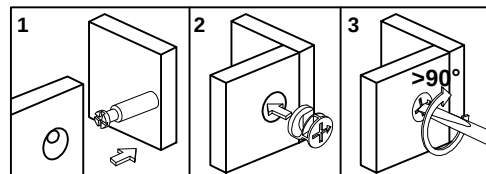


STEP14

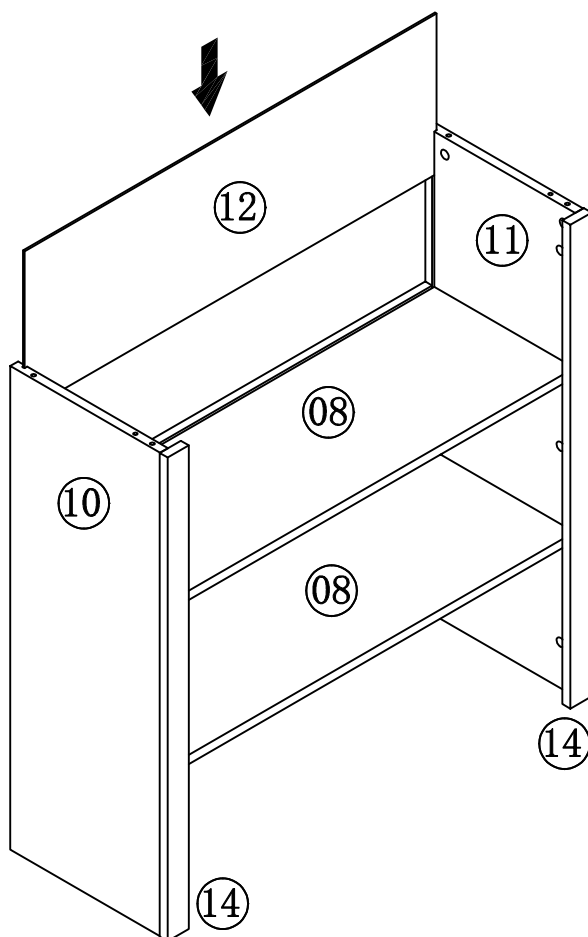


STEP15

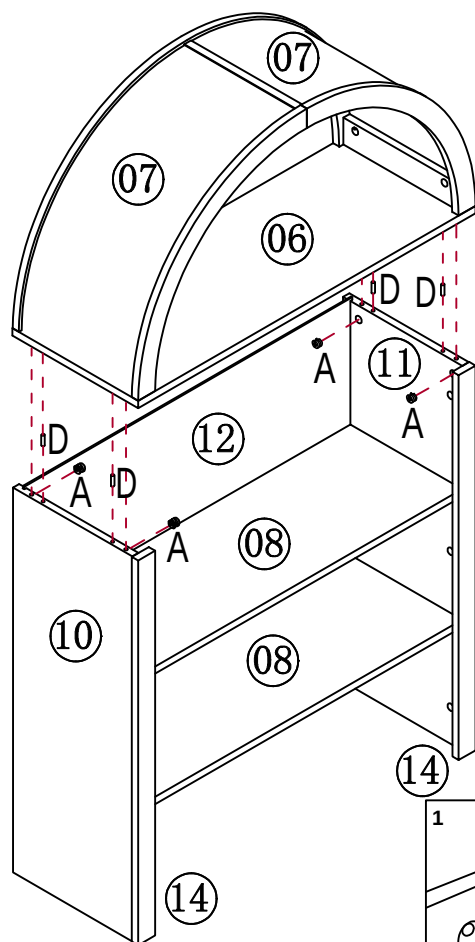


	A*4PCS
	D*4PCS

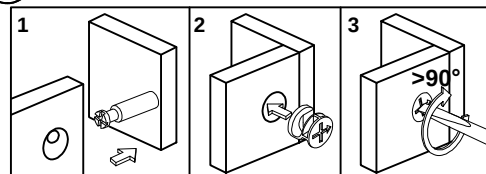


STEP16

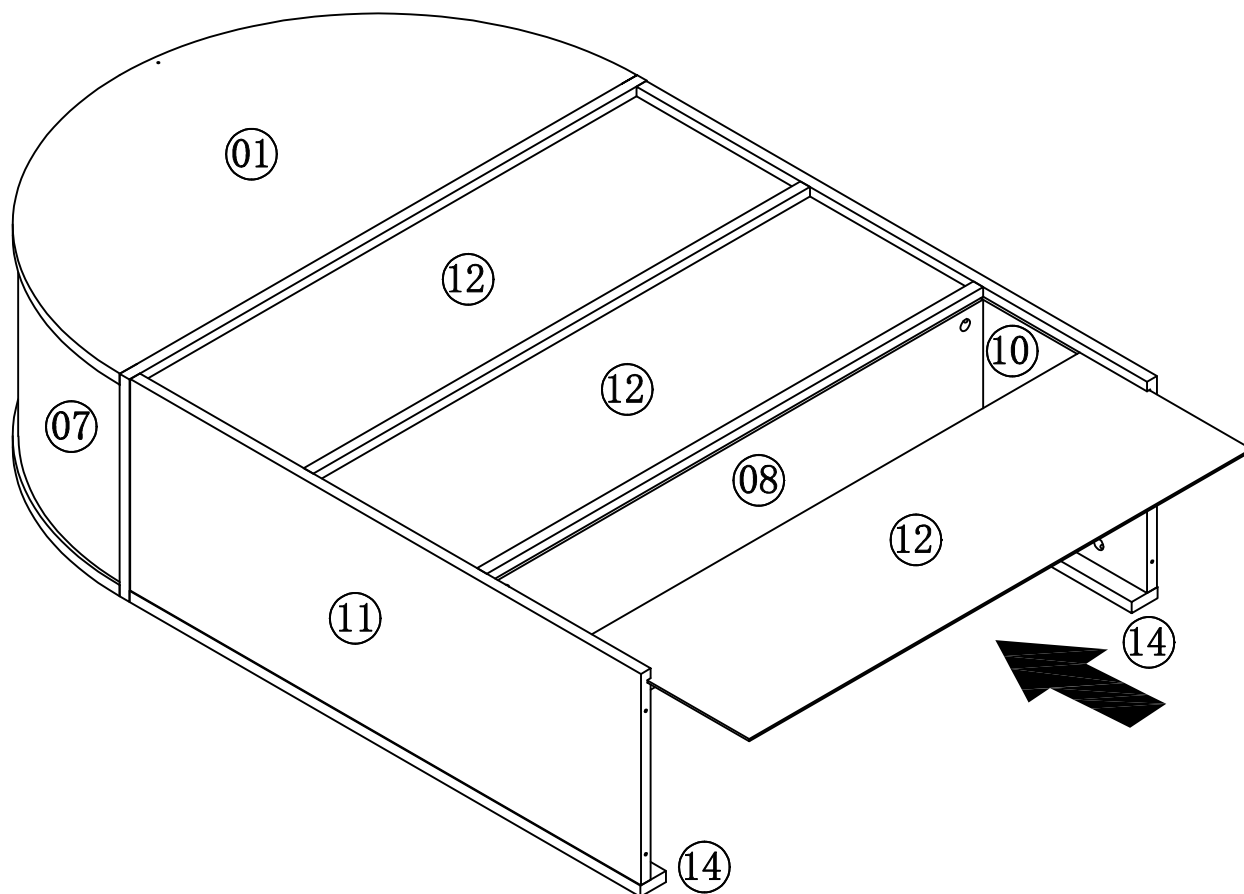



STEP17

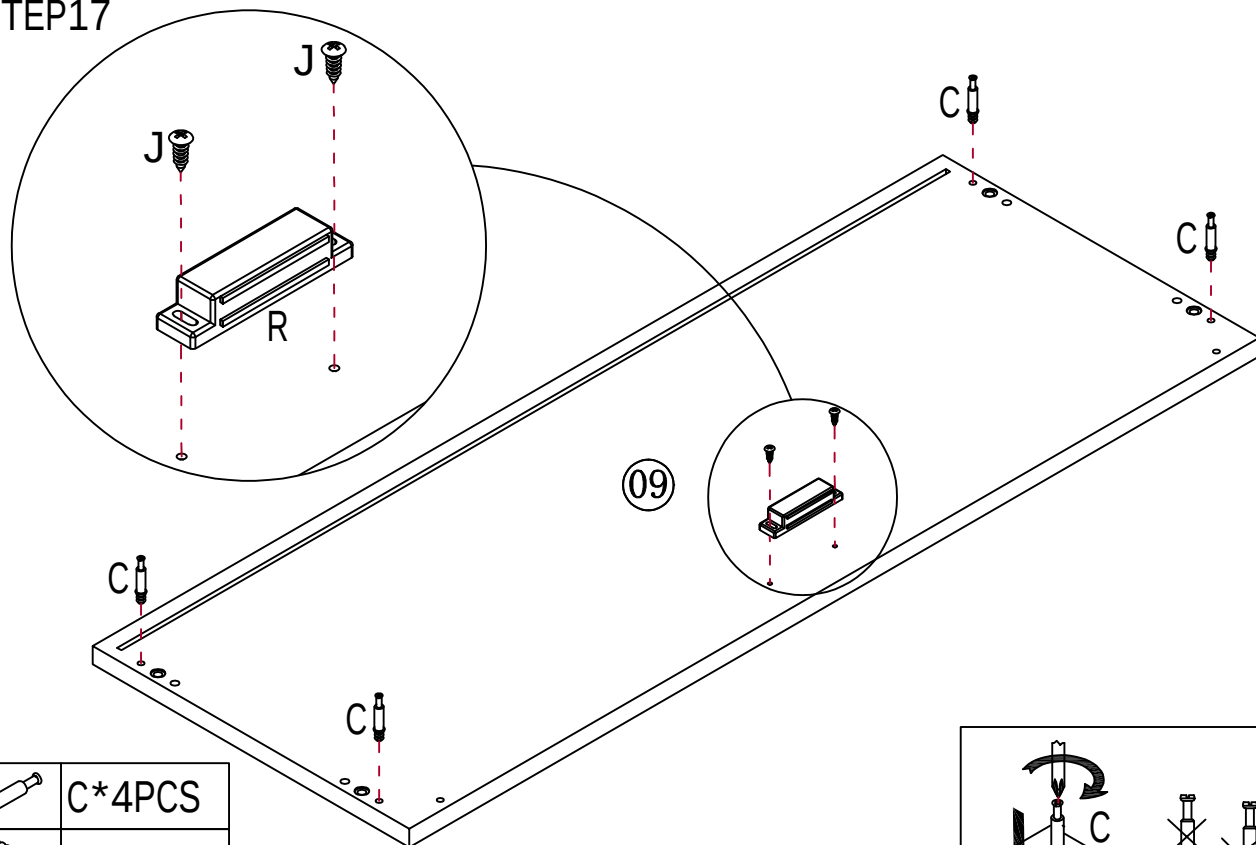

	C*4PCS
	J*2PCS
	R*1PC

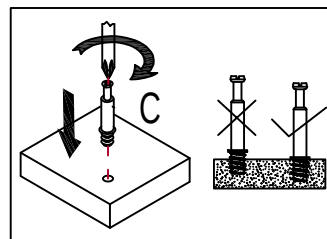


STEP18

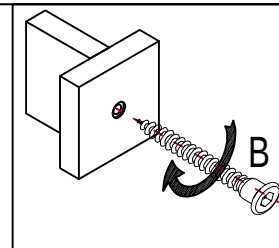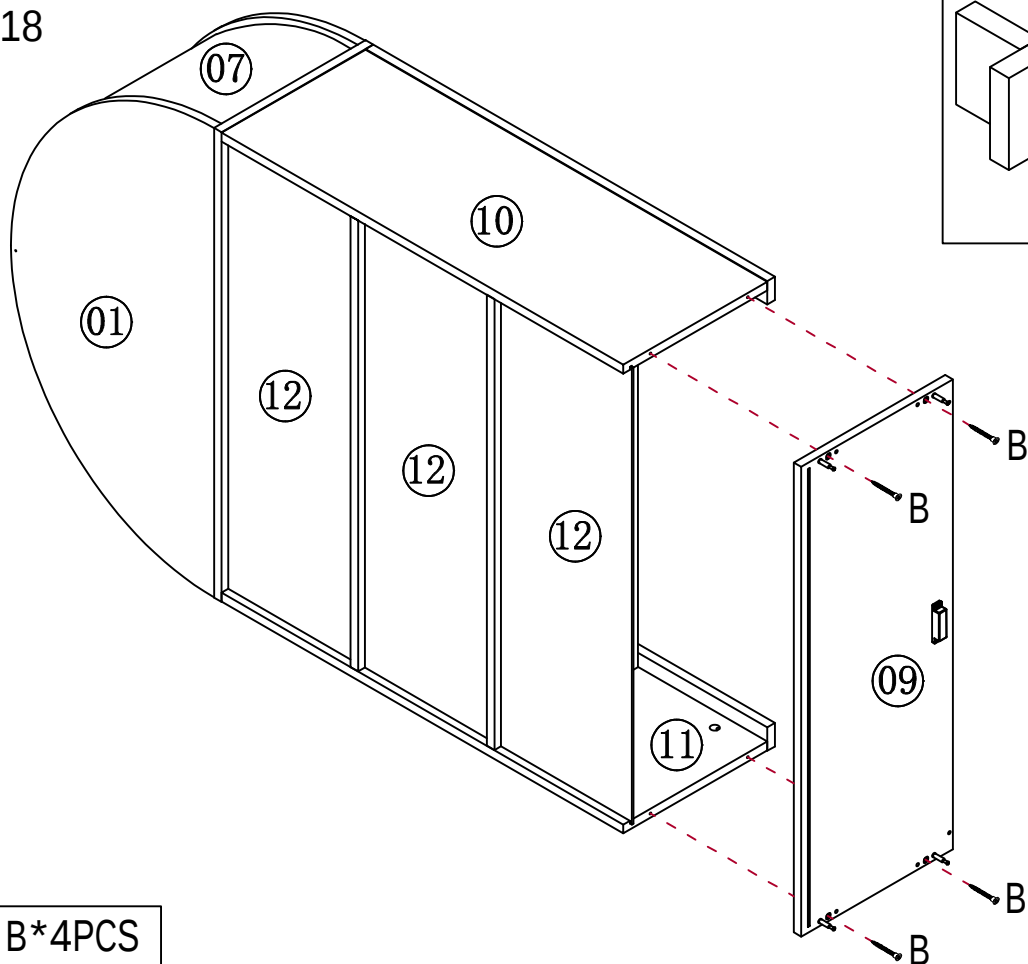


	B*4PCS
---	--------


STEP19

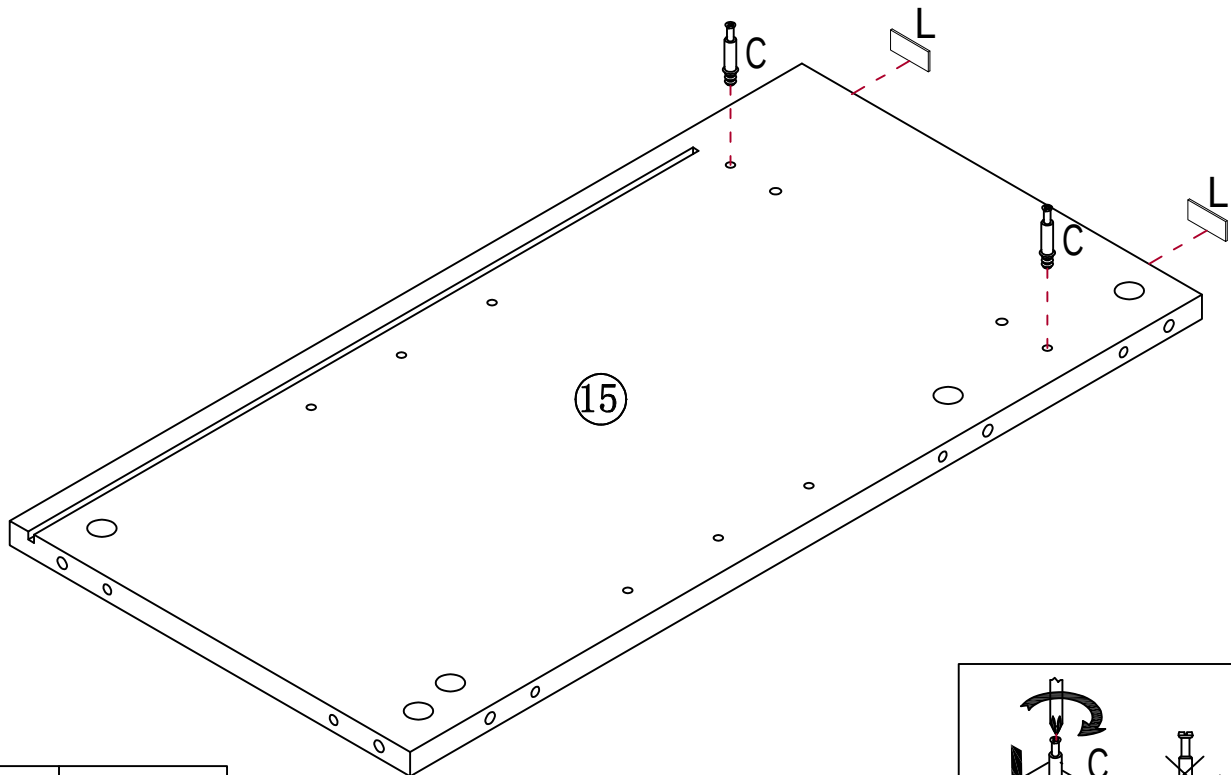


	C*2PCS
	L*2PCS

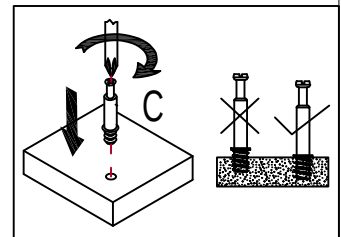


STEP20

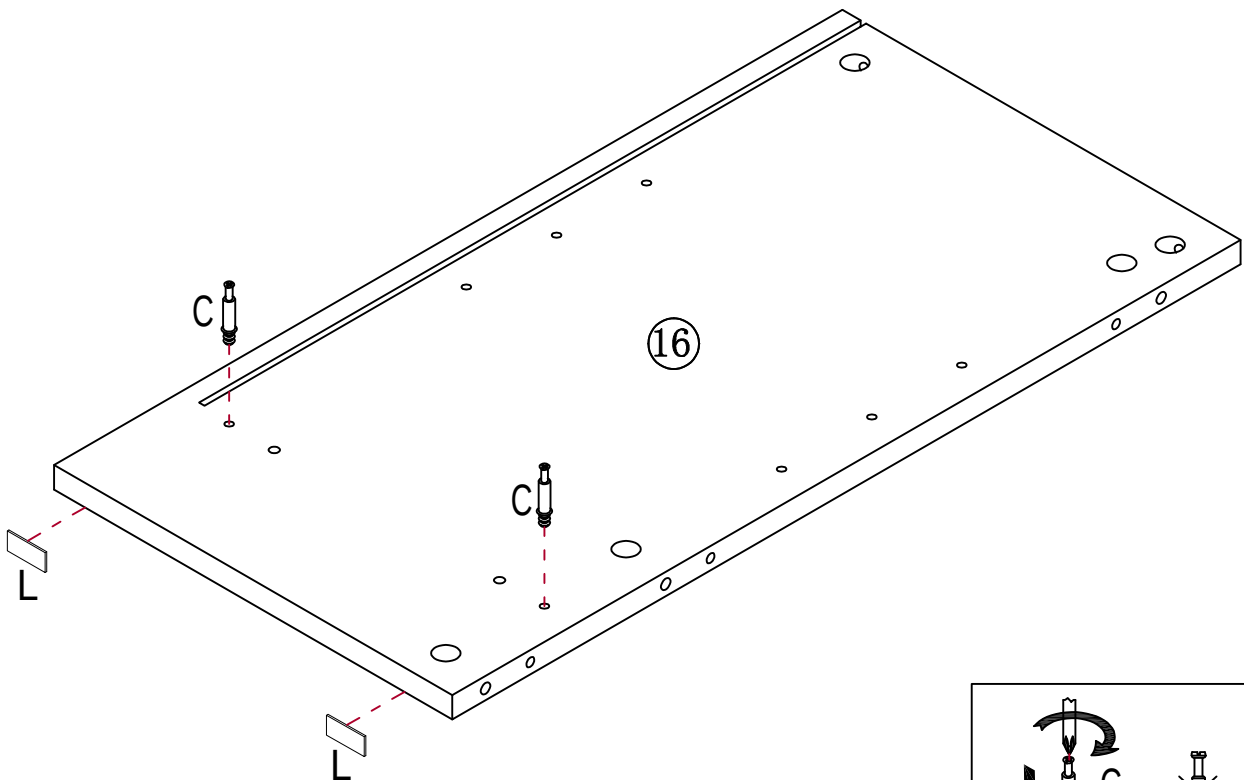


	C*2PCS
	L*2PCS

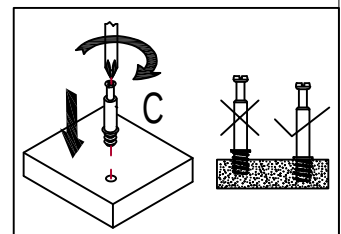


STEP21

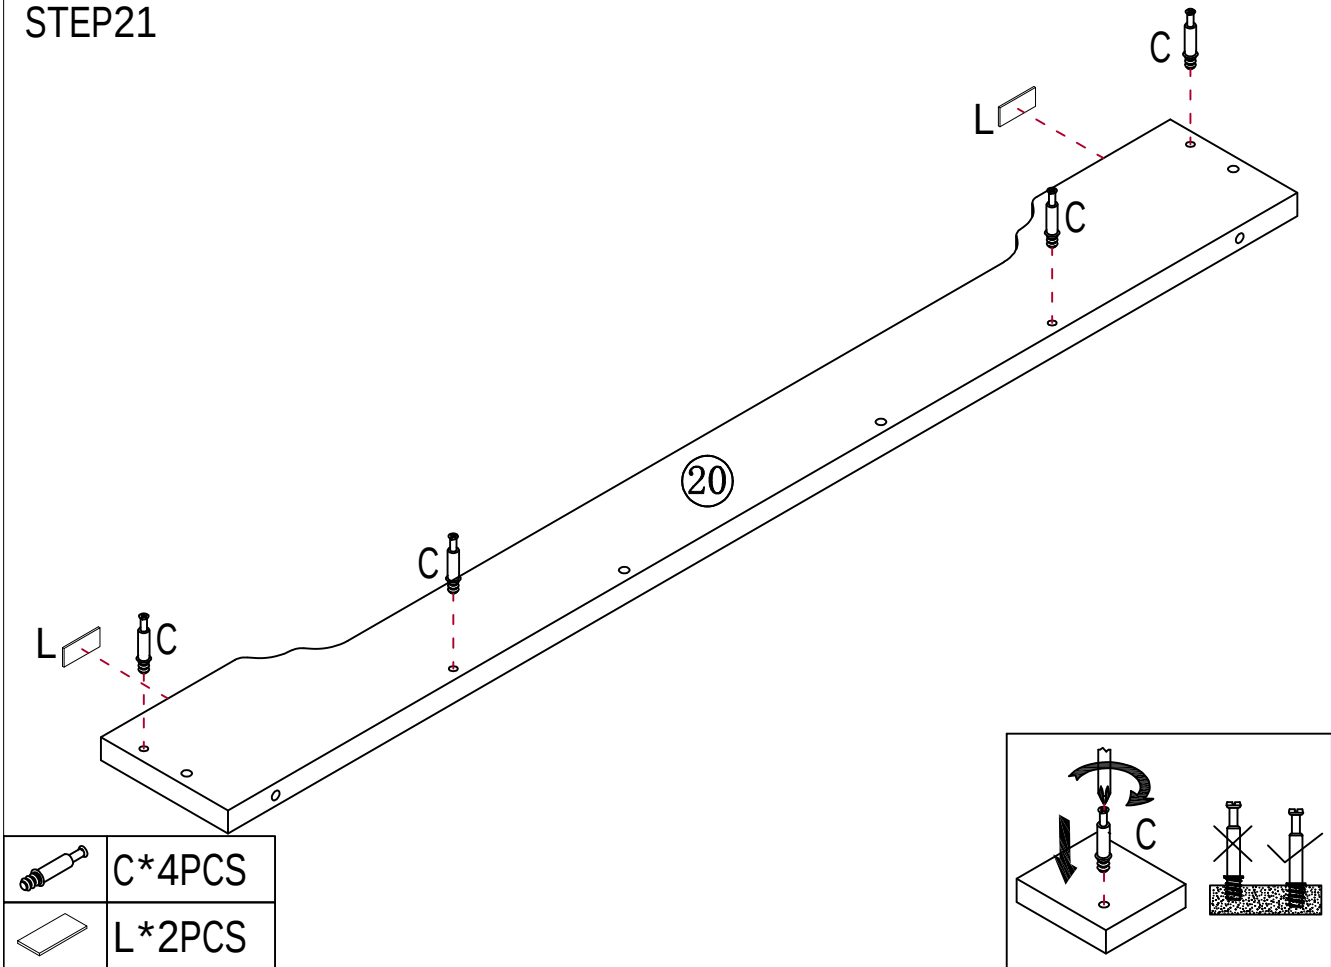


STEP22

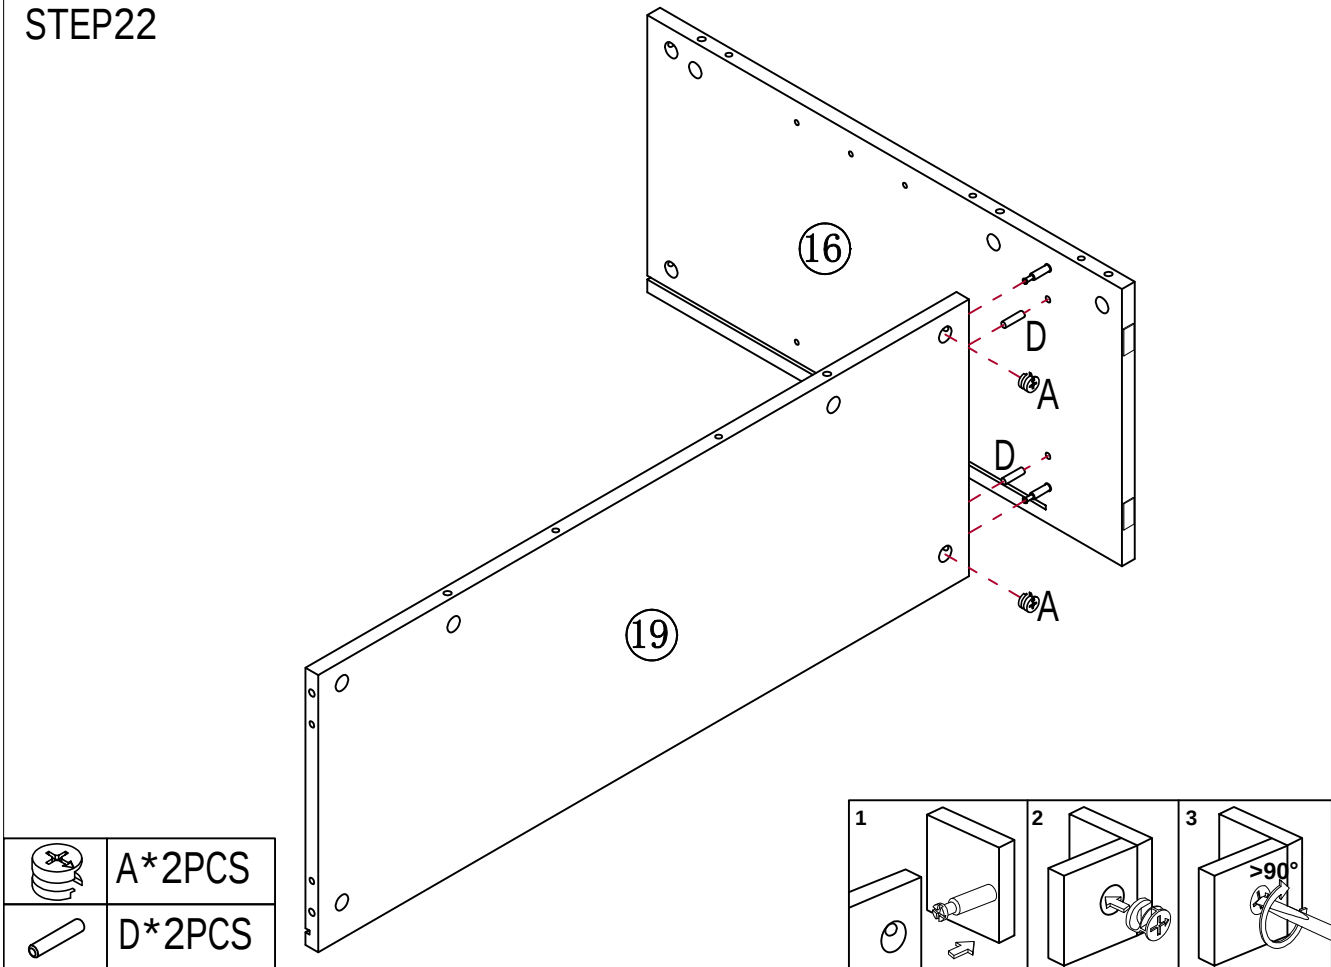


STEP23

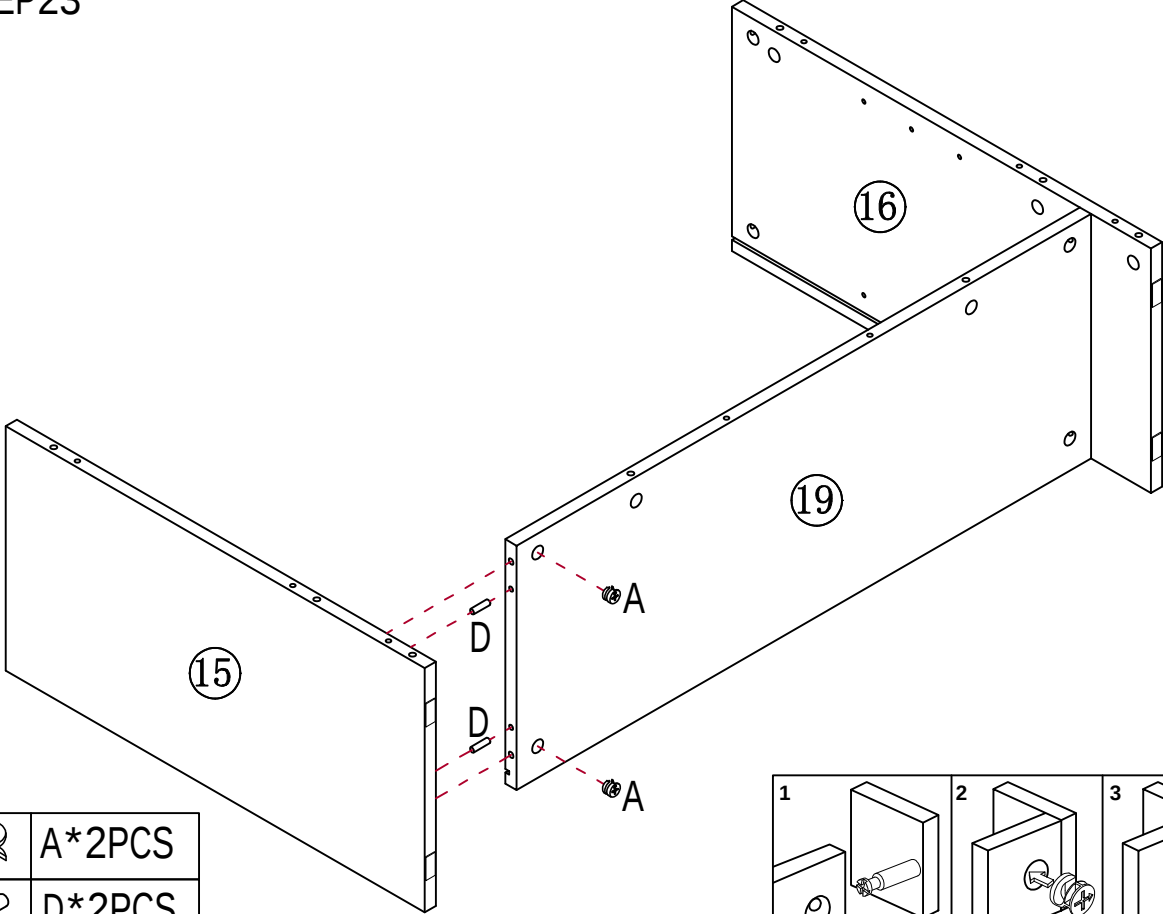

	A*2PCS
	D*2PCS

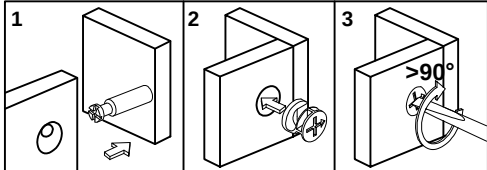


STEP24

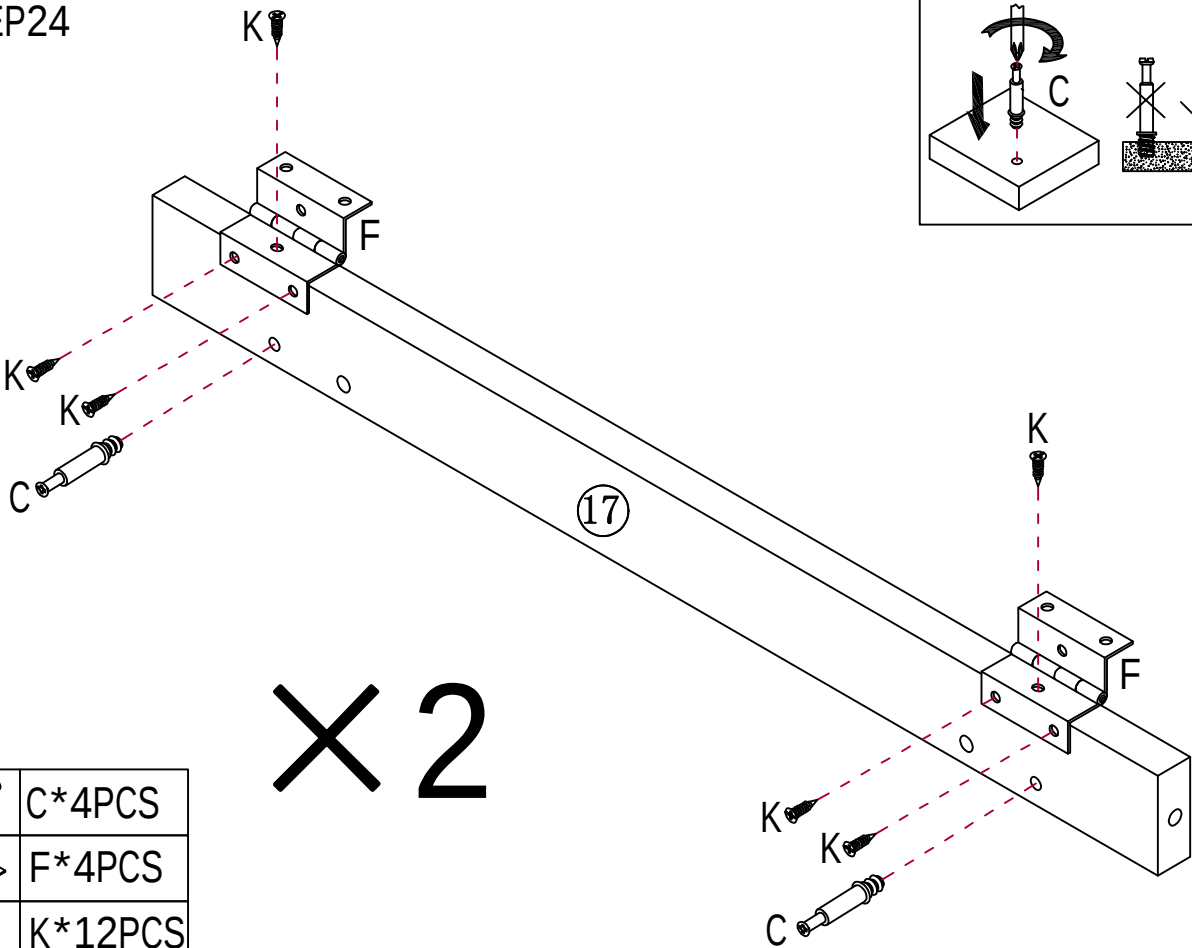


	C*4PCS
	F*4PCS
	K*12PCS

STEP25

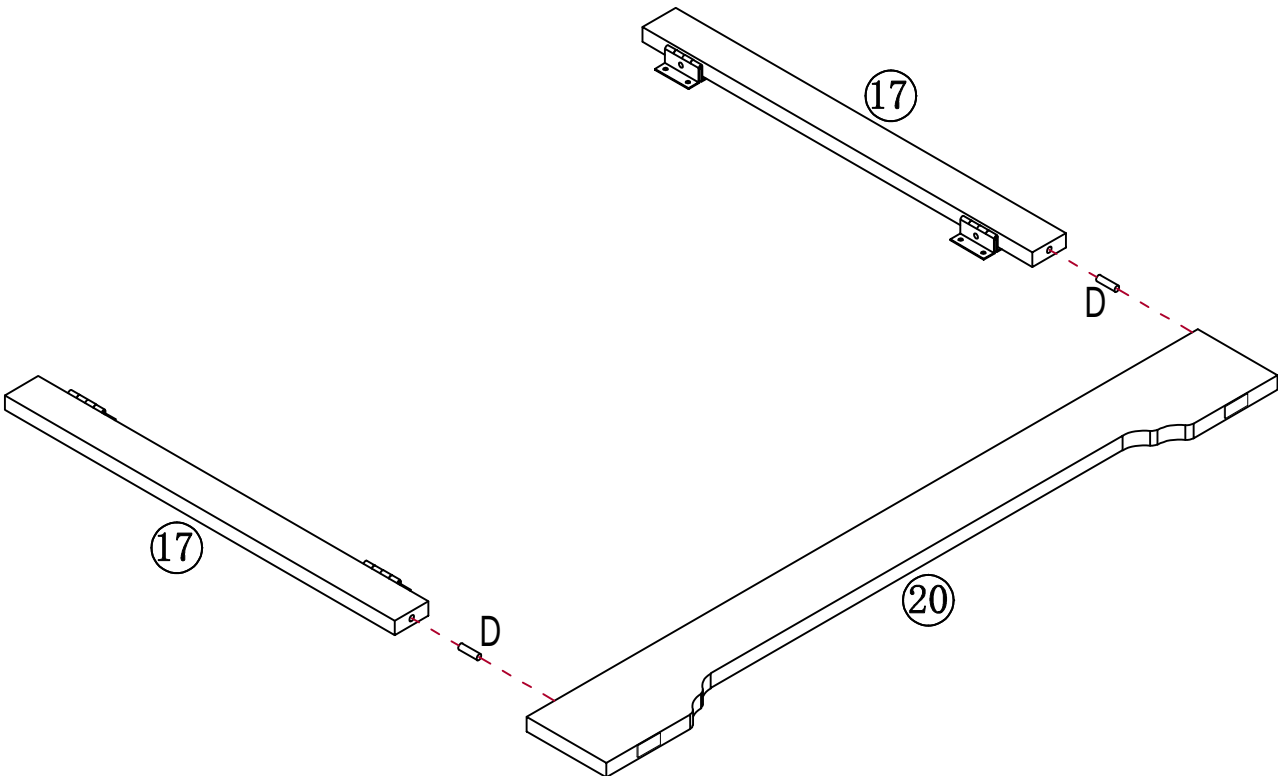


	D*2PCS
---	--------


STEP26

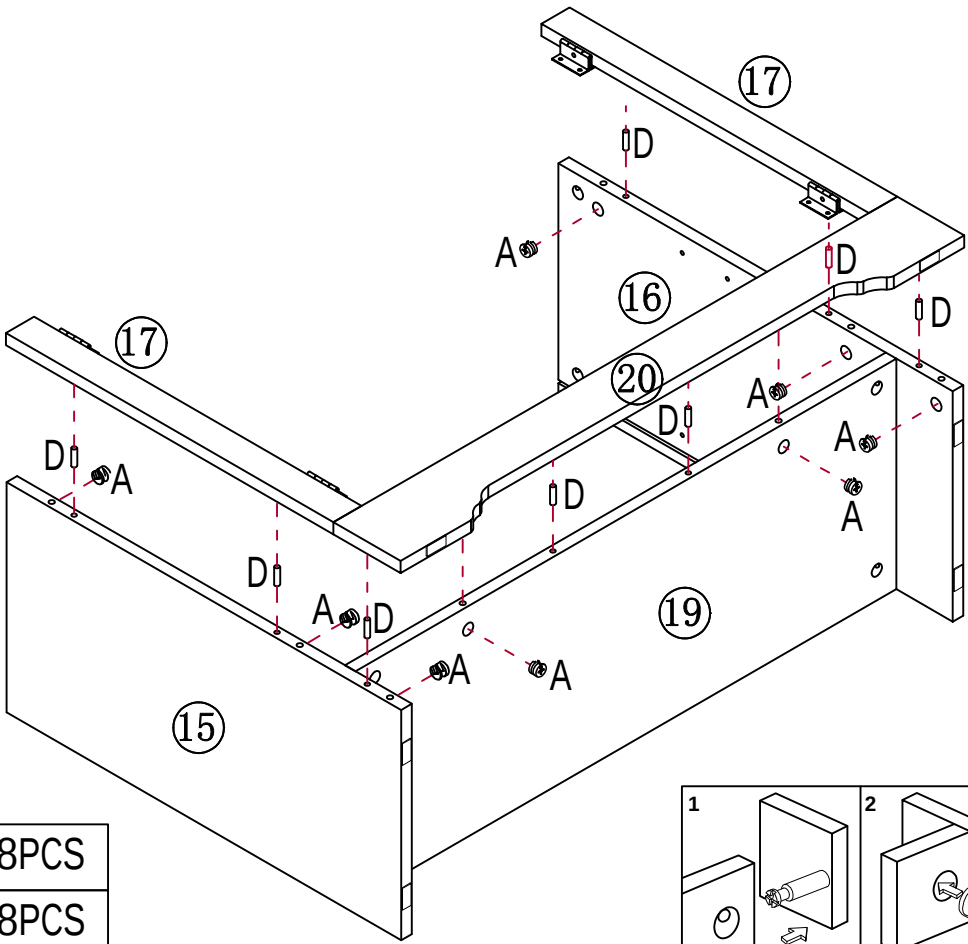

	A*8PCS
	D*8PCS

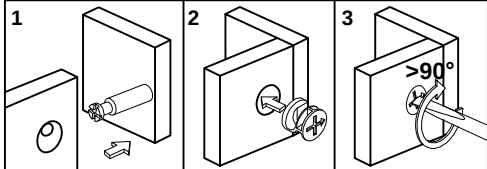


STEP27

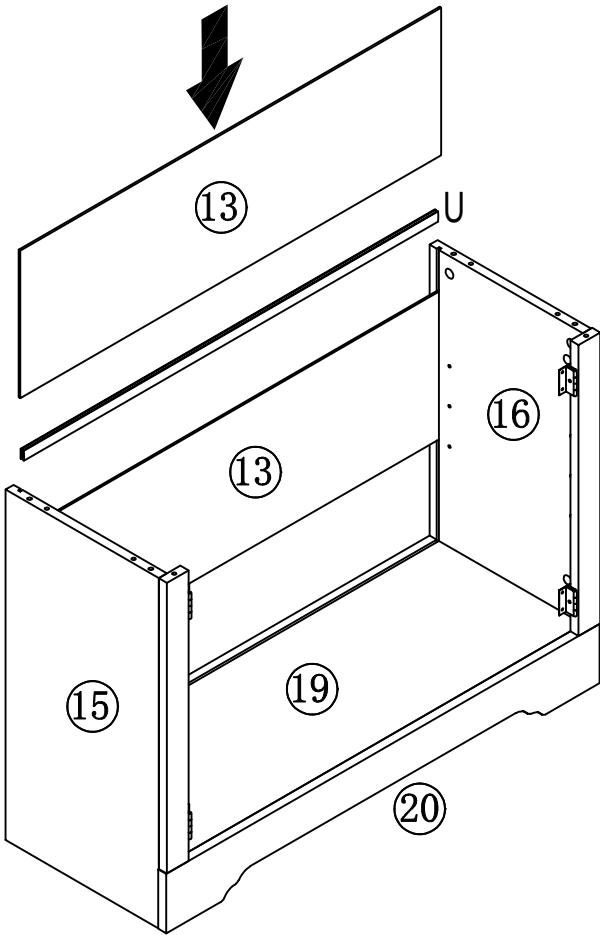

U*1PC


STEP28

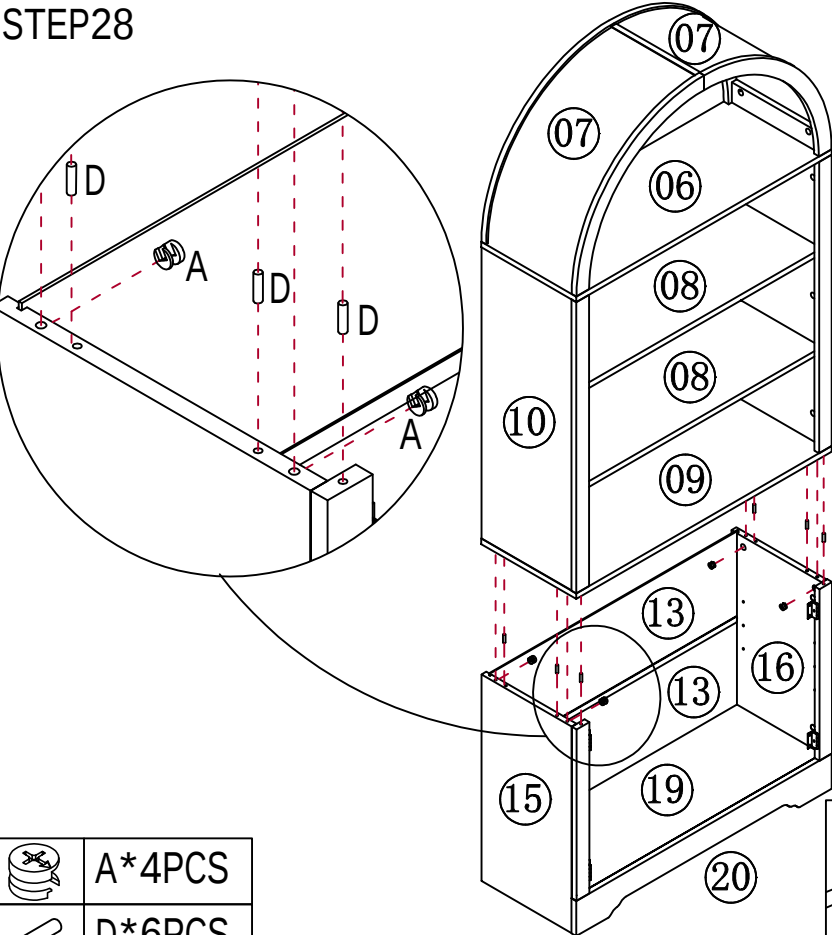


A*4PCS



D*6PCS

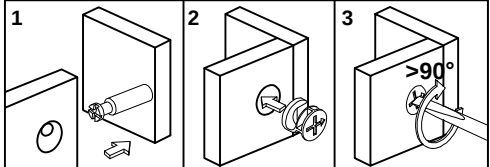


STEP29

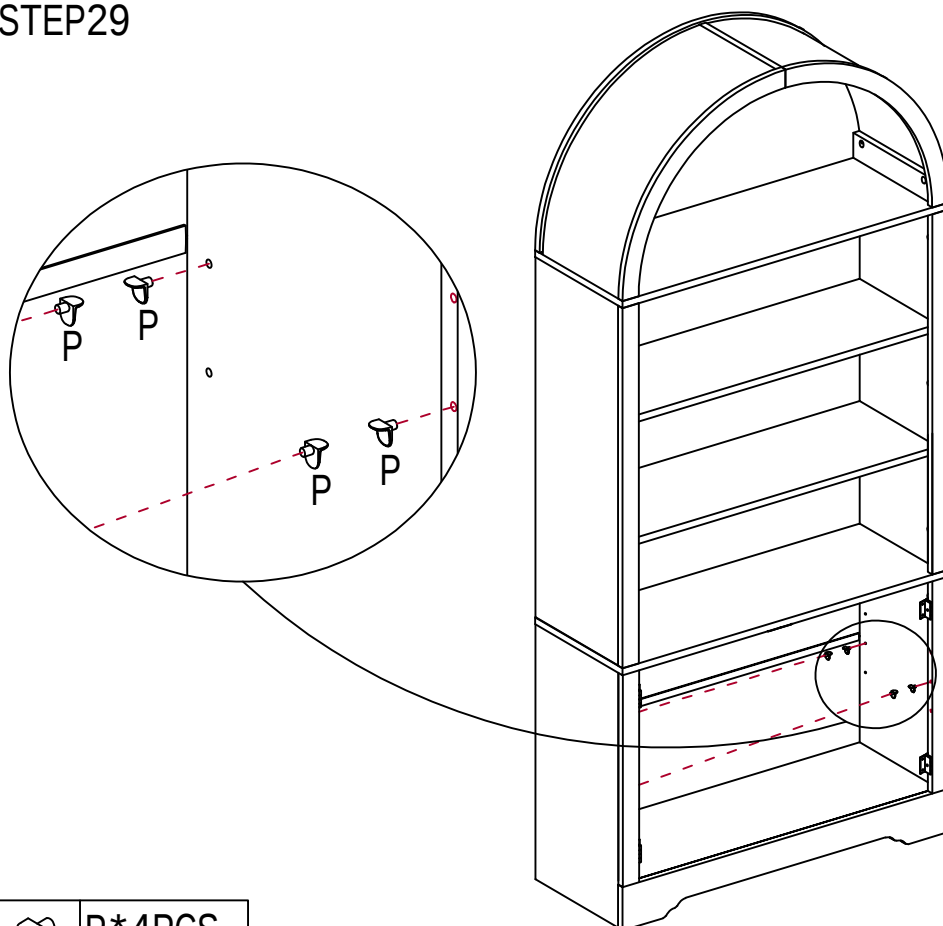


P*4PCS

STEP30

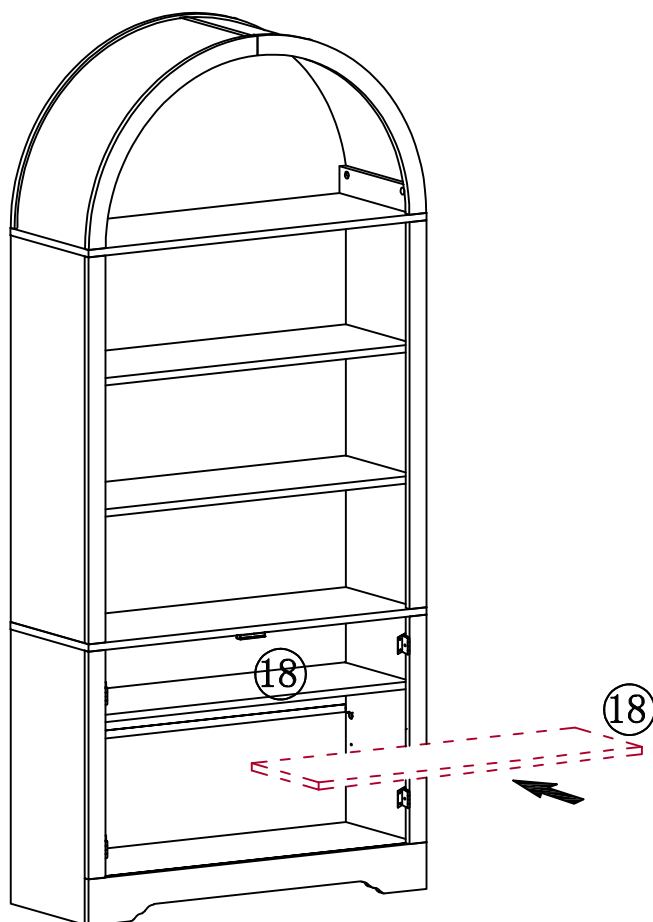

STEP31



Symmetrical assembly

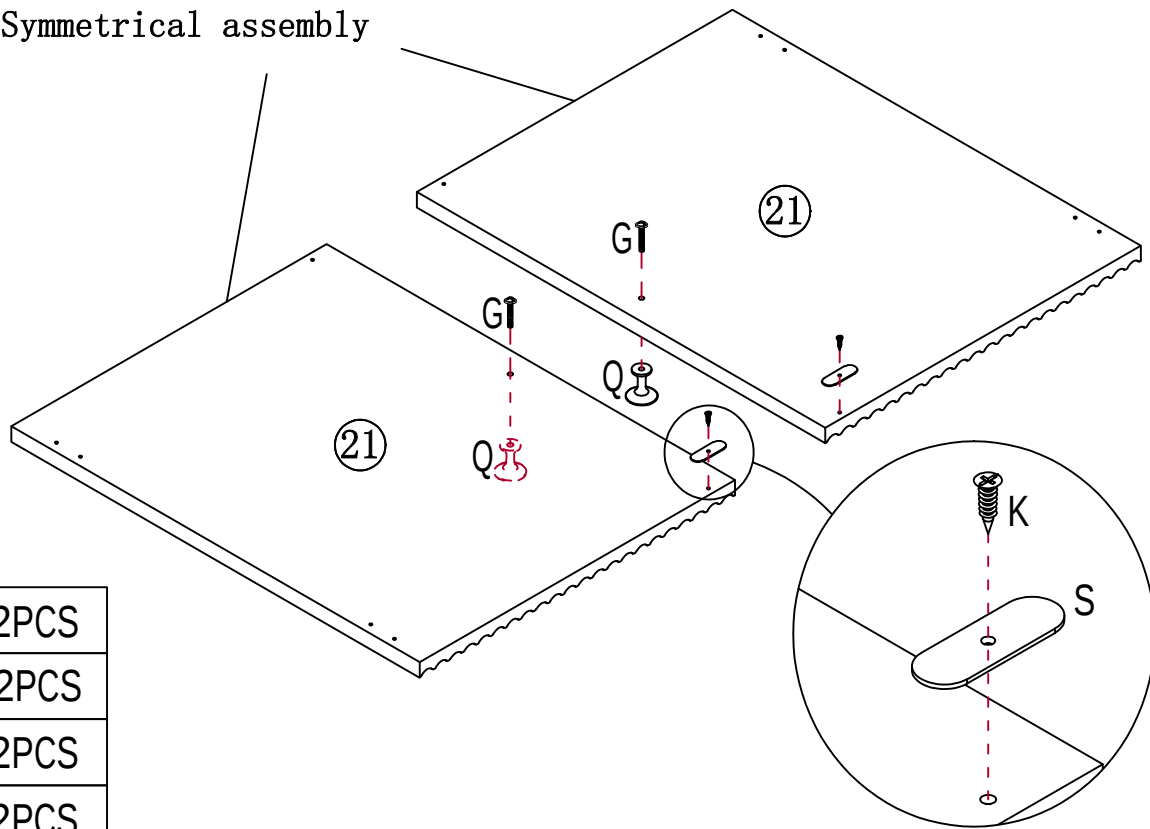

	G*2PCS
	K*2PCS
	Q*2PCS
	S*2PCS

STEP32


This piece of iron
needs to be on top

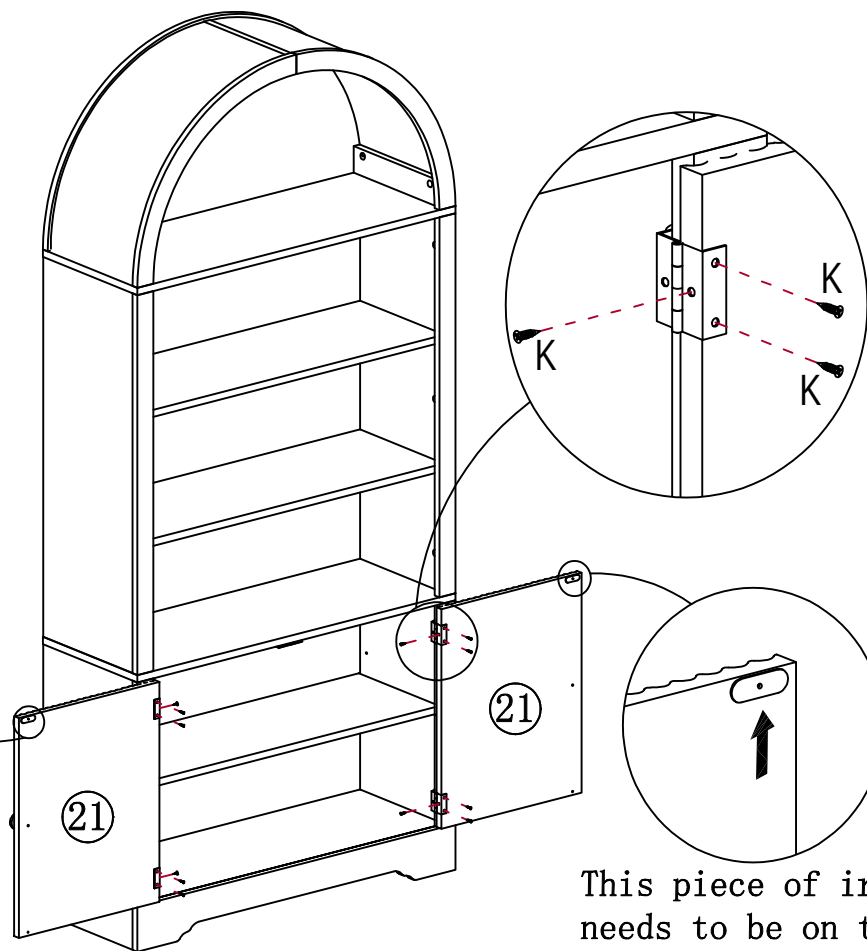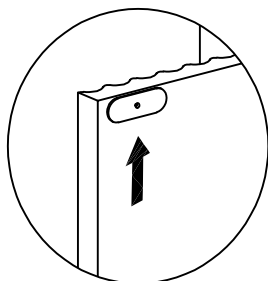

This piece of iron
needs to be on top


	K*12PCS
--	---------

STEP33

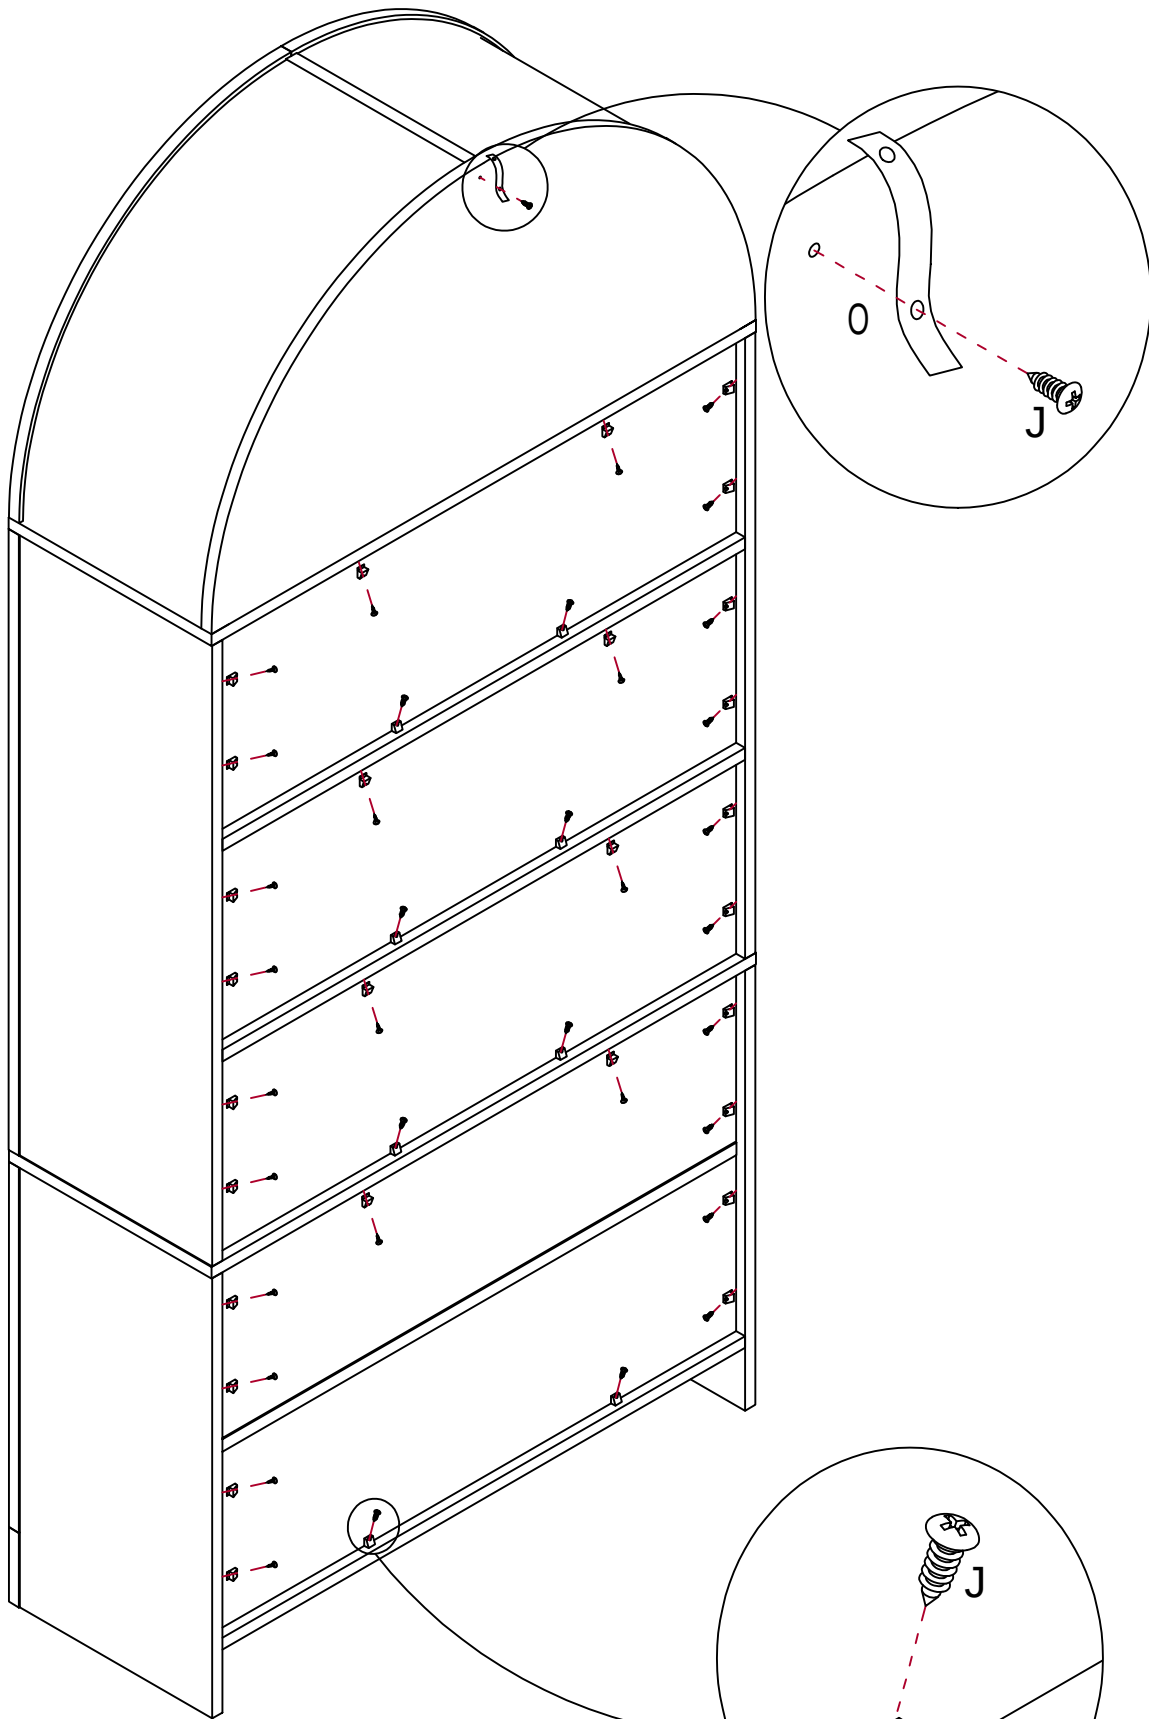


	H*36PCS
	J*37PCS
	O*1PC

STEP35

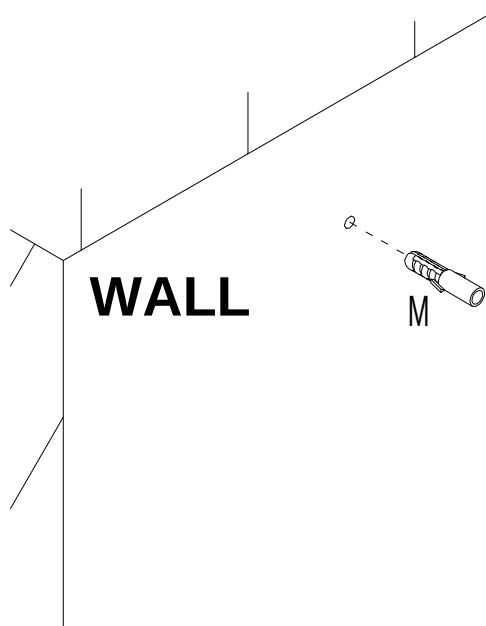


EN: Drill a hole on the wall at the required position for anti-falling device installation.

DE: Bohren Sie ein Loch an der gewünschten Position in die Wand, um die Absturzsicherung zu installieren

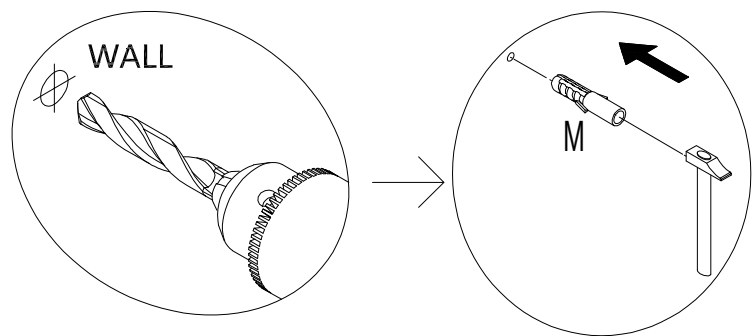

M*1PC

STEP36

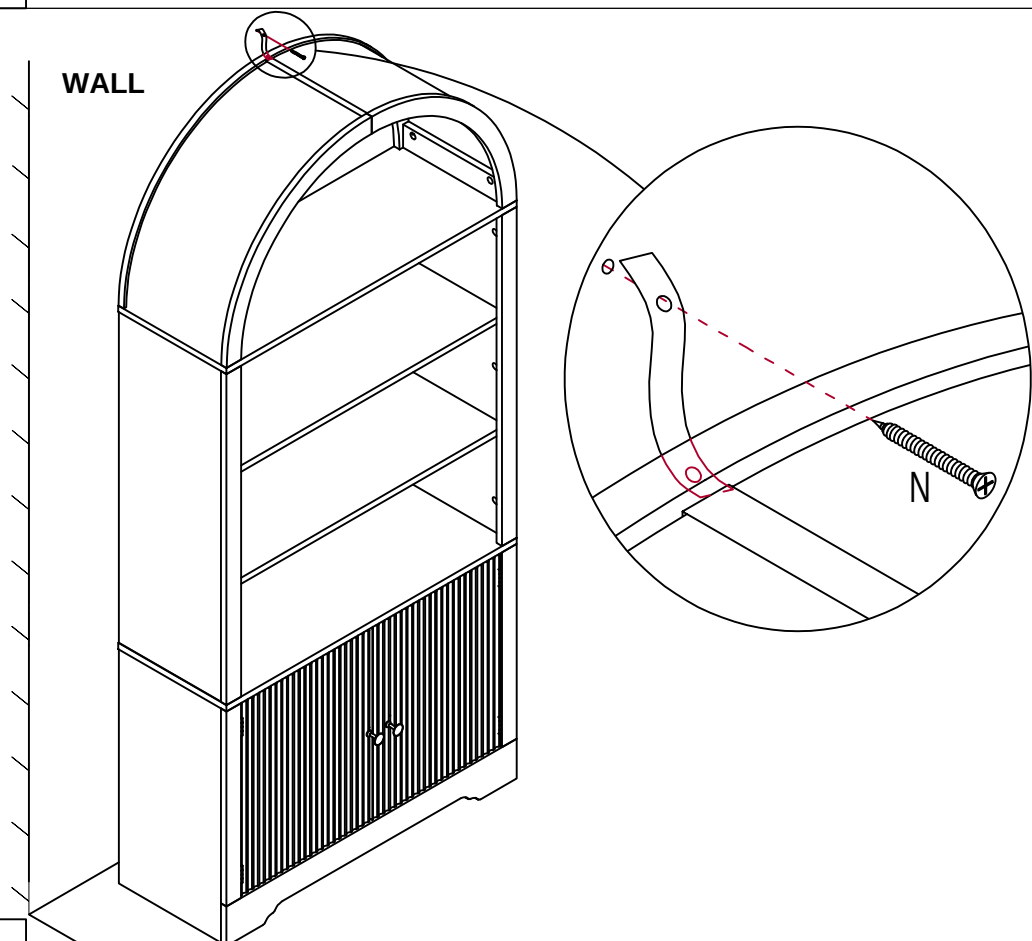

N*1PC